

资源分配

串口分配:

USART0: RS485/遥控器

USART1: RS485/触摸屏

USART2: RS485

USART3: RS485

USART4: RS485

USART5: RS232

USART6: RS232

UART7: 4G

SPI分配:

OSPIM_P0: EEPROM

OSPIM_P1: FLASH

SPI0: 串口扩展1

SPI1: 串口扩展2

SPI2: DAC

SPI3: ADC

SPI4: 板载WIFI

SPI5: 端口复用, 不可用

I2C分配

I2C0: 数字输入1

I2C1: 数字输入2

I2C2: 数字输出1

I2C3: 数字输出2

CAN分配

CAN0: RJ45+通用接口

CAN1: 通用接口

CAN2: 通用接口

ENET分配

ENET0: EtherNet

ENET1: EtherCAT

USB分配:

USB0: 调试

USB1: NC

MCU

颜色标注

UART

CAN







NET

SPI


I2C

功能引脚


通用IO

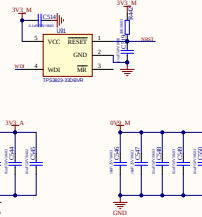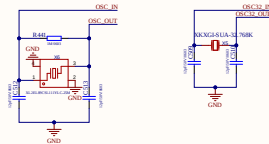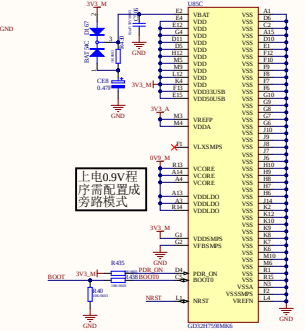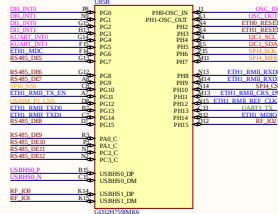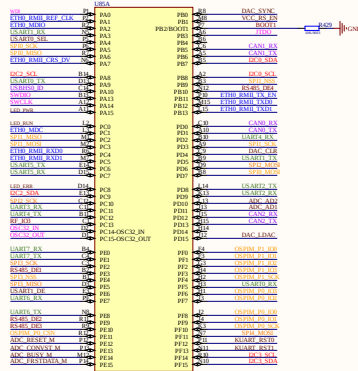

0.9V-LDO




LED




跨板接口


P-TO-M&C




M-TO-C




M-TO-P




EEPROM

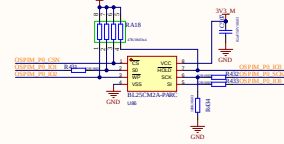


NAND FLASH

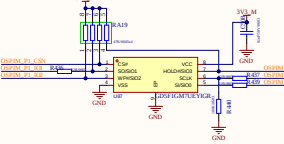


SWD

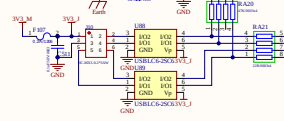






USB

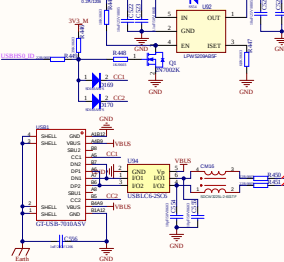


遥控切换




跨图纸连接

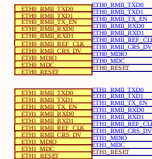


RS485

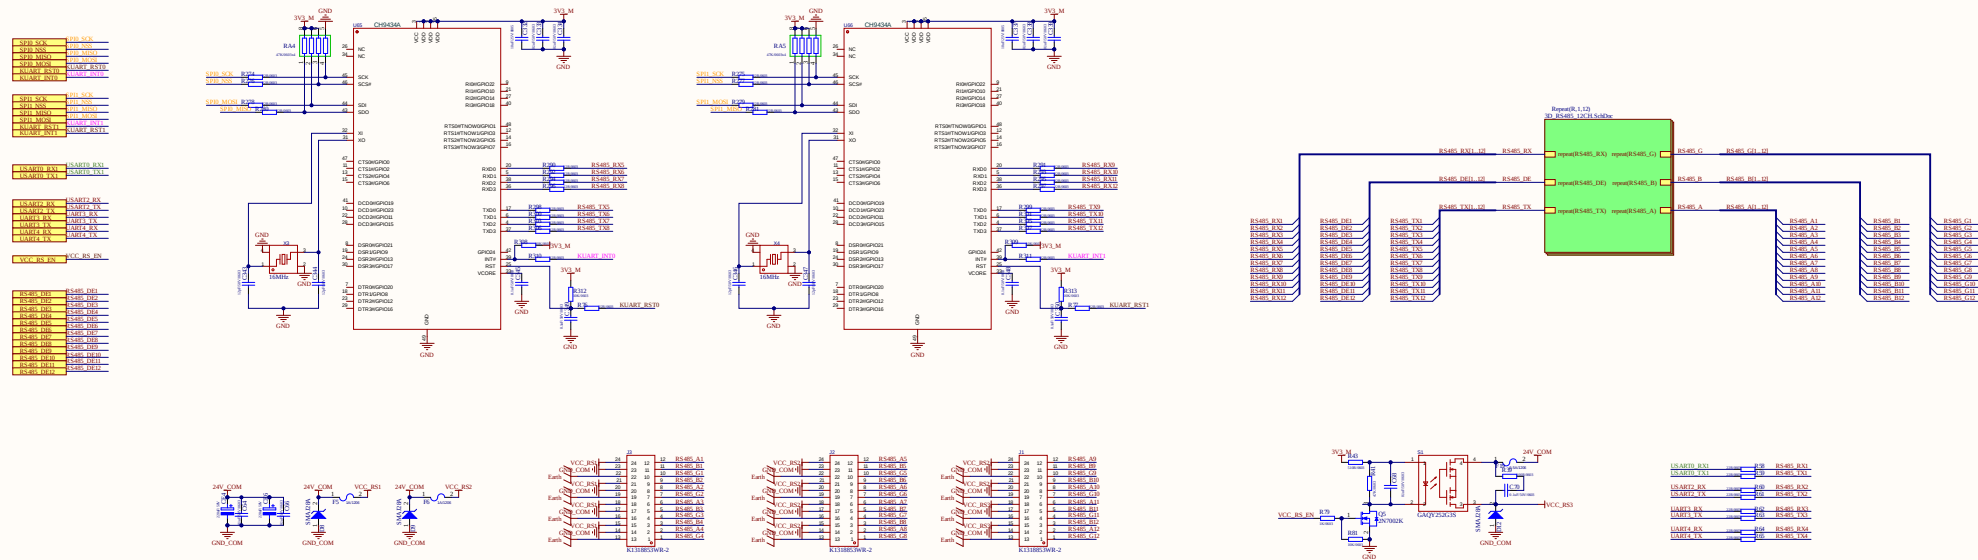


CAN

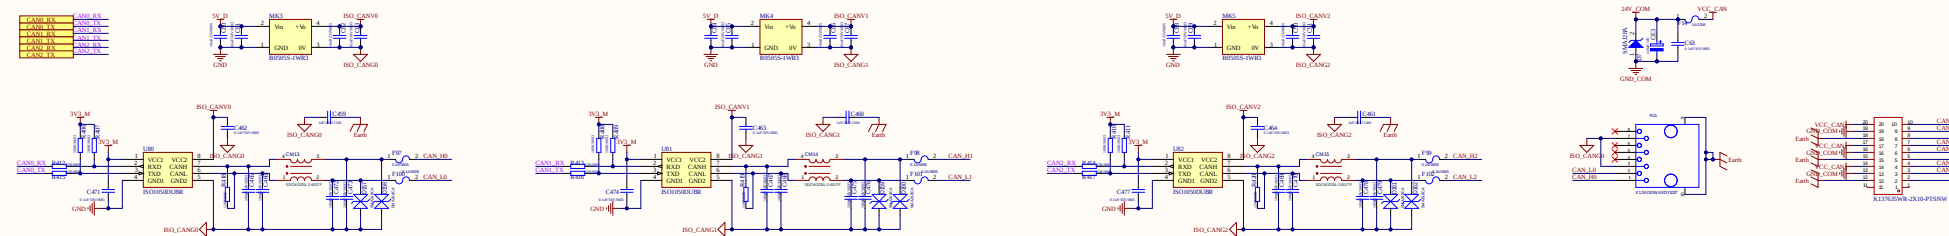

RS232

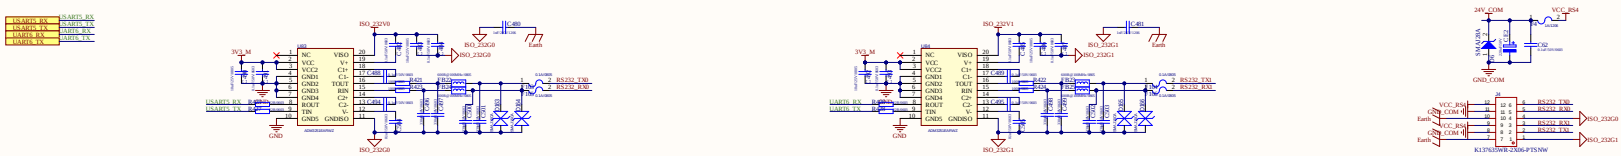


RS485模块

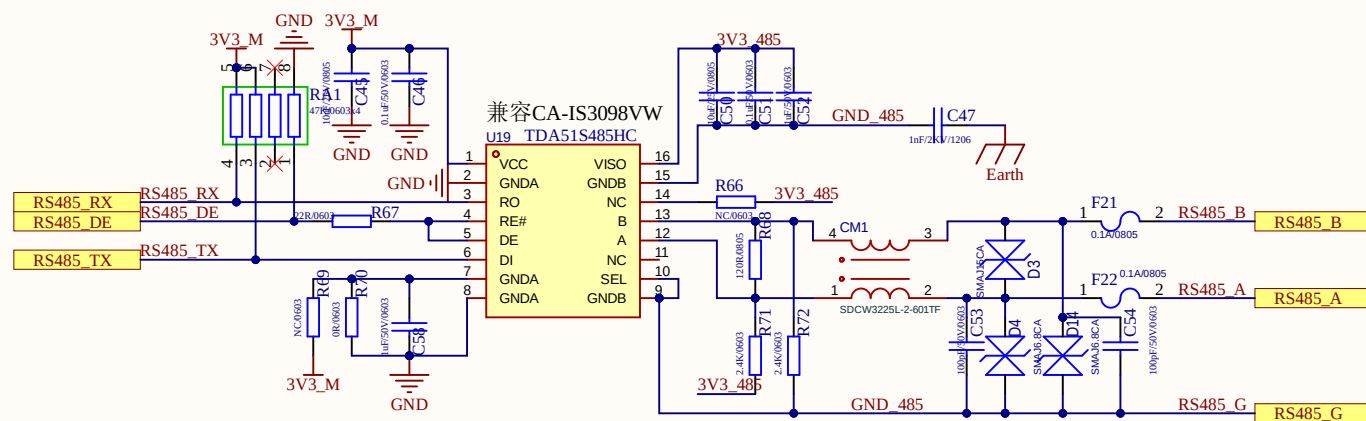


Title		
Size A4	Number	Revision
Date:	6-30-2026	Sheet of
File:	F:\Design\...\3D_RS485_12CH.SchDoc	Drawn By:

高压输入

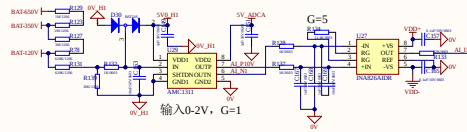


动力电池电压采集



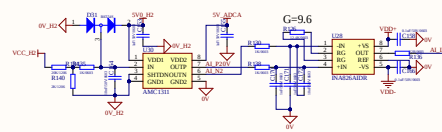


启动电池电压采集






通用输入

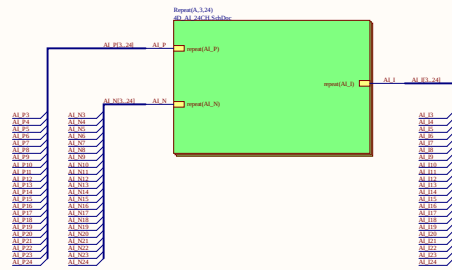



模拟输入接口

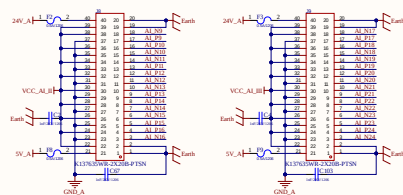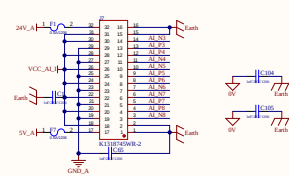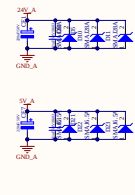


ADC

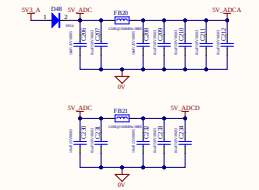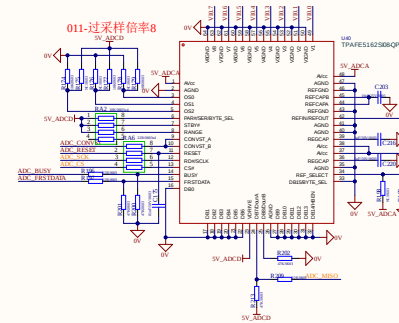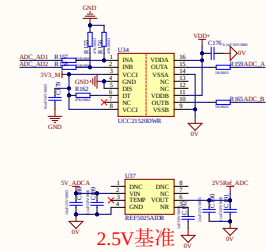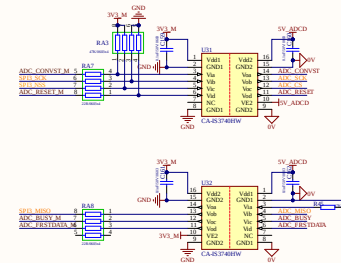


模拟复用开关 （运放可换更好的）

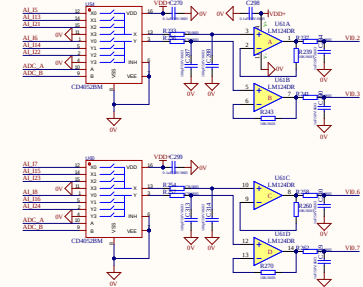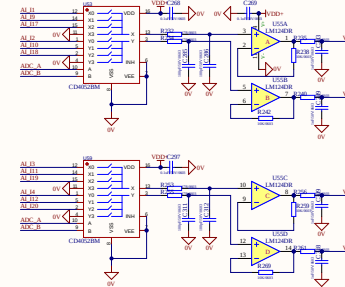

通用模拟输入模块

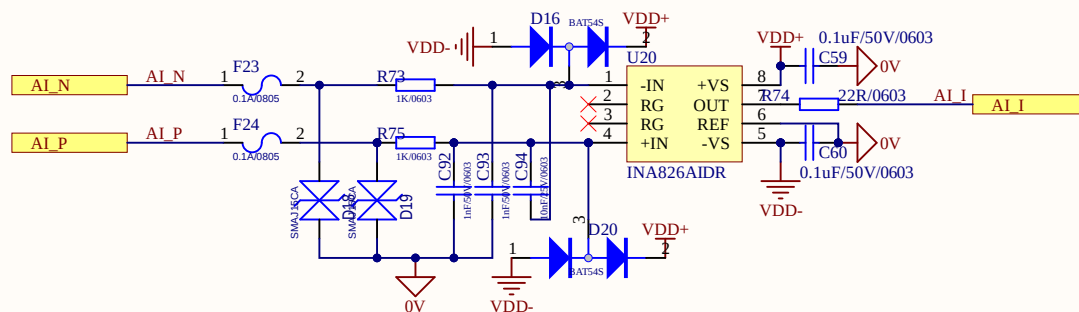

Title		
Size A4	Number	Revision
Date: 6-30-2026	Sheet of	
File: F:\Design\4D_AI_24CH.SchDoc	Drawn By:	

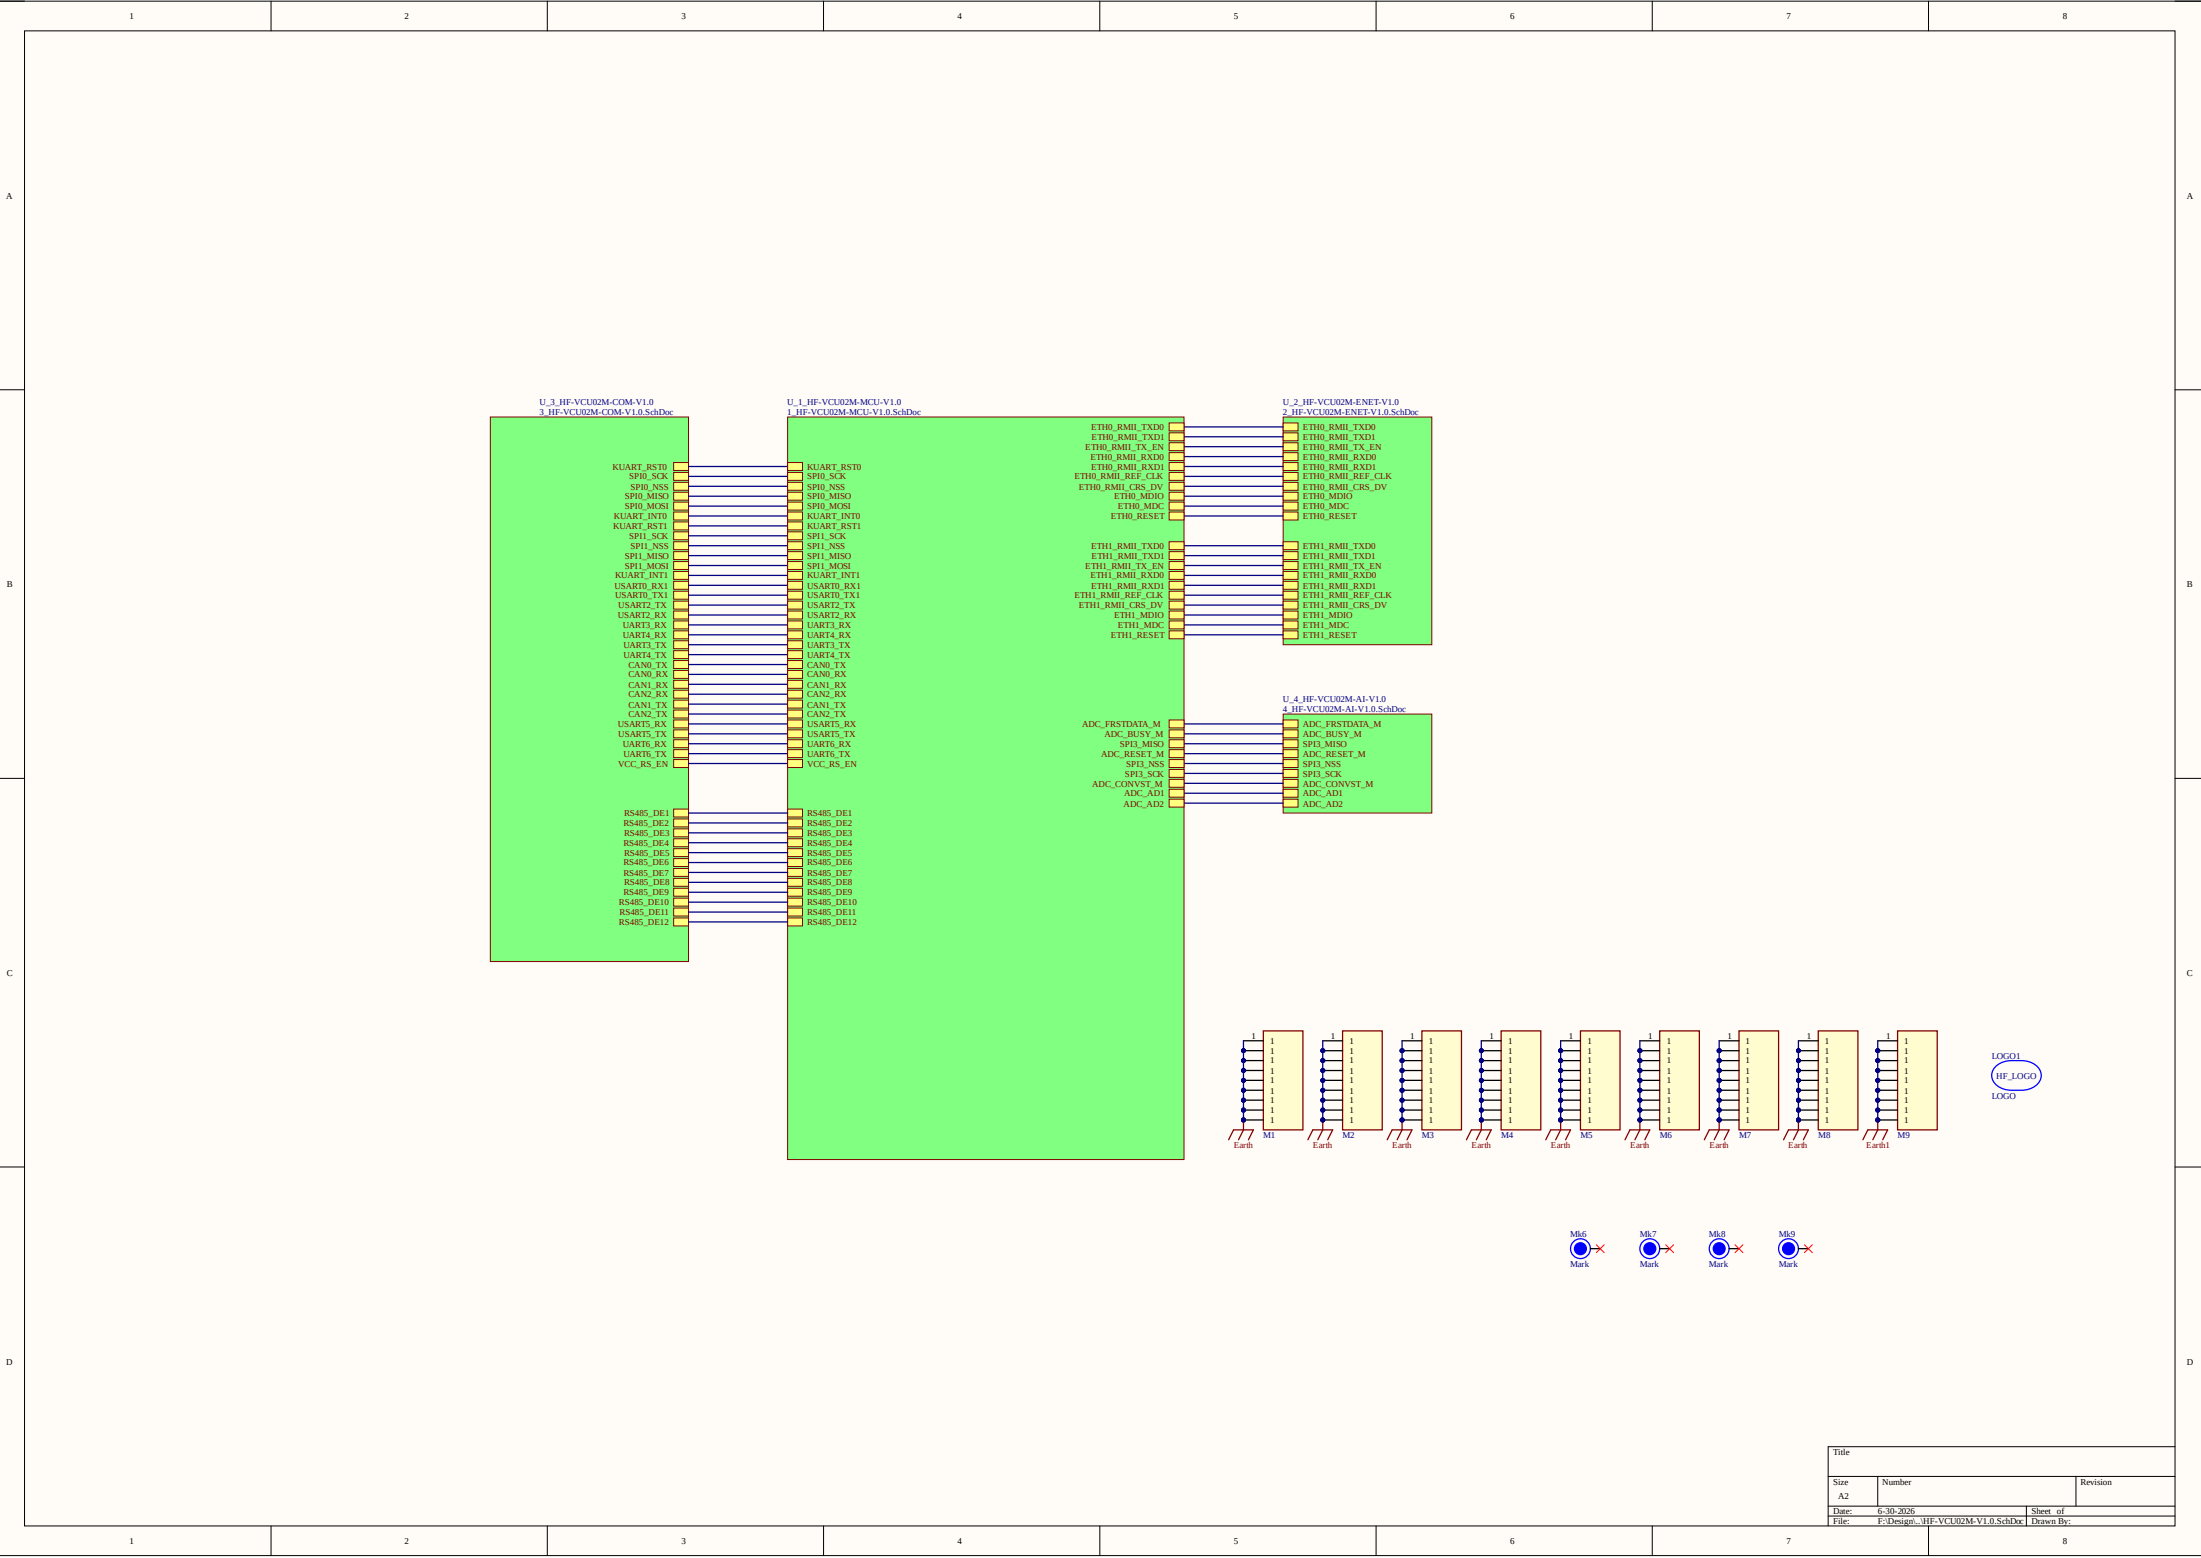

Title		
Size	Number	Revision
A2		
Date	6-30-2026	Sheet of
File	F:\Designs\HF-VCU02M-V1.0.SchDoc	Drawn By: