



February 2015

### Availability

**Electronic price list updated** with release 180.F (U.S.) and 146.F (Canada), dated February 16, 2015.

Spec News is available on [village.steelcase.com](http://village.steelcase.com). Search AdStock and download the current release's Spec News.

View or download Steelcase Specification Guides at <http://www.steelcase.com/en/resources/design/spec-guides/pages/specguides.aspx>.

Transitional products in this specification guide are **maintained for existing customers only** and are likely to be phased out over time. These products are indicated with a . Products that are scheduled to be culled are indicated with an , followed by the last order entry date.

**This specification guide contains multiple Steelcase and Turnstone product lines** which are designed into one specification guide for your convenience. Note that each product may be subject to different pricing terms and conditions.

► For a list of all trademarks, refer to the last page of this specification guide.  
© 2015 Steelcase Inc.



### For Canadian Pricing

Calculate in the following order to avoid rounding errors:

- Multiply the base price and each option by 1.09.
- Round each to the nearest dollar.
- Add base and options for total list price.

# Answer Solutions Specification Guide

## Working With This Specification Guide

|                                                |   |
|------------------------------------------------|---|
| Ten Tips: How to Get the Most Out of This Book | 2 |
| Additional Resources                           | 4 |

## Understanding

|                                             |     |
|---------------------------------------------|-----|
| Panels—Thin Trim                            | 5   |
| Panels—Square and Oval Trim                 | 69  |
| Shared Components                           | 101 |
| Wiring and Cabling                          | 141 |
| TS Series Worksurfaces and Supports         | 171 |
| Universal Systems Worksurfaces and Supports | 185 |
| Universal Tables                            | 227 |
| TS Series Storage Products                  | 247 |
| Universal Storage Products                  | 267 |
| Duo Storage Products                        | 313 |
| Victor2 Products                            | 321 |
| Lighting                                    | 327 |

## Specifying

|                                             |     |
|---------------------------------------------|-----|
| Panels—Thin Trim                            | 343 |
| Panels—Square and Oval Trim                 | 393 |
| Shared Components and Wiring and Cabling    | 433 |
| TS Series Worksurfaces and Supports         | 489 |
| Universal Systems Worksurfaces and Supports | 505 |
| Worksurface Power and Communication         | 555 |
| Universal Tables                            | 565 |
| TS Series Storage Products                  | 589 |
| Universal Storage Products                  | 607 |
| Storage Tops, Shelves, and Accessories      | 663 |
| Duo Storage Products                        | 679 |
| Victor2 Products                            | 683 |
| Lighting                                    | 689 |
| Transitional Answer Storage                 | 701 |

## Surface Materials


707

## Resources

723

# Ten Tips: How to Get the Most Out of This Book

## Tip 1

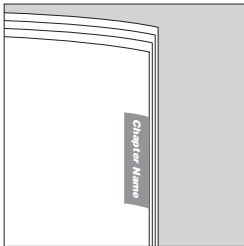

**Watch** the tabs on the right-hand edges of the pages. They'll always indicate which chapter you are in.

## Tip 2

**Statement of Line**

| Line | Description        | Page |
|------|--------------------|------|
| 1    | Base Junction      | 12   |
| 2    | Product Drawing    | 13   |
| 3    | Actual Dimensions  | 14   |
| 4    | Product Details    | 15   |
| 5    | Connections        | 16   |
| 6    | Wiring and Cabling | 17   |
| 7    | Surface Materials  | 18   |
| 8    | Application Topics | 19   |

**Use the Statement of Line pages** for an overview of the available components, their sizes, and page references for additional information. Each *Understanding* chapter includes a statement of line after the table of contents.

## Tip 3



**Find cross references** by looking for page numbers flagged with an arrow.

## Tip 4

**Study the product detail pages** in the *Understanding* section to learn everything an expert knows about specific products. Each product detail page in this section contains the following features, where applicable:

- Product Drawing
- Actual Dimensions
- Product Details
- Connections
- Wiring and Cabling
- Surface Materials
- Application Topics

### Product Drawing


shows you what the product looks like and points out important features.

### Product Details

gives specific information on the product and how it is used.

### Connections

describes how the product is assembled or how it attaches to another product.

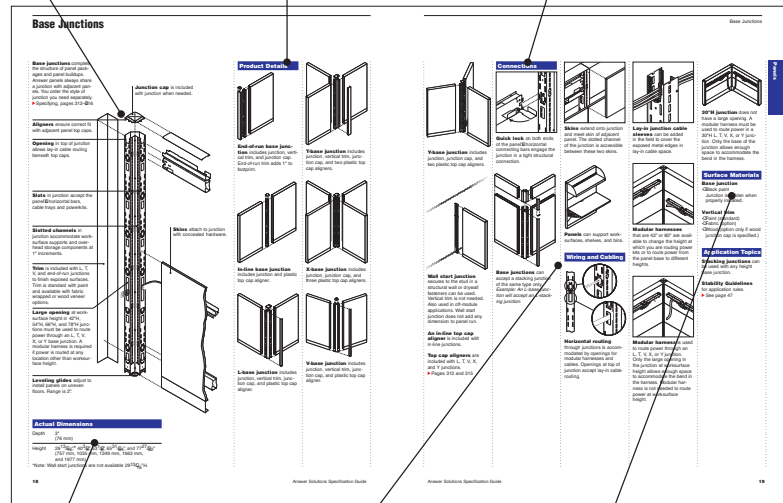

**Actual Dimensions** table lists the dimensions of the product.

**Wiring and Cabling** details the power and cable-management capabilities of the product.

**Surface Materials** lists what material is used for each part of the product.

### Tip 5

**Refer to the specifying pages** for all the information needed to order a product.

Each product specifying page contains a variety of elements to help you complete a specification:

- Product Drawing
- Standard Includes
- Required to Specify
- Options
- Related Products
- Specification Information
  - Dimensions
  - Style Number
  - Price

### Standard Includes

(under the dark grey band)  
provides a list of what  
comes standard with the  
product.

### Required to Specify

(under the dark grey band)  
itemizes the information  
that you must provide to  
order the standard product  
and the preferred sequence  
for specification.


### Specification Information

(under the light grey band) provides product dimensions, style numbers, and prices for the standard product and any surface material choices that are available.

## Product Drawing

shows you what the product looks like.

### Performance Tackable Acoustical Panel Packages

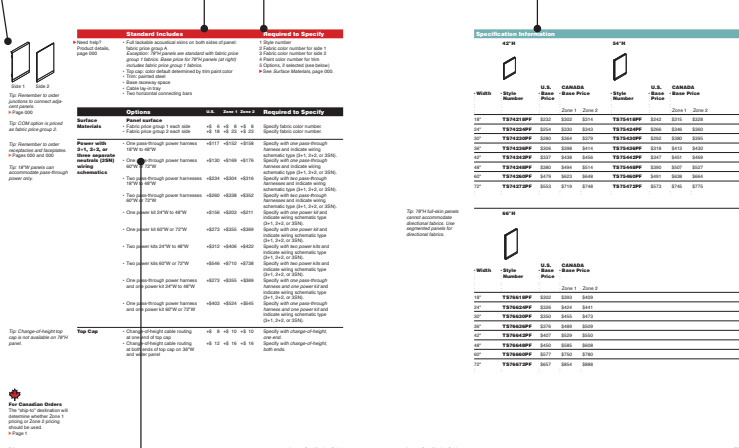

## Options

(under the black band) lists all the options that apply to the product, their price, and what is required to specify.

## Related Products

provide specification information for products that are directly related.

### Tip 6

### Required to Specify

Specify with Customiz Stain

**Italic typeface** on speci-

**Italic typeface** on specifying pages usually identifies wording that you should use in your order.


### Tip 7

**To determine** how many skins are needed to complete a panel, consult the table at right.

*Tip: Remember to order skins for both sides of the panel buildup.*

**Watch for tips** throughout the text that give you explanations and helpful instructions.

### Tip 8

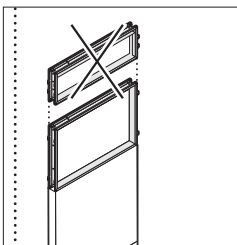

**Learn what you cannot do** by looking for drawings crossed out with an “X.”

# Additional Resources

**Answer** is supported with an array of informational materials, tools, and software to help you plan an installation efficiently.

**Product brochures and planning tools** can be ordered through your Steelcase area office by calling 1.800.784.0358 or through the AdStock web site at [village.steelcase.com](http://village.steelcase.com).

**This specification guide** contains multiple Steelcase and Turnstone product lines which are designed into one specification guide for your convenience. Note that each product may be subject to different pricing terms and conditions.

Additional storage products can be found in the *Storage Specification Guide*.

Refer to the *Turnstone Furniture Specification Guide* for the Understanding Turnstone information.

## Printed Materials

### Answer Product Brochure

This resource is your single source for everything you need to sell Answer. It contains photography showcasing a range of aesthetic and planning options. A complete statement of line, which highlights worksurfaces and storage options, also is included.  
*Form number 11-0002374*

### Turnstone Furniture Specification Guide

contains Kick products and storage that complement Answer.

**Storage Specification Guide** contains storage that attaches to Answer.

### Quick Ship Guide

This handbook describes all Steelcase, Turnstone, Details, and Coalesse products that are available for Rapid2 (ships in 2 days), Rapid5 (ships in 5-7 days), or Coalesse Rapid10 (ships in 10 days).

### Surface Materials Reference Manual

This publication provides:

- An explanation of the surface materials
- "Available on" matrices
- Vertical surface fabric and seating upholstery selection listing
- Technical data for surface materials
- Surface material care and cleaning instructions

## Computer Tools

### Electronic Catalog

Accurate sales quotations and purchase orders for Steelcase products are created with specification software that uses Steelcase Electronic Catalog data. Use the data to specify and price style numbers and options for every Steelcase product. The data is updated bimonthly by Steelcase and provided to software programs including: the Hedberg Business System, SmartTools – Steelcase's design and specification software (for more information on SmartTools, please email [SmartTools@steelcase.com](mailto:SmartTools@steelcase.com)), the ProjectMatrix Project-Symbols libraries, as well as 20-20 CAP Studio.

### Furniture Symbol Graphic Data

Steelcase creates 2D and 3D furniture symbols (with attributes) for planning and initially specifying Steelcase products. This data is incorporated into several add-on software packages that work in either a Microstation or an AutoCAD drafting environment.



### Digital Publications

If your device has a bar code reader App, scan this QR code for a direct link to the online digital publications. Utilizing this QR code allows you to search across multiple specification guides, share across social media, or print out pages. You can also access these digital publications at [www.steelcase.com](http://www.steelcase.com) or [village.steelcase.com](http://village.steelcase.com).

### Answer Product Training

Basic training for Answer and many other Steelcase products is available as part of the Building Product Muscle curriculum on the Steelcase University Web site at [village.steelcase.com](http://village.steelcase.com).

The Answer BPM web-based module is an interactive course filled with pictures, product detail, and practice exercises designed to build knowledge of Answer's positioning, statement of line, features and benefits, competitive products, application, and sales presentation. It also provides printable job aids of all content covered in the course to serve as ongoing performance support for Steelcase and dealer salespeople. The Answer BPM is course SAL140.

## Planning Ideas

**Planning ideas** are available to help inspire, envision, and plan great solutions. 2D and 3D AutoCAD drawings, Sketch-Up files, and SmartTools drawings are available on the Planning Ideas site: [www.steelcase.com/planningideas](http://www.steelcase.com/planningideas).

## Support

### Steelcase Capabilities

Steelcase products are distributed, installed, and serviced through a network of more than 600 dealers worldwide. Steelcase is also represented with offices and corporate showrooms in 26 U.S. cities, 4 Canadian cities, and in France, Germany, Great Britain, and Japan. Every Steelcase product meets our exceptionally high standards of quality and durability and comes with the Steelcase assurance of excellence in service.

**For assistance**, call your local dealer, the Steelcase Solutions Resource Team, or the Steelcase Solutions Fulfillment Team at 1.888.STEELCASE (1.888.783.3522) or send an e-mail to [lineone@steelcase.com](mailto:lineone@steelcase.com).

Call the Steelcase Solutions Resource Team prior to placing an order, when working on a bid, or when you need information about product applications and specifications.

Call the Steelcase Solutions Fulfillment Team if you have submitted an order to Steelcase and you need to speak to your Solutions Fulfillment Team Representative about the order. Also call if you have any post-shipment quality or warranty concerns or service parts questions.

Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call 1.616.247.2500.

## Related Products

### Details Worktools

include a full line of ergonomically designed products that enhances and improves the work setting. Product platforms include computer support tools, organizational worktools, and personal lighting.

► For additional information refer to *Details Specification Guide* or contact Details at 888.783.3522 or email [info@details-worktools.com](mailto:info@details-worktools.com).

### Height-Adjustable Tables Worksurfaces Brochure

Provides an overview of the advantages of using Details height-adjustable worksurfaces. Information on user ergonomics and how businesses can save money is included, along with visual and descriptive overviews of Details height-adjustable worksurfaces.  
*Form number 08-0000914*

### Answer Assembly Tool

As an alternative to using a rubber mallet, frames can be assembled using the Answer Assembly Tool. Call Steelcase for pricing and order information. 1.888.STEELCASE (1.888.783.3522) or send an email to [lineone@steelcase.com](mailto:lineone@steelcase.com).

# Understanding Panels—Thin Trim

|                                                                                    |          |
|------------------------------------------------------------------------------------|----------|
|  |          |
| <b>Statement of Line</b>                                                           | <b>6</b> |

## Product Details

|                                                            |            |
|------------------------------------------------------------|------------|
| Answer Panel Overview—Thin Trim                            | <b>11</b>  |
| Panel Buildups                                             | <b>12</b>  |
| Base Junctions—Thin Trim                                   | <b>14</b>  |
| Change-of-Height—Thin Trim                                 | <b>18</b>  |
| Change-of-Height Visual Overview—Thin Trim                 | <b>20</b>  |
| Off-Module Panel Connector—Thin Trim                       | <b>24</b>  |
| Stacking Junctions—Thin Trim                               | <b>26</b>  |
| Build Your Own Elements—Thin Trim                          | <b>28</b>  |
| Build Your Own—Thin Trim                                   | <b>33</b>  |
| Practice Examples—Thin Trim                                | <b>38</b>  |
| Build Your Own Stacking Junctions—Thin Trim                | <b>40</b>  |
| Reconfiguring with Answer—General Guidelines               | <b>44</b>  |
| Base Horizontal Frame Packages—Thin Trim                   | <b>50</b>  |
| Stacking Horizontal Frame Packages                         | <b>54</b>  |
| Frameless Glass Screens with Recessed Attachment—Thin Trim | <b>56</b>  |
| Frameless Glass Screens with Clip Attachment—Thin Trim     | <b>60</b>  |
| Top Cap Mounted Storage                                    | <b>62</b>  |
| Panel Packages—Thin Trim                                   | <b>66</b>  |
| <b>Stability Guidelines</b>                                | <b>124</b> |

# Statement of Line



Understanding  
▶ Page 14  
Specifying  
▶ Pages 344-359

## Base Junctions—Thin Trim

|     | In-Line Base Junctions | L-Base Junctions | T-Base Junctions | X-Base Junctions | End-of-Run Base Junctions | V-Base Junctions | Y-Base Junctions | Wall-Start Junctions |
|-----|------------------------|------------------|------------------|------------------|---------------------------|------------------|------------------|----------------------|
| 30" | •                      | •                | •                | •                | •                         | •                | •                | •                    |
| 42" | •                      | •                | •                | •                | •                         | •                | •                | •                    |
| 48" | •                      | •                | •                | •                | •                         | •                | •                | •                    |
| 54" | •                      | •                | •                | •                | •                         | •                | •                | •                    |
| 66" | •                      | •                | •                | •                | •                         | •                | •                | •                    |
| 78" | •                      | •                | •                | •                | •                         | •                | •                | •                    |



Understanding  
▶ Page 18  
Specifying  
▶ Pages 349-358

## Change-of-Height Junctions—Thin Trim

| In-line Change-of-Height Junction | L Change-of-Height Junction | T Change-of-Height Junction | X Change-of-Height Junction | V Change-of-Height Junction | Y Change-of-Height Junction |
|-----------------------------------|-----------------------------|-----------------------------|-----------------------------|-----------------------------|-----------------------------|
| •                                 | •                           | •                           | •                           | •                           | •                           |

*Note: Accommodates most panel heights and combinations.*

▶ See Change-of-Height Visual Overview—Thin Trim, pages 20-23.

*Tip: Answer to c:scape junctions are also available to connect Answer panels and c:scape beams.*


▶ See page 376



Understanding  
 ▶ Page 26  
 Specifying  
 ▶ Pages 362-363

## Stacking Junctions—Thin Trim

|     | Stacking In-Line Junctions | Stacking L Junctions | Stacking T Junctions | Stacking X Junctions | Stacking End-of-Run Junctions | Stacking V Junctions | Stacking Y Junctions | Wall-Start Junction |
|-----|----------------------------|----------------------|----------------------|----------------------|-------------------------------|----------------------|----------------------|---------------------|
| 12" | •                          | •                    | •                    | •                    | •                             | •                    | •                    | •                   |
| 18" | •                          | •                    | •                    | •                    | •                             | •                    | •                    | •                   |
| 24" | •                          | •                    | •                    | •                    | •                             | •                    | •                    | •                   |

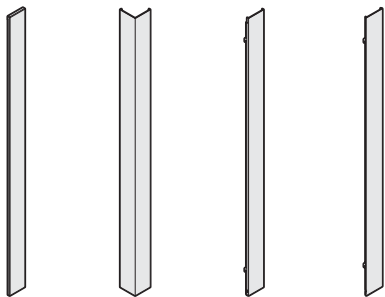

Understanding  
 ▶ Pages 30-31  
 Specifying  
 ▶ Pages 367-369

## Vertical Trim—Thin Trim

|     | End-of-Run Vertical Trim | L Vertical Trim | T Vertical Trim | V Vertical Trim |
|-----|--------------------------|-----------------|-----------------|-----------------|
| 30" | •                        | •               | •               | •               |
| 42" | •                        | •               | •               | •               |
| 48" | •                        | •               | •               | •               |
| 54" | •                        | •               | •               | •               |
| 60" | •                        | •               | •               | •               |
| 66" | •                        | •               | •               | •               |
| 72" | •                        | •               | •               | •               |
| 78" | •                        | •               | •               | •               |
| 84" | •                        | •               | •               | •               |
| 90" | •                        | •               | •               | •               |



Understanding  
 ▶ Pages 31-32  
 Specifying  
 ▶ Pages 370-372

## Change-of-Height—Thin Trim

|     | End-of-Run Change-of-Height | L Corner Change-of-Height | T Corner Change-of-Height | 120° Corner Change-of-Height | V Change-of-Height |
|-----|-----------------------------|---------------------------|---------------------------|------------------------------|--------------------|
| 12" | •                           | •                         | •                         | •                            | •                  |
| 18" | •                           | •                         | •                         | •                            | •                  |
| 24" | •                           | •                         | •                         | •                            | •                  |
| 30" | •                           | •                         | •                         | •                            | •                  |
| 36" | •                           | •                         | •                         | •                            | •                  |

*Note: For all change-of-height trim, see Change-of-Height—Thin Trim on page 31.*

Statement of Line, continued



Understanding  
 ▶ Page 28  
 Specifying  
 ▶ Page 373

**Junction Posts**

| 30" | 42" | 48" | 54" | 66" | 78" |
|-----|-----|-----|-----|-----|-----|
| •   | •   | •   | •   | •   | •   |



Understanding  
 ▶ Page 28  
 Specifying  
 ▶ Page 374

**Junction Blocks**

| 90° Corner | 120° Corner |
|------------|-------------|
| •          | •           |



Understanding  
 ▶ Page 28  
 Specifying  
 ▶ Page 374

**Inside Corner Light Seals**


| 54" | 66" | 78" |
|-----|-----|-----|
| •   | •   | •   |



Understanding  
 ▶ Page 29  
 Specifying  
 ▶ Page 375

**Junction Caps**


| 90° Corner<br>Junction<br>Cap | 120° Corner<br>Junction<br>Cap | 90° Change-<br>of-Height<br>Junction Cap | Junction Cap<br>Corner Aligner |
|-------------------------------|--------------------------------|------------------------------------------|--------------------------------|
| •                             | •                              | •                                        | •                              |

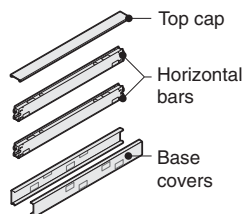

Understanding  
 ▶ Page 50  
 Specifying  
 ▶ Page 380

**Base Horizontal Frame Packages—Thin Trim**


| 18" | 24" | 30" | 36" | 42" | 48" | 60" | 72" |
|-----|-----|-----|-----|-----|-----|-----|-----|
| •   | •   | •   | •   | •   | •   | •   | •   |




Understanding  
 ▶ Page 54  
 Specifying  
 ▶ Page 382

### Stacking Horizontal Frame Packages

| 18"W | 24"W | 30"W | 36"W | 42"W | 48"W | 60"W | 72"W |
|------|------|------|------|------|------|------|------|
| •    | •    | •    | •    | •    | •    | •    | •    |



Horizontal frame  
package

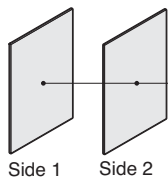

Performance  
Tackable  
Acoustical  
Skins


Understanding  
 ▶ Page 66  
 Specifying  
 ▶ Page 390

### Performance Tackable Acoustical Panel Packages—Thin Trim

|      | 18"W | 24"W | 30"W | 36"W | 42"W | 48"W | 60"W | 72"W |
|------|------|------|------|------|------|------|------|------|
| 42"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 48"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 54"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 66"H | •    | •    | •    | •    | •    | •    | •    | •    |



Horizontal frame  
package

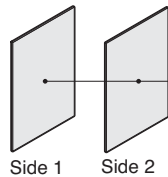

Tackable  
Acoustical  
Skins


Understanding  
 ▶ Page 66  
 Specifying  
 ▶ Page 390

### Tackable Acoustical Panel Packages—Thin Trim

|      | 18"W | 24"W | 30"W | 36"W | 42"W | 48"W | 60"W | 72"W |
|------|------|------|------|------|------|------|------|------|
| 42"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 48"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 54"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 66"H | •    | •    | •    | •    | •    | •    | •    | •    |

## Panels—Thin Trim

### Statement of Line, continued

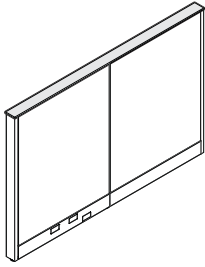


Understanding  
 ▶ Page 51  
 Specifying  
 ▶ Page 383

### Spanning Top Caps—Thin Trim

| 36"W | 42"W | 48"W | 60"W | 72"W | 78"W | 84"W | 90"W | 96"W |
|------|------|------|------|------|------|------|------|------|
|------|------|------|------|------|------|------|------|------|


|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| • | • | • | • | • | • | • | • | • |
|---|---|---|---|---|---|---|---|---|

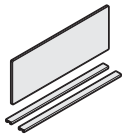

Understanding  
 ▶ Page 56  
 Specifying  
 ▶ Page 384

### Frameless Glass Screens with Recessed Attachment—Thin Trim

|      | 24"W | 30"W | 36"W | 42"W | 48"W | 54"W | 60"W | 66"W | 72"W | 78"W | 84"W | 90"W | 96"W |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| 6"H  | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    |
| 12"H | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    |
| 18"H | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    |

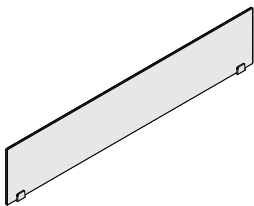

Understanding  
 ▶ Page 60  
 Specifying  
 ▶ Page 387

### Frameless Glass Screens with Clip Attachment—Thin Trim

|      | 24"W | 30"W | 36"W | 42"W | 48"W | 60"W | 72"W | 78"W | 84"W | 90"W | 96"W |
|------|------|------|------|------|------|------|------|------|------|------|------|
| 12"H | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    |



Center Mount Bracket



Aisle Mount Bracket

Understanding  
 ▶ Page 62  
 Specifying  
 ▶ Page 388

### Top Cap Mounted Storage—Center Mounted and Aisleway

| 30"W | 36"W | 42"W | 48"W | 54"W | 60"W | 66"W | 72"W (Width of storage unit) |
|------|------|------|------|------|------|------|------------------------------|
|------|------|------|------|------|------|------|------------------------------|

|   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|
| • | • | • | • | • | • | • | • |
|---|---|---|---|---|---|---|---|

**Thin, square, and oval trim styles** are available on Answer panels. Trim styles are not compatible with each other. Applications must use one consistent trim style.

**Panel buildups** allow you to create unique configurations by mixing surface materials and colors on segmented panels. Order skins and horizontal frame packages separately.

**Panel frame** is made up of two major elements—vertical base junctions and base horizontal connecting bars.

**Stacking components** can be used on both panel buildups and panel packages.

**Panel packages** are used to create common configurations quickly and easily. Packages include a horizontal frame package and skins for both sides of the panel.

**Stacking junctions** do not come with trim. Vertical trim must be ordered separately to cover any exposed junctions.  
▶ Page 26

**Stacking horizontal frame package** must be used with stacking junctions.  
▶ Page 382

**Stacking junctions** can be used in panel buildups and panel packages. They are available for in-line, L, T, X, V, Y, and end-of-run configurations.  
▶ Pages 362-363

**Skins** attach to frame without tools and can be removed and repositioned easily.  
▶ Pages 107-117

**Base junctions** are always shared by adjacent panels. They are available for in-line, L, T, X, V, Y, and end-of-run configurations. Wall-start junctions and off-module connectors are also available.  
▶ Page 14

**Base trims or open base trim styles** are available on panels with Thin trim style.

**Base horizontal connecting bars** lock into the vertical junctions at the top and the bottom location of base junction to provide structural stability for the panels.

**Powerkits** include power blocks attached to a supporting power tray.  
▶ Page 162

**Thin end-of-run trim** has an integral finished end.

**Alternate powerkit harness routing** can be accommodated through the junction opening. In in-line applications installed on uneven floors, route harness through junction opening to prevent harness from being exposed.

**Leveling glides** adjust to install panels on uneven floors. Range is  $2\frac{3}{4}$ ".

### Actual Dimensions


Height 29 $\frac{1}{2}$ ", 41 $\frac{7}{8}$ ", 48 $\frac{1}{16}$ ", 54 $\frac{1}{4}$ ", 66 $\frac{19}{32}$ ", and 78 $\frac{31}{32}$ "

Note: Height is minimum from floor to top of top caps. Leveling glides can extend  $2\frac{3}{4}$ ".


# Panel Buildups

**Order panel components separately** to create unique configurations.

**1. Begin by planning your frames.** Junctions determine height and horizontal connecting bars determine width.

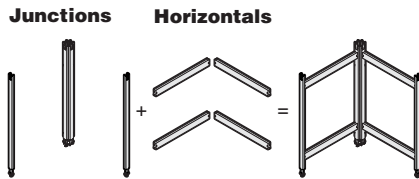


**1a. Corner junctions** can easily be reconfigured by adding or removing a junction post (available on junctions shipped on or after October 10, 2011).

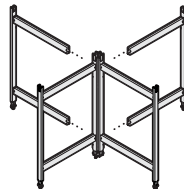


**2. Order skins for both sides of panel.**  
*Exception: Windows accommodate both sides of the panel.*


**Performance tackable acoustical fabric-covered skins**

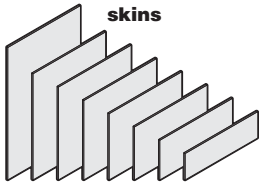


**Tackable acoustical fabric-covered skins**

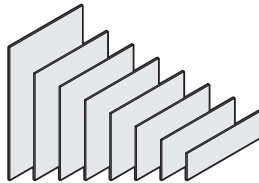


**Steel skins (12"H, 18"H, and 24"H have ribbed and perforated options)**

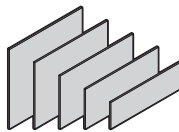


**Laminate skins**

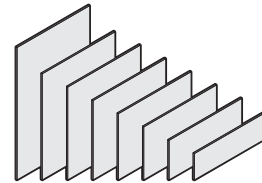

**Wood skins**

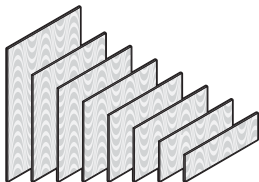


**Markerboard skins**

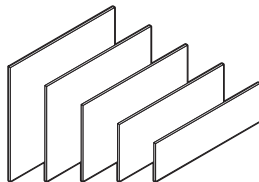


*Tip: Wood skin sets are available for 42", 48", 54", and 66" panel heights.*


**Answer allows a wide variety of skin arrangements** to meet specific functional and aesthetic needs. Skins are not dedicated to a specific location and can be used anywhere on the face of the panel.

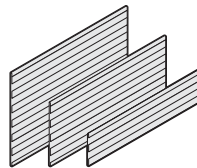

**Slatwall**




**Windows**

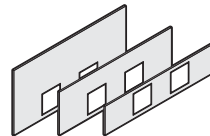

**Technology skins**

**When specifying skins,** the total skin height will be 6" less than the overall panel height. For example, if the panel is 66"H the total skin height will be 60".

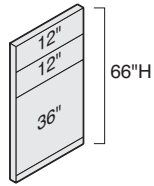

**When planning skin segments,** add skin heights together and add an additional 6" for total height.

Skins = 12" + 12" + 36" = 60"

Trim = 6"

Total = 66"H

**Skins to the floor** are available in fabric, steel, laminate, wood, or wood skin sets. When ordering skins to the floor an F suffix will be added to the end of the style number. The total skin height will still be 6" less than the panel height. If the panel is 54"H, 48" of skin height will need to be specified, in this case an "F" suffix will be added to the end of the style number for the skin in the lowest position on the panel.

| Panel Height | Total Standard Skin Height | Style Number | Total Skin To The Floor Height | Style Number |
|--------------|----------------------------|--------------|--------------------------------|--------------|
| 30"H Panel   | 24"                        | TS72430TK    | 24"                            | TS72430TKF   |
| 42"H Panel   | 36"                        | TS73630TK    | 36"                            | TS73630TKF   |
| 48"H Panel   | 42"                        | TS74230TK    | 42"                            | TS74230TKF   |
| 54"H Panel   | 48"                        | TS74830TK    | 48"                            | TS74830TKF   |
| 66"H Panel   | 60"                        | TS76030TK    | 60"                            | TS76030TKF   |
| 78"H Panel   | 72"                        | TS77230TK    | 72"                            | TS77230TKF   |

### Monolithic Skins

54"H Panels



Qty 1 - TS74830TK



Qty 1 - TS74830TKF

### Segmented Skins

54"H Panels




Qty 2 - TS72430TK



Qty 1 - TS72430TK  
Qty 1 - TS72430TKF

### 3. Specify powerkits where you will need power.

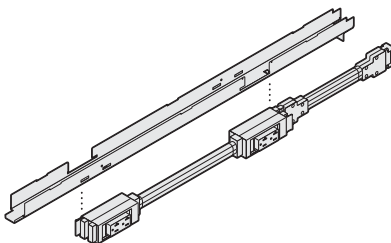

# Base Junctions—Thin Trim

**Base junctions** complete the structure of panel packages and panel buildups. Answer panels always share a junction with adjacent panels. You order the style of junction you need separately. ▶ Specifying thin, pages 344-348.

**Thin trim** require end-of-run and change-of-height junctions manufactured on or after October 10, 2011.

**Corner junction cap aligners** ensure correct fit with adjacent panel top caps.

**Opening in top of junction** allows lay-in cable routing beneath top caps.

**Slots in junction** accept the panel's horizontal bars every 12", cable trays every 6", and powerkits every 12" vertically.

**Slotted channels in junction** accommodate worksurface supports and overhead storage components at 1" increments.

**Trim** is included with L, T, V, and end-of-run junctions to finish exposed surfaces. Trim is available with paint or wood veneer.

**Large openings** are used to route power or cables through an L, T, X, V, Y, and in-line base junction.

**Leveling glides** adjust to install panels on uneven floors. Range is 2<sup>3</sup>/<sub>4</sub>".

**Inside corner light seals** are only needed in 90° applications and are included in the style number when ordering.

**Junction cap and appropriate aligners** are included with junction when needed.

**Skins** attach to junction with concealed hardware.


**Block and post construction** allows the ability to add or remove posts on corner junction for easy configuration.

**Lay-in cable routing** is accommodated in base area.


## Product Details

**Answer** is available with three styles of trim - square, oval, and thin. This section covers Thin trims. Base junctions are specified with desired style. Styles can not be mixed between adjacent panels.

▶ For square and oval trims, see page 69.

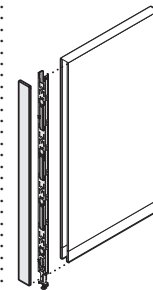

**End-of-run base junction** includes junction, vertical trim, and trim aligner. Select thin style trim. End-of-run trim adds 1/2" to footprint.

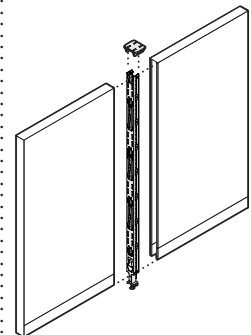


**In-line base junction** includes junction and plastic top cap aligner. Select thin style trim.

## Actual Dimensions


Depth 3"

Height 28<sup>7</sup>/<sub>16</sub>"\* 40<sup>3</sup>/<sub>4</sub>", 47", 53<sup>1</sup>/<sub>8</sub>", 65<sup>1</sup>/<sub>2</sub>", and 77<sup>3</sup>/<sub>8</sub>"


\*Note: Wall-start junctions are not available 28<sup>7</sup>/<sub>16</sub>".

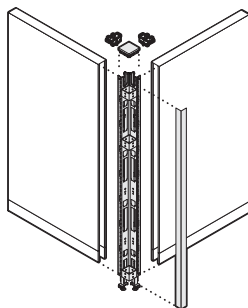


**L same height base junction** includes junction, inside corner light seal(s), vertical trim, junction cap, and two plastic top cap aligners. Select thin style trim.

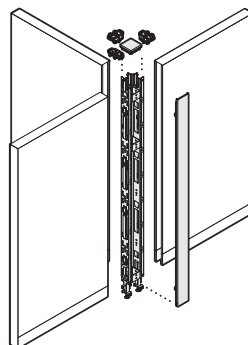


**T same height base junction** includes junction, inside corner light seal(s), vertical trim, junction cap, and three plastic top cap aligners. Select thin style trim.

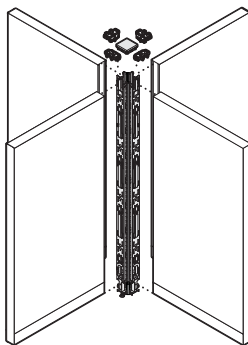


**X same height base junction** includes junction, inside corner light seal(s), junction cap, and four plastic top cap aligners. Select thin style trim.

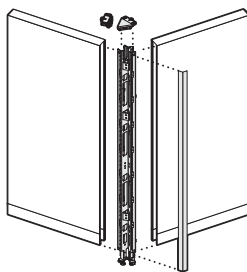


**V same height base junction** includes junction, vertical trim, junction cap, and plastic top cap aligner. Select thin style trim.

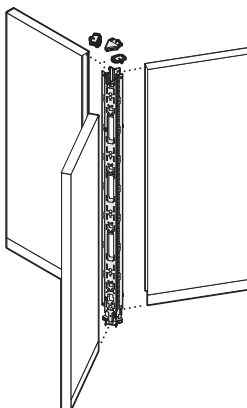

**Y same height base junction** includes junction, junction cap, and two plastic top cap aligners. Select thin style trim.

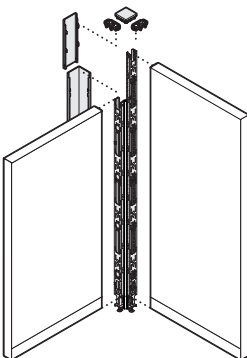

**Most change-of-height junction configurations** are pre-configured and include junctions and needed trims. Change-of-height junctions that are not pre-configured are available through the build your own process.  
▶ See specification information, page 373.

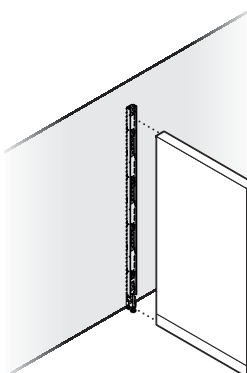


**Wall-start junction** secures to the stud in a structural wall or drywall fasteners can be used. Vertical trim is not needed. Also used in off-module applications. Wall-start junction adds 3/16" dimension to panel run.



**An in-line top cap aligner** is included with in-line junctions. Select thin style.




**Top cap aligners** are included with end-of-run, L, T, X, V, and Y junctions.

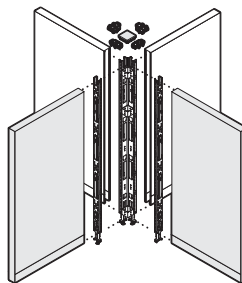


**Posts** can be added or removed from corner junctions to change from one corner to another.


## Connections

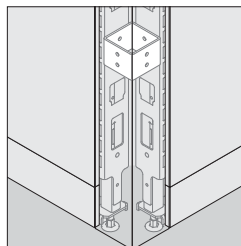

**Block and post construction of corner junctions** allow junctions to be easily added or removed to configure between L, T, X, V, or Y in an application.

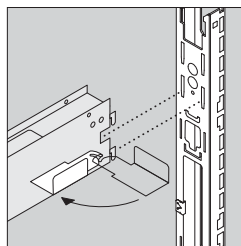


**Quick lock on both ends of the panel's horizontal connecting bars** engage the junction in a tight structural connection.

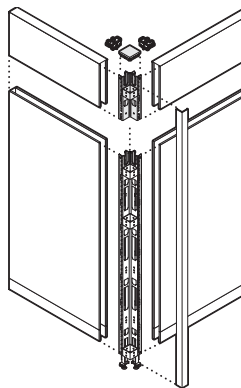


**Base junctions** can accept a stacking junction. Omit trim option should be selected whenever stacking. Omitting trim removes all vertical trim, junction cap, and aligner(s). Remember to specify vertical trim, junction cap, inside corner light seal(s), and aligners separately.

▶ See page 373.

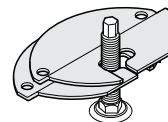

**Floor anchor brackets** are available to secure junctions to the floor to prevent panel movement. Brackets are intended for use in seismic zones and may require additional code approvals.




**Junction stabilizer bracket** can be used to add rigidity to a panel run or when using a Universal sliding door. Bracket must be bolted to a concrete floor. For junctions manufactured before October 10, 2011 use TS7SB. For junctions manufactured on or after October 10, 2011 use TS7SBNJ.

**Bracket foot** is visible on one side of panel when installed.


**Junction stabilizer bracket** blocks power routing in the panel base and just above the base areas. The bracket covers the slots on the junction where the powerkit connects in these two zones. It also blocks the ability for a powerkit harness, pass-through powerkit, or modular harness to route in the base area from an adjacent panel.

**Junction stabilizer bracket also** blocks lay in of cables in base area of panel.

## Base Junctions—Thin Trim, continued

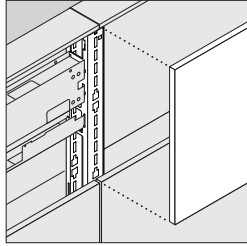


**Skins** extend onto junction and meet skin of adjacent panel. The slotted channel of the junction is accessible between these two skins.

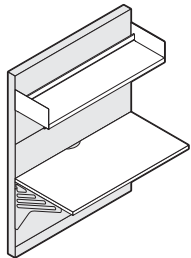


**Panels** can support work-surfaces, shelves, and bins.


### Wiring and Cabling

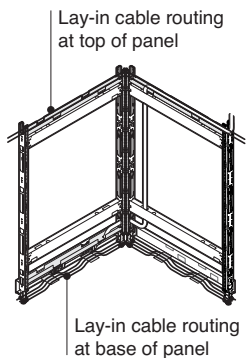


**Lay-in cable routing** is accommodated in the top of junctions. Lay-in cable and power routing is accommodated in base area.

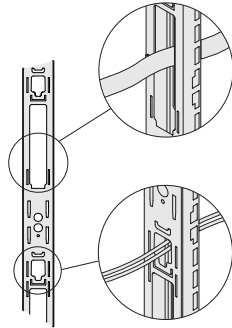


**As an alternative to lay-in cable routing**, horizontal routing of power and cables can be accommodated through openings in junctions.

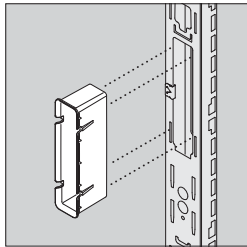

**Junction tall sleeves** can be ordered to cover the exposed metal edges in the large cable routing opening of junctions. Tall junction sleeve can only be used on junctions manufactured on or after October 10, 2011.

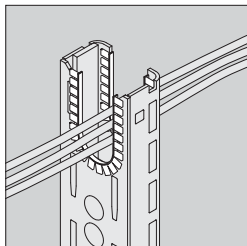

**Lay-in junction cable sleeves** can be added in the field to cover the exposed metal edges in lay-in cable space.

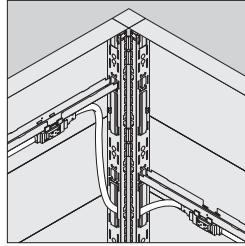

**Modular harnesses** that are 43" or 80" are available to change the height at which you are routing power kits or to route power from the panel base to different heights.



**Carpet gripper glide caps** may be added to panel glides to help hold panel in place (used only on junctions manufactured on or after October 10, 2011).

### Surface Materials

#### Base junction

- Black paint
- Tip: Junction is hidden when properly installed.*

#### Junction cap—thin

- Paint
- Wood

#### Vertical trim—thin

- Paint
- Wood

**Painted style numbers** include all painted trim and wood style numbers include all wood trim. It is not recommended to mix painted and wood trim. Wood trim is slightly thicker as a result of adding veneer so some misalignment between elements may result.

*Tip: Answer panel wood trims are only available with quarter-cut finishes with the exception of maple finishes. Maple on wood trims is only available with flat-cut finishes. For ordering simplicity, both flat-cut and quarter-cut finishes can be specified on panel trims. However, for all finishes except maple, if a flat-cut finish is selected, the trims will have the coordinating quarter-cut finish. For maple finishes, if quarter-cut is selected, the trims will have the coordinating flat-cut finish. Blending panel trims with other wood products that have flat-cut finishes will be visually acceptable for most applications. If a more exact match is desired for non-maple finishes, please specify quarter-cut finishes for the entire project. If a more exact match is desired for maple finishes, please specify flat-cut finishes for the entire project.*

### Application Topics

**Stacking junctions** can be used with any height base junction.

**Stability Guidelines** for application rules.

► See page 124



# Change-of-Height—Thin Trim

## Change-of-height trim

is available for base panels and stacking panels. It is used in in-line and corner applications.

► Specifying thin, pages 349-358.

*Note: Change-of-height trims are available in 12"H, 18"H, 24"H, 30"H, and 36"H.*

## Change-of-height (two different panel heights) L, T, X, V, and Y junctions

are supported by style numbers in the following pages. Change-of-height (three different panel heights) T, X, and Y and change-of-height (four different panel heights) X junctions are not supported by style numbers and will need to be specified in the build your own section.

► See pages 28-43 for understanding.


► See pages 349-358 for specifying.

*Note: Change-of-height junctions include the necessary change-of-height trim (including junction cap and aligners) for the change-of-height portion. See the following pages for panel height change-of-height applications (two different panel heights) and what is included in each style number.*

## Change-of-height junctions

are shipped assembled. L, V, and some T junctions are handed. A post may have to be moved during installation to achieve the proper "hand".


## 90° Planning Application

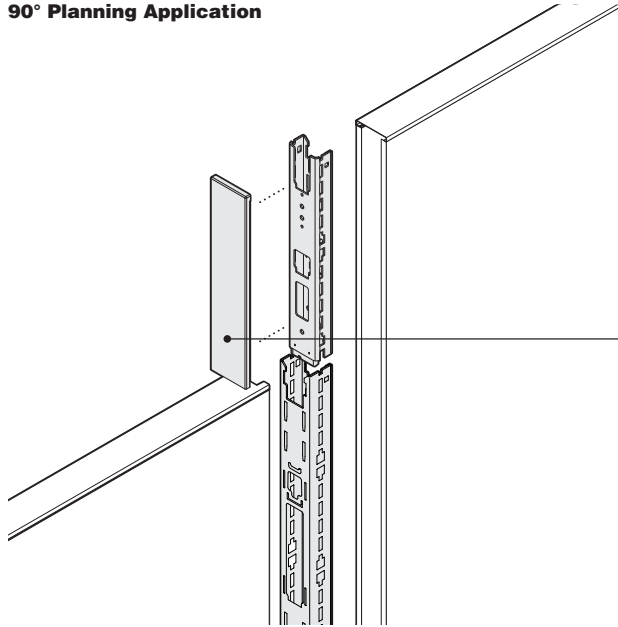

**An end-of-run aligner** is included with the end-of-run change-of-height trim to provide tight alignment between the top cap and the change-of-height trim. No junction cap is required.

**End-of-run change-of-height trim** is used at end-of-run or in-line change-of-height. The top of the trim aligns with the top cap on the panel.

## 90° Planning Application

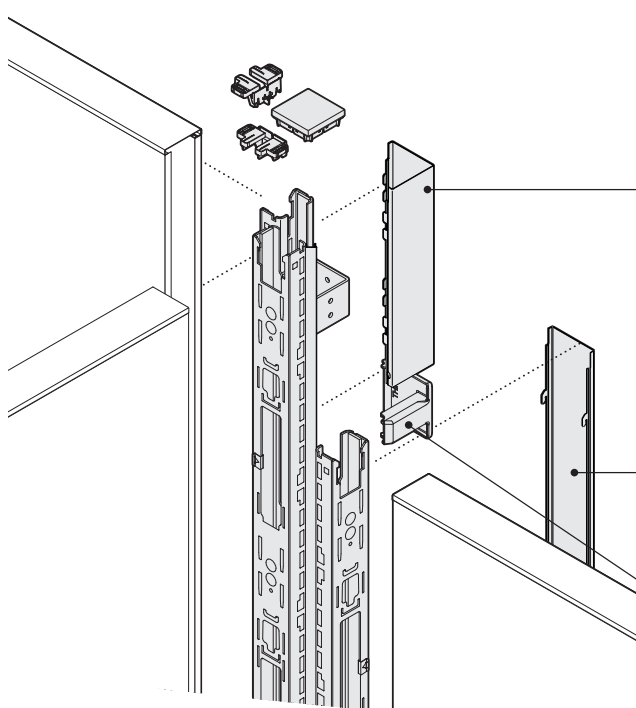

**L corner change-of-height trim** is used in a T or X change of height application when there are two panels at the tallest height located adjacent to each other. No aligners are required to connect the L corner change-of-height trim to the junction cap.

**T vertical trim** is used to finish trimming out the base of the panel. Base panel trim is included when specifying the change-of-height junction.

**An L to T aligner** should be specified when an L corner change-of-height trim resides directly above a T trim in a change-of-height application. The L to T aligner creates a tight connection between the two trim pieces.


## Actual Dimensions

|        |                                                                                                                                                                               |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Depth  | 3"                                                                                                                                                                            |
| Height | 12 <sup>5</sup> / <sub>32</sub> ", 18 <sup>1</sup> / <sub>2</sub> ", 24 <sup>1</sup> / <sub>2</sub> ", 30 <sup>7</sup> / <sub>8</sub> ", and 36 <sup>7</sup> / <sub>8</sub> " |

**An L to T aligner** must be specified if an L change-of-height trim is located directly above a T.


**No aligners** are required to connect a T corner change-of-height trim to the junction cap or top cap.

### 90° Planning Application

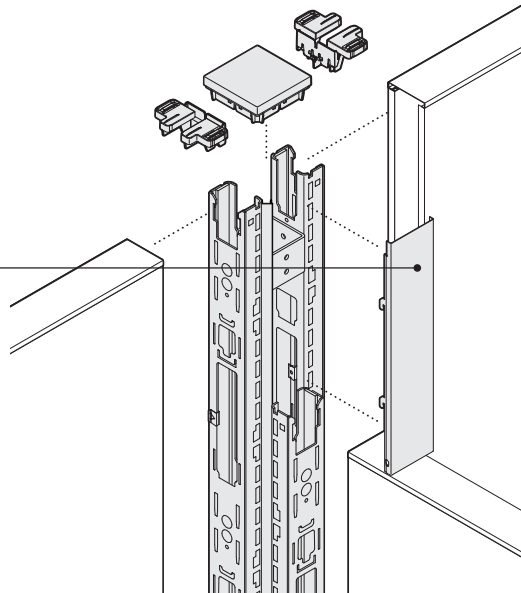

**T corner change-of-height trim** is used in T or X change-of-height applications where there are two panels at the same height located in-line with each other.

### 120° Planning Application

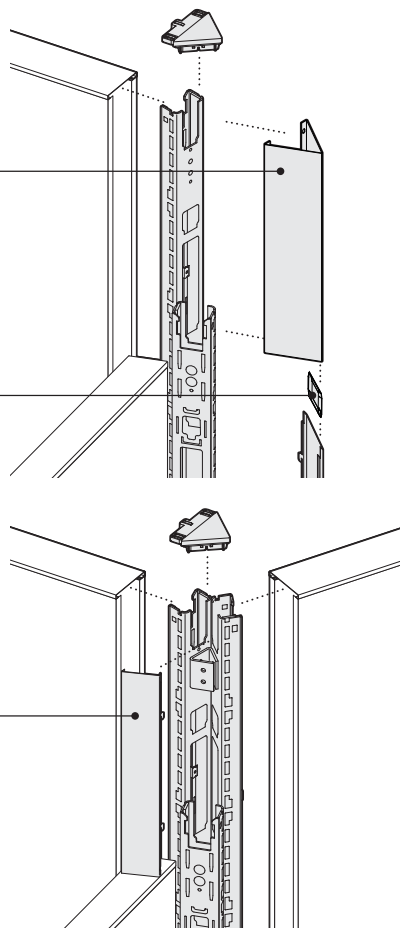

**120° corner change-of-height trim** is used in a V or Y change-of-height application when there is only one panel at the tallest height. No aligners are required to connect the trim to the junction cap or top cap.

**120° to V aligner** should be specified when a 120° corner change-of-height trim resides directly above a V trim. The 120° to V aligner creates a tight connection between the two trim pieces.

**V corner change-of-height trim** is used in a Y change-of-height application when there are two panels at the tallest height. No aligners are required to connect the trim to the junction cap or top cap.

### Surface Materials

#### Change-of-height trim

- Paint
- Wood veneer

#### Junction cap

- Paint
- Wood veneer

#### Aligner


- Black plastic only

### Application Topics

**Change-of-height top cap option** must be specified on the lower panel of in-line applications.



*Tip: Change-of-height top cap option is only needed when using in-line change-of-height.*

**Thin trim top caps** have a notch in one or both ends to accommodate in-line change-of-height applications.

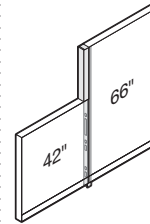

**Specify an in-line change-of-height junction** to connect panels. In this application the in-line change-of-height junction includes a 42" high in-line base junction with a 24" end-of-run stacker. A horizontal stacking beam is required when using an in-line change-of-height junction to support the stacker.

**When using frameless glass in a change-of-height application going from 48"H to 66"H**, it must be stacked at the transition point above the 48" height.

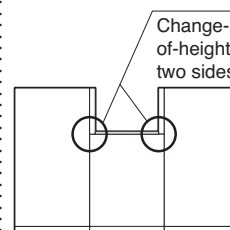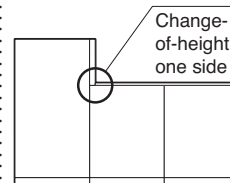

**Specify change-of-height top caps** at one end unless the panel is adjacent to taller panels on both sides. Then specify a top cap change-of-height on both ends.

# Change-of-Height Visual Overview—Thin Trim

## Selecting a Junction


To determine the application you need, follow these steps:

1. Find the type of junction you are constructing – L, T, X, V, Y, or in-line. An array of the applications that are supported by style numbers are shown on the following pages. All same height corner junctions are supported by style numbers on pages 345-348. All change-of-height applications (with two different heights) are included on the following pages. If your application is not included (three heights in an T, X, or Y junction or four heights in an X junction) please see *Build Your Own—Thin Trim*, page 33, to build your desired application.
2. It may help if you make a sketch of the junction you are trying to build and then match it with the junction shown on the following pages.
3. Find the type of junction you are looking for in the following pages and see the corresponding specifying page.

**Style numbers for junctions** are based on the heights of the frames.

| Digit in Style Number | Corresponding Frame Height |
|-----------------------|----------------------------|
| 3                     | 30"                        |
| 4                     | 42"                        |
| 5                     | 54"                        |
| 6                     | 66"                        |
| 7                     | 78"                        |
| 8                     | 48"                        |
| 9                     | 90"                        |

## In-Line

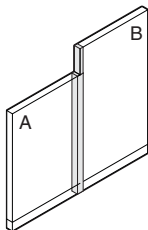

| A   | B   | Style Number     |
|-----|-----|------------------|
| 30" | 42" | <b>TS734TCIJ</b> |
| 30" | 48" | <b>TS738TCIJ</b> |
| 30" | 54" | <b>TS735TCIJ</b> |
| 30" | 66" | <b>TS736TCIJ</b> |
| 42" | 54" | <b>TS745TCIJ</b> |
| 42" | 66" | <b>TS746TCIJ</b> |
| 42" | 78" | <b>TS747TCIJ</b> |
| 48" | 66" | <b>TS786TCIJ</b> |
| 54" | 66" | <b>TS756TCIJ</b> |
| 54" | 78" | <b>TS757TCIJ</b> |
| 54" | 90" | <b>TS759TCIJ</b> |
| 66" | 78" | <b>TS767TCIJ</b> |
| 66" | 90" | <b>TS769TCIJ</b> |
| 78" | 90" | <b>TS779TCIJ</b> |


► Page 349 to specify

## Junction includes

In-line base junction  
End-of-run stacking junction  
Stacking fork  
End-of-run change-of-height trim  
Aligner

*Tip: Style numbers for wood junctions require a **W** to be added to the end of the style number.*

## L Junction



| A   | B   | Style Number     |
|-----|-----|------------------|
| 30" | 42" | <b>TS734TCLJ</b> |
| 30" | 48" | <b>TS738TCLJ</b> |
| 30" | 54" | <b>TS735TCLJ</b> |
| 30" | 66" | <b>TS736TCLJ</b> |
| 42" | 54" | <b>TS745TCLJ</b> |
| 42" | 66" | <b>TS746TCLJ</b> |
| 42" | 78" | <b>TS747TCLJ</b> |
| 48" | 66" | <b>TS786TCLJ</b> |
| 48" | 78" | <b>TS787TCLJ</b> |
| 54" | 66" | <b>TS756TCLJ</b> |
| 54" | 78" | <b>TS757TCLJ</b> |
| 66" | 78" | <b>TS767TCLJ</b> |

► Page 350 to specify


## Junction includes

L change-of-height junction  
Inside corner light seal  
L vertical trim  
End-of-run change-of-height trim  
Change-of-height junction cap  
Aligners

*Tip: Style numbers for wood junctions require a **W** to be added to the end of the style number.*

*Tip: When specifying remember this junction is handed and the other hand is not supported by style numbers. While in the field, installers may need to move a post to achieve the desired configuration.*

## T Junctions

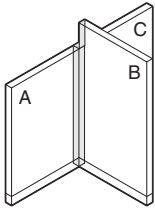


| A   | B   | C   | Style Number      |
|-----|-----|-----|-------------------|
| 30" | 42" | 30" | <b>TS7343TCTJ</b> |
| 30" | 48" | 30" | <b>TS7383TCTJ</b> |
| 30" | 54" | 30" | <b>TS7353TCTJ</b> |
| 30" | 66" | 30" | <b>TS7363TCTJ</b> |
| 42" | 54" | 42" | <b>TS7454TCTJ</b> |
| 42" | 66" | 42" | <b>TS7464TCTJ</b> |
| 42" | 78" | 42" | <b>TS7474TCTJ</b> |
| 48" | 66" | 48" | <b>TS7868TCTJ</b> |
| 48" | 78" | 48" | <b>TS7878TCTJ</b> |
| 54" | 66" | 54" | <b>TS7565TCTJ</b> |
| 54" | 78" | 54" | <b>TS7575TCTJ</b> |
| 66" | 78" | 66" | <b>TS7676TCTJ</b> |

► Pages 351-353 to specify

## Junction includes

T change-of-height junction  
Inside corner light seals  
T vertical trim  
End-of-run change-of-height trim  
Change-of-height junction cap  
Aligners

*Tip: Style numbers for wood junctions require a **W** to be added to the end of the style number.*

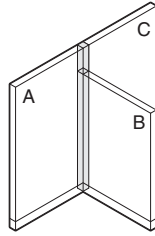


| A   | B   | C   | Style Number      |
|-----|-----|-----|-------------------|
| 42" | 30" | 42" | <b>TS7434TCTJ</b> |
| 48" | 30" | 48" | <b>TS7838TCTJ</b> |
| 54" | 30" | 54" | <b>TS7535TCTJ</b> |
| 66" | 30" | 66" | <b>TS7636TCTJ</b> |
| 54" | 42" | 54" | <b>TS7545TCTJ</b> |
| 66" | 42" | 66" | <b>TS7646TCTJ</b> |
| 78" | 42" | 78" | <b>TS7747TCTJ</b> |
| 66" | 48" | 66" | <b>TS7686TCTJ</b> |
| 78" | 48" | 78" | <b>TS7787TCTJ</b> |
| 66" | 54" | 66" | <b>TS7656TCTJ</b> |
| 78" | 54" | 78" | <b>TS7757TCTJ</b> |
| 78" | 66" | 78" | <b>TS7767TCTJ</b> |

► Pages 351-353 to specify

## Junction includes

T change-of-height junction  
Inside corner light seals  
T vertical trim  
T change-of-height trim  
90° junction cap  
Aligner

*Tip: Style numbers for wood junctions require a **W** to be added to the end of the style number.*

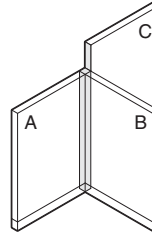

| A   | B   | C   | Style Number      |
|-----|-----|-----|-------------------|
| 30" | 30" | 42" | <b>TS7334TCTJ</b> |
| 30" | 30" | 48" | <b>TS7338TCTJ</b> |
| 30" | 30" | 54" | <b>TS7335TCTJ</b> |
| 30" | 30" | 66" | <b>TS7336TCTJ</b> |
| 42" | 42" | 54" | <b>TS7445TCTJ</b> |
| 42" | 42" | 66" | <b>TS7446TCTJ</b> |
| 42" | 42" | 78" | <b>TS7447TCTJ</b> |
| 48" | 48" | 66" | <b>TS7886TCTJ</b> |
| 48" | 48" | 78" | <b>TS7887TCTJ</b> |
| 54" | 54" | 66" | <b>TS7556TCTJ</b> |
| 54" | 54" | 78" | <b>TS7557TCTJ</b> |
| 66" | 66" | 78" | <b>TS7667TCTJ</b> |


► Pages 351-353 to specify

## Junction includes

T change-of-height junction  
Inside corner light seals  
T vertical trim  
End-of-run change-of-height trim  
Change-of-height junction cap  
Aligners

*Tip: Style numbers for wood junctions require a **W** to be added to the end of the style number.*

*Tip: When specifying remember this junction is handed and the other hand is not supported by style numbers. While in the field, installers may need to move a post to achieve the desired configuration.*

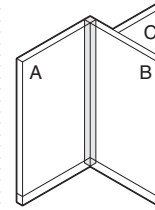

| A   | B   | C   | Style Number      |
|-----|-----|-----|-------------------|
| 42" | 42" | 30" | <b>TS7443TCTJ</b> |
| 48" | 48" | 30" | <b>TS7883TCTJ</b> |
| 54" | 54" | 30" | <b>TS7553TCTJ</b> |
| 66" | 66" | 30" | <b>TS7663TCTJ</b> |
| 54" | 54" | 42" | <b>TS7554TCTJ</b> |
| 66" | 66" | 42" | <b>TS7664TCTJ</b> |
| 78" | 78" | 42" | <b>TS7774TCTJ</b> |
| 66" | 66" | 48" | <b>TS7668TCTJ</b> |
| 78" | 78" | 48" | <b>TS7778TCTJ</b> |
| 66" | 66" | 54" | <b>TS7665TCTJ</b> |
| 78" | 78" | 54" | <b>TS7775TCTJ</b> |
| 78" | 78" | 66" | <b>TS7776TCTJ</b> |

► Pages 351-353 to specify


## Junction includes

T change-of-height junction  
Inside corner light seals  
T vertical trim  
L change-of-height trim  
90° junction cap  
Aligner

*Tip: Style numbers for wood junctions require a **W** to be added to the end of the style number.*

*Tip: When specifying remember this junction is handed and the other hand is not supported by style numbers. While in the field, installers may need to move a post to achieve the desired configuration.*

## Change-of-Height Visual Overview—Thin Trim, continued

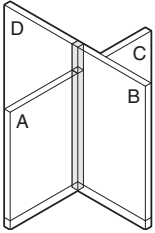**X Junctions**


| A   | B   | C   | D   | Style Number       |
|-----|-----|-----|-----|--------------------|
| 30" | 42" | 30" | 42" | <b>TS73434TCXJ</b> |
| 30" | 48" | 30" | 48" | <b>TS73838TCXJ</b> |
| 30" | 54" | 30" | 54" | <b>TS73535TCXJ</b> |
| 30" | 66" | 30" | 66" | <b>TS73636TCXJ</b> |
| 42" | 54" | 42" | 54" | <b>TS74545TCXJ</b> |
| 42" | 66" | 42" | 66" | <b>TS74646TCXJ</b> |
| 42" | 78" | 42" | 78" | <b>TS74747TCXJ</b> |
| 48" | 66" | 48" | 66" | <b>TS78686TCXJ</b> |
| 48" | 78" | 48" | 78" | <b>TS78787TCXJ</b> |
| 54" | 66" | 54" | 66" | <b>TS75656TCXJ</b> |
| 54" | 78" | 54" | 78" | <b>TS75757TCXJ</b> |
| 66" | 78" | 66" | 78" | <b>TS76767TCXJ</b> |

▶ Pages 354-356 to specify

**Junction includes**

X change-of-height junction  
 Inside corner light seals  
 Two T change-of-height trims  
 90° junction cap  
 Aligner

*Tip: Style numbers for wood junctions require a **W** to be added to the end of the style number.*

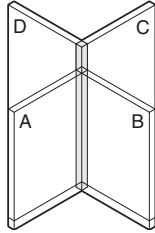


| A   | B   | C   | D   | Style Number       |
|-----|-----|-----|-----|--------------------|
| 30" | 30" | 42" | 42" | <b>TS73344TCXJ</b> |
| 30" | 30" | 48" | 48" | <b>TS73388TCXJ</b> |
| 30" | 30" | 54" | 54" | <b>TS73355TCXJ</b> |
| 30" | 30" | 66" | 66" | <b>TS73366TCXJ</b> |
| 42" | 42" | 54" | 54" | <b>TS74455TCXJ</b> |
| 42" | 42" | 66" | 66" | <b>TS74466TCXJ</b> |
| 42" | 42" | 78" | 78" | <b>TS74477TCXJ</b> |
| 48" | 48" | 66" | 66" | <b>TS78866TCXJ</b> |
| 48" | 48" | 78" | 78" | <b>TS78877TCXJ</b> |
| 54" | 54" | 66" | 66" | <b>TS75566TCXJ</b> |
| 54" | 54" | 78" | 78" | <b>TS75577TCXJ</b> |
| 66" | 66" | 78" | 78" | <b>TS76677TCXJ</b> |

▶ Pages 354-356 to specify

**Junction includes**

X change-of-height junction  
 Inside corner light seals  
 L change-of-height trim  
 90° junction cap  
 Aligner

*Tip: Style numbers for wood junctions require a **W** to be added to the end of the style number.*

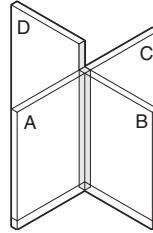


| A   | B   | C   | D   | Style Number       |
|-----|-----|-----|-----|--------------------|
| 30" | 30" | 30" | 42" | <b>TS73334TCXJ</b> |
| 30" | 30" | 30" | 48" | <b>TS73338TCXJ</b> |
| 30" | 30" | 30" | 54" | <b>TS73335TCXJ</b> |
| 30" | 30" | 30" | 66" | <b>TS73336TCXJ</b> |
| 42" | 42" | 42" | 54" | <b>TS74445TCXJ</b> |
| 42" | 42" | 42" | 66" | <b>TS74446TCXJ</b> |
| 42" | 42" | 42" | 78" | <b>TS74447TCXJ</b> |
| 48" | 48" | 48" | 66" | <b>TS78886TCXJ</b> |
| 48" | 48" | 48" | 78" | <b>TS78887TCXJ</b> |
| 54" | 54" | 54" | 66" | <b>TS75556TCXJ</b> |
| 54" | 54" | 54" | 78" | <b>TS75557TCXJ</b> |
| 66" | 66" | 66" | 78" | <b>TS76667TCXJ</b> |

▶ Pages 354-356 to specify

**Junction includes**

X change-of-height junction  
 Inside corner light seals  
 End-of-run change-of-height trim  
 Change-of-height junction cap  
 Aligners

*Tip: Style numbers for wood junctions require a **W** to be added to the end of the style number.*

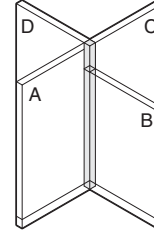

| A   | B   | C   | D   | Style Number       |
|-----|-----|-----|-----|--------------------|
| 42" | 42" | 42" | 30" | <b>TS74443TCXJ</b> |
| 48" | 48" | 48" | 30" | <b>TS78883TCXJ</b> |
| 54" | 54" | 54" | 30" | <b>TS75553TCXJ</b> |
| 54" | 54" | 54" | 42" | <b>TS75554TCXJ</b> |
| 66" | 66" | 66" | 30" | <b>TS76663TCXJ</b> |
| 66" | 66" | 66" | 42" | <b>TS76664TCXJ</b> |
| 66" | 66" | 66" | 48" | <b>TS76668TCXJ</b> |
| 66" | 66" | 66" | 54" | <b>TS76665TCXJ</b> |
| 78" | 78" | 78" | 42" | <b>TS77774TCXJ</b> |
| 78" | 78" | 78" | 48" | <b>TS77778TCXJ</b> |
| 78" | 78" | 78" | 54" | <b>TS77775TCXJ</b> |
| 78" | 78" | 78" | 66" | <b>TS77776TCXJ</b> |


▶ Pages 354-356 to specify

**Junction includes**

X change-of-height junction  
 Inside corner light seals  
 T change-of-height trim  
 90° junction cap  
 Aligners

*Tip: Style numbers for wood junctions require a **W** to be added to the end of the style number.*

## V Junctions

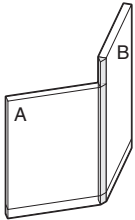

| A   | B   | Style Number     |
|-----|-----|------------------|
| 30" | 42" | <b>TS734TCVJ</b> |
| 30" | 48" | <b>TS738TCVJ</b> |
| 30" | 54" | <b>TS735TCVJ</b> |
| 30" | 66" | <b>TS736TCVJ</b> |
| 42" | 54" | <b>TS745TCVJ</b> |
| 42" | 66" | <b>TS746TCVJ</b> |
| 42" | 78" | <b>TS747TCVJ</b> |
| 48" | 66" | <b>TS786TCVJ</b> |
| 48" | 78" | <b>TS787TCVJ</b> |
| 54" | 66" | <b>TS756TCVJ</b> |
| 54" | 78" | <b>TS757TCVJ</b> |
| 66" | 78" | <b>TS767TCVJ</b> |

► Page 357 to specify


### Junction includes

- V change-of-height junction
- V vertical trim
- 120° change-of-height trim
- 120° junction cap
- Aligner

*Tip: Style numbers for wood junctions require a **W** to be added to the end of the style number.*

*Tip: When specifying remember this junction is handed and the other hand is not supported by style numbers. While in the field, installers may need to move a post to achieve the desired configuration.*

## Y Junctions

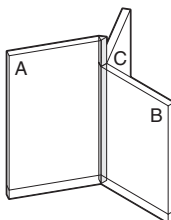


| A   | B   | C   | Style Number      |
|-----|-----|-----|-------------------|
| 42" | 30" | 30" | <b>TS7433TCYJ</b> |
| 48" | 30" | 30" | <b>TS7833TCYJ</b> |
| 54" | 30" | 30" | <b>TS7533TCYJ</b> |
| 66" | 30" | 30" | <b>TS7633TCYJ</b> |
| 54" | 42" | 42" | <b>TS7544TCYJ</b> |
| 66" | 42" | 42" | <b>TS7644TCYJ</b> |
| 78" | 42" | 42" | <b>TS7744TCYJ</b> |
| 66" | 48" | 48" | <b>TS7688TCYJ</b> |
| 78" | 48" | 48" | <b>TS7788TCYJ</b> |
| 66" | 54" | 54" | <b>TS7655TCYJ</b> |
| 78" | 54" | 54" | <b>TS7755TCYJ</b> |
| 78" | 66" | 66" | <b>TS7766TCYJ</b> |

► Page 358 to specify

### Junction includes

- Y change-of-height junction
- 120° change-of-height trim
- 120° junction cap

*Tip: Style numbers for wood junctions require a **W** to be added to the end of the style number.*

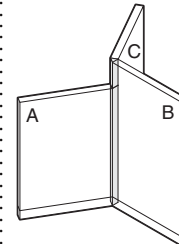

| A   | B   | C   | Style Number      |
|-----|-----|-----|-------------------|
| 30" | 42" | 42" | <b>TS7344TCYJ</b> |
| 30" | 48" | 48" | <b>TS7388TCYJ</b> |
| 30" | 54" | 54" | <b>TS7355TCYJ</b> |
| 30" | 66" | 66" | <b>TS7366TCYJ</b> |
| 42" | 54" | 54" | <b>TS7455TCYJ</b> |
| 42" | 66" | 66" | <b>TS7466TCYJ</b> |
| 42" | 78" | 78" | <b>TS7477TCYJ</b> |
| 48" | 66" | 66" | <b>TS7866TCYJ</b> |
| 48" | 78" | 78" | <b>TS7877TCYJ</b> |
| 54" | 66" | 66" | <b>TS7566TCYJ</b> |
| 54" | 78" | 78" | <b>TS7577TCYJ</b> |
| 66" | 78" | 78" | <b>TS7677TCYJ</b> |

► Page 358 to specify

### Junction includes


- Y change-of-height junction
- V change-of-height trim
- 120° junction cap
- Aligner

*Tip: Style numbers for wood junctions require a **W** to be added to the end of the style number.*


# Off-Module Panel Connector—Thin Trim

**Off-module panel connectors** allow a fin wall to be attached off-module to a spine wall in 1" increments.

► Specifying, page 361

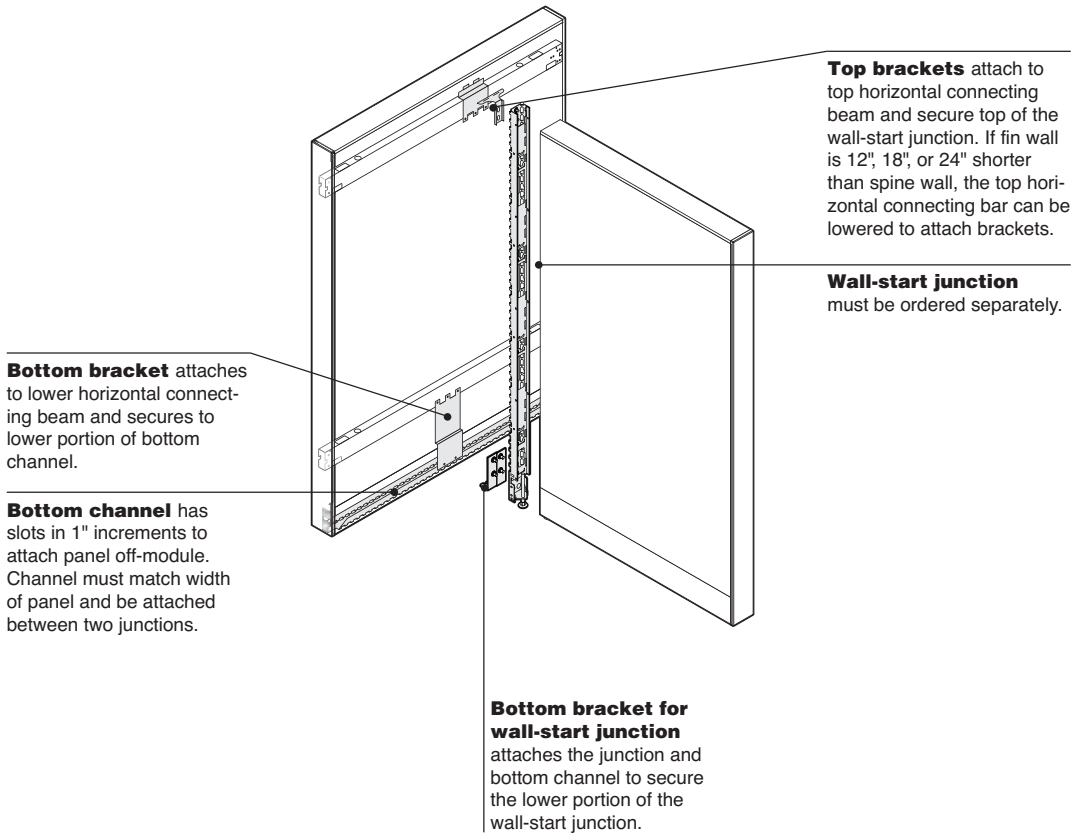

## Product Details

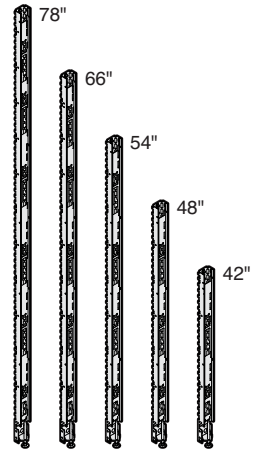


### Wall-start junctions

connect to the off-module panel connectors to start a panel run off from the spine. Available in 42"H, 48"H, 54"H, 66"H, and 78"H. Wall-start junction must match the height of the fin wall. Wall-start junctions are ordered separately.

## Connections

**Off-module fin wall** must always be the same height or shorter than the spine wall.

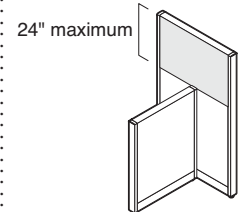


**When fin wall** is more than 24" shorter than the spine wall an additional horizontal beam must be added to the spine wall at the same height as the fin wall. Order a stacking horizontal frame kit.

**Spine wall skins** must be segmented with a seam matching the height of the shorter fin wall. This allows access to the top bracket and the spine wall horizontal beam.

## Actual Dimensions

Width 22<sup>1</sup>/<sub>2</sub>", 34<sup>1</sup>/<sub>2</sub>", 40<sup>1</sup>/<sub>2</sub>", 46<sup>1</sup>/<sub>2</sub>", 58<sup>1</sup>/<sub>2</sub>", and 70<sup>1</sup>/<sub>2</sub>"




**When stacking on the fin panel,** the spine wall skins must be segmented with a seam matching the height of the fin base panel.


**When stacking wall-start junctions in an off-module application,** the off-module panel connector connects to the base wall-start junction.

**Two off-module panels** can be connected back to back at the same location.

**When attaching a 48"H panel** to a 66"H in an off-module application, the 66"H must be a 48"H and 18"H stacker.

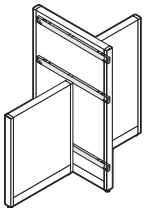


**When connecting two off-module fins at different heights on either side of the spine panel,** an additional horizontal beam must be ordered and installed at the same height of the shorter fin panel.

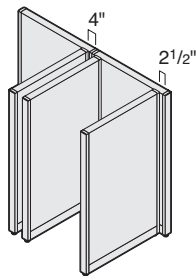

**An off-module fin wall** cannot connect flush to the end of a panel in the spine wall. The closest connection point will leave a 2 1/2" tail on the spine including the end-of-run trim.

**An off-module fin wall** cannot attach at a junction in the spine wall. There is a 2" area of dead space on either side of the junction rendering a total of 4" dead space.



**An off-module fin wall** cannot be installed over a window that is located at the top of a spine panel.

## Wiring & Cabling

**Wiring and cabling components** cannot be routed internally from a spine wall to an off-module fin wall without cutting openings in the spine wall skin.  
*Tip: It is recommended that you route wiring and cabling through the spine wall.*


**Internode power components** should be used to bring power from the spine wall to the workstation.  
▶ See *Context Specification Guide*.

## Surface Materials

### Off-module bracket

- Black paint

*Tip: Bracket is hidden when properly installed.*

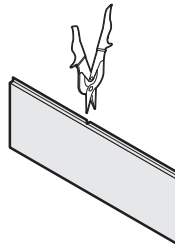

**Off-module installation** requires field modification of the light seal on the top skin. Surface covering is not affected.

## Application Topics

### Stability Guidelines for Application Rules

▶ Page 124


### Stacking junctions

can be used with any height base junction.

**Bins, shelves, and workspaces** cannot be attached off-module.

**Off-module panel connector** works with Thin trims. Thin style trims do not require a top cap filler.

**When using a wall-start junction** manufactured before October 10, 2011 with an off module panel connector manufactured on or after October 10, 2011 the "old" bottom bracket must be used. It can be ordered from Service Parts, part number TS500938MP. If using an old off-module panel connector manufactured before October 10, 2011 with a wall-start junction manufactured on or after October 10, 2011 the bottom bracket included with the off module panel connector should be used.

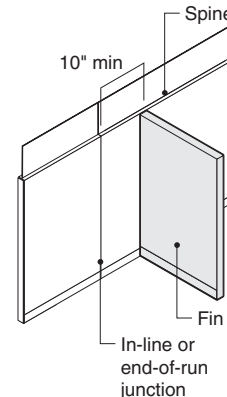

**When using frameless glass on a spine panel with a same height off-module panel connections,** the off-module cannot connect within 10" of an end-of-run or in-line junction connection.

# Stacking Junctions—Thin Trim

## Stacking junctions

allow you to adjust the panel heights within a workstation.


► Specifying thin, pages 362–363

**Stacking junctions** are available for in-line, L, T, X, V, Y, end-of-run, and wall-start configurations.

**Stacking horizontal frame package**, specified separately, must be used with stacking junctions. Each package includes one horizontal connecting bar.

**When stacking**, omit base junction trim and specify full height (base height plus stacking height) vertical trim, inside corner light seal(s) (90° applications only), junction cap, and aligners separately.

**Fork connectors** are included with stacking junction for proper connection to the base panel.

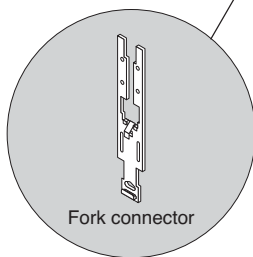

**Top cap from base panel** is used to trim the panel.

**Same height stacking corner junction posts and block** come plant assembled in a designated L, T, X, V, or Y configuration.


**Slots in stacking junctions** are identical to base junctions to accept horizontal connecting bars, power-kits, and cable trays.

**Cables** can be laid into top of base panel. During initial installation, it is important to keep cabling loose so it can be temporarily moved aside to install stacking fork connector at a later date.


**Base panel** must always have two horizontal connecting bars. The bars must be in place prior to adding fork connectors into the junction.

## Product Details


**All existing base panels** can accept a stacking junction.

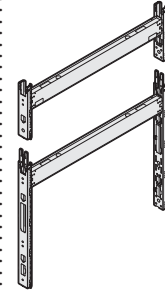

**Stacking junctions** do not include any trim. The omit trim option should be specified on base junctions when stacking. All vertical trim, junction caps, and aligners are specified separately when stacking on base junction.

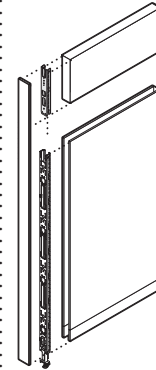


**End-of-run stacking junction** includes junction and fork connector. Full height trim must be specified separately. End-of-run trim adds 1/2" to footprint.

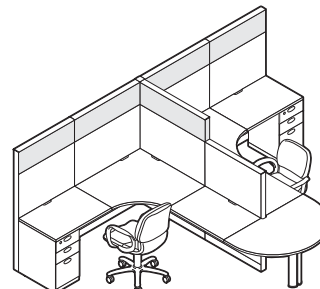


## Actual Dimensions


|        |                                                                                                          |
|--------|----------------------------------------------------------------------------------------------------------|
| Depth  | 3"                                                                                                       |
| Height | 12 <sup>3</sup> / <sub>8</sub> ", 18 <sup>1</sup> / <sub>2</sub> ", and 24 <sup>3</sup> / <sub>4</sub> " |

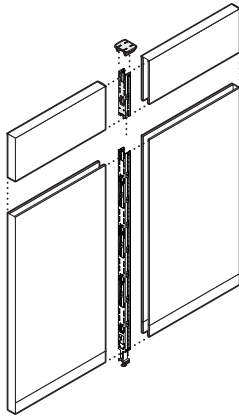


**In-line stacking junction** includes junction and fork connectors.

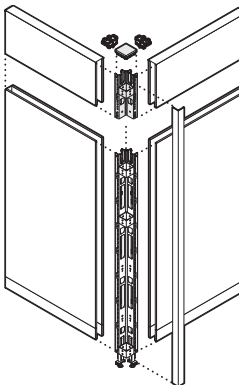


**L-stacking junction** includes junction and fork connectors. Full height trim, inside corner light seal(s), junction cap and aligner(s) must be specified separately.

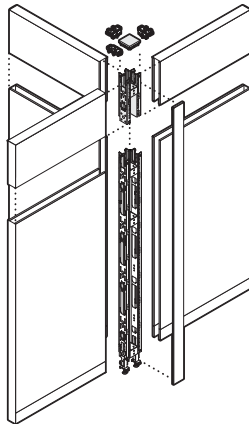


**T-stacking junction** includes junction and fork connectors. Full height trim, inside corner light seal(s), junction cap and aligner(s) must be specified separately.

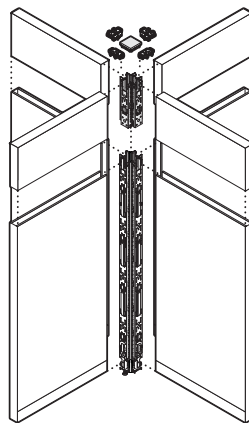

**X-stacking junction** includes junction and fork connectors.

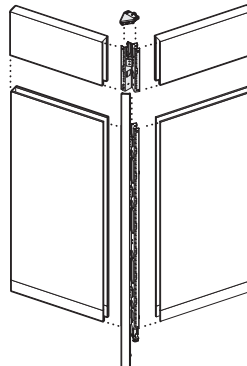

**V-stacking junction** includes junction and fork connectors. Full height trim, inside corner light seal(s), junction cap and aligner(s) must be specified separately.

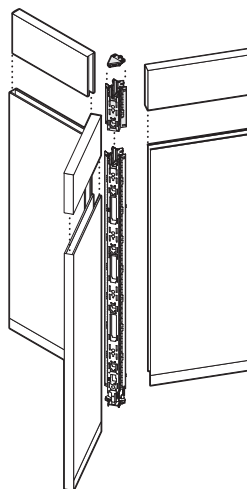


**Y-stacking junction** includes junction and fork connectors.

**Full height vertical trim** is available in the build your own specifying section in 42", 48", 54", 60", 66", 72", 78", 84", and 90".  
► Specifying thin, pages 367-369.


**Standard skins, cable trays, and powerkits** are used in stackable solutions. To maximize the benefits of stackability, consider matching the skin height to the stacking junction height.

## Connections

**Skins on base panel** do not need to be removed to install a stacking junction in most cases.

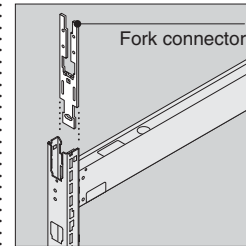


**Fork connector** is included with stacking junction for proper connection to the base panel. Two fork connectors are included with in-line, L, and V stacking junctions, three are included with T and Y stacking junctions, and four are included with X stacking junctions. One fork connector is included with each wall-start stacking junction and end-of-run.

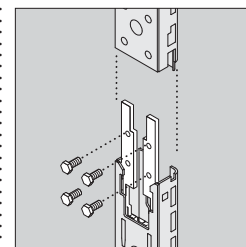


**Fork connectors** secure into the base junction. Stacking junction is bolted to fork connectors.

## Wiring & Cabling

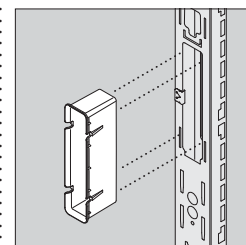

**Junction tall sleeves** can be ordered to cover the exposed metal edges in the large cable routing opening of the junctions manufactured on or after October 10, 2011.

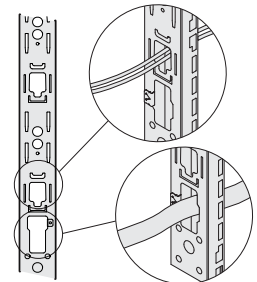

**Horizontal routing of power and cables** can be accommodated through openings in stacking junctions.

**Powerkit installation for stacking components** is the same process as for installation in base panels.

## Surface Materials

### Stacking junction

- Black paint

*Tip: Junction is hidden when properly installed.*

## Application Topics

**Stacking Stability Guidelines** provides detailed information on applications.  
► Page 124

**Maximum height** that can be stacked on a base panel is 36", consisting of one 24"H and one 12"H, or two 18"H stacking junction.

**Maximum height** that an Answer panel configuration can reach is 90'.

**Maximum number of stacking junctions** that can be added to a base panel is two.

**Any height base panel** can be used with stacking junctions.

**Bins and shelves** can hang from the first stacked tier only.

**Consolidation point kit** cannot be used with stacking components.


# Build Your Own Elements—Thin Trim

## Junction Posts



► Specifying, page 373

### Product Details

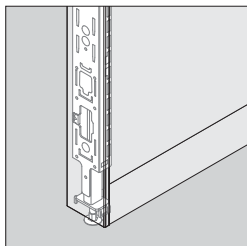

**Junction posts** are available in 30"H, 42"H, 48"H, 54"H, 66"H, and 78" H and can be ordered separately for use in building change-of-height junctions that are not supported by style numbers.

**Junction posts** do not come with trim. All trim must be specified separately.

**Junction posts** can be fastened to 90° corner or 120° corner junction blocks. Posts can be easily added or removed from the junction blocks to reconfigure the application.

**Fasteners** are included with the junction blocks. For additional fasteners order part number T521882MP (quantity 50).

### Surface Materials


- Black paint only

## Junction Blocks



► Specifying, page 374

### Product Details

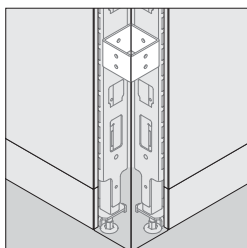

**90° corner and 120° corner junction blocks** can be ordered separately for use in building change-of-height junctions that are not supported by style numbers.

**90° corner and 120° corner junction blocks** are available in packages of three, four, or five.

**Four fasteners** are included with each junction block.

**Junction post** can be easily added or removed from junction blocks to reconfigure the application.

### Surface Materials


- Black paint only

## Inside Corner Light Seal



► Specifying, page 374

### Product Details

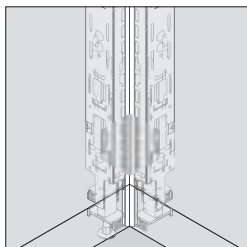

**Inside corner light seals** are available in 54"H, 66"H, and 78"H and need to be specified in 90° corner junction applications (they are not required in 120° corner applications).


**Inside corner light seals** are available in packages of four.

**Inside corner light seals** should be specified to the panel in a shorter 90° change-of-height corner.


**Inside corner light seals** can be field cut to accommodate shorter post heights.

### Surface Materials

- Black paint only

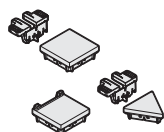**Junction Caps**

► Specifying, page 375

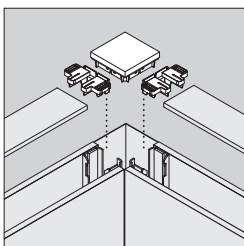**Product Details**

**90° junction caps, 90° change-of-height junction caps, and 120° junction caps** can be ordered separately for use in building change-of-height junctions that are not supported by style numbers.

**Junction cap corner aligners** (TS7CJCA10) must be ordered separately (package of 10).

**90° junction caps** can be used in L, T, or X applications and can be converted between applications by adding or removing a junction cap corner aligner.

**120° junction caps** can be used in V or Y applications and can be converted between applications by adding or removing a junction cap corner aligner.


**90° change-of-height junction caps** are used in some L, T, and X change-of-height junctions.

**Surface Materials**

- Plastic
- Wood veneer

**Junction Cap Aligner**

► Specifying, page 375

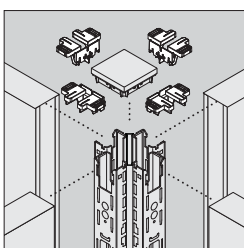**Product Details**


**Junction cap aligners** need to be ordered for all corner junctions that are not supported by style numbers.

**Junction cap aligners** are available in packages of 10.


**Junction cap aligners** need to be ordered for use with 90° change-of-height caps.

**Surface Materials**

- Black plastic only

**Vertical Trim Aligners**

► Specifying, page 375

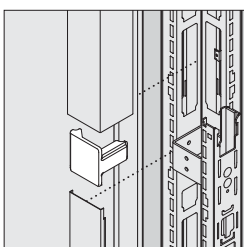**Product Details**

**L to T aligners and 120° to V aligners** can be ordered separately for use in building change-of-height junctions that are not supported by style numbers.

**Vertical trim aligners** are available in packages of four.

**L to T aligners** are used in change-of-height applications to connect an L change-of-height trim to a T vertical trim.

**120° to V aligners** are used in change-of-height applications to connect a 120° change-of-height trim to a V vertical trim.


**Surface Materials**

- Black plastic only

## Build Your Own Elements—Thin Trim, continued

**End-of-Run Vertical Trim—Thin Trim**

► Specifying, page 367

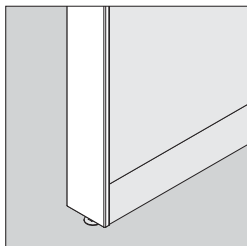**Product Details**

**Thin end-of-run vertical trim** should be specified for the full height of the panel (base height plus stacking height, if stacking).

**Thin end-of-run applications** do not require a junction cap as the end-of-run trim connects with the panel top cap.

**Vertical trim aligners** to connect the end-of-run vertical trim to the top cap are included with the end-of-run vertical trim.

**Thin end-of-run vertical trim** can only be applied to end-of-run junctions manufactured on or after October 10, 2011.

**Surface Materials**


- Paint
- Wood

**Actual Dimensions**

**Height:** 28<sup>15</sup>/<sub>16</sub>", 41<sup>1</sup>/<sub>4</sub>", 47<sup>7</sup>/<sub>16</sub>", 53<sup>5</sup>/<sub>8</sub>", 59<sup>13</sup>/<sub>16</sub>", 66", 72<sup>3</sup>/<sub>16</sub>", 78<sup>3</sup>/<sub>8</sub>", 84<sup>9</sup>/<sub>16</sub>", and 90<sup>11</sup>/<sub>16</sub>"

**L Vertical Trim—Thin Trim**

► Specifying, page 368

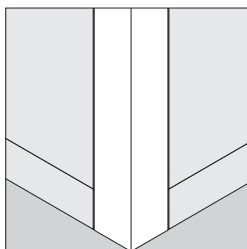**Product Details**

**L vertical trim height** should be determined by using the build your own change-of-height junctions or build your own stacking junction sections of this specification guide.

**90° junction caps and junction cap aligners** are not included with L vertical trim and must be ordered separately.

**Surface Materials**


- Paint
- Wood

**Actual Dimensions**

**Height:** 28<sup>15</sup>/<sub>16</sub>", 41<sup>1</sup>/<sub>4</sub>", 47<sup>7</sup>/<sub>16</sub>", 53<sup>5</sup>/<sub>8</sub>", 59<sup>13</sup>/<sub>16</sub>", 66", 72<sup>3</sup>/<sub>16</sub>", 78<sup>3</sup>/<sub>8</sub>", 84<sup>9</sup>/<sub>16</sub>", and 90<sup>11</sup>/<sub>16</sub>"

**T Vertical Trim—Thin Trim**

► Specifying, page 368

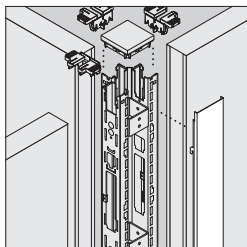**Product Details**

**T vertical trim height** should be determined by using the build your own change-of-height junctions or build your own stacking junction sections of this specification guide.

**90° junction caps and junction cap aligners** are not included with T vertical trim and must be ordered separately.

**An L to T aligner** needs to be specified in applications connecting a thin L change-of-height trim to a T vertical trim.

► See page 375.

**Surface Materials**


- Paint
- Wood

**Actual Dimensions**

**Height:** 28<sup>15</sup>/<sub>16</sub>", 41<sup>1</sup>/<sub>4</sub>", 47<sup>7</sup>/<sub>16</sub>", 53<sup>5</sup>/<sub>8</sub>", 59<sup>13</sup>/<sub>16</sub>", 66", 72<sup>3</sup>/<sub>16</sub>", 78<sup>3</sup>/<sub>8</sub>", 84<sup>9</sup>/<sub>16</sub>", and 90<sup>11</sup>/<sub>16</sub>"

**V Vertical Trim—Thin Trim**

► Specifying, page 369

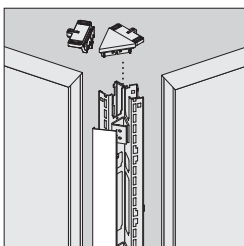**Product Details**

**V vertical trim height** should be determined by using the build your own change-of-height junctions or build your own stacking junction sections of this specification guide.

**120° junction caps and junction cap aligners**

are not included with V vertical trim and must be ordered separately.

**A 120° to V aligner** needs to be specified separately in applications connecting a thin 120° change-of-height trim to a V vertical trim.

► See page 375.

**Surface Materials**


- Paint
- Wood

**Actual Dimensions**

**Height:** 28<sup>15</sup>/<sub>16</sub>", 41<sup>1</sup>/<sub>4</sub>", 47<sup>7</sup>/<sub>16</sub>", 53<sup>5</sup>/<sub>8</sub>", 59<sup>13</sup>/<sub>16</sub>", 66", 72<sup>3</sup>/<sub>16</sub>", 78<sup>3</sup>/<sub>8</sub>", 84<sup>9</sup>/<sub>16</sub>", and 90<sup>11</sup>/<sub>16</sub>"

**End-of-Run/In-line Change-of-Height Trim—Thin Trim**

► Specifying, page 370

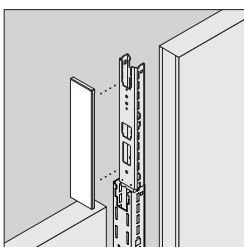**Product Details**

**End-of-run/in-line change-of-height** should be determined by using the build your own change-of-height junctions or build your own stacking junction sections of this specification guide.

**Vertical trim aligners** to connect the change-of-height end-of-run/in-line vertical trim to the top cap are included with the end-of-run vertical trim.

**Thin end-of-run/in-line change-of-height trim** can only be applied to junctions manufactured on or after October 10, 2011.

**Surface Materials**


- Paint
- Wood

**Actual Dimensions**

**Height:** 12<sup>5</sup>/<sub>16</sub>", 18<sup>1</sup>/<sub>2</sub>", 24<sup>11</sup>/<sub>16</sub>", 30<sup>7</sup>/<sub>8</sub>", and 37<sup>1</sup>/<sub>16</sub>"

**L Corner Change-of-Height—Thin Trim**

► Specifying, page 371

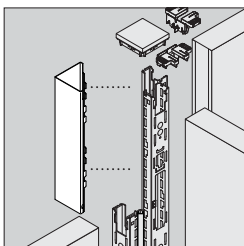**Product Details**

**L corner change-of-height trim height** should be determined by using the build your own change-of-height junctions or build your own stacking junction sections of this specification guide.

**An L to T aligner** needs to be specified in applications connecting a thin L change-of-height trim to a T vertical trim.

► See page 375.

**Thin L change-of-height trim** can only be applied to junctions manufactured on or after October 10, 2011.

**Surface Materials**

- Paint
- Wood


**Actual Dimensions**

**Height:** 12<sup>5</sup>/<sub>16</sub>", 18<sup>1</sup>/<sub>2</sub>", 24<sup>11</sup>/<sub>16</sub>", 30<sup>7</sup>/<sub>8</sub>", and 37<sup>1</sup>/<sub>16</sub>"

## Build Your Own Elements—Thin Trim, continued

**T Corner Change-of-Height—Thin Trim**

► Specifying, page 371

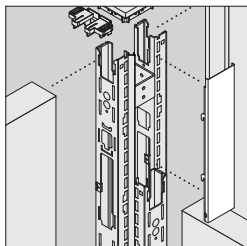**Product Details**

**T corner change-of-height trim height** should be determined by using the build your own change-of-height junctions or build your own stacking junction sections of this specification guide.

**An L to T aligner** needs to be specified in applications connecting a thin L change-of-height trim to a T vertical trim.

► See page 375.

**Thin T change-of-height trim** can only be applied to junctions manufactured on or after October 10, 2011.

**Surface Materials**


- Paint
- Wood

**Actual Dimensions**

**Height:** 12<sup>5</sup>/<sub>16</sub>", 18<sup>1</sup>/<sub>2</sub>", 24<sup>11</sup>/<sub>16</sub>", 30<sup>7</sup>/<sub>8</sub>", and 37<sup>1</sup>/<sub>16</sub>"

**120° Corner Change-of-Height—Thin Trim**

► Specifying, page 372

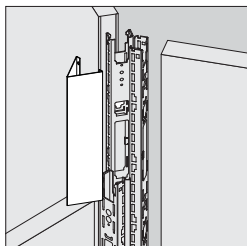**Product Details**

**120° corner change-of-height trim height** should be determined by using the build your own change-of-height junctions or build your own stacking junction sections of this specification guide.

**A 120° to V aligner** needs to be specified separately in applications connecting a thin 120° change-of-height trim to a V vertical trim.

► See page 375.

**Thin 120° change-of-height trim** can only be applied to junctions manufactured on or after October 10, 2011.

**Surface Materials**


- Paint
- Wood

**Actual Dimensions**

**Height:** 12<sup>5</sup>/<sub>16</sub>", 18<sup>1</sup>/<sub>2</sub>", 24<sup>11</sup>/<sub>16</sub>", 30<sup>7</sup>/<sub>8</sub>", and 37<sup>1</sup>/<sub>16</sub>"

**V Corner Change-of-Height—Thin Trim**

► Specifying, page 372

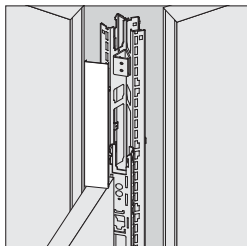**Product Details**

**V corner change-of-height trim height** should be determined by using the build your own change-of-height junctions or build your own stacking junction sections of this specification guide.

**A 120° to V aligner** needs to be specified separately in applications connecting a thin 120° change-of-height trim to a V vertical trim.

► See page 375.

**V corner change-of-height trim** can only be applied to junctions manufactured on or after October 10, 2011.

**Surface Materials**

- Paint
- Wood

**Actual Dimensions**

**Height:** 12<sup>5</sup>/<sub>16</sub>", 18<sup>1</sup>/<sub>2</sub>", 24<sup>11</sup>/<sub>16</sub>", 30<sup>7</sup>/<sub>8</sub>", and 37<sup>1</sup>/<sub>16</sub>"

# Build Your Own Change-of-Height—Thin Trim

Build Your Own Change-of-Height—Thin Trim

## Usage Rules

**Follow these for all three height T, X, or Y applications and for all four height X applications.** The change-of-height overview pages illustrate and provide a style number for all other standard combinations.

## Example

### Four change-of-height X application.


Post heights:

- 66"
- 54"
- 42"
- 30"

Trim:

- 12" change-of-height end-of-run
- Change-of-height corner junction cap
- 12" L change-of-height trim
- L to T aligner
- 12" T change-of-height trim
- Aligners

The specification guide supports specific style numbers for all L, T, X, V, and Y change-of-height applications with two heights (see pages 350-358). If the change-of-height application has three or more heights, you must follow the directions on the following pages to properly specify your desired application.

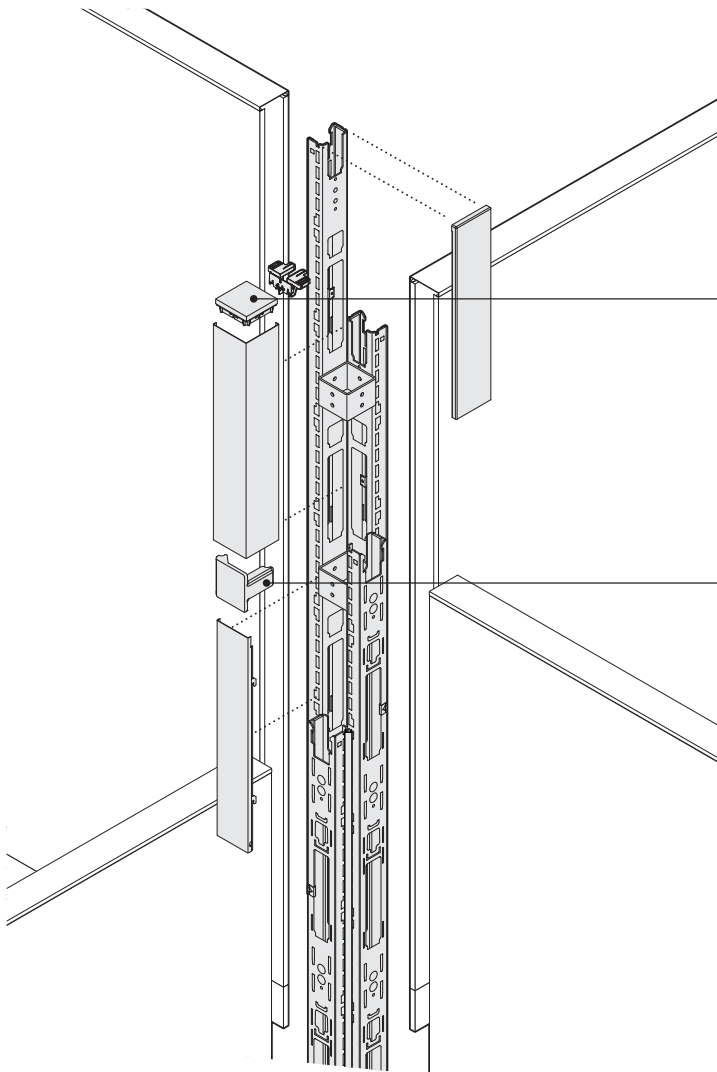


**Junction caps** are always located at the second tallest panel height. If there are two panels at the same tallest height, the junction cap will be located there.

**L to T aligners or 120° to V aligners** are required to be specified in certain change-of-height applications to provide consistent alignment of trim pieces.

## Build Your Own Change-of-Height—Thin Trim, continued

### How to Build Your Own Change-of-Height Applications

**Step 1:** Draw out the panel application you would like to build (T, X, or Y).

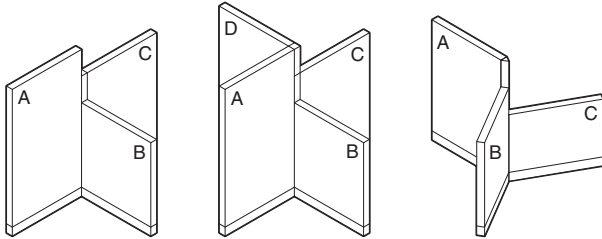

**Step 2:** Junction Posts

Determine the post heights for each leg of the corner junction corresponding to the panel heights.



Side A (e.g. 78")  
Side B (e.g. 66")  
Side C (e.g. 54")  
Side D (e.g. 42") (For use in X configurations with four different heights only)

**Step 3:** Junction Blocks

From the list below, select the change-of-height application type that matches your drawing:

- T or Y junction with three different panel heights (go to step 3a).
- X junction with three different panel heights (go to step 3b).
- X junction with four different panel heights (go to step 3c).

**Step 3a:** If the shortest panel is 48" high or lower, order three blocks.

▶ See specifying page 374.

If the shortest panel is 54" high, order four blocks.

▶ See specifying page 374.

**Step 3b:** If there are two panels at 78" high and the lowest panel is 54" high, order five blocks.

▶ See specifying page 374.

If there is a panel less than or equal to 48" high and only ONE panel at the tallest height, order three blocks.

▶ See specifying page 374.

For all other change-of-height configurations order four blocks.

▶ See specifying page 374.

**Step 3c:** For all X junctions with four different panel heights use four blocks.

▶ See specifying page 374.

**Step 4:** Inside Corner Light Seals



- You will need two inside corner light seals for a T corner and four inside corner light seals for an X corner (none are needed for a Y corner).
- Inside corner light seals are sold in packages of four.
- Packages come in three heights: 54", 66", and 78".
- Specify the height to correspond to the tallest junction and field cut as necessary.

Inside corner light seal—54"H, package of four **TS754ICLS**

Inside corner light seal—66"H, package of four **TS766ICLS**

Inside corner light seal—78"H, package of four **TS778ICLS**


**Step 5:** Vertical Trim

Locate the application below that is the same as the application you originally illustrated.

Specify the trims listed in the option you selected below. You will be required to refer back to your original drawing several times to calculate the proper trim heights.

## How to Build Your Own Change-of-Height Applications, continued

## T Change-of-Height Application (3 heights)

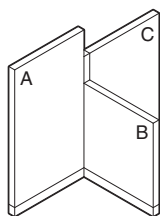

Option 1

## Step 2: Vertical Junction Posts


|   |                          |
|---|--------------------------|
| A | <b>TS7</b> ___ <b>JP</b> |
| B | <b>TS7</b> ___ <b>JP</b> |
| C | <b>TS7</b> ___ <b>JP</b> |

Step 3: Junction Blocks -  
see step 3a on page 34Step 4: Light seals      **TS7**\_\_\_**ICLS**

## Step 5: Trim

Thin end-of-run  
change-of-height = A - C  
T change-of-height = C - B  
T vertical = C  
90° change-of-height  
corner cap  
Junction cap aligner

**TS7**\_\_\_**TICHT(W)**  
**TS7**\_\_\_**TCTCHT(W)**  
**TS7**\_\_\_**TTVT(W)**  
  
**TS790COHJC(W)**  
**TS7CJCA10**  
(10 pack)

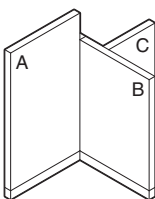

Option 2

## Step 2: Vertical Junction Posts


|   |                          |
|---|--------------------------|
| A | <b>TS7</b> ___ <b>JP</b> |
| B | <b>TS7</b> ___ <b>JP</b> |
| C | <b>TS7</b> ___ <b>JP</b> |

Step 3: Junction Blocks -  
see step 3a on page 34Step 4: Light seals      **TS7**\_\_\_**ICLS**

## Step 5: Trim

Thin end-of-run  
change-of-height = A - B  
L change-of-height = B - C  
T vertical = C  
90° change-of-height  
corner cap  
L to T aligner  
Junction cap aligner

**TS7**\_\_\_**TICHT(W)**  
**TS7**\_\_\_**TCLCHT(W)**  
**TS7**\_\_\_**TTVT(W)**  
  
**TS790COHJC(W)**  
**TS7LTA4** (4 pack)  
**TS7CJCA10**  
(10 pack)

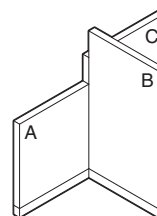

Option 3

## Step 2: Vertical Junction Posts

|   |                          |
|---|--------------------------|
| A | <b>TS7</b> ___ <b>JP</b> |
| B | <b>TS7</b> ___ <b>JP</b> |
| C | <b>TS7</b> ___ <b>JP</b> |


Step 3: Junction Blocks -  
see step 3a on page 34Step 4: Light seals      **TS7**\_\_\_**ICLS**

## Step 5: Trim

Thin end-of-run  
change-of-height = B - C  
L change-of-height = C - A  
T vertical = A  
90° change-of-height  
corner cap  
L to T aligner  
Junction cap aligner

**TS7**\_\_\_**TICHT(W)**  
**TS7**\_\_\_**TCLCHT(W)**  
**TS7**\_\_\_**TTVT(W)**  
  
**TS790COHJC(W)**  
**TS7LTA4** (4 pack)  
**TS7CJCA10**  
(10 pack)

## Y Change-of-Height Application (3 heights)

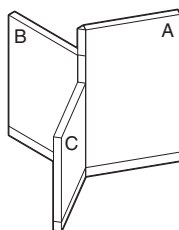

Option 1

## Step 2: Vertical Junction Posts

|   |                          |
|---|--------------------------|
| A | <b>TS7</b> ___ <b>JP</b> |
| B | <b>TS7</b> ___ <b>JP</b> |
| C | <b>TS7</b> ___ <b>JP</b> |

Step 3: Junction Blocks -  
see step 3a on page 34

## Step 4: Light seal      None

## Step 5: Trim


120° change-of-height = A - B  
V change-of-height = B - C  
120° corner cap  
120° to V aligner

**TS7**\_\_\_**T120CHT(W)**  
**TS7**\_\_\_**TVCHT(W)**  
**TS7120JC(W)**  
**TS7120VA4**

## Build Your Own Change-of-Height—Thin Trim, continued

## How to Build Your Own Change-of-Height Applications, continued

## X Change-of-Height Application (3 heights)

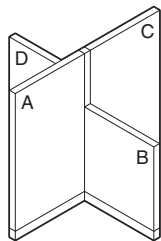

Option 1

## Step 2: Vertical Junction Posts


|   |                 |
|---|-----------------|
| A | <b>TS7___JP</b> |
| B | <b>TS7___JP</b> |
| C | <b>TS7___JP</b> |
| D | <b>TS7___JP</b> |

Step 3: Junction Blocks  
see step 3b on page 34Step 4: Light seals **TS7\_\_\_ICLS**

## Step 5: Trim

T change-of-height = A - B  
T change-of-height = A - D  
90° junction cap  
Two junction cap aligners

**TS7\_\_\_TCTCHT(W)**  
**TS7\_\_\_TCTCHT(W)**  
**TS790JC(W)**  
**TS7CJCA10**  
(10 pack)

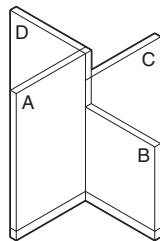

Option 2

|   |                 |
|---|-----------------|
| A | <b>TS7___JP</b> |
| B | <b>TS7___JP</b> |
| C | <b>TS7___JP</b> |
| D | <b>TS7___JP</b> |


Step 3: Junction Blocks  
see step 3b on page 34Step 4: Light seals **TS7\_\_\_ICLS**

## Step 5: Trim

L change-of-height = A - C  
T change-of-height = C - B  
90° junction cap  
Two junction cap aligners

**TS7\_\_\_TCLCHT(W)**  
**TS7\_\_\_TCTCHT(W)**  
**TS790JC(W)**  
**TS7CJCA10**  
(10 pack)  
**TS7LTA4** (4 pack)

L to T aligner

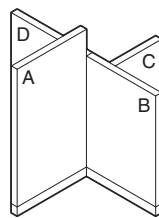

Option 3


|   |                 |
|---|-----------------|
| A | <b>TS7___JP</b> |
| B | <b>TS7___JP</b> |
| C | <b>TS7___JP</b> |
| D | <b>TS7___JP</b> |

Step 3: Junction Blocks  
see step 3b on page 34Step 4: Light seals **TS7\_\_\_ICLS**

## Step 5: Trim

End-of-run change-of-height = A - B  
T change-of-height = B - C  
90° change-of-height junction cap  
Two junction cap aligners

**TS7\_\_\_TICHT(W)**  
**TS7\_\_\_TCTCHT(W)**  
**TS790COHJC(W)**  
**TS7CJCA10**  
(10 pack)

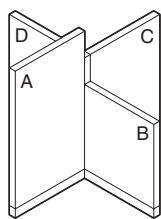

Option 4

## Step 2: Vertical Junction Posts


|   |                 |
|---|-----------------|
| A | <b>TS7___JP</b> |
| B | <b>TS7___JP</b> |
| C | <b>TS7___JP</b> |
| D | <b>TS7___JP</b> |

Step 3: Junction Blocks  
see step 3b on page 34Step 4: Light seals **TS7\_\_\_ICLS**

## Step 5: Trim

End-of-run change-of-height = A - C  
T change-of-height = C - B  
90° change-of-height junction cap  
Two junction cap aligners

**TS7\_\_\_TICHT(W)**  
**TS7\_\_\_TCTCHT(W)**  
**TS790COHJC(W)**  
**TS7CJCA10**  
(10 pack)

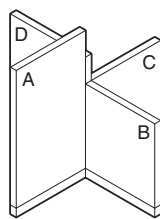

Option 5


|   |                 |
|---|-----------------|
| A | <b>TS7___JP</b> |
| B | <b>TS7___JP</b> |
| C | <b>TS7___JP</b> |
| D | <b>TS7___JP</b> |

Step 3: Junction Blocks  
see step 3b on page 34Step 4: Light seals **TS7\_\_\_ICLS**

## Step 5: Trim

End-of-run change-of-height = A - D  
L change-of-height = D - C  
90° change-of-height junction cap  
Junction cap aligner

**TS7\_\_\_TICHT(W)**  
**TS7\_\_\_TCLCHT(W)**  
**TS790COHJC(W)**  
**TS7CJCA10**  
(10 pack)

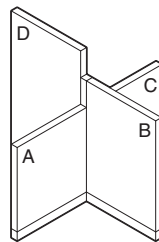

Option 6

|   |                 |
|---|-----------------|
| A | <b>TS7___JP</b> |
| B | <b>TS7___JP</b> |
| C | <b>TS7___JP</b> |
| D | <b>TS7___JP</b> |

Step 3: Junction Blocks  
see step 3b on page 34Step 4: Light seals **TS7\_\_\_ICLS**


## Step 5: Trim

End-of-run change-of-height = D - B  
Two T change-of-height = B - A  
90° change-of-height junction cap  
Junction cap aligner

**TS7\_\_\_TICHT(W)**  
**TS7\_\_\_TCTCHT(W)**  
**TS790COHJC(W)**  
**TS7CJCA10**  
(10 pack)

## How to Build Your Own Change-of-Height Applications, continued

## X Change-of-Height Application (4 heights)

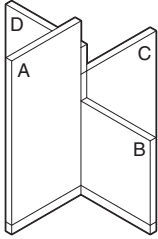

Option 7

## Step 2: Vertical Junction Posts

A **TS7\_\_JP**  
 B **TS7\_\_JP**  
 C **TS7\_\_JP**  
 D **TS7\_\_JP**

Step 3: Junction Blocks  
see step 3c on page 34Step 4: Light seals **TS7\_\_ICLS**

## Step 5: Trim

End-of-run change-of-height = A - D

L change-of-height = D - C

T change-of-height = C - B

90° change-of-height


junction cap

Junction cap aligner

L to T aligner

**TS7\_\_TICHT(W)**  
**TS7\_\_TCLCHT(W)**  
**TS7\_\_TCTCHT(W)**

**TS790COHJC(W)**  
**TS7CJCA10**  
 (10 pack)  
**TS7LTA4** (4 pack)

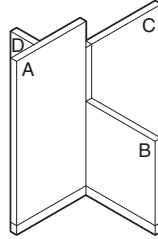

Option 8

A **TS7\_\_JP**  
 B **TS7\_\_JP**  
 C **TS7\_\_JP**  
 D **TS7\_\_JP**

Step 3: Junction Blocks  
see step 3c on page 34Step 4: Light seals **TS7\_\_ICLS**

## Step 5: Trim

End-of-run change-of-height = A - C

T change-of-height = C - B

T change-of-height = C - D

90° change-of-height

junction cap


Junction cap aligner

**TS7\_\_TICHT(W)**  
**TS7\_\_TCTCHT(W)**  
**TS7\_\_TCTCHT(W)**

**TS790COHJC(W)**  
**TS7CJCA10**  
 (10 pack)

# Practice Examples—Thin Trim

## Example One

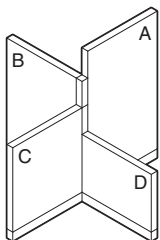


**Step 1:** Draw out the application - X - 4 Change-of-Height

|                                           |                 |                            |
|-------------------------------------------|-----------------|----------------------------|
| <b>Step 2:</b> Vertical Junction Posts    | <b>Quantity</b> | <b>Style Number</b>        |
| A 66" H                                   | 1               | <b>TS766JP</b>             |
| B 54" H                                   | 1               | <b>TS754JP</b>             |
| C 42" H                                   | 1               | <b>TS742JP</b>             |
| D 30" H                                   | 1               | <b>TS730JP</b>             |
| <b>Step 3 (a-c):</b> Junction Blocks (3c) | 1               | <b>TS790JB4</b>            |
| <b>Step 4:</b> Light seal                 | 1               | <b>TS766ICLS</b> (4 pack)  |
| <b>Step 5:</b> Trim                       |                 |                            |
| End-of-run change-of-height = A - B       | 1               | <b>TS712TCICHT</b>         |
| L change-of-height = B - C                | 1               | <b>TS712TCLCHT</b>         |
| T change-of-height = C - D                | 1               | <b>TS712TCTCHT</b>         |
| 90° change-of-height junction cap         | 1               | <b>TS790COHJC</b>          |
| L to T aligner                            | 1               | <b>TS7LTA4</b> (4 pack)    |
| Junction cap aligner                      | 1               | <b>TS7CJCA10</b> (10 pack) |

*Note: Junction cap resides at the second tallest panel height. In this case there is a panel higher so it is a 90° change-of-height junction cap instead of a 90° corner junction cap.*

## Example Two

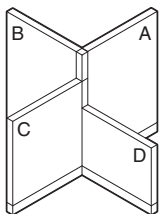


**Step 1:** Draw out the application - X - 3 Change-of-Height

|                                           |                 |                            |
|-------------------------------------------|-----------------|----------------------------|
| <b>Step 2:</b> Vertical Junction Posts    | <b>Quantity</b> | <b>Style Number</b>        |
| A 54" H                                   | 1               | <b>TS754JP</b>             |
| B 54" H                                   | 1               | <b>TS754JP</b>             |
| C 42" H                                   | 1               | <b>TS742JP</b>             |
| D 30" H                                   | 1               | <b>TS730JP</b>             |
| <b>Step 3 (a-c):</b> Junction Blocks (3c) | 1               | <b>TS790JB4</b>            |
| <b>Step 4:</b> Light seal                 | 1               | <b>TS766ICLS</b> (4 pack)  |
| <b>Step 5:</b> Trim                       |                 |                            |
| L change-of-height = A - C                | 1               | <b>TS712TCLCHT</b>         |
| T change-of-height = C - D                | 1               | <b>TS712TCTCHT</b>         |
| 90° junction cap                          | 1               | <b>TS790JC</b>             |
| L to T aligner                            | 1               | <b>TS7LTA4</b> (4 pack)    |
| Junction cap aligner                      | 2               | <b>TS7CJCA10</b> (10 pack) |

*Note: Junction cap resides at the second tallest panel height. In this case there are two panels at the tallest height so a 90° degree junction cap would be specified instead of a 90° change-of-height junction cap as in the previous example.*

## Example Three

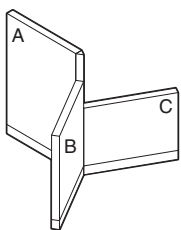

**Step 1:** Draw out the application - Y - 3 Change-of-Height

|                                           |                 |                          |
|-------------------------------------------|-----------------|--------------------------|
| <b>Step 2:</b> Vertical Junction Posts    | <b>Quantity</b> | <b>Style Number</b>      |
| A 54" H                                   | 1               | <b>TS754JP</b>           |
| B 42" H                                   | 1               | <b>TS742JP</b>           |
| C 30" H                                   | 1               | <b>TS730JP</b>           |
| <b>Step 3 (a-c):</b> Junction Blocks (3b) | 1               | <b>TS7120JB3</b>         |
| <b>Step 4:</b> Light seal                 | N.A.            | N.A.                     |
| <b>Step 5:</b> Trim                       |                 |                          |
| 120° change-of-height = A - B             | 1               | <b>TS712T120CHT(W)</b>   |
| V change-of-height = B - C                | 1               | <b>TS712TVCHT(W)</b>     |
| 120° corner junction cap                  | 1               | <b>TS7120JC(W)</b>       |
| 120° to V aligner                         | 1               | <b>TS7120A4</b> (4 pack) |


# Build Your Own 3" Inline Junction—Thin Trim

Build Your Own 3" Inline  
Junction—Thin Trim



### Usage Rules

If you need to add inches to your application while planning, order the following parts in the appropriate heights to create an "I" junction or a 3" inline junction connection.

Normal Inline Connection

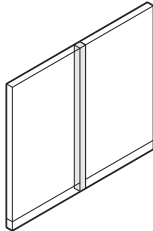

3" Inline Junction

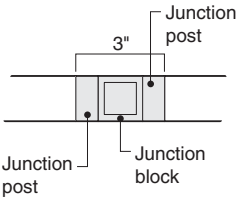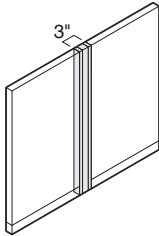

TOP VIEW

### How to Build Your Own 3" Inline Junction

- |                |                                         |
|----------------|-----------------------------------------|
| <b>Step 1:</b> | Panel Junction                          |
| 2              | <b>TS7___TEPJ</b>                       |
| <b>Step 2:</b> | Junction Blocks (3 pack - need 2)       |
| 2              |                                         |
| <b>Step 3:</b> | Junction Cap                            |
| 1              | <b>TS790JC</b>                          |
| <b>Step 4:</b> | Junction Cap Aligner (10 pack - need 2) |
| 2              | <b>TS7CJCA10</b>                        |
| <b>Step 5:</b> | T Vertical Trim                         |
| 2              | <b>TS7___TTVT</b>                       |

### Practice Example

- |                 |                     |
|-----------------|---------------------|
| <b>Quantity</b> | <b>Style Number</b> |
| 2               | <b>TS754TEPJ</b>    |
| 2               | <b>TS790JB3</b>     |
| 1               | <b>TS790JC</b>      |
| 2               | <b>TS7CJCA10</b>    |
| 2               | <b>TS754TTVT</b>    |


# Build Your Own Stacking Junctions—Thin Trim

**Stacking junctions have several implications on the actual frame components of the panel, as well as how the frame is trimmed.**

*Note: Same height stacking junctions are supported as style numbers, see pages 362-362. This section should only be used when you need to stack and there is not a pre-configured stacking junction style number.*


When stacking be sure to follow the steps listed below:

**Step 1:** Start by drawing out your base application ONLY (do not include stackers).

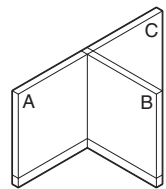

**Corner**


Example: 42"H T panel application label one panel A, one panel B, and one panel C.

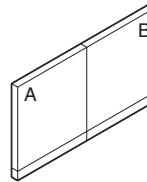

**In-line**


Example: 42"H in-line panel application label one panel A and one panel B.

**Step 2:** Label each panel with a letter and dimensions (remember to work counterclockwise).

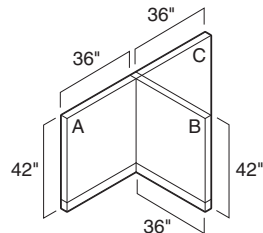

**Corner**

Example: 42"H T panel application label one panel A, one panel B, and one panel C.

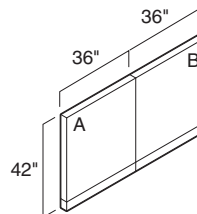


**In-line**

Example: 42"H in-line panel application label one panel A and one panel B.


**Step 3:** Omit **ALL** trims (this will omit the junction cap and aligners as well).

**Step 4:** Determine where you would like stacking junctions on your application and label them with a letter and dimension.


Remember: Maximum height that an Answer panel can reach is 90". Maximum height that can be stacked on a base panel is 36" consisting of one 24"H and one 12"H or two 18"H stacking junctions.

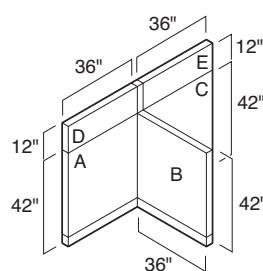

**Corner**

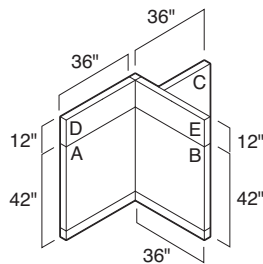


**In-line**

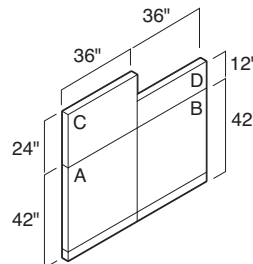


**Step 5:** Look at your application in total. Does your application have an in-line or corner (L, T, X, V, or Y) stacking junction?

- For in-line stacking, go to step 6
- For corner (L, T, X, V, or Y) stacking go to step 7

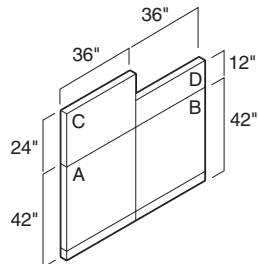

### Step 6: In-line stacking junctions

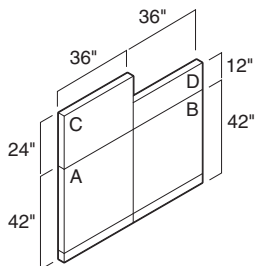


**Step 6a:** Specify in-line stacking junction for the shared junction. The height specified is the shortest height of the stacking junction. In this example it would be the height of stacking junction D (12").

**Step 6b:** Specify an end-of-run stacking junction for the difference between the tallest stacking junction and the lowest stacking junction. In this example it would be the height of stacking junction C minus the height of stacking junction D (24" - 12" = 12").

**Step 6c:** Go to step 7 to specify end-of-run stacking junctions for the stacking junctions that are not in-line. To complete specifying the stacking junctions in this example, one 24" end-of-run and one 12" end-of-run stacking junction would need to be specified.

### Step 7: Corner (L, T or X, V, or Y) stacking junctions

Look at each panel individually. Start with panel A and determine what you would like to stack to that panel (if anything). Repeat on the remaining panels in the application.

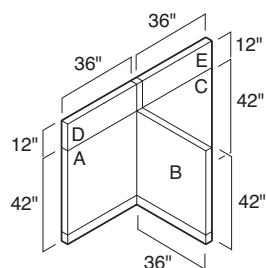

Base panel A: Add 12" thin end-of-run stacking junction (Panel D)  
Base panel B: No change


Base panel C: Add 12" thin end-of-run stacking junction (Panel E)

Specify the proper height and type of stacking junction

1. End-of-run stacking junction
2. L, T, X, V, or Y stacking junction

Stacking junction panel D: 12" stacking junction requires two 12" end-of-run stacking junctions

Stacking junction panel E: 12" stacking junction requires two 12" end-of-run stacking junctions

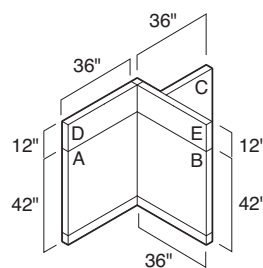

Base panel A: Add 12" thin end-of-run stacking junction (Panel D)

Base panel B: Add 12" thin end-of-run stacking junction (Panel E)

Base panel C: No change

Stacking junction panel D: 12" stacking junction requires one 12" end-of-run stacking junction and a 12" "L" to be shared with panel E

Stacking junction panel E: 12" stacking junction requires one 12" end-of-run stacking junction

**Note:** 1. Corner stacking junctions are created by attaching thin end-of-run stacking junctions and junction blocks.

2. Thin end-of-run stacking junctions are also used when creating an in-line change-of-height condition.

3. In-line stacking junctions are only used when creating in-line stacking conditions when adjacent panels are the same height.

► See pages 362-363 to specify.


## Build Your Own Stacking Junctions—Thin Trim, continued

### Step 8: Stacking horizontal frame packages

Each stacking junction needs to be connected by at least one stacking horizontal frame package.

If one side of the panel section has two stacking junctions, and the other side has one, two stacking horizontal frame packages need to be specified.


If there is one stacking junction on both sides of the panel, specify one stacking horizontal frame package to be shared between the two stacking junctions.

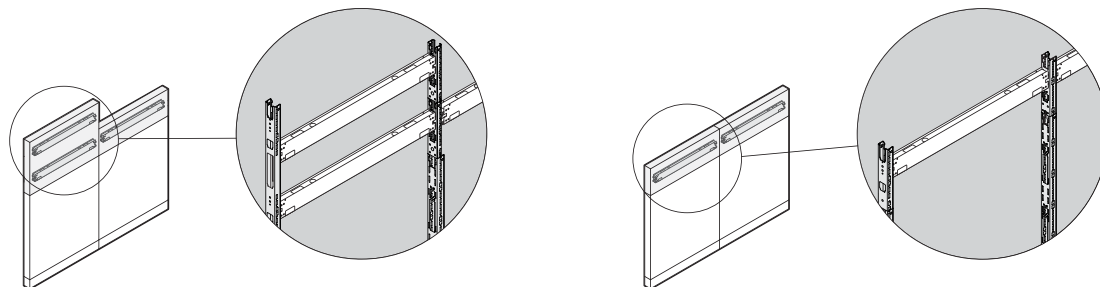

► See page 382 to specify.

### Step 9: Junction blocks

Junction blocks are required at the top of each junction whenever there are two or more junctions or stacking junctions adjacent to each other in a corner application.

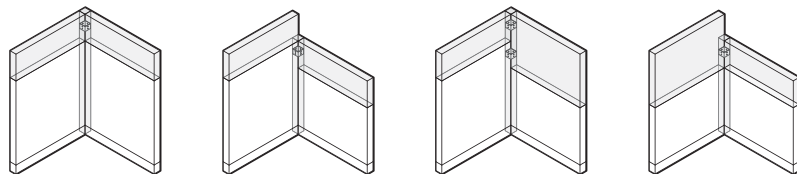

► See page 374 to specify.


### Step 10: Junction caps and aligners

Now that the application is constructed, trims need to be added (since ALL trims were omitted in step 2).

#### 90° Applications (In-line, L, T, and X)


- Same height base application stacking to same height application
- Change-of-height base application stacking to a change-of-height application
- Change-of-height base application stacking to same height application
- Same height base application stacking to change-of-height application

#### Same height base application stacking to same height application (see drawing)

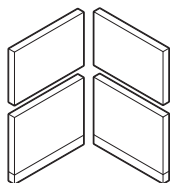


Specify: Junction cap: 90° corner  
Junction cap aligner: Number required is equal to the number of panels connecting to the junction cap


#### Change-of-height base application stacking to a change-of height application (see drawing)

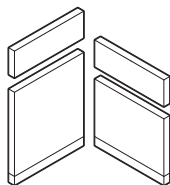

Specify: Junction cap: 90° corner change-of-height  
Junction cap aligner: Number required is equal to the number of panels at the second tallest height

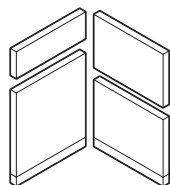**Step 10: Junction caps and aligners, continued****Change-of-height base application stacking to same height application (see drawing)**

Specify: Junction cap: 90° corner  
Junction cap aligner: Number required is equal to the number of panels connecting to the junction cap

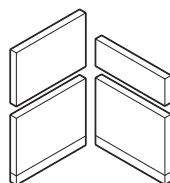**Same height base application stacking to change-of-height application (see drawing)**

Junction cap: 90° corner change-of-height  
Junction cap aligner: Number required is equal to the number of panels at the second tallest height

**120° applications (V or Y) - All 120° applications require:**

Junction cap: 120° junction cap  
Junction cap aligner: Number required is one less than the number of panels connecting to the junction cap

For complete list of style numbers:

Junction cap                   ▶ See page 375.  
Junction cap aligner       ▶ See page 375.

**Step 11: Trim****90° Applications****Level 1**

One panel at the tallest height  
Two panels at the tallest height in an "L" configuration  
Two panels at the tallest height along the spine of a "T" configuration

Three panels at the tallest height

**Level 2**

Two panels at the second height or higher in an "L" configuration  
Two panels at the second height along the spine of a "T" configuration

Three panels at the second height or higher

**Level 3**

Three panels at third height

**120° Applications****Level 1**

One panel at the tallest height  
Two panels at the tallest height in a "V" configuration

**Level 2**

Two panels at the second height or higher in a "V" configuration

**Required to Specify**

End-of-run/change-of-height trim = tallest height minus second height  
L trim = tallest height minus the third height (could be to the floor)  
T trim = tallest height minus the third height (could be to the floor).  
Look at both sides of the spine individually as two T trims (different heights) will need to be specified.  
T trim = tallest height minus the fourth height (could be the floor).

L trim - second height minus third height  
T trim = second height minus the third height (could be to the floor).  
Look at both sides of the spine individually as two T trims (different heights) will need to be specified.  
T trim - second height minus third height

T trim - third height minus fourth height

**Required to Specify**

120° change-of-height trim = tallest height minus second height  
V trim = tallest height minus the third height (could be to the floor)

V trim = second height minus the third height (could be to the floor)

**Step 12: Inside corner light seal**

Specify Inside corner light seal to match the overall height of the lower panel in the application (used only on 90° applications).

**Step 13: Change-of-height aligners**

If you have both L and T aligners at one junction, an L/T aligner is needed.  
If you have both 120° and V trims at one junction, a 120°/V aligner is needed.

# Reconfiguring with Answer — General Guidelines

## General Junction Guidelines

**Junctions** manufactured **before** 10/10/11 are purpose built and have specific features.

- Skin clip attachment locations every 12"
- Cannot accept 6" technology skin
- Cannot accept the open base trim
- Large opening for routing power and data is only at worksurface height
- Corner junctions are purpose built and cannot change configuration from one application to the next

**Junctions** manufactured **after** 10/10/11 are universal corner junctions.

- Skin clip attachment locations every 6"
- Can accept 6" technology skin
- Can accept the open base trim
- Large openings for routing power and data are located every 12" inside the panel
- Corner junctions are considered universal. The junction can easily be transformed from one configuration to another (i.e. turn an L- into a T-junction)

**Purpose built and universal corner junctions** can be used in the same application.

## Junctions Manufactured Before and After 10/10/11

**Inline junctions** can be used with Oval, Square, or Thin panel trim. Inline junctions manufactured before OR after 10/10/11 can be used with Thin trim. The only differences between the junctions are those listed in the general guidelines above.

### Corner Junctions Same Height

- Same height are interchangeable between Oval, Square, or Thin panel trim.
- Same height corner junctions manufactured before OR after 10/10/11 can be used with Thin trim.

- **Universal junction configuration** (manufactured after 10/10/11)
  - Post and block configuration – all the posts are the same height.
  - Can be reconfigured to another style corner junctions.
  - Can accept Oval, Square, or Thin panel trims.

Examples:

- |                                                                                                                                                                                                                |                                                                                                                                                                         |                                                                                                                                                                                              |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1</b> Change an L to a T <ul style="list-style-type: none"><li>• Add one junction post</li><li>• Replace the L trim with a T trim</li><li>• Add a junction cap aligner</li><li>• Inventory L trim</li></ul> | <b>2</b> Change an L to an X <ul style="list-style-type: none"><li>• Add one junction post</li><li>• Add two junction cap aligners</li><li>• Inventory L trim</li></ul> | <b>3</b> Change a T to an L <ul style="list-style-type: none"><li>• Remove one junction post</li><li>• Remove one junction cap aligner</li><li>• Replace the T trim with an L trim</li></ul> |
| <b>4</b> Change an X to an L <ul style="list-style-type: none"><li>• Remove two junction posts</li><li>• Remove two junction cap aligners</li><li>• Add an L trim</li></ul>                                    | <b>5</b> Change an X to a T <ul style="list-style-type: none"><li>• Remove one junction post</li><li>• Remove one junction cap aligner</li><li>• Add a T trim</li></ul> |                                                                                                                                                                                              |

**Purpose Built Junction configuration** (manufactured before 10/10/11)

- Cannot be reconfigured to be another style corner junction. If desire to change from an L- to a T-junction, the entire junction must be changed out.
- Can accept Oval, Square, or Thin panel trims.

### Corner Junctions – Change-of-Height Thin Trim

- Change-of-height corner junctions can only accept universal junctions manufactured after 10/10/11.
- Junction posts will **only go up to the height of the panels**

Example:

- 1** 42/54" L-junction
  - One junction post at 42"H
  - One junction post at 54"H

- Cannot accept purpose built change-of-height junctions manufactured before 10/10/11.
- When reconfiguring from Square or Oval trim to Thin trim, purpose built corner junctions must be change to universal corner junctions.

## Junctions Manufactured Before and After 10/10/11, continued

### Corner Junctions – Change-of-Height, continued

#### Oval and Square Trim

- Can accept junctions manufactured before 10/10/11 (purpose built configuration).
- Can accept junctions manufactured after 10/10/11 (universal junction configuration).
- Junction posts will go up to the **highest** panel height

Example:

- ❶ 42/54" L-junction
  - Two junction posts at 54"H

### End-of-Run Junctions

#### Thin Trim

- Thin trim requires Thin end-of-run junctions
- When reconfiguring from Square or Oval trim to Thin trim, all end-of-run junctions must be changed to Thin end-of-run junctions

#### Square and Oval Trim

- The end-of-run junction utilized in a Square or Oval application is the same as the inline junction.
- Square and Oval applications cannot use Thin end-of-run junctions.

### Stacking Junctions

- Stacking junctions manufactured before 10/10/11 can be stacked on purpose built junctions (before 10/10/11) or universal junctions (after 10/10/11).
- Stacking junctions manufactured after 10/10/11 can be stacked on purpose built junctions (before 10/10/11) or universal junctions (after 10/10/11).

### Trims

Trim style must be consistent across the entire application. Trim styles cannot be mixed and matched across applications.

Example:

- ❶ Square top caps cannot be used with Thin vertical trims. The entire application must be Thin trim (top caps and vertical trim) OR the entire application must be Square trim (top caps and vertical trim).

## New Junctions (after 10/10/11) to New Junctions

### End-of-run Junctions

- **End-of-run junction** includes junction post plus an end-of-run trim and aligner.
  - When reconfiguring a junction post can be used at an end-of-run or as a post to make up a 90° or 120° corner.
  - End-of-run junctions are not the same as inline junctions.


### Inline junctions

- **End-of-run junction** includes a junction and an inline aligner.
  - Inline junctions cannot be used at an end-of-run with Thin trim.
  - Inline junctions can be used at an end-of-run with Square or Oval trim.
  - Inline junctions **cannot** be used at a corner junction.

### Corner Junctions

- Universal corner junctions are made up of blocks and posts.
- Universal corner junctions can be changed from one configuration (i.e. L) to another configuration (i.e. T, X, V, or Y) by adding blocks and/or junction posts.
- When reconfiguring corner junctions, additional corner trim and aligner pieces will need to be ordered.

### New Junctions (after 10/10/11) to New Junctions, continued

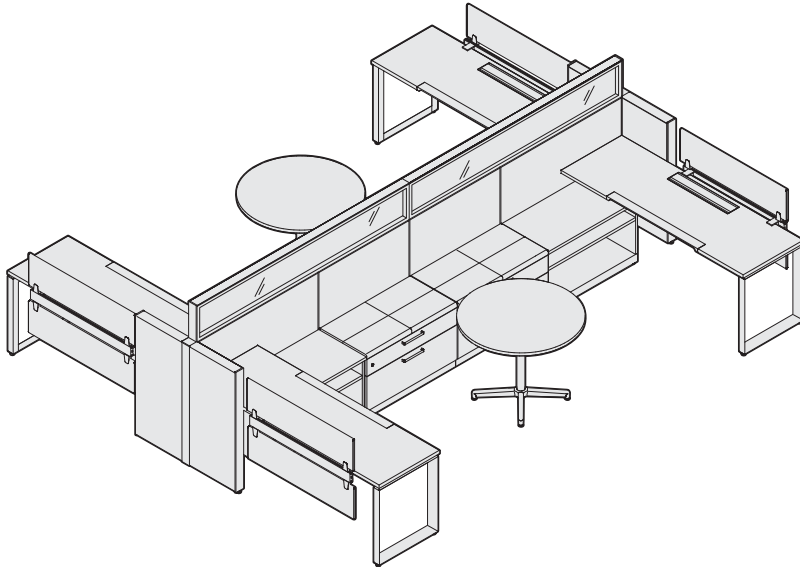

| Current Style Number (Square before 10/10/11) |              |                                                                                | New Style Number (Thin after 10/10/11) |              |                                                        |
|-----------------------------------------------|--------------|--------------------------------------------------------------------------------|----------------------------------------|--------------|--------------------------------------------------------|
| Qty                                           | Style Number | Description                                                                    | Qty                                    | Style Number | Description                                            |
| 4                                             | TS718SHF     | Frame—Horizontal Package, Square, 18"W, change-of-height at one end of top cap | 4                                      | TS718THF     | Frame—Horizontal Package, Thin, 18"W                   |
| 2                                             | TS736SHF     | Frame—Horizontal Package, Square, 36"W (omit top cap)                          | 2                                      | TS736THF     | Frame—Horizontal Package, Thin, 36"W                   |
| 4                                             | TS742SEPJ    | Junction—End-of-Run, Square, 42"H                                              | 4                                      | TS742TEPJ    | Junction—End-of-Run, Thin, 42"H                        |
| 2                                             | TS742SIPJ    | Junction—Inline, Square, 42"H                                                  | 2                                      | TS742TIPJ    | Junction—Inline, Thin, 42"H                            |
| 2                                             | TS7454STPJ   | Junction—T Junction                                                            | 2                                      | TS7454TCTJ   | Junction -T, Change-of-Height, Thin, 42" to 54" to 42" |
| 4                                             | TS712SCHS    | Change-of-height Trim, Square                                                  | N.A.                                   | N.A.         | N.A.                                                   |
| 2                                             | TS748SHF     | Frame—Horizontal Package, Square, 48"W                                         | 2                                      | TS748THF     | Frame—Horizontal Package, Thin, 48"W                   |
| 1                                             | TS754SIPJ    | Junction—Inline, Square, 54"H                                                  | 1                                      | TS754TIPJ    | Junction—Inline, Thin, 54"H                            |
| 2                                             | TS772STC     | Spanning Top Cap—Square, 72"W                                                  | 2                                      | TS772TTC     | Spanning Top Cap—Thin, 72"                             |

#### The following style numbers can be re-used in this configuration:

|   |            |                                                          |  |  |  |
|---|------------|----------------------------------------------------------|--|--|--|
| 4 | TS73618TKF | Panel Skin—Tackable Acoustical, 40" x 18", Floor         |  |  |  |
| 4 | TS73636TK  | Panel Skin—Tackable Acoustical, 36" x 36"                |  |  |  |
| 4 | TS73648TK  | Panel Skin—Tackable Acoustical, 36" x 48"                |  |  |  |
| 2 | TS71284SPW | Window—Single Pane                                       |  |  |  |
| 2 | TS7SWS     | Spanning Window Inline Support                           |  |  |  |
| 4 | WS2472S    | Worksurface—Straight                                     |  |  |  |
| 4 | UTTRMN     | Tray—Universal Worksurface, Modular                      |  |  |  |
| 4 | TS7WKSPT   | Reinforcing Channel, 57"W                                |  |  |  |
| 4 | DSR 40     | SOTO Rail, 40"W                                          |  |  |  |
| 8 | CQSF4212   | Screen—Personal/Modesty Fixed                            |  |  |  |
| 4 | UFC24      | Leg—Universal Closed                                     |  |  |  |
| 4 | RLF18361AP | Lateral—Universal, Proud Front Steel, 1.5-High Open/Open |  |  |  |
| 4 | RLF18361BP | Lateral—Universal, Proud Front Steel, 1.5-High Dwr/Dwr   |  |  |  |
| 4 | RPDC1836P  | Cushion                                                  |  |  |  |
| 2 | BFR36      | Table—Round                                              |  |  |  |
| 2 | BX26       | Base—X                                                   |  |  |  |
| 2 | USSBR      | Bracket—side support                                     |  |  |  |

## Panels—Thin Trim

### SmartTools Specification Tips

- Before 10/10/11 Oval and Square junctions were manufactured with purpose build junctions. Starting 10/10/11 Oval and Square junctions began being manufactured with universal junctions. The style number stayed the same but the junction construction changed.
- SmartTools designates new and old junctions. Old junctions are designated with an asterisk (\*).
- SmartTools provides the ability to change between new and old junctions, as well as connect them together where applicable.
- For assistance in reconfigurations, SmartTools allows designers to create “alternatives”. Alternatives will allow designers to create an original application (alternative one) and make a copy of it (alternative two). The designer can then make design changes to alternative two to reflect what the reconfigured space will look like.
- Once design changes are made, the designer will be able to use SmartTools outputs to compare alternative one to alternative two to determine the following information:
  - Bucket one: What product from alternative one can be used in alternative two.
  - Bucket two: What product from alternative one will not be needed in alternative two.
  - Bucket three: What additional product will be needed in alternative two.
- Since universal junctions can be broken down into individual components (blocks, posts, light seals, and trim), to re-use the maximum number of parts a designer can manually determine if a match can be made between the parts left in bucket two and the parts needed in bucket three.



## Base Horizontal Frame Packages—Thin Trim

**Base horizontal frame packages** include horizontal connecting bars that lock into vertical junctions and complete the structure of a panel. A top cap and pair of base trims are also included. Cable tray and base cable tray are available as options.

► Specifying, page 380

**Top cap** snaps onto top of panel skins. Top caps to accommodate change-of-height are also available. Wood veneer is available as an option.

**Quick lock** connects horizontal bars to vertical junctions for quick assembly.

**Horizontal connecting bars** lock into vertical junctions. The top bar can be lowered to a maximum of 24" from the top position. The bottom bar must always be positioned in the lowest slot in a junction.

**Optional cable tray** can be used for additional support of cables. Additional cable trays can be installed and arranged at various heights within the frame for communications access and cable routing.

**Base trim or open base trim styles** are available on panels with Thin trim.

**Base trim with knock-outs** accommodates power and communication terminations. Top knockout is for power, bottom knockout is for communication. Filler to close unused openings is available from Service Parts (TS7BTFSR).

**Optional base cable tray** can be used to support lay-in of cables.

### Actual Dimensions

Width 17<sup>13</sup>/<sub>16</sub>", 23<sup>13</sup>/<sub>16</sub>", 29<sup>13</sup>/<sub>16</sub>", 35<sup>13</sup>/<sub>16</sub>", 41<sup>13</sup>/<sub>16</sub>", 47<sup>13</sup>/<sub>16</sub>", 59<sup>13</sup>/<sub>16</sub>", and 71<sup>13</sup>/<sub>16</sub>"


Base trim height 3<sup>3</sup>/<sub>4</sub>"

### Receptacle Opening


Width of opening 2<sup>5</sup>/<sub>8</sub>"

Height of opening 1<sup>3</sup>/<sub>8</sub>"

## Product Details

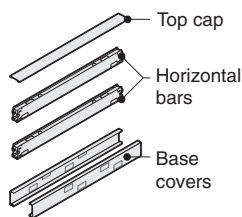


**Horizontal frame packages** are available when you want to build up your own panel. The package includes all the components of a panel except the skins so you can order the skins separately to mix combinations of skin surface materials and colors. These frame packages do not include vertical junctions. Cable trays and base cable trays are optional.

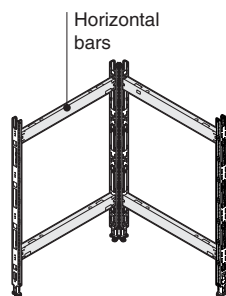


**Two horizontal connecting bars** must be used in each base panel.


**Horizontal bars** determine panel width. They are not dedicated to a specific panel height; any horizontal bar can be used or reused with any junction height.

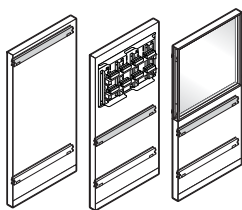

**Top horizontal bar** may be lowered to allow for a 12"H, 18"H, or 24"H glass window or consolidation point kit to be placed at the top of the panel. Bottom horizontal bar in base panel must remain in lowest position.

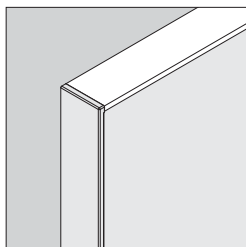


**Top caps** are available in three styles - thin, square, and oval. This section covers Thin trims. Horizontal frame packages should be specified with Thin trim. Thin, square, and oval top caps can not be mixed between adjacent panels. *Tip: Change-of-height top cap option is only needed when using in-line change-of-height.*

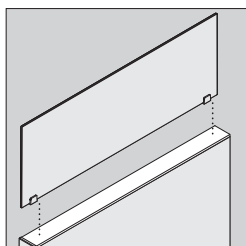

**Omit top cap option** is available and should be selected when adding a frameless glass screen to the top of the panel or when spanning a single top cap across multiple panels.


**Spanning top caps** are available for Thin trims.

**When spanning a single top cap across multiple panels**, select the omit top cap option and specify a spanning top cap separately. Top cap width must match total width of spanned panels.

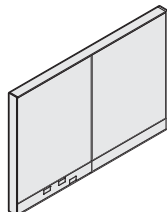


**Spanning top caps** can only be used in an in-line condition. They cannot span over a corner junction.

**Spanning top caps** can be used on any panel height.

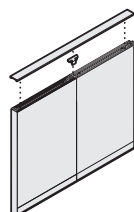


**In-line spanning top cap lightseals** should be specified separately for each in-line panel joint the top cap spans.

**Omit base trim option** should be selected when using skins to the floor.

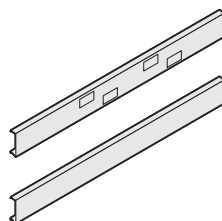

**Base trims** are available with or without knockouts. Base trims with knockouts accommodate power and communication terminations.




**Open base trims** are available. They do not accommodate power and data routing or entry in the base. Open base trim can only be added on a junction manufactured on or after October 10, 2011.


**Open base trims** occupy the same space as the standard base trims. Open base trims occupy the bottom 3 1/4" of the panel; the height of the opening is 2 1/2".

## Wiring &amp; Cabling

Vertical  
lay-in cable  
routing

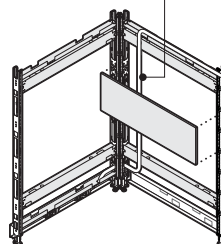


**Vertical lay-in cable routing** can be accommodated behind skins.

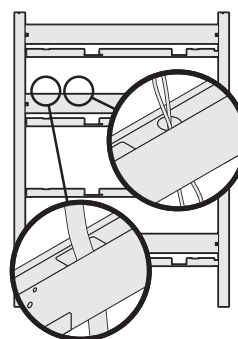

**Cable tray** can be positioned every 6" vertically above the base to support cable routing.


**Cable tray** can accept added cable carriers attached below tray to expand horizontal cable management options.

► See *Montage Specification Guide* for cable carrier (ZCC).

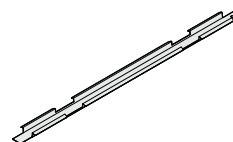


**Base cable tray** is used only in the base to support lay-in cable routing in the base. Base cable tray cannot be used if omit base trim option is selected for one or both sides of panel or if open base trim is used.

## Connections

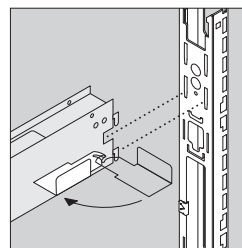


**Quick lock on both ends of the panel's horizontal connecting bars** engage the junction in a tight structural connection.

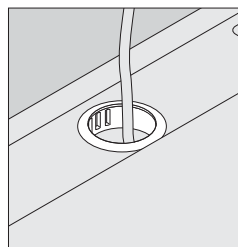


**Feed-through horizontal connecting bar cable sleeves** can be added in the field to finish the exposed metal edges of vertical cable pass-through openings.

## Base Horizontal Frame Packages—Thin Trim, continued

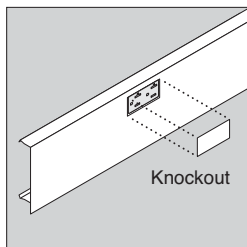

**Knockouts in base trim** can be removed in the field where needed. Knockout dimensions are 1 $\frac{3}{8}$ "H by 2 $\frac{5}{8}$ "W.

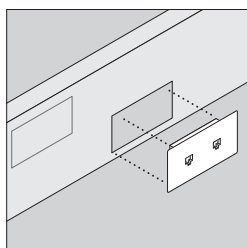

**Communication outlets** attach to openings in panel base trim. Order communication outlets from an outside vendor. Knockouts for communication in base accommodate modular furniture size only.

### Surface Materials

#### Top cap and base trim

- Paint color chosen on base trim will also apply to the top cap. They are not chosen independently.
- Wood veneer (option)

*Tip: Answer panel wood trims are only available with quarter-cut finishes with the exception of maple finishes. Maple on wood trims is only available with flat-cut finishes. For ordering simplicity, both flat-cut and quarter-cut finishes can be specified on panel trims. However, for all finishes except maple, if a flat-cut finish is selected, the trims will have the coordinating quarter-cut finish. For maple finishes, if quarter-cut is selected, the trims will have the coordinating flat-cut finish. Blending panel trims with other wood products that have flat-cut finishes will be visually acceptable for most applications. If a more exact match is desired for non-maple finishes, please specify quarter-cut finishes for the entire project. If a more exact match is desired for maple finishes, please specify flat-cut finishes for the entire project.*

#### Horizontal connecting bars

- Black paint

*Tip: Components are hidden when properly installed.*

### Application Topics

**Use** a cable tray to provide extra support for 60"W and 72"W full skins where people may lean against the panel.




# Stacking Horizontal Frame Packages

**Stacking horizontal frame package** provides structural stability for stacking junctions.  
 ▶ Specifying thin, page 382

**Each stacking junction** is specified separately.  
 ▶ Pages 362–363

**When stacking**, vertical trim must be specified separately to span the full-height of the base junctions plus the stacking junction.

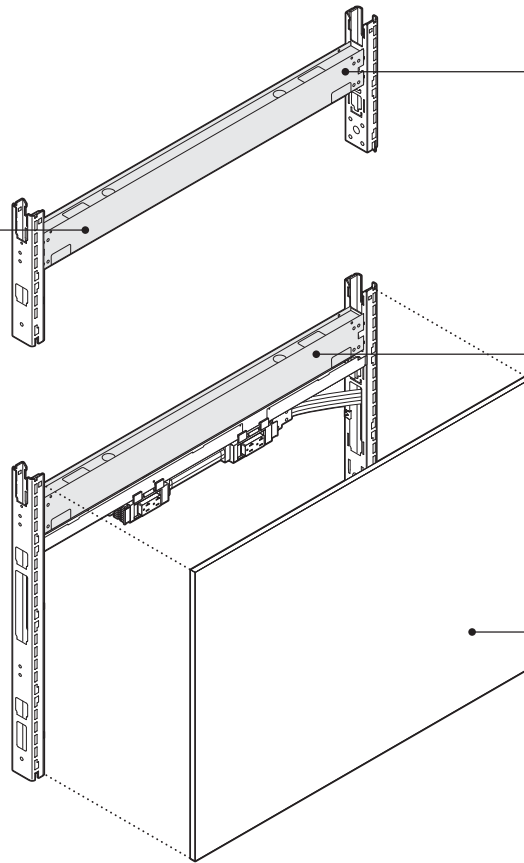


**Each stacking segment** must have one horizontal connecting bar.  
*Exception: If a window is used with stacking junctions, a horizontal connecting bar is not needed.*

**Horizontal connecting bar** is included with each stacking horizontal frame package.

**Skins**, ordered separately, are added to both sides of stacking frame.


## Actual Dimensions

Width 17¼", 23¼", 29¼", 35¼", 41¼", 47¼", 59¼", and 71¼"

**Product Details**

**Stacking horizontal frame package** includes one horizontal connecting bar. Stacking junction is not included.

**Stacking horizontal frame package** is available in eight widths—18", 24", 30", 36", 42", 48", 60", and 72"—to match panel width. These horizontal connecting bars are identical to those in horizontal frame packages and can be re-used with any type of junction.

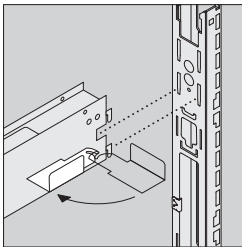
**Connections**

**Quick-lock mechanism on the horizontal connecting bar** engages the stacking junction in a tight structural connection.


**Base panel** must always have two horizontal connecting bars.

**Wiring & Cabling**


Vertical lay-in cable routing

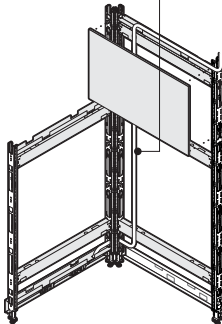

**Vertical lay-in cable routing** can be accommodated behind skins.

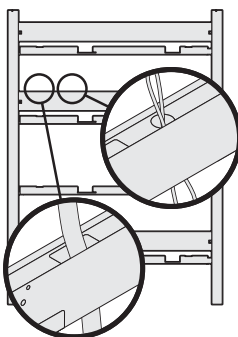

**Vertical routing of power and cables through panel interior** is accommodated by openings in horizontal connecting bars.

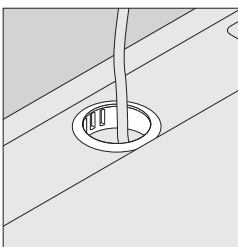

**Feed-through horizontal connecting bar cable sleeves** can be added in the field to finish the exposed metal edges of vertical cable pass-through openings.


**Power kit installation for stacking components** is the same process as for installation in base panels.

**Surface Materials**


**Stacking horizontal frame package**

- Black


*Tip: Components are hidden when properly installed.*

**Application Topics**

**When stacking a 12"H, 18"H, or 24"H window,** a stacking horizontal frame package is not needed. Remember, the base panel always has two horizontal connecting bars for support.



**When double stacking junctions,** at least one of the stacking junctions must be connected with a horizontal beam.

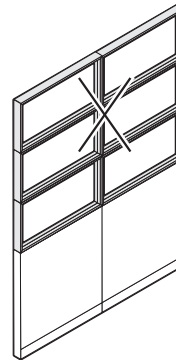

**No more than two windows** can be stacked on top of each other.

**Consolidation point kit** cannot be used with stacking components.

**Stacking horizontal frame package** is used when additional horizontal bar is needed in off-module application. See off-module guidelines.


**Stacking Stability Guidelines** provides detailed information on applications.

► Page 124

# Frameless Glass Screens with Recessed Attachment—Thin Trim

**Frameless glass screen with recessed attachment** can be added to the top of a panel to help define space and provide some privacy while still providing access to natural light and promoting communication between adjacent workers.


► Specifying, page 384

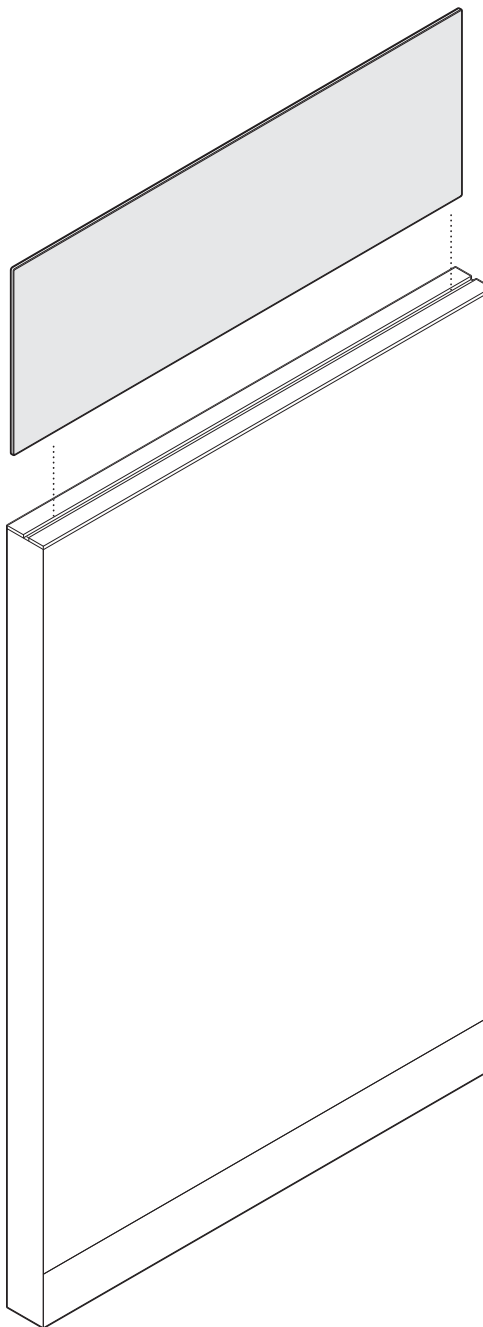


## Product Details

**Frameless glass screen with recessed attachment** is secured to horizontal connecting bar by supports below the top cap. Two brackets are used below the top cap to attach the glass to the panel on 24"–72"W panels. Three brackets are used on panels 78" and wider.

**Frameless glass screens with recessed attachment** can be used on panels with thin profile trim.

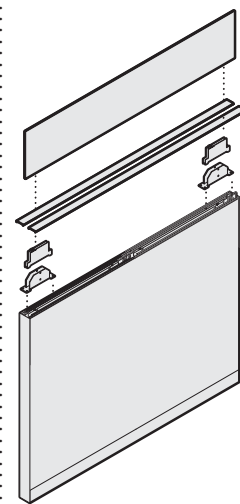

**Frameless glass kit** includes glass screen, supports, and top caps.

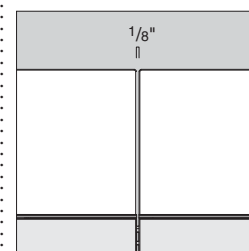

**Gap between adjacent glass screens** is 1/8".

## Surface Materials

### Glass

- 6500 Clear Glass
- 6530 Frosted Glass

### Top Cap

- Paint
- Wood veneer

## Actual Dimensions

Glass Width – standard: 23<sup>7</sup>/<sub>8</sub>", 29<sup>7</sup>/<sub>8</sub>", 35<sup>7</sup>/<sub>8</sub>", 41<sup>7</sup>/<sub>8</sub>", 47<sup>7</sup>/<sub>8</sub>", 53<sup>7</sup>/<sub>8</sub>", 59<sup>7</sup>/<sub>8</sub>", 65<sup>7</sup>/<sub>8</sub>", 71<sup>7</sup>/<sub>8</sub>", 77<sup>7</sup>/<sub>8</sub>", 83<sup>7</sup>/<sub>8</sub>", 89<sup>7</sup>/<sub>8</sub>", and 95<sup>7</sup>/<sub>8</sub>"


Glass Width – change-of-height one end Thin trim: 23<sup>7</sup>/<sub>16</sub>", 29<sup>7</sup>/<sub>16</sub>", 35<sup>7</sup>/<sub>16</sub>", 41<sup>7</sup>/<sub>16</sub>", 47<sup>7</sup>/<sub>16</sub>", 53<sup>7</sup>/<sub>16</sub>", 59<sup>7</sup>/<sub>16</sub>", 65<sup>7</sup>/<sub>16</sub>", 71<sup>7</sup>/<sub>16</sub>", 77<sup>7</sup>/<sub>16</sub>", 83<sup>7</sup>/<sub>16</sub>", 89<sup>7</sup>/<sub>16</sub>", and 95<sup>7</sup>/<sub>16</sub>"

Glass Height: 9<sup>5</sup>/<sub>16</sub>", 15<sup>1</sup>/<sub>2</sub>", and 21<sup>5</sup>/<sub>8</sub>"


Glass Thickness: 3/8"

**Application Topics**


**Frameless glass screen** can be placed on the top of a panel only. Top beam in the panel must be located in the top position of the frame in order to support frameless glass. Frameless glass can be used on base panels or stacking panels.



**Frameless glass screen** cannot be used when a window is located in the top position of the panel.

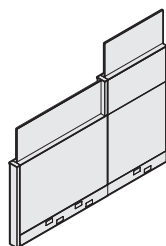


**At an in-line change-of-height condition**, a change-of-height top cap should be specified. Change-of-height top cap option is available to allow for positioning of glass next to change-of-height trim on one side only. Glass is shortened and top cap provided supports change-of-height on one end only. A change-of-height top cap is not needed at a corner change-of-height condition.

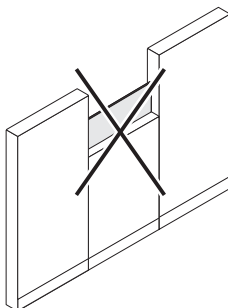


**Frameless glass screen** will not fit between two in-line change-of-height trims.

**Frameless glass kit** is available without glass screen to accommodate customer's own glass. See chart of field installed glass size requirements for specific dimensions required for glass to fit in frameless glass brackets. Steelcase recommends the use of safety glass meeting ANSI Z97.1 for field installed glass. Check with your local building authority for requirements in your area.

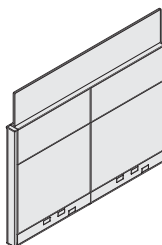

**A single frameless glass screen** can span over two or more inline panels up to 96".

**Frameless glass screens with recessed attachment** cannot span a corner junction.

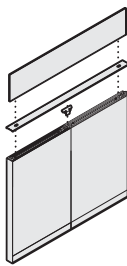

**In-line spanning top cap lightseal** must be specified separately when used in this application. Spanning top cap lightseal attaches to underside of top cap to fill space between skin lightseals. Specify one for each in-line junction the frameless glass screen spans.




Before  
November  
2012




After  
November  
2012

**Plastic end-of-run and junction cap aligners** manufactured after November 2012 will have features to accommodate recessed frameless glass. Aligners manufactured before November 2012 will not be able to accommodate recessed frameless glass and new aligners will need to be ordered.




**Each Answer frameless glass with recessed attachment kit** will come with two aligners to align top caps when two frameless glass kits are used in an inline condition.


**When specifying frameless glass in a wall-start application or when frameless glass is on an off-module fin panel**, the wall-start option should be selected. A recessed frameless glass top cap connector (TS7TFGRC) must also be ordered for this application.



**A recessed frameless glass top cap connector (TS7TFGRC)** must be specified when a frameless glass screen is adjacent to a corner junction and the frameless glass top caps are located at a different (lower) height than the junction cap.

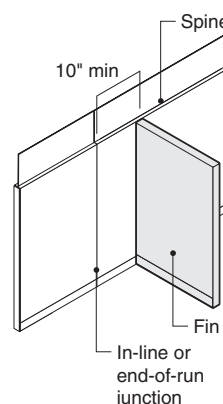

**When using frameless glass on a spine panel with a same height off-module panel connections**, the off-module cannot connect within 10" of an end-of-run or in-line junction connection.

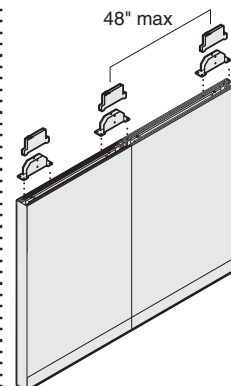

**When omitting glass and using acrylic or 3 form material in place of glass additional support clamps may need to be ordered** as service parts (T522096SR or T522097SR). Frameless glass kits 54" to 72" will also require additional support clamps to be ordered. When installing the support clamps the maximum allowed distance between the clamps is 48".

### Field-Installed Glass Size Requirements

| Style Number               | Heights                    | Maximum Width | Thickness Range (min-max) |
|----------------------------|----------------------------|---------------|---------------------------|
| Change-of-Height – one end |                            |               |                           |
| TS7624TFGR                 | 95/16", 151/2", and 215/8" | 237/16"       | .350-.4500"               |
| TS7630TFGR                 | 95/16", 151/2", and 215/8" | 297/16"       | .350-.4500"               |
| TS7636TFGR                 | 95/16", 151/2", and 215/8" | 357/16"       | .350-.4500"               |
| TS7642TFGR                 | 95/16", 151/2", and 215/8" | 417/16"       | .350-.4500"               |
| TS7648TFGR                 | 95/16", 151/2", and 215/8" | 477/16"       | .350-.4500"               |
| TS7654TFGR                 | 95/16", 151/2", and 215/8" | 537/16"       | .350-.4500"               |
| TS7660TFGR                 | 95/16", 151/2", and 215/8" | 597/16"       | .350-.4500"               |
| TS7666TFGR                 | 95/16", 151/2", and 215/8" | 657/16"       | .350-.4500"               |
| TS7672TFGR                 | 95/16", 151/2", and 215/8" | 717/16"       | .350-.4500"               |
| TS7678TFGR                 | 95/16", 151/2", and 215/8" | 777/16"       | .350-.4500"               |
| TS7684TFGR                 | 95/16", 151/2", and 215/8" | 837/16"       | .350-.4500"               |
| TS7690TFGR                 | 95/16", 151/2", and 215/8" | 897/16"       | .350-.4500"               |
| TS7696TFGR                 | 95/16", 151/2", and 215/8" | 957/16"       | .350-.4500"               |
|                            |                            |               |                           |
| TS71224TFGR                | 95/16", 151/2", and 215/8" | 237/16"       | .350-.4500"               |
| TS71230TFGR                | 95/16", 151/2", and 215/8" | 297/16"       | .350-.4500"               |
| TS71236TFGR                | 95/16", 151/2", and 215/8" | 357/16"       | .350-.4500"               |
| TS71242TFGR                | 95/16", 151/2", and 215/8" | 417/16"       | .350-.4500"               |
| TS71248TFGR                | 95/16", 151/2", and 215/8" | 477/16"       | .350-.4500"               |
| TS71254TFGR                | 95/16", 151/2", and 215/8" | 537/16"       | .350-.4500"               |
| TS71260TFGR                | 95/16", 151/2", and 215/8" | 597/16"       | .350-.4500"               |
| TS71266TFGR                | 95/16", 151/2", and 215/8" | 657/16"       | .350-.4500"               |
| TS71272TFGR                | 95/16", 151/2", and 215/8" | 717/16"       | .350-.4500"               |
| TS71278TFGR                | 95/16", 151/2", and 215/8" | 777/16"       | .350-.4500"               |
| TS71284TFGR                | 95/16", 151/2", and 215/8" | 837/16"       | .350-.4500"               |
| TS71290TFGR                | 95/16", 151/2", and 215/8" | 897/16"       | .350-.4500"               |
| TS71296TFGR                | 95/16", 151/2", and 215/8" | 957/16"       | .350-.4500"               |
|                            |                            |               |                           |
| TS71824TFGR                | 95/16", 151/2", and 215/8" | 237/16"       | .350-.4500"               |
| TS71830TFGR                | 95/16", 151/2", and 215/8" | 297/16"       | .350-.4500"               |
| TS71836TFGR                | 95/16", 151/2", and 215/8" | 357/16"       | .350-.4500"               |
| TS71842TFGR                | 95/16", 151/2", and 215/8" | 417/16"       | .350-.4500"               |
| TS71848TFGR                | 95/16", 151/2", and 215/8" | 477/16"       | .350-.4500"               |
| TS71854TFGR                | 95/16", 151/2", and 215/8" | 537/16"       | .350-.4500"               |
| TS71860TFGR                | 95/16", 151/2", and 215/8" | 597/16"       | .350-.4500"               |
| TS71866TFGR                | 95/16", 151/2", and 215/8" | 657/16"       | .350-.4500"               |
| TS71872TFGR                | 95/16", 151/2", and 215/8" | 717/16"       | .350-.4500"               |
| TS71878TFGR                | 95/16", 151/2", and 215/8" | 777/16"       | .350-.4500"               |
| TS71884TFGR                | 95/16", 151/2", and 215/8" | 837/16"       | .350-.4500"               |
| TS71890TFGR                | 95/16", 151/2", and 215/8" | 897/16"       | .350-.4500"               |
| TS71896TFGR                | 95/16", 151/2", and 215/8" | 957/16"       | .350-.4500"               |


Frameless Glass Screens  
with Recessed Attachment—  
Thin Trim

# Frameless Glass Screens with Clip Attachment—Thin Trim

## Frameless glass screen with clip attachment

can be added to the top of a panel to help define space and provide some privacy while still providing access to natural light and promoting communication between adjacent workers.

► Specifying, page 387

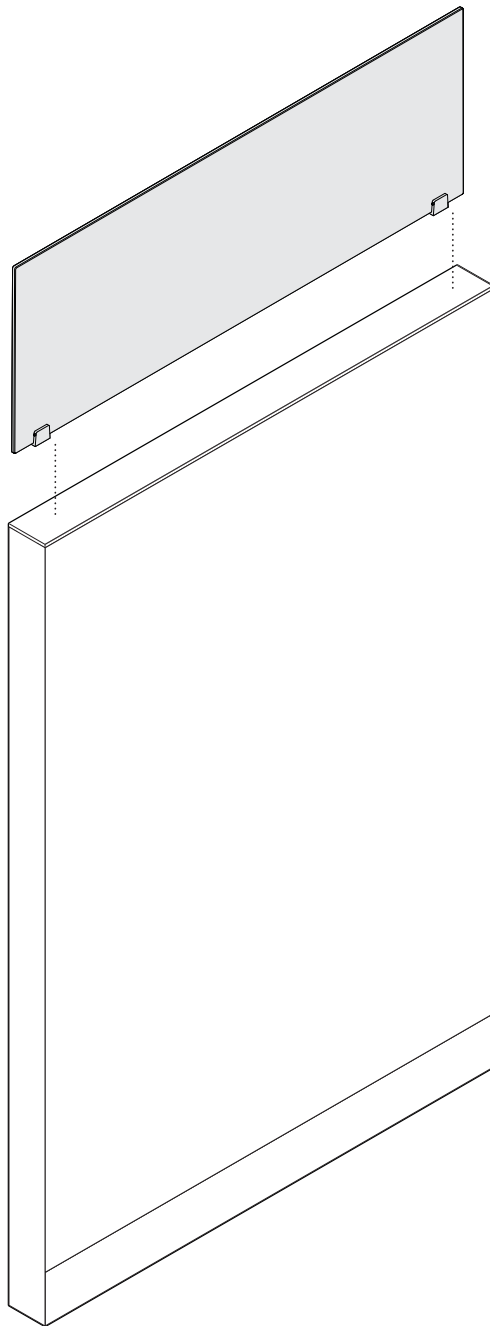


## Product Details

### Frameless glass screen with clip attachment

is secured to horizontal connecting bar by supports below the top cap and brackets above the top cap. Two brackets are used above the top cap to attach the glass to the panel on 24"–60"W panels. Three brackets are used on panels 78" and wider.


### Frameless glass screens with clip attachment

can be used on panels with thin profile trim.

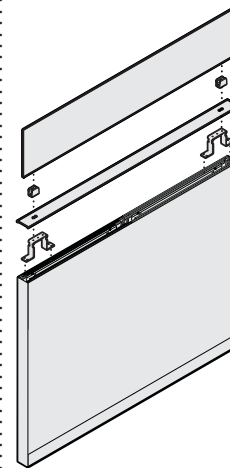

### Frameless glass kit

includes glass screen, brackets, supports, and top cap with holes to accommodate brackets.

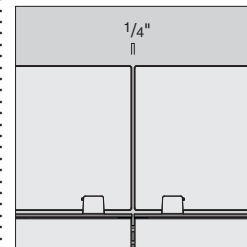

**Gap between adjacent glass screens** is 1/4".

## Actual Dimensions

Glass Width – standard: 23<sup>3</sup>/<sub>4</sub>", 29<sup>3</sup>/<sub>4</sub>", 35<sup>3</sup>/<sub>4</sub>", 41<sup>3</sup>/<sub>4</sub>", 47<sup>3</sup>/<sub>4</sub>", 59<sup>3</sup>/<sub>4</sub>", 71<sup>3</sup>/<sub>4</sub>", 77<sup>3</sup>/<sub>4</sub>", 83<sup>3</sup>/<sub>4</sub>", 89<sup>3</sup>/<sub>4</sub>", and 95<sup>3</sup>/<sub>4</sub>"

Glass Width – change-of-height one end Thin trim: 23<sup>1</sup>/<sub>4</sub>", 29<sup>1</sup>/<sub>4</sub>", 35<sup>1</sup>/<sub>4</sub>", 41<sup>1</sup>/<sub>4</sub>", 47<sup>1</sup>/<sub>4</sub>", 59<sup>1</sup>/<sub>4</sub>", 71<sup>1</sup>/<sub>4</sub>", 77<sup>1</sup>/<sub>4</sub>", 83<sup>1</sup>/<sub>4</sub>", 89<sup>1</sup>/<sub>4</sub>", and 95<sup>1</sup>/<sub>4</sub>"

Glass Height: 11<sup>3</sup>/<sub>4</sub>"

Glass Thickness: 3/8"

## Surface Materials

### Glass

- 6500 Clear Glass
- 6530 Frosted Glass

### Brackets

- Paint


### Top Cap

- Paint
- Wood veneer

## Application Topics


### Frameless glass

**screen** can be placed on the top of a panel only. Top beam in the panel must be located in the top position of the frame in order to support frameless glass. Frameless glass can be used on base panels or stacking panels.




### Frameless glass

**screen** cannot be used when a window is located in the top position of the panel.

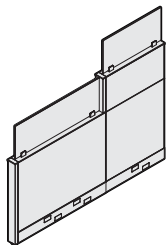

### Change-of-height top


**cap option** is available to allow for positioning of glass next to change-of-height trim on one side only. Glass is shortened and top cap provided supports change-of-height on one end only.

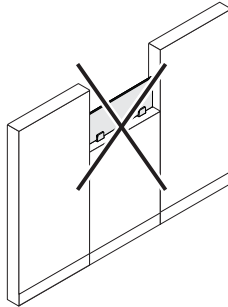

### Frameless glass


**screen** will not fit between two change-of-height trims.

**Frameless glass kit** is available without glass screen to accommodate customer's own glass. See chart of field installed glass size requirements for specific dimensions required for glass to fit in frameless glass brackets. Steelcase recommends the use of safety glass meeting ANSI Z97.1 for field installed glass. Check with your local building authority for requirements in your area.

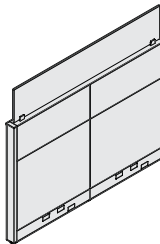


### A single frameless

**glass screen** can span over two or more panels.

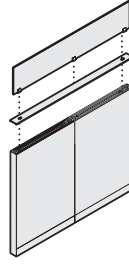

### 90" and 96" wide frameless glass screen

**kits** include three brackets. Two brackets attach to supports below the top cap. The third bracket attaches only to the top cap through a hole that is drilled in the top cap by the installer on site.

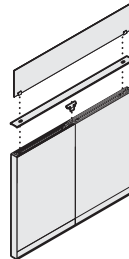

### In-line spanning top


**cap lightseal** must be specified separately when used in this application. Spanning top cap lightseal attaches to underside of top cap to fill space between skin lightseals. Specify one for each in-line junction the frameless glass screen spans.

**A template tool** is available from Service Parts (T511082SR) to assist in locating where holes are to be drilled on the beam of an existing panel to allow supports to be attached. This only applies to beams produced prior to September 2009. Beams produced after this date include holes to allow frameless glass supports to be attached.

## Field-Installed Glass Size Requirements

| Style Number               | Maximum Height                   | Maximum Width                    | Thickness Range (min-max) |
|----------------------------|----------------------------------|----------------------------------|---------------------------|
| Standard                   |                                  |                                  |                           |
| TS71224TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 23 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71230TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 29 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71236TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 35 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71242TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 41 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71248TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 47 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71260TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 59 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71272TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 71 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71278TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 77 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71284TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 83 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71290TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 89 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71296TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 95 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| Change-of-Height – one end |                                  |                                  |                           |
| TS71224TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 23 <sup>1</sup> / <sub>4</sub> " | .350-.400"                |
| TS71230TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 29 <sup>1</sup> / <sub>4</sub> " | .350-.400"                |
| TS71236TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 35 <sup>1</sup> / <sub>4</sub> " | .350-.400"                |
| TS71242TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 41 <sup>1</sup> / <sub>4</sub> " | .350-.400"                |
| TS71248TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 47 <sup>1</sup> / <sub>4</sub> " | .350-.400"                |
| TS71260TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 59 <sup>1</sup> / <sub>4</sub> " | .350-.400"                |
| TS71272TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 71 <sup>1</sup> / <sub>4</sub> " | .350-.400"                |
| TS71278TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 77 <sup>1</sup> / <sub>4</sub> " | .350-.400"                |
| TS71284TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 83 <sup>1</sup> / <sub>4</sub> " | .350-.400"                |
| TS71290TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 89 <sup>1</sup> / <sub>4</sub> " | .350-.400"                |
| TS71296TFG                 | 11 <sup>3</sup> / <sub>4</sub> " | 95 <sup>1</sup> / <sub>4</sub> " | .350-.400"                |

*Tip: Field installed glass should always be tempered. Laminated glass must not be used.*

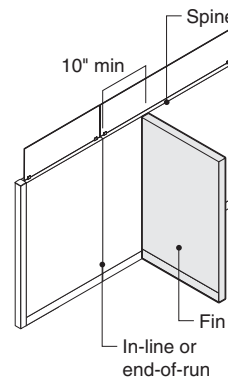


**When using frameless glass on a spine panel with a same height off-module panel connections,** the off-module cannot connect within 10" of an end-of-run or in-line junction connection.

# Top Cap Mounted Storage


**Top cap mounted storage** allows for existing Duo, Elective Elements, and c:scape storage to be mounted on top of Answer panels.

► Specifying, page 388


**c:scape, Duo, and Elective Elements storage** can be mounted on top of Answer panels with thin trim.

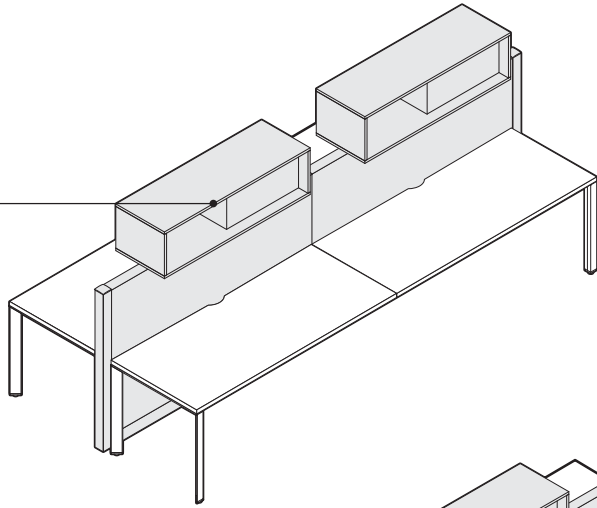

**Top cap mounted storage** can be mounted both on- and off-module.

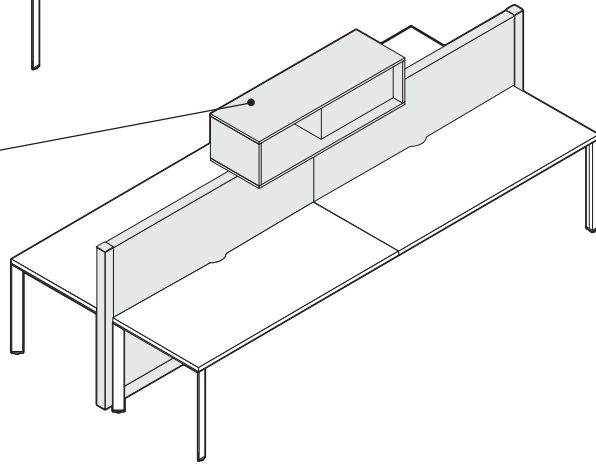


**Top cap mounted storage** can be specified for both center-mounted (shared) and aisleway applications.

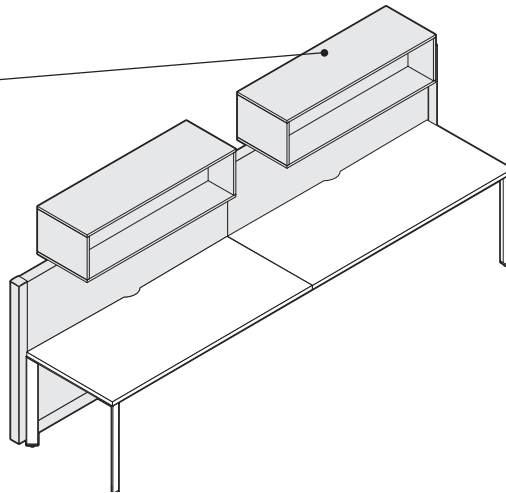

## Product Details


**Top cap mounted storage** utilizes existing c:scape, Duo, and Elective Elements storage and secures it to the horizontal connecting bar using supports below the top cap. Storage units can be mounted both centered (shared) or in an aisleway condition (personal). There are unique brackets for each application. Two brackets are used below the top cap to attach storage units that are center mounted (all sizes) or in aisleway applications where the storage is between 30"W and 48"W. Three brackets are used in aisleway applications where the storage units are 54"W to 72"W.

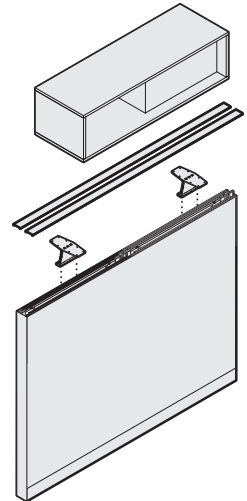

**The top cap mounted storage solution** is comprised of three elements specified separately:

- standard c:scape, Duo, or Elective Elements storage.
- See complete listing for compatible storage, page 64.
- top cap mounted storage bracket.
- top cap and aligner packages.

**Top cap mounted storage** can be used on panels with thin trim only.

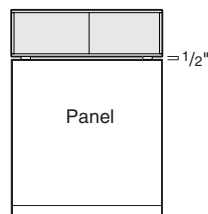

Front View

When installed, there is a 1/2" gap between the top cap and the bottom of the storage unit.

When mounting **Elective Elements personal storage**, a proud back should be specified. While inset is also an option, proud will provide you with a cleaner aesthetic.


When mounting **c:scape storage (personal and slim)**, the bottom of the storage will have extra holes visible that are used when storage is used in a c:scape application.

The maximum storage unit length that can be used in a top cap mounted application is 72". Storage wider than 72" cannot be top cap mounted.


### Application Topics

**Top cap mounted storage** can be placed on top of a thin trim panel only. It can be used with both painted and wood trims. The top beam in the panel must be located in the top position of the frame in order to support top cap mounted storage.

**Top cap mounted storage** can only be used on base panels. It cannot be used on stacking panels.

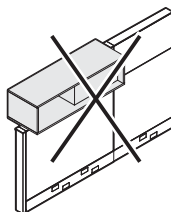

**Top cap mounted storage** can not be used in a change-of-height condition when the storage is located on the lower panel and matches the panel width. It can be used if the storage width is smaller than the panel width.

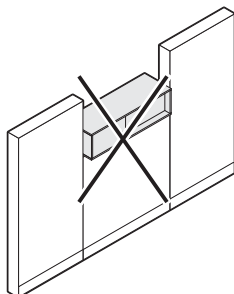


**Top cap mounted storage** will not fit between two change-of-height trims if the storage is the same width as the panel it is mounted to. Storage must be narrower width than panel in this application.


**Top cap and aligner packages** are ordered together as one style number. The aligner package includes two end-of-run aligners, two in-line aligners, and one pair of recessed-to-recessed aligners.



In certain application conditions a **top cap connector aligner (TS7TFGR)** will also need to be specified. These include when storage is used on-module next to a wall-start junction, on an off-module panel, or in a corner change-of-height where the storage is used on the lower panel.

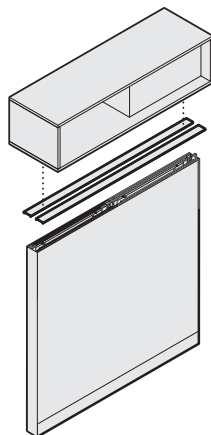


**Top cap mounted storage** has the ability to be mounted on panel module, or in off-module conditions. When the storage matches the panel width, the standard top caps from the horizontal frame package can be omitted as the top cap mounted top caps will be sufficient.

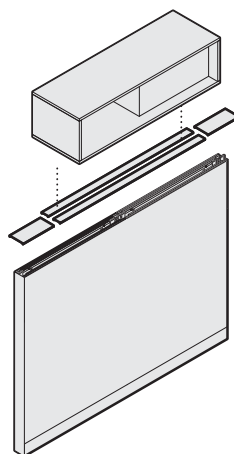

When the **top cap mounted storage does not match the panel width**, standard top caps will need to remain specified with the horizontal frame packages. Center mounted top caps will be used under the storage. The standard top caps will be used to finish off the top of the panel where there is not storage present. The standard top caps will need to be field cut to size.


**Top cap mounted storage** has the ability to span both in-line and corner junctions.

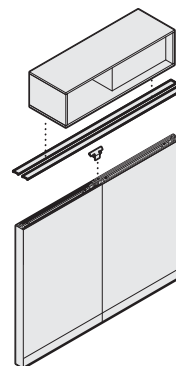

**In-line spanning top cap lightseal** must be specified separately when used in this application. Spanning top cap light seal attaches to the underside of the top cap to fill space between skin lightseals. Specify one for each in-line junction the top cap mounted storage spans over.

**End-of-run and junction cap aligners** manufactured after November 2012 will have features to accommodate top cap mounted storage top caps. Aligners manufactured before November 2012 will not be able to accommodate top cap mounted storage top caps and new aligners will be needed.

**Duo and Elective Elements storage** can be top cap mounted on Answer panels up to 48"H. c:scape storage can be top cap mounted on Answer panels up to 42"H.

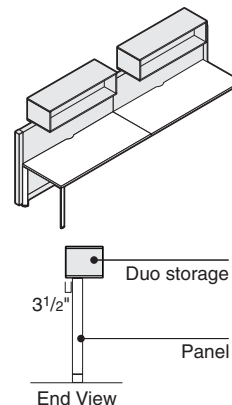

When **top cap mounted storage** is used in an **aisleway application** the back of the storage unit will overhang the back of the panel 3 1/2".

### Connections

**Both center and aisleway conditions** can accept storage units up to 72"W. Center mounted conditions can accept storage up to 25"D. Aisleway mounted applications can accept storage up to 17"D.

**Top cap mounted brackets** should be mounted within 10" from the end of the storage unit. When possible, use the predrilled holes in the Answer horizontal bar. In some applications and in aisleway applications where the storage is larger than 48"W additional holes will need to be drilled into the beam.

**Both center and aisleway mounted storage units** cannot overhang an end of run or corner junction more than 3 1/2" due to ADA guidelines.

### Surface Materials

#### Brackets

- Paint

#### Top cap

- Paint
- Wood veneer

## Top Cap Mounted Storage, continued

**Universal tie plates (TS7TIEPLATE)**

can be used to help align two storage units mounted in-line with no gap between them.

Two tie plates should be used, one near each edge.

When using with Duo or Elective Elements storage, the hardware shipped with the plates can be used.

When used with c:scape storage, pan head self drilling fasteners should be ordered from the service parts catalog (853108629MP).

**Surface Materials****Brackets**

- Paint

**Top cap**

- Paint
- Wood veneer

**Duo, c:scape, and Elective Elements Storage Units That Can Be Used with Answer Top Cap Mounting Brackets****Duo****Duo Shared Tall Storage**

BDTD54

BDTD66

**Duo Individual Tall Storage**

BDTS54

BDTS66

**Duo Slim Storage**

BDS54

BDS66

**c:scape**

*Tip: c:scape personal and shared storage units have multiple holes in the bottom of cabinet that could be visible in same applications to end users.*

**c:scape Personal Tall Storage**

CQMT173015P

CQMT173615P

CQMT174215P

CQMT174815P

CQMT176015P

CQMT176615P

CQMT177215P

**c:scape Shared Tall Storage**

CQMT173015S

CQMT173615S

CQMT174215S

CQMT174815S

CQMT176015S

CQMT176615S

CQMT177215S

**c:scape Personal Slim Storage**

CQMS173007P

CQMS173607P

CQMS174207P

CQMS174807P

CQMS176007P

CQMS176607P

CQMS177207P

**c:scape, continued****c:scape Shared Slim Storage**

CQMS173007S

CQMS173607S

CQMS174207S

CQMS174807S

CQMS176007S

CQMS176607S

CQMS177207S

CQMS246007S

CQMS246607S

CQMS247207S

**Elective Elements**

*Tip: Same Elective Elements storage units have different back options including inset, proud, or tackable.*

**Elective Elements Single-High Overhead with Hinged Door**

E6OS153015H

E6OS153615H

E6OS154215H

E6OS154815H

E6OS155415H

E6OS156015H

E6OS156615H

E6OS157215H

E6OS183015H

E6OS183615H

E6OS184215H

E6OS184815H

E6OS185415H

E6OS186015H

E6OS186615H

E6OS187215H

**Elective Elements, continued****Elective Elements Single-High Overhead with Sliding Door**

E6OS153615S

E6OS154215S

E6OS154815S

E6OS155415S

E6OS156015S

E6OS156615S

E6OS157215S

E6OS183615S

E6OS184215S

E6OS184815S

E6OS185415S

E6OS186015S

E6OS186615S

E6OS187215S

**Elective Elements Single-High Overhead Open**

E6OS153015P

E6OS153615P

E6OS154215P

E6OS154815P

E6OS155415P

E6OS156015P

E6OS156615P

E6OS157215P

E6OS173015P

E6OS173615P

E6OS174215P

E6OS174815P

E6OS175415P

E6OS176015P

E6OS176615P

E6OS177215P

## Duo, c:scape, and Elective Elements Storage Units That Can Be Used with Answer Top Cap-Mounting Brackets, continued

### Elective Elements, continued

#### Elective Elements Personal for FrameOne

E6OA153015P

E6OA153615P

E6OA154215P

E6OA154815P

E6OA156015P

E6OA156615P

E6OA157215P

#### Elective Elements Shared for FrameOne

E6OF153015P

E6OF153615P

E6OF154215P

E6OF154815P

E6OF156015P

E6OF156615P

E6OF157215P

#### Elective Elements Personal for FrameOne with Sliding Door

E6OA153615S

E6OA154215S

E6OA154815S

E6OA156015S

E6OA156615S

E6OA157215S

### Elective Elements, continued

#### Elective Elements Shared for FrameOne with Sliding Door

E6OF153615S

E6OF154215S

E6OF154815S

E6OF156015S

E6OF156615S

E6OF157215S

#### Elective Elements Organizer

E6OO15307

E6OO15367

E6OO15427

E6OO15487

E6OO15547

E6OO15607

E6OO15667

E6OO15727

E6OO17307

E6OO17367

E6OO17427

E6OO17487

E6OO17547

E6OO17607

E6OO17667

E6OO17727

### Elective Elements, continued

#### Elective Elements Personal Organizer for FrameOne

E6SA15307

E6SA15367

E6SA15427

E6SA15487

E6SA15607

E6SA15667

E6SA15727

#### Elective Elements Shared Organizer for FrameOne

E6SF15307

E6SF15367

E6SF15427

E6SF15487

E6SF15607

E6SF15667

E6SF15727

# Panel Packages—Thin Trim

**Panel packages** include two monolithic fabric skins and a horizontal frame package. Answer panels always share a junction with adjacent panels. Order the style of junction you need separately.

► Specifying, page 390

**Top cap** snaps onto top of panel skins. Top caps are available in Thin trim. Change-of-height top caps, wood veneer top caps, and omit top caps are also available as options on Thin trim.

**Power** can be field-installed every 12" vertically using powerkits.

**Junctions**, ordered separately, are always shared by adjacent panels. They are available for in-line, L, T, V, X, Y, and end-of-run configurations. Wall-start junctions and off-module connector brackets are also available.

**Optional cable tray** can be used for additional support of cables. Additional cable trays can be installed and arranged at various heights within the frame for communications access and cable routing.

**Skins** attach to frame without tools and can be removed and repositioned easily. They are not dedicated to a specific location.

**Power and communication** can be accessed by cutting skin in the field. Templates for cutting both receptacle and communication cutouts are available from Service Parts (T500940SR). Filler to close unwanted cutout in a skin is available from Service Parts (TS7STFSR).

**Powerkits** include powerblocks attached to a supporting power tray. ► Page 162

**Base trim or open base trim styles** are available on panels with Thin trim as standard.

**Base cover** has knockouts to accommodate power and communication terminations. Top knockout is for power, bottom knockout is for communication. Filler to close unwanted knockouts is available from Service Parts (TS7BTFSR).

**Horizontal connecting bars** lock into the vertical junctions at the top and the bottom location to provide structural stability for the panels.

**Optional base cable tray** can be used to support lay-in of cables.


## Actual Dimensions

|        |                                                                                                                                                                                                                                                                                                    |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Depth  | 3"                                                                                                                                                                                                                                                                                                 |
| Width  | 17 <sup>51</sup> / <sub>64</sub> ", 23 <sup>51</sup> / <sub>64</sub> ", 29 <sup>51</sup> / <sub>64</sub> ", 35 <sup>51</sup> / <sub>64</sub> ", 41 <sup>51</sup> / <sub>64</sub> ", 47 <sup>51</sup> / <sub>64</sub> ", 59 <sup>51</sup> / <sub>64</sub> ", and 71 <sup>51</sup> / <sub>64</sub> " |
| Height | 41 <sup>3</sup> / <sub>4</sub> ", 47 <sup>15</sup> / <sub>16</sub> ", 54 <sup>35</sup> / <sub>64</sub> ", and 66 <sup>15</sup> / <sub>32</sub> "                                                                                                                                                   |

**Order panel packages** to create common panel configurations quickly and easily.


1. **Specify a panel package** of the width and height you need in thin top caps.

**Package includes . . .**

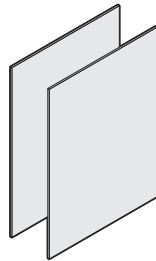

Fabric skins  
for both sides  
of panel


**Two skins**

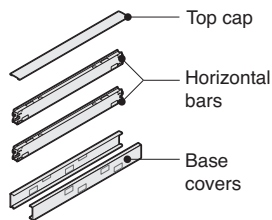


**Horizontal frame package**

*Note: Cable trays and base cable trays are optional.*


2. **Order vertical junctions** to complete panel packages and to join panels in in-line, L, T, V, X, and Y configurations and to terminate an end-of-run. Junctions are available with trim.

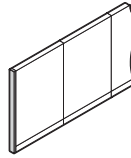


End-of-run




In-line




L




T



X

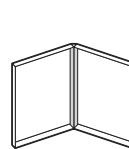


V

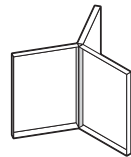

Y

3. **Specify powerkits where you will need power.** You can specify a powerkit as an option on the panel package, or you can order powerkits separately.

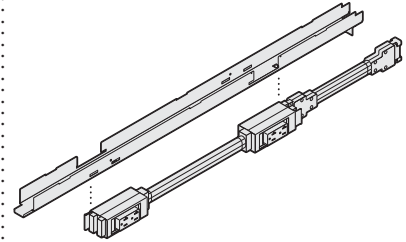



---

# Understanding Panels—Square and Oval Trim



## Statement of Line

**70**



## Product Details

|                                                           |           |
|-----------------------------------------------------------|-----------|
| Answer Panel Overview—Square and Oval Trim                | <b>74</b> |
| Panel Buildups                                            | <b>75</b> |
| Base Junctions—Square and Oval Trim                       | <b>76</b> |
| Change-of-Height—Square and Oval Trim                     | <b>80</b> |
| Off-Module Panel Connector—Square and Oval Trim           | <b>82</b> |
| Stacking Junctions—Square and Oval Trim                   | <b>84</b> |
| Base Horizontal Frame Packages—Square and Oval Trim       | <b>88</b> |
| Stacking Horizontal Frame Packages—Square and Oval Trim   | <b>92</b> |
| Frameless Glass Screens—Square Trim Only                  | <b>94</b> |
| 12"H Panel Top Screens For Use on Panels with Square Trim | <b>96</b> |
| 12"H Panel Top Screens For Use on Panels with Oval Trim   | <b>97</b> |
| Panel Packages—Square and Oval Trim                       | <b>98</b> |

## Stability Guidelines

**124**


# Statement of Line



Understanding  
 ▶ Page 76  
 Specifying  
 ▶ Pages 396-404

## Base Junctions—Square and Oval Trim


|      | In-Line Base Junctions | L-Base Junctions | T-Base Junctions | X-Base Junctions | End-of-Run Base Junctions | V-Base Junctions | Y-Base Junctions | Wall-Start Junctions |
|------|------------------------|------------------|------------------|------------------|---------------------------|------------------|------------------|----------------------|
| 30"H | ●                      | ●                | ●                | ●                | ●                         | ●                | ●                |                      |
| 42"H | ●                      | ●                | ●                | ●                | ●                         | ●                | ●                | ●                    |
| 48"H | ●                      | ●                | ●                | ●                | ●                         | ●                | ●                | ●                    |
| 54"H | ●                      | ●                | ●                | ●                | ●                         | ●                | ●                | ●                    |
| 66"H | ●                      | ●                | ●                | ●                | ●                         | ●                | ●                | ●                    |
| 78"H | ●                      | ●                | ●                | ●                | ●                         | ●                | ●                | ●                    |

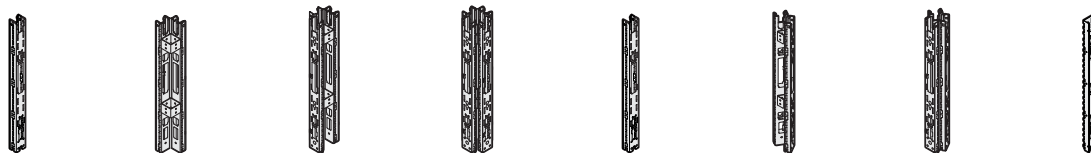

Understanding  
 ▶ Page 84  
 Specifying  
 ▶ Pages 407-411

## Stacking Junctions—Square and Oval Trim


|      | Stacking In-Line Junctions | Stacking L Junctions | Stacking T Junctions | Stacking X Junctions | Stacking End-of-Run Junctions | Stacking V Junctions | Stacking Y Junctions | Wall-Start Junctions |
|------|----------------------------|----------------------|----------------------|----------------------|-------------------------------|----------------------|----------------------|----------------------|
| 12"H | ●                          | ●                    | ●                    | ●                    | ●                             | ●                    | ●                    | ●                    |
| 18"H | ●                          | ●                    | ●                    | ●                    | ●                             | ●                    | ●                    | ●                    |
| 24"H | ●                          | ●                    | ●                    | ●                    | ●                             | ●                    | ●                    | ●                    |

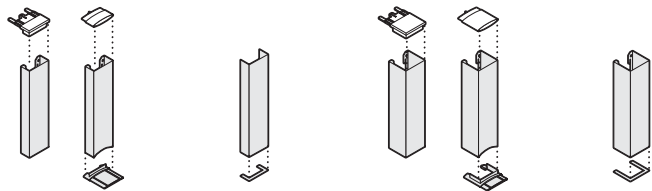

Understanding  
▶ Page 80  
Specifying  
▶ Pages 418-420

Change-of-Height Trim—Square and Oval Trim


|      | Standard Slim Profile | Stacking Slim Profile | Standard Cable Routing | Stacking Cable Routing |
|------|-----------------------|-----------------------|------------------------|------------------------|
| 12"H | ●                     | ●                     | ●                      | ●                      |
| 18"H | ●                     | ●                     | ●                      | ●                      |
| 24"H | ●                     | ●                     | ●                      | ●                      |
| 30"H | ●                     | ●                     | ●                      | ●                      |
| 36"H | ●                     | ●                     | ●                      | ●                      |

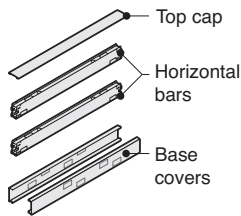

Understanding  
▶ Page 88  
Specifying  
▶ Pages 422-424

Base Horizontal Frame Packages—Square and Oval Trim

|      |      |      |      |      |      |      |      |
|------|------|------|------|------|------|------|------|
| 18"W | 24"W | 30"W | 36"W | 42"W | 48"W | 60"W | 72"W |
| ●    | ●    | ●    | ●    | ●    | ●    | ●    | ●    |




Understanding  
▶ Page 92  
Specifying  
▶ Page 425

Stacking Horizontal Frame Packages—Square and Oval Trim

|      |      |      |      |      |      |      |      |
|------|------|------|------|------|------|------|------|
| 18"W | 24"W | 30"W | 36"W | 42"W | 48"W | 60"W | 72"W |
| ●    | ●    | ●    | ●    | ●    | ●    | ●    | ●    |

## Panels—Square and Oval Trim


Statement of Line, continued

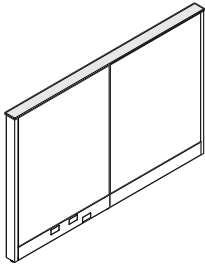

Understanding  
 ▶ Page 89  
 Specifying  
 ▶ Page 426

## Spanning Top Caps—Square Trim

| 36"W | 42"W | 48"W | 60"W | 72"W | 78"W | 84"W | 90"W | 96"W |
|------|------|------|------|------|------|------|------|------|
| •    | •    | •    | •    | •    | •    | •    | •    | •    |

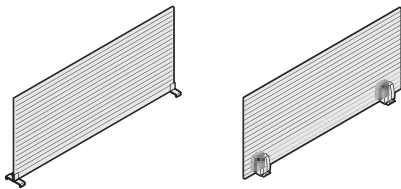


Understanding  
 ▶ Page 96  
 Specifying  
 ▶ Page 428


## Panel Top Screens—Square and Oval Trim

|      | 24"W* | 30"W | 36"W | 42"W | 48"W |
|------|-------|------|------|------|------|
| 12"H | •     | •    | •    | •    | •    |

\*Tip: 24"W is only available for panel top screens with square trim.



Horizontal frame package

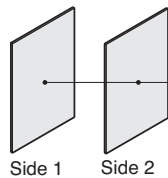


Performance Tackable Acoustical Skins

Understanding  
 ▶ Page 98  
 Specifying  
 ▶ Pages 430-433

## Performance Tackable Acoustical Panel Packages—Square and Oval Trim


|      | 18"W | 24"W | 30"W | 36"W | 42"W | 48"W | 60"W | 72"W |
|------|------|------|------|------|------|------|------|------|
| 42"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 48"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 54"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 66"H | •    | •    | •    | •    | •    | •    | •    | •    |

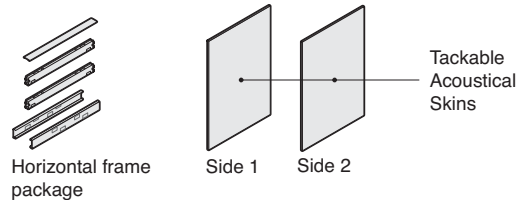

Understanding  
▶ Page 98  
Specifying  
▶ Pages 430-433

Tackable Acoustical Panel Packages—Square and Oval Trim

|      | 18"W | 24"W | 30"W | 36"W | 42"W | 48"W | 60"W | 72"W |
|------|------|------|------|------|------|------|------|------|
| 42"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 48"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 54"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 66"H | •    | •    | •    | •    | •    | •    | •    | •    |

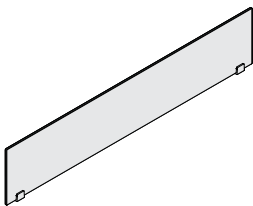

Understanding  
▶ Page 94  
Specifying  
▶ Page 427

Frameless Glass Screens—Square Trim Only


|      | 24"W | 30"W | 36"W | 42"W | 48"W | 60"W | 72"W | 78"W | 84"W | 90"W | 96"W |
|------|------|------|------|------|------|------|------|------|------|------|------|
| 12"H | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    |

# Answer Panel Overview—Square and Oval Trim

**Panel buildups** allow you to create unique configurations by mixing surface materials and colors on segmented panels. Order skins and horizontal frame packages separately.



**Panel frame** is made up of two major elements—vertical base junctions and base horizontal connecting bars. Vertical junctions are ordered separately.

**Stacking components** can be used on both panel buildups and panel packages.

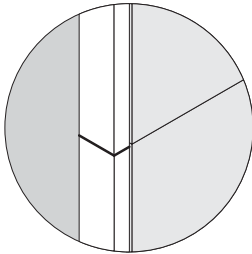

**Standard change-of-height trim** has either a rounded bottom edge to fit the curve of oval panel top caps or a straight edge to fit square panel top caps.

► Page 419

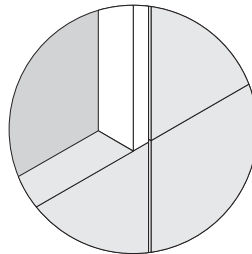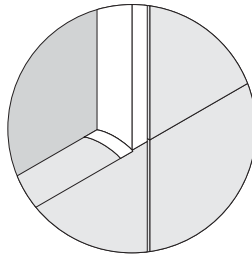

**Leveling glides** adjust to install panels on uneven floors. Range is 2<sup>3</sup>/<sub>4</sub>".

**Panel packages** are used to create common configurations quickly and easily. Packages include a horizontal frame package and skins for both sides of the panel.

**Stacking change-of-height trim** has a straight bottom edge to fit on top of standard change-of-height trim.

► Page 420

**Stacking horizontal frame package** must be used with stacking junctions.

► Page 425

## Stacking junctions

are always shared by adjacent panels and can be used in panel buildups and panel packages. They are available for in-line, L, T, V, X, Y, and end-of-run configurations.

► Pages 407–411

**Skins** attach to frame without tools and can be removed and repositioned easily.

► Pages 107–117

**Base junctions**, are always shared by adjacent panels. They are available for in-line, L, T, V, X, Y, and end-of-run configurations. Wall-start junctions and off-module connectors are also available.

► Pages 397–406

**Base horizontal connecting bars** lock into the vertical junctions at the top and the bottom location of base junction to provide structural stability for the panels.

► Page 424

**Powerkits** include power-blocks attached to a supporting power tray.

► Page 162

**Alternate powerkit harness routing** can be accommodated through the junction opening. In in-line applications installed on uneven floors, route harness through junction opening to prevent harness from being exposed.

## Actual Dimensions


Height 29<sup>3</sup>/<sub>8</sub>", 41<sup>3</sup>/<sub>4</sub>", 47<sup>15</sup>/<sub>16</sub>", 54<sup>1</sup>/<sub>8</sub>", 66<sup>15</sup>/<sub>32</sub>", and 78<sup>27</sup>/<sub>32</sub>"

Note: Height is minimum from floor to top of top caps. Leveling glides can extend 2<sup>3</sup>/<sub>4</sub>".


# Panel Buildups

**Order panel components separately**  
to create unique configurations.

**1. Begin by planning your frames.** Junctions determine height and horizontal connecting bars determine width.

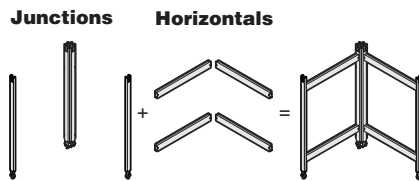


**1a. Corner junctions** can easily be reconfigured by adding or removing a junction post (available on junctions shipped on or after October 10, 2011).

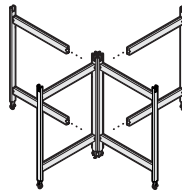


**2. Order skins for both sides of panel.**

*Exception: Windows accommodate both sides of the panel.*


**Performance tackable acoustical fabric-covered skins**

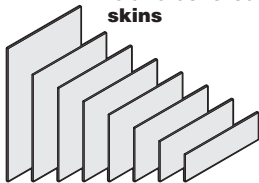


**Tackable acoustical fabric-covered skins**

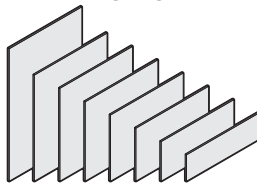


**Steel skins (12"H, 18"H, and 24"H have ribbed and perforated options)**

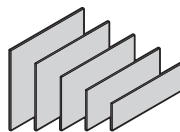

**Laminate skins**


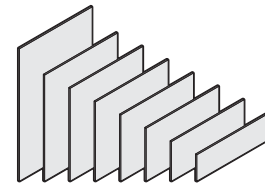


**Wood skins**

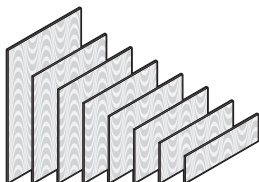

*Tip: Wood skin sets are available for 42", 48", 54", and 66" panel heights.*


**Markerboard skins**

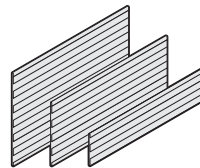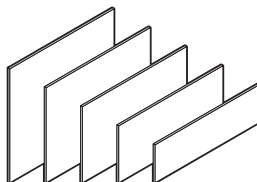


**Slatwall**



**Windows**

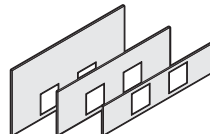

**Technology skins**

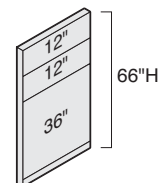


**When planning skin segments,** add skin heights together and add an additional 6" for total height.

Skins = 12" + 12" + 36" = 60"  
Trim = 6"  
Total = 66"H

**Answer allows a wide variety of skin arrangements** to meet specific functional and aesthetic needs. Skins are not dedicated to a specific location and can be used anywhere on the face of the panel.

**3. Specify powerkits where you will need power.**

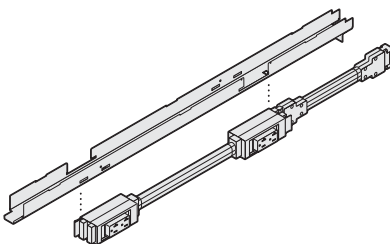

# Base Junctions—Square and Oval Trim

**Base junctions** complete the structure of panel packages and panel buildups. Answer panels always share a junction with adjacent panels. You order the style of junction you need separately.

► Specifying square and oval, pages 396–404

**Corner junction cap aligners** ensure correct fit with adjacent panel top caps.

**Opening in top of junction** allows lay-in cable routing beneath top caps.

**Slots in junction** accept the panel's horizontal bars every 12", cable trays every 6", and powerkits every 12" vertically.

**Slotted channels in junction** accommodate worksurface supports and overhead storage components at 1" increments.

**Trim** is included with L, T, V, and end-of-run junctions to finish exposed surfaces. Trim is standard with paint and available with fabric wrapped or wood veneer options.

**Large openings** are used to route power through an L, T, X, V, or Y base junction.

**Leveling glides** adjust to install panels on uneven floors. Range is 2¾".


**Junction cap** is included with junction when needed. Caps are available in two styles: square or oval.

**Skins** attach to junction with concealed hardware.


**Lay-in cable routing** is accommodated in base area.

## Product Details


**Answer** is available with three styles of top trim - thin, square, and oval. Base junctions are specified with desired style. Styles can not be mixed between adjacent panels.

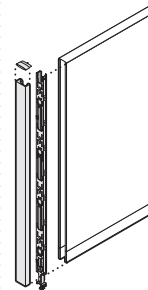

**End-of-run base junction** includes junction, vertical trim, and junction cap. Select square or oval style trim. End-of-run trim adds 1" to footprint.

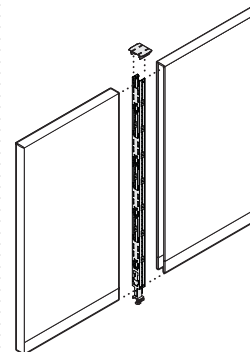

**In-line base junction** includes junction and plastic top cap aligner. Select square or oval style trim.

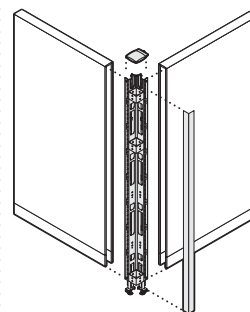


**L-base junction** includes junction, vertical trim, junction cap, and plastic top cap aligner. Select square or oval style trim.


## Actual Dimensions

|        |                                                                                                                                                                                    |
|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Depth  | 3"                                                                                                                                                                                 |
| Height | 28 <sup>7</sup> / <sub>16</sub> "* 40 <sup>3</sup> / <sub>4</sub> ", 47", 53 <sup>1</sup> / <sub>8</sub> ", 65 <sup>1</sup> / <sub>2</sub> ", and 77 <sup>3</sup> / <sub>8</sub> " |


\*Note: Wall-start junctions are not available 28<sup>7</sup>/<sub>16</sub>".

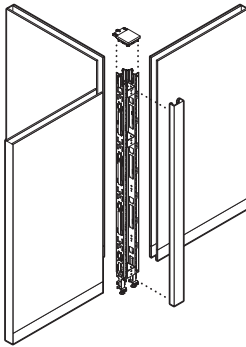


**T-base junction** includes junction, vertical trim, junction cap, and two plastic top cap aligners. Select square or oval style trim.

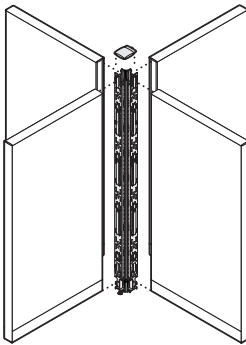


**X-base junction** includes junction, junction cap, and three plastic top cap aligners. Select square or oval style trim.

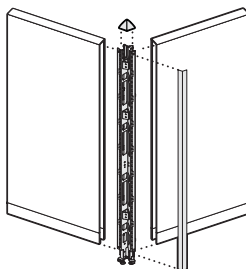


**V-base junction** includes junction, vertical trim, junction cap, and plastic top cap aligner. Select square or oval style trim.

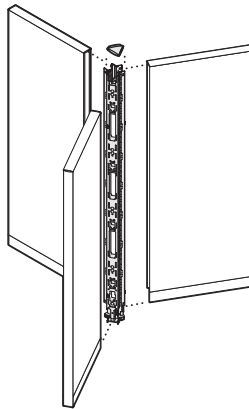


**Y-base junction** includes junction, junction cap, and two plastic top cap aligners. Select square or oval style trim.

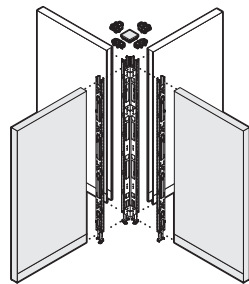

**Posts** can be added or removed from corner junctions to change from one corner to another.

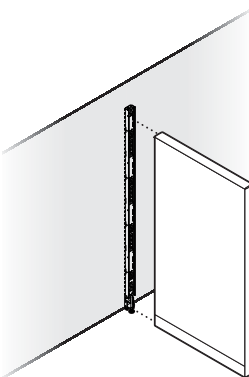


**Wall-start junction** secures to the stud in a structural wall or drywall fasteners can be used. Vertical trim is not needed. Also used in off-module applications. Wall-start junction does not add any dimension to panel run.

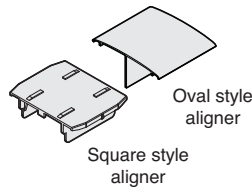


**An in-line top cap aligner** is included with in-line junctions. Select square or oval style.


## Connections

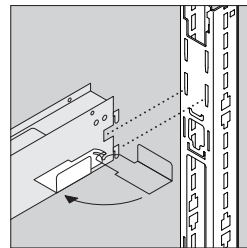


**Quick lock** on both ends of the panel's horizontal connecting bars engage the junction in a tight structural connection.

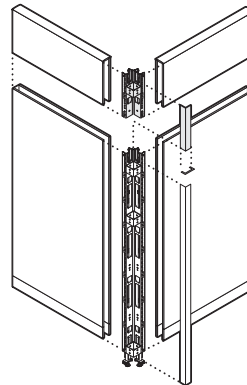

**Base junctions** can accept a stacking junction of the same type only. *Example: An L-base junction will accept an L-stacking junction.*

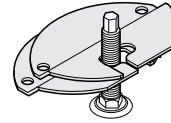

**Floor anchor brackets** are available to secure junctions to the floor to prevent panel movement. Brackets are intended for use in seismic zones and may require additional code approvals.

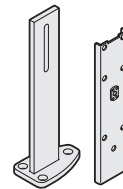


**Junction stabilizer bracket** can be used to add rigidity to a panel run or when using a Universal sliding door. Bracket must be bolted to a concrete floor. For junctions manufactured before October 10, 2011 use TS7SB. For junctions manufactured on or after October 10, 2011 use TS7SBNJ.


**Bracket foot** is visible on one side of panel when installed.

**Junction stabilizer bracket** blocks power routing in the panel base and just above the base areas. The bracket covers the slots on the junction where the powerkit connects in these two zones. It also blocks the ability for a powerkit harness, pass-through powerkit, or modular harness to route in the base area from an adjacent panel.

**Junction stabilizer bracket** also blocks lay in of cables in base area of panel.

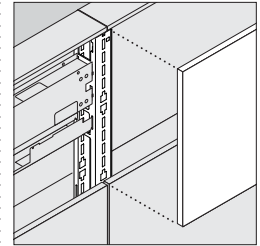


**Skins** extend onto junction and meet skin of adjacent panel. The slotted channel of the junction is accessible between these two skins.

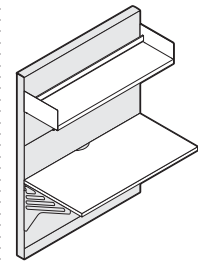


**Panels** can support work-surfaces, shelves, and bins.

## Wiring and Cabling

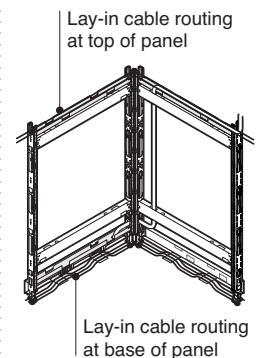


**Lay-in cable routing** is accommodated in the top of junctions. Lay-in cable and power routing is accommodated in base area.


## Base Junctions—Square and Oval Trim, continued

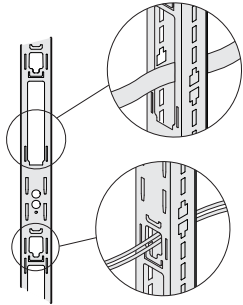


**As an alternative to lay-in cable routing,** horizontal routing of power and cables can be accommodated through openings in junctions.

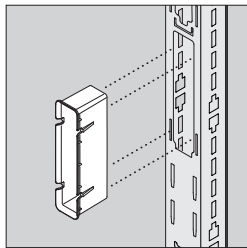

**Junction tall sleeves** can be ordered to cover the exposed metal edges in the large cable routing opening of junctions. Tall junction sleeve can only be used on junctions manufactured on or after October 10, 2011.

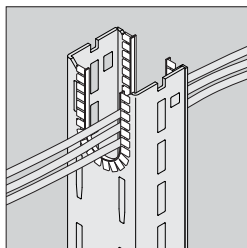

**Lay-in junction cable sleeves** can be added in the field to cover the exposed metal edges in lay-in cable space.

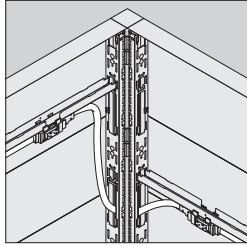

**Modular harnesses** that are 43" or 80" are available to change the height at which you are routing power kits or to route power from the panel base to different heights.

### Surface Materials

#### Base junction

- Black paint
- Tip: Junction is hidden when properly installed.*

#### Junction cap—Square

- Paint
- Wood

#### Junction cap—Oval

- Plastic
- Wood

#### Vertical trim

- Paint (standard)
- Fabric (option)
- Wood (option only if wood junction cap is specified.)

*Tip: Answer panel wood trims are only available with quarter-cut finishes with the exception of maple finishes. Maple on wood trims is only available with flat-cut finishes. For ordering simplicity, both flat-cut and quarter-cut finishes can be specified on panel trims. However, for all finishes except maple, if a flat-cut finish is selected, the trims will have the coordinating quarter-cut finish. For maple finishes, if quarter-cut is selected, the trims will have the coordinating flat-cut finish. Blending panel trims with other wood products that have flat-cut finishes may be visually acceptable for most applications. If a more exact match is desired for non-maple finishes, please specify quarter-cut finishes for the entire project. If a more exact match is desired for maple finishes, please specify flat-cut finishes for the entire project.*

**Fabric application** is standard in the warp horizontal direction. Warp vertical direction is available as an option.

► See *Specification Guidelines for Directional Fabrics*, page 717, for more information.

### Application Topics

**Stacking junctions** can be used with any height base junction.

#### Stability Guidelines

for application rules.

► See page 124



**Carpet gripper glide caps** may be added to panel glides to help hold panel in place (used only on junctions manufactured on or after October 10, 2011).




# Change-of-Height—Square and Oval Trim


**Change-of-height trim** is available for base panels and stacking panels. It is used in in-line and corner applications.

► Specifying square and oval, pages 419–420


**Stacking change-of-height trim** has a straight bottom edge to fit on top of standard change-of-height trim.

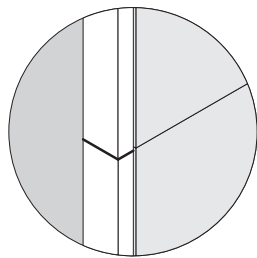

**Oval standard change-of-height trim** has a rounded bottom edge to fit the curve of top caps.

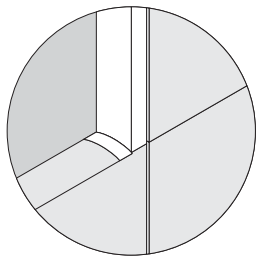

**Square standard change-of-height trim** has a square bottom edge to fit square top caps.

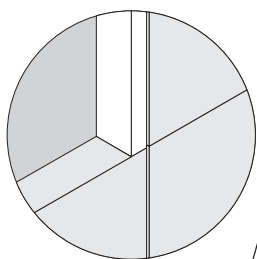


**Top cap on lower panel** must be change-of-height. Remember to specify the change-of-height top cap option on the lower panel for either square or oval trim applications.

**Junction cap** is included with standard change-of-height trim. Cap is available in two styles - square and oval.

**Plastic aligner** is included with stacking change-of-height trim.

**Top cap from base panel** is used to trim the top of the stacked panel.

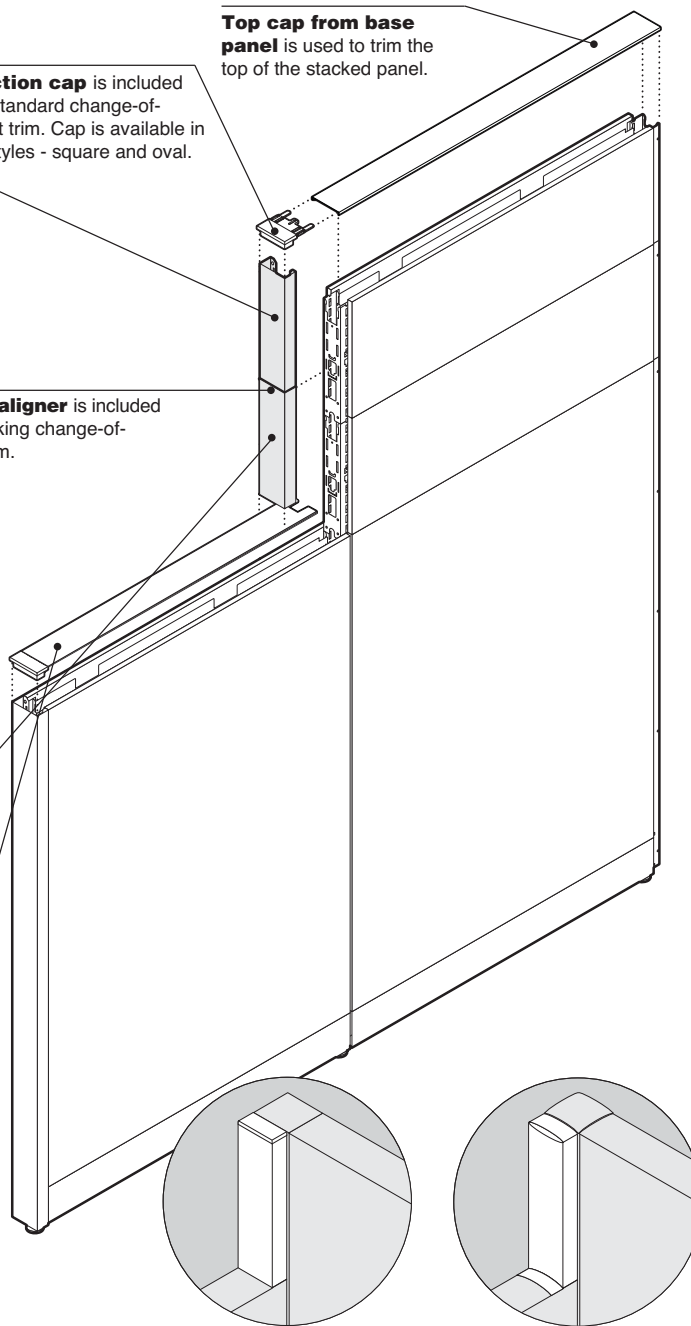

**L-junction application square trim**

**L-junction application oval trim**

## Product Details



**In-line application**



**Corner application**

**Square standard slim trim** includes junction cap. In-line or corner application must be specified. Available in 12"H, 18"H, 24"H, 30"H, and 36"H.



**In-line application**



**Corner application**


**Oval standard slim trim** includes junction cap and top cap filler. Plastic filler is not the same filler that ships with cable-routing trim. In-line or corner application must be specified. Available in 12"H, 18"H, 24"H, 30"H, and 36"H.




**Stacking slim trim** includes plastic aligner and works with both square and oval trim styles. Available in 12"H, 18"H, and 24"H.

## Actual Dimensions

|        | Standard slim profile                                                                                                                                   | Stacking slim profile                                                             | Standard cable-routing                                                                                                                                  | Stacking cable-routing                                                            |
|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| Depth  | 3"                                                                                                                                                      | 3"                                                                                | 3"                                                                                                                                                      | 3"                                                                                |
| Width  | 1 1/8"                                                                                                                                                  | 1 1/8"                                                                            | 2 1/4"                                                                                                                                                  | 2 1/4"                                                                            |
| Height | 12 <sup>5</sup> / <sub>32</sub> ", 18 <sup>5</sup> / <sub>16</sub> ", 24 1/2", 30 <sup>11</sup> / <sub>16</sub> ", and 36 <sup>7</sup> / <sub>8</sub> " | 12 <sup>5</sup> / <sub>32</sub> ", 18 <sup>5</sup> / <sub>16</sub> ", and 24 1/2" | 12 <sup>5</sup> / <sub>32</sub> ", 18 <sup>5</sup> / <sub>16</sub> ", 24 1/2", 30 <sup>11</sup> / <sub>16</sub> ", and 36 <sup>7</sup> / <sub>8</sub> " | 12 <sup>5</sup> / <sub>32</sub> ", 18 <sup>5</sup> / <sub>16</sub> ", and 24 1/2" |

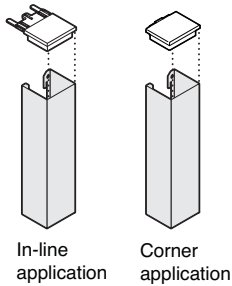

**Square standard cable-routing trim** includes junction cap. In-line or corner application must be specified. Available in 12"H, 18"H, 24"H, 30"H, and 36"H.

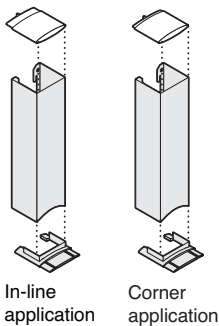


**Oval standard cable-routing trim** includes junction cap and top cap filler. Plastic filler is not the same filler that ships with slim trim. In-line or corner application must be specified. Available in 12"H, 18"H, 24"H, 30"H, and 36"H.




**Stacking cable-routing trim** includes plastic aligner and works with both square and oval trim styles. Available in 12"H, 18"H, and 24"H.

**36"H standard change-of-height trim** is the tallest trim available. If the area you need to trim is taller than 36"H, use stacking change-of-height trim.

## Wiring & Cabling

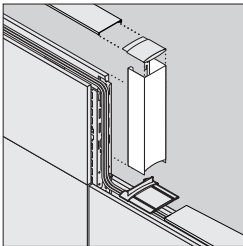

**Oval cable-routing trim** allows lay-in cable routing in change-of-height applications.

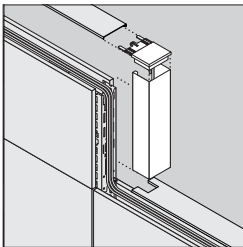

**Square cable-routing trim** allows lay-in cable routing in change-of-height applications.

## Surface Materials

### Change-of-height trim

- Paint
- Fabric (option)
- Wood veneer (option)

**Fabric application** is standard in the warp horizontal direction. Warp vertical direction is available as an option.

► See *Specification Guidelines for Directional Fabrics*, page 717, for more information.

### Square junction cap

- Paint
- Wood

### Oval junction cap and filler

- Plastic
- Wood

### Aligner



- Black plastic only

## Application Topics


**Change-of-height top cap option** must be specified on the lower panel.

**Square trim top caps** have a notch in one or both ends to accommodate change-of-height applications.


**Oval trim top caps** are shortened on one or both ends to accommodate change-of-height applications.

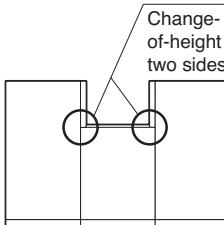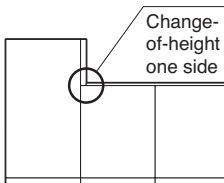


**Specify** change-of-height top caps at one end unless the panel is adjacent to taller panels on both sides. Then specify a top cap change-of-height on both ends.

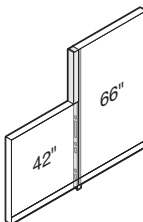



**Specify** the tallest height junction to connect your panels. A 66"H junction would be shared between these panels.

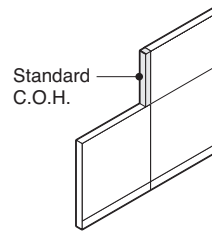

**When stacking only one panel on your base panel with square or oval trim**, always use standard change-of-height trim.

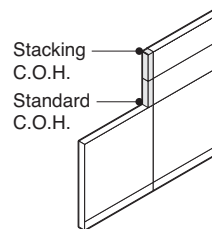

**When stacking more than one panel on your base panel**, use standard change-of-height trim on the first tier. Only the second tier requires stacking change-of-height trim.

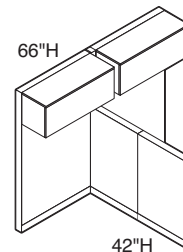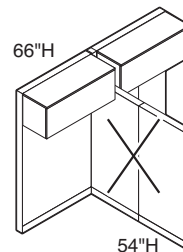


**Change-of-height fin wall with wood top trim** must be at least 24" lower than the spine wall when using an Answer or Universal overhead bin on both sides of the fin wall.

# Off-Module Panel Connector—Square and Oval Trim

**Off-module panel connectors** allow a fin wall to be attached off-module to a spine wall in 1" increments.

► Specifying, page 406

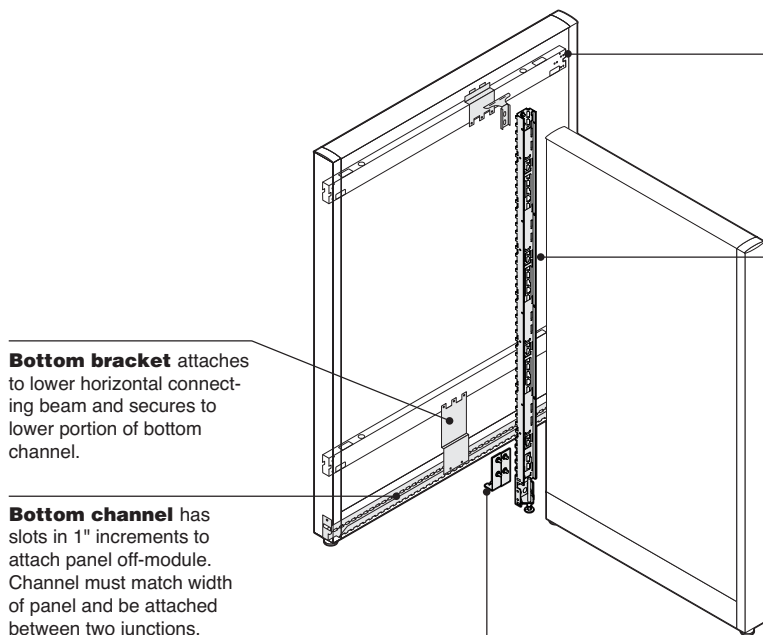

**Top brackets** attach to top horizontal connecting beam and secure top of the wall-start junction. If fin wall is 12", 18", or 24" shorter than spine wall, the top horizontal connecting bar can be lowered to attach brackets.


**Wall-start junction** must be ordered separately.

**Bottom bracket** attaches to lower horizontal connecting beam and secures to lower portion of bottom channel.

**Bottom channel** has slots in 1" increments to attach panel off-module. Channel must match width of panel and be attached between two junctions.

**Bottom bracket for wall-start junction** attaches the junction and bottom channel to secure the lower portion of the wall-start junction.


## Product Details

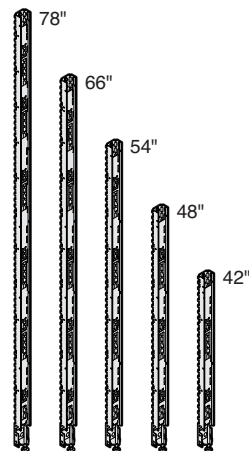

**Wall-start junctions** connect to the off-module panel connectors to start a panel run off from the spine. Available in 42"H, 48"H, 54"H, 66"H, and 78"H. Wall-start junction must match the height of the fin wall. Wall-start junctions are ordered separately.

## Connections

**Off-module fin wall** must always be the same height, or shorter than the spine wall.

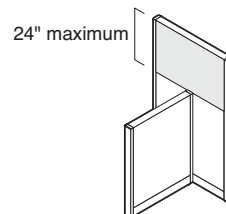


**When fin wall** is more than 24" shorter than the spine wall, an additional horizontal beam must be added to the spine wall at the same height as the fin wall. Order a stacking horizontal frame kit.

**Spine wall skins** must be segmented with a seam matching the height of the shorter fin wall. This allows access to the top bracket and the spine wall horizontal beam.

## Actual Dimensions


Width 22½", 34½", 40½", 46½", 58½", and 70½"




**When stacking on the fin panel,** the spine wall skins must be segmented with a seam matching the height of the fin base panel.

**When stacking wall-start junctions in an off-module application,** the off-module panel connector connects to the base wall-start junction.

**Two off-module panels** can be connected back to back at the same location.

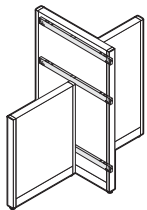


**When connecting two off-module fins at different heights on either side of the spine panel,** an additional horizontal beam must be ordered and installed at the same height of the shorter fin panel.

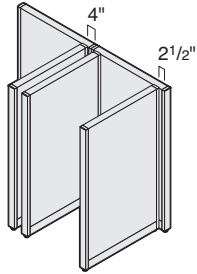

**An off-module fin wall** cannot connect flush to the end of a panel in the spine wall. The closest connection point will leave a 3" tail on the spine including the end-of-run trim.

**An off-module fin wall** cannot attach at a junction in the spine wall. There is a 2" area of dead space on either side of the junction rendering a total of 4" dead space.



**An off-module fin wall** cannot be installed over a window that is located at the top of a spine panel.

## Wiring & Cabling

**Wiring and cabling components** cannot be routed internally from a spine wall to an off-module fin wall without cutting openings in the spine wall skin.

*Tip: It is recommended that you route wiring and cabling through the spine wall.*

**Internode power components** should be used to bring power from the spine wall to the workstation.


► See *Context Specification Guide*.

## Surface Materials

### Off-module bracket

- Black paint

*Tip: Bracket is hidden when properly installed.*

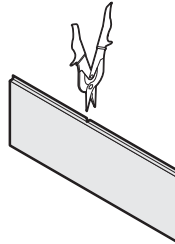

**Off-module installation** requires field modification of the light seal on the top skin. Surface covering is not affected.

## Application Topics

### Stability Guidelines for Application Rules

► Page 124


### Stacking junctions

can be used with any height base junction.

**Bins, shelves, and workspaces** cannot be attached off-module.

**Off-module panel connector** works with both square and oval style trims. Top cap filler included in package is only used with oval style trims. Square style trims do not require a top cap filler.

**When using a wall-start junction** manufactured before October 10, 2011 with an off module panel connector manufactured on or after October 10, 2011 the "old" bottom bracket must be used. It can be ordered from Service Parts, part number T500938MP. If using an old off-module panel connector manufactured before October 10, 2011 with a wall-start junction manufactured on or after October 10, 2011 the bottom bracket included with the off module panel connector should be used.

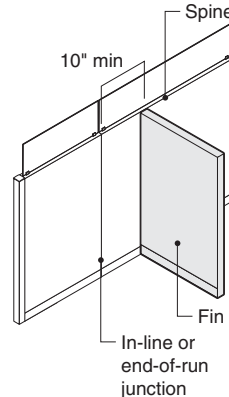

**When using frameless glass on a spine panel with a same height off-module panel connections,** the off-module cannot connect within 10" of an end of run or in-line junction connection.

# Stacking Junctions—Square and Oval Trim

## Stacking junctions

allow you to adjust the panel heights within a workstation.  
► Specifying square and oval, pages 407–411

**Junction top cap** is standard on base panel junctions. Use the same top cap in stacking configurations.


**Stacking junctions** are always shared by adjacent panels. They are available for in-line, L, T, V, X, Y, end-of-run, and wall-start configurations.

**Stacking horizontal frame package**, specified separately, must be used with stacking junctions. Each package includes one horizontal connecting bar.

**Stacking junction trim** is included with L, T, V, and end-of-run stacking junctions. Stacking end-of-run trim adds 1" to footprint.

**Plastic aligner** is included with L, T, V, and end-of-run stacking junctions.

**Fork connectors** are included with stacking junction for proper connection to the base panel.

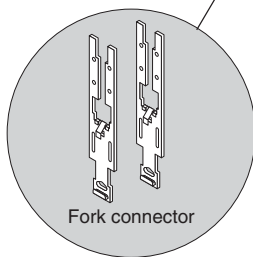

**Top cap and junction cap from base panel** are used to trim the top of the panel.

**Slots in stacking junctions** are identical to base junctions to accept horizontal connecting bars, power-kits, and cable trays.


**Cables** can be laid into top of base panel. During initial installation, it is important to keep cabling loose so it can be temporarily moved aside to install stacking fork connector at a later date.

**Base panel** must always have two horizontal connecting bars. The bars must be in place prior to adding fork connectors into the junction.


## Product Details

**All existing base panels** can accept a stacking junction.


**Aligner** is included with fabric-wrapped vertical trim but may not be needed depending on the thickness of the fabric.

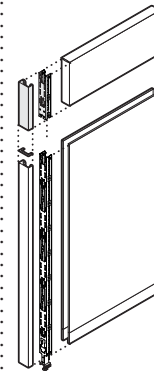

**End-of-run stacking junction** includes junction, fork connectors, vertical trim, and plastic trim aligner. End-of-run stacking trim adds 1" to footprint.

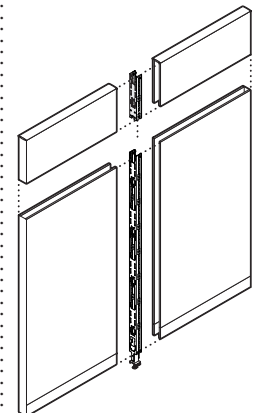


**In-line stacking junction** includes junction and fork connectors.

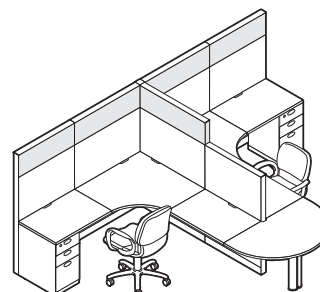


## Actual Dimensions


|        |                                                                                                          |
|--------|----------------------------------------------------------------------------------------------------------|
| Depth  | 3"                                                                                                       |
| Height | 12 <sup>3</sup> / <sub>8</sub> ", 18 <sup>1</sup> / <sub>2</sub> ", and 24 <sup>3</sup> / <sub>4</sub> " |

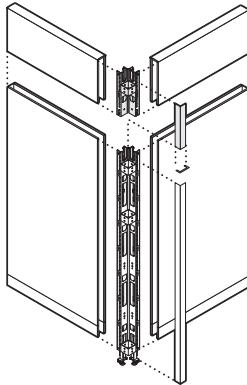


**L-stacking junction**  
includes junction, fork connectors, vertical trim, and plastic trim aligners.

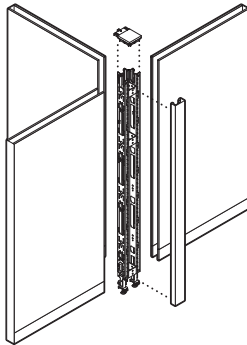


**T-stacking junction**  
includes junction, fork connectors, vertical trim, and plastic trim aligners.

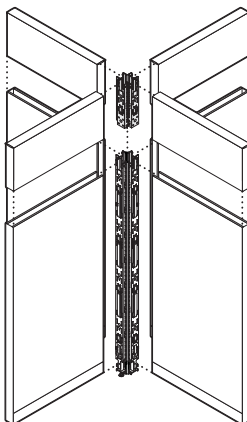

**X-stacking junction**  
includes junction and fork connectors.

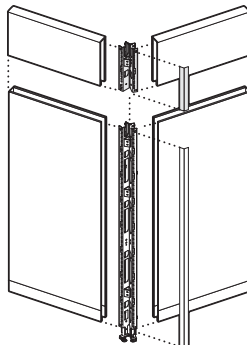


**V-stacking junction**  
includes junction, fork connectors, vertical trim, and plastic trim aligners.

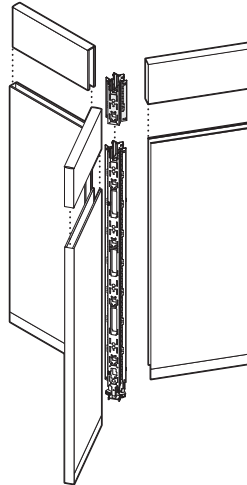

**Y-stacking junction**  
includes junction and fork connectors.

**Full L, T, V, and end-of-run square and oval vertical trim** is available through Service Parts in 30", 42", 48", 54", 66", and 78" heights if a segmented visual on the trim is not desired.

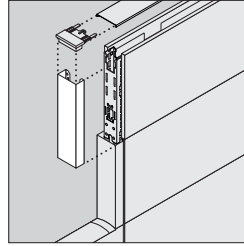


**Stacking change-of-height trim** is used when you stack on a change-of-height configuration. The bottom edge of stacking trim is straight so it can join with the top of the standard change-of-height trim. Oval standard change-of-height trim is rounded at the bottom to fit around the top cap of the lower panel. Square standard change-of-height trim has a straight bottom edge to fit with square top trim.

► Page 420


**Standard skins, cable trays, and powerkits** are used in stackable solutions. To maximize the benefits of stackability, consider matching the skin height to the stacking junction height.

## Connections

**Skins on base panel** do not need to be removed to install a stacking junction in most cases.

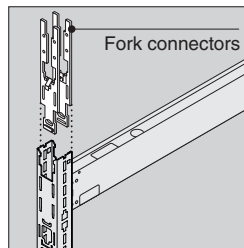


**Fork connector** is included with stacking junction for proper connection to the base panel. Two fork connectors are included with each in-line, end-of-run, L, and V stacking junctions, three are included with T and Y stacking junctions, and four are included with X stacking junctions. One fork connector is included with each wall-start stacking junction.

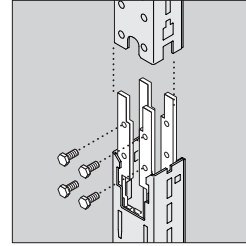


**Fork connectors** secure into the base junction. Stacking junction is bolted to fork connectors.

## Wiring & Cabling


Lay-in cable routing at top of stacking junctions

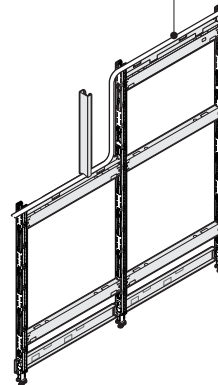

**Lay-in cable routing** is accommodated in top of stacking junctions.

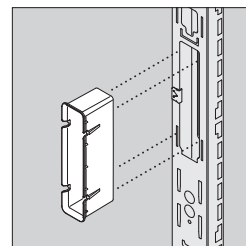

**Junction tall sleeve** can be ordered to cover the exposed metal edges in the large cable routing openings of junctions manufactured on or after October 10, 2011.

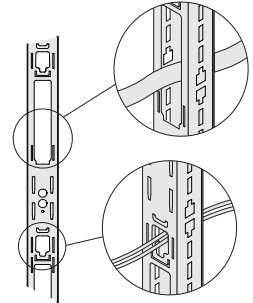

**As an alternative to lay-in cable routing**, horizontal routing of power and cables can be accommodated through openings in stacking junctions.

**Powerkit installation for stacking components** is the same process as for installation in base panels.

## Surface Materials

### Stacking junction

- Black paint

*Tip: Junction is hidden when properly installed.*

### Vertical trim

- Paint
- Vertical surface fabric (option)
- Wood veneer (option)

## Stacking Junctions—Square and Oval Trim, continued

### Application Topics

#### Stacking Stability

**Guidelines** provides detailed information on applications.

► Page 124

**Maximum height** that can be stacked on a base panel is 36", consisting of one 24"H and one 12"H, or two 18"H stacking junctions.


**Maximum height** that an Answer panel configuration can reach is 90".

**Maximum number of stacking junctions** that can be added to a base panel is two.

**Any height base panel** can be used with stacking junctions.

**Bins and shelves** can hang from the first stacked tier only.

**For initial installations** order the appropriate top cap for your stacked segment, while you are specifying the base panel.

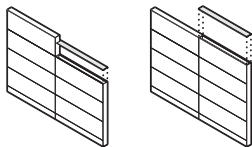

Change-of-Height Top Cap    Standard Top Cap

**For retrofit installations** you will have to order a new top cap through Service Parts based on application changes.

#### When adding stacking junctions to base panels made prior to January 2000, you must

replace vertical trim on end-of-run base junction. We recommend replacement of L base junction trim and standard change-of-height trim because the new trim can be easily removed, while the existing trim will be trapped by the stacking junction. To determine if you have trim made prior to January 2000, remove trim piece. If there are hooks at the top of your trim, you need to replace it. Replacement trim is available through Service Parts.

**Consolidation point kit** cannot be used with stacking components.



# Base Horizontal Frame Packages—Square and Oval Trim

**Base horizontal frame packages** include horizontal connecting bars that lock into vertical junctions and complete the structure of a panel. A top cap and pair of base trims are also included. Cable tray and base cable tray are available as options.

► Specifying square and oval, pages 422–424

**Top cap** snaps onto top of panel skins. Two styles of top cap are available - square and oval. Top caps to accommodate change-of-height are also available. Wood veneer is available as an option.

**Quick lock** connects horizontal bars to vertical junctions for quick assembly.

**Horizontal connecting bars** lock into vertical junctions. The top bar can be lowered in 12" increments to a maximum of 24" from the top position. The bottom bar must always be positioned in the lowest slot in a junction.


**Optional cable tray** can be used for additional support of cables. Additional cable trays can be installed and arranged at various heights within the frame for communications access and cable routing.

**Base trim** is available with or without knockouts. Knockout dimensions are 1 $\frac{3}{8}$ "H by 2 $\frac{5}{8}$ "W.


**Base trim with knockouts** accommodates power and communication terminations. Top knockout is for power, bottom knockout is for communication. Filler to close unused openings is available from Service Parts (TS7BTFSR).

**Optional base cable tray** can be used to support lay-in of cables.

## Product Details

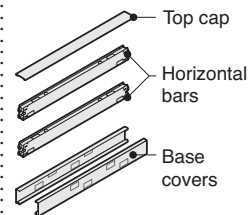


**Horizontal frame packages** are available when you want to build up your own panel. The package includes all the components of a panel except the skins so you can order the skins separately to mix combinations of skin surface materials and colors. These frame packages do not include vertical junctions. Cable trays and base cable trays are optional.

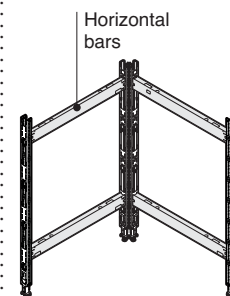

**Two horizontal connecting bars** must be used in each base panel.

**Horizontal bars** determine panel width. They are not dedicated to a specific panel height; any horizontal bar can be used or reused with any junction height.

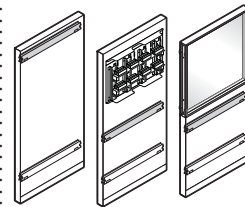

**Top horizontal bar** may be lowered to allow for a 12"H, 18"H, or 24"H glass window or consolidation point kit to be placed at the top of the panel. Bottom horizontal bar in base panel must remain in lowest position.

## Actual Dimensions


|       |                                                                                                                                                                                    |
|-------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Width | 17 $\frac{15}{16}$ ", 23 $\frac{15}{16}$ ", 29 $\frac{15}{16}$ ", 35 $\frac{15}{16}$ ", 41 $\frac{15}{16}$ ", 47 $\frac{15}{16}$ ", 59 $\frac{15}{16}$ ", and 71 $\frac{15}{16}$ " |
|-------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                  |                   |
|------------------|-------------------|
| Base trim height | 3 $\frac{3}{4}$ " |
|------------------|-------------------|


## Receptacle Opening

|                  |                   |
|------------------|-------------------|
| Width of opening | 2 $\frac{5}{8}$ " |
|------------------|-------------------|

|                   |                   |
|-------------------|-------------------|
| Height of opening | 1 $\frac{3}{8}$ " |
|-------------------|-------------------|

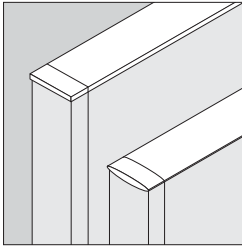


**Top caps** are available in three styles - thin, square, and oval. This section is about square and oval trims. Horizontal frame packages should be specified with square or oval trim. Thin, square, and oval top caps can not be mixed between adjacent panels.

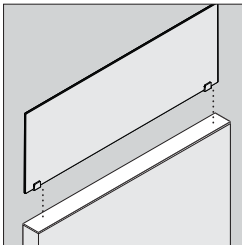

**Omit top cap option** is available on square trims and should be selected when adding a frameless glass screen to the top of the panel or when spanning a single top cap across multiple panels.


**Spanning top caps** are available for square style trims.

**When spanning a single top trim across multiple panels**, select the omit top cap option and specify a spanning top cap separately. Top cap width must match total width of spanned panels.

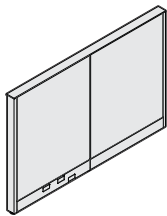


**Spanning top caps** can only be used in an in-line condition. They cannot span over a corner junction.

**Spanning top caps** can be used on any panel height.

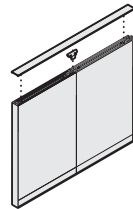


**In-line spanning top cap lightseals** should be specified separately for each in-line panel joint the top cap spans.

**Omit base trim option** should be selected when using skins to the floor or open base trim.

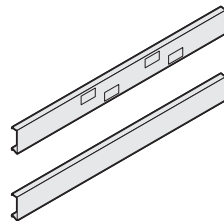


**Base trims** are available with or without knockouts. Base trims with knockouts accommodate power and communication terminations. Plain base trims with no knockouts do not.



**Open base trims** are available. They do not accommodate power and data routing or entry in the base. Open base trim can only be added on a junction manufactured on or after October 10, 2011.


**Open base trims** are specified by omitting base trims and ordering open base trim kit separately.

**Open base trims** occupy the same space as the standard base trims. Open base trims occupy the bottom 3 1/4" of the panel; the height of the opening is 2 1/2".

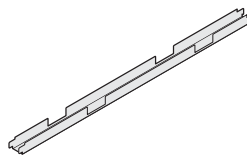


**Cable tray** can be positioned every 6" vertically above the base to support cable routing.

**Cable tray** can accept added cable carriers attached below tray to expand horizontal cable management options. ▶ See *Montage Specification Guide* for cable carrier (ZCC).

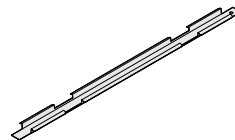


**Base cable tray** is used only in the base to support lay-in cable routing in the base. Base cable tray cannot be used if omit base trim option is selected for one or both sides of panel or if open base trim is used.

## Connections

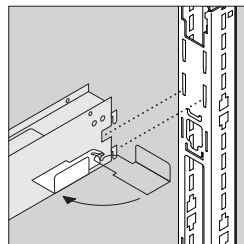


**Quick lock on both ends of the panel's horizontal connecting bars** engage the junction in a tight structural connection.


## Wiring & Cabling

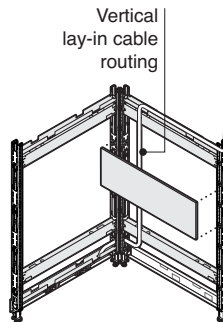


**Vertical lay-in cable routing** can be accommodated behind skins.

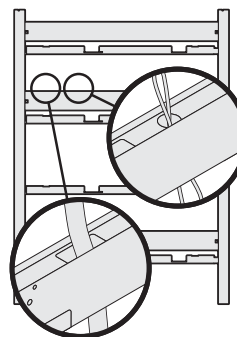


**As an alternative to lay-in cable routing**, vertical routing of power and cables through panel interior can be accommodated by openings in horizontal connecting bars. Also, see lay-in utility packages for vertical lay-in of power and cables. ▶ Pages 150–153

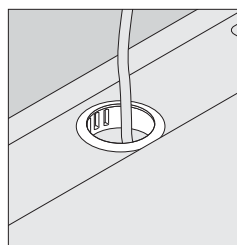

**Feed-through horizontal connecting bar cable sleeves** can be added in the field to finish the exposed metal edges of vertical cable pass-through openings.

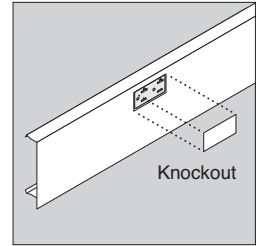

**Knockouts in base trim** can be removed in the field where needed. Knockout dimensions are 1 3/8"H by 2 5/8"W.

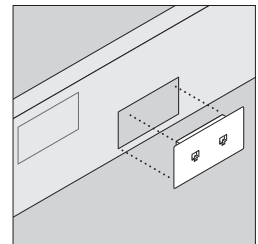

**Communication outlets** attach to openings in panel base trim. Order communication outlets from an outside vendor. Knockouts for communication in base accommodate modular furniture size only.

## Base Horizontal Frame Packages—Square and Oval Trim, continued

### Surface Materials

#### Top cap and base trim

- Paint color chosen on base trim will also apply to the top cap. They are not chosen independently.
- Wood veneer (option on top cap)

*Tip: Answer panel wood trims are only available with quarter-cut finishes with the exception of maple finishes. Maple on wood trims is only available with flat-cut finishes. For ordering simplicity, both flat-cut and quarter-cut finishes can be specified on panel trims. However, for all finishes except maple, if a flat-cut finish is selected, the trims will have the coordinating quarter-cut finish. For maple finishes, if quarter-cut is selected, the trims will have the coordinating flat-cut finish. Blending panel trims with other wood products that have flat-cut finishes may be visually acceptable for most applications. If a more exact match is desired for non-maple finishes, please specify quarter-cut finishes for the entire project. If a more exact match is desired for maple finishes, please specify flat-cut finishes for the entire project.*

#### Horizontal connecting bars

- Black paint

*Tip: Components are hidden when properly installed.*

### Application Topics

**Use** a cable tray to provide extra support for 60"W and 72"W full skins where people may lean against the panel.


Base Horizontal Frame  
Packages—Square and  
Oval Trim

# Stacking Horizontal Frame Packages—Square and Oval Trim

**Stacking horizontal frame package** provides structural stability for stacking junctions.

► Specifying square and oval, page 425

**Horizontal connecting bar** is included with each stacking horizontal frame package.

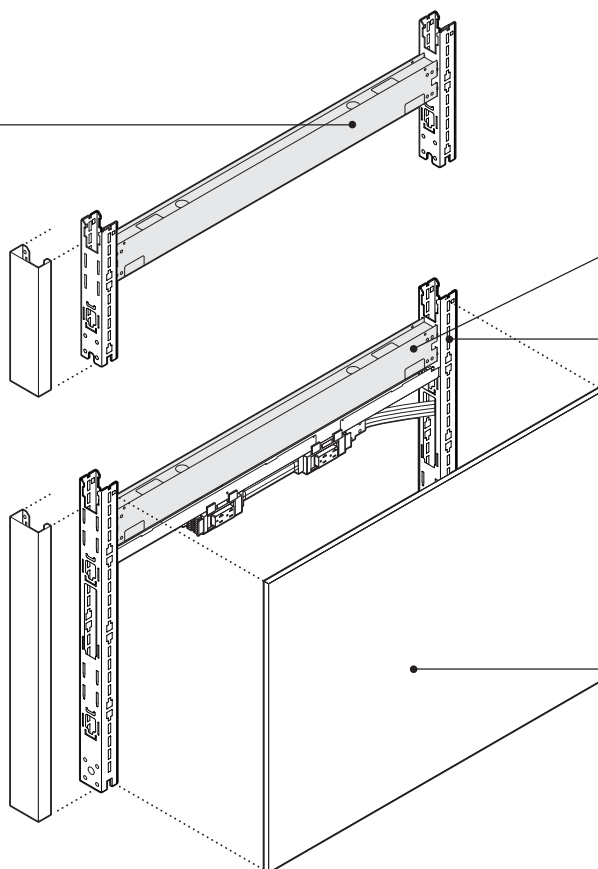

**Each stacking segment** must have one horizontal connecting bar.  
*Exception: If a window is used with stacking junctions, a horizontal connecting bar is not needed.*


**Each stacking junction** is specified separately.  
► Pages 407–411

**Skins**, ordered separately, are added to both sides of stacking frame.

## Actual Dimensions

Width 17¼", 23¼", 29¼", 35¼", 41¼", 47¼", 59¼", and 71¼"

**Product Details**




**Stacking horizontal frame package** includes one horizontal connecting bar. Stacking junction is not included.

**Stacking horizontal frame package** is available in eight widths—18", 24", 30", 36", 42", 48", 60", and 72"—to match panel width.

These horizontal connecting bars are identical to those in horizontal frame packages and can be re-used with any type of junction.

**Connections**

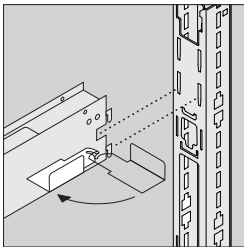


**Quick-lock mechanism on the horizontal connecting bar** engages the stacking junction in a tight structural connection.


**Base panel** must always have two horizontal connecting bars.

**Wiring & Cabling**


Vertical lay-in cable routing

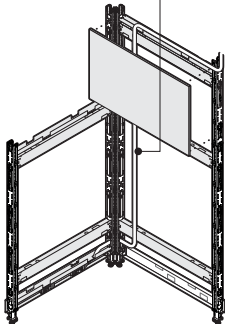

**Vertical lay-in cable routing** can be accommodated behind skins.

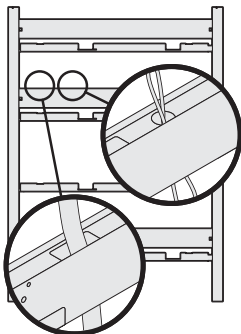

**Vertical routing of power and cables through panel interior** is accommodated by openings in horizontal connecting bars.

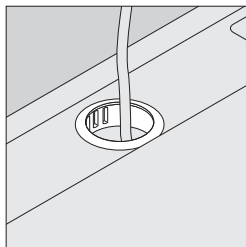

**Feed-through horizontal connecting bar cable sleeves** can be added in the field to finish the exposed metal edges of vertical cable pass-through openings.

**Power kit installation for stacking components** is the same process as for installation in base panels.


**Surface Materials**

**Stacking horizontal frame package**

- Black

*Tip: Components are hidden when properly installed.*


**Application Topics**



**When stacking a 12"H, 18"H, or 24"H window,** a stacking horizontal frame package is not needed. Remember, the base panel always has two horizontal connecting bars for support.



**When double stacking junctions,** at least one of the stacking junctions must be connected with a horizontal beam.

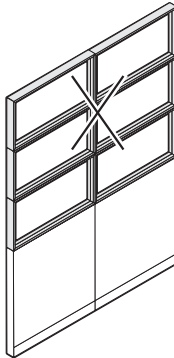

**No more than two windows** can be stacked on top of each other.

**Consolidation point kit** cannot be used with stacking components.

**Stacking horizontal frame package** is used when additional horizontal bar is needed in off-module application. See off-module guidelines.

**Stacking Stability Guidelines** provides detailed information on applications.


▶ Page 124

# Frameless Glass Screens—Square Trim Only

## Frameless glass

**screen** can be added to the top of a panel to help define space and provide some privacy while still providing access to natural light and promoting communication between adjacent workers.

► Specifying, page 427

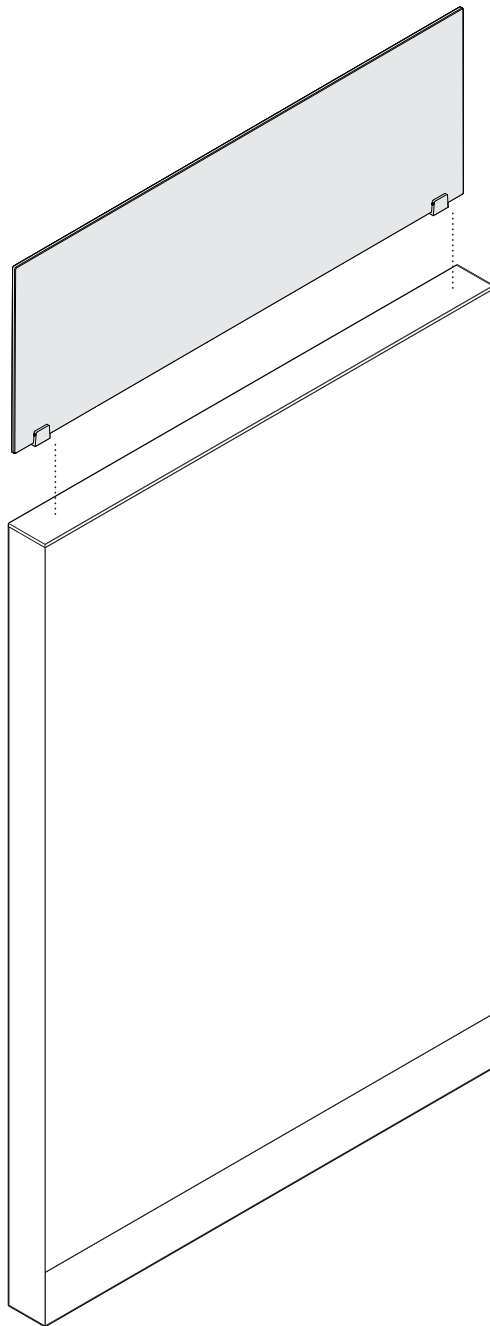


## Product Details

### Frameless glass


**screen** is secured to horizontal connecting bar by supports below the top cap and brackets above the top cap. Two brackets are used above the top cap to attach the glass to the panel on 24"–60"W panels. Three brackets are used on panels 78" and wider.

**Frameless glass** can be used on panels with thin or square profile trim.

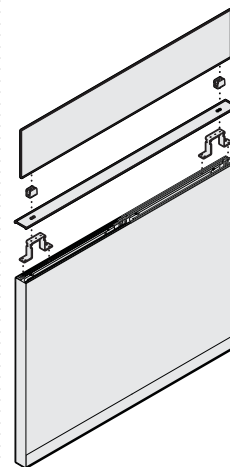

### Frameless glass kit

includes glass screen, brackets, supports, and top cap with holes to accommodate brackets.

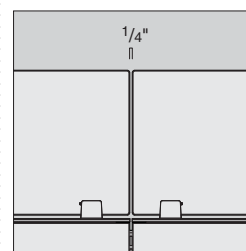

**Gap between adjacent glass screens** is  $\frac{1}{4}$ ".

## Actual Dimensions

Glass Width — standard: 23 $\frac{3}{4}$ ", 29 $\frac{3}{4}$ ", 35 $\frac{3}{4}$ ", 41 $\frac{3}{4}$ ", 47 $\frac{3}{4}$ ", 59 $\frac{3}{4}$ ", 71 $\frac{3}{4}$ ", 77 $\frac{3}{4}$ ", 83 $\frac{3}{4}$ ", 89 $\frac{3}{4}$ ", and 95 $\frac{3}{4}$ "

Glass Width — change-of-height one end square trim: 22 $\frac{1}{2}$ ", 28 $\frac{1}{2}$ ", 34 $\frac{1}{2}$ ", 40 $\frac{1}{2}$ ", 46 $\frac{1}{2}$ ", 58 $\frac{1}{2}$ ", 70 $\frac{1}{2}$ ", 76 $\frac{1}{2}$ ", 82 $\frac{1}{2}$ ", 88 $\frac{1}{2}$ ", and 94 $\frac{1}{2}$ "

Glass Height: 11 $\frac{3}{4}$ "

Glass Thickness:  $\frac{3}{8}$ "

**Surface Materials****Glass**

- 6500 Clear Glass
- 6530 Frosted Glass

**Brackets**


- Paint

**Top Cap**


- Paint
- Wood veneer

**Application Topics****Frameless glass**


**screen** can be placed on the top of a panel only. Top beam in the panel must be located in the top position of the frame in order to support frameless glass. Frameless glass can be used on base panels or stacking panels.

**Frameless glass**

**screen** cannot be used when a window is located in the top position of the panel.

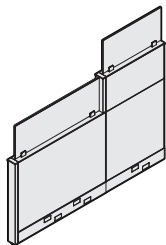
**Change-of-height top**

**cap option** is available to allow for positioning of glass next to change-of-height trim on one side only. Glass is shortened and top cap provided supports change-of-height slim one end only.

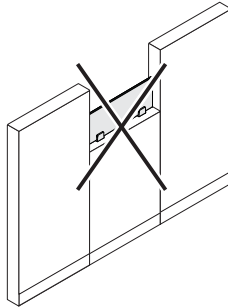
**Frameless glass**

**screen** will not fit between two change-of-height trims.


**Frameless glass kit** is available without glass screen to accommodate customer's own glass. See chart of field installed glass size requirements for specific dimensions required for glass to fit in frameless glass brackets. Steelcase recommends the use of safety glass meeting ANSI 297.1 for field installed glass. Check with your local building authority for requirements in your area.

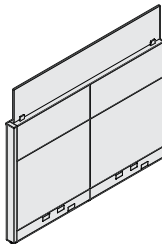

**A single frameless glass screen** can span over two or more panels.

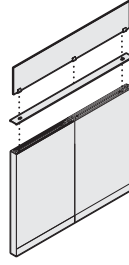

**90" and 96" wide frameless glass screen kits** include three brackets. Two brackets attach to supports below the top cap. The third bracket attaches only to the top cap through a hole that is drilled in the top cap by the installer on site.

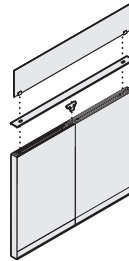

**In-line spanning top cap lightseal** must be specified separately when used in this application.


Spanning top cap lightseal attaches to underside of top cap to fill space between skin lightseals. Specify one for each in-line junction the frameless glass screen spans.

**A template tool** is available from Service Parts (T511082SR) to assist in locating where holes are to be drilled on the beam of an existing panel to allow supports to be attached. This only applies to beams produced prior to September 2009. Beams produced after this date include holes to allow frameless glass supports to be attached.

**Field-Installed Glass Size Requirements**

| Style Number                    | Maximum Height                   | Maximum Width                    | Thickness Range (min-max) |
|---------------------------------|----------------------------------|----------------------------------|---------------------------|
| Standard                        |                                  |                                  |                           |
| TS71224SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 23 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71230SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 29 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71236SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 35 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71242SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 41 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71248SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 47 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71260SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 59 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71272SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 71 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71278SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 77 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71284SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 83 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71290SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 89 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| TS71296SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 95 <sup>3</sup> / <sub>4</sub> " | .350-.400"                |
| Change-of-Height – one end slim |                                  |                                  |                           |
| TS71224SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 22 <sup>1</sup> / <sub>2</sub> " | .350-.400"                |
| TS71230SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 28 <sup>1</sup> / <sub>2</sub> " | .350-.400"                |
| TS71236SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 34 <sup>1</sup> / <sub>2</sub> " | .350-.400"                |
| TS71242SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 40 <sup>1</sup> / <sub>2</sub> " | .350-.400"                |
| TS71248SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 46 <sup>1</sup> / <sub>2</sub> " | .350-.400"                |
| TS71260SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 58 <sup>1</sup> / <sub>2</sub> " | .350-.400"                |
| TS71272SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 70 <sup>1</sup> / <sub>2</sub> " | .350-.400"                |
| TS71278SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 76 <sup>1</sup> / <sub>2</sub> " | .350-.400"                |
| TS71284SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 82 <sup>1</sup> / <sub>2</sub> " | .350-.400"                |
| TS71290SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 88 <sup>1</sup> / <sub>2</sub> " | .350-.400"                |
| TS71296SFG                      | 11 <sup>3</sup> / <sub>4</sub> " | 94 <sup>1</sup> / <sub>2</sub> " | .350-.400"                |

*Tip: Field installed glass should always be tempered. Laminated glass must not be used.*

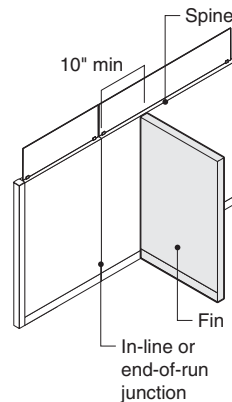

**When using frameless glass on a spine panel with a same height off-module panel connections,** the off-module cannot connect within 10" of an end of run or in-line junction connection.

# 12"H Panel Top Screens



For Use on Panels with Square Trim

**Panel top screen** can be field-installed over a painted or wood square panel top cap to provide extra visual privacy.  
► Specifying, page 428

**Translucent screen** has internal ribbed design. External screen surface is flat.

**Panel top screen** allows the user to control privacy by adding or removing the translucent screen and support brackets.

**Support brackets** provide stability and mount to square panel top cap. Brackets must always be used with translucent screen.

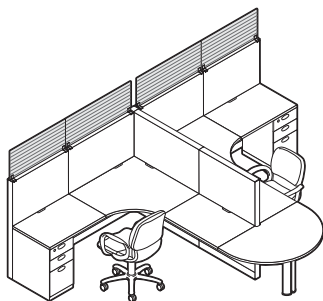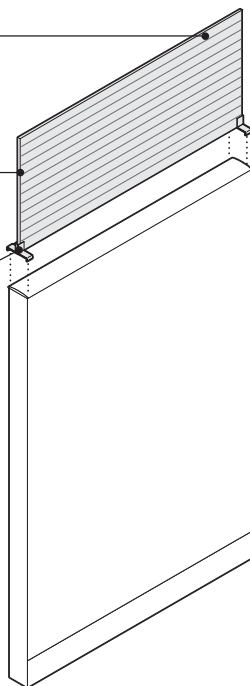


## Actual Dimensions

|                 |                                        |
|-----------------|----------------------------------------|
| Depth (screen)  | 5/16"                                  |
| Width (screen)  | 27 1/2", 33 1/2", 39 1/2", and 45 1/2" |
| Height (screen) | 12"                                    |


## Product Details

**Panel top screens** are available in 24"W, 30"W, 36"W, 42"W, and 48"W dimensions to correspond with most panel widths.

**Panel top screen** can be mounted on painted or wood square top caps.

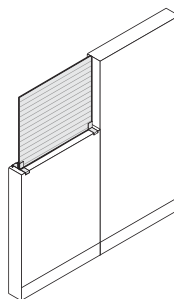

**Change-of-height screen option** must be specified when using screen adjacent to change-of-height panel trim.

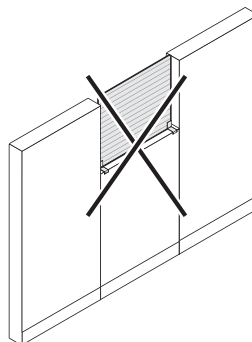

**Panel screen** will not fit between change-of-height on both sides.

## Wiring & Cabling

**Power and cables** cannot be routed or accessed in a panel top screen.

## Surface Materials

**Panel top screen**

• Translucent plastic  
*Tip: Double wall construction and internal ribbing structure make screen read whiter and more opaque than other translucent materials.*

**Support brackets**

- 4799 Platinum
- 7207 Black
- 7225 Sand
- 7230 Basalt
- 7241 Arctic White

## Application Topics

**Support brackets** must always be used with translucent screen included with this package. Other screen materials cannot be used with these brackets.

# 12"H Panel Top Screens

For Use on Panels with Oval Trim

12"H Panel Top Screens



**Panel top screen** can be field-installed over a painted oval panel top cap to provide extra visual privacy.

► Specifying, page 428

**Panel top screen** allows the user to control privacy by adding or removing the translucent screen and support brackets.

**Support brackets** provide stability and mount to oval panel top cap. Brackets must always be used with translucent screen.

**Translucent screen** has internal ribbed design. External screen surface is flat.

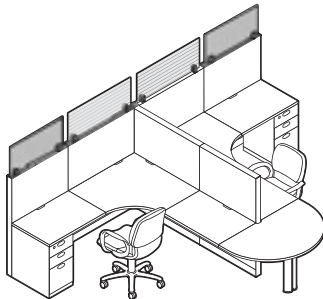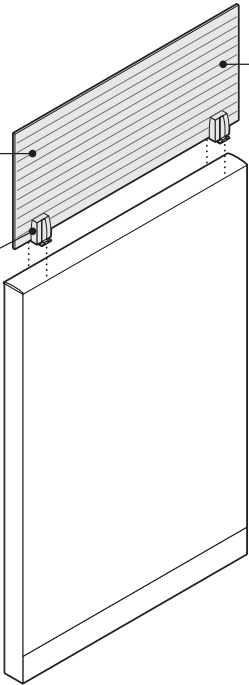

## Actual Dimensions

|                 |                                        |
|-----------------|----------------------------------------|
| Depth (screen)  | 5/16"                                  |
| Width (screen)  | 27 1/2", 33 1/2", 39 1/2", and 45 1/2" |
| Height (screen) | 12"                                    |

## Product Details

**Panel top screens** are available in 30"W, 36"W, 42"W, and 48"W dimensions to correspond with most panel widths.

**Panel top screen** cannot be mounted on wood top caps.

## Wiring & Cabling

**Power and cables** cannot be routed or accessed in a panel top screen.

## Surface Materials

**Panel top screen**

- Translucent plastic

*Tip: Double wall construction and internal ribbing structure make screen read whiter and more opaque than other translucent materials.*

**Support brackets**

- 6623 Metallic plastic

## Application Topics

**Support brackets** must always be used with translucent screen included with this package. Other screen materials cannot be used with these brackets.

# Panel Packages—Square and Oval Trim

**Panel packages** include two monolithic fabric skins and a horizontal frame package.

*Tip: Answer panels always share a junction with adjacent panels. Order the style of junction you need separately.*

► Specifying, pages 430–433

**Top cap** snaps onto top of panel skins. Top caps are available in two styles – square or oval. Change-of-height top caps to accommodate change-of-height cable routing are also available. Wood veneer top cap is available as an option on both square and oval trim. Omit top cap is available as an option on square trim only.

**Power** can be field-installed every 12" vertically using powerkits.

**Junctions**, ordered separately, are always shared by adjacent panels. They are available for in-line, L, T, V, X, Y, and end-of-run configurations. Wall-start junctions and off-module connector brackets are also available.

**Optional cable tray** can be used for additional support of cables. Additional cable trays can be installed and arranged at various heights within the frame for communications access and cable routing.

**Skins** attach to frame without tools and can be removed and repositioned easily. They are not dedicated to a specific location.

**Power and communication** can be accessed by cutting skin in the field. Templates for cutting both receptacle and communication cutouts are available from Service Parts (T500940SR). Filler to close unwanted cutout in a skin is available from Service Parts (TS7STFSR).

**Powerkits** include power-blocks attached to a supporting power tray. ► Page 162

**Base cover** has knockouts to accommodate power and communication terminations. Top knockout is for power, bottom knockout is for communication. Filler to close unwanted knockouts is available from Service Parts (TS7BTFSR).

**Horizontal connecting bars** lock into the vertical junctions at the top and the bottom location to provide structural stability for the panels.

**Optional base cable tray** can be used to support lay-in of cables.


## Actual Dimensions

|        |                                                                                                                                                                                                                                                                                                    |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Depth  | 3"                                                                                                                                                                                                                                                                                                 |
| Width  | 17 <sup>51</sup> / <sub>64</sub> ", 23 <sup>51</sup> / <sub>64</sub> ", 29 <sup>51</sup> / <sub>64</sub> ", 35 <sup>51</sup> / <sub>64</sub> ", 41 <sup>51</sup> / <sub>64</sub> ", 47 <sup>51</sup> / <sub>64</sub> ", 59 <sup>51</sup> / <sub>64</sub> ", and 71 <sup>51</sup> / <sub>64</sub> " |
| Height | 41 <sup>3</sup> / <sub>4</sub> ", 47 <sup>15</sup> / <sub>16</sub> ", 54 <sup>1</sup> / <sub>8</sub> ", and 66 <sup>7</sup> / <sub>16</sub> "                                                                                                                                                      |

**Order panel packages** to create common panel configurations quickly and easily.


- 1. Specify a panel package** of the width and height you need and with either square or oval top caps.

**Package includes . . .**

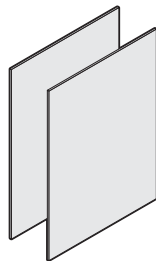

Fabric skins  
for both sides  
of panel


**Two skins**

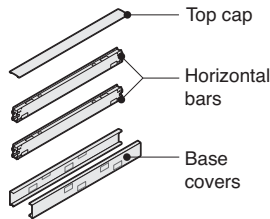


**Horizontal frame package**

Note: Cable trays and base cable trays are optional.

- 2. Order vertical junctions** to complete panel packages and to join panels in in-line, L, T, V, X, and Y configurations and to terminate an end-of-run. Junctions are available with either square or oval trim and are always ordered separately.

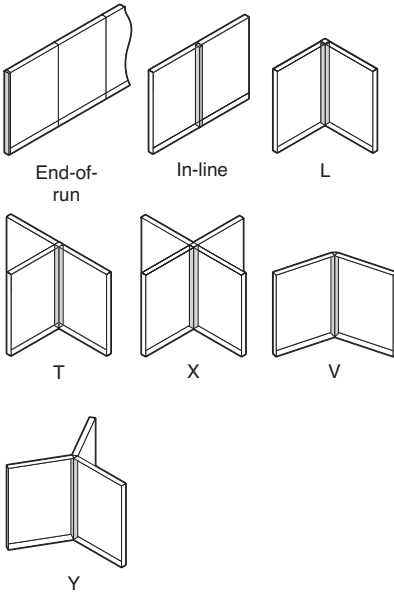

- 3. Specify powerkits where you will need power.** You can specify a powerkit as an option on the panel package, or you can order powerkits separately.

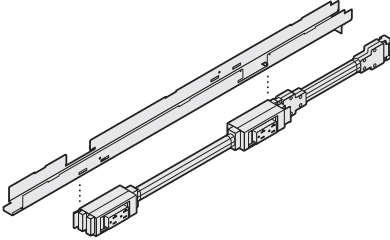




# Understanding Shared Components

|                                                                                    |            |
|------------------------------------------------------------------------------------|------------|
|  |            |
| <b>Statement of Line</b>                                                           | <b>102</b> |

|                                                                                    |            |
|------------------------------------------------------------------------------------|------------|
|  |            |
| <b>Product Details</b>                                                             |            |
| Fabric Covered Panel Skins                                                         | <b>107</b> |
| Steel Panel Skins                                                                  | <b>108</b> |
| Markerboard Surfaces for Steel Skins                                               | <b>109</b> |
| Markerboard Skins                                                                  | <b>110</b> |
| Slatwall Skins                                                                     | <b>112</b> |
| Laminate Skins                                                                     | <b>114</b> |
| Wood Skins and Wood Skin Sets                                                      | <b>115</b> |
| Technology Skins and Covers                                                        | <b>116</b> |
| Glass Windows                                                                      | <b>118</b> |
| Sliding Panel Doors                                                                | <b>120</b> |
| Fence Connectors, Posts, and Beams                                                 | <b>122</b> |
| <b>Stability Guidelines</b>                                                        | <b>124</b> |

# Statement of Line

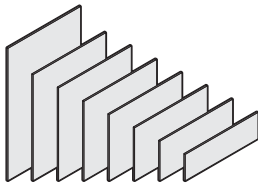


Understanding  
 ▶ Page 107  
 Specifying  
 ▶ Page 434

## Performance Tackable Acoustical Fabric-Covered Panel Skins

|      | 18"W | 24"W | 30"W | 36"W | 42"W | 48"W | 60"W | 72"W |
|------|------|------|------|------|------|------|------|------|
| 12"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 18"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 24"H | •F   | •F   | •F   | •F   | •F   | •F   | •F   | •F   |
| 30"H | •F   | •F   | •F   | •F   | •F   | •F   | •F   | •F   |
| 36"H | •F   | •F   | •F   | •F   | •F   | •F   | •F   | •F   |
| 42"H | •F   | •F   | •F   | •F   | •F   | •F   | •F   | •F   |
| 48"H | •F   | •F   | •F   | •F   | •F   | •F   | •F   | •F   |
| 60"H | •F   | •F   | •F   | •F   | •F   | •F   | •F   | •    |

F = To the floor sizes

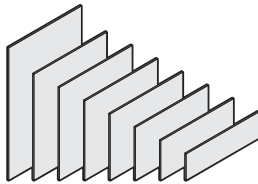


Understanding  
 ▶ Page 107  
 Specifying  
 ▶ Page 434

## Tackable Acoustical Fabric-Covered Panel Skins

|      | 18"W | 24"W | 30"W | 36"W | 42"W | 48"W | 60"W | 72"W |
|------|------|------|------|------|------|------|------|------|
| 12"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 18"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 24"H | •F   | •F   | •F   | •F   | •F   | •F   | •F   | •F   |
| 30"H | •F   | •F   | •F   | •F   | •F   | •F   | •F   | •F   |
| 36"H | •F   | •F   | •F   | •F   | •F   | •F   | •F   | •F   |
| 42"H | •F   | •F   | •F   | •F   | •F   | •F   | •F   | •F   |
| 48"H | •F   | •F   | •F   | •F   | •F   | •F   | •F   | •F   |
| 60"H | •F   | •F   | •F   | •F   | •F   | •F   | •F   | •    |

F = To the floor sizes

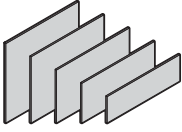

Note: 12"H, 18"H, and 24"H steel skins are available with ribbed and perforated steel option.


Understanding  
 ▶ Page 108  
 Specifying  
 ▶ Page 438

## Steel Panel Skins

|      | 18"W | 24"W | 30"W | 36"W | 42"W | 48"W | 60"W | 72"W |
|------|------|------|------|------|------|------|------|------|
| 12"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 18"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 24"H | •F   | •F   | •F   | •F   | •F   | •F   | •F   | •F   |
| 30"H | •F   | •F   | •F   | •F   | •F   | •F   | •F   | •F   |
| 36"H | •F   | •F   | •F   | •F   | •F   | •F   | •F   | •F   |

**F** = To the floor sizes

*Tip: Ribbed and perforated steel option not available on to the floor size skins.*

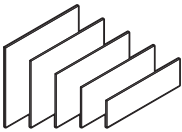


Understanding  
 ▶ Page 110  
 Specifying  
 ▶ Page 441

## Markerboard Skins

|      | 18"W | 24"W | 30"W | 36"W | 42"W | 48"W | 60"W | 72"W |
|------|------|------|------|------|------|------|------|------|
| 12"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 18"H | •    | •    | •    | •    | •    | •    | •    | •    |
| 24"H | •F   | •F   | •F   | •F   | •F   | •F   | •F   | •F   |
| 30"H | •F   | •F   | •F   | •F   | •F   | •F   | •F   | •F   |
| 36"H | •F   | •F   | •F   | •F   | •F   | •F   | •F   | •F   |

**F** = To the floor sizes




Understanding  
 ▶ Page 112  
 Specifying  
 ▶ Page 443

## Slatwall Skins

|      | 24"W | 30"W | 36"W | 42"W | 48"W |
|------|------|------|------|------|------|
| 12"H | •    | •    | •    | •    | •    |
| 18"H | •    | •    | •    | •    | •    |
| 24"H | •    | •    | •    | •    | •    |

Statement of Line, continued

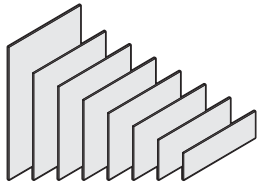


Understanding  
▶ Page 114  
Specifying  
▶ Page 444

### Laminate Skins

|      | 24"W | 30"W | 36"W | 42"W | 48"W |
|------|------|------|------|------|------|
| 12"H | •    | •    | •    | •    | •    |
| 18"H | •    | •    | •    | •    | •    |
| 24"H | •F   | •F   | •F   | •F   | •F   |
| 30"H | •F   | •F   | •F   | •F   | •F   |
| 36"H | •F   | •F   | •F   | •F   | •F   |
| 42"H | •F   | •F   | •F   | •F   | •F   |
| 48"H | •F   | •F   | •F   | •F   | •F   |
| 60"H | •F   | •F   | •F   | •F   | •F   |

F = To the floor sizes

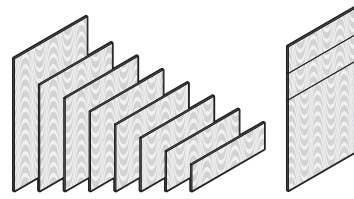

Understanding  
▶ Page 115  
Specifying  
▶ Pages 446–450


### Wood Skins and Wood Skin Sets

|      | 24"W | 30"W | 36"W | 42"W | 48"W |
|------|------|------|------|------|------|
| 12"H | •    | •    | •    | •    | •    |
| 18"H | •    | •    | •    | •    | •    |
| 24"H | •F   | •F   | •F   | •F   | •F   |
| 30"H | •F   | •F   | •F   | •F   | •F   |
| 36"H | •SF  | •SF  | •SF  | •SF  | •SF  |
| 42"H | •SF  | •SF  | •SF  | •SF  | •SF  |
| 48"H | •SF  | •SF  | •SF  | •SF  | •SF  |
| 60"H | •SF  | •SF  | •SF  | •SF  | •SF  |

S = Wood skin sets, page 450.

F = To the floor sizes

Tip: Wood skin sets are available for 42", 48", 54", and 66" panel heights.

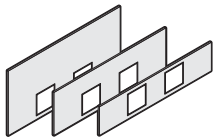


Note: 12"H and 18"H technology skins are available with ribbed steel.

Note: Technology skins are available with fabric-covered option.

Understanding  
▶ Page 116  
Specifying  
▶ Page 458

### Steel Technology Skins


|      | 24"W | 30"W | 36"W | 42"W | 48"W | 60"W | 72"W |
|------|------|------|------|------|------|------|------|
| 6"H  | •    | •    | •    | •    | •    | •    | •    |
| 12"H | •    | •    | •    | •    | •    | •    | •    |
| 18"H | •    | •    | •    | •    | •    | •    | •    |

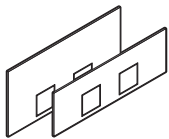

Understanding  
▶ Page 116  
Specifying  
▶ Page 461

### Markerboard Technology Skins


|     | 24" | 30" | 36" | 42" | 48" |
|-----|-----|-----|-----|-----|-----|
| 12" | •   | •   | •   | •   | •   |
| 18" | •   | •   | •   | •   | •   |

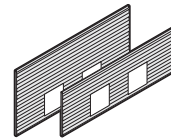

Understanding  
▶ Page 116  
Specifying  
▶ Page 460

### Slatwall Technology Skins


|     | 24" | 30" | 36" | 42" | 48" |
|-----|-----|-----|-----|-----|-----|
| 12" | •   | •   | •   | •   | •   |
| 18" | •   | •   | •   | •   | •   |



Understanding  
 ▶ Page 118  
 Specifying  
 ▶ Page 464

### Glass Windows—Single Pane and Single Pane Kits for use with Custom Glass

|      | 24"W | 30"W | 36"W | 42"W | 48"W | 60"W | 72"W | 78"W | 84"W | 90"W | 96"W |
|------|------|------|------|------|------|------|------|------|------|------|------|
| 12"H | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    |
| 18"H | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    |
| 24"H | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    |



Understanding  
 ▶ Page 118  
 Specifying  
 ▶ Page 464

### Glass Windows—Double Pane

|      | 24"W | 30"W | 36"W | 42"W | 48"W | 60"W | 72"W | 78"W | 84"W | 90"W | 96"W |
|------|------|------|------|------|------|------|------|------|------|------|------|
| 12"H | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    | •    |
| 18"H | •    | •    | •    | •    | •    | •    | •    |      |      |      |      |
| 24"H | •    | •    | •    | •    | •    | •    | •    |      |      |      |      |




Specifying  
 ▶ Page 468

### Tackboard for Use with Wall Channels

|      | 24"W | 30"W | 36"W | 42"W | 48"W | 60"W | 72"W |
|------|------|------|------|------|------|------|------|
| 18"H | •    | •    | •    | •    | •    | •    | •    |

Statement of Line, continued

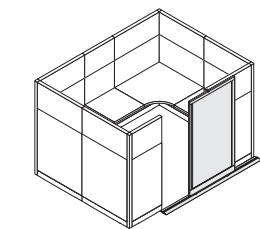

Understanding  
▶ Page 120  
Specifying  
▶ Page 469

Sliding Panel Door


|      | 36"W | 42"W |
|------|------|------|
| 66"H | ●    | ●    |
| 78"H | ●    | ●    |



Understanding  
▶ Page 123  
Specifying  
▶ Page 471

Fence Vertical Post Tube

|      |
|------|
| 16"H |
|------|

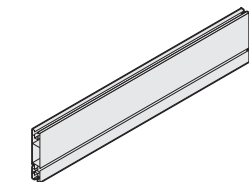

Beams

|      | 8½"H |
|------|------|
| 3¼"W | ●    |
| 4"W  | ●    |
| 5"W  | ●    |
| 6"W  | ●    |
| 7"W  | ●    |
| 8"W  | ●    |
| 9"W  | ●    |
| 10"W | ●    |



Understanding  
▶ Page 122  
Specifying  
▶ Page 471

Fence Connectors

|     | 32½"H |
|-----|-------|
| 2"D | ●     |



X-Post



Y-Post

Understanding  
▶ Page 122  
Specifying  
▶ Page 472

Posts

|     | 33"H |
|-----|------|
| 4"D | ●    |

Understanding  
▶ Page 122  
Specifying  
▶ Page 473

# Fabric Covered Panel Skins

Performance Tackable Acoustical Fabric Covered Skins and Tackable Acoustical Fabric Covered Skins

Fabric Covered Panel Skins

**Performance tackable acoustical fabric-covered skins and tackable acoustical fabric-covered skins** finish the appearance of a panel. Skin combinations can vary to accommodate a variety of appearances and functions of the workspace.


*Note: A sound-blocking barrier is added to the back side of the performance tackable acoustical skins.*

► Specifying, page 434

*Tip: When specifying skins, the total skin height will be 6" less than the panel height. For example if the panel is 54"H the total skin height will be 48". When ordering skins to the floor an F suffix will be added to the end of the style number. The total height will still be 6" less than the panel height. Using the same example, if the panel is 54"H, 48" of skin height will need to be specified.*

► See Panel Buildups, page 12, for more information.

**Fabric skins** can be removed and repositioned.

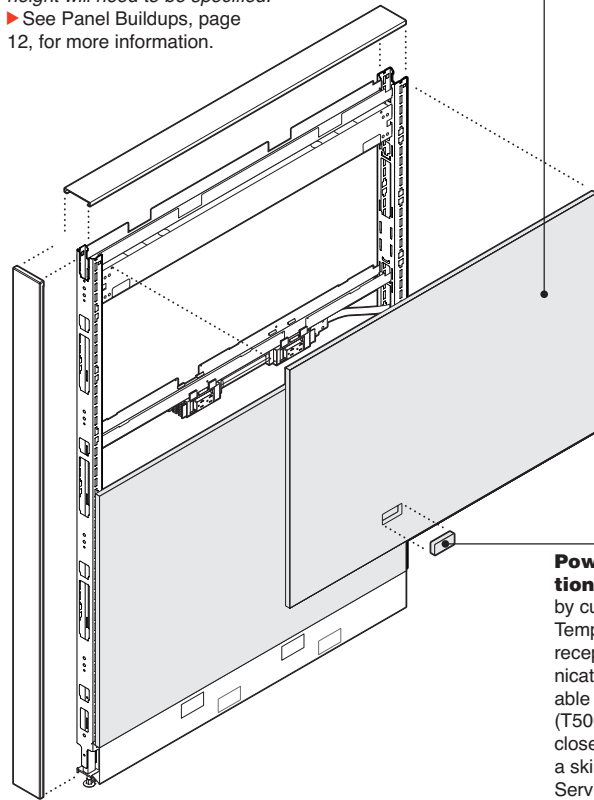


**Power and communication** can be accessed by cutting skin in the field. Templates for cutting both receptacle and communication cutouts are available from Service Parts (T500940SR). Filler to close unwanted cutout in a skin is available from Service Parts (TS7STFSR).

## Actual Dimensions


|                                |                                                                                                                                                                                                                                                                                                    |
|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Width                          | 17 <sup>53</sup> / <sub>64</sub> ", 23 <sup>53</sup> / <sub>64</sub> ", 29 <sup>53</sup> / <sub>64</sub> ", 35 <sup>53</sup> / <sub>64</sub> ", 41 <sup>53</sup> / <sub>64</sub> ", 47 <sup>53</sup> / <sub>64</sub> ", 59 <sup>53</sup> / <sub>64</sub> ", and 71 <sup>53</sup> / <sub>64</sub> " |
| Height<br>Standard Size        | 12 <sup>23</sup> / <sub>64</sub> ", 18 <sup>7</sup> / <sub>16</sub> ", 24 <sup>3</sup> / <sub>4</sub> ", 30 <sup>13</sup> / <sub>16</sub> ", 37 <sup>5</sup> / <sub>64</sub> ", 43 <sup>1</sup> / <sub>4</sub> ", 49 <sup>7</sup> / <sub>16</sub> ", and 61 <sup>13</sup> / <sub>16</sub> "        |
| Height<br>To the<br>Floor Size | 28 <sup>33</sup> / <sub>64</sub> ", 34 <sup>5</sup> / <sub>8</sub> ", 40 <sup>7</sup> / <sub>8</sub> ", 42", 47 <sup>1</sup> / <sub>16</sub> ", 53 <sup>15</sup> / <sub>64</sub> ", and 65 <sup>19</sup> / <sub>32</sub> "                                                                         |

## Connections

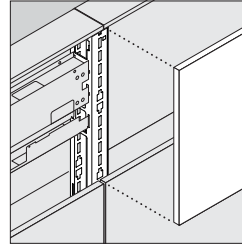


**Skins** extend onto junction and meet skin of adjacent panel. The slotted channel of the junction is accessible between these two skins.

**Skins** are available in standard heights and to the floor heights. Standard height skins are not dedicated to a specific location.

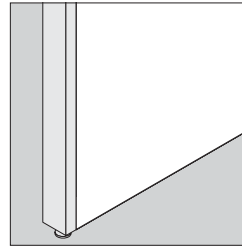


**Skins** sized to go to the floor extend to the bottom of the panel. They can be used on one or both sides of the panel. They can only be used in the bottom position.  
*Tip: Omit base trim option should be selected on the panel frame when using a skin to the floor.*

## Wiring & Cabling

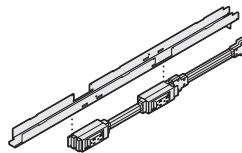


**Powerkits** are available in widths that correspond to panel widths.

**Face plate** is used to surround receptacle when field-cutting fabric skins.

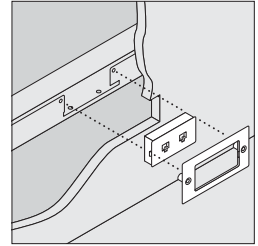

**Face plate**, ordered separately, is used to surround modular furniture size communication outlet when field-cutting fabric skins.

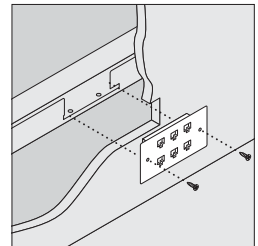

**NEMA-size communication outlets** can be installed on the face of a panel skin without using a face plate, but just the screws. Order communication outlets from an outside vendor. NEMA-size communication outlets cannot be used in the base.

## Surface Materials

**Skins**  
• Fabric

**Fabric application** is standard in the warp horizontal direction. Warp vertical direction is available as an option.

Exceptions to this include:

- 72" wide standard and to the floor skins can only accommodate fabric in the horizontal direction.
- 60" high to the floor skins can only accommodate fabric in the vertical direction.
- 48" high to the floor skins only accommodate fabric in the vertical direction.

► See *Specification Guidelines for Directional Fabrics*, page 713, for more information.

## Application Topics

**Panel buildups**

► Page 12

# Steel Panel Skins


**Steel panel skins** finish the appearance of a panel. Skin combinations can vary to accommodate a variety of appearances and functions of the workspace.

► Specifying, page 438

*Tip: When specifying skins, the total skin height will be 6" less than the panel height. For example if the panel is 54"H the total skin height will be 48". When ordering skins to the floor an F suffix will be added to the end of the style number. The total height will still be 6" less than the panel height. Using the same example, if the panel is 54"H, 48" of skin height will need to be specified.*

► See Panel Buildups, page 12, for more information.


**Steel skins** can be removed and repositioned.

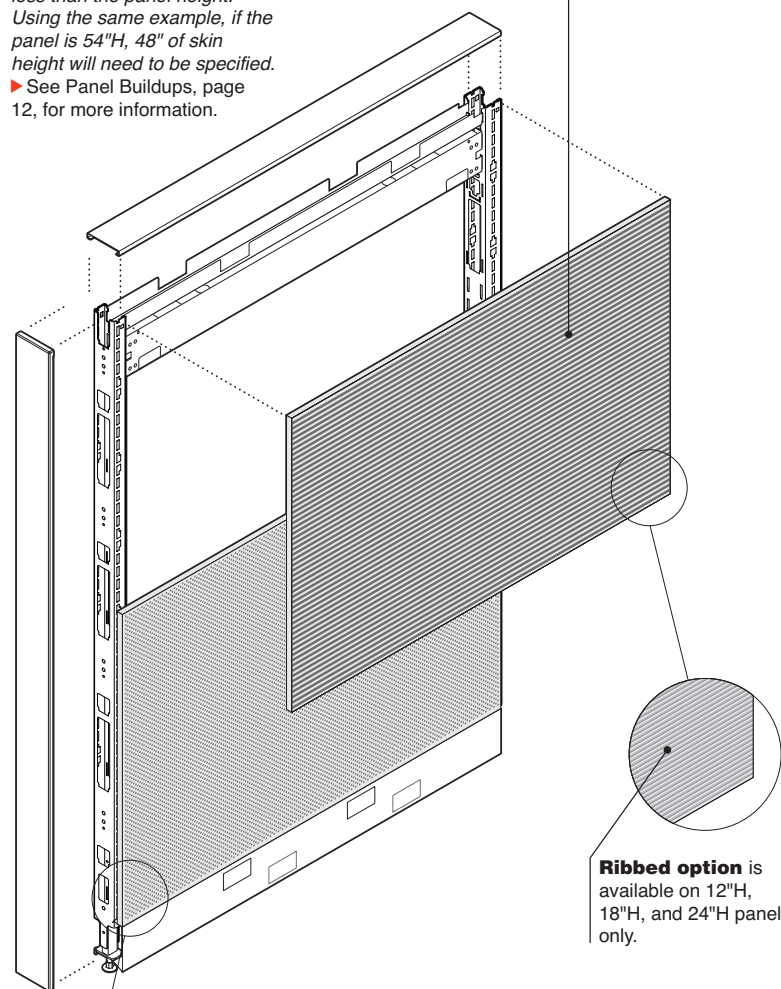

**Ribbed option** is available on 12"H, 18"H, and 24"H panels only.


**Perforated option** is available on 12"H, 18"H, and 24"H panels only. Horizontal beam and back of opposite skin is visible through perforated skin.

## Connections

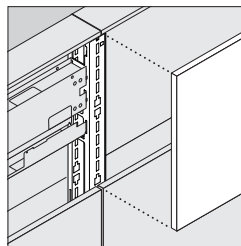

**Skins** extend onto junction and meet skin of adjacent panel. The slotted channel of the junction is accessible between these two skins.

**Skins** are available in standard heights and to the floor heights. Standard height skins are not dedicated to a specific location.

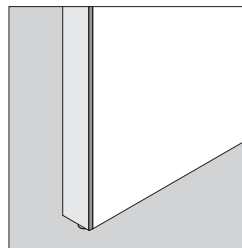

**Skins sized** to go to the floor extend to the bottom of the panel. They can be used on one or both sides of the panel. They can only be used in the bottom position. *Tip: Omit base trim option should be selected on the panel frame when using a skin to the floor.*

## Wiring & Cabling

**Power and communication** cannot be accessed in steel skins.

## Surface Materials

### Skins

- Painted steel
- Ribbed steel (option)
- Perforated steel (option)

## Application Topics

### Panel buildups

► Page 12

**Horizontal connecting bars** will be visible when perforated skins are used on the panel.

**When specifying the perforated option**, order perforated skins for both sides of the panel to maximize the visual aesthetic.

**Perforated skins** cannot be used in installation with steel or ribbed steel skins made prior to July 10, 2000.

## Actual Dimensions

|                          |                                                                                                                                                                                                                                                                                                    |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Width                    | 17 <sup>53</sup> / <sub>64</sub> ", 23 <sup>53</sup> / <sub>64</sub> ", 29 <sup>53</sup> / <sub>64</sub> ", 35 <sup>53</sup> / <sub>64</sub> ", 41 <sup>53</sup> / <sub>64</sub> ", 47 <sup>53</sup> / <sub>64</sub> ", 59 <sup>53</sup> / <sub>64</sub> ", and 71 <sup>53</sup> / <sub>64</sub> " |
| Height                   | 12 <sup>9</sup> / <sub>32</sub> ", 18 <sup>7</sup> / <sub>16</sub> ", 24 <sup>41</sup> / <sub>64</sub> ", 30 <sup>13</sup> / <sub>16</sub> ", and 37"                                                                                                                                              |
| Height To the Floor Size | 28 <sup>29</sup> / <sub>64</sub> ", 34 <sup>5</sup> / <sub>8</sub> ", and 40 <sup>13</sup> / <sub>16</sub> "                                                                                                                                                                                       |

# Markerboard Surfaces for Steel Skins

Markerboard Surfaces for  
Steel Skins


**Markerboard surface**

adheres to steel skins to  
provide a writing surface  
for dry erase markers.


► Specifying, page 440

**Magnetic border** on  
back of markerboard affixes  
to steel skin. Markerboard  
surface can be removed  
and repositioned.

**Write on markerboard  
surface** with dry erase  
markers only.

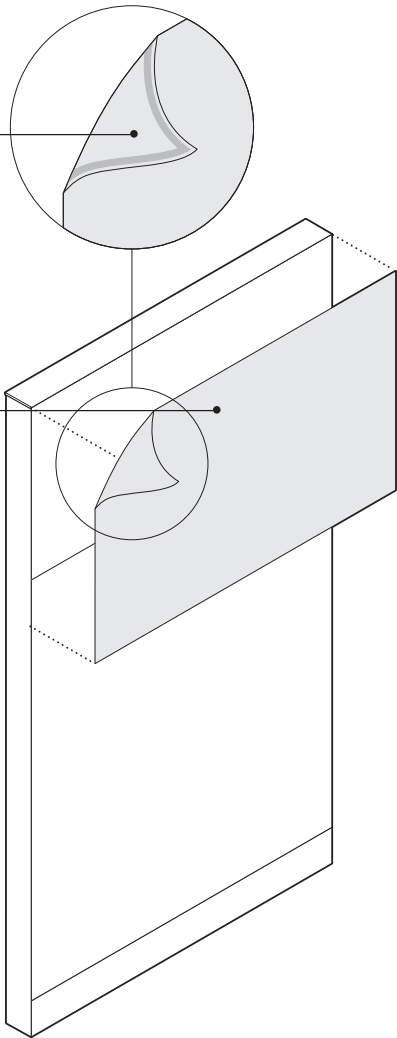

**Product Details**

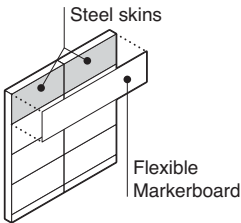

**Markerboard surface**  
can span multiple skins.

**Not for use** on steel  
panels with the ribbed  
surface.

**Surface Materials**

**Markerboard**

- White only

**Actual Dimensions**

Width 23<sup>45</sup>/<sub>64</sub>", 29<sup>45</sup>/<sub>64</sub>", 35<sup>45</sup>/<sub>64</sub>", 41<sup>45</sup>/<sub>64</sub>", and 47<sup>45</sup>/<sub>64</sub>"

Height 12<sup>5</sup>/<sub>32</sub>", 24<sup>1</sup>/<sub>2</sub>", and 36<sup>7</sup>/<sub>8</sub>"

# Markerboard Skins

**Markerboard skins** finish the appearance of a panel and provide a writing surface for dry erase markers.


When ordering skins to the floor an F suffix will be added to the end of the style number. The total height will still be 6" less than the panel height. Using the same example, if the panel is 54"H, 48" of skin height will need to be specified.

► Specifying, page 441


## Markerboard skins

can be removed and repositioned. They are not dedicated to a specific location.


**Skin** is steel construction and can accept magnets to display and share information.

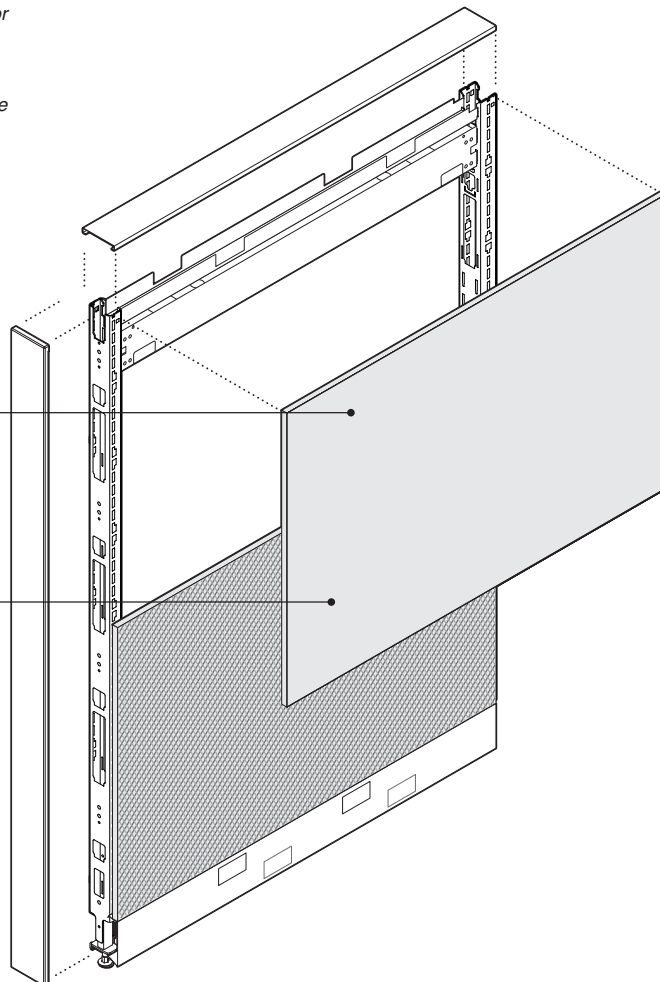

## Connections

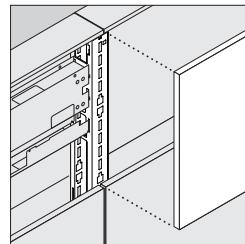

**Skins** extend onto junction and meet skin of adjacent panel. The slotted channel of the junction is accessible between these two skins.

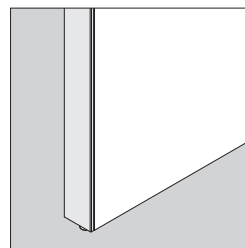

**Skins sized** to go to the floor extend to the bottom of the panel. They can be used on one or both sides of the panel. They can only be used in the bottom position.  
*Tip: Omit base trim option should be selected on the panel frame when using a skin to the floor.*

## Wiring & Cabling

**Power and communication** cannot be accessed in markerboard skins.

## Surface Materials

### Markerboard skin

- White only

## Application Topics

### Panel buildups

► Page 12

## Actual Dimensions

Width 17<sup>53</sup>/<sub>64</sub>", 23<sup>53</sup>/<sub>64</sub>", 29<sup>53</sup>/<sub>64</sub>", 35<sup>53</sup>/<sub>64</sub>", 41<sup>53</sup>/<sub>64</sub>", 47<sup>53</sup>/<sub>64</sub>", 59<sup>53</sup>/<sub>64</sub>", and 71<sup>53</sup>/<sub>64</sub>"

Height 12<sup>9</sup>/<sub>32</sub>", 18<sup>7</sup>/<sub>16</sub>", 24<sup>41</sup>/<sub>64</sub>", 30<sup>13</sup>/<sub>16</sub>", and 37"


Height 28<sup>29</sup>/<sub>64</sub>", 34<sup>5</sup>/<sub>8</sub>", and 40<sup>13</sup>/<sub>16</sub>"  
To the  
Floor Size



## Slatwall Skins

**Slatwall skins** have horizontal channels that support Details Worktools and accessories on 1" increments. Maximum load on skin is 80 pounds.

► Specifying, page 443

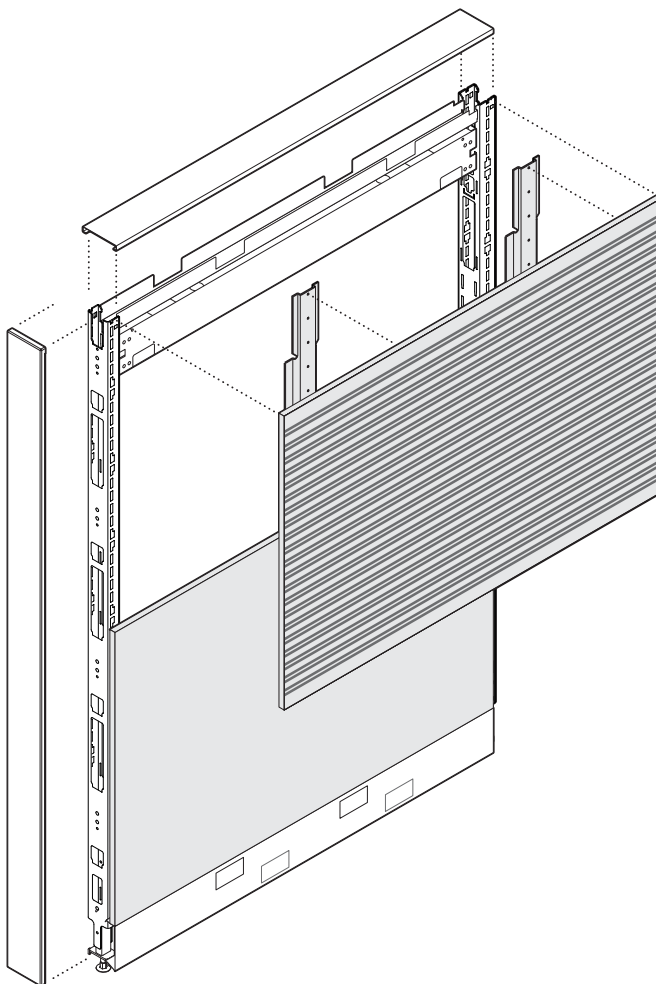

### Actual Dimensions

Width 23<sup>13</sup>/<sub>16</sub>", 29<sup>13</sup>/<sub>16</sub>", 35<sup>13</sup>/<sub>16</sub>", 41<sup>13</sup>/<sub>16</sub>",  
and 47<sup>13</sup>/<sub>16</sub>"

Height 12<sup>5</sup>/<sub>16</sub>", 18<sup>1</sup>/<sub>2</sub>", and 24<sup>11</sup>/<sub>16</sub>"

## Product Details

**Slatwall skins** can be removed and repositioned. They are not dedicated to a specific location.

## Wiring & Cabling


**Power and cables** cannot be accessed in a slatwall skin.

**Back-to-back slatwall skins** cannot be installed at the top of a panel when using a ceiling access lay-in utility package.

## Surface Materials

- Paint

## Application Topics

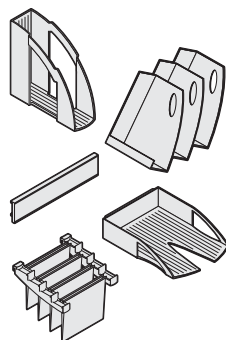


**Details accessories** are available for use on slatwall skins.

► For additional information refer to *Details Specification Guide* or contact Details at 888.783.3522 or email [info@details-worktools.com](mailto:info@details-worktools.com).




**Slatwall channels** will not align when the top of a 12"H slatwall skin is adjacent to the top of an 18"H or 24"H slatwall skin.

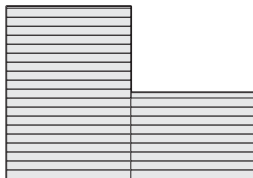

**Slatwall channels** will align when the bottom of a 12"H slatwall skin is adjacent to the bottom of an 18"H or 24"H slatwall skin.

**Binder bin or shelf** can be hung in front of a slatwall skin. If two bins or shelves are hung side by side in front of slatwall skins, the top hook must use either the third or fourth full slot down from the top. The first and second full slots from the top will not accept side-by-side shelves.



**Binder bin or shelf** can be upmounted on slatwall skin as long as there is not another bin or another slatwall skin on the adjacent in-line panel.

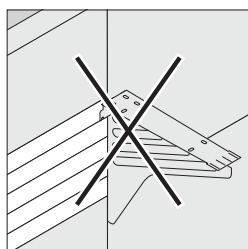

**Slatwall skins** cannot be hung next to a cantilever or on module end panel.

**Slatwall skins** cannot span a stacked joint.

**Slatwall skins** cannot be used in the bottom 12" of an Answer panel.

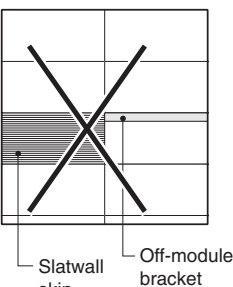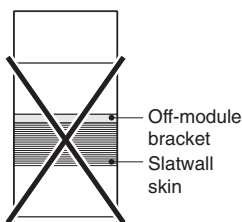


**Off-module work surface to panel connector** cannot be used in front of or on the adjacent panel at the same elevation as a 12"H or 24"H slatwall skin.

**Slatwall skin brace package** is required when mounting a Details flat panel monitor arm on an Answer slatwall skin.

**One Details single or dual monitor arm** can be mounted on 12"H slatwall skin that has an installed brace package.

**Up to two Details single monitor arms** can be mounted on 18"H or 24"H Answer slatwall skin that has an installed brace package. For optimal stability, the monitor arm should be mounted as shown below:

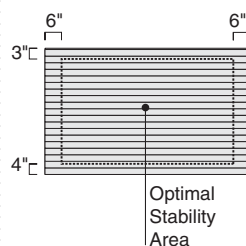

# Laminate Skins

**Laminate skins** attach to frames to finish the appearance of a panel and can be used in combination with any other skin type.

► Specifying, page 444

*Tip: When specifying skins, the total skin height will be 6" less than the panel height. For example if the panel is 54"H the total skin height will be 48". When ordering skins to the floor an F suffix will be added to the end of the style number. The total height will still be 6" less than the panel height. Using the same example, if the panel is 54"H, 48" of skin height will need to be specified.*

► See Panel Buildups, page 12, for more information.


**Laminate skins** are non-tackable.

**Skins** can be removed and repositioned.

**Laminate skins** consist of a laminate surface captured by a painted metal trim border on all sides.

**Individual laminate skins** are available for use in monolithic applications or in combination with other types of skins on the same frame.


## Connections

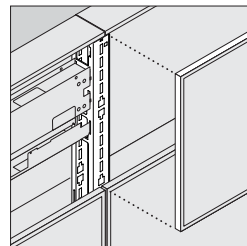

**Skins** extend onto junction and meet skin of adjacent panel. The slotted channel of the junction is accessible between these two skins.

**Skins** are available in standard heights and to the floor heights.

**Standard heights** are not dedicated to a specific location.

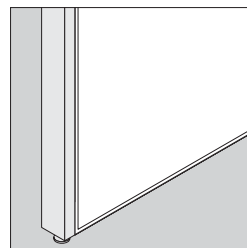

**Skins sized to go to the floor** extend to the bottom of the panel. They can be used on one or both sides of the panel. They can only be used in the bottom position.

*Tip: Omit base trim option should be selected on the panel frame when using a skin to the floor.*

## Wiring & Cabling

**Power and communication** cannot be accessed in laminate skins.

## Surface Materials

### Laminate skins

- Laminate (standard)
- Open Line laminate (option)

### Trim

- Paint

## Actual Dimensions

|                   |                                                                                                                                                                                                                                                                                             |
|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Width             | 23 <sup>53</sup> / <sub>64</sub> ", 29 <sup>53</sup> / <sub>64</sub> ", 35 <sup>53</sup> / <sub>64</sub> ", 41 <sup>53</sup> / <sub>64</sub> ", and 47 <sup>53</sup> / <sub>64</sub> "                                                                                                      |
| Height            |                                                                                                                                                                                                                                                                                             |
| Standard size     | 12 <sup>7</sup> / <sub>32</sub> ", 18 <sup>3</sup> / <sub>8</sub> ", 24 <sup>37</sup> / <sub>64</sub> ", 30 <sup>3</sup> / <sub>4</sub> ", 36 <sup>15</sup> / <sub>16</sub> ", 43 <sup>1</sup> / <sub>8</sub> ", 49 <sup>19</sup> / <sub>64</sub> ", and 61 <sup>21</sup> / <sub>32</sub> " |
| Height            |                                                                                                                                                                                                                                                                                             |
| To the floor size | 28 <sup>27</sup> / <sub>64</sub> ", 34 <sup>5</sup> / <sub>8</sub> ", 40 <sup>25</sup> / <sub>32</sub> ", 47", 53 <sup>9</sup> / <sub>64</sub> ", and 65 <sup>1</sup> / <sub>2</sub> "                                                                                                      |

# Wood Skins and Wood Skin Sets

Wood Skins and Wood Skin Sets

**Wood skins and wood skin sets** attach to frames to finish the appearance of a panel and can be used in combination with any other skin type.

► Specifying, pages 446–450

*Tip: When specifying skins, the total skin height will be 6" less than the panel height. For example if the panel is 54"H the total skin height will be 48". When ordering skins to the floor an F suffix will be added to the end of the style number. The total height will still be 6" less than the panel height. Using the same example, if the panel is 54"H, 48" of skin height will need to be specified.*

► See Panel Buildups, page 12, for more information.

**Wood skin sets** contain specific combinations of sizes and are used when segmenting all wood skins on 42"H, 48"H, 54"H, or 66"H panels. The use of sets ensures the correct cathedral wood grain alignment of all segmented skins on a frame.


**Wood skins** consist of a wood veneer surface captured by a painted metal trim border on all sides.

**Wood skins** are non-tackable.

**Skins** can be removed and repositioned.

**Grain of wood veneer cathedrals** runs vertically.

**Individual wood skins** are available for use in monolithic applications or in combination with other types of skins on the same frame.

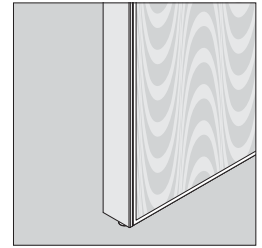

**Skins sized to go to the floor** extend to the bottom of the panel. They can be used on one or both sides of the panel. They can only be used in the bottom position.

*Tip: Omit base trim option should be selected on the panel frame when using a skin to the floor.*

## Wiring & Cabling

**Power and communication** cannot be accessed in wood skins.

## Surface Materials


**Wood skins and wood skin sets**

- Natural wood veneer (standard)
- Customiz stain (option)

## Trim

- Paint

## Connections

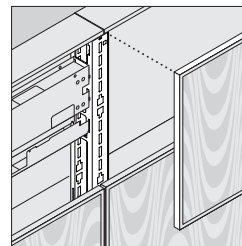

**Skins** extend onto junction and meet skin of adjacent panel. The slotted channel of the junction is accessible between these two skins.

**Skins** are available in standard heights and to the floor heights.


**Standard heights** are not dedicated to a specific location.

## Actual Dimensions

|               |                                                                                                                                                                                                                                                                                             |
|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Width         | 23 <sup>53</sup> / <sub>64</sub> ", 29 <sup>53</sup> / <sub>64</sub> ", 35 <sup>53</sup> / <sub>64</sub> ", 41 <sup>53</sup> / <sub>64</sub> ", and 47 <sup>53</sup> / <sub>64</sub> "                                                                                                      |
| Height        |                                                                                                                                                                                                                                                                                             |
| Standard size | 12 <sup>7</sup> / <sub>32</sub> ", 18 <sup>3</sup> / <sub>8</sub> ", 24 <sup>37</sup> / <sub>64</sub> ", 30 <sup>3</sup> / <sub>4</sub> ", 36 <sup>15</sup> / <sub>16</sub> ", 43 <sup>1</sup> / <sub>8</sub> ", 49 <sup>19</sup> / <sub>64</sub> ", and 61 <sup>21</sup> / <sub>32</sub> " |
| Height        |                                                                                                                                                                                                                                                                                             |
| To the floor  | 28 <sup>27</sup> / <sub>64</sub> ", 34 <sup>5</sup> / <sub>8</sub> ", 40 <sup>25</sup> / <sub>32</sub> ", 47", 53 <sup>9</sup> / <sub>64</sub> ", and 65 <sup>1</sup> / <sub>2</sub> "                                                                                                      |

# Technology Skins and Covers

**Technology skin** provides easy access to power and cabling behind the skin.  
 ▶ Specifying, pages 458-462

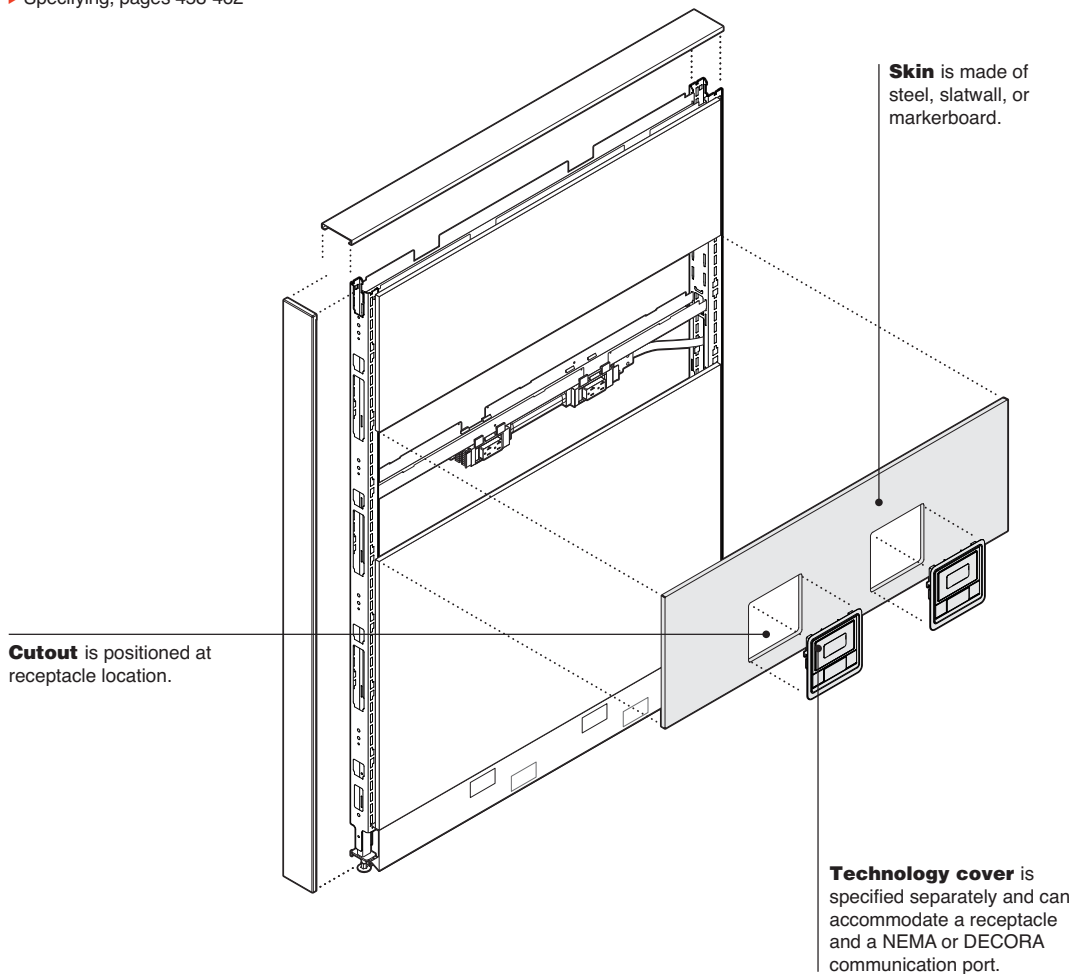

**Cutout** is positioned at receptacle location.


**Skin** is made of steel, slatwall, or markerboard.

**Technology cover** is specified separately and can accommodate a receptacle and a NEMA or DECORA communication port.


## Product Details

**Technology skins** are available in 24" to 72" widths to match standard panel widths.


**Technology skins** are available in steel, ribbed steel, fabric over steel, slatwall, or markerboard. Not all materials are available on all skin heights or widths.



**Technology skins 30" or under** are available with all cutouts or with only right- or left-hand cutouts.

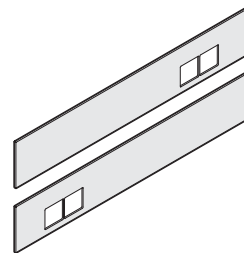

**60"W and 72"W skins** will have double cutouts and can be optioned to have them on both sides, right hand only or left hand only.




**6"H technology skin** has an option to omit all cutouts.

**Slatwall technology skins** include a painted trim for each cutout that is used behind the technology cover. It is painted to match the skin.

**Slatwall technology skins** must follow the same vertical placement rules as slatwall skins.  
 ▶ See page 112 for Vertical Placement Rules.

## Actual Dimensions

|           |                                                                                                                                                                                                                                                                |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Width     | 23 <sup>53</sup> / <sub>64</sub> ", 29 <sup>53</sup> / <sub>64</sub> ", 35 <sup>53</sup> / <sub>64</sub> ", 41 <sup>53</sup> / <sub>64</sub> ", 47 <sup>53</sup> / <sub>64</sub> ", 59 <sup>53</sup> / <sub>64</sub> ", and 71 <sup>53</sup> / <sub>64</sub> " |
| Height    | 6 <sup>1</sup> / <sub>8</sub> ", 12 <sup>9</sup> / <sub>32</sub> ", and 18 <sup>7</sup> / <sub>16</sub> "                                                                                                                                                      |
| Thickness | 1 <sup>3</sup> / <sub>32</sub> "                                                                                                                                                                                                                               |

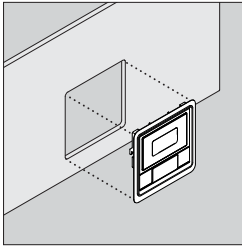

**Technology cover** accommodates both power only and power communication. Technology cover includes all necessary adapters and fillers needed for both applications.

### Connections

**Skin** attaches to junctions with the same clip used on all Answer skins.

**Technology covers** snap on to the powerkit after receptacle is installed.

### Wiring & Cabling

**Standard modular powerkits** must be used with technology skins and covers. They cannot be used with hardwire kits.

**Top opening of cover** accommodates a NEMA or modular communication port and have been designed around ANSI/TIA-569-C standards for furniture mounted communication faceplates that snap into furniture openings or knock-outs. Communication ports can never be back-to-back. Cover also includes a filler if no communication is being used.

**Receptacle cover** is available through Service Parts (891700204MP) to cover the receptacle opening if no receptacle is specified.

### Surface Materials

#### Technology skins-6"H

- Painted steel
- Fabric covered steel (option)

#### Technology skins-12"H and 18"H

- Painted steel
- Ribbed steel (option)
- Fabric covered steel (option)
- Slatwall-painted
- Markerboard


**Fabric application** is standard in the warp horizontal direction. Warp vertical direction is available as an option.

► See *Specification Guidelines for Directional Fabrics*, page 713, for more information.

#### Technology covers




- 6000 Black
- 6009 Arctic White
- 6249 Platinum Solid
- 6654 Sand
- 6697 Fog

### Application Topics



24"W skin




**24"W technology skins** have one cutout. Communication ports cannot be supported back to back, so in this skin width, communication can only be accommodated on one side of the panel at the same elevation.

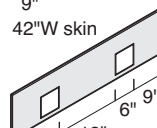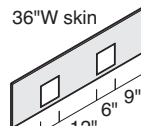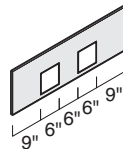

48"W skin

#### All 36"W, 42"W, and 48"W technology skins have one or two cutouts.

The right-hand cutout can accommodate power only or power and communication. Left-hand cutout can only accommodate the power.

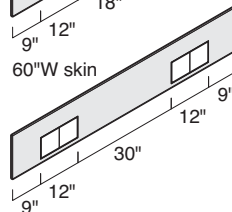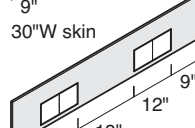


72"W skin

#### All 30"W, 60"W, and 72"W technology skins have one or two cutouts.

For each double cutout the right-hand opening can accommodate power only or power and communication. Left-hand cutout can only accommodate the power.

**Number of technology covers specified** must match the number of cutouts in a skin.


**If using powerkits shipped prior to April 2000** in an existing application, power and communication cover must be placed on the left-hand side of the technology skin.

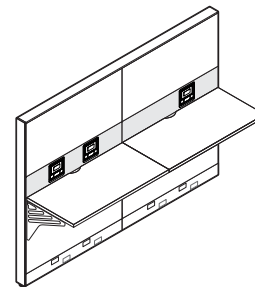

**6"H technology skin** can only be used in the position just above the work surface. The skin includes powerkit brackets to be used to reposition the powerkit location on the junction.


**When** using a 6" technology skin on one side of the panel (only used at work surface height) a 12" or 18" technology skin cannot be used on the opposite side of the panel at the same location as the 6"H skin.

**6"H technology skins** cannot be used on a 30" high panel.

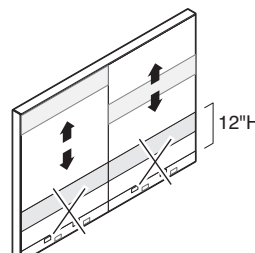

**6"H technology skins with no cutouts** can be used in any 6" position on the panel with the exception of the bottom 12" of the panel.

**Slatwall technology skins** must follow applicable slatwall skin vertical placement rules.  
► See page 112 for rules.

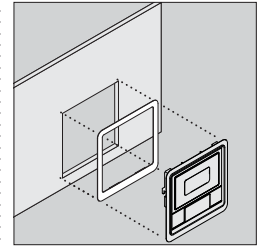

**Technology skin cover fillers** are available to allow technology skin cover to work with technology skins manufactured before October 10, 2011. Fillers are available for single or double cutouts and are painted.

**Slatwall skin brace package** is required when mounting a Details flat panel monitor arm on an Answer slatwall technology skin.

**One Details single monitor arm** can be mounted on a 12"H or 18"H slatwall technology skin with a single cutout. The skin must have an installed brace package.


# Glass Windows

**Glass windows** provide a visual space definition, yet allow light to pass through the workstation. They are available in single pane or double pane. Also available is a single pane kit that ships without glass and is used with custom glass, ordered separately.

► Specifying, page 464

**Safety glass** is provided, unless custom glass window kit is ordered.

**Metal frame** is painted and fully assembled.

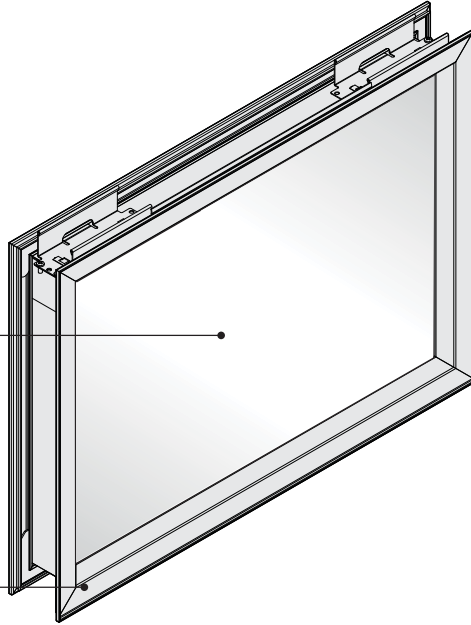

## Product Details

**Glass window** is secured by brackets in the window frame.

## Wiring & Cabling

**Power and cables** cannot be routed vertically or accessed in a glass window.

**Top channel of a window used in the top position of a panel** can accommodate lay-in cable routing beneath top cap.

## Surface Materials

### Frame

- Paint



### Single-pane window

- 6500 Clear Glass
- 6530 Frosted Glass

### Double-pane window


- 6530 Frosted Glass

## Application Topics

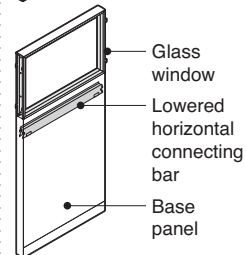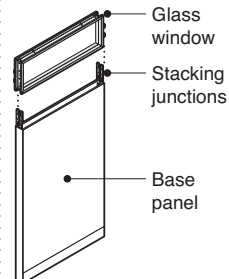


**12"H, 18"H, and 24"H glass windows** can be placed in the top position of a panel by either using stacking junctions, or by lowering the top horizontal connecting bar (24" maximum) in the base panel.


► See *Stability Guidelines* for rules regarding stacking and glass windows, page 124.

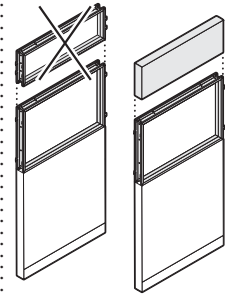


**A 24"H glass window** installed in the top of a base panel cannot accommodate any windows stacked on top. Tackable acoustical skins and steel skins can be stacked.

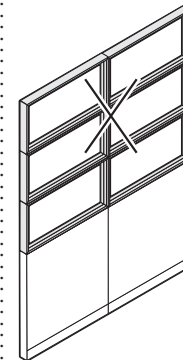

**No more than two windows** may be stacked on top of each other.




**Glass window** cannot be used at the base of a panel.

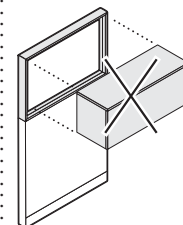


**Hanging components** cannot be hung in front of a double-pane window.

## Actual Dimensions

|        |                                                                                                                  |
|--------|------------------------------------------------------------------------------------------------------------------|
| Depth  | 27/8" (single pane) and 311/64" (double pane)                                                                    |
| Width  | 2351/64", 2951/64", 3551/64", 4151/64", 4751/64", 5951/64", 7151/64", 7751/64", 8351/64", 8951/64", and 9551/64" |
| Height | 129/32", 187/16", and 2441/64"                                                                                   |

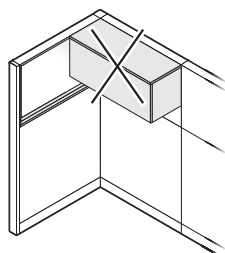


**Hanging components** cannot be used next to a double-pane window at a 90° corner.

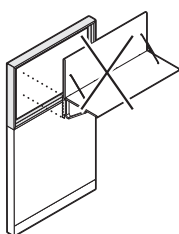


**Open design upmount bin and shelf bracket** cannot be used when double-pane window is in top position of panel.

**Sliding panel door** cannot be used when a double-pane window is used in the host panel.




**When installing windows**, you must consider ceiling height. Windows slide into junctions from the top and require clearance above the panel.

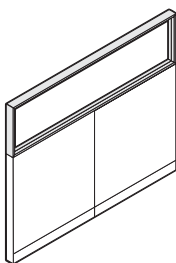


**A single glass window** can span over two or more in-line panels.

**Spanning windows should be** used in the top position only.

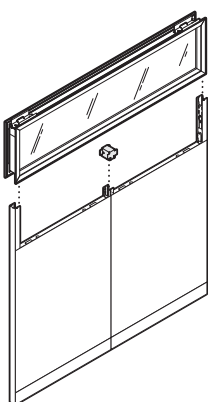


**Spanning window in-line support must be** specified separately when spanning windows. One support is used at each in-line junction to provide a light seal and help support the window.

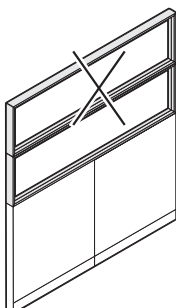

**Spanning windows of any width** cannot be stacked on top of each other.

**When a spanning window** is used, it is recommended that the same size spanning top cap also be specified for use on the window.



**When double stacking junctions**, at least one of the stacking junctions must be connected with a horizontal beam.

**When ordering a 78"W or wider single pane window kit to be used with steel or fabric skins located directly below it**, two clips (T521328SR) should be ordered and installed.

#### Field-Installed, Single-Pane Custom Glass Kits will accommodate 4 mm – 6 mm glass

| Frame Size | Style Number    | Height  | Width   | Maximum Thickness |
|------------|-----------------|---------|---------|-------------------|
| 12"H       | 24"W TS71224SCW | 9.760"  | 21.280" | 0.245"            |
|            | 30"W TS71230SCW | 9.760"  | 27.280" | 0.245"            |
|            | 36"W TS71236SCW | 9.760"  | 33.280" | 0.245"            |
|            | 42"W TS71242SCW | 9.760"  | 39.280" | 0.245"            |
|            | 48"W TS71248SCW | 9.760"  | 45.280" | 0.245"            |
|            | 60"W TS71260SCW | 9.760"  | 57.280" | 0.245"            |
|            | 72"W TS71272SCW | 9.760"  | 69.280" | 0.245"            |
|            | 78"W TS71278SCW | 9.760"  | 75.280" | 0.245"            |
|            | 84"W TS71284SCW | 9.760"  | 81.280" | 0.245"            |
|            | 90"W TS71290SCW | 9.760"  | 87.280" | 0.245"            |
| 18"H       | 24"W TS71824SCW | 15.940" | 21.280" | 0.245"            |
|            | 30"W TS71830SCW | 15.940" | 27.280" | 0.245"            |
|            | 36"W TS71836SCW | 15.940" | 33.280" | 0.245"            |
|            | 42"W TS71842SCW | 15.940" | 39.280" | 0.245"            |
|            | 48"W TS71848SCW | 15.940" | 45.280" | 0.245"            |
|            | 60"W TS71860SCW | 15.940" | 57.280" | 0.245"            |
|            | 72"W TS71872SCW | 15.940" | 69.280" | 0.245"            |
|            | 78"W TS71878SCW | 15.940" | 75.280" | 0.245"            |
|            | 84"W TS71884SCW | 15.940" | 81.280" | 0.245"            |
|            | 90"W TS71890SCW | 15.940" | 87.280" | 0.245"            |
| 24"H       | 24"W TS72424SCW | 22.120" | 21.280" | 0.245"            |
|            | 30"W TS72430SCW | 22.120" | 27.280" | 0.245"            |
|            | 36"W TS72436SCW | 22.120" | 33.280" | 0.245"            |
|            | 42"W TS72442SCW | 22.120" | 39.280" | 0.245"            |
|            | 48"W TS72448SCW | 22.120" | 45.280" | 0.245"            |
|            | 60"W TS72460SCW | 22.120" | 57.280" | 0.245"            |
|            | 72"W TS72472SCW | 22.120" | 69.280" | 0.245"            |
|            | 78"W TS72478SCW | 22.120" | 75.280" | 0.245"            |
|            | 84"W TS72484SCW | 22.120" | 81.280" | 0.245"            |
|            | 90"W TS72490SCW | 22.120" | 87.280" | 0.245"            |
| 30"H       | 24"W TS73424SCW | 28.120" | 21.280" | 0.245"            |
|            | 30"W TS73430SCW | 28.120" | 27.280" | 0.245"            |
|            | 36"W TS73436SCW | 28.120" | 33.280" | 0.245"            |
|            | 42"W TS73442SCW | 28.120" | 39.280" | 0.245"            |
|            | 48"W TS73448SCW | 28.120" | 45.280" | 0.245"            |
|            | 60"W TS73460SCW | 28.120" | 57.280" | 0.245"            |
|            | 72"W TS73472SCW | 28.120" | 69.280" | 0.245"            |
|            | 78"W TS73478SCW | 28.120" | 75.280" | 0.245"            |
|            | 84"W TS73484SCW | 28.120" | 81.280" | 0.245"            |
|            | 90"W TS73490SCW | 28.120" | 87.280" | 0.245"            |

# Sliding Panel Doors

**Sliding door** is handed and can be added to workstations for additional privacy.


► Specifying, page 469

**Door** must be installed on the outside of the workstation.

**Door** is attached to the host panel only; therefore, the stability of the door is closely related to the stability of the host panel.

**Sliding door** can be specified with lock option. Specify lock cylinder and key separately.

**Receiving panel – height of receiving panel** must match height of the door.

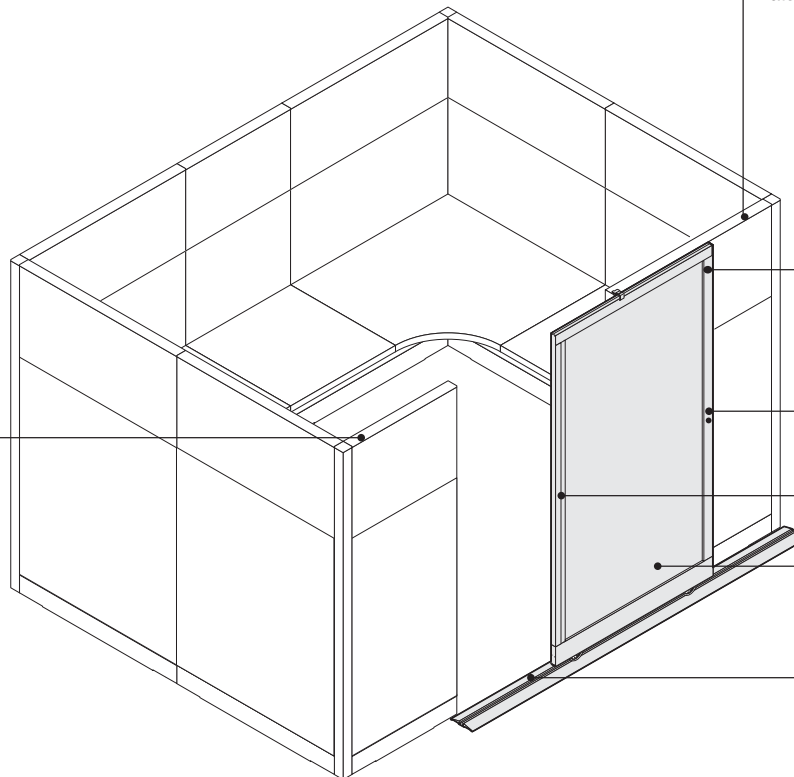

**Host panel – height of the host panel** must match the height of the door.


**Sliding door frame and threshold** are constructed from extruded aluminum and painted.

**Lock mechanism** is on the right-hand side for left-hand sliding door.

**Door handle** is integral and is ADA compliant.

**Left-hand sliding door** closes from right to left.

**Door** slides along threshold on wheels. Wheels have 1" adjustment for installation on uneven floors. Threshold is ADA compliant.

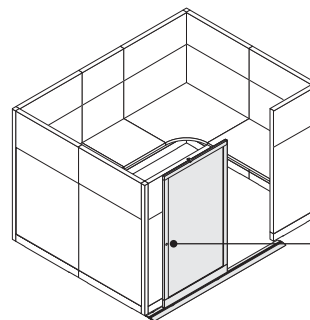

**Right-hand sliding door** closes from left to right.

**Lock mechanism** is on the left-hand side for right-hand sliding door.

## Actual Dimensions

|                |             |
|----------------|-------------|
| Door height    | 66" and 78" |
| Door width     | 36" and 42" |
| Door thickness | 1 1/4"      |

**Product Details**

**Sliding door** is handed. Right-handed sliding door or left-handed sliding door must be specified.

**Sliding door** can be specified with lock option. Specify lock cylinder and key separately.

**Door insert** is standard in ribbed, translucent plastic. Clear tempered glass and white laminated glass are available as options.

**Surface Materials**

**Frame and door track**

- Paint

**Door insert**


- 6625 Translucent
- 6500 Clear glass
- 6541 White laminated

**Application Topics**

**Sliding door** is not free-standing. It must mount to panels.

**Door** is attached to the host panel only. Therefore, the stability of the door is closely related to the stability of the host panel.

► See Guidelines for Sliding Door Applied to Answer, page 139.

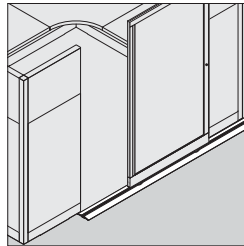

**Door track** is attached to both host panel and opposite panel.

**Height of door** must match height of host panel - 66"H or 78"H.

**Match** the width of the host panel to the width of the door, if possible.


**When attaching the sliding door to an Answer panel,** a junction stabilizer bracket is available for added rigidity to the host panel. If a host and/or receiving panel run exceeds 4', a junction stabilizer bracket must be applied to the door end of the host and/or receiving panel run. On long runs, apply a junction stabilizer bracket or perpendicular panel every 8'.

**Sliding panel door** cannot attach to a host panel with a double-pane window.

# Fence Connectors, Posts, and Beams

**Fence connectors** attach Post and Beam perpendicular to Answer panels forming a fin wall support.  
► Specifying, page 471

**Connector** engages in the vertical slot. The connector is handed to make this attachment on either the left- or right-hand side of the frame.  
*Tip: Left-hand fence connector pictured.*

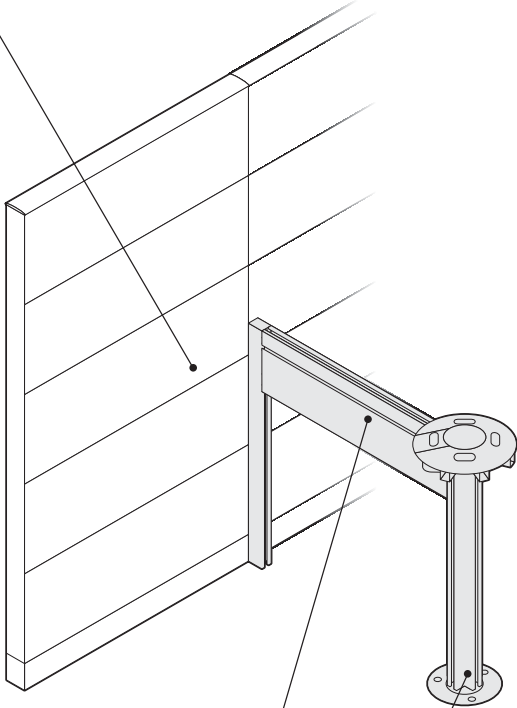


**Minimum beam length** is 4'. Maximum beam length is 10'.

**Post** attaches to beams in in-line, L-, T-, X-, or Y- (120°) configurations.


## Actual Dimensions

|                          | Fence Connectors | Posts | Beams                              |
|--------------------------|------------------|-------|------------------------------------|
| Depth                    | 2"               | 4"    | 1 3/8"                             |
| Width                    | 1 3/8"           | 4"    | 3' 4", 4', 5', 6', 7', 8', 9', 10' |
| Height                   | 32 1/2"          | 33"   | 8 1/2"                             |
| Leveling mechanism range | N.A.             | 3"    | N.A.                               |


## Product Details

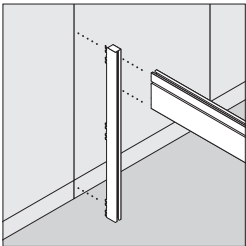

**Connector** occupies vertical slots in the frame 32 1/2" measured up from the bottom edge of the base trim.

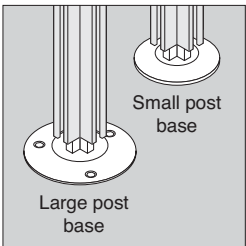

**Large post base** is 8 1/2" in diameter. Small post base is 4 1/2" in diameter.

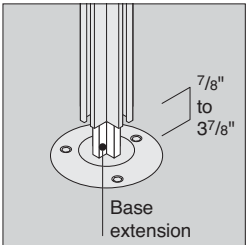


**Leveling capability** is provided by 3" adjustability between the post and base extension (included with post). A height-adjustment jack is available through Service Parts (946800103SR) for leveling ease on large installations.

**Post base shims**, ordered separately, can be used under post base to raise to the appropriate carpet level.

**Beams** may be field cut to any dimension. An anchor block drilling fixture must be ordered through Service Parts (946800102SR) to place new anchor block holes in the correct position after cutting.

**When attaching screens** to Post and Beam fence, remember to order attachment hardware separately.

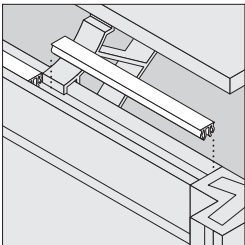

**Fence dust covers** can be inserted into top T-slot on fence beam. Dust covers come in 10-foot lengths and can be cut to size in the field.

## Connections

**Fence connector** is mounted within the module width of the frame. Horizontal space within that frame is reduced by 1 1/4".


**Width of panel-mounted worksurfaces** is affected by this change in module.

**Monolithic skins and lower segmented skins** up to 32 1/2" measured from the bottom of the base trim, are trapped by the fence connector once installed on the panel frame. Base trim is not trapped.


**Cantilevers** cannot occupy the same vertical slots as the fence connector bracket.

**Fence connector** cannot be used when panels are stacked and loaded with bins and shelves.

**Fence connector** cannot be placed between two slat-wall skins.

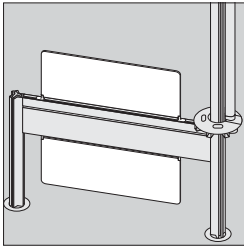

**Screens** can be mounted above or below beams for privacy or modesty.

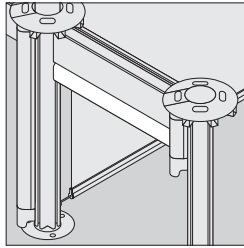

**Horizontal fence tubes** provide power and cable management at the fence beam locations.

### Surface Materials

**Fence connector**


- 8043 Clear Anodized aluminum only

**Post top cap**


- 6694 Slate plastic only

**Vertical post tube**


- 6644 Fusion Dark plastic only

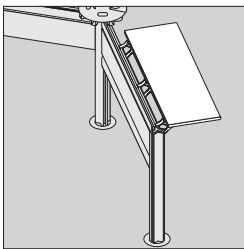

**Shelves** are additional storage surfaces that sit above the worksurface. The shelves are 35¼" high.

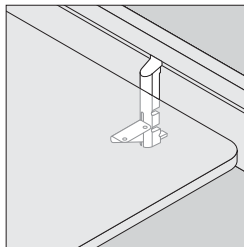


**Tether brackets** can be used to side support worksurfaces.

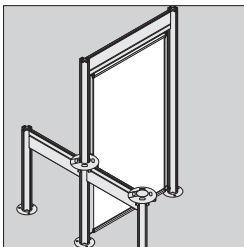

**Use of tether brackets as side supports** further reduces horizontal space available by 1½" each side and affects planning of mounted worksurfaces.

**Infill** is a fabric screen that stretches from overhead beam to floor, from overhead beam to fence beam, or from fence beam to floor.

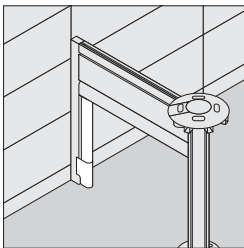


**Vertical post tube** is available to conceal power harnesses and communication cables routed between panel and fence.

# Stability Guidelines

**Answer**, when installed properly, is an exceptionally stable furniture system. That applies to workstations using panels alone, panel-supported components, or freestanding furniture.


**The following section on panel stability** gives some guidelines to be used with common system furniture configurations. Guidelines are given to panels with and without components. Consult your local dealer or Steelcase representative prior to deviating from these guidelines.

**When panel height exceeds six feet in seismic geographical areas rated at a 3 or 4**, floor plans must be submitted to a certified structural engineering firm to assure the product application complies with applicable building codes. Steelcase is not responsible for consultation fees. Maximum allowable stacked panel height is 90".

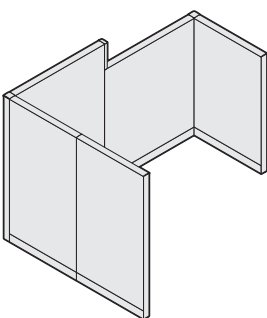


**Change-of-height** has no effect on these stability guidelines unless otherwise specified.


**There are several ways** to anchor the end of a panel run:

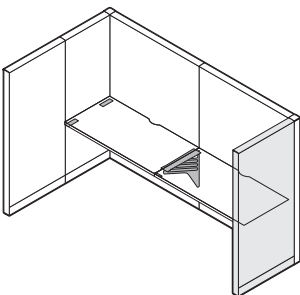

With a return panel.

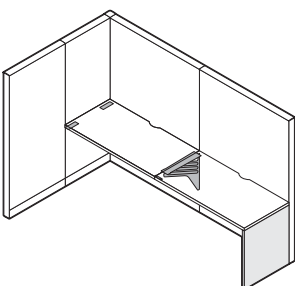

With an end panel.

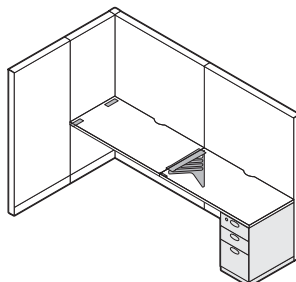

With a pedestal, pedestal filler, or a lateral file with a storage-to-panel connector.

Guidelines for Panel-Hung Components  
▶ Page 125

Guidelines for "L" Configurations  
▶ Page 126

Guidelines for "T" Configurations  
▶ Page 126

Guidelines for Support Brackets—No Overheads  
▶ Page 128

Guidelines for Support Brackets—Overheads  
▶ Page 128

Guidelines for Support Brackets  
▶ Page 130

Guidelines for "U" Configurations  
▶ Page 130

Guidelines for "X" Configurations  
▶ Page 131

Guidelines for "V" Configurations  
▶ Page 132

Guidelines for "Y" Configurations  
▶ Page 133

Guidelines for Bench Configurations  
▶ Page 134

Guidelines for Post and Beam Fence  
▶ Page 136

Guidelines for Wall-Start Junction Configurations  
▶ Page 137

Guidelines for Answer Off-Module Bracket Configurations  
▶ Page 138


Guidelines for Sliding Panel Door Applied to Answer  
▶ Page 139

### Guidelines for Answer Panel-Hung Components


**These guidelines** treat shelves and bins as interchangeable.

- If bins or shelves are applied at an elevation higher than 66", a perpendicular panel of same height (or up to 24" lesser height) is required.
- Top of universal sliding door bin is not designed to support the weight of a seated person.
- When ganging bins or shelves, the use of a tie plate is required.


**In all cases, up to two panel-hung components** may be used per panel, per side. These are some common applications:

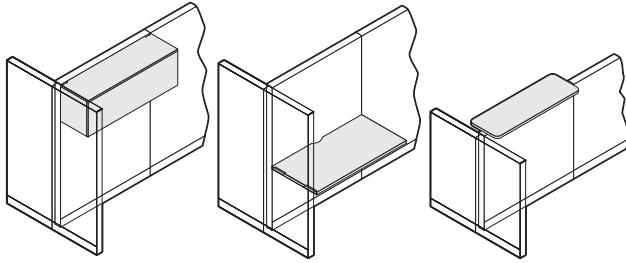


Hanging one component on one side.

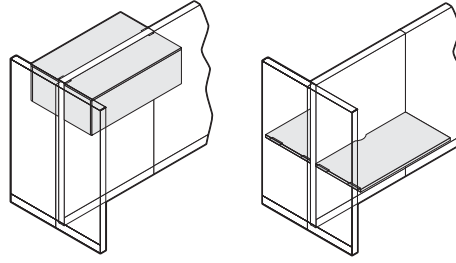

Hanging one component on each side.

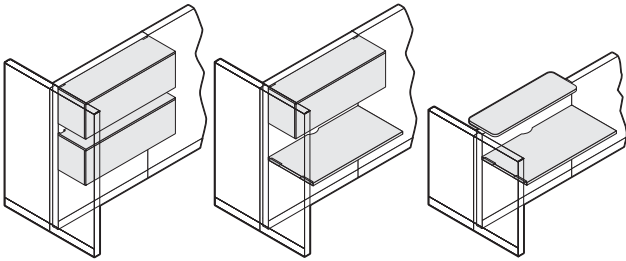


Hanging two components on one side.

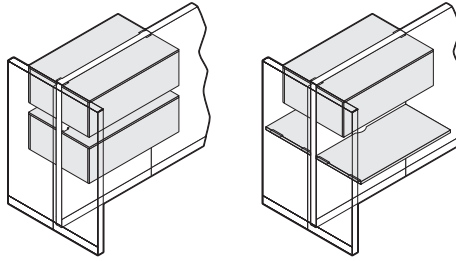


Hanging two components on each side.

**When 24"W return panels are placed adjacent to each end of components**, you may use up to four shelves or bins on a panel (without worksurfaces).

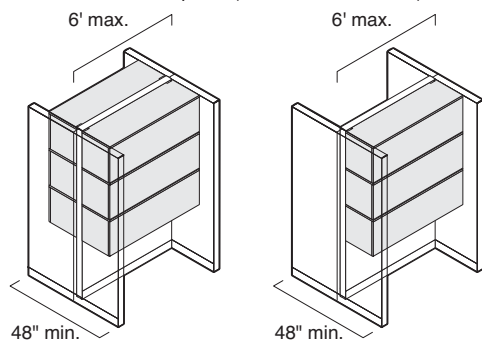

Three shelves or bins, 48" maximum vertical loading space including top.

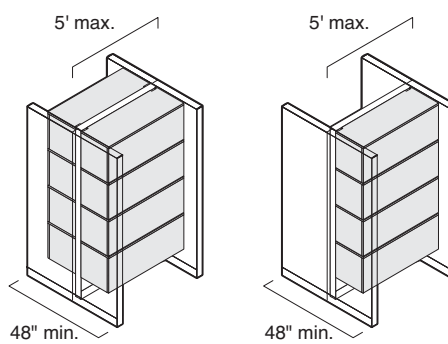




Four shelves or bins, 60" maximum vertical loading space including top.

## Stability Guidelines, continued

### Guidelines for “L” Configurations


#### Panels with Panel-Hung Components

If **A** is up to 12' or less, you need to have either a pedestal with filler, a jetty or bubble jetty worksurface, or an end panel on end. Maximum 8' of shelves or bins per panel run.

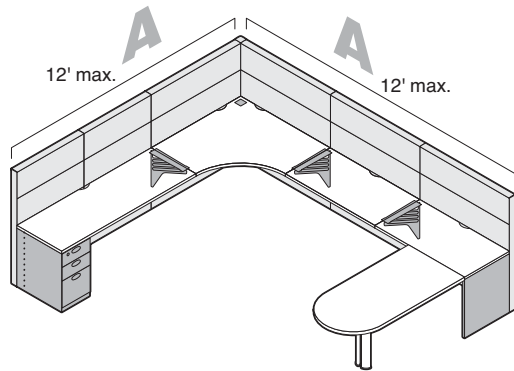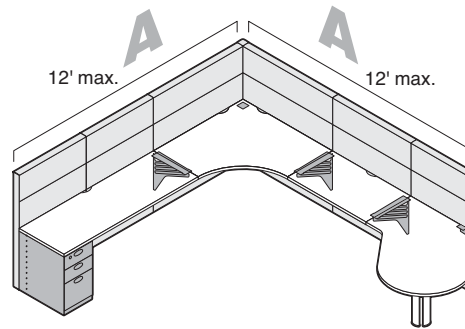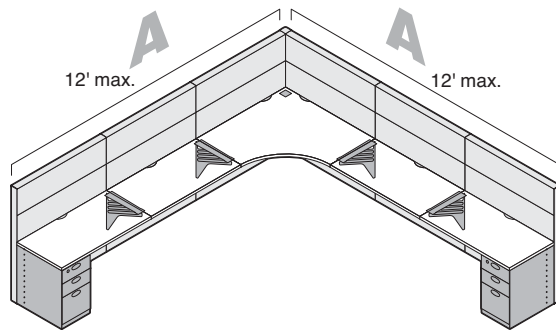


### Guidelines for “T” Configurations

#### Panels without Panel-Hung Components

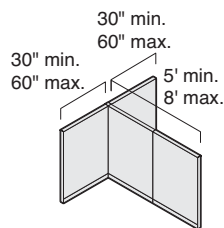


An 8' run with no panel-hung component does not require a return panel. For additional stability or longer runs, apply a junction stabilizer bracket every 8' bolted to a concrete floor.

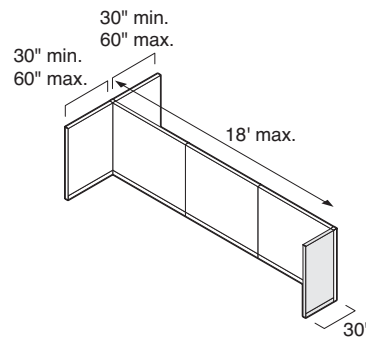

For runs over 8' up to 18', you must use at least a 30"W return panel.


## Guidelines for “T” Configurations, continued

### Panels without Panel-Hung Components

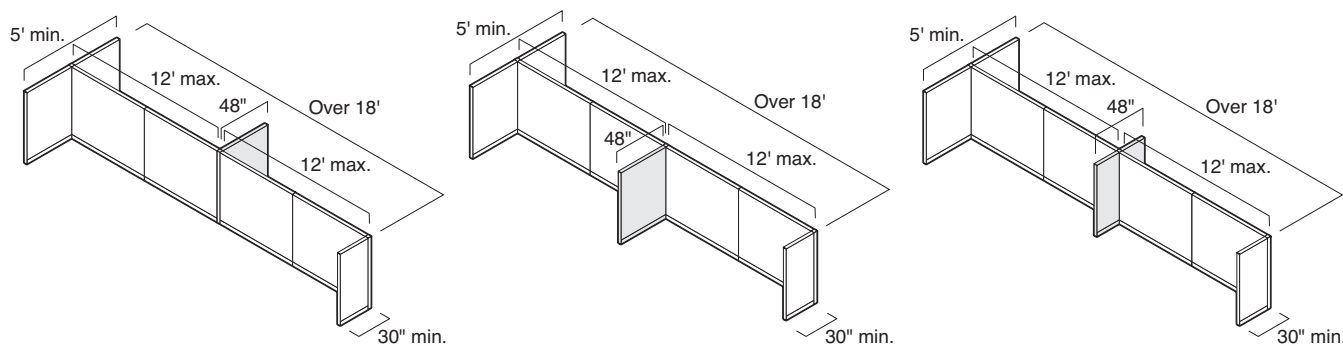


**For runs over 18',** you must locate a 48"W perpendicular panel every 12'.


### Panels with Panel-Hung Components Counterbalanced on Both Sides

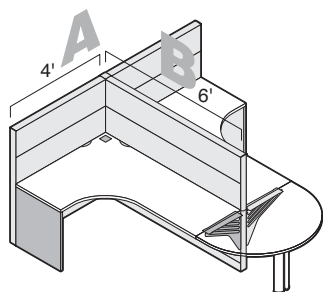


**If A is 4' long and B is 6' long,** you must use an end panel and a cantilever.

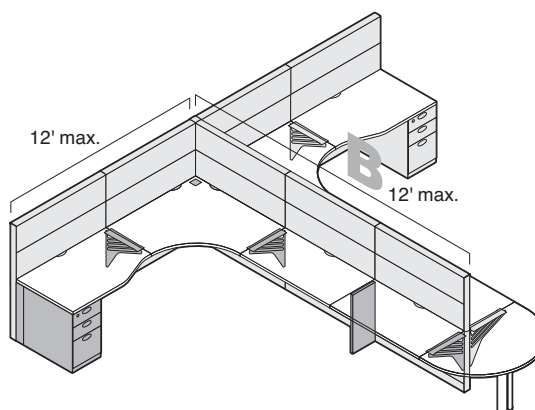

**If B is 6' to 12',** you must use one center support panel per side. Maximum 8' of shelves or bins per panel run.

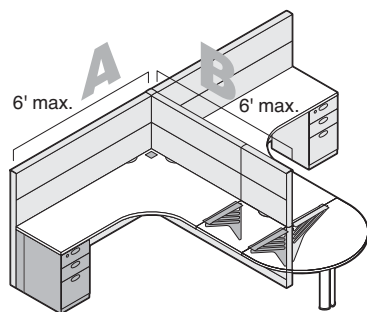


**If B is up to 6' long,** you can use cantilevers to support adjoining worksurfaces.

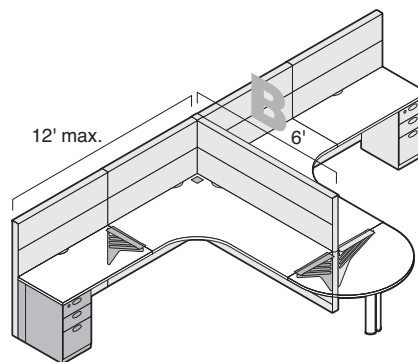


**If B is up to 6' long,** you can use cantilevers to support adjoining worksurfaces. Maximum 8' of shelves or bins per panel run.

## Stability Guidelines, continued

### Guidelines for Support Brackets—No Overheads:

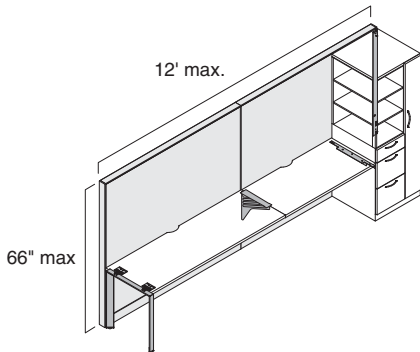

*Tip: When using a tower with a storage-to-panel connector to support the panel run, counterweight is required for towers that need them, unless the panel run is equal to or greater than 5'.*

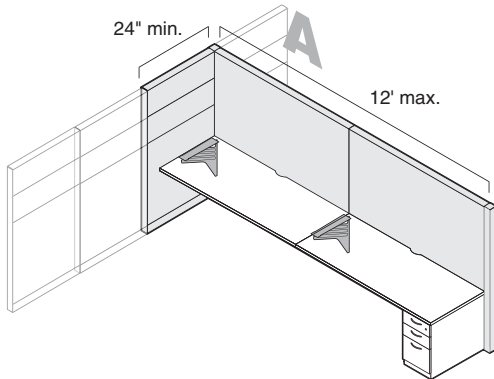

#### One end of panel run must be supported by:

- Panel that is minimum 24" wide.
- Tower with tall storage-to-panel connector (24" or 30"D)

#### Other end of panel run can be supported by:

- Open loop leg
- Closed loop leg
- Pedestal with filler
- End panel
- 1.5H or 2H storage with storage-to-panel connector
  - 18" or 24" deep cabinet in perpendicular application
  - 24" deep cabinet in parallel application


#### 24" deep worksurfaces:

- Can be completely supported by cantilever brackets or a combination of cantilever and side support brackets, pedestals, legs (post, open loop, closed loop), end panel support, and 1.5H storage with intermediate support.
- When using cantilevers to support a 24" deep worksurface, minimum return panel width is 30". Panel width can be reduced to 24" to match the worksurface depth if side support brackets are applied.

#### 30" deep worksurfaces:


- Straight and transition worksurfaces require additional floor support along the front edge at each end, such as side support brackets, pedestal, or post leg.

### Guidelines for Support Brackets—Overheads:

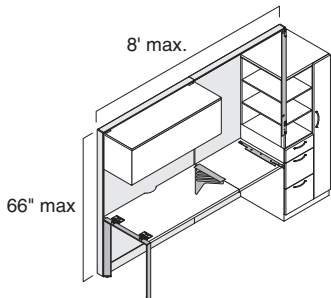

*Tip: Overhead bin or shelf cannot span over or be positioned over tower.*

*Tip: When using a tower with a storage-to-panel connector to support the panel run, counterweight is required for towers that need them, unless the panel is equal to or greater than 5'.*

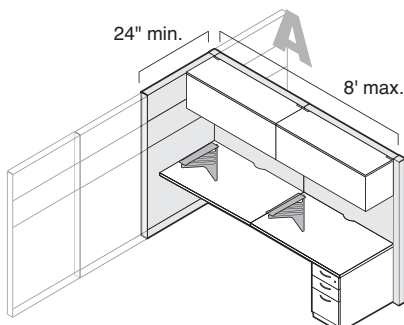

#### One end of panel run must be supported by:

- Panel that is minimum 24" wide.
- Tower with tall storage-to-panel connector (24" or 30"D)

#### Other end of panel run can be supported by:


- Open loop leg
- Closed loop leg
- Pedestal with filler
- End panel
- 1.5H or 2H storage with storage-to-panel connector
  - 18" or 24" deep cabinet in perpendicular application
  - 24" deep cabinet in parallel application

#### 24" deep worksurfaces:


- Can be completely supported by cantilever brackets or a combination of cantilever and side support brackets, pedestals, legs (post, open loop, closed loop), end panel support, and 1.5H storage with intermediate support.
- When using cantilevers to support a 24" deep worksurface, minimum return panel width is 30". Panel width can be reduced to 24" to match the worksurface depth if side support brackets are applied.

#### 30" deep worksurfaces:

- Straight and transition worksurfaces require additional floor support along the front edge at each end, such as side support brackets, pedestal, or post leg.

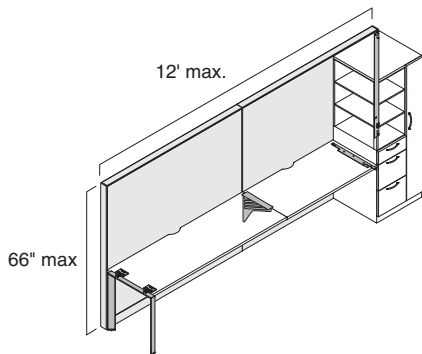**Guidelines for Support Brackets—No Panel-Hung Components:**

*Tip: When using a tower with a storage-to-panel connector to support the panel run, counterweight is required for towers that need them, unless the panel run is equal to or greater than 5'.*

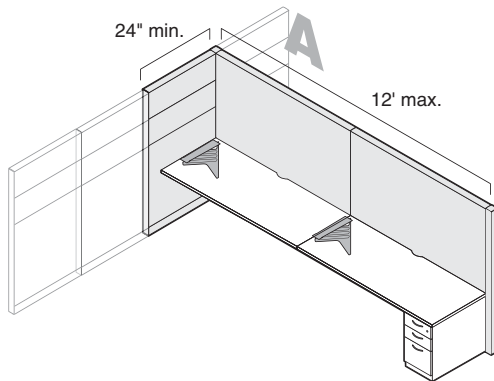**One end of panel run must be supported by:**

- Panel that is minimum 24" wide.
- Tower with tall storage-to-panel connector (24" or 30"D)

**Other end of panel run can be supported by:**


- Open loop leg
- Closed loop leg
- Pedestal with filler
- End panel
- 1.5H or 2H storage with storage-to-panel connector
  - 18" or 24" deep cabinet in perpendicular application
  - 24" deep cabinet in parallel application

**24" deep worksurfaces:**

- Can be completely supported by cantilever brackets or a combination of cantilever and side support brackets, pedestals, legs (post, open loop, closed loop), end panel support, and 1.5H storage with intermediate support.
- When using cantilevers to support a 24" deep worksurface, minimum return panel width is 30". Panel width can be reduced to 24" to match the worksurface depth if side support brackets are applied.


**30" deep worksurfaces:**

- Straight and transition worksurfaces require additional floor support along the front edge at each end, such as side support brackets, pedestal, or post leg.

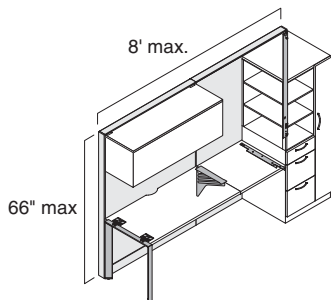**Guidelines for Support Brackets—Panel-Hung Components:**

*Tip: Overhead bin or shelf cannot span over or be positioned over tower.*

*Tip: When using a tower with a storage-to-panel connector to support the panel run, counterweight is required for towers that need them, unless the panel is equal to or greater than 5'.*

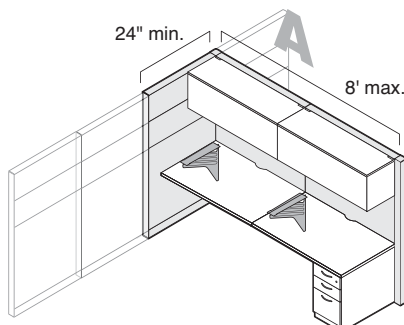**One end of panel run must be supported by:**

- Panel that is minimum 24" wide.
- Tower with tall storage-to-panel connector (24" or 30"D)

**Other end of panel run can be supported by:**

- Open loop leg
- Closed loop leg
- Pedestal with filler
- End panel
- 1.5H or 2H storage with storage-to-panel connector
  - 18" or 24" deep cabinet in perpendicular application
  - 24" deep cabinet in parallel application

**24" deep worksurfaces:**


- Can be completely supported by cantilever brackets or a combination of cantilever and side support brackets, pedestals, legs (post, open loop, closed loop), end panel support, and 1.5H storage with intermediate support.
- When using cantilevers to support a 24" deep worksurface, minimum return panel width is 30". Panel width can be reduced to 24" to match the worksurface depth if side support brackets are applied.

**30" deep worksurfaces:**

- Straight and transition worksurfaces require additional floor support along the front edge at each end, such as side support brackets, pedestal, or post leg.


## Stability Guidelines, continued

### Guidelines for Support Brackets

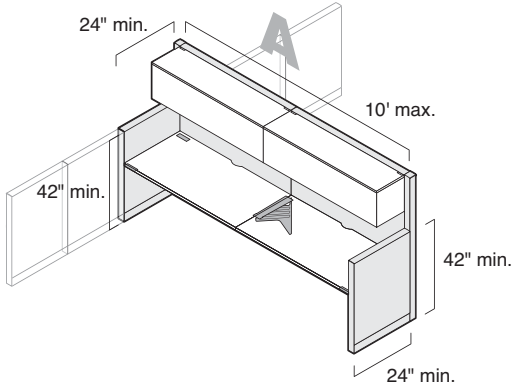


**If A is between 8' and 10'**, side support brackets are required at each end of the run. Both ends of loaded panel run must be supported by perpendicular panels.

*Note: Panel fin on one side can be replaced by a tower with a tall storage-to-panel connector as long as the tower is not outside the panel run and the overhead bin or shelf is not spanning over or positioned over the tower.*

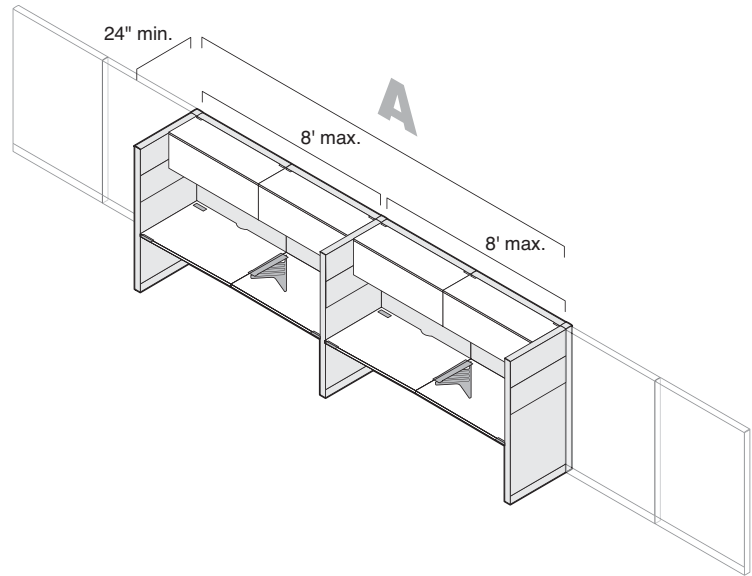


**If A is greater than 10'**, side support brackets are required at both ends of each worksurface. Full height perpendicular panels need to support the loaded panels every 8'.

### Guidelines for "U" Configurations

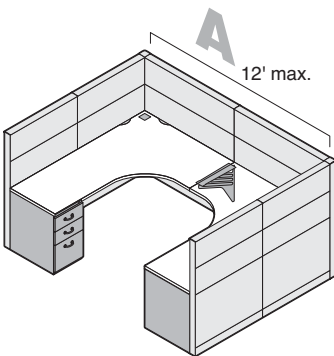


**If A is 12' or less**, no floor support is required mid-run. Maximum 8' of shelves or bins per panel run.

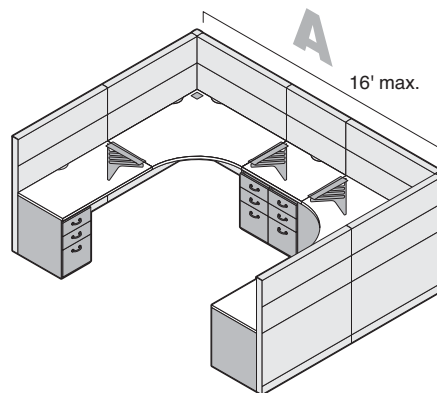

**If A is between 12' and 16'**, some type of floor support is required mid-run. Maximum 8' of shelves or bins per panel run.


## Guidelines for “X” Configurations

### Panels without Components

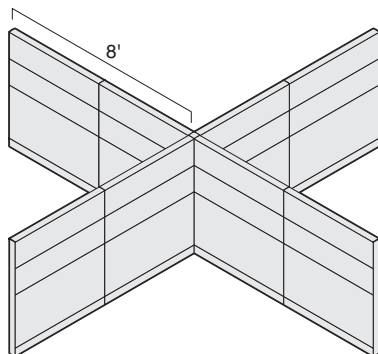


**For additional stability or longer runs,** apply a junction stabilizer bracket every 8' bolted to a concrete floor.

### Panels with Components

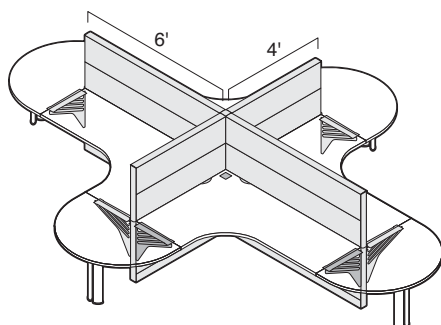


**If panel is 6' or less,** no center support is needed.

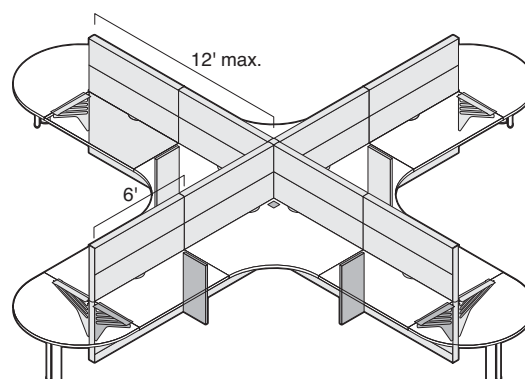


**Center support panel** is needed every 6'. Cantilevers can be used to tie spanner in. Maximum 8' of shelves or bins per panel run.

### Guidelines for “V” Configurations

#### Panels with Components

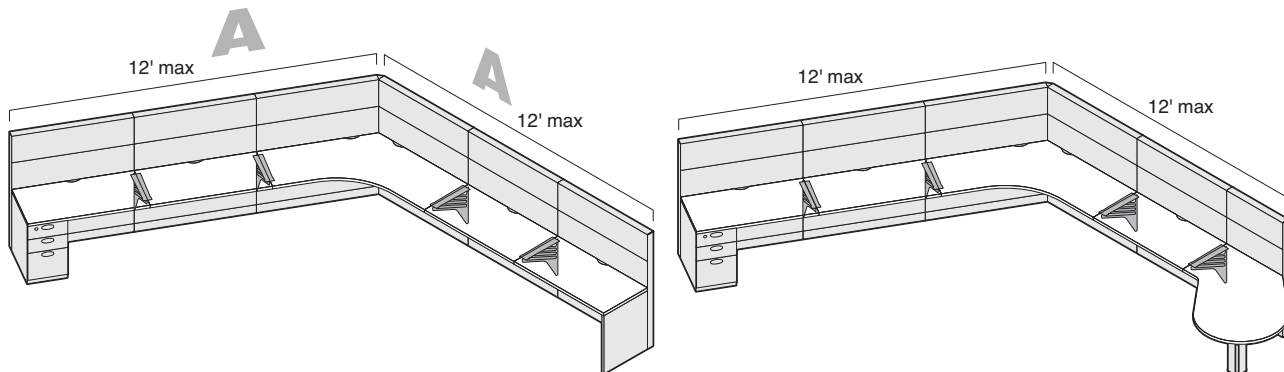

If **A** is up to 12' or less, you need to have either a pedestal with filler, a jetty or bubble jetty worksurface, or an end panel on end. 30"D straight and transition worksurfaces require additional floor support along the front edge, such as a pedestal or post leg. Maximum 8' of shelves or bins per panel run.

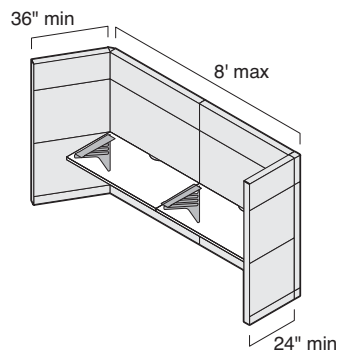


**“U” configuration** must have a cantilever with the 120° V junction. The other end needs to be supported with a full-height panel, end panel, or a pedestal with filler.

**No components can be hung** on back side of panel run unless in a “Y” configuration.


## Guidelines for “Y” Configurations

### Panels without Components


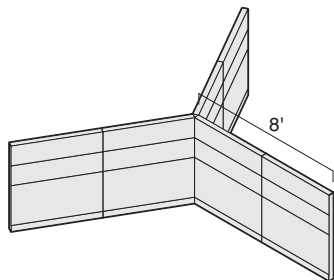


**For additional stability or longer runs,** apply a junction stabilizer bracket every 8' bolted to a concrete floor.

### Panels with Components

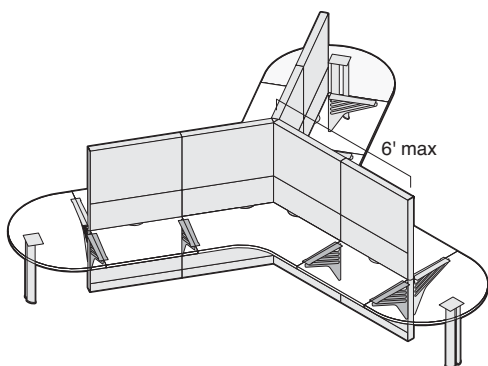

**If panel is 6' or less,** no center support is needed.

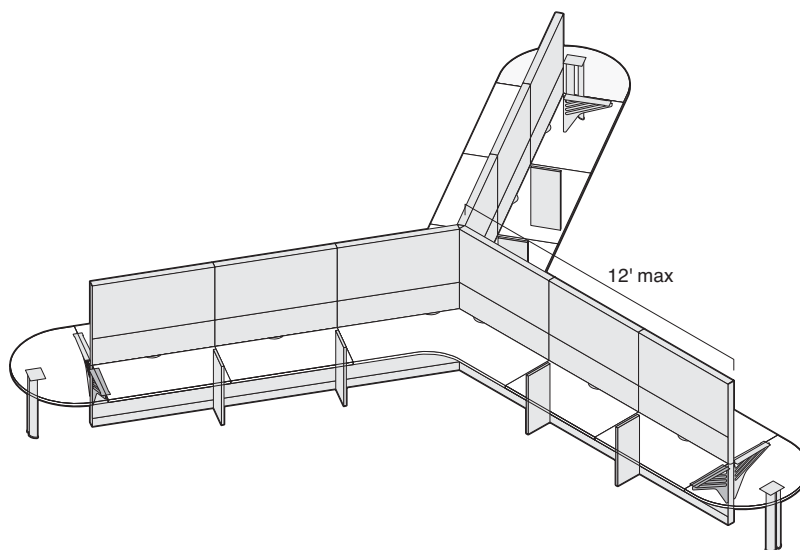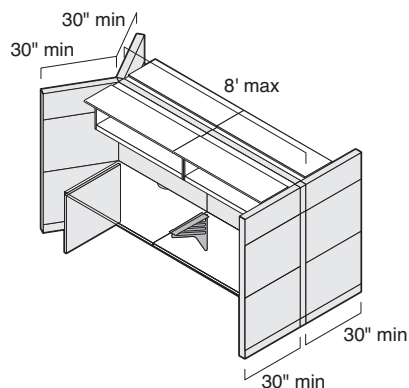

**Center support panel** is needed every 6'. Cantilevers can be used to tie spanner in. Maximum 8' of shelves or bins per panel run.


**“Y” configuration** must have an end panel with a connector bracket with the 120° Y junction. The other end needs to be supported with a full-height panel, end panel, or a pedestal with filler. For 24"D worksurfaces, the center can be supported by a cantilever when bins and worksurfaces are used on both sides (as shown). 30"D straight and transition worksurfaces require additional floor support along the front edge, such as a pedestal or post leg.

*Note: When using cantilevers to support a 24" deep worksurface, minimum panel width is 30". Panel width can be reduced to 24" to match the worksurface depth if side support brackets are applied.*


## Stability Guidelines, continued

### Guidelines for Bench Configurations without Top Cap Mounted Storage



#### Single Sided Bench

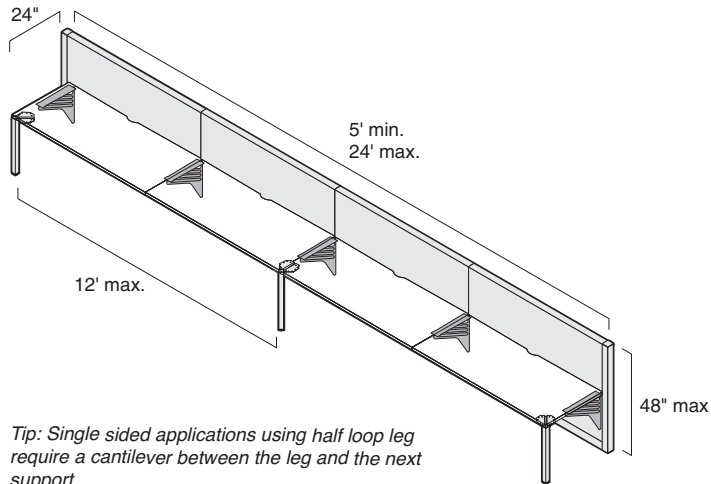

*Tip: Single sided applications using half loop leg require a cantilever between the leg and the next support.*

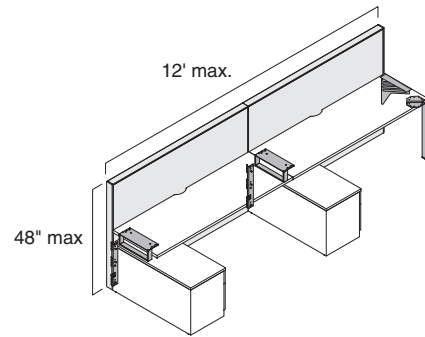

#### Double Sided Bench

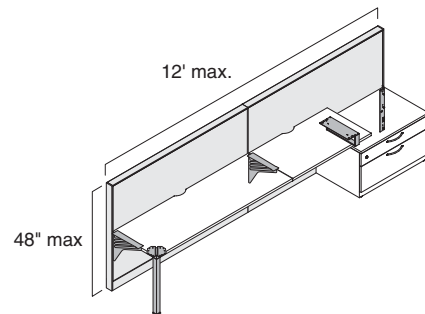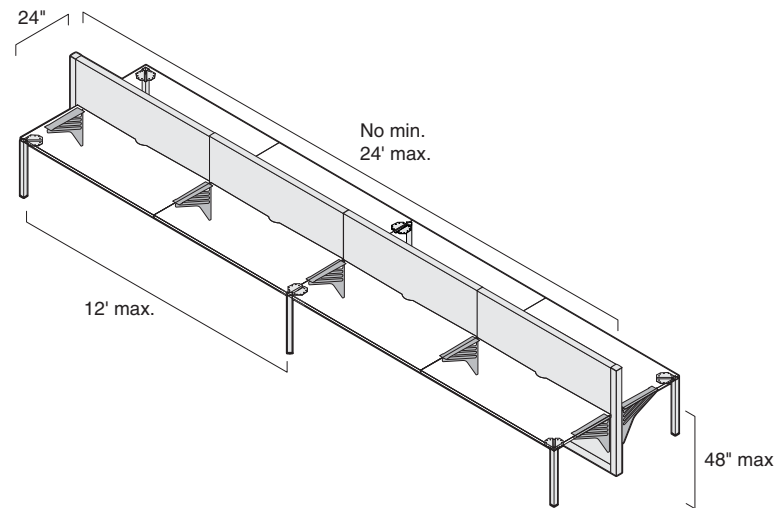

*Tip: When using a 1H, 1.5H, or 2H cabinet with a storage-to-panel bracket to support the panel run, counterweights are required for cabinets that need them, unless the application is mirrored and the panel run is equal to or greater than 6'.*

#### End-of-run support options include:

- Post leg and cantilever
- Half loop leg
- Open loop leg
- Closed loop leg
- Worksurface end panel
- Pedestal with filler
- 1H, 1.5H, or 2H (18" on 24"D) cabinet with panel-to-storage connector in perpendicular application.  
*Note: 1H and 1.5H cabinet requires intermediate support.*
- 1H, 1.5H, or 2H (24"D) cabinet with panel-to-storage connector in parallel application.  
*Note: 1H and 1.5H cabinet requires intermediate support.*

**Maximum worksurface depth** is 24" with front support every 12'.


**30"D worksurfaces** require legs in the front of each worksurface on both ends of the worksurface.

**Center support panels** cannot be used as supports.



**Slim shelves and slatwall skins** (including monitor arm attachment) can be applied, but bins and universal shelves are not allowed.

## Guidelines for Bench Configurations with Top Cap Mounted Storage

### Single Sided Bench with Aisleway Top Cap Mounted Storage

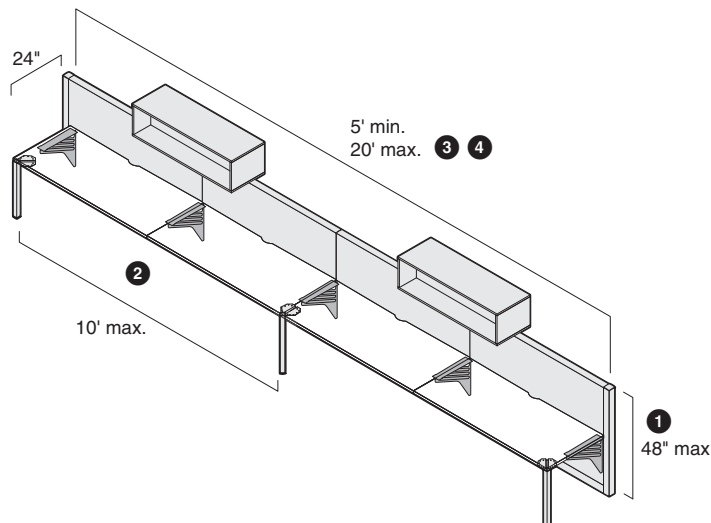

### Double Sided Bench with Center Top Cap Mounted Storage

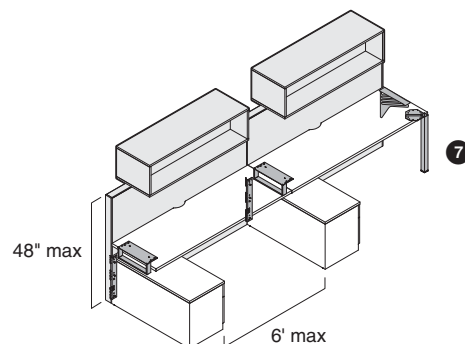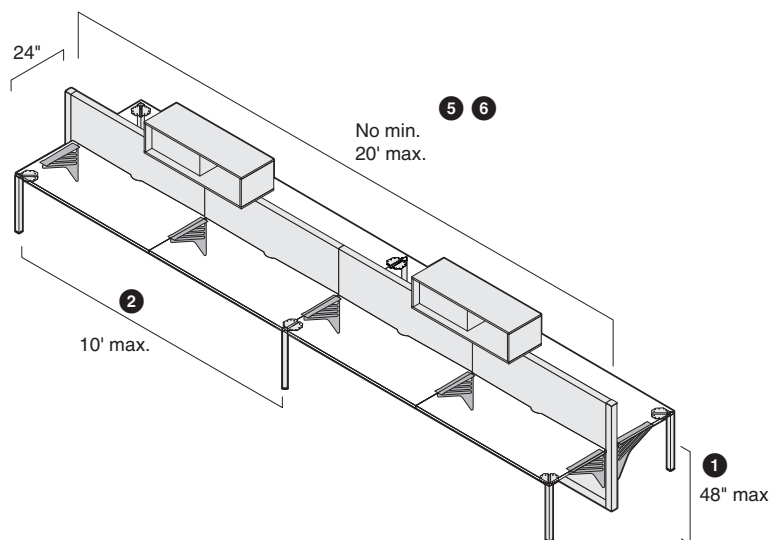

- 1 Tip: The maximum panel height with Duo and Elective Elements storage is 48". The maximum panel height with c:scape storage is 42".
- 2 Tip: 10' max between legs when using legs and cantilevers to support panel.
- 3 Tip: In aisleway applications, the back of the storage overhangs the panel 3.5".
- 4 Tip: Aisleway mounting can accept storage up to 17"D.
- 5 Tip: When top cap storage is center maintained, the storage is shared equally on top of the panel.
- 6 Tip: Center mounting can accept storage up to 25"D.
- 7 Tip: When using storage to panel connectors to support the panel application, the maximum distance between storage to panel connection is 6'.

#### End-of-run support options include:

- Post leg and cantilever
- Half loop leg
- Open loop leg
- Closed loop leg
- Worksurface end panel
- Pedestal with filler
- 1H, 1.5H, or 2H (18" on 24"D) cabinet with panel-to-storage connector in perpendicular application.  
Note: 1H and 1.5H cabinet requires intermediate support.
- 1H, 1.5H, or 2H (24"D) cabinet with panel-to-storage connector in parallel application.  
Note: 1H and 1.5H cabinet requires intermediate support.


**Maximum worksurface depth** is 24" with front support every 10'.

**30"D worksurfaces** require legs in the front of each worksurface on both ends of the worksurface.

**Center support panels** cannot be used as supports.


**Slim shelves and slatwall skins** (including monitor arm attachment) can be applied, but bins and universal shelves are not allowed.

### Guidelines for Post and Beam Fence

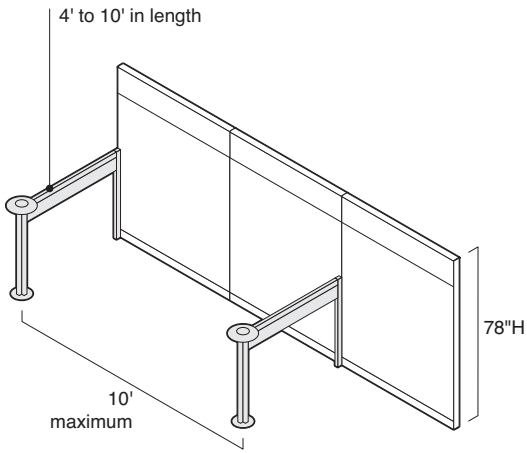


**Maximum panel height:** 78"H

**Fences spaced no more than 10' apart** can stabilize a wall.

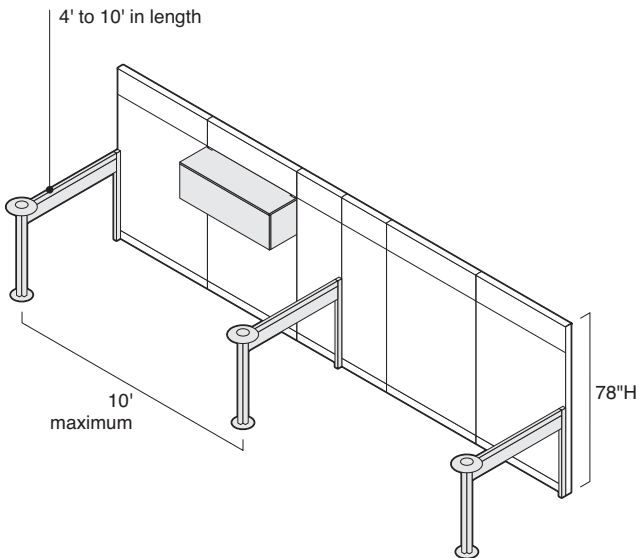

**Maximum panel height:** 78"H  
**Maximum panel run:** unlimited

**Fences spaced no more than 10' apart** can stabilize a wall with a single panel-mounted component installed on the same side as the fence for each 10' run.

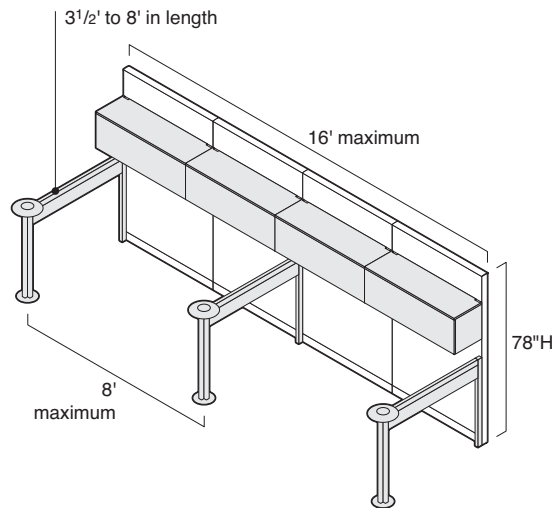







**Maximum panel height:** 78"H  
**Maximum panel run:** 16'

**Fences spaced no more than 8' apart** can stabilize a wall with upper storage.

**When hanging components on a stacked frame,** you cannot use a fence connector.

## Guidelines for Wall-Start Junction Configurations

### Panels with Components

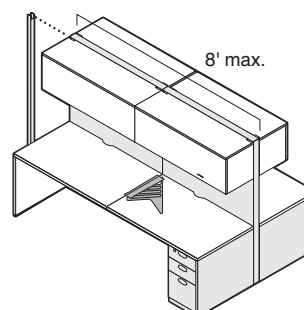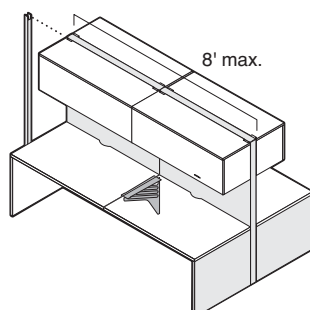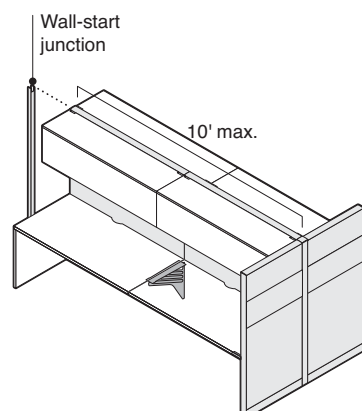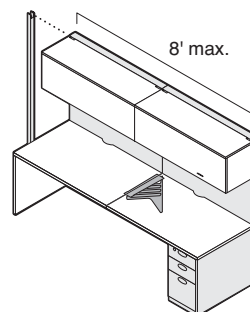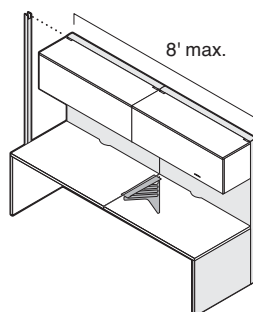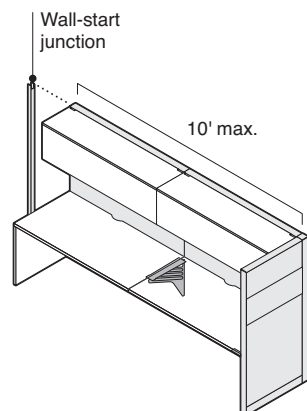


**When using a wall-start junction**, an end panel must be used with the wall-start junction and the other end must be supported by a full panel, an end panel, or a pedestal with a filler. For 24"D worksurfaces, the center can be supported by a cantilever. 30"D straight and transition worksurfaces require additional floor support along the front edge, such as a pedestal or post leg.

**Wall hang channels** for shelves and overhead storage bins cannot be used with a wall-start junction.

*Tip: Wall-start junctions must secure to the stud in a building wall or use drywall fasteners.*

## Guidelines for Answer Off-Module Bracket Configurations


### Panels with Components

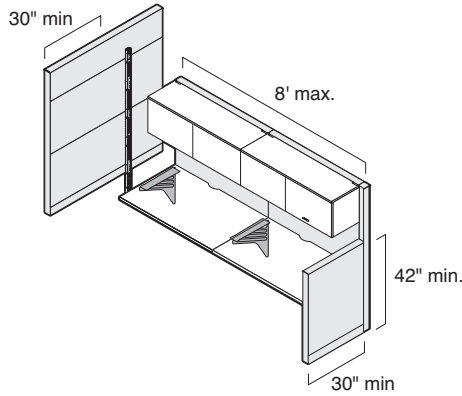

#### "U" configuration


When using an Answer off-modular connector bracket, a cantilever must be used with the connector bracket. The other end needs to be supported with a panel, end panel, or a pedestal with filler. For 24"D worksurfaces, the center can be supported by a cantilever. 30"D straight and transition work-surfaces require additional floor support along the front edge, such as a pedestal or post leg.

*Note: When using cantilevers to support a 24" deep worksurface, minimum panel width is 30". Panel width can be reduced to 24" to match the worksurface depth if side support brackets are applied.*

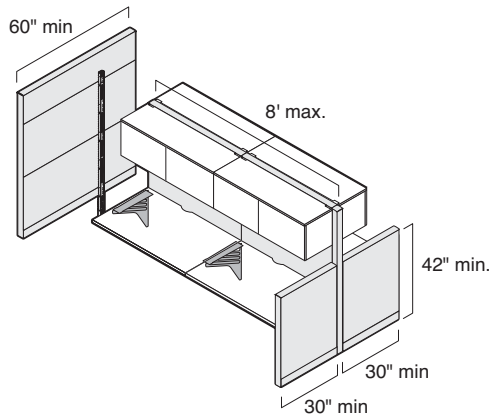


#### "T" configuration

When using an Answer off-modular connector bracket, a cantilever must be used with the connector bracket. The other end needs to be supported with a panel, end panel, or a pedestal with filler. For 24"D worksurfaces, the center can be supported by a cantilever when bins and worksurfaces are used on both sides (as shown). 30"D straight and transition worksurfaces require additional floor support along the front edge, such as a pedestal or post leg.

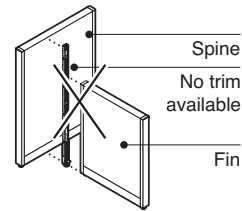


**Wall-start junction** must match the fin panel height coming off the spine wall. Change-of-height trim is not available to cover exposed wall-start junction.

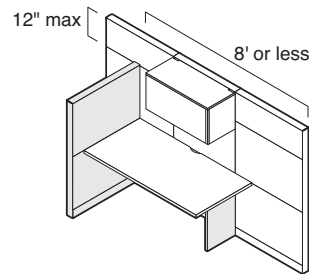

**Loading on spine wall with change-of-height off-module fin** is allowed with a maximum of 12" height difference between spine and fin. No loading on spine is permitted if the spine is 24"H or higher than the off-module fin. End panels or a pedestal with a filler is required to support a worksurface attached to spine.

### Guidelines for Sliding Panel Door Applied to Answer

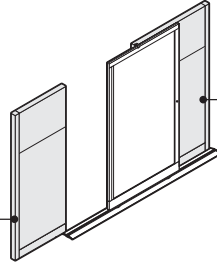

#### Receiving Panel

- Height of receiving panel must match height of door.
- If receiving panel run exceeds 4', a junction stabilizer bracket must be applied to the door end of the receiving panel run. On long receiving panel runs, apply a junction stabilizer bracket or perpendicular panel every 8'.

#### Host Panel

- Height of host panel must match height of door.
- Match the width of the host panel to the width of the door.
- If host panel run exceeds 4', a junction stabilizer bracket must be applied to the door end of the host panel run. On long host panel runs, apply a junction stabilizer bracket or perpendicular panel every 8'.



# Understanding Wiring and Cabling

**All Answer electrical components** are listed by Underwriters Laboratory (UL) and certified by the Canadian Standards Association (CSA).

|                                                                                    |            |
|------------------------------------------------------------------------------------|------------|
|  |            |
| <b>Statement of Line</b>                                                           | <b>142</b> |

## Product Details

|                          |            |
|--------------------------|------------|
| <b>Wiring Schematics</b> | <b>145</b> |
|--------------------------|------------|

|                                     |            |
|-------------------------------------|------------|
| <b>How to Calculate Power Needs</b> | <b>146</b> |
|-------------------------------------|------------|

|                         |            |
|-------------------------|------------|
| <b>Cable Capacities</b> | <b>148</b> |
|-------------------------|------------|

## Interface Products

|                                       |            |
|---------------------------------------|------------|
| Ceiling-Access Lay-In Utility Package | <b>150</b> |
|---------------------------------------|------------|

|                                     |            |
|-------------------------------------|------------|
| Floor-Access Lay-In Utility Package | <b>152</b> |
|-------------------------------------|------------|

|                        |            |
|------------------------|------------|
| Utility Pole—Thin Trim | <b>154</b> |
|------------------------|------------|

|                            |            |
|----------------------------|------------|
| Junction with Utility Pole | <b>156</b> |
|----------------------------|------------|

|                   |            |
|-------------------|------------|
| Base Power Infeed | <b>158</b> |
|-------------------|------------|

|                                        |            |
|----------------------------------------|------------|
| Special Requirements for New York City | <b>159</b> |
|----------------------------------------|------------|

|                     |            |
|---------------------|------------|
| Consolidation Point | <b>160</b> |
|---------------------|------------|

## Distribution Products

|           |            |
|-----------|------------|
| Powerkits | <b>162</b> |
|-----------|------------|

|                        |            |
|------------------------|------------|
| Pass-Through Powerkits | <b>162</b> |
|------------------------|------------|

|             |            |
|-------------|------------|
| Cable Trays | <b>162</b> |
|-------------|------------|

|                 |            |
|-----------------|------------|
| Modular Harness | <b>164</b> |
|-----------------|------------|

|                           |            |
|---------------------------|------------|
| Multipurpose Power Infeed | <b>164</b> |
|---------------------------|------------|

|                                             |            |
|---------------------------------------------|------------|
| Special Requirements for Hardwired Solution | <b>166</b> |
|---------------------------------------------|------------|

## Access Products

|                    |            |
|--------------------|------------|
| Duplex Receptacles | <b>167</b> |
|--------------------|------------|

|            |            |
|------------|------------|
| Face Plate | <b>167</b> |
|------------|------------|

## Accessories

|                      |            |
|----------------------|------------|
| Junction Tall Sleeve | <b>168</b> |
|----------------------|------------|

|                              |            |
|------------------------------|------------|
| Lay-In Junction Cable Sleeve | <b>168</b> |
|------------------------------|------------|

|                                      |            |
|--------------------------------------|------------|
| Feed-Through Horizontal Cable Sleeve | <b>168</b> |
|--------------------------------------|------------|

|                                         |            |
|-----------------------------------------|------------|
| Grommet for Horizontal Bar and Junction | <b>169</b> |
|-----------------------------------------|------------|

|                      |            |
|----------------------|------------|
| Grommet for Junction | <b>169</b> |
|----------------------|------------|


|                                  |            |
|----------------------------------|------------|
| Series 9000 Duplex Cable Grommet | <b>169</b> |
|----------------------------------|------------|

|                       |            |
|-----------------------|------------|
| Vertical Wire Manager | <b>170</b> |
|-----------------------|------------|

# Statement of Line

## Interface Products

**The interface** is the point at which the utilities within a panel connect to a building's power and communication network. All power components are field installed.

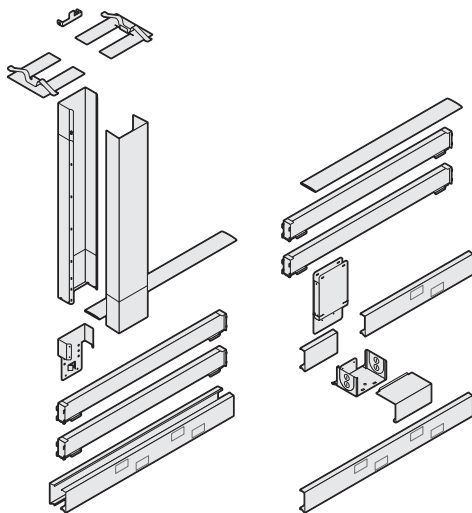

### Ceiling-Access Lay-In Utility Package

Understanding  
 ▶ Page 150  
 Specifying  
 ▶ Pages 365 and 413


### Floor-Access Lay-In Utility Package

Understanding  
 ▶ Page 152  
 Specifying  
 ▶ Pages 366 and 414




### Utility Pole—Thin Trim

Understanding  
 ▶ Page 154  
 Specifying  
 ▶ Page 364




### Junction with Utility Pole

Understanding  
 ▶ Page 156  
 Specifying  
 ▶ Page 411

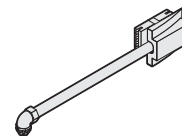


### Base Power Infeed

Understanding  
 ▶ Page 158  
 Specifying  
 ▶ Page 480

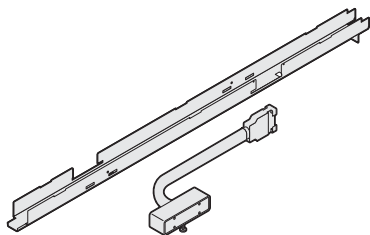

### Base Power Infeed for Use in New York City

Understanding  
 ▶ Page 159  
 Specifying  
 ▶ Page 481

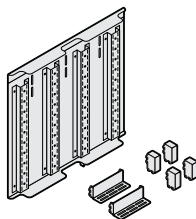


### Consolidation Point Kit


Understanding  
 ▶ Page 160  
 Specifying  
 ▶ Page 486

## Distribution Products


**Distribution** refers to the way that power and communication networks are routed through a panel.

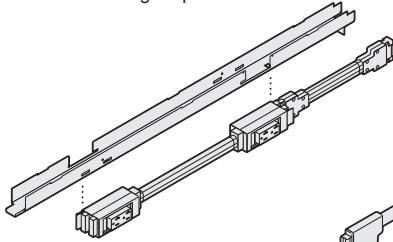


**Powerkit**  
Understanding  
▶ Page 162  
Specifying  
▶ Page 475

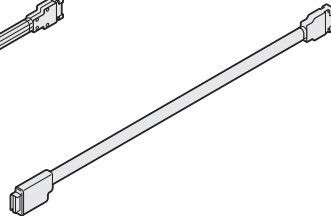


**Pass-Through Powerkit**  
Understanding  
▶ Page 162  
Specifying  
▶ Page 476

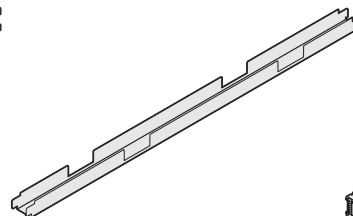


**Cable Tray**  
Understanding  
▶ Page 162  
Specifying  
▶ Page 474

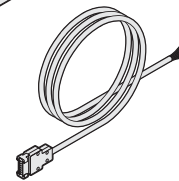

**Multipurpose Power Infeed**  
Understanding  
▶ Page 164  
Specifying  
▶ Page 483

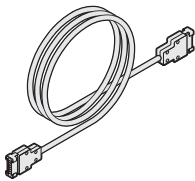

**Modular Harness**  
Understanding  
▶ Page 164  
Specifying  
▶ Page 484

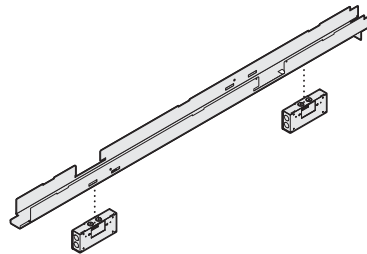

**Hardwire Solution for Chicago and Other Areas**  
Understanding  
▶ Page 166  
Specifying  
▶ Page 482

## Access Products

**Access to power and communication networks** is accommodated by power receptacles and communication outlets installed in a panel.



**Duplex Receptacles**  
Understanding  
▶ Page 167  
Specifying  
▶ Page 477



**USB Receptacles**  
Understanding  
▶ Page 167  
Specifying  
▶ Page 478



**Face Plate**  
Understanding  
▶ Page 167  
Specifying  
▶ Page 479

## Accessories

**Accessories** are used to help customize your wiring and cabling needs.




### Junction Tall Sleeve

Understanding

► Page 168

Specifying

► Page 485



### Lay-In Junction Cable Sleeve

Understanding

► Page 168

Specifying

► Page 485




### Feed-Through Horizontal Cable Sleeve

Understanding

► Page 168

Specifying

► Page 485



### Grommet for Horizontal Bar and Junction

Understanding

► Page 169

Specifying

► Page 486




### Grommet for Junction

Understanding

► Page 169

Specifying

► Page 486



### Series 9000 Duplex Cable Grommet

Understanding

► Page 169

Specifying

► Page 487



### Vertical Wire Manager

Understanding

► Page 170

Specifying

► Page 699

# Wiring Schematics

Details for the Electrician

**Answer** offers three different wiring schematics to allow you to match your specific wiring strategy to any typical building wiring plan.

*Tip: All the components in an electrical system must use the same wiring schematic. The components are keyed and color coded to make it impossible to connect mismatched parts.*

Black = Four-circuit, 3+1

Brown = Four-circuit, 2+2



Rust = Three-circuit, separate neutrals (3SN)

Shared neutrals = 10 gauge

Non-shared neutrals = 12 gauge


Hot wires = 12 gauge

## Four-Circuit, 3+1

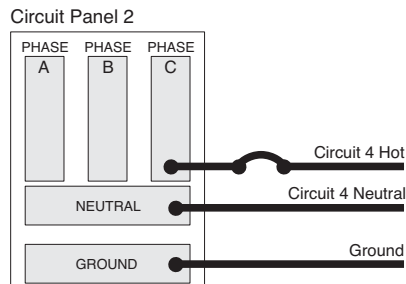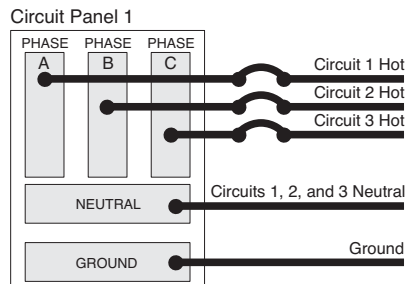



**In the four-circuit 3+1 schematic,** circuits 1, 2, and 3 are distributed from the first circuit panel and are supported with one shared neutral and one shared ground. Circuit 4 is distributed from a second circuit panel and is supported with a separate neutral and ground.

Single 3-Phase  
Circuit Panel

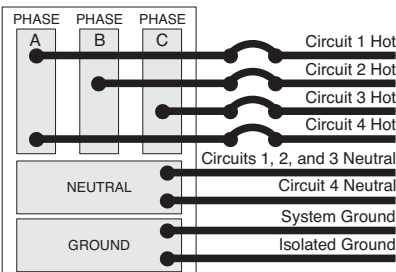


**On a single 3-phase circuit panel,** all four circuits are distributed as shown.

## Four-Circuit, 2+2

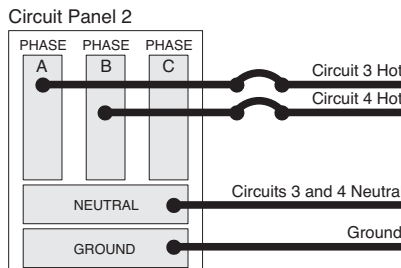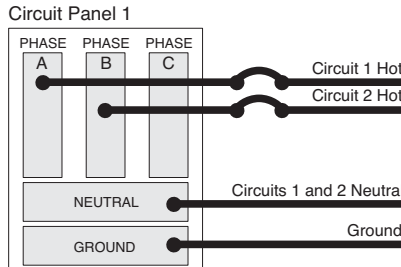


**In the four-circuit 2+2 schematic,** circuits 1 and 2 are distributed from two different phases from the first circuit panel and are supported with one shared neutral and one shared ground. Circuits 3 and 4 are distributed from a second circuit panel and supported by their own shared neutral and ground.

Single 3-Phase  
Circuit Panel

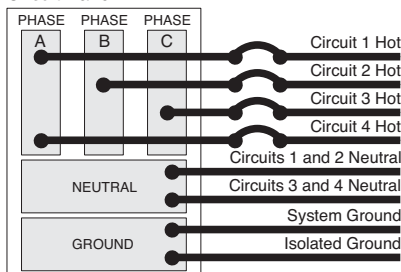



**On a single 3-phase circuit panel,** all four circuits are distributed as shown.

Split-Phase  
Circuit Panel

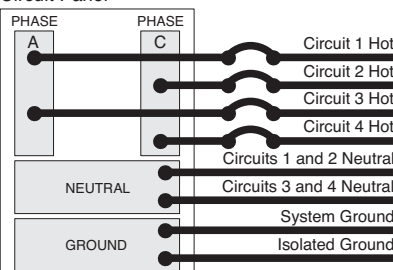


**On a split-phase circuit panel,** all four circuits are distributed as shown.

## Three-Circuit, Separate Neutrals

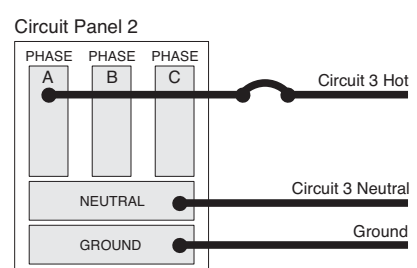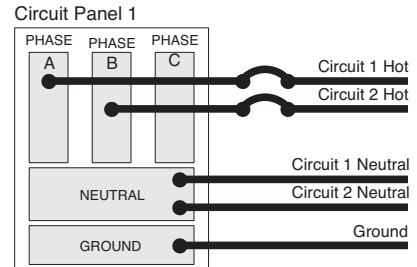


**In the three-circuit, separate neutral schematic,** circuits 1 and 2 are distributed from two different phases from the first circuit panel. Each circuit is supported with its own neutral and a common ground. Circuit 3 is distributed from the second circuit panel and is supported by its own neutral and ground.

Single 3-Phase  
Circuit Panel

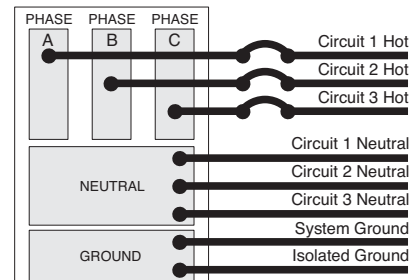

**On a single 3-phase circuit panel,** three circuits are distributed as shown.

Split-Phase  
Circuit Panel

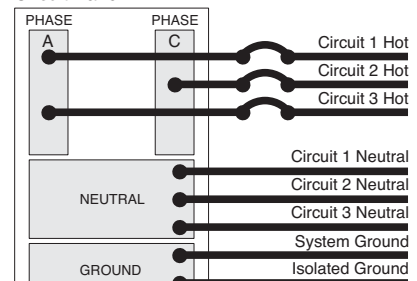

**On a split-phase circuit panel,** three circuits are distributed as shown.

# How to Calculate Power Needs

Use This to Determine How Many Power-Ins You'll Need

When planning a power network, you must calculate the amperage requirements of all your electrical components so you can provide sufficient electricity to power them.

## If your usage is not known in advance:

The National Electrical Code (NEC) allows a maximum of 13 receptacles on each 20-amp circuit. This provides up to 30 receptacles for each 3-circuit power-in and 40 receptacles for each 4-circuit power-in.

These numbers refer to receptacles, not outlets. All Answer receptacles are duplex and include two outlets.

## If your usage is known in advance:

Add up the amperage used by each piece of equipment in the workstation. Whenever you reach 60 amps (20 amps times 3 circuits) or 80 amps (20 amps times 4 circuits) from items that are likely to be used at the same time, you have reached the limit for a single power-in. Specify another power-in and continue until all equipment is powered.

If the circuits will normally be subject to a continuous load (three or more hours of continuous use, such as lights or computers), the NEC requires that circuit capacity be "de-rated" by 20 percent. Therefore, treat circuits used for continuous loads as if they were rated at 16 amps instead of the regular 20 amps.

Try to anticipate future increases in power requirements and build some excess capacity into your plan.

► See table at right for typical and actual amperage usages for components.

To calculate amperage when the wattage of a device is known, divide watts by 120.

Some appliances, such as large copiers, coffee makers, or space heaters require most of the current available on a 20-amp circuit. It is recommended that such devices be supplied with their own receptacle/circuit, directly from the building. This leaves the capacity of the furniture circuits available for the more dynamic requirements of the office equipment.

Local electrical codes vary. Consult a qualified electrical contractor or engineer for the proper planning of electrical circuits in your locale.

## Requirements of Office Equipment in Amps

### General Equipment (Typical Amperage)

|                          |               |
|--------------------------|---------------|
| A.C. adapter             | 0.05          |
| Adding machine           | 0.05          |
| Answering machine        | 0.08          |
| Calculator               | 0.025         |
| Clock                    | 0.03          |
| Coffee pot               | 10.00         |
| Copy machine             | 15.00         |
| Desk-top copiers         | 7.00 to 10.00 |
| Electric eraser          | 0.25          |
| Fan                      | 0.50          |
| Manuscript holder        | 0.75          |
| Microwave                | 8.00 to 12.00 |
| Pencil sharpener         | 0.25          |
| Radio                    | 0.05          |
| Space heater, 1000 watts | 8.50          |
| Space heater, 1500 watts | 12.50         |
| Stand-alone copiers      | 15.00         |

### Electronic Equipment (Typical Amperage)

|                                 |              |
|---------------------------------|--------------|
| Desk-top memory storage devices | 0.08 to 0.15 |
| Desk-top printers               | 1.20 to 2.00 |
| DVD players                     | 0.13 to 0.20 |
| Flat-panel screens              | 3.50         |
| Laptops                         | 3.50 to 5.00 |
| Modems                          | 0.15         |
| Stand-alone printers            | 1.50 to 2.50 |
| VDTs and PCs                    | 0.08 to 4.80 |

### Steelcase Lighting (Actual Amperage)

|                     |      |
|---------------------|------|
| <i>Shelf lights</i> |      |
| 24" wide, 17 watts  | 0.20 |
| 36" wide, 25 watts  | 0.30 |
| 48" wide, 32 watts  | 0.30 |



# Cable Capacities

**Test and verify capacities for your individual situation.** We recommend that testing be conducted using your specific cable, as well as the furniture configuration you are considering. Cable capacities in this table are based on actual cable studies performed by an independent contractor following EIA/TIA codes and practices and can be taken as an accurate assessment of maximum practical capacity. Actual cable capacities may vary slightly depending on which manufacturer produced the cable and the specific field conditions.

**Cable capacities** are based on Category 6 and Category 6a cables at 55% fill capacity for cable study performed on junctions manufactured on or after October 10, 2011.

*Note: Tests were performed on junctions with tall sleeves installed.*

## Cables Tested

**A CommScope  
Systimax Gigaspeed  
1071E Series  
Category 6 Cable**  
OD=0.23"

**B CommScope  
Systimax X10D  
1091B Series  
Category 6A Cable**  
OD=0.285"






## Power harnesses reduce cable capacity.








An average of 10-15 cables will be reduced per harness used. However, this number varies according to installation practices and the type of cables used.

















**If glass window is used at the top of a panel,** top cap lay-in cable capacity is 20 for category 6 cables.

**When laying cables vertically behind skins,** capacity is dependent on skin width.

**When using stacking junctions,** the fork connector does not reduce cable capacity.

|                                                                                                                                                                                                                                | A  | B  |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----|----|
| <b>Straight Horizontal Routing</b>                                                                                                                                                                                             |    |    |
|  Lay-in cable routing at top of panel (in-line junction)                                                                                      | 40 | 30 |
|  Horizontal pass-through (straight) at cable routing opening (available every 12" inside frame)                         | 12 | 7  |
|  Horizontal pass-through (straight) at rectangular opening for modular power harness (available every 12" inside frame) | 72 | 47 |
|  Lay-in cable routing at base of panel <b>with</b> power                                                                                      | 36 | 22 |
|  Lay-in cable routing at base of panel <b>without</b> power or with power harness routed above<br>▶ Page 74                                 | 48 | 30 |

|                                                                                                                                                                                                                       | A   | B  |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|----|
| <b>Straight Vertical Routing</b>                                                                                                                                                                                      |     |    |
|  Vertical cable routing through round openings of horizontal connecting bar; two locations per bar                                  | 11  | 7  |
|  Vertical cable routing through rectangular openings of horizontal connecting bars; two locations per bar                           | 24  | 16 |
|  Vertical cable routing inside junction utility pole (used on square and oval in an end, L or T configuration or on thin in an end) | 48  | 39 |
|  Vertical cable routing inside thin trim utility pole and exiting via top cable lay-in area                                         | 42  | 34 |
|  Vertical cable routing inside thin trim utility pole and exiting into the panel in openings below the top lay-in area            | 50  | 40 |
|  Vertical cable lay-in in a ceiling-access lay-in utility package                                                                 | 100 | 98 |
|  Vertical cable lay-in in a floor-access lay-in utility package                                                                   | 80  | 54 |

|                                                                                     | A                                                                                                                       | B  |                                      | A                                                                                   | B                                                                                                                                              |    |    |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|----|--------------------------------------|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|----|----|
| L, T, X, V, and Y Horizontal Routing                                                |                                                                                                                         |    | L, T, X, V, and Y Horizontal Routing |                                                                                     |                                                                                                                                                |    |    |
|    | Lay-in cable routing at top of panels in L or V configuration                                                           | 16 | 11                                   |    | Horizontal pass-through (straight) at rectangular opening for modular power harness (available every 12" inside frame)                         | 72 | 47 |
|    | Lay-in cable routing at top of panels in T configuration                                                                | 30 | 20                                   |    | Horizontal pass-through (corner) at cable routing opening (available every 12" inside frames in T or X configuration)                          | 8  | 5  |
|    | Lay-in cable routing in top of panels in X or Y configuration                                                           | 30 | 20                                   |    | Lay-in cable routing (corner) at base of panel <b>with</b> power in L, T, or V configuration                                                   | 14 | 9  |
|    | Lay-in cable routing (around the corner) at the top of a panel in T or X configuration                                  | 16 | 11                                   |    | Lay-in cable routing (corner) at base of panel <b>without</b> power in L, T, or V configuration                                                | 14 | 9  |
|  | Horizontal pass-through at cable routing opening (available every 12" inside frames in L or V configuration)            | 8  | 5                                    |  | Lay-in cable routing (straight) at base of panel <b>with</b> power in X or Y configuration                                                     | 36 | 22 |
|  | Horizontal pass-through (corner) at rectangular opening for modular power harness                                       | 48 | 26                                   |  | Lay-in cable routing (corner) at base of panel <b>with</b> power in X or Y configuration                                                       | 11 | 6  |
|  | Horizontal pass-through (straight) at cable routing opening (available every 12" inside frames in T configuration)      | 12 | 7                                    |  | Lay-in cable routing (straight) at base of panel <b>without</b> power, or with power harness routed above in X or Y configuration<br>▶ Page 74 | 48 | 30 |
|  | Horizontal pass-through (straight) at cable routing opening (available every 12" inside frames in X or Y configuration) | 12 | 7                                    |  | Lay-in cable routing (corner) at base of panel <b>without</b> power, or with power harness routed above in X or Y configuration<br>▶ Page 74   | 14 | 9  |

# Ceiling-Access Lay-In Utility Package

**Ceiling-access lay-in utility packages** allow panels to accommodate a large amount of power and cable brought in from the ceiling. Standard skins are used to finish the panel.

► Specifying, pages 365 and 413

**Utility carrier** routes power and cables from the ceiling into the panel. Carrier is integrated within a panel run and does not exceed the width of the panel.

**Utility carrier and cover** stop at top of junction so cables can go in either direction.

**Standard horizontal connecting bars** are used on adjacent panels. Cables routed vertically can be laid behind panel skin or routed through the openings in the horizontal connecting bar. Power is routed vertically through the opening in the horizontal connecting bar.


**Utility carrier and cover for thin** is 96"H or can be field cut to size. Square and oval are adjustable from 60"H to 120"H. The pole's inside dimension is 3"D x 5 $\frac{5}{8}$ "W.

**Top cap** is shortened to accommodate utility carrier and cover. Wood veneer is available as an option. Top cap is available in three styles - thin, square, or oval.


**Narrow horizontal connecting bars** allow modular harnesses and large bundles of cables to be routed vertically over the front of the bars.

**Standard base trim** is included with ceiling lay-in utility package.

## Product Details

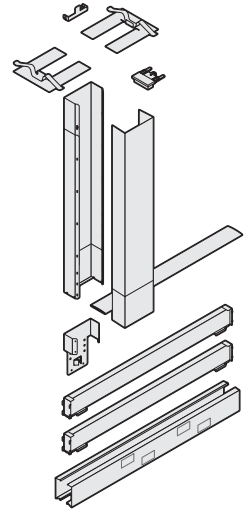


**Ceiling-access lay-in utility package includes:** utility carrier and cover with hardware, top cap, two lay-in horizontal connecting bars, and two base trims. Package is available in 30", 36", 42", and 48" widths to match standard panel widths. Package can be specified with thin, square, or oval top trim. Base cable trays are optional.

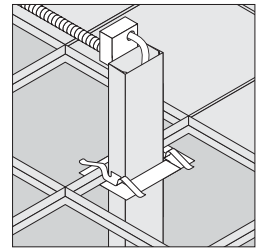


**Ceiling attachment carrier and kit** secures the top of the utility carrier and cover to the suspended ceiling grid. Hardwired connection to the building's power can be made in the junction box.


**Ceiling-access lay-in utility package** takes the place of a standard horizontal frame package. Don't double order.

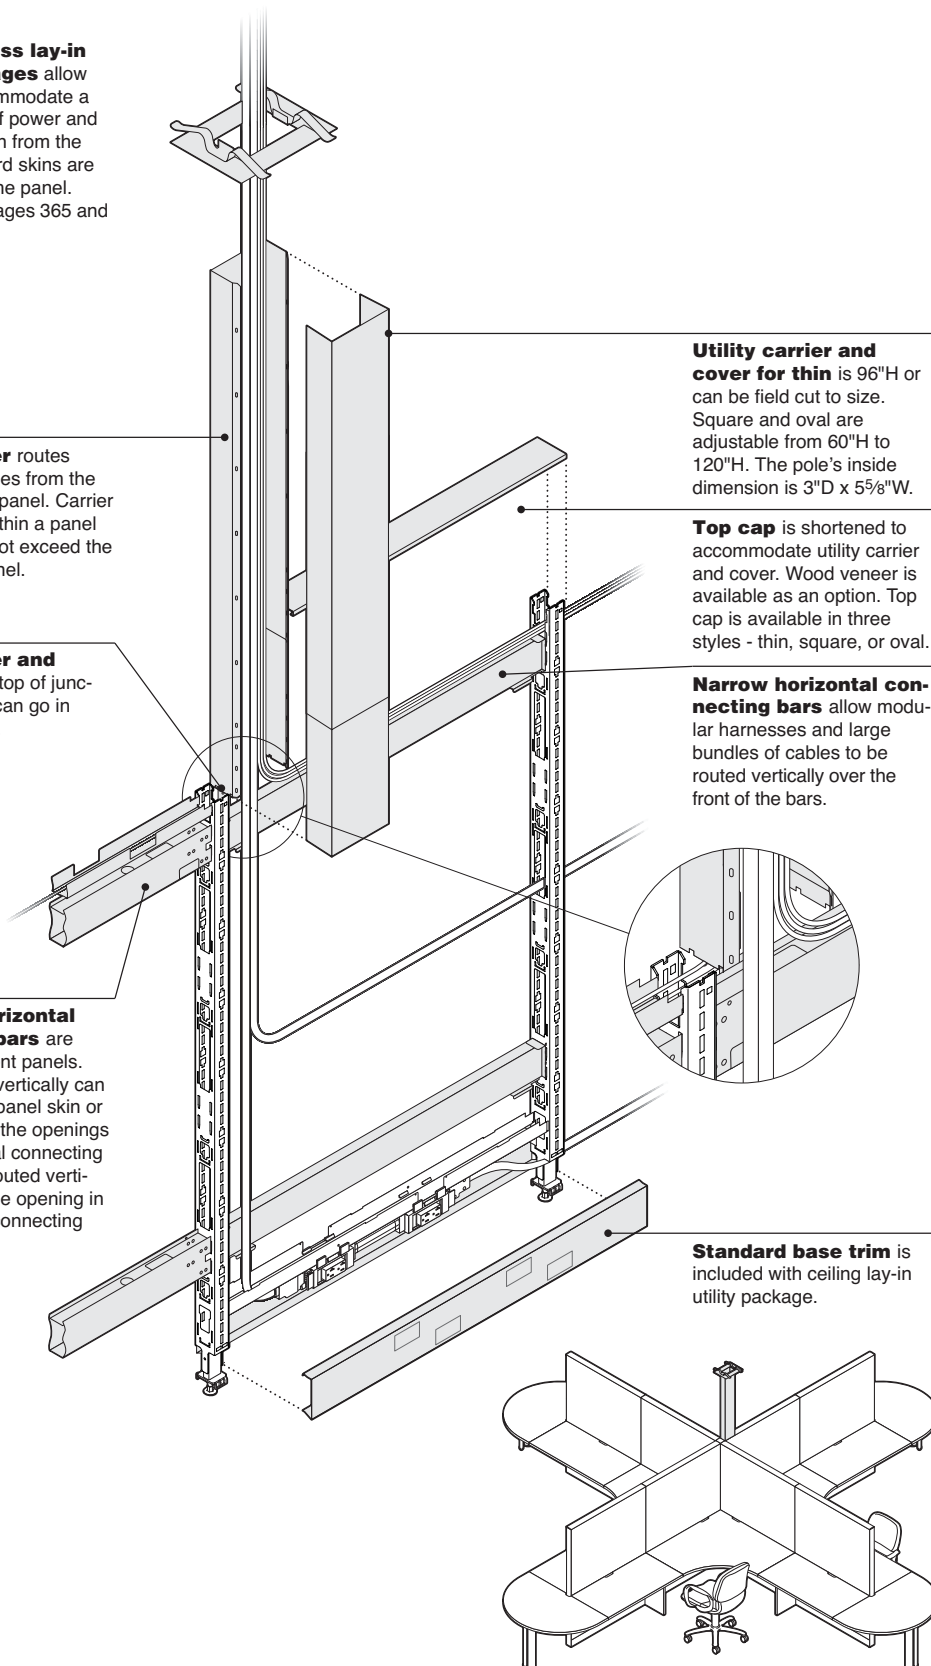


## Connections

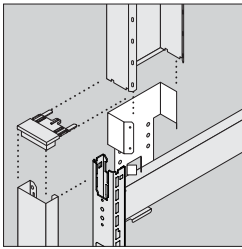

**Bracket** attaches the utility carrier to the lay-in horizontal connecting bar.

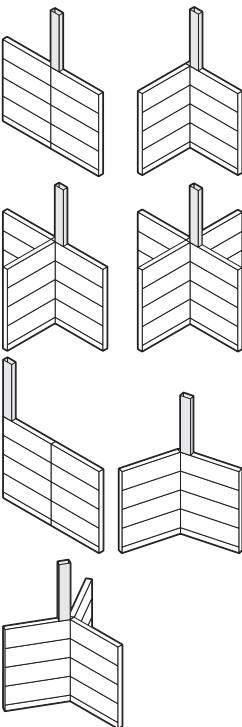

**Ceiling-access lay-in utility package** can be installed in in-line, L, T, X, V, Y, and end-of-run panel configurations. End-of-run condition reduces cable capacity.

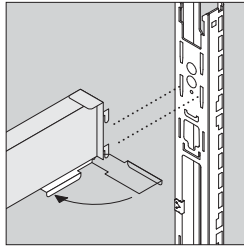


**Quick-lock mechanism** on the lay-in horizontal connecting bar engages the junction in a tight structural connection. Quick-lock mechanism is the same as on the standard horizontal connecting bars.

## Wiring &amp; Cabling

**Local electrical codes vary.** Consult a qualified electrical contractor or engineer for the proper installation of all electrical components.

**Ceiling-access lay-in utility package** was designed to be used with Answer power harnesses. If using any other type of conduit, the diameter of the conduit cannot be greater than 1/2". Skins will not install properly if conduit exceeds 1/2".

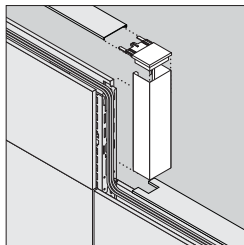

**Square and oval change-of-height cable routing trim** allows lay-in cable routing in change-of-height applications. Specify change-of-height top cap for the lower panel to allow clearance.

**Power harness**, ordered separately, acts as a shield to permit the ceiling-access lay-in utility package to accommodate power and communication cable routing at the same time.

## Surface Materials

**Utility carrier and cover, base trim, and top cap**

- Paint
- Wood veneer (option on top cap only)

**Lay-in horizontal connecting bars**

- Black paint

*Tip: Components are hidden when panel is properly installed.*

**Oval junction cap**

- Plastic
- Wood veneer (included with wood top cap option)


*Tip: Junction cap is included for end-of-run configurations.*

**Square junction cap**


- Paint
- Wood veneer (included with wood top cap option)

*Tip: Junction cap is included for end-of-run configurations.*

## Application Topics

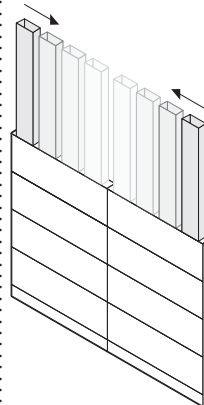

**Utility carrier and cover** are designed to be located at either end of the panel. However, they can be installed in any location, but field cutting of the top cap will be required.

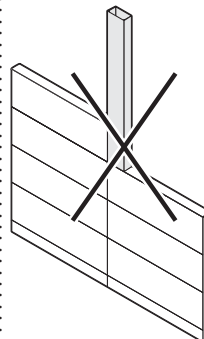

**Utility carrier and cover** cannot be located next to a taller panel.

**Back-to-back slatwall skins** cannot be installed at the top of a panel when using a ceiling access lay-in utility package. Slatwall can be used on one side only.


**Windows** cannot be installed in the top position of a lay-in frame.

# Floor-Access Lay-In Utility Package


**Floor-access lay-in utility packages** allow panels to accommodate a large amount of power and cable brought in from the floor. Standard skins are used to finish the panel.

► Specifying, pages 366 and 414

**Narrow horizontal connecting bars** allow modular harnesses and large bundles of cables to be routed vertically over the front of the bars.

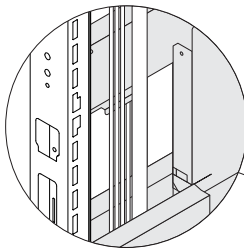

**Base utility box** covers power and cables entering from the floor.

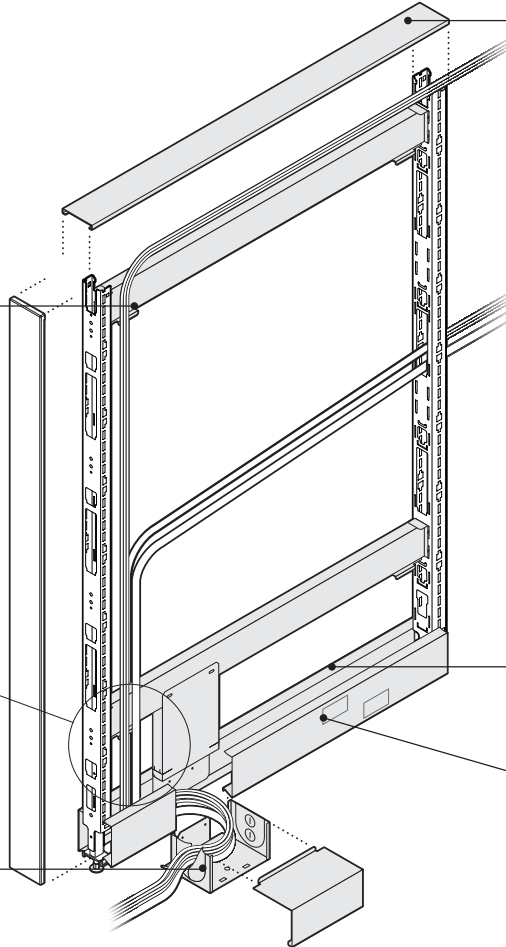


**Standard top cap** is included with floor-access lay-in utility package. Top cap is available in three styles - thin, square, or oval. Wood veneer is available as an option.


**Standard base trim** is included and used on the side of the panel opposite from the base utility box.

**Modified base trim** is included and consists of two pieces to allow attachment of base utility box.

## Product Details

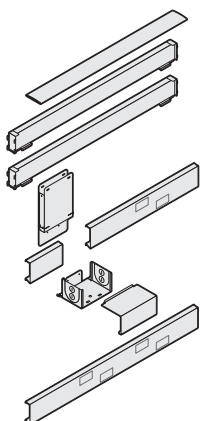**Floor-access lay-in utility package includes:**


top cap, two lay-in horizontal connecting bars, base utility box with hardware, one standard base trim, and one modified base trim. Package can be specified with thin, square, or oval top trim. It is available in 30", 36", 42", and 48" widths to match standard panel widths.

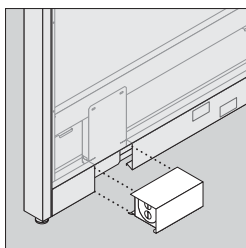


**Base utility box** is positioned at the left-hand side of the modified base trim. Entry on the other end would be accomplished from the other side of the panel.

**Floor-access lay-in utility package** takes the place of a standard horizontal frame package. Don't double order.


## Connections

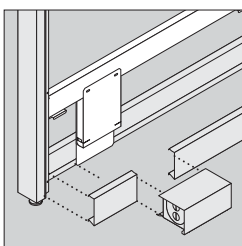


**Bracket** attaches the base utility box to the lower lay-in horizontal connecting bar.

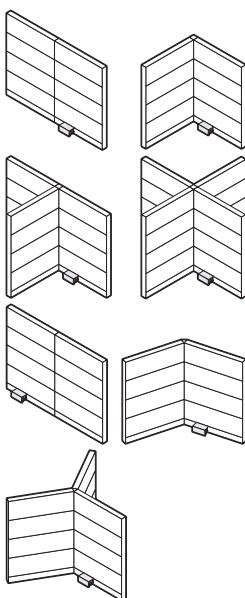

**Floor-access lay-in utility package** can be installed in in-line, L, T, X, V, Y, and end-of-run panel configurations. End-of-run condition reduces cable capacity.

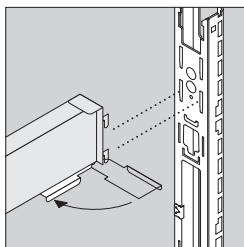

**Quick-lock mechanism** on the lay-in horizontal connecting bar engages the junction in a tight structural connection. Quick-lock mechanism is the same as on the standard horizontal connecting bars.

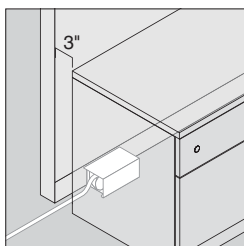


**Power infeed** sits proud of the panel approximately 3" and will interfere with Universal storage with the Universal 3" base, FrameOne foot base, or c:scape glide.

## Wiring &amp; Cabling

**24"W powerkit**, ordered separately, can be used in the base of 36"W, 42"W, and 48"W floor-access lay-in utility packages. Power kit must be located to the right of the base utility box. No powerkit can be used in 30"W floor-access lay-in utility packages.

**Power harness**, ordered separately, is shielded to permit the floor-access lay-in utility package to accommodate power and communication cable routing at the same time.

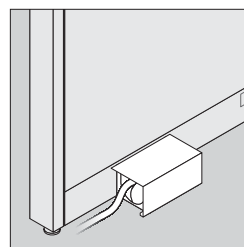

**Base utility box** routes cables and/or Answer harnesses into the panel from the floor. Base power infeeds are not intended for use with the floor-access lay-in utility package.

**Floor-access lay-in utility package** can accommodate up to 80 cat 6 cables. Deduct 10-15 cables for each power harness or modular connector routed through the base utility box.

## Surface Materials

**Base utility box, base trim, and top cap**

- Paint
- Wood veneer (option on top cap only)

**Lay-in horizontal connecting bars**

- Black paint

*Tip: Bars are hidden when panel is properly installed.*

## Application Topics

**Base utility box** protrudes 4" from the base trim on one side of the panel. When planning, locate the base utility box underneath a workstation instead of a hallway.

**Specify change-of-height top cap** on your lay-in utility package if it is the lower panel in a change-of-height configuration.

**Base utility box** is for routing of cable and power only. Not to be used as a termination point or for the routing of power cords.


# Utility Pole—Thin Trim

## Utility pole—thin trim


brings power and cabling from the ceiling and introduces it into a panel with thin trim only through openings positioned vertically every 12". Junction is not included as utility pole connects into the existing panel junction (used with junctions manufactured on or after October 10, 2011).

► Specifying, page 364


**Utility pole** is flush with the footprint of the panel.

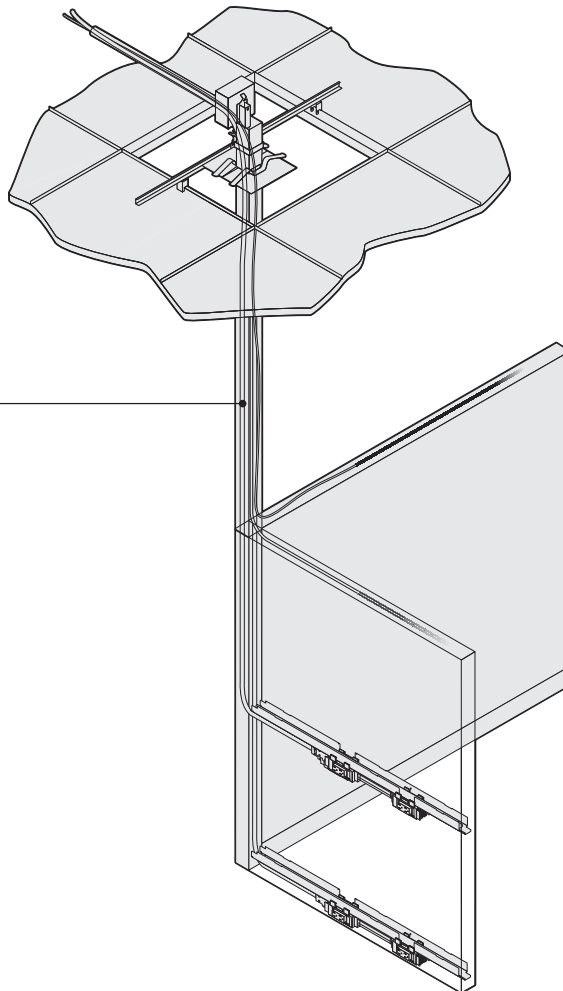

## Product Details

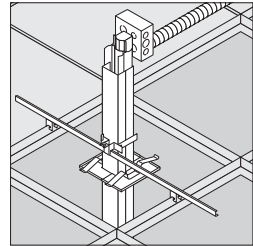


**Ceiling attachment kit** secures the top of the utility pole to the suspended ceiling grid. Hardwired connection to the building's power can be made in the junction box.

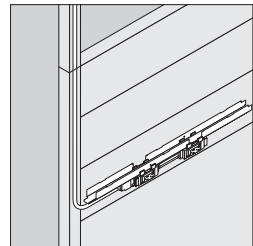

**Power harness** for use with utility pole is available to bring power down from the ceiling and into the panel to make a modular connection to a power kit.


*Tip: Power harnesses are ordered separately from the utility pole.*

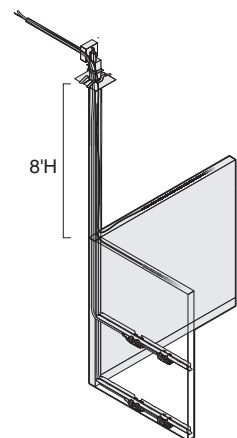


**Utility pole** can extend up to 8' above the connection point (two panels at highest height) of the panels.

**Shield** on power harness permits a utility pole to accommodate power and communication cable routing at the same time. For applications where more cable routing is needed, you can use the utility pole without a power harness or use a lay-in utility package.


## Connections

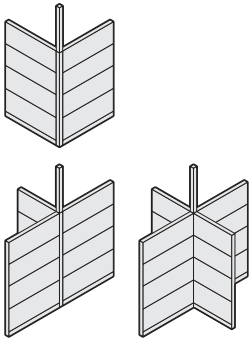


**Utility pole—thin trim** works with base and stacking junctions. It can be used at an L, T, or X configuration. It cannot be used in an end-of-run, V, Y, or in-line configuration. Utility pole is not shipped with a junction.

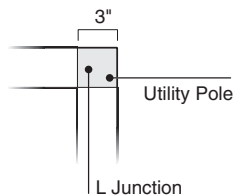

**"L" application** requires two panels at the same height. Utility pole is flush with the panel run.

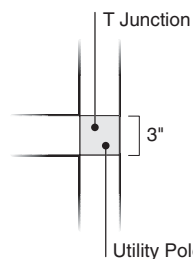

**"T" application** requires at least two panels at the highest height. Utility pole is flush with the panel run.

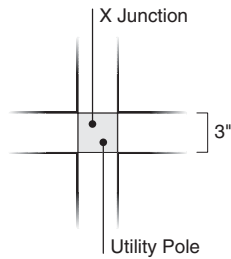

**"X" application** requires two panels at the same height.

## Wiring & Cabling

**Three wiring schematics** are available—3+1, 2+2, and three circuits with separate neutrals (3SN). All the components in an electrical distribution system must use the same wiring schematic. For safety the components are keyed, labeled, and color-coded to make it impossible to connect mismatched parts.


**All Answer electrical components** are listed by Underwriters Laboratory (UL) and certified by the Canadian Standards Association (CSA).

**Local electrical codes** vary. Consult a qualified electrical contractor or engineer for the proper installation of all electrical components.

**Chicago and New York** have special requirements.


# Junction with Utility Pole

**Utility pole** brings power and cabling from the ceiling and introduces it into the panel through openings positioned vertically every 12 inches. Includes a junction and replaces the need to order one separately.  
 ▶ Specifying, page 411

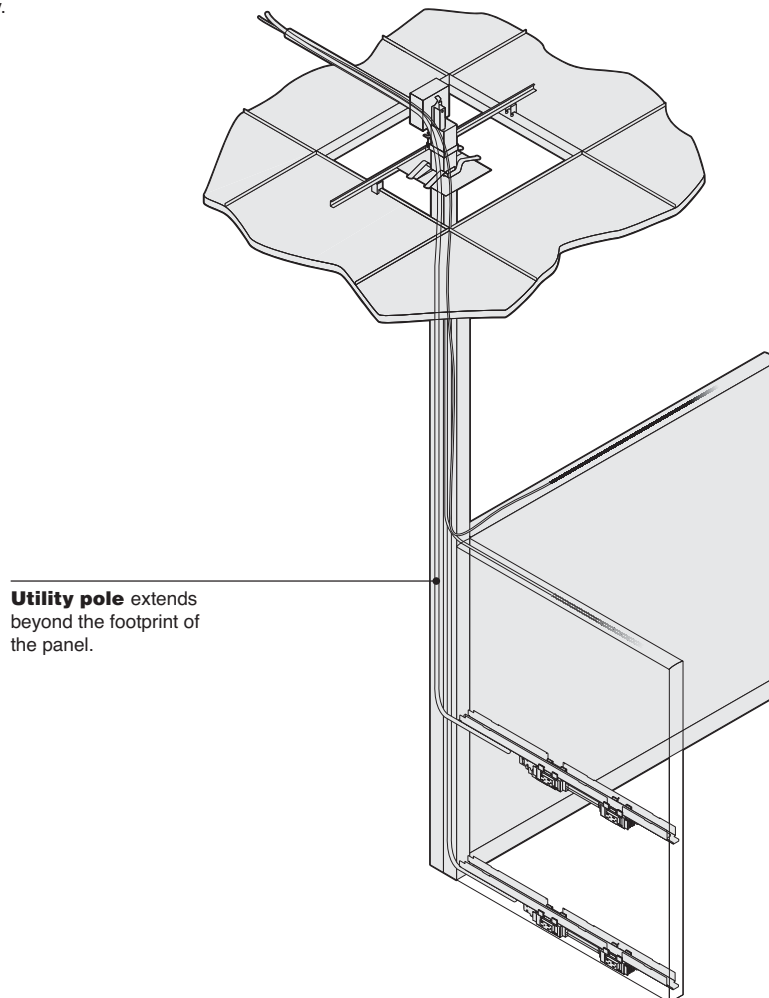


**Utility pole** extends beyond the footprint of the panel.


## Product Details

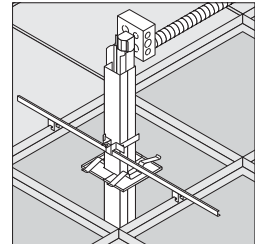

**Ceiling attachment kit** secures the top of the utility pole to the suspended ceiling grid. Hardwired connection to the building's power can be made in the junction box.

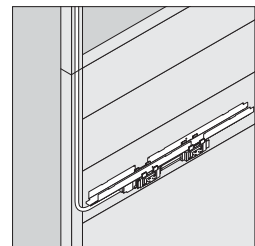

**Power harness** for use with utility pole is available to bring power down from the ceiling and into the panel to make a modular connection to a powerkit.  
*Tip: Power harnesses are ordered separately from the utility pole.*

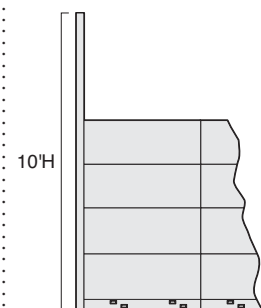


**Ceiling heights** up to 10' can be accommodated.


**Shield** on power harness permits a utility pole to accommodate power and communication cable routing at the same time. For applications where more cable routing is needed, you can use the utility pole without a power harness or use a lay-in utility package.

► Pages 366 and 414 for lay-in utility package.


### Connections

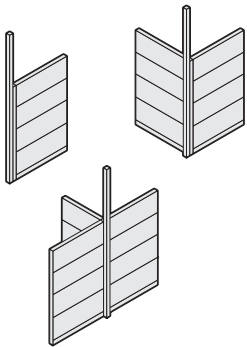


**Utility pole** works with base and stacking junctions. It can only be used at an end-of-run, in-line, L- or T-configuration. It cannot be used in an X, V, or Y-configuration. Utility pole is always shipped with a junction, so don't double order.

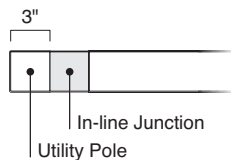


**End-of-run application** uses an in-line junction. Utility pole extends 3" beyond the footprint of the panels. This works with thin, square, or oval trim.

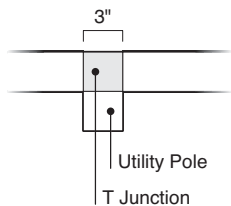

**In-line application** uses T junction and adds 3" to panel run. This works with square or oval trim only.

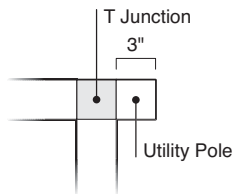

**"L" application** uses T junction. Utility pole extends 3" beyond the footprint of the panels. This works with square or oval trim only.

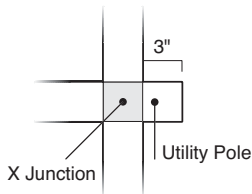

**"T" application** uses X junction. Utility pole extends 3" beyond the footprint of the panels. This works with square or oval trim only.

### Wiring & Cabling

**Three wiring schematics** are available—3+1, 2+2, and three circuits with separate neutrals (3SN). All the components in an electrical distribution system must use the same wiring schematic. For safety the components are keyed, labeled, and color-coded to make it impossible to connect mismatched parts.

► Page 145

**All Answer electrical components** are listed by Underwriters Laboratory (UL) and certified by the Canadian Standards Association (CSA).

**Local electrical codes vary.** Consult a qualified electrical contractor or engineer for the proper installation of all electrical components.

**Chicago and New York** have special requirements.


► Pages 159 and 166

# Base Power Infeed

**Base power infeed** connects power in the building floor to a powerkit in the base of a panel. Infeed occupies one receptacle opening.  
 ▶ Specifying, page 480

**Connector** on end of base power infeed harness occupies one receptacle location in power block.

**Flexible harness** makes hardwired connection to building monument. The harness must be backfed through the base trim prior to connection into the building monument.

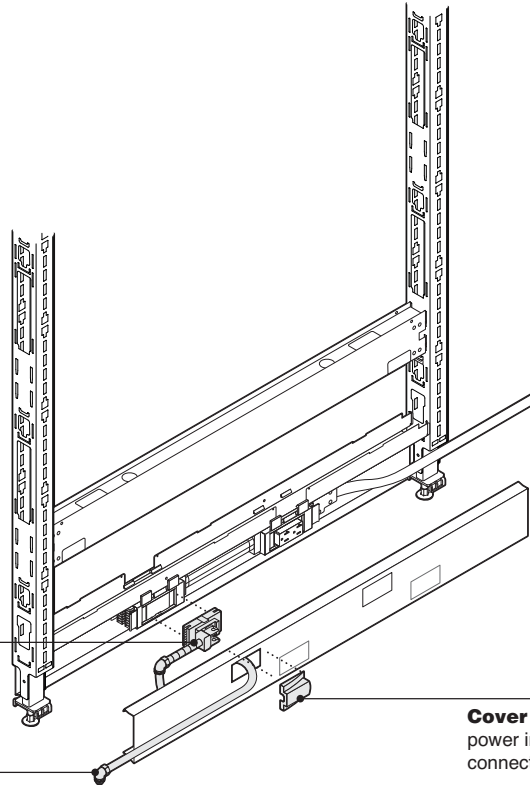

**Cover** is included with base power infeed to conceal the connection.

## Wiring & Cabling

**Connector on base power infeed** must be placed behind panel base trim and harness must be backfed through base trim opening prior to an electrician making the connection to power in the building floor.

**Three wiring schematics** are available—3+1, 2+2, and three circuits with separate neutrals (3SN). All the components in an electrical distribution system must use the same wiring schematic. For safety the components are keyed, labeled, and color-coded to make it impossible to connect mismatched parts.  
 ▶ Page 145

**All Answer electrical components** are listed by Underwriters Laboratory (UL) and certified by the Canadian Standards Association (CSA).


**Local electrical codes vary.** Consult a qualified electrical contractor or engineer for the proper installation of all electrical components.

**Special requirements** are needed for San Francisco.  
 ▶ See page 480 for specification.

# Special Requirements for New York City

Special Requirements  
for New York City

**New York City electrical code** requires modular power components to be field installed by the electrician. Because Answer power components are always field installed, they are okay for use in New York.

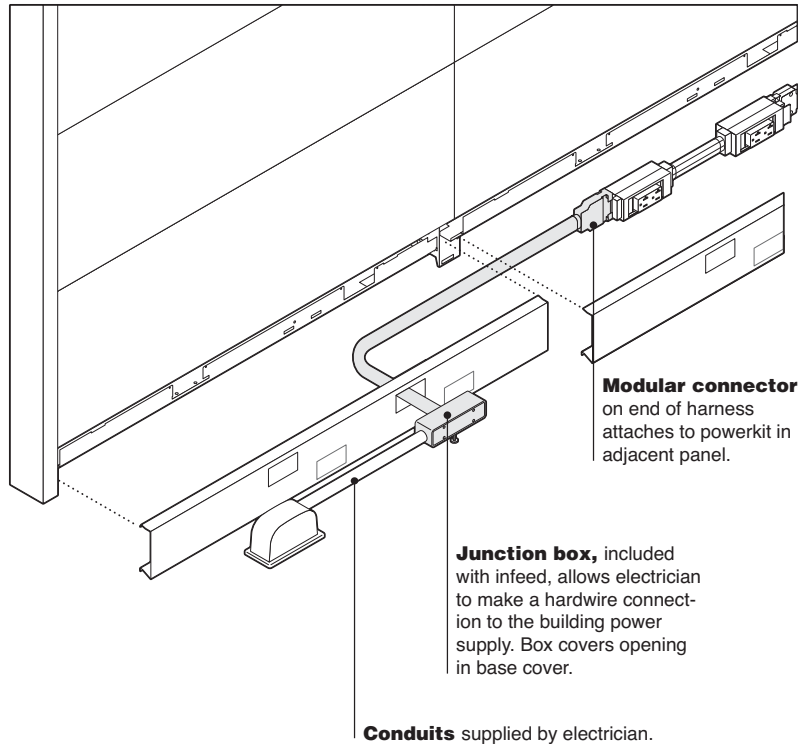

**Order** New York City power infeed of the width that corresponds to the width of the panel it will be installed in.  
*Tip: Remember that the panel with the New York City power infeed installed cannot accommodate any receptacles in the base because a powerkit cannot be installed. Install a powerkit higher in the panel to accommodate receptacles or use adjacent panels to install receptacles.*

# Consolidation Point

## Consolidation point

can be accommodated inside an Answer panel to provide easy-to-access connection points for data/voice networks. The power and communication capabilities of the panel are unimpaired. Consolidation point is designed to hold data/voice cabling and network hardware, such as punch-down blocks and 19" patch panels. Consolidation point attaches inside 54"H, 66"H, and 78"H panels.

*Tip: For accessibility remember to plan the location of your consolidation point so that it is not blocked by other furniture.*

► Specifying, page 486

## Consolidation point kit

fits in panels that are 30"W, 36"W, or 42"W. Steel skin should be used with consolidation point kit.

## Consolidation point kit

attaches inside Answer panel. Kit includes back panel, consolidation point mounting brackets, and cable managers.

**Skins** on opposite side of panel can be of any type.

**Back panel** supports punch-down blocks or 19" patch panels which are supplied by the data/voice installer.

**Punch-down blocks or patch panels**, supplied by cable contractor, accept dozens of contact points for phone, computer, or other data/voice cables.

**A steel skin** can be used to cover a consolidation point. A tackable acoustical skin cannot be used.


## Mounting brackets

can be positioned by the installer as needed to support connection points and provide adequate space for cable routing.

**Slotted channels** in back panel accommodate adjustable mounting brackets at any height and spacing that suits the installer.

## Top horizontal connecting bar


is lowered 24"H to accommodate consolidation points.

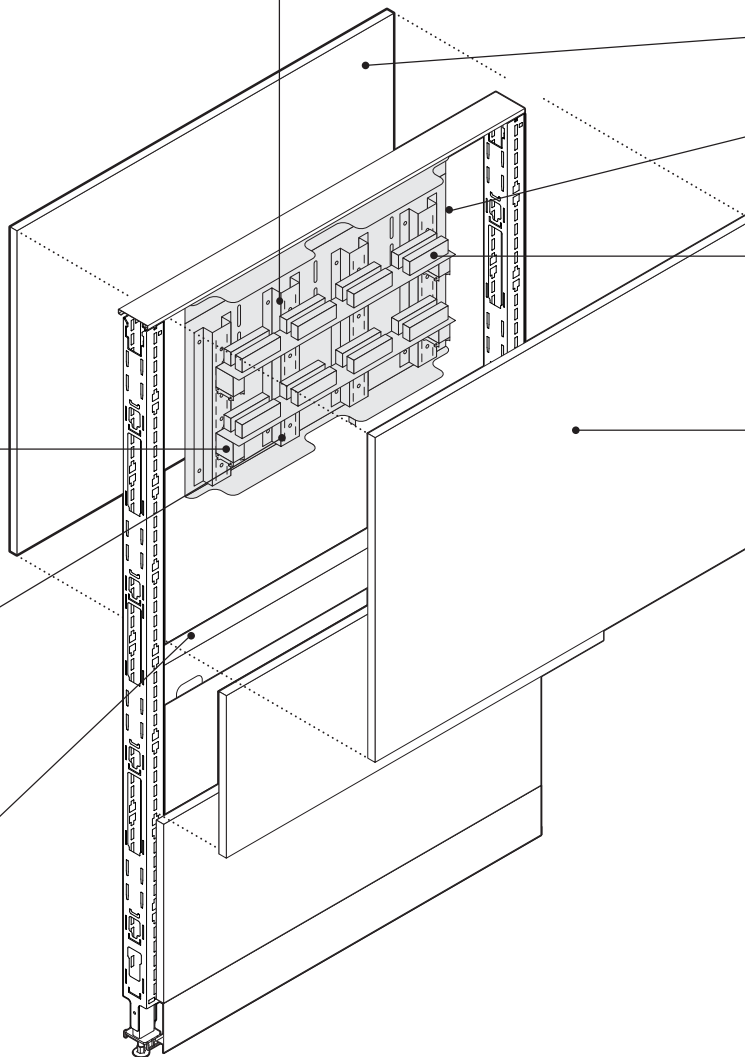


## Actual Dimensions

|             |               |
|-------------|---------------|
| Panel depth | 3"            |
| Kit width   | 28½" and 34½" |
| Kit height  | 20⅞"          |


## Product Details

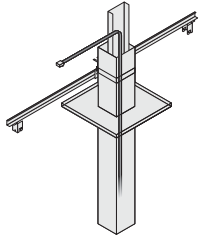

**Utility pole** can route cables from the ceiling of the building to the consolidation point. Pole can also accommodate a power harness.

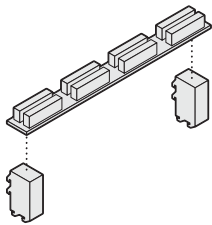


**Mounting brackets** accommodate standard-size, 19" patch panels or punch-down blocks which are supplied by the data/voice cabling installer.

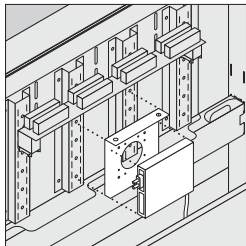

**Space inside panel** is 3"D x 30"W or 36"W x 20"H.

**Powerkits and cable trays** cannot be used in the same location or height as a consolidation point kit.

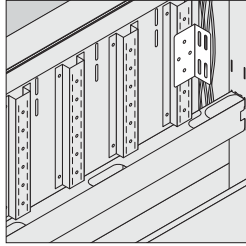

**Cable manager** helps keep cables in order.

## Connections

**Hardware** to attach consolidation point kit is included.

## Wiring & Cabling

**Consolidation point** can typically accommodate up to 72 connections. Capacity depends on neatness of installation.

# Distribution Products

**Powerkits** are a combination of modular power blocks, harnesses, and connectors that attach to a power tray for installation inside an Answer panel. Powerkits are available in widths that correspond to panel widths.


► Specifying, page 475

**Powerkits** may be specified in a non-PVC version. For those trying to gain the LEED Innovation in Design credit, non-PVC should be selected.

**Two modular connectors** on end of powerkit accept modular connectors of adjacent powerkit, power infeeds, or modular harness.

**Openings** in power tray accommodate voice/data outlets. Openings line up above the power blocks. Communication ports can never be back-to-back.

**Power tray** supports power blocks and provides space for cable routing.

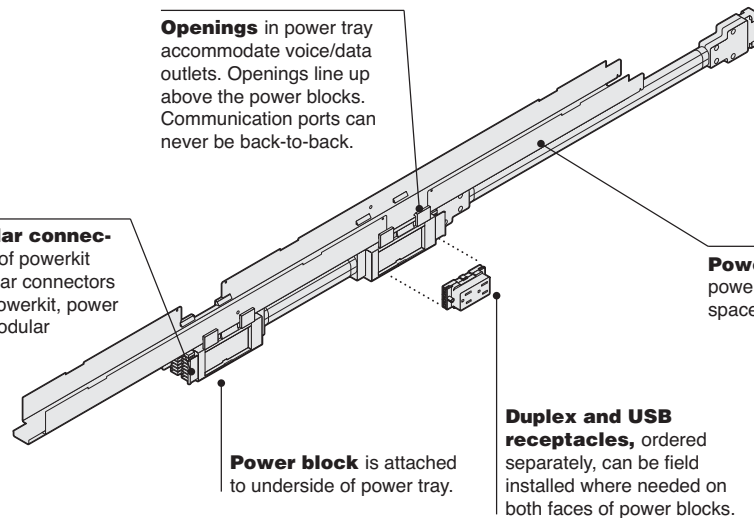


**Duplex and USB receptacles**, ordered separately, can be field installed where needed on both faces of power blocks.

**Pass-through powerkits** are available for applications where you want to extend the power between panels but have no need for access in a specific panel.

► Specifying, page 476

**Pass-through powerkits** may be specified in a non-PVC version. For those trying to gain the LEED Innovation in Design credit, non-PVC should be selected.

**Modular connector** plugs into the connection point on adjacent powerkits.

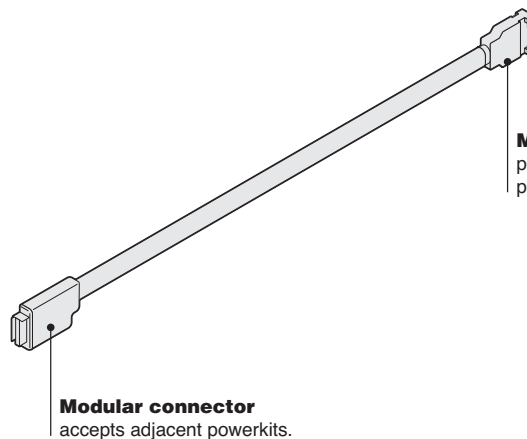

**Modular connector** accepts adjacent powerkits.


**Cable trays** can be installed every 6" vertically and rearranged at various heights within a panel for communications access and cable routing.

► Specifying, page 474


*Exception: Cable tray cannot be used in the base of the panel.*

**Cable tray** can accept added cable carriers attached below tray to expand horizontal cable management options.


► See *Montage Specification Guide* for cable carrier (ZCC).

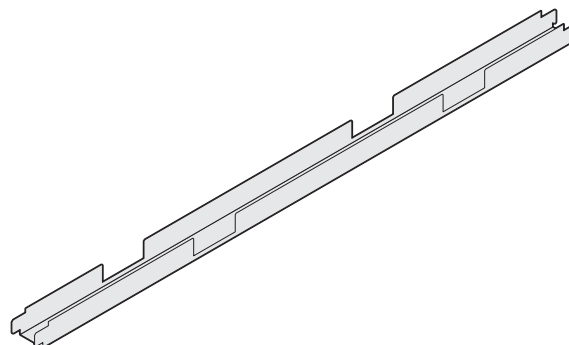

## Product Details

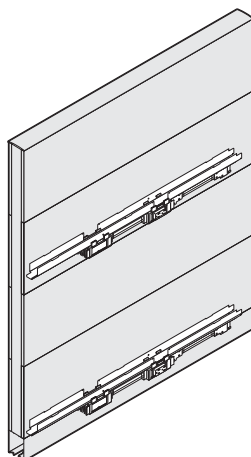

**Powerkits** can be installed every 12" vertically. Typically they are positioned in the panel base, at worksurface height, or in both locations.

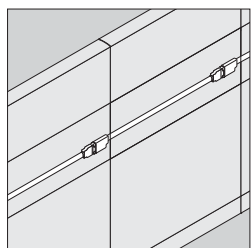

**Pass-through power-kits** extend power between panels.

**Standard Base Trim**  
**Width of panel in a non-base application** determines how many receptacle and communication locations are available for non-base applications.

18"W Pass through routing only.

12"  
24"W with one power block. Communication opening lines up above power block on one side of panel only.

12"  
30"W with two power blocks. Communication openings line up above the right-hand power block. One opening on each side of panel.

12"  
36"W to 48"W with two power blocks. Communication openings line up above the right-hand power block. One opening on each side of panel.

12"  
60"W to 72"W with four power blocks. Communication openings line up above the right-hand power block of each pair. Two openings on each side of panel.

*Tip: For base locations, same power block locations apply, but communication openings are located below and to the right of each single or double block.*

**Hardwired Base Trim**  
**Width of panel in a non-base application** determines how many receptacle and communication locations are available for non-base applications.

18"W Pass through routing only.

12"  
24"W with one power block. Communication opening lines up above power block on one side of panel only.

10.3"  
30"W with two power blocks. Communication openings line up above the right-hand power block. One opening on each side of panel.

12"  
36"W with two power blocks. Communication openings line up above the right-hand power block. One opening on each side of panel.

12"  
48"W with two power blocks. Communication openings line up above the right-hand power block. One opening on each side of panel.

12"  
60"W to 72"W with four power blocks. Communication openings line up above the right-hand power block of each pair. Two openings on each side of panel.

*Tip: For base locations, same power block locations apply, but communication openings are located below and to the right of each single or double block.*

*Tip: Communication openings are located 2 1/2" further right than standard base trims to accommodate wider hardwired junction boxes.*



**15-amp or 20-amp duplex receptacles** snap into powerkits on one side or both sides of the panel.




**USB receptacles** available in three wiring schematics with multiple line options, snap into powerkits on one side or both sides of the panel. USB receptacles offer easy access to two charging ports. Each port provides 1 ampere of output. USB receptacles conveniently charge a wide range of electronic devices. Some devices may not be compatible.

**Install duplex or USB receptacles** only where you want them. Add more receptacles in the future. *Exception: When using technology skins, receptacles are required in all power block locations.* *Tip: If receptacles are not specified for all power block locations, you must order filler through Service Parts (891500350MP, package of 20).*

**Three wiring schematics** are available—3+1, 2+2, and three circuits with separate neutrals (3SN). All the components in an electrical distribution system must use the same wiring schematic. For safety the components are keyed, labeled, and color-coded to make it impossible to connect mismatched parts.

▶ Page 145

**Performance tackable acoustical skins and tackable acoustical skins** can be cut in the field to allow access to duplex receptacles, USB receptacles, and communication outlets. Order cutting templates through Service Parts (T500940SR). Steel skins do not have cutouts and cannot accommodate receptacles. Install power receptacles and communication ports in the panel base cover below the steel skin or use a technology skin.

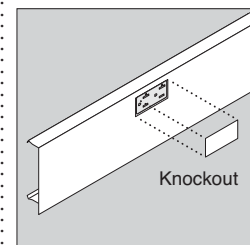


**Knockouts and cutouts** for receptacles in the panel base trim and skins are always 10 5/8" from the outside edges of the panel. Knockouts for communication in base accommodate modular furniture size only.

**Filler** to close unwanted openings in base trim is available from Service Parts.


**Wire separators** are not required. All electrical harnesses are shielded.

**Local electrical codes vary.** Consult a qualified electrical contractor or engineer for the proper installation of all electrical components.

**Chicago and New York** have special requirements. ▶ Pages 159 and 166

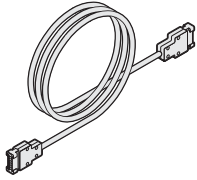
**Modular Harness**

► Specifying, page 484

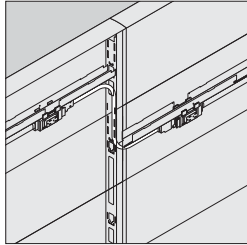
**Product Details**

**Modular harnesses** are available to connect powerkits at different heights. Available in 43" and 80" lengths.


**Extra length modular harness** is required when connecting two power kits located at different heights inside the panel in a corner or in-line application.

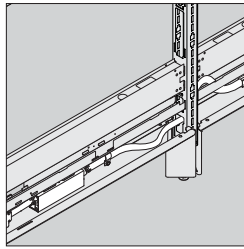

**In an in-line application extra length modular harness** is not required when a powerkit is in the bottom (not base) location in a panel with open base.

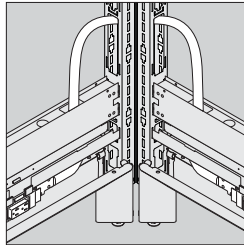


**In a corner application extra length modular harness** is required when a powerkit is in the bottom (not base) location in a panel with open base trim. In this circumstance, the modular harness will need to be routed through the first large opening in the junction located above the powerkit. The modular harness cannot be routed through the foot area of the panel due to the open base trim.

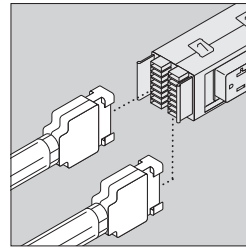


**Harnesses** plug into connection points on the powerkit. Every powerkit has multiple connection points to allow branching of power.

**Modular harness** may be specified in a non-PVC version.

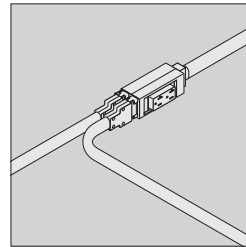


**T-connection** is formed by connecting two harnesses to a power block.

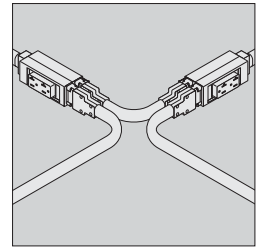

**X-connection** is formed by connecting two harnesses to two successive power blocks.


**Modular harness** may be specified in a non-PVC version. For those trying to gain the LEED Innovation in Design credit, non-PVC should be selected.

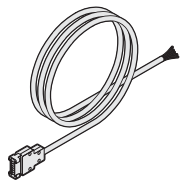**Multipurpose Power Infeed**

► Specifying, page 483

**Product Details**

**Multipurpose power infeed** is shielded to allow power and communication routing side by side. Available in 6', 12', and 24' lengths.

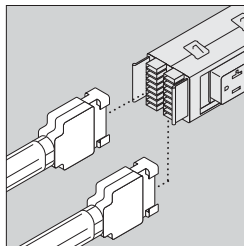

**Multipurpose power infeeds** bring power into the panel and make a modular connection to a powerkit.

**Multipurpose power infeeds** can be used with ceiling- and floor-access lay-in utility packages and utility poles. Specify power harness separately.

**Multipurpose power infeeds** may be specified in a non-PVC version. For those trying to gain the LEED Innovation in Design credit, non-PVC should be selected.

**Modular Junction Box  
Faceplate**Straight/  
Flush

► Specifying, page 479

**Product Details**

**Modular junction box faceplate** can be ordered separately and used with any modular harness length when 6', 12', and 24' lengths are not appropriate. Straight/flush and 90° faceplates are available. Non-PVC is standard. PVC version can be optioned.

# Special Requirements for Hardwired Solution

**Chicago electrical code** requires the power distribution network to be hardwired on site. These installations require hard-wired powerkits.

► Specifying, page 482

*Tip: Any hardwired installation can use the components of the hardwired powerkit.*


**Order** panel without power and order a hardwired powerkit of the corresponding width.

► Page 483

**Power tray** is included in hardwired powerkit to secure junction boxes and to attach to panel frame.


**When power is placed** in a non-base application, skins must be field-cut. Technology skins cannot be used with hardwired solution.

*Tip: Hardwire powerkit applications in the base location require a hardwire base trim for correct alignment of power and data receptacles.*

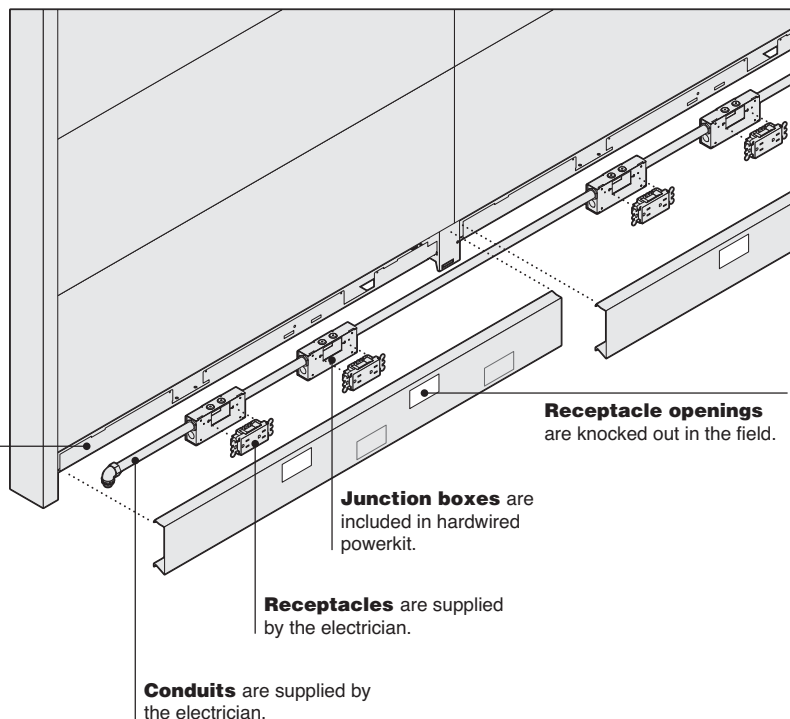


## Connections

**Powerkit** can be installed in panel base or at 12" vertical increments.

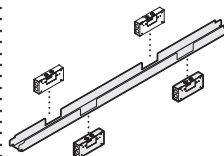

**Junction boxes** are typically mounted below the power tray; however, they can be mounted above when power is routed in a location other than the panel base. A bracket is included for mounting junction boxes above the powertray.

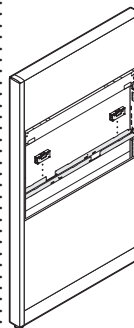

## Wiring & Cabling

**Junction box** can accommodate two receptacles back to back. Electrician can use Leviton 5325 or equivalent receptacles.

**30"W (only) panel** when hardwire kit is installed in base, only one junction box can be used (installer to decide which position to utilize). Two junction boxes can be used in all other panel locations.

**When installing a hard-wire kit above the base in a 30"W panel,** there is an additional set of holes on the tray that will need to be utilized to allow two hardwired boxes to be accommodated.

**Electrician** must make all hardwire connections in the field. Electrician must supply all conduits, wires, nuts, and connection to building power supply.

**Order Chicago-version of shelf lights.** These lights have a built-in circuit breaker.

**When using a hard-wired solution with segmented skins,** you may need to install junction boxes above the power tray to avoid interference with the steel frame of the skin. Approximately 3" of clearance is required when mounting junction boxes above the power tray. Keep in mind the upper horizontal connecting bar location to ensure enough space for mounting junction boxes above.

*Tip: Don't forget to discuss junction box location and skin configuration prior to electrician installing the power.*

## Number of Junction Boxes is Determined by Panel Width

| Panel width | Junction boxes |
|-------------|----------------|
| 24"         | 1              |
| 30"         | 2              |
| 36"         | 2              |
| 42"         | 2              |
| 48"         | 2              |
| 60"         | 2              |
| 72"         | 2              |


# Access Products

## Duplex Receptacles




► Specifying, page 477

### Product Details

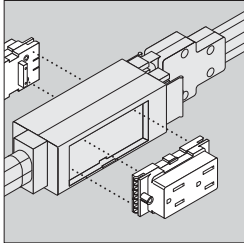

**15-amp or 20-amp receptacles**, ordered separately, snap into both faces of power block in the field.

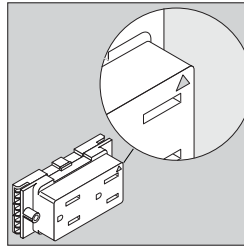

**Orange triangle** indicates to users the receptacles that are connected to isolated grounds.

### Surface Materials

#### Receptacle


- 6000 Black
- 6009 Arctic White
- 6249 Platinum Solid
- 6651 Tungsten
- 6652 Titanium
- 6654 Sand
- 6697 Fog
- 6B03 Red

## USB Receptacles




► Specifying, page 478

### Product Details

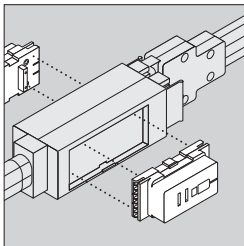

**USB receptacles**, ordered separately, snap into both faces of power block in the field.

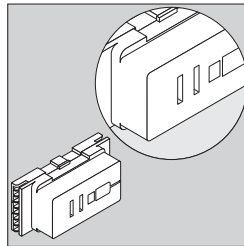

**USB receptacles**, are available in three wiring schematics with multiple line options. USB receptacles offer easy access to two charging ports. Each port provides one ampere of output. USB receptacles conveniently charge a wide range of electronic devices. Some devices may not be compatible.

### Surface Materials

#### USB Receptacle


- 6000 Black
- 6009 Arctic White
- 6249 Platinum Solid
- 6651 Tungsten
- 6652 Titanium
- 6654 Sand
- 6697 Fog
- 6B03 Red

## Face Plate




► Specifying, page 479


### Product Details

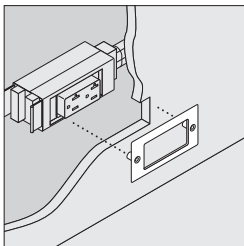

**Face plate**, ordered separately, is used to surround receptacle when skin is field-cut. Templates for field cutting are available through Service Parts (T500940SR).

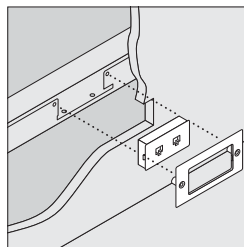

**Face plate** is used to surround modular furniture size communication or DECORA outlets when installed in the face of a tackable acoustical panel skin. Templates for field cutting are available through Service Parts (T500940SR).

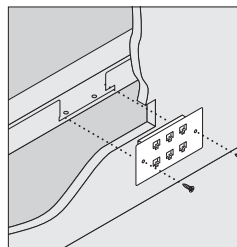

**NEMA-size communication outlets** (single gang) do not require a Steelcase face plate. Cannot be used in base.


### Surface Materials

#### Face plate

- 6000 Black
- 6009 Arctic White
- 6249 Platinum Solid
- 6651 Tungsten
- 6652 Titanium
- 6654 Sand
- 6697 Fog


# Accessories

## Junction Tall Sleeve



► Specifying, page 485

### Product Details

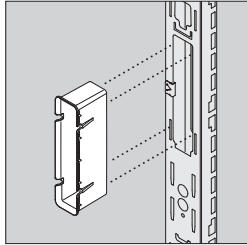

**Junction tall sleeve** can be added to vertical junctions to cover the exposed metal edges in the large cable routing openings of junctions manufactured on or after October 10, 2011.


### Junction tall sleeves

are ordered separate from vertical junctions and are available in packages of 10.

### Surface Materials


- Red plastic only

## Lay-In Junction Cable Sleeve



► Specifying, page 485

### Product Details

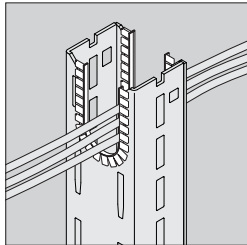

**Lay-in junction cable sleeves** can be added in the field to cover the exposed metal edges in lay-in cable space.

### Surface Materials

#### Lay-in junction cable sleeve


- Black plastic only

## Feed-Through Horizontal Cable Sleeve



► Specifying, page 485

### Product Details

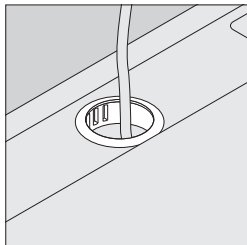


**Feed-through horizontal connecting bar cable sleeves** can be added in the field to finish the exposed metal edges of vertical cable pass-through openings.

### Surface Materials

#### Feed-through horizontal cable sleeve


- Black plastic only

### Grommet for Vertical Junctions (manufactured prior to October 2011) and Horizontal Bars




► Specifying, page 486

#### Product Details

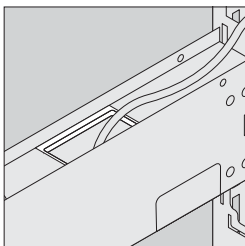

**Grommet for horizontal bar and junctions** can be added in the field to finish the exposed metal edges of cable pass-through openings. For cable sleeves used with junctions manufactured after October 2011, use junction tall sleeve (TS7JTSLVE).

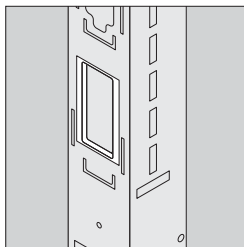

**Grommets** can also be used with power trays or cable trays.

#### Surface Materials


- Black plastic only

### Grommet for Junction



► Specifying, page 486

#### Product Details

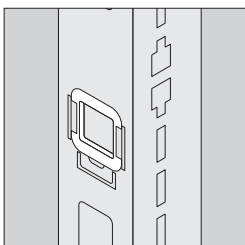


**Grommet for junction** can be added in the field to finish the exposed metal edges of horizontal cable pass-through openings.

#### Surface Materials


- Black plastic only

### Series 9000 Duplex Cable Grommet



► Specifying, page 487

#### Product Details

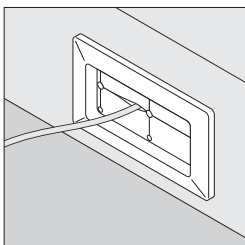

**Cable grommets** can be inserted in receptacle openings to route cables from the panel base into the panel.

#### Surface Materials


- Black plastic only

**Vertical  
Wire Manager**

► Specifying, page 699

**Cover** conceals cords or cables that are routed vertically outside of the panels.

**Hooks** fit into vertical channel at edge of panel and snap into the slotted channel of the junction.

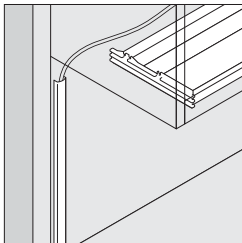**Product Details**

**Wire manager** is available for use between the bottom of a shelf or overhead storage bin and a worksurface. Wire manager can be cut in the field to suit specific application.

**Wire manager** can also be used below the worksurface.

**Surface Materials****Cover**


- 6000 Black
- 6009 Arctic White
- 6249 Platinum Solid
- 6652 Titanium
- 6654 Sand
- 6697 Fog

---

# Understanding TS Series Worksurfaces and Supports



|                                                                                    |            |
|------------------------------------------------------------------------------------|------------|
|  |            |
| <b>Statement of Line</b>                                                           | <b>172</b> |
|  |            |
| <b>TS Series Worksurfaces</b>                                                      | <b>176</b> |
| <b>TS Series Worksurface Supports</b>                                              | <b>180</b> |
| <b>Freestanding Guidelines for TS Series Worksurfaces with Legs</b>                | <b>182</b> |

# Statement of Line




Understanding  
 ► Page 176  
 Specifying  
 ► Page 490


## TS Series Straight Worksurfaces

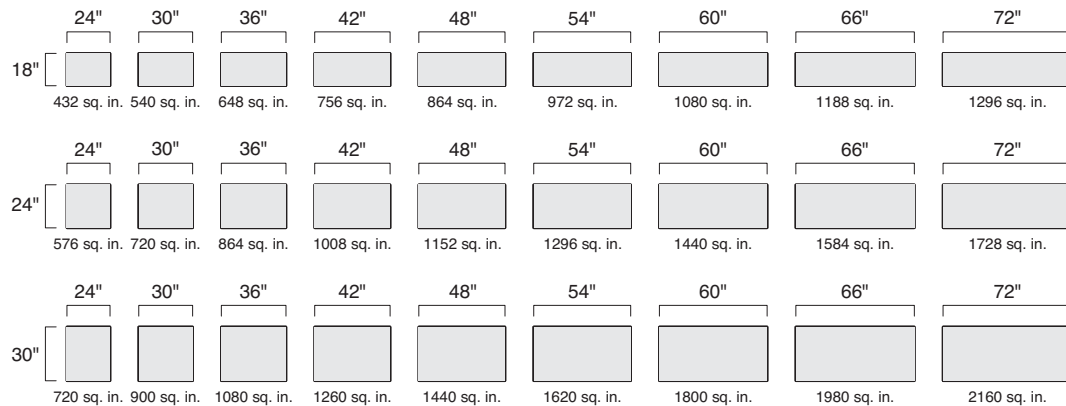

Understanding  
 ► Page 176  
 Specifying  
 ► Page 491



## TS Series Transition Worksurfaces

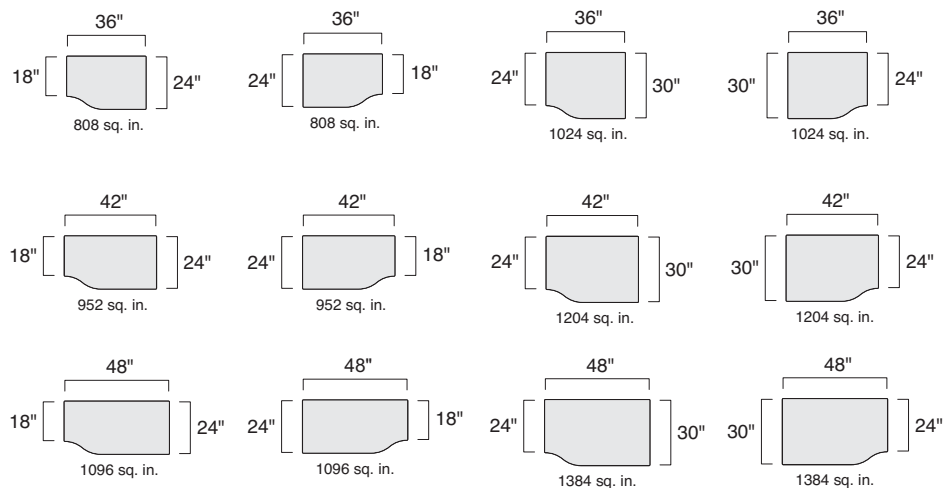




Understanding  
 ▶ Page 176  
 Specifying  
 ▶ Page 492

## TS Series Straight Corner Worksurfaces

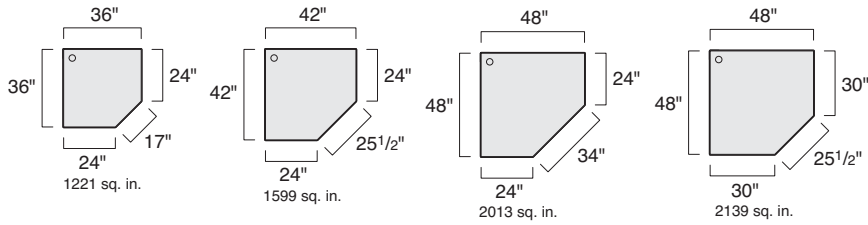


Understanding  
 ▶ Page 176  
 Specifying  
 ▶ Page 493

## TS Series Curved Corner Worksurfaces

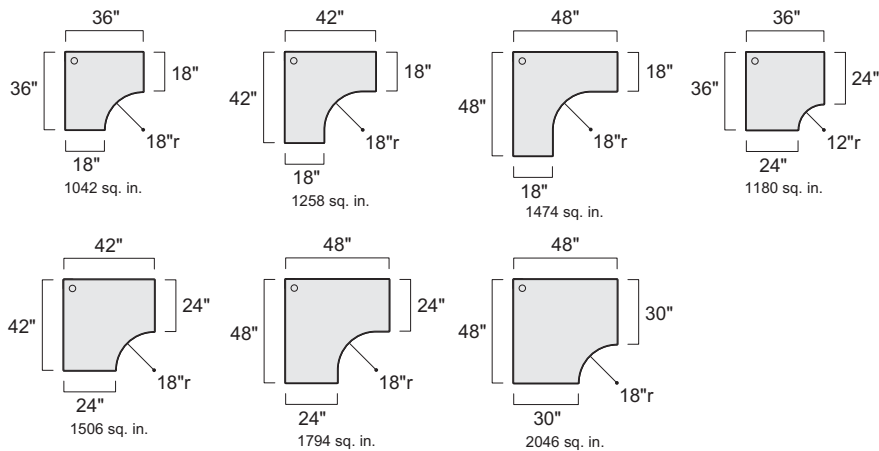


Statement of Line, continued

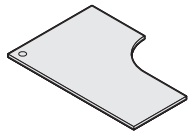


Understanding  
 ► Page 176  
 Specifying  
 ► Page 494

**TS Series Extended Curved Corner Worksurfaces\***

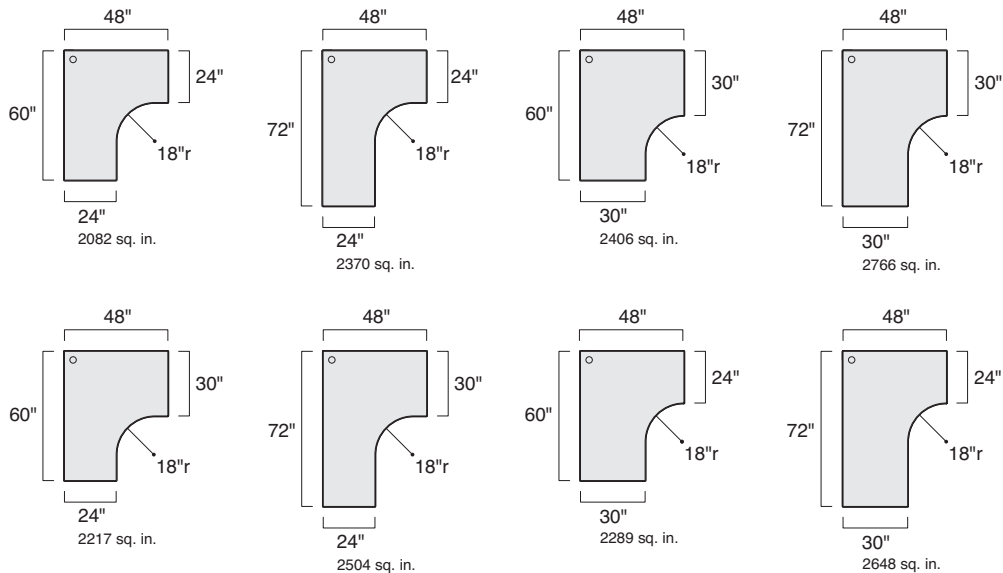



\* Left-hand is shown. Right-hand is also available.



Understanding  
 ► Page 176  
 Specifying  
 ► Page 496


**TS Series 120° Corner Worksurfaces**

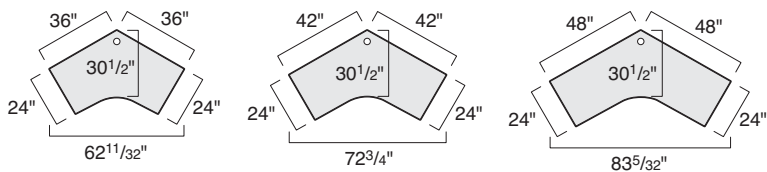





Understanding  
▶ Page 176  
Specifying  
▶ Page 497

### TS Series Peninsula Worksurfaces

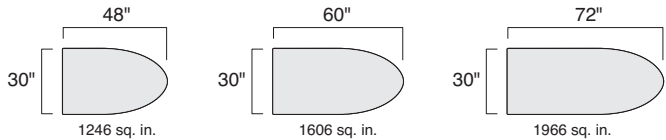

Understanding  
▶ Page 176  
Specifying  
▶ Page 498


### TS Series Angled Peninsula Worksurfaces

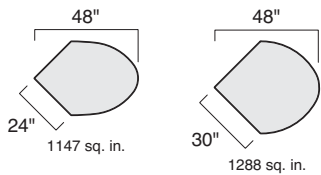

Understanding  
▶ Page 176  
Specifying  
▶ Page 499

### TS Series Spanner Worksurfaces


#### Spanner Worksurfaces for Use with 3" Panels

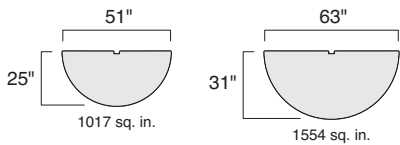

Understanding  
▶ Page 176  
Specifying  
▶ Page 500


### TS Series Linking Worksurfaces

#### Linking Worksurfaces For Use With 3" Panels

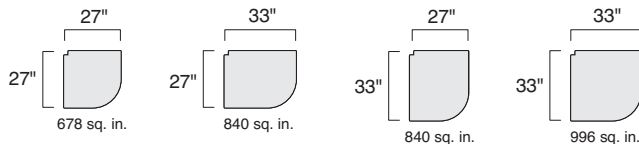


# TS Series Worksurfaces

**Worksurface** has a wood core with laminate top and plastic edge band. Low-Pressure Laminates and High-Pressure Laminates are available. Plastic edge band color is selectable.

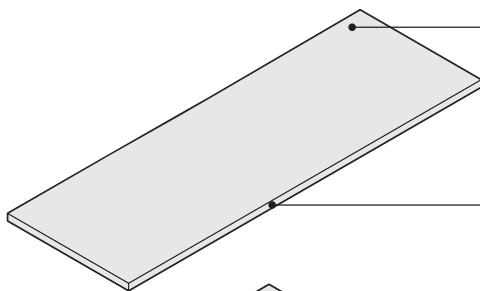

**Full-depth worksurfaces** fit flush against panels.


**Grommet** is standard on corner worksurfaces only. Field-installed grommet requires a 3" diameter hole in the worksurface.

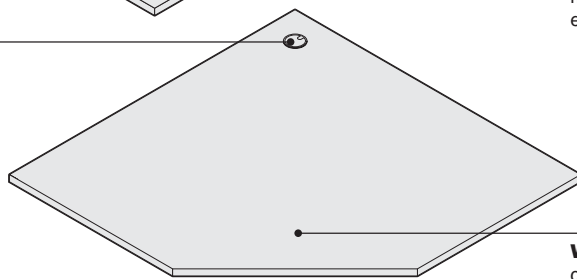

**Front (user's) edge** is a plastic edge band with a 3 mm radius. Back and side edges are flat.

**Worksurface** has a wood core with a High-Pressure or Low-Pressure Laminate surface and is 13/16" thick.


## Product Details




3 mm edge profile

**PVC-free, 3 mm edge profiles** are proprietary polyolefin blend for all solid colors and seven woodgrain finishes. Matching 1 mm side and back edges are also PVC-free. See surface material listing in this book for specific PVC-free availability.


**Edge profile finishes** are specified separately from laminate color.



**Corner bracket** is included to connect the back corner of worksurface to panels.

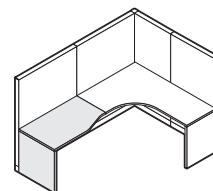


**30"D straight and transition cantilevered worksurfaces** require additional floor support along the front edge, such as a pedestal, end panel, post leg, side support bracket, or an adjacent return worksurface.

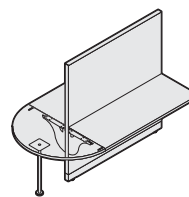

**Spanner worksurfaces** with 3" notch accommodate Kick panels. Legs and cantilevers or column and cantilevers must be used for support.


## Edge Profiles




Straight




Transition

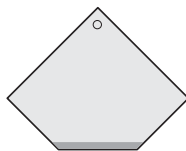


Straight Corner

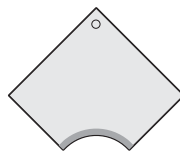

Curved Corner

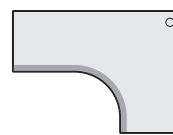


Extended Curved Corner

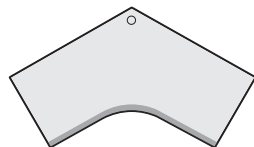

120° Corner



Peninsula




Angled Peninsula




Spanner

**Edge Profile** is applied to front (user's) edge only.

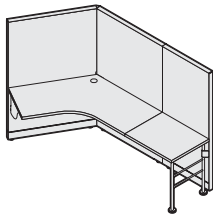


**120° Worksurface**

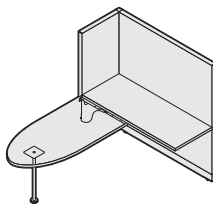


**Peninsula**

**Bullet peninsula, angled peninsula, and jetty worksurfaces** can be supported two ways:

- With a cantilever, a center support panel, and a column
- With a cantilever, a side support bracket, and two post legs

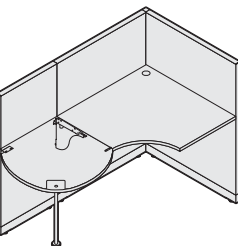

**Angled Peninsula**

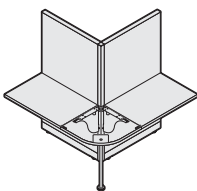


**Linking worksurfaces** with 3" notch accommodate Answer panels. One leg and two cantilevers must be used to support linking worksurfaces.


## Connections

**Supports** are ordered separately and installed in the field. The following supports are available for use with Kick worksurfaces:

- Post leg
- H-leg
- Cantilever with tie plate
- Side support brackets
- Tie plates
- In-line support plate
- Reinforcing channel
- On-module end panel




Post leg

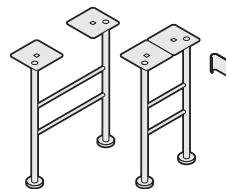

H-leg with bracket



Cantilever with tie plate



Side support brackets


Tie plates



In-line support plate




Reinforcing channel

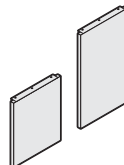


End panels—  
standard height  
and standing height

**Cantilever** with tie plate works in left-hand, right-hand, or shared applications.

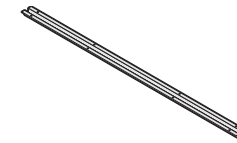

**Long worksurface spans** must be supported with cantilevers, pedestals, legs, or other supports at least every 54". Reinforcing channel (TS7WKSP) allows the distance between supports to be increased to 60" for worksurfaces that will be heavily loaded, or up to 72" for worksurfaces with lighter expected loads. Reinforcing channel must be specified separately.  
▶ Page 546

## Wiring & Cabling

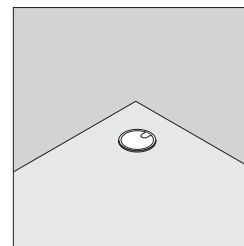

**Grommet** is standard on corner worksurfaces.

## Surface Materials

### High-Pressure and Low-Pressure Laminate Worksurfaces

- Laminate
- ▶ See *Surface Materials Reference Manual*.
- Open Line laminate (option)
- A program including non-Steelcase laminates which are suitable for use on Steelcase products.
- ▶ See *Surface Materials Reference Manual*.


### Front (user's) edge(s)

- Plastic


### Back and side edges

- Plastic color default to match user's edge


**Kick** is available in a wide variety of worksurface shapes. Directional laminate grain direction is shown.



Straight



Transition



Straight corner



Curved corner



Left-hand extended curved corner



Right-hand extended curved corner



120° Corner



Peninsula




Angled peninsula




Spanner

## TS Series Worksurfaces, continued

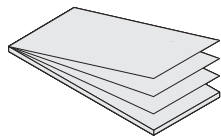

**High-Pressure Laminates, or HPLs,** are composed of multiple layers of crafted paper individually soaked in resin. There are 7-15 layers of paper combined to make the final sheet. The top layers are translucent melamine sheet and a decorative layer. The sheets are combined under heat and high pressure to form a single laminate sheet. The resulting sheet is then bonded under heat and high pressure to a wood core. HPLs are generally considered more durable than LPLs due to the extra layers of craft paper (backer) used in their creation. While they cost more, they are more durable. HPLs are generally used in higher traffic areas such as cafeterias and conference rooms. Generally, it is more cost effective to restrict their use to areas needing the added durability HPLs provide.

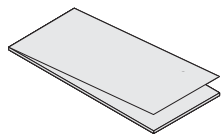

**Low-Pressure Laminates, or LPLs,** are created by dipping decorative crafted paper in melamine resin. The melamine dipped paper is then bonded to a wood core under heat and high-pressure. LPLs are generally suitable for use in lower impact areas. LPLs are generally used in vertical applications as well as tops for workstations and private offices. Generally, it is more cost effective to use LPLs when the performance of HPLs are not required.

**Shipping**

**Palletizing** streamlines unloading and staging of worksurfaces. Identical worksurfaces ordered on the same line item are packed on pallets containing 10-20 worksurfaces. Remaining worksurfaces are packed individually in cartons. If palletizing is not desired, order in quantities of nine or less per line item. For maximum unload efficiency, utilize pallet handling equipment at job site whenever possible.



# TS Series Worksurface Supports

## On-module supports

can be used to panel support worksurfaces in various configurations.

► Specifying, page 545

**Cantilever** can be used to panel-support a worksurface at any height.


## Side support brackets

can be used to support the ends of straight and corner worksurfaces and to support the back corner of any corner worksurface.


**End panel** can be used to support the end of a worksurface at standard seated height or standing height.

## Product Details


**On-module worksurface supports** engage the slots in the vertical uprights of Kick panels.

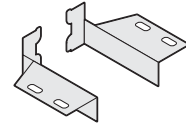

**Side support brackets** support worksurfaces at any height in 1" increments. Brackets ship as a left- and right-hand pair and are ordered separately.

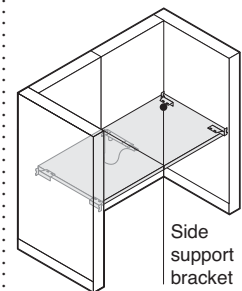

**Side support brackets** can be used to support the end of a worksurface that is wrapped by a panel with the same width dimension that matches the worksurface depth.

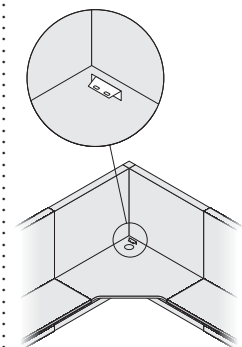


## Single side support bracket



can be used to support the rear corner of corner, extended corner, and 120° corner worksurfaces. It is standard with these corner worksurfaces.

## Actual Dimensions


|             | Cantilever | Center support panel | End panel     | Post Leg | H-Legs      |
|-------------|------------|----------------------|---------------|----------|-------------|
| Height      | 13"        | 28½" or 40⅞"*        | 28½" or 40⅞"* | 28½"     | 28½"        |
| Depth       | 16"        | 11"                  | 23¾" or 29¾"  | N.A.     | 14" or 22¾" |
| Glide Range | N.A.       | 1¼"                  | 1¼"           | 2"       | 2¾"         |

\*Height dimensions include the thickness of a worksurface.

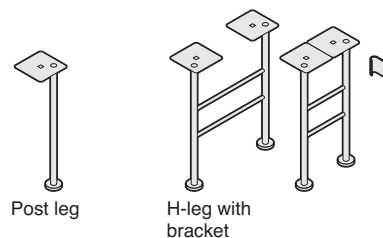


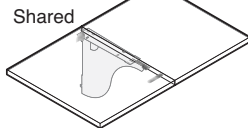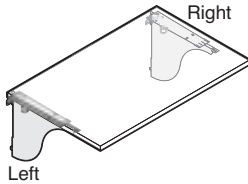

**Cantilevers** support work-surfaces at any height in 1" increments. Cantilever is non-handed and can be used to support either end of a worksurface, or shared to support two worksurfaces at the same height simultaneously. One tie plate ships with each cantilever.

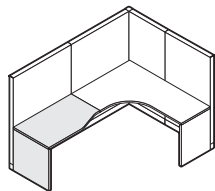


**30°D straight, tapered, and transition cantilevered worksurfaces** require additional floor support along the front edge, such as a pedestal, end panel, post leg, side support bracket, or an adjacent return worksurface.

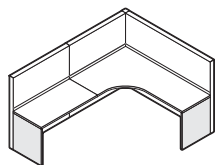



**End panels** can be used to support the end of a worksurface for additional panel stability. Refer to the applicable panel stability guidelines for specific requirements.

**End panels** are available in seated and standing heights, and cannot be used in freestanding applications.

**All panel mounted supports** can be removed and repositioned later without any permanent damage to panels or skins.

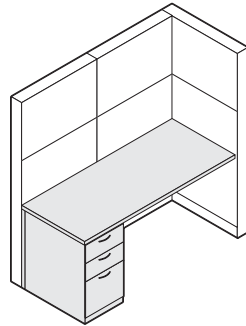

**Pedestals and lateral files** with a filler can be used to support the end of a worksurface in place of an end panel.

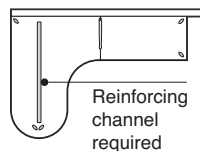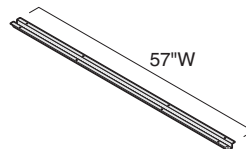

**Long worksurface spans** must be supported with cantilevers, pedestals, legs, or other supports at least every 54". Reinforcing channel (TS7WKSPT) allows the distance between supports to be increased to 60" for worksurfaces that will be heavily loaded, or up to 72" for worksurfaces with lighter expected loads. Reinforcing channel must be specified separately.

► Specifying, page 546

## Surface Materials

### Side support bracket and reinforcing channel

- Black paint only

### Cantilever, center support panel, and end panel

- Paint

## Application Topics


**Worksurfaces used in panel-supported installations** must follow applicable panel stability guidelines.

► Page 124



# Freestanding Guidelines for TS Series Worksurfaces with Legs

The following section on freestanding worksurfaces gives some guidelines to be used with common freestanding configurations. Consult your local dealer or Steelcase representative prior to deviating from these guidelines.


There are several ways to support the ends of a freestanding worksurface:

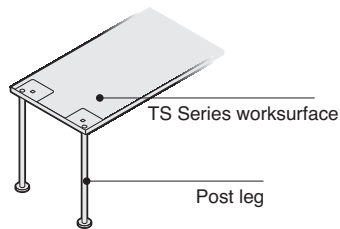


With post legs.

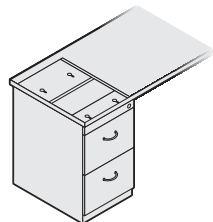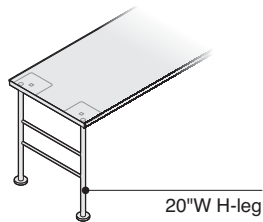



With a 22"D or 28"D pedestal.

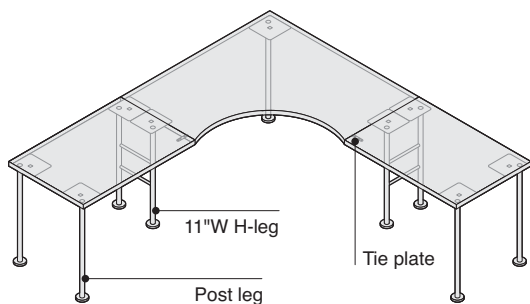



Combined worksurfaces can give each other support when joined with an 11"W H-leg and tie plate.

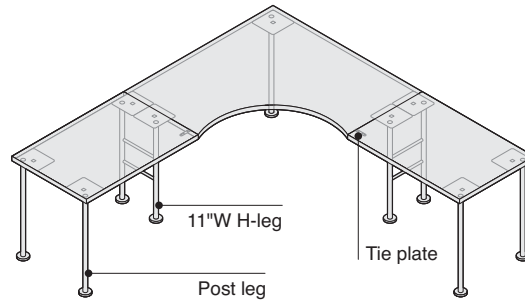



Corner worksurface attached to adjacent worksurfaces requires 11"W H-leg. Tie plate is recommended to align worksurfaces. This application only good for 48"W corner worksurfaces. The 36"W and 42"W corner worksurfaces do not meet ADA requirements.

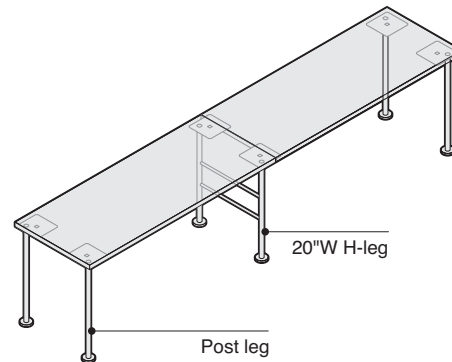



20"W H-leg can support adjacent worksurfaces up to 72"W.

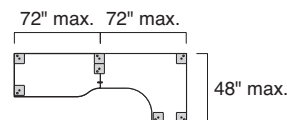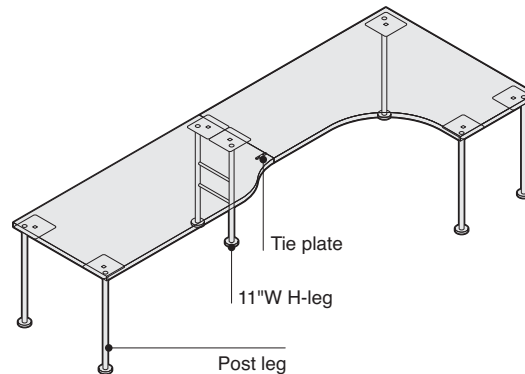


11"W H-leg can be used to support a corner worksurface and adjacent worksurfaces up to 72"W.

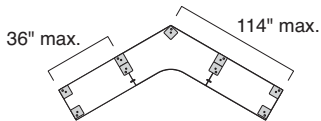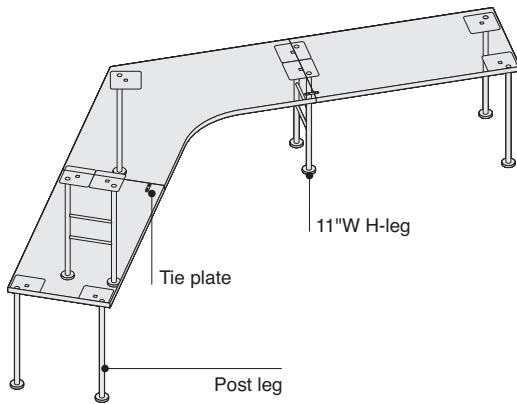

**120° worksurface.**

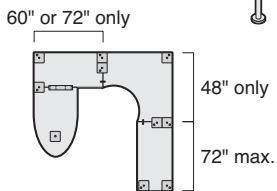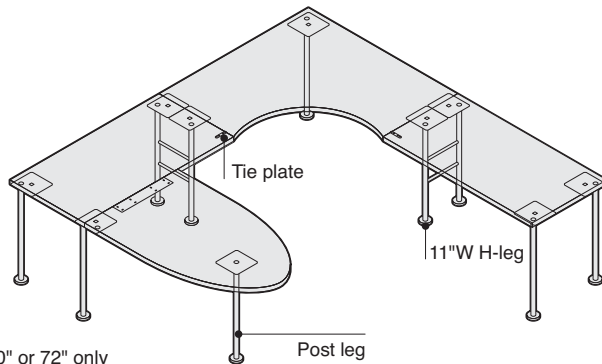

**11\"W H-leg** can be used to support a corner worksurface and adjacent worksurfaces up to 72\"W.

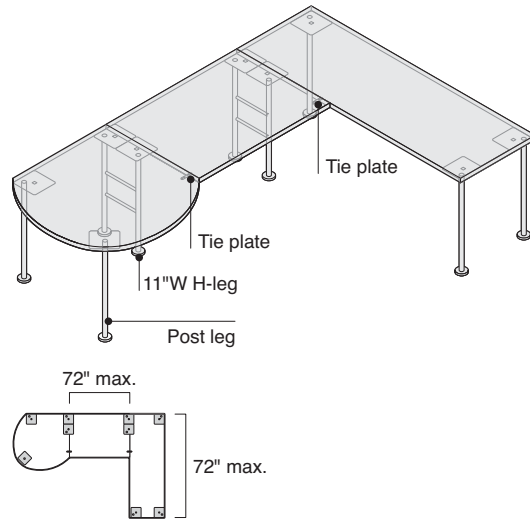

**H-leg** can be used to support adjacent perpendicular worksurfaces up to 72\"W.

**Reinforcing channel** (TSATRC57) is available to add support to worksurfaces that have 60\" or more of unsupported kneespace and that are heavily loaded.



---

# Understanding Universal Systems Worksurfaces and Supports


|                                                                                    |            |
|------------------------------------------------------------------------------------|------------|
|  |            |
| <b>Statement of Line</b>                                                           | <b>186</b> |

|                                                                                                                   |            |
|-------------------------------------------------------------------------------------------------------------------|------------|
| <b>Worksurface Positioning</b>                                                                                    | <b>200</b> |
| <b>Panel-Mounted Worksurface Supports Integration Matrix</b>                                                      | <b>201</b> |
| <b>Universal Worksurface Thought Starters</b>                                                                     | <b>202</b> |
| <b>Universal Systems Worksurfaces</b>                                                                             | <b>206</b> |
| <b>Universal Systems Worksurfaces with Soft Edge, Power<br/>and Data Access Door and Tray, and Personal Caddy</b> | <b>210</b> |
| <b>Transaction Worksurfaces</b>                                                                                   | <b>214</b> |
| <b>Universal Panel-Mounted Worksurface Supports</b>                                                               | <b>216</b> |
| <b>Off-Module Worksurface-to-Panel Connector</b>                                                                  | <b>218</b> |
| <b>FrameOne Legs and Supports for Universal Worksurfaces</b>                                                      | <b>220</b> |
| <b>Infills for FrameOne Legs for Universal Worksurfaces</b>                                                       | <b>223</b> |
| <b>Legs and Columns for Systems Worksurfaces</b>                                                                  | <b>224</b> |
| <b>Knife Edge Worksurface Application Guidelines</b>                                                              | <b>226</b> |

# Statement of Line

**All worksurface sizes and shapes** are available in High-Pressure Laminate with 3 mm edge. Most sizes and shapes are also available in High-Pressure Laminate with P-edge or in wood veneer with square edge. See Specifying pages for details.


**Worksurface dimensions shown** apply to both wood veneer and High-Pressure Laminate versions of each worksurface.



Understanding  
 ▶ Page 206  
 Specifying  
 ▶ Page 506

## Straight Worksurfaces


### With 1/2" Cord Drop

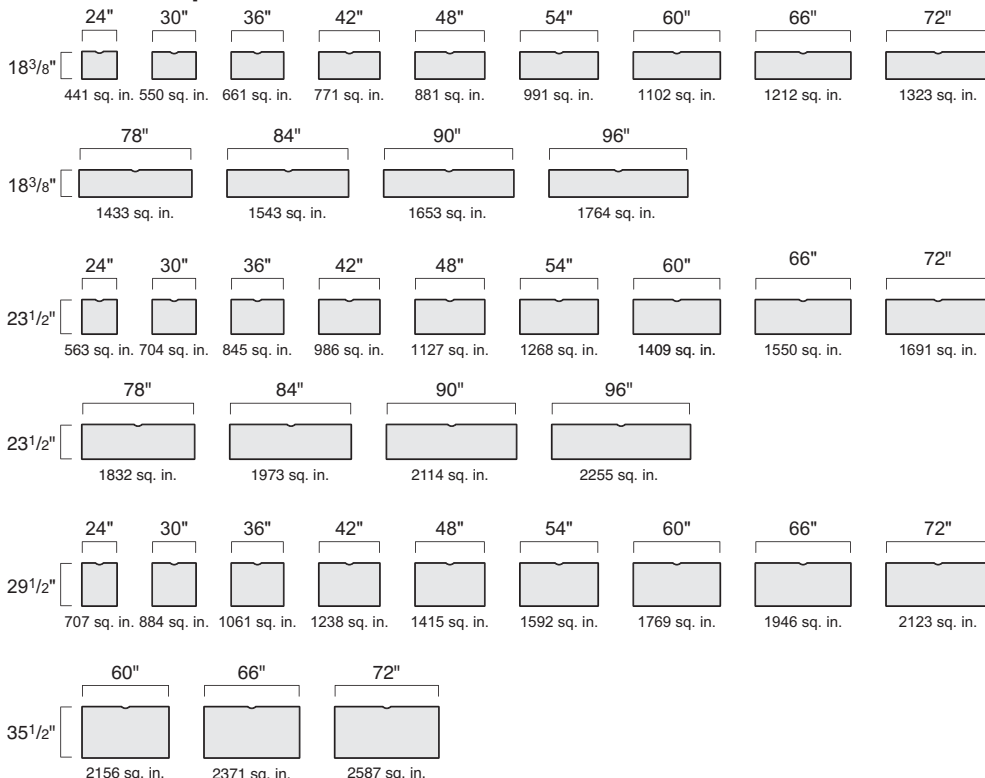


*Tip: 35<sup>1</sup>/<sub>2</sub>"D worksurfaces can only be used in freestanding applications.*

*Tip: For P-edge worksurfaces, add <sup>3</sup>/<sub>8</sub>" to 18<sup>3</sup>/<sub>8</sub>", 23<sup>1</sup>/<sub>2</sub>", and 29<sup>1</sup>/<sub>2</sub>" depths shown above.*

### With Full Depth

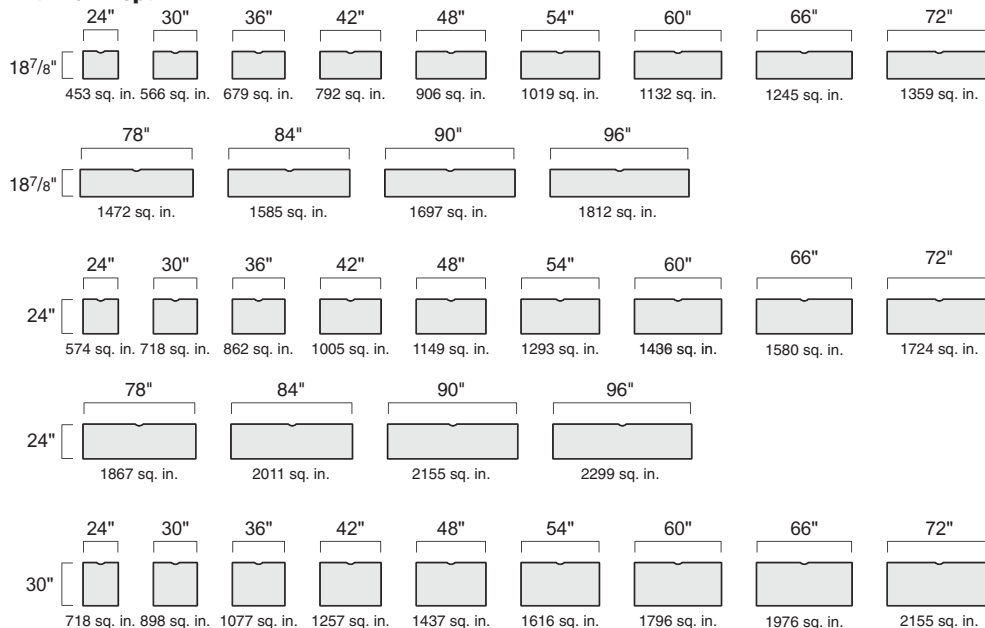





Understanding  
 ▶ Page 206  
 Specifying  
 ▶ Page 512

## Transition Worksurfaces\*

### With 1/2" Cord Drop

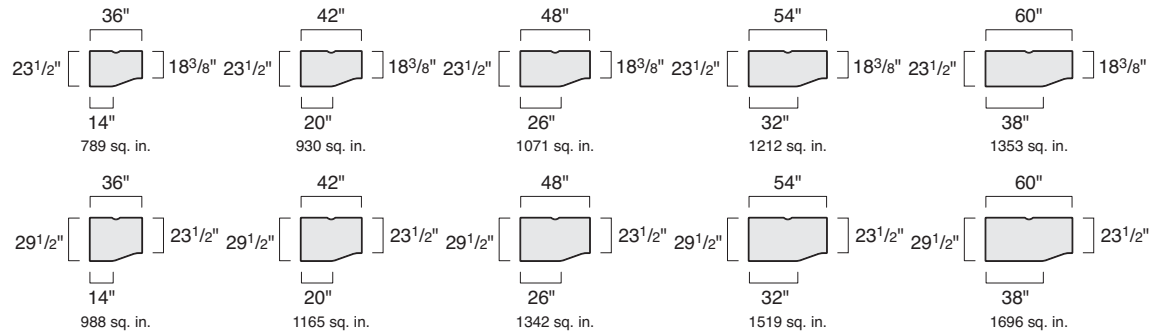


### With Full Depth

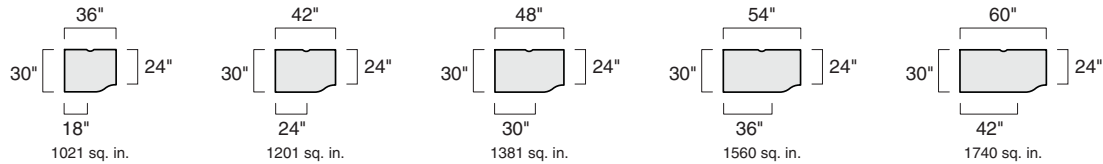

\*Left-hand units shown.  
 Right-hand units available.

Tip: For P-edge worksurfaces, add  $\frac{3}{8}"$  to 18 $\frac{3}{8}"$ , 23 $\frac{1}{2}"$ , and 29 $\frac{1}{2}"$  depths shown above.


Statement of Line, continued




Understanding  
 ▶ Page 206  
 Specifying  
 ▶ Page 514

**Tapered Worksurfaces\***


**With 1/2" Cord Drop**

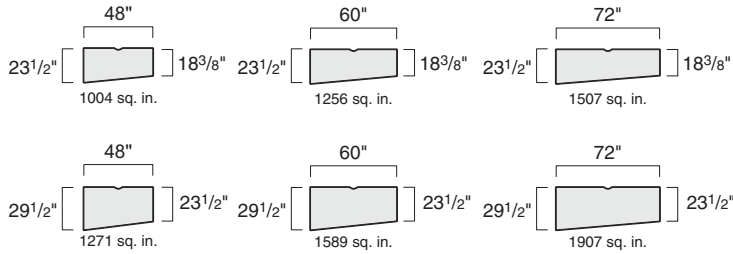

**With Full Depth**

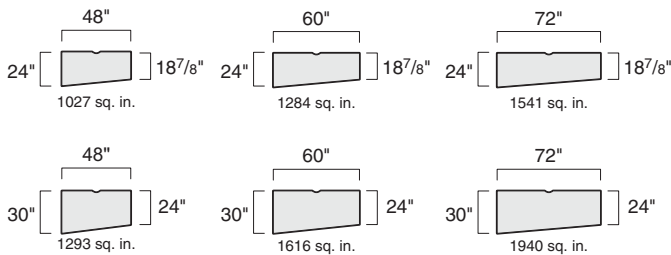


\*Left-hand units shown.  
 Right-hand units available.



Understanding  
 ▶ Page 206  
 Specifying  
 ▶ Page 516


**Taper-Flat Worksurfaces\***


**With 1/2" Cord Drop**

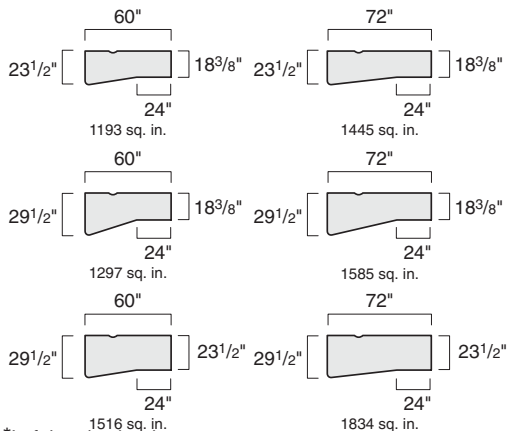

\*Left-hand units shown.  
 Right-hand units available.

**With Full Depth**

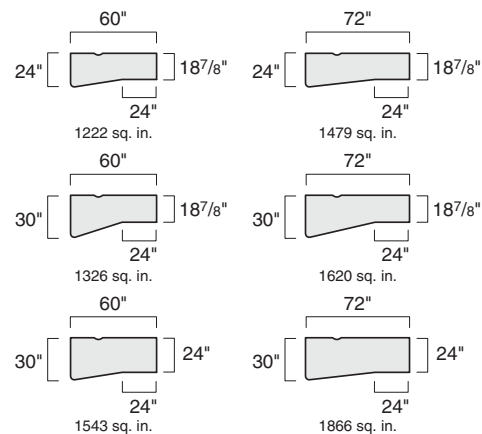




Understanding  
 ▶ Page 206  
 Specifying  
 ▶ Page 517


## Single-Tapered Worksurfaces\*

### With 1/2" Cord Drop

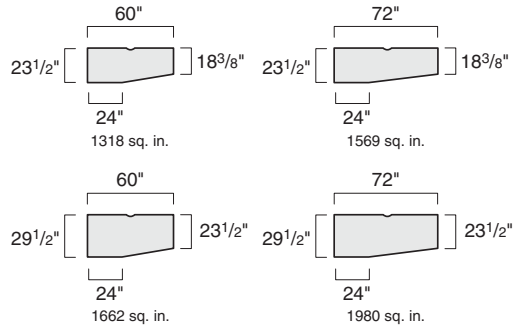


\*Left-hand units shown.  
 Right-hand units available.

### With Full Depth

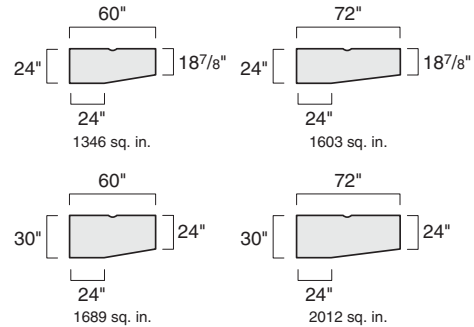


## Statement of Line, continued




Understanding  
 ▶ Page 206  
 Specifying  
 ▶ Page 518

## Corner, Flat-Front Worksurfaces


### Corner, Flat-Front Worksurfaces With 1/2" Cord Drop

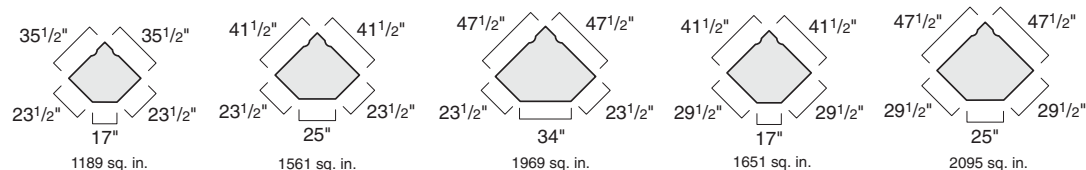


### Dual Corner, Flat-Front Worksurfaces With 1/2" Cord Drop

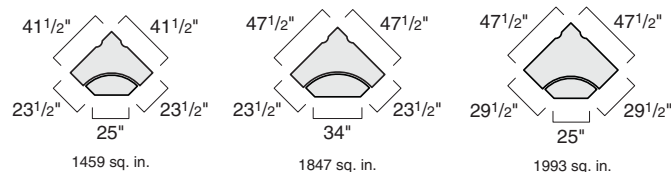

### Corner, Flat-Front Worksurfaces with Full Depth

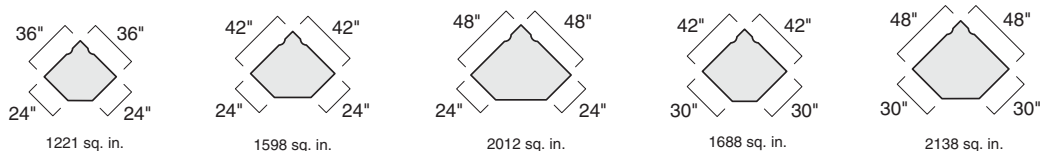

### Dual Corner, Flat-Front Worksurfaces with Full Depth

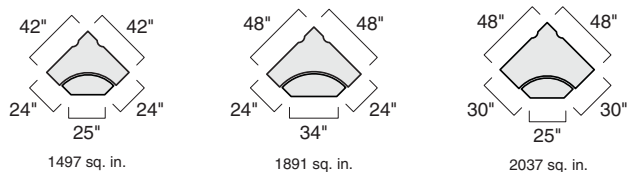




Understanding  
 ▶ Page 206  
 Specifying  
 ▶ Page 520

## Corner, Straight-Front Worksurfaces

### Corner, Straight-Front Worksurfaces With 1/2" Cord Drop

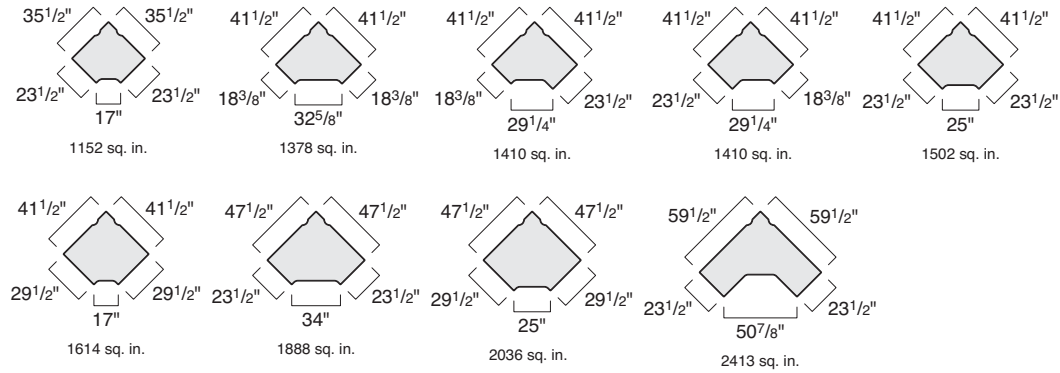


Tip: For P-edge worksurfaces, add 3/8" to 18 3/8", 23 1/2", and 29 1/2" depths shown above.



Understanding  
 ▶ Page 206  
 Specifying  
 ▶ Page 521


## Corner, Curved-Front Worksurfaces


### With 1/2" Cord Drop

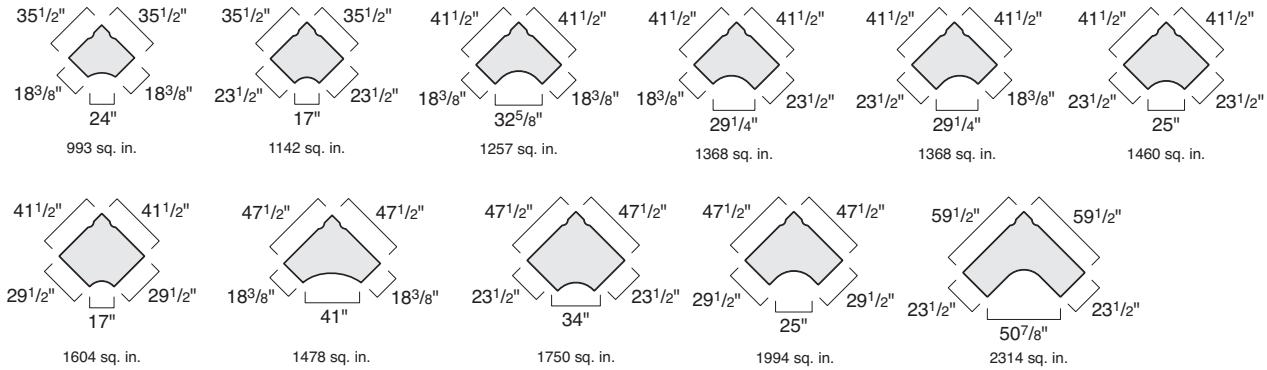

Tip: For P-edge worksurfaces, add 3/8" to 18<sup>3</sup>/<sub>8</sub>", 23<sup>1</sup>/<sub>2</sub>", and 29<sup>1</sup>/<sub>2</sub>" depths shown above.

### With Full Depth

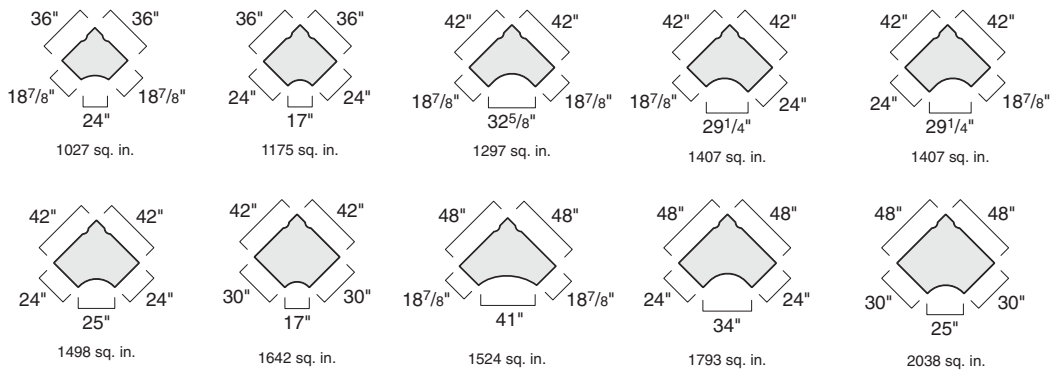




Understanding  
 ▶ Page 206  
 Specifying  
 ▶ Page 522

## Extended Corner, Straight-Front Worksurfaces\*

### Extended Corner, Straight-Front Worksurfaces With 1/2" Cord Drop

\*Left-hand units shown.  
 Right-hand units available.

*Tip: For P-edge worksurfaces, add 3/8" to 23 1/2" and 29 1/2" depths shown at left.*

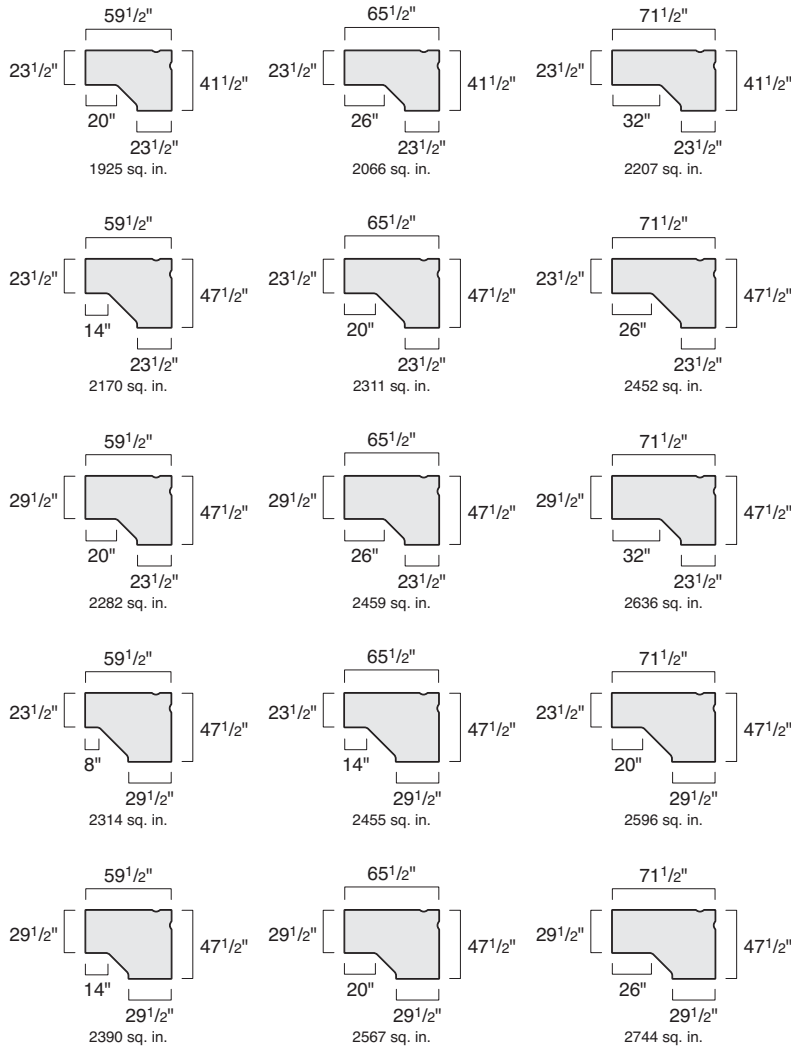

Statement of Line, continued




Understanding  
 Page 206  
 Specifying  
 Page 524

**Extended Corner, Curved-Front Worksurfaces\***

**With 1/2" Cord Drop**

\*Left-hand units shown.  
 Right-hand units available.

*Tip: For P-edge worksurfaces, add 3/8" to 23 1/2" and 29 1/2" depths shown at left.*

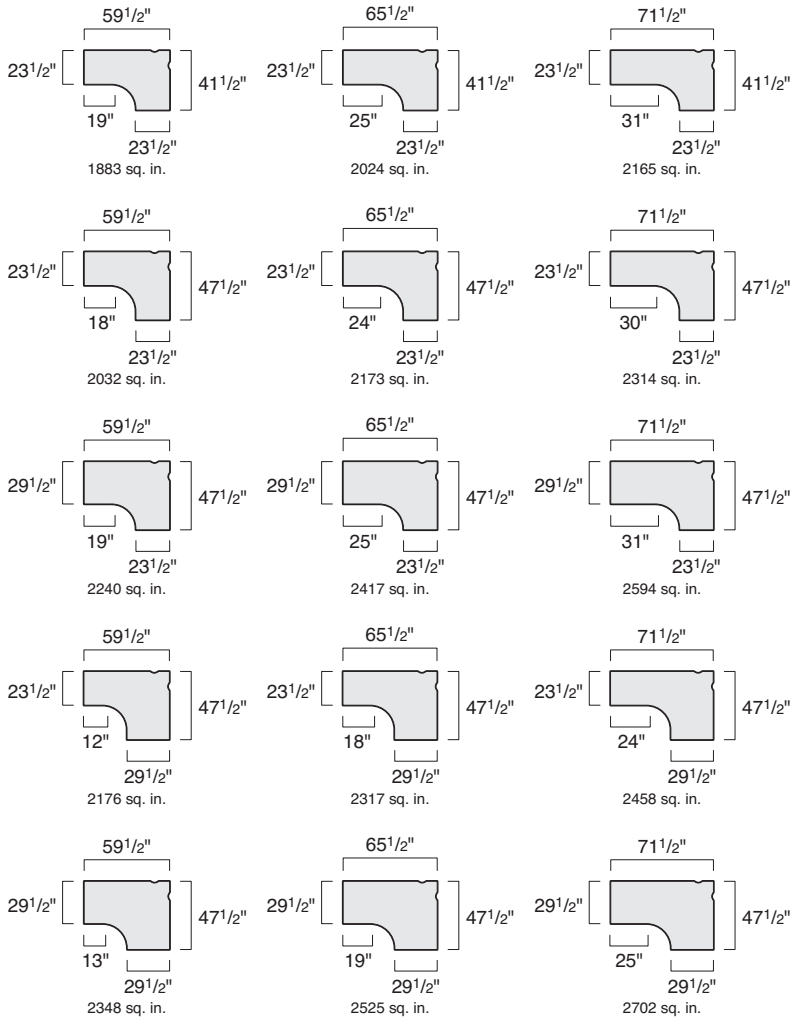




Understanding  
 ▶ Page 206  
 Specifying  
 ▶ Page 524

## Extended Corner, Curved-Front Worksurfaces\*

### With Full Depth

\*Left-hand units shown.  
 Right-hand units are also available.

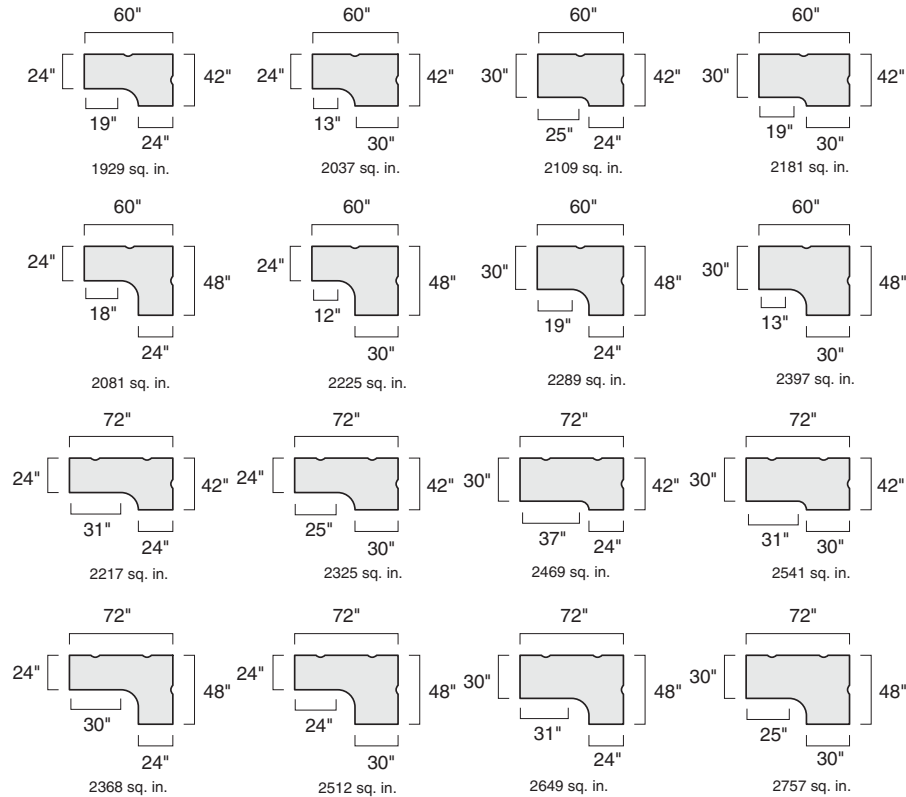


Statement of Line, continued




Understanding  
 ▶ Page 206  
 Specifying  
 ▶ Page 526

## Corner, 120° Worksurfaces

### Corner, 120° Worksurfaces With 1/2" Cord Drop

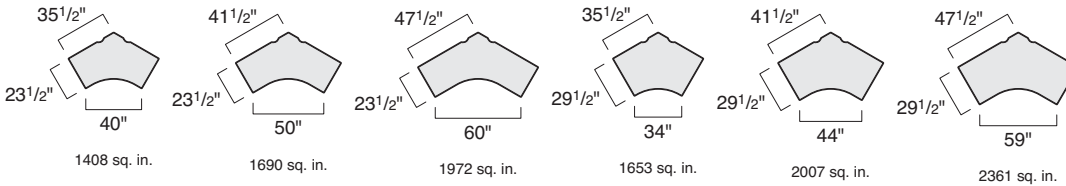


Tip: For P-edge worksurfaces, add 3/8" to 23 1/2" and 29 1/2" depths shown above.




Understanding  
 ▶ Page 206  
 Specifying  
 ▶ Page 527

## Spanner Worksurfaces

### For Use With 1/2" Cord Drop Worksurfaces

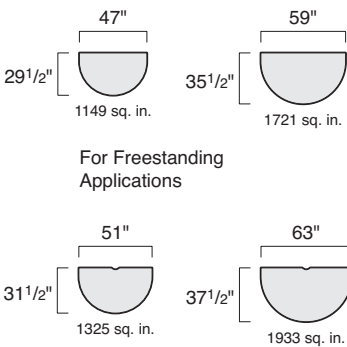


### For Use With Full Depth Worksurfaces

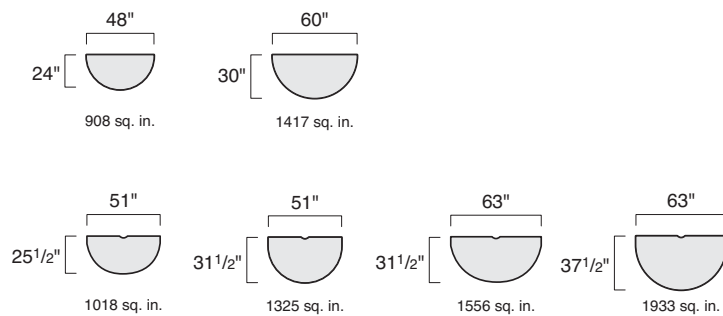


For use with 3" Panels

Tip: For P-edge worksurfaces, add 3/8" to depth and 3/4" to width shown above.




Understanding  
 ▶ Page 206  
 Specifying  
 ▶ Page 528

## Bullet Peninsula Worksurfaces

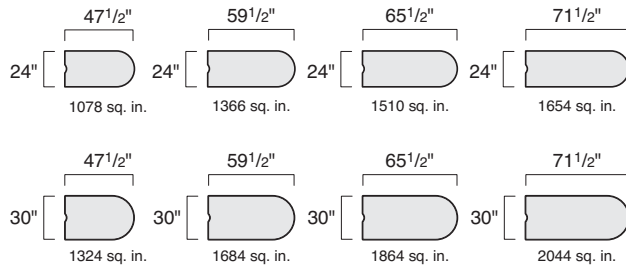


*Tip: The same bullet peninsula worksurfaces can be used with either worksurfaces with 1/2" cord drop, or with full-depth worksurfaces.*




Understanding  
 ▶ Page 206  
 Specifying  
 ▶ Page 529

## Angled Peninsula Worksurfaces

### With 1/2" Cord Drop

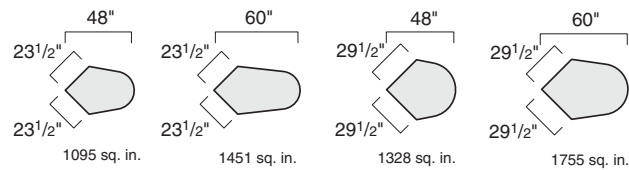


### With Full Depth

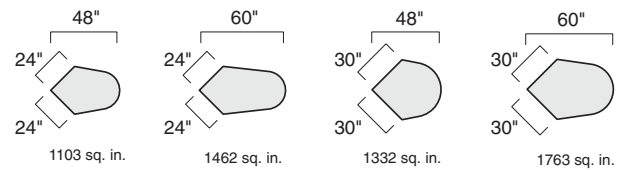

Understanding  
 ▶ Page 206  
 Specifying  
 ▶ Page 530

## Linking Peninsula Worksurfaces

### With 1/2" Cord Drop

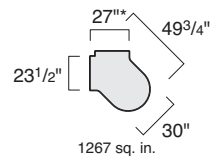

\*Dimension includes notch width.

*Tip: For P-edge worksurfaces, add 3/8" to 23 1/2" and 27" depths shown above.*


## Statement of Line, continued



Understanding  
 ▶ Page 206  
 Specifying  
 ▶ Page 532

### Jetty Worksurfaces\*


#### With 1/2" Cord Drop

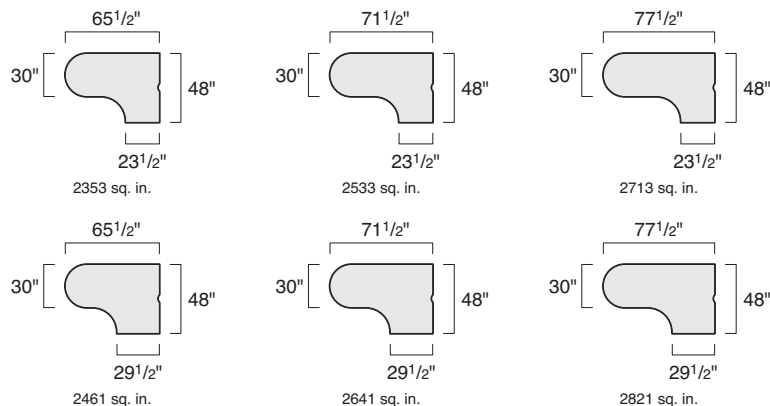

\*Left-hand units shown.  
 Right-hand units available.

*Tip: For P-edge worksurfaces, add 3/8" to 23 1/2" and 29 1/2" depths shown at left.*


#### With Full Depth

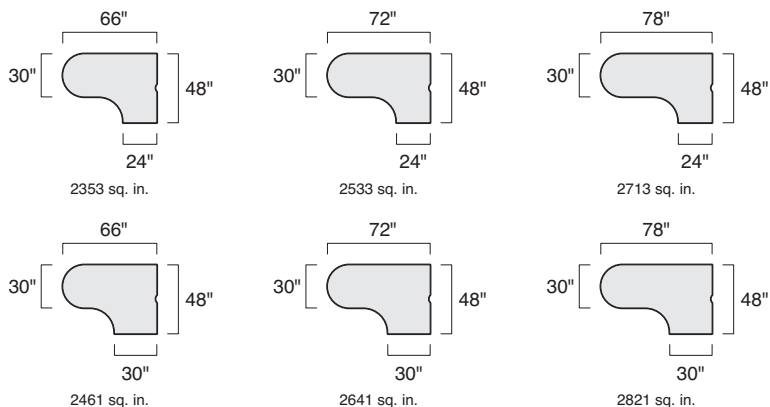

Understanding  
 ▶ Page 206  
 Specifying  
 ▶ Page 534

### Bubble Jetty Worksurfaces\*

#### With 1/2" Cord Drop

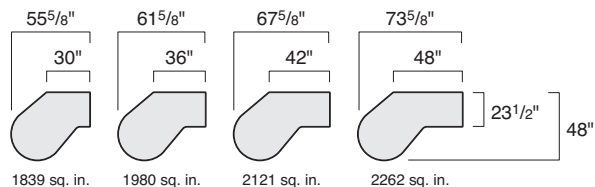

\*Left-hand units shown.  
 Right-hand units available.


*Tip: For P-edge worksurfaces, add 3/8" to 23 1/2" depth shown above.*




Understanding  
▶ Page 206  
Specifying  
▶ Page 536

## Visitor Worksurfaces\*

### With 1/2" Cord Drop

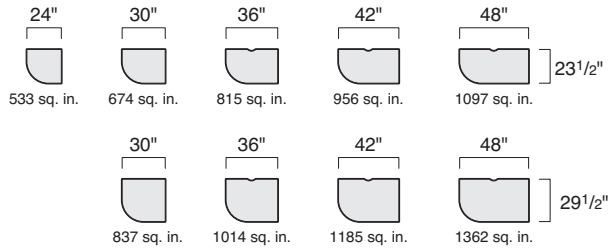

### With Full Depth

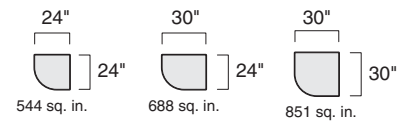

\*Left-hand units shown. Right-hand units available.


Tip: For P-edge worksurfaces, add 3/8" to 23 1/2" and 29 1/2" depths shown above.  
Tip: 24"W and 30"W visitor worksurfaces are not available with cable scallops.



Understanding  
▶ Page 206  
Specifying  
▶ Page 536

## Linking Worksurfaces\*



### With 1/2" Cord Drop




\*Dimension includes notch width.

Tip: For P-edge worksurfaces, add 3/8" to 23 1/2" and 27" depths shown above.

### With Full Depth

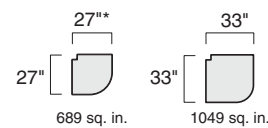


Understanding  
▶ Page 214  
Specifying  
▶ Page 538




Understanding  
▶ Page 214  
Specifying  
▶ Page 538

## Transaction Worksurfaces—Thin



## Transaction Worksurfaces—Square and Oval



# Worksurface Positioning

## Universal Worksurfaces

Universal Worksurfaces is a comprehensive solution of worksurfaces, supports, and privacy screens designed to deliver flexibility, mobility, and options to create inspiring spaces that support the different ways people work. A beautiful, light-scale aesthetic which gives designers new solutions across a broad spectrum of applications including the following: traditional panel-mounted systems, freestanding light-scale desking, panel wrapped desking, private office, conference, and teaming. Consists of Universal Systems Worksurfaces, U-Free Desks and Universal Tables.

## Universal Systems Worksurfaces

Main worksurface solution for the four primary space division products: Answer, Montage, and Kick. Worksurfaces can be panel-mounted or free-standing.

- Extensive shape and size offering allows designers to meet a variety of planning applications.
- Worksurfaces feature a choice of curvilinear or straight-front shapes.
- User front edge available in choice of 3 mm edge or ergonomic P-edge.
- Available with 1/2" cord drop in the back of the worksurface providing the most efficient routing of cords and an uncluttered desktop.
- Also available full depth, providing an uninterrupted working surface that fits flush to the panel and allows L-configuration planning.
- Standard scallops allow large cord heads to easily pass below the desktop. Scallops can be eliminated for freestanding applications.
- Available with full offering of Steelcase High-Pressure Laminates or veneers; specifiable 3 mm edge or P-edge colors.
- Worksurfaces can be supported with cantilevers, center support panels, end panels, pedestals, legs, or desk supports.

## Answer Freestanding Desks

Main desk solution for use with the four primary space division products: Answer, Montage, and Kick. Desks are built up from Universal components ordered separately and assembled onsite.

- Flexible product offering allows a wide range of desk applications for private offices, reception areas, and open plan settings.
- Non-handed desk components are easy to assemble and easy to reconfigure.
- Compatible with a wide range of worksurface products, including Universal Systems Worksurfaces, and many others.
- Wide range of storage available, including universal pedestals, lateral files, and hutches.
- Full-height and half-height modesty panels available for desks and peninsulas.
- Visually compatible with Universal tables, towers, and other products.

## Universal Tables

Versatile freestanding tables appropriate for teaming and conferencing environments or for individual work areas. Tables can be fixed or mobile for increased flexibility or ease of reconfiguration.

- They can also be tethered to Post and Beam in non-traditional applications.
- High-Pressure Laminate tables are available with a 3 mm edge or P-edge. Wood veneer tables are available with a square (3 mm) edge.
  - User edge on all sides of the tables and rounded corners allow a user to work on any side.
  - Wide range of sizes and shapes available, from small personal tables to large conference tables.
  - Available with full offering of Steelcase High-Pressure Laminates or veneers; specifiable 3 mm edge or P-edge colors.
  - T and X bases, post legs, C-leg, elliptical legs, adjustable-height legs, and cabby legs give designers many functional and aesthetic options.

## Elective Elements Worksurfaces

(See *Elective Elements Specification Guide*.)

Main worksurface solution for three primary space division products: Answer and Montage.

Worksurfaces can be panel-mounted or built up into casework solutions appropriate for private office solutions when combined with storage, end panels, and modesty panels.

- Extensive shape and size offering allows designers to meet a variety of planning applications.
- Worksurfaces feature a choice of curvilinear or straight-front shapes.
- Desk, bridge, return, peninsula, and desk return worksurfaces are also available for freestanding casework applications in addition to the typical systems worksurface shapes.
- User-front edge is available in a choice of 3 mm plastic edges, wood edge profiles on laminate worksurfaces (square 5 mm, bullnose), or wood edge profiles on wood worksurfaces (3 mm square, bullnose, waterfall, or knife).
- Worksurfaces are depths 24" or 30".
- Scallops are optional, as well as round or square grommets, depending on power and cable management needs. Grommets are available, depending on the worksurface shape, typically in left, center, and right locations.
- Grommets must be used for worksurface cable or cord management to route cords below the desk top.
- Scallops are used for task light cord management only.
- Available with full offering of Steelcase laminates or veneers. Also available with Customiz stain or open line laminates.
- Worksurfaces can be supported with Elective Elements supports (center support panels, end panels, under-worksurface storage, or freestanding legs) as well as Universal cantilevers and side support brackets.
- Height adjustability is achievable by using the height-adjustable storage and/or legs. Range of maintenance adjustability is 29"H–32"H in 1/2" increments.