


TYWE3S

Pinout for flashing TYWE3S devices. Module has a nearly identical pinout to ESP-12 module series.

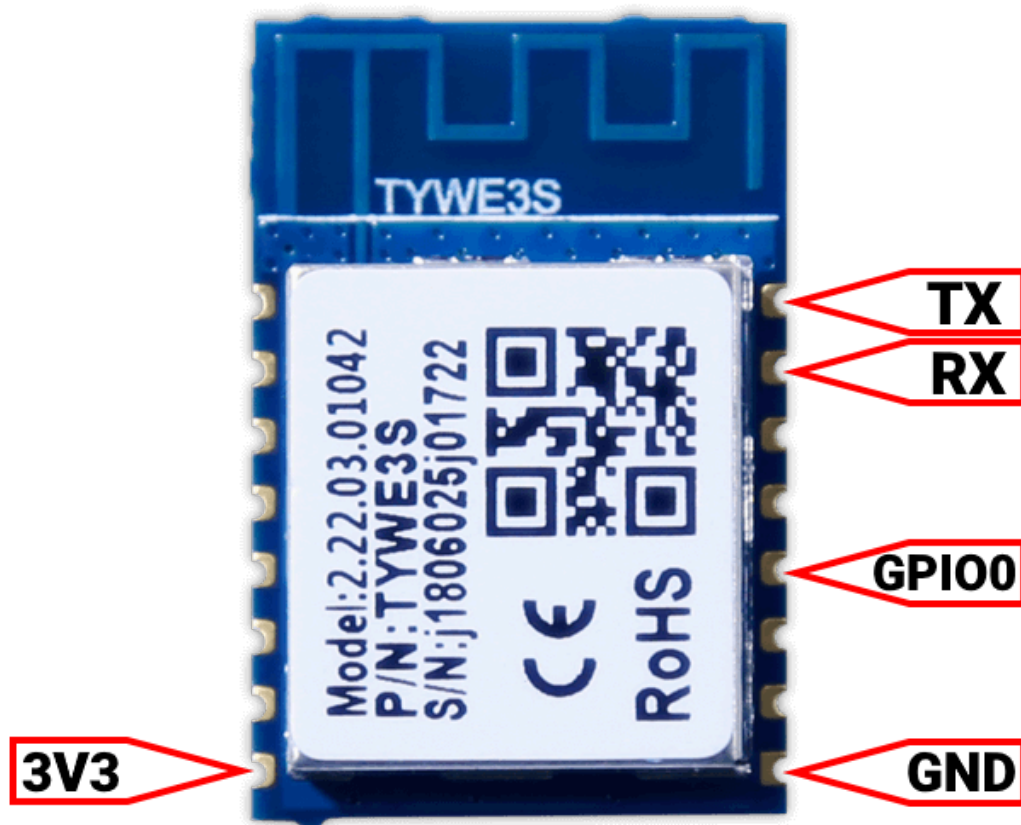


TYWE3S Wiring for Flashing

TYWE3S	Serial Programmer
Vcc	3.3V
EN	3.3V
TX	RX
RX	TX
GND	GND
GPI00	GND

Make sure to ground GPI00 during boot.

[TYWE3S - Flashing Jig](#)

Additional Information

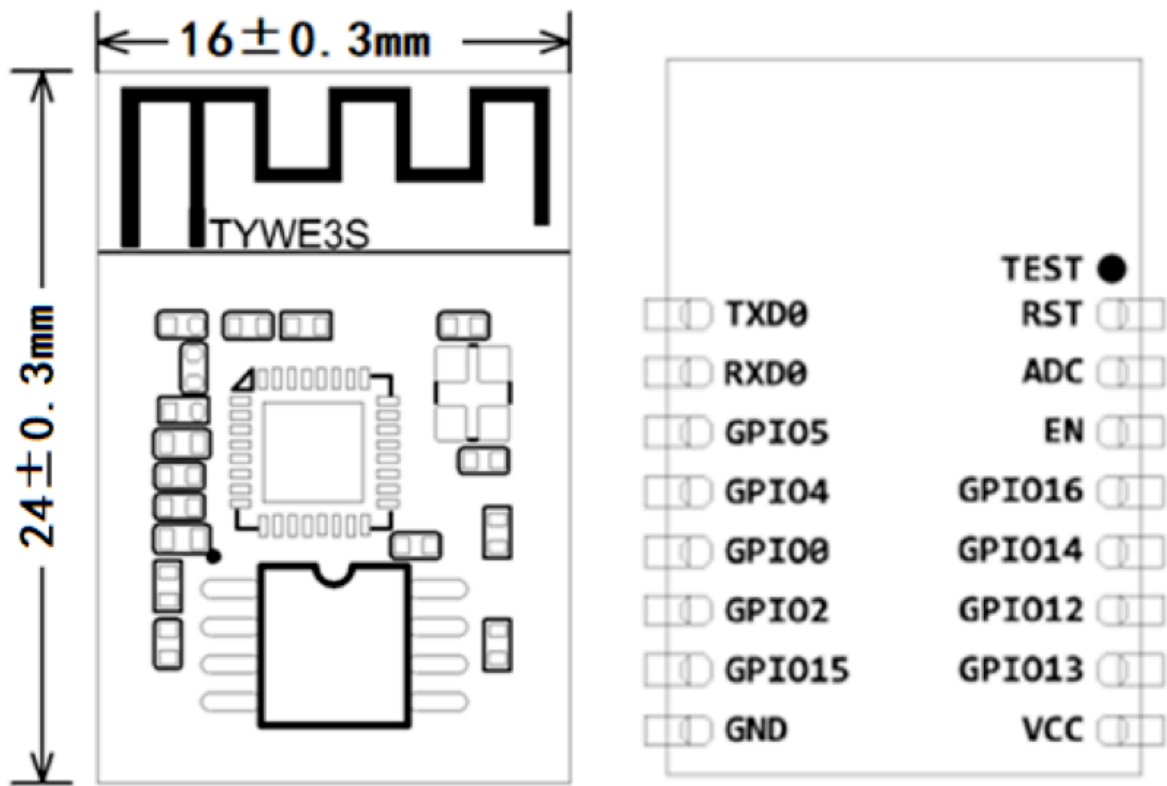

Pin Number	Symbol	IO type	Function
1	TXD0	O	UART0_TXD
2	RXD0	I/O	UART0_RXD
3	GPI05	I/O	GPI05_05
4	GPI04	I/O	GPI05_04
5	GPI00	I/O	GPI05_0 (Participate in the module power-on initialization process,use with caution)
6	GPI02	O	UART0_TXD (Used to print module internal information)

Pin Number	Symbol	IO type	Function
7	GPIO15	O	GPIO_15 (Participate in the module power-on initialization process,use with caution)
8	GND	P	Power Reference Ground
9	VCC	P	Module Power Pin (3.3V)
10	GPIO13	I/O	GPIO_13
11	GPIO12	I/O	GPIO_12
12	GPIO14	I/O	GPIO_14
13	GPIO16	I/O	GPIO_16 (Use 10K pull-up resistor for use)
14	EN	I	Module enable pin,normal use needs to receive 3.3V
15	ADC	AI	ADC port, 10-bit precision SAR ADC
16	RST	I/O	Hardware reset pin (low level effective, internal pull-up resistance)

For Switches and dimmers with additional MCU check guide [here](#)