SETUP
PIV
EDGE
CAMERA

# SPEC

## QUICKSTART GUIDE

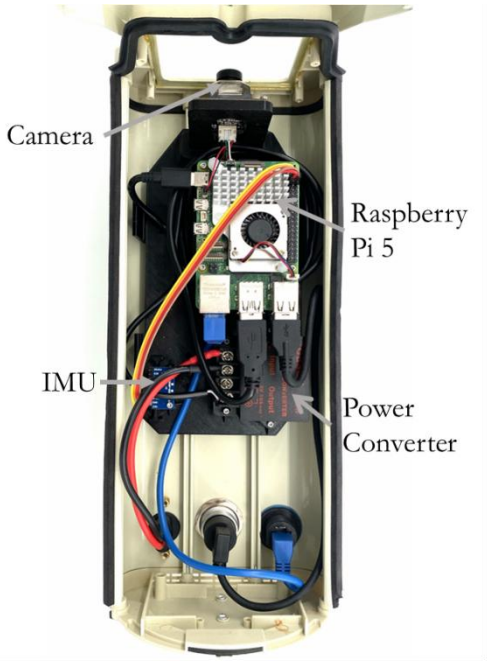


### SYSTEM POWER

Choose one method:

1. To power the system, either use the power cord adapter or jumper cables and connect to the bottom of the camera system. Then plug it into a 12V car or marine battery.

2. Open the case and disconnect the power converter's USB-C cable and connect the Raspberry Pi 5 power supply to the USB-C port.

### OPERATION

Once the SPEC system has booted, connect to the SPEC SSID using your wireless-enabled device. The captive portal will direct you to the login page. For possible roll/pitch discrepancies, see repository Docs for IMU taring.

### LOGIN INFORMATION

| | WEB APP | RPI | WI-FI | |
|---|---|---|---|---|
| USERNAME | SPEC | spec | SSID | SPEC |
| PWD | PIV | spec | PWD | velocity |

**MORE INFORMATION AND SUPPORT** Visit https://gitlab.com/deepanalyticsllc/spec.git

ALL DOCUMENTATION CAN BE DOWNLOADED HERE. DOWNLOAD THE DOCUMENTATION BEFORE HEADING OUT TO THE FIELD.