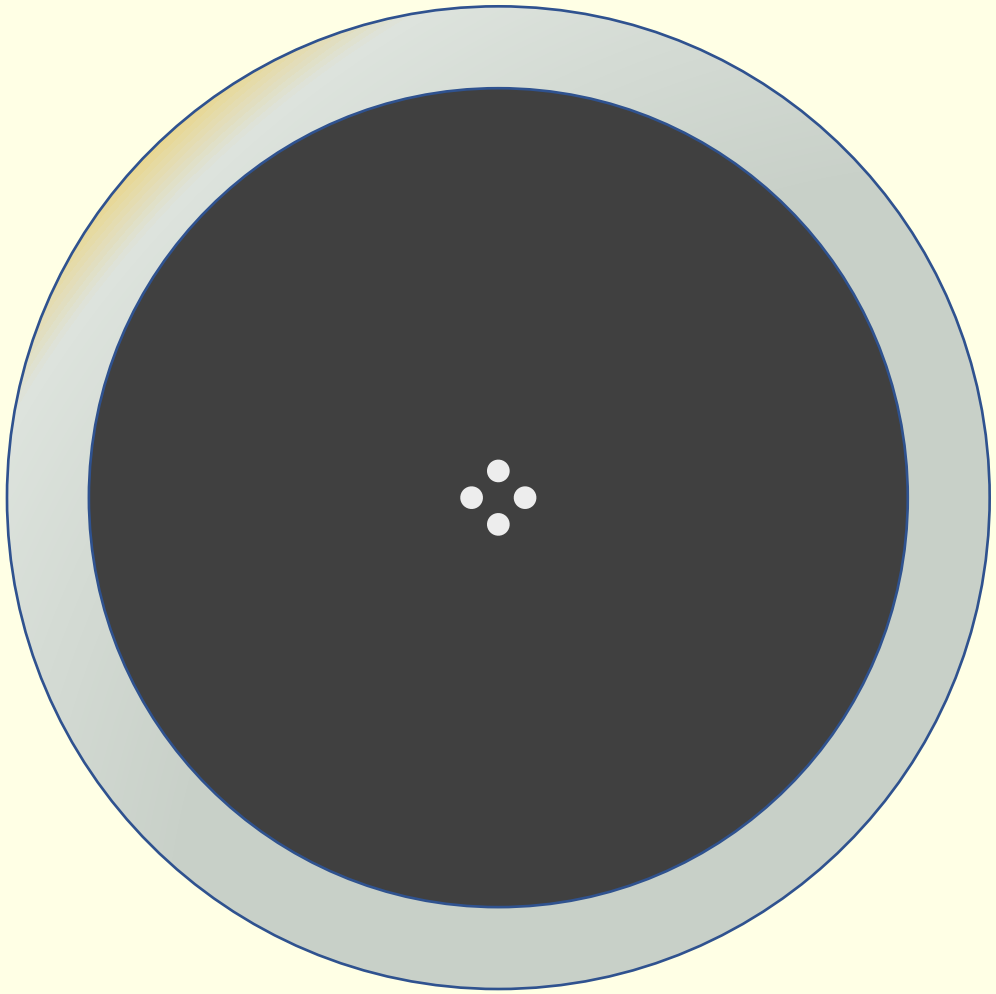

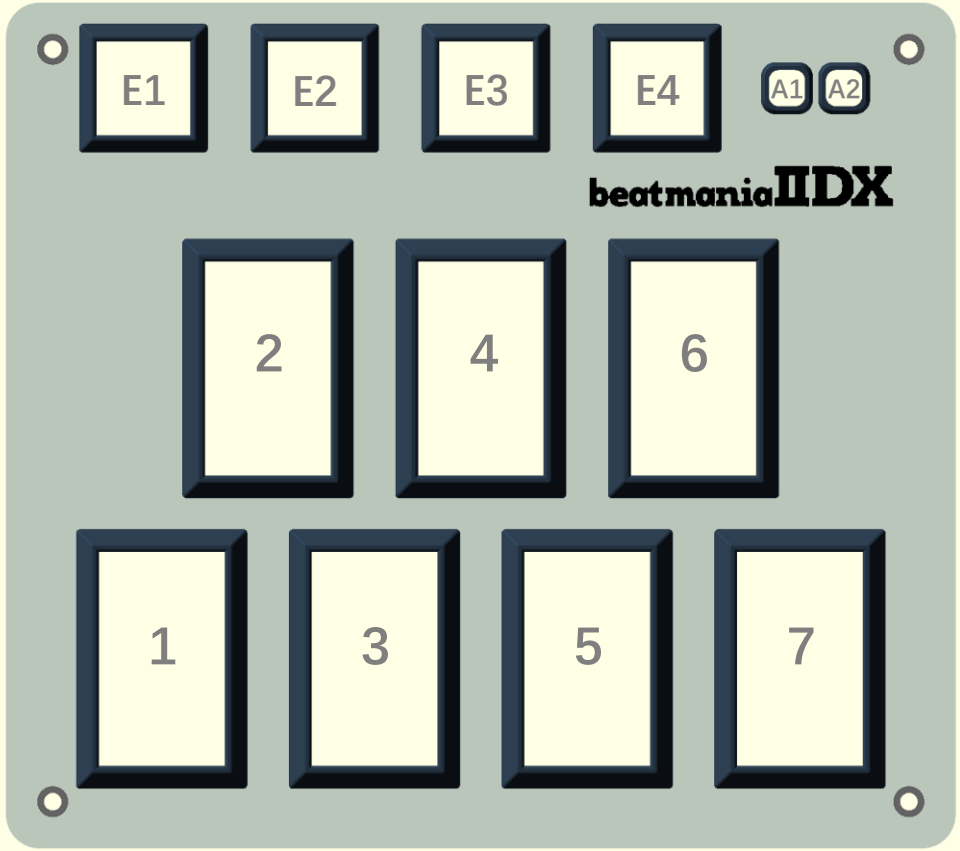

Manual for IIDX Pico/Teeny/Jumbo

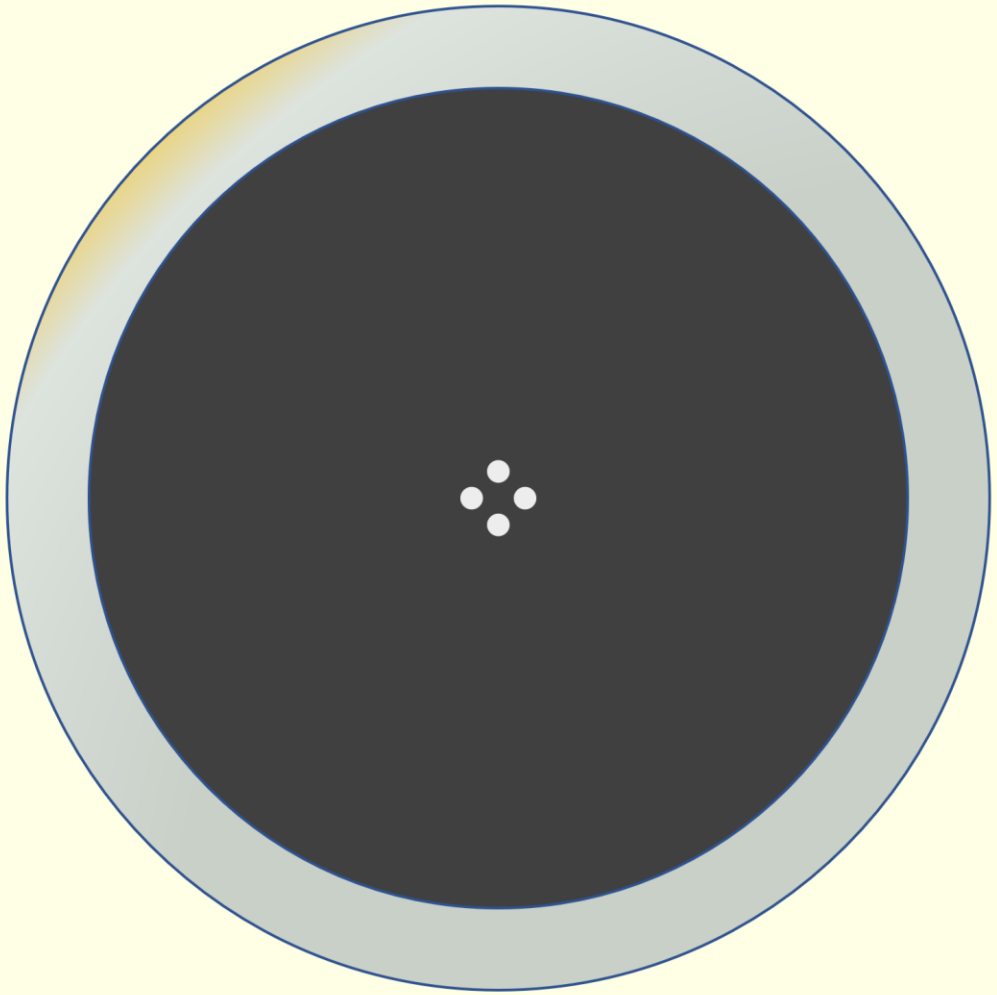

Device Mode will be saved in flash.

NORMAL Device

KONAMI Device

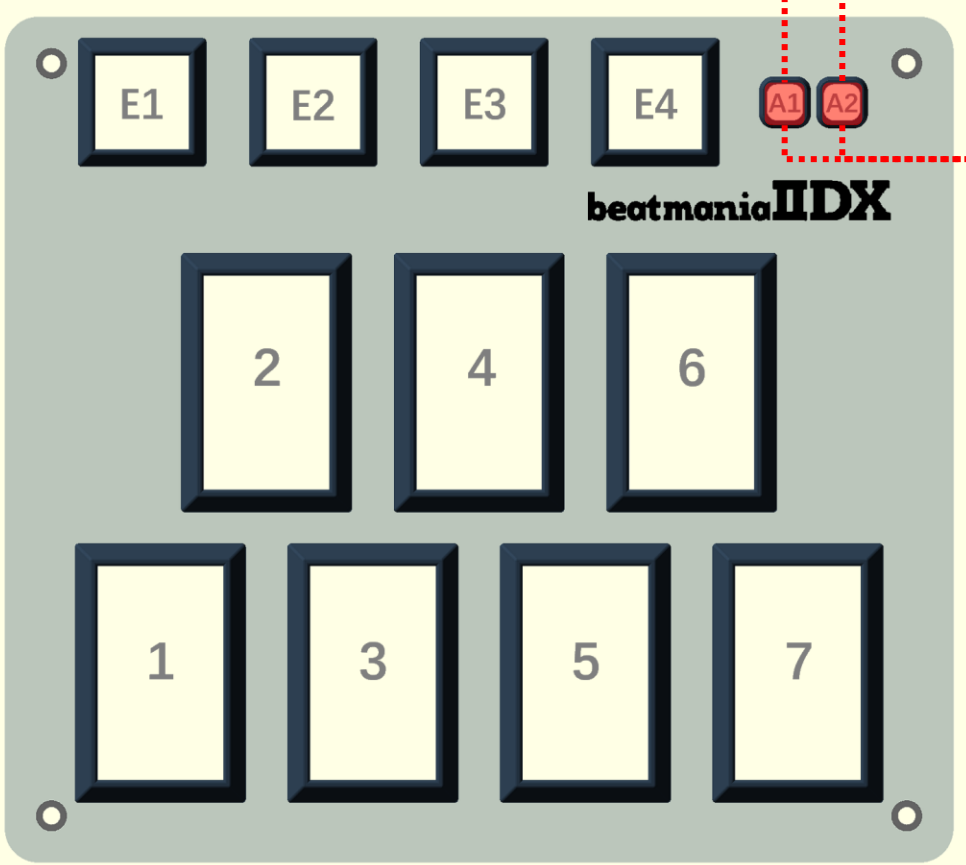

Firmware Update

POWER-ON

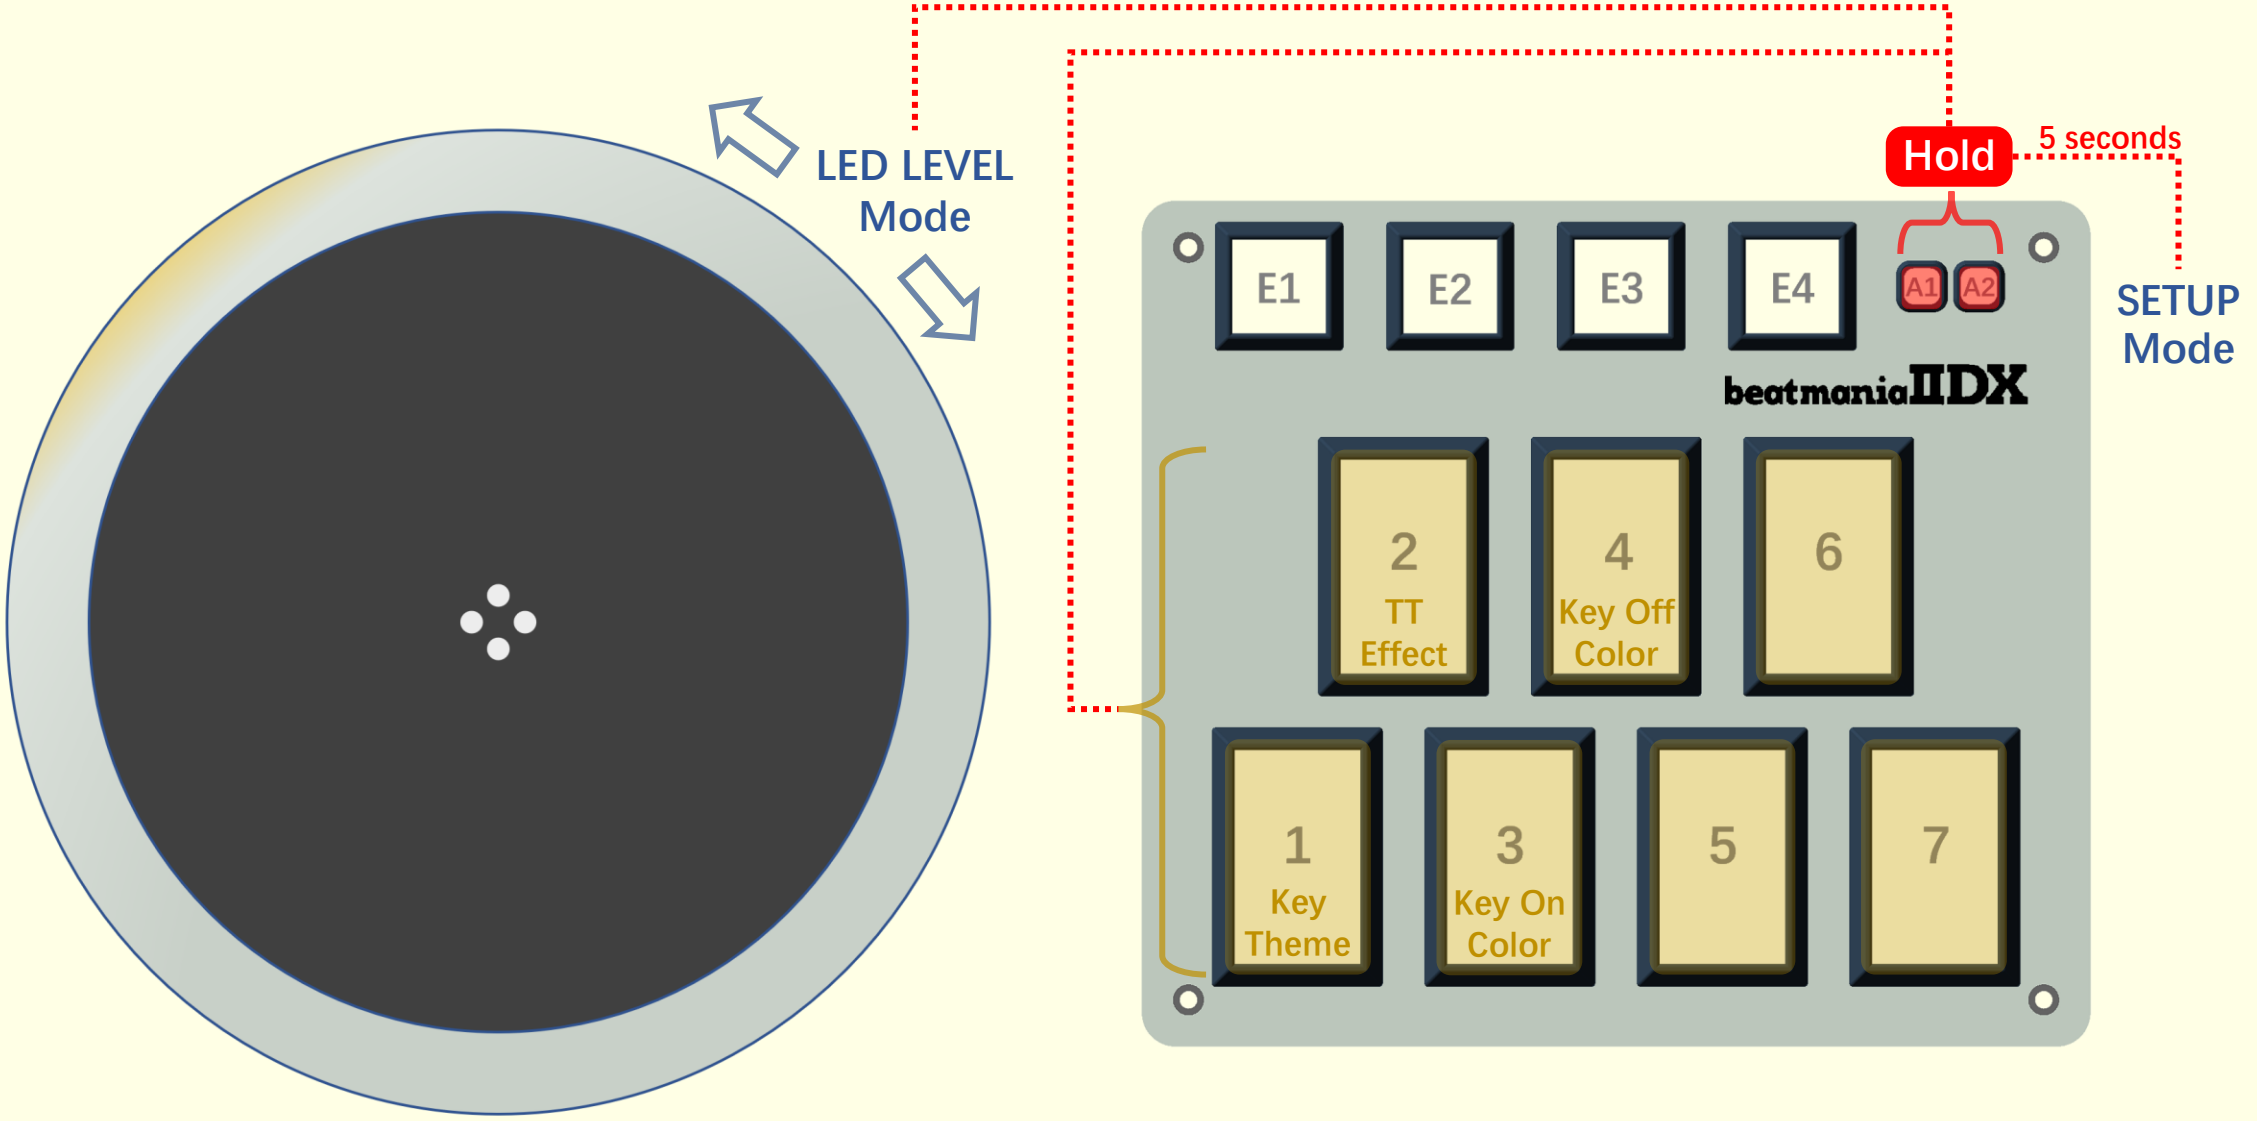
LED LEVEL
Mode
Hold
5 seconds
SETUP
Mode
E1
E2
E3
E4
A1
A2
beatmaniaIIDX
2
TT
Effect
4
Key Off
Color
6
1
Key
Theme
3
Key On
Color
5
7

NORMAL MODE

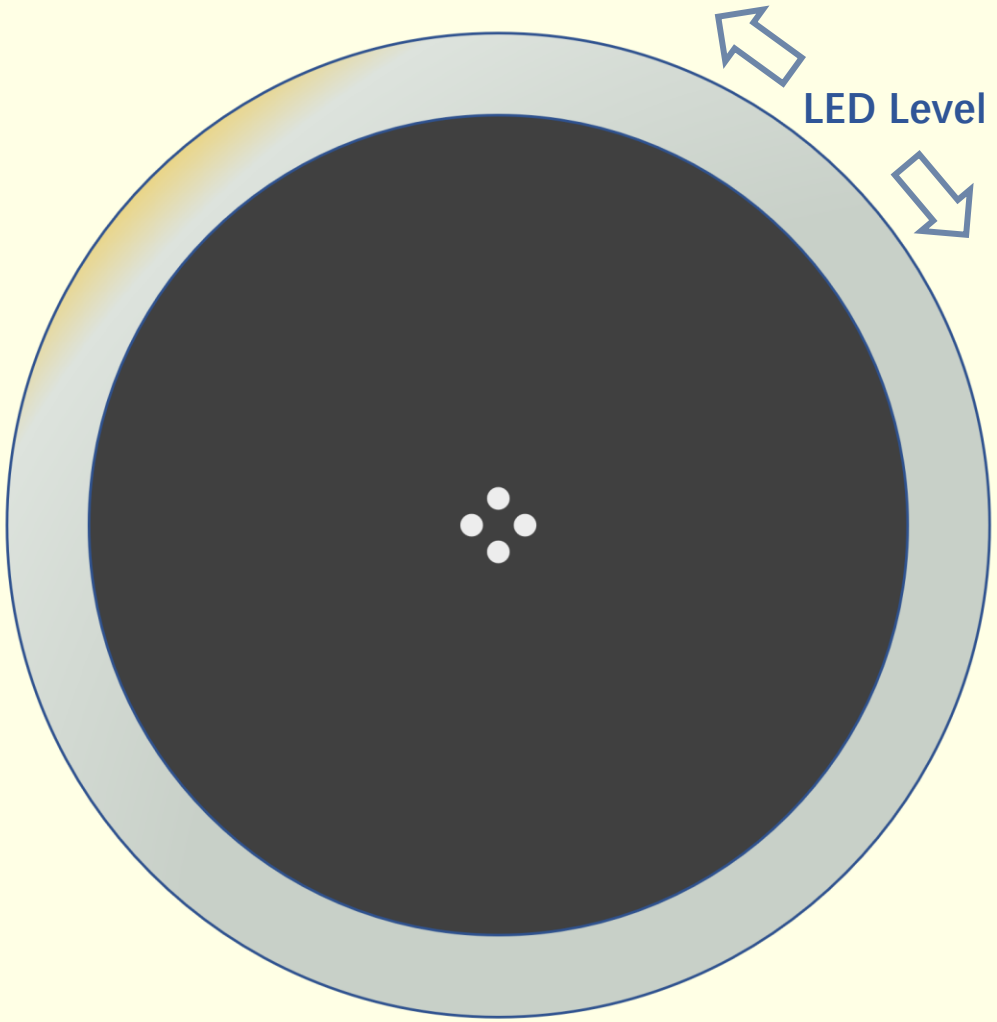

Level means maximum brightness.

Level for turntable and buttons are separate.

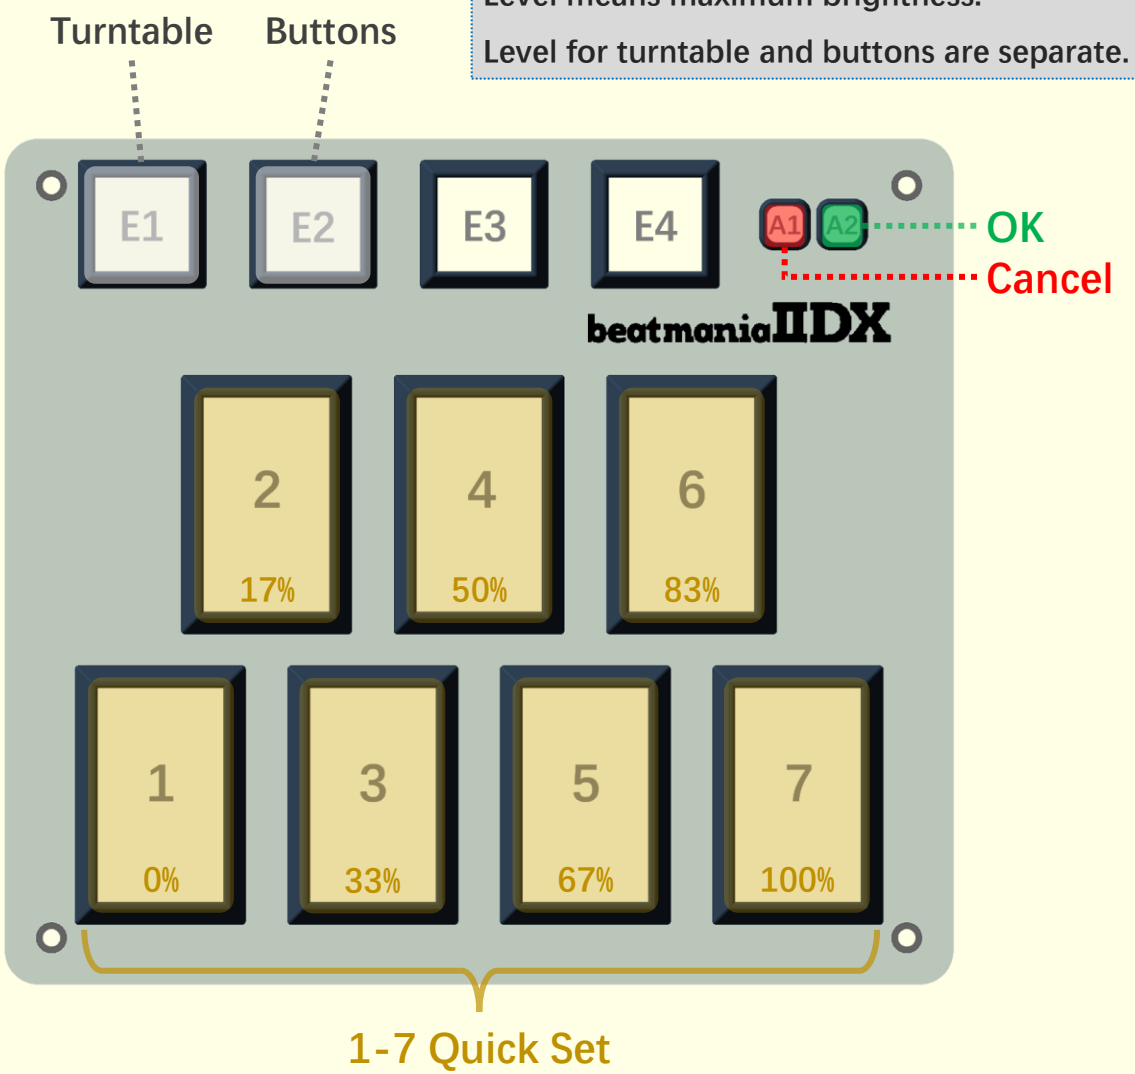

LED LEVEL MODE

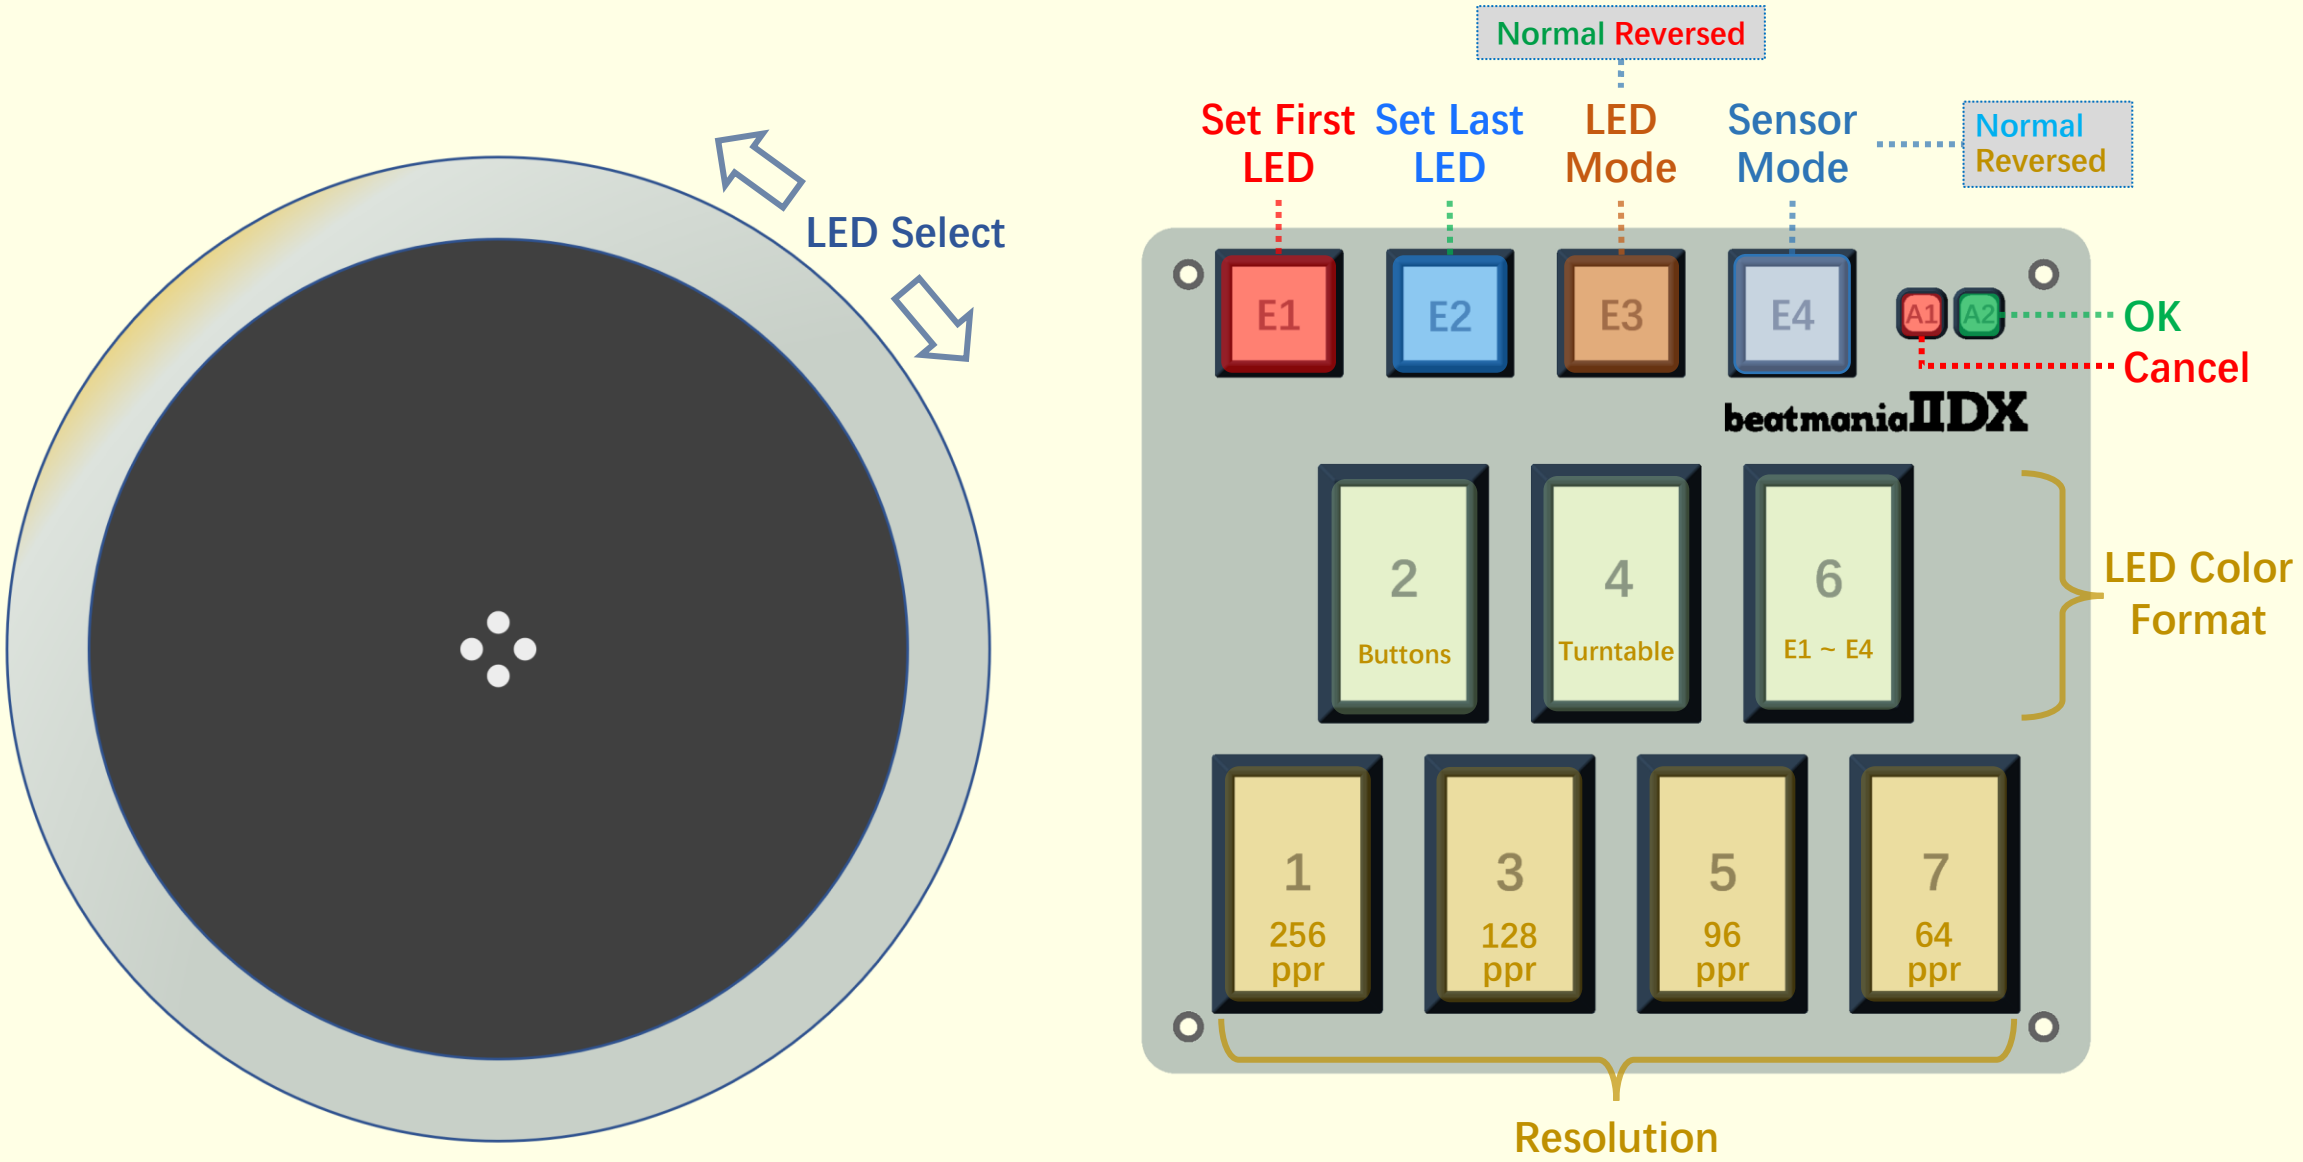
Normal Reversed
Set First LED
Set Last LED
LED Mode
Sensor Mode
Normal Reversed
LED Select
E1
E2
E3
E4
A1
A2
OK
Cancel
beatmaniaIIDX
2
Buttons
4
Turntable
6
E1 ~ E4
LED Color Format
1
256 ppr
3
128 ppr
5
96 ppr
7
64 ppr
Resolution

SETUP MODE