


ATM C++ DEVICE HANDLER



Component Interactions

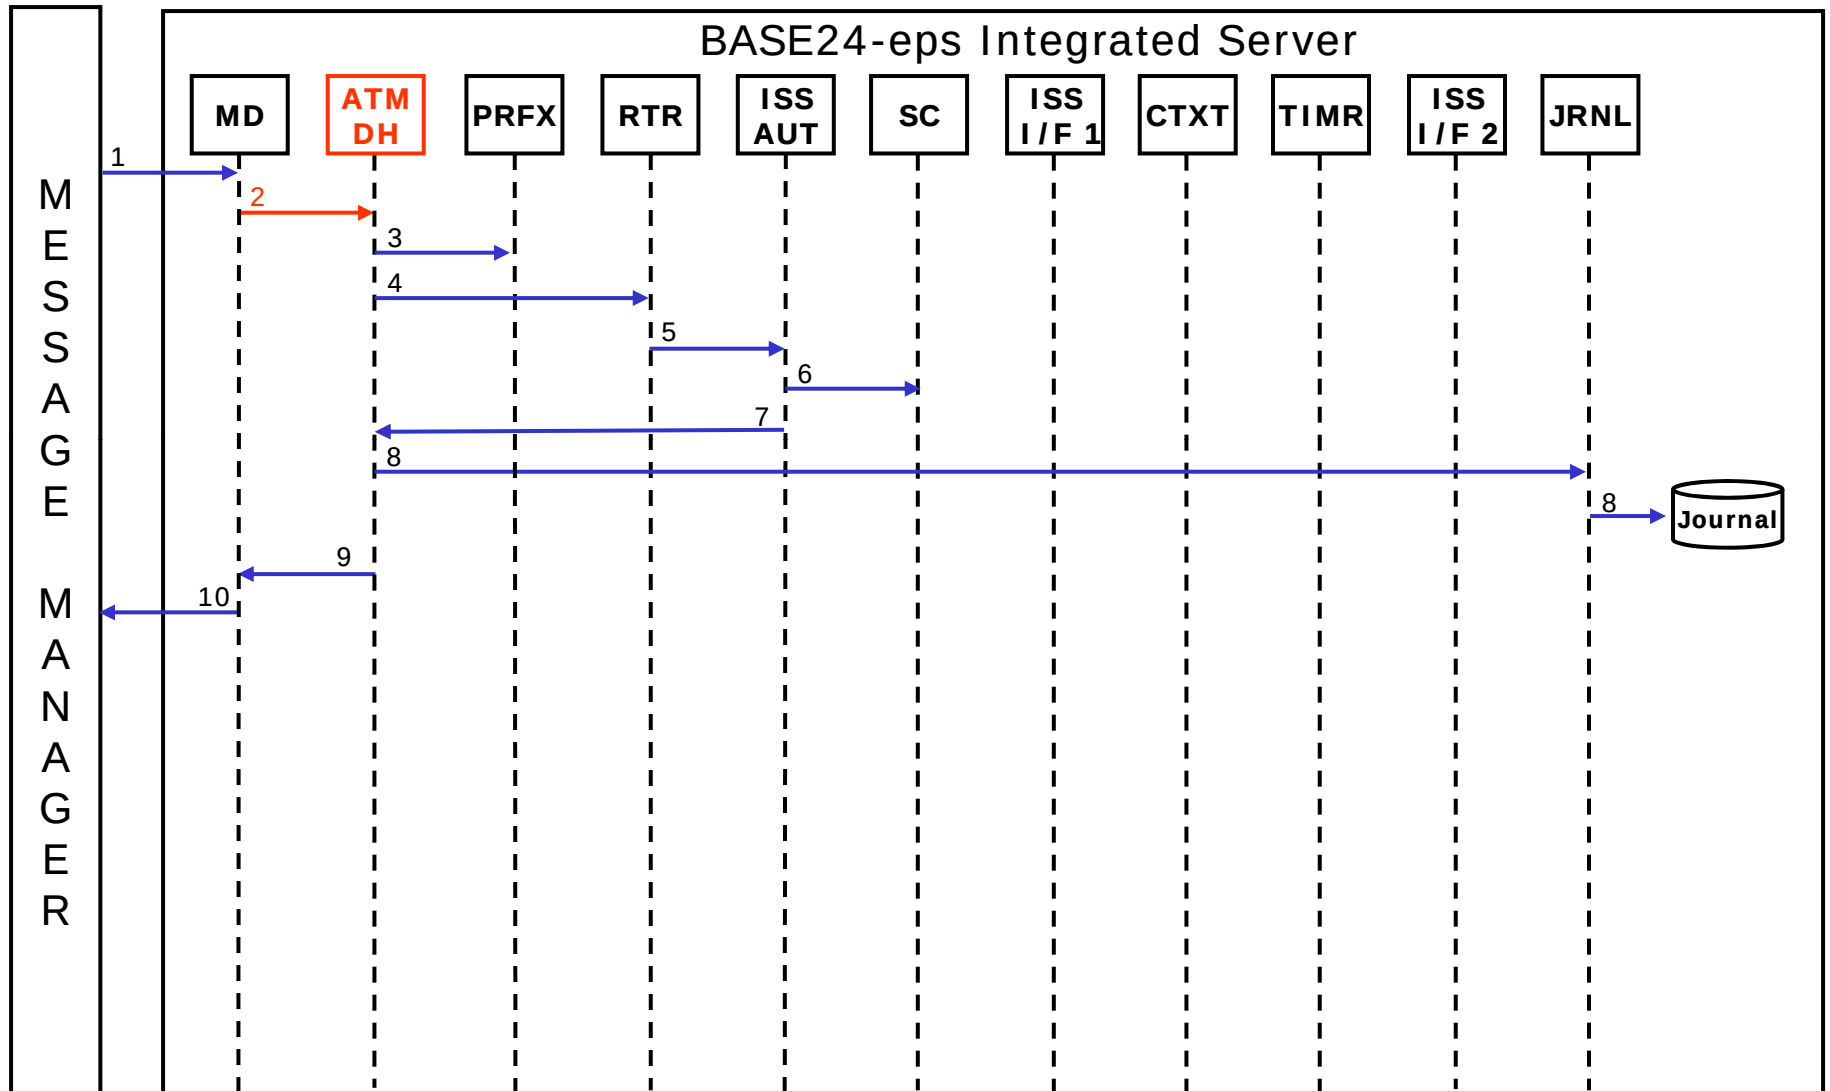

Internal Authorization – Request/Response

ATM Message Support

- The ATM Device Handler supports:
 - Native Diebold (911 & 912)
 - Native NCR (NDC & NDC +)
 - NCR Standard Interface
 - Shared Wincor NDC
 - Shared Wincor Diebold 912
 - Tidel
 - Triton



BASE24-eps Device Handler Functions

- Features supported by C++ Device Handler:
 - Dial-up framework support (NCR, Diebold, Tidel, Triton)
 - Diebold Bulk Note Acceptor (BNA), Intelligent Depository Module (IDM), Coin Dispenser Module (CDM)
 - NCR NDC+ Device Handler Bunch Note Acceptance (BNA), Check Processing (CPM)
 - Automated Key Distribution – NCR Signature support and emulation, Diebold Certificate support and emulation, Wincor Signature/Certificate support and emulation, Tidel (NCR signature) and Triton (Verisign certificates)



BASE24-eps Device Handler Functions

- Features supported by C++ Device Handler:
 - Mobile Top-up (Wincor DDC, Wincor NDC, NCR NDC, Diebold)
 - Forced Cutover Audit (NCR, Diebold, Wincor)
 - Dynamic Key Management (NCR, Diebold, Wincor, Tidel, Triton)
 - Stop Payment Processing
 - Check Processing



BASE24-eps Device Handler Functions

- Features supported by C++ Device Handler:
 - Multi-byte character set support
 - Optional ATM receipts
 - Configurable peak time load group processing
 - EMV support – NCR, Diebold
 - Non-Currency Dispense
 - Statement Print





ATM C++ DEVICE HANDLER

ATM Configuration

Acquirer Configuration – ATM devices

- ATM channel devices utilize a number of profiles. These profiles can be configured first, Institution and Channel records added later.


ATM Peak Load Profile*	ATM DKM*
ATM Depository Bin Profile*	ATM MAC Profile*
ATM Channel Profile	ATM Surcharge Profile*
ATM Consumer Media Profile*	ATM Receipt Format Profile*
ATM Fast Cash Profile*	ATM Receipt Required Profile*
ATM Hopper Profile	ATM Statement Print Profile*
ATM Inactivity Alert Profile*	Acquirer Transactions Allowed Profile
ATM Load Profile*	Source Routing Profile
ATM Operation Code*	Action Code Profile
ATM Multi-byte*	Context Profile*
Institution ID	

ATM Channel

* = Optional Profile

Not required to add the Channel Record

ATM Channel Configuration

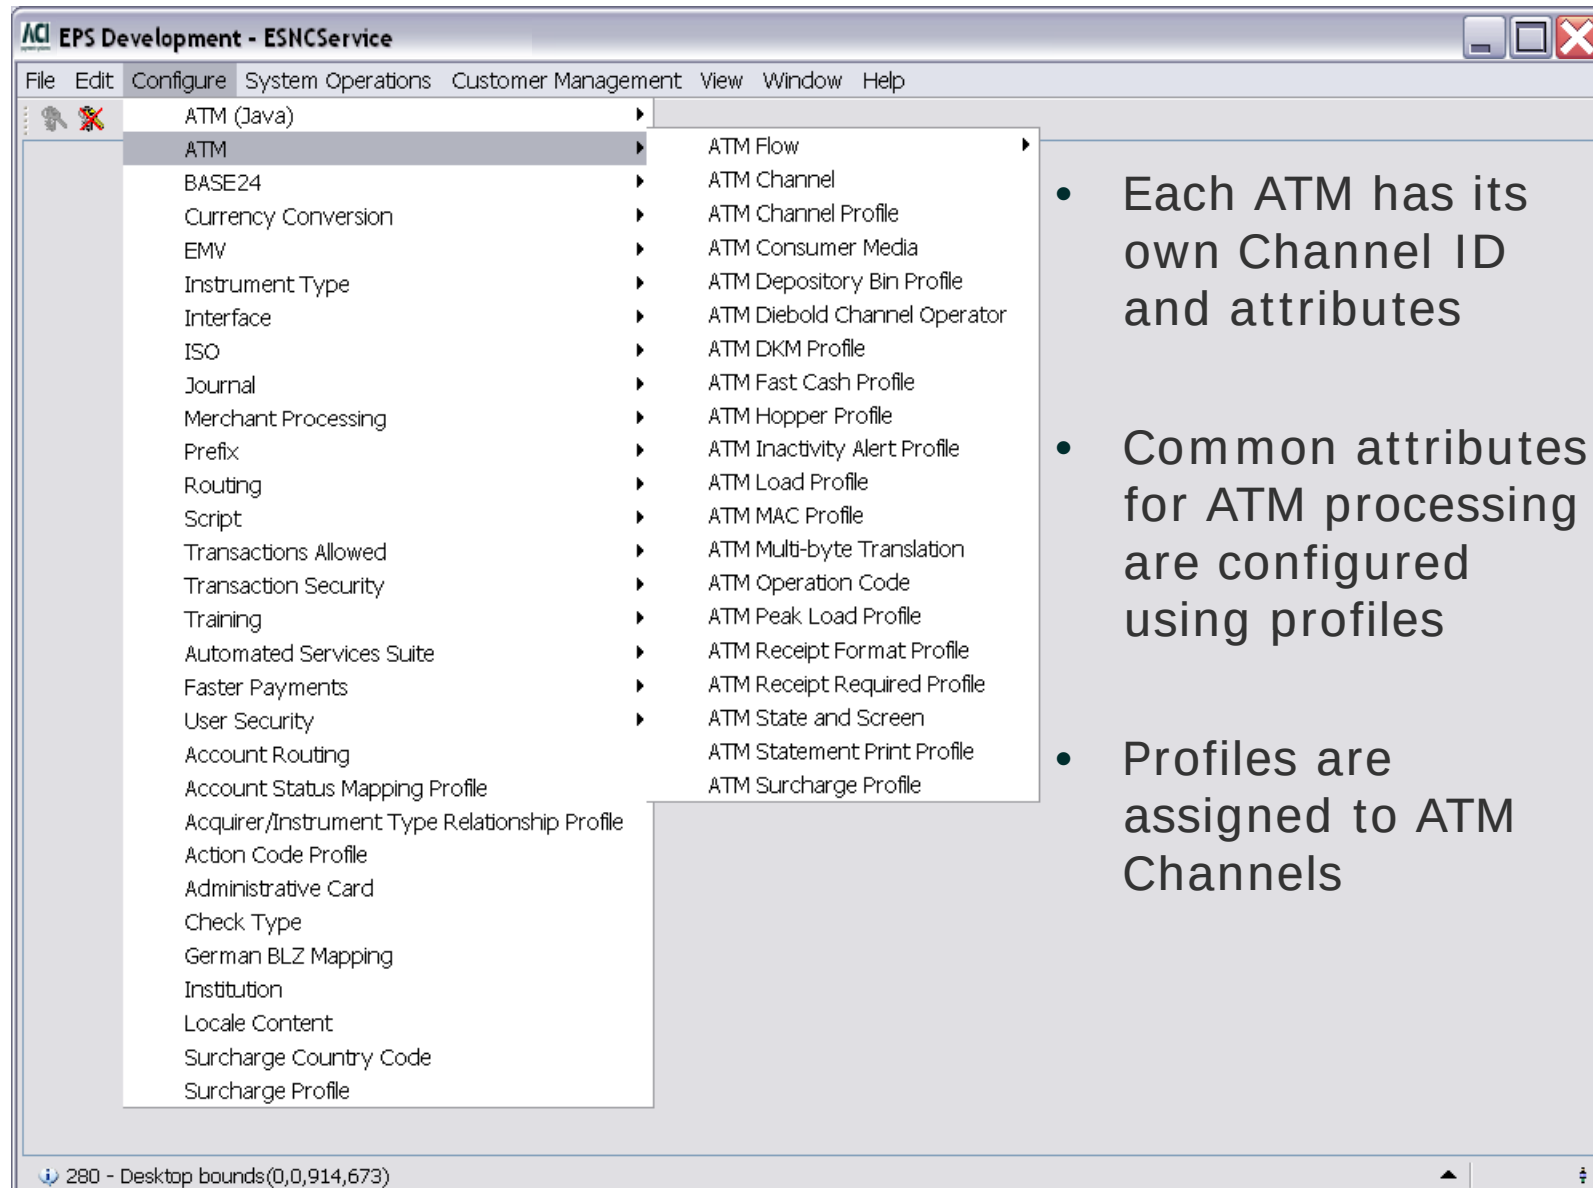

ATM Channel Configuration

The screenshot displays the 'EPS Development - ESNService' application window. The main window is titled 'ATM Channel Configuration - LDI_ATM_01'. It features a menu bar with 'File', 'Edit', 'Configure', 'System Operations', 'Customer Management', 'View', 'Window', and 'Help'. Below the menu bar is a toolbar with various icons. The main content area is divided into several sections. At the top, there is a 'Channel ID' field containing 'LDI_ATM_01' and a group of links: 'ATM Links', 'Status', 'Channel Administration', 'Totals', 'Status Query', and 'Channel Management'. Below this is a tabbed interface with tabs for 'Receipt Profiles', 'Other Profiles', 'Load Groups', 'Migration', 'Migration (Locale)', and 'Security'. The 'Receipt Profiles' tab is active, showing sub-tabs for 'General', 'Location', 'Location (Locale)', and 'Transaction Profiles'. The 'General' sub-tab is selected, displaying fields for 'Institution ID' (00001 (RIPLEY'S BANK O...)), 'ATM Channel Profile' (CNFG_PRFL02), 'Device Type' (NCR Standard Interface), 'Character Set' (ASCII), 'Origination Site Indicator' (L), 'Current Posting Date' (October 15, 2010), 'Home Site Indicator' (H), 'Non-Interactive Surcharge Load Group' (0000), 'Save Previous Day Totals' (checked), 'Supports Last Transaction Status' (unchecked), 'Forced Cutover Audit Indicator' (unchecked), and 'Retrieve Counts' (Do not retrieve terminal c...). Below these fields is an 'Optional Receipt' section with 'Operable Load Group', 'Inoperable Load Group', and 'Load Group Status' fields. At the bottom of the window, a status bar shows '2 - Successful view of LDI_ATM_01.' and '280 - Desktop bounds(0,0,914,673)'.

Channel ID: LDI_ATM_01

ATM Links
Status Channel Administration Totals
Status Query Channel Management

Receipt Profiles Other Profiles Load Groups Migration Migration (Locale) Security

General Location Location (Locale) Transaction Profiles

Institution ID: 00001 (RIPLEY'S BANK O...)
ATM Channel Profile: CNFG_PRFL02
Device Type: NCR Standard Interface
Character Set: ASCII
Origination Site Indicator: L
Current Posting Date: October 15, 2010
Home Site Indicator: H
Non-Interactive Surcharge Load Group: 0000
Save Previous Day Totals: ☒
Supports Last Transaction Status: ☐
Forced Cutover Audit Indicator: ☐
Retrieve Counts: Do not retrieve terminal c...
Optional Receipt
Operable Load Group:
Inoperable Load Group:
Load Group Status:

2 - Successful view of LDI_ATM_01.
280 - Desktop bounds(0,0,914,673)

ATM Channel Configuration

The screenshot displays the 'EPS Development - ESNService' application window. The main window is titled 'ATM Channel Configuration - LDI_ATM_01'. It features a menu bar with 'File', 'Edit', 'Configure', 'System Operations', 'Customer Management', 'View', 'Window', and 'Help'. Below the menu bar is a toolbar with various icons. The main content area is divided into several sections:

- Channel ID:** A text field containing 'LDI_ATM_01'.
- ATM Links:** A box containing links: 'Status', 'Channel Administration', 'Totals', 'Status Query', and 'Channel Management'.
- Tabs:** A set of tabs including 'Receipt Profiles', 'Other Profiles' (selected), 'Load Groups', 'Migration', 'Migration (Locale)', and 'Security'. Under 'Other Profiles', there are sub-tabs: 'General', 'Location' (selected), 'Location (Locale)', and 'Transaction Profiles'.
- Form Fields:**
 - Terminal Description:** A large text area.
 - Owner:** A text field containing 'DF'.
 - Country:** A dropdown menu showing 'USA (840)'.
 - Address:** A text field containing 'XCV'.
 - County:** A text field.
 - City:** A text field containing 'XCV'.
 - State / Province:** A dropdown menu showing 'AE (Armed Forces Canada an...'.
 - Postal Code:** A text field containing 'CXV'.
 - Co-owned ATM Indicator:** A dropdown menu showing 'Unknown'.
 - Time Offset (hrs:mins):** A dropdown menu showing '00:00'.
 - Social Deprivation Indicator:** A dropdown menu showing 'Unknown'.

At the bottom of the window, there is a status bar with the message '2 - Successful view of LDI_ATM_01.' and a coordinate string '280 - Desktop bounds(0,0,914,673)'.

ATM Channel Configuration

The screenshot shows a software window titled "EPS Development - ESNCService" with a menu bar (File, Edit, Configure, System Operations, Customer Management, View, Window, Help) and a toolbar. A sub-window titled "ATM Channel Configuration - LDI_ATM_01" is open, displaying a configuration form. The form includes a "Channel ID" field with the value "LDI_ATM_01" and a toolbar with icons for file operations. A tabbed interface is present with tabs for "Receipt Profiles", "Other Profiles", "Load Groups", "Migration", "Migration (Locale)", and "Security". The "Migration" tab is selected, showing sub-tabs for "General", "Location", "Location (Locale)", and "Transaction Profiles". The "Location (Locale)" sub-tab is active, displaying a form with fields for "Terminal Description", "Owner", "Address", "City", "Postal Code", "Country", "County", and "State / Province". A status bar at the bottom shows a message: "2 - Successful view of LDI_ATM_01." and a coordinate string: "280 - Desktop bounds(0,0,914,673)".

Channel ID: LDI_ATM_01

ATM Links

- Status
- Channel Administration
- Totals
- Status Query
- Channel Management

Receipt Profiles | Other Profiles | Load Groups | Migration | Migration (Locale) | Security

General | Location | Location (Locale) | Transaction Profiles

Terminal Description:

Owner: Country:

Address: County:

City: State / Province:

Postal Code:

2 - Successful view of LDI_ATM_01.

280 - Desktop bounds(0,0,914,673)

ATM Channel Configuration

The screenshot shows a software window titled "EPS Development - ESNService" with a menu bar (File, Edit, Configure, System Operations, Customer Management, View, Window, Help) and a toolbar. A sub-window titled "ATM Channel Configuration - LDI_ATM_01" is open, displaying the configuration for a specific channel. The "Channel ID" is "LDI_ATM_01". There are "ATM Links" for Status, Channel Administration, Totals, Status Query, and Channel Management. Below this are tabs for Receipt Profiles, Other Profiles, Load Groups, Migration, Migration (Locale), and Security. The "Transaction Profiles" tab is selected, showing a list of profiles with dropdown menus: Acquirer Transactions Profile (QA_ACQ_TXN), Source Routing Profile (ACQ-APACS), Action Code Profile, Fast Cash Profile, Surcharge Profile, and Context Profile. A status bar at the bottom indicates "2 - Successful view of LDI_ATM_01." and "280 - Desktop bounds(0,0,914,673)".

Channel ID: LDI_ATM_01

ATM Links

- Status
- Channel Administration
- Totals
- Status Query
- Channel Management

Receipt Profiles | Other Profiles | Load Groups | Migration | Migration (Locale) | Security

General | Location | Location (Locale) | Transaction Profiles

Acquirer Transactions Profile: QA_ACQ_TXN

Source Routing Profile: ACQ-APACS

Action Code Profile:

Fast Cash Profile:

Surcharge Profile:

Context Profile:

2 - Successful view of LDI_ATM_01.

280 - Desktop bounds(0,0,914,673)

Profiles allow for the assignment of common attributes.

ATM Channel Configuration

The screenshot shows a software window titled "EPS Development - ESNCSERVICE" with a menu bar (File, Edit, Configure, System Operations, Customer Management, View, Window, Help) and a toolbar. Inside, a sub-window titled "ATM Channel Configuration - LDI_ATM_01" is active. It features a "Channel ID" field with the value "LDI_ATM_01" and a "Help" icon. To the right, an "ATM Links" box contains links for "Status", "Channel Administration", "Totals", "Status Query", and "Channel Management". Below these are several tabs: "General", "Location", "Location (Locale)", "Transaction Profiles", "Receipt Profiles", "Other Profiles", "Load Groups", "Migration", "Migration (Locale)", and "Security". The "Receipt Profiles" tab is selected, showing three dropdown menus: "Receipt Format Profile", "Receipt Required Profile", and "Statement Print Profile". A status bar at the bottom displays the message "2 - Successful view of LDI_ATM_01." and coordinates "280 - Desktop bounds(0,0,914,673)".

Channel ID: LDI_ATM_01

ATM Links

- Status
- Channel Administration
- Totals
- Status Query
- Channel Management

General | Location | Location (Locale) | Transaction Profiles | Receipt Profiles | Other Profiles | Load Groups | Migration | Migration (Locale) | Security

Receipt Format Profile: [Dropdown]

Receipt Required Profile: [Dropdown]

Statement Print Profile: [Dropdown]

2 - Successful view of LDI_ATM_01.

280 - Desktop bounds(0,0,914,673)

ATM Channel Configuration

The screenshot shows a software window titled "EPS Development - ESNService" with a menu bar (File, Edit, Configure, System Operations, Customer Management, View, Window, Help) and a toolbar. A sub-window titled "ATM Channel Configuration - LDI_ATM_01" is open, displaying the configuration for a specific ATM channel. The "Channel ID" is set to "LDI_ATM_01". A section titled "ATM Links" contains links for "Status", "Channel Administration", "Totals", "Status Query", and "Channel Management". Below this, a tabbed interface is shown with tabs for "General", "Location", "Location (Locale)", "Transaction Profiles", "Receipt Profiles", "Other Profiles", "Load Groups", "Migration", "Migration (Locale)", and "Security". The "Other Profiles" tab is currently selected, showing five dropdown menus: "Load Profile", "Hopper Profile" (set to "DBLD_HPR_PRFL02"), "Inactivity Alert Profile", "Depository Bin Profile", and "Peak Load Profile". A status bar at the bottom indicates "2 - Successful view of LDI_ATM_01." and "280 - Desktop bounds(0,0,914,673)".

Channel ID: LDI_ATM_01

ATM Links

- Status
- Channel Administration
- Totals
- Status Query
- Channel Management

General | Location | Location (Locale) | Transaction Profiles

Receipt Profiles | Other Profiles | Load Groups | Migration | Migration (Locale) | Security

Load Profile: [Dropdown]

Hopper Profile: DBLD_HPR_PRFL02 [Dropdown]

Inactivity Alert Profile: [Dropdown]


Depository Bin Profile: [Dropdown]

Peak Load Profile: [Dropdown]

2 - Successful view of LDI_ATM_01.

280 - Desktop bounds(0,0,914,673)

ATM Channel Configuration

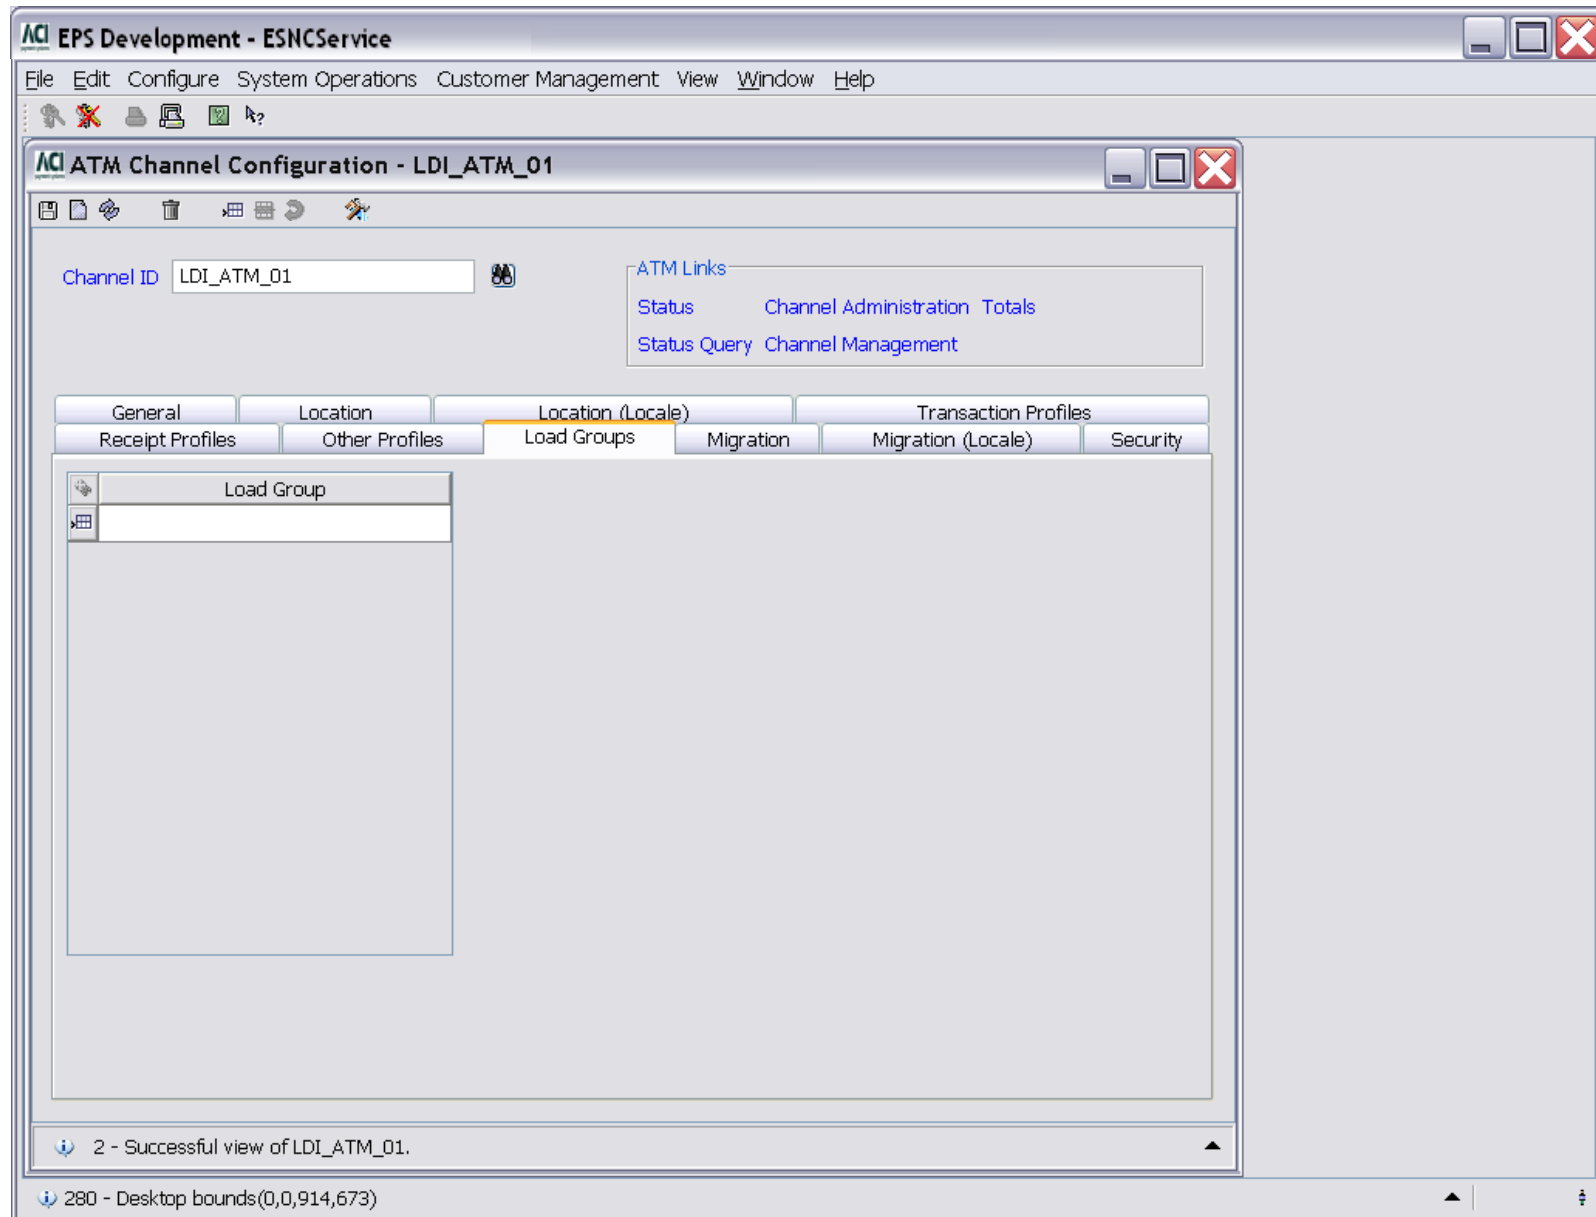

ATM Channel Configuration

The screenshot shows a software window titled "EPS Development - ESNService" with a menu bar (File, Edit, Configure, System Operations, Customer Management, View, Window, Help) and a toolbar. A sub-window titled "ATM Channel Configuration - LDI_ATM_01" is open, displaying the configuration for a specific ATM channel. The "Channel ID" is set to "LDI_ATM_01". A "Status" button is visible. A list of "ATM Links" includes "Status", "Channel Administration", "Totals", "Status Query", and "Channel Management". A tabbed interface at the bottom shows several tabs: "General", "Location", "Location (Locale)", "Transaction Profiles", "Receipt Profiles", "Other Profiles", "Load Groups", "Migration" (which is the active tab), "Migration (Locale)", and "Security". The "Migration" tab contains two input fields: "Terminal Region" and "Terminal Branch". A status bar at the bottom of the window displays the message "2 - Successful view of LDI_ATM_01." and the desktop bounds "280 - Desktop bounds(0,0,914,673)".

Channel ID: LDI_ATM_01

ATM Links

- Status
- Channel Administration
- Totals
- Status Query
- Channel Management

General | Location | Location (Locale) | Transaction Profiles | Receipt Profiles | Other Profiles | Load Groups | **Migration** | Migration (Locale) | Security

Terminal Region:

Terminal Branch:

2 - Successful view of LDI_ATM_01.

280 - Desktop bounds(0,0,914,673)

ATM Channel Configuration

The screenshot shows a software window titled "EPS Development - ESNCService" with a menu bar (File, Edit, Configure, System Operations, Customer Management, View, Window, Help) and a toolbar. A sub-window titled "ATM Channel Configuration - LDI_ATM_01" is open, displaying the configuration for a specific ATM channel. The "Channel ID" is set to "LDI_ATM_01". A section titled "ATM Links" contains links for "Status", "Channel Administration", "Totals", "Status Query", and "Channel Management". Below this is a tabbed interface with tabs for "General", "Location", "Location (Locale)", "Transaction Profiles", "Receipt Profiles", "Other Profiles", "Load Groups", "Migration", "Migration (Locale)", and "Security". The "Migration (Locale)" tab is currently selected. Under this tab, there are two input fields: "Terminal Region" and "Terminal Branch". At the bottom of the window, a status bar shows a message: "2 - Successful view of LDI_ATM_01." and another message: "280 - Desktop bounds(0,0,914,673)".

EPS Development - ESNCService

File Edit Configure System Operations Customer Management View Window Help

ATM Channel Configuration - LDI_ATM_01

Channel ID: LDI_ATM_01

ATM Links

- Status
- Channel Administration
- Totals
- Status Query
- Channel Management

General Location Location (Locale) Transaction Profiles

Receipt Profiles Other Profiles Load Groups Migration Migration (Locale) Security

Terminal Region

Terminal Branch

2 - Successful view of LDI_ATM_01.

280 - Desktop bounds(0,0,914,673)

ATM Channel Configuration

The screenshot shows a software window titled "EPS Development - ESNService" with a menu bar (File, Edit, Configure, System Operations, Customer Management, View, Window, Help) and a toolbar. A sub-window titled "ATM Channel Configuration - LDI_ATM_01" is open, displaying the configuration for a specific ATM channel. The "Channel ID" is set to "LDI_ATM_01". A group box labeled "ATM Links" contains links for "Status", "Channel Administration", "Totals", "Status Query", and "Channel Management". Below this is a tabbed interface with tabs for "General", "Location", "Location (Locale)", "Transaction Profiles", "Receipt Profiles", "Other Profiles", "Load Groups", "Migration", "Migration (Locale)", and "Security". The "Security" tab is selected, showing fields for "EMV Capability Indicator" (unchecked), "MAC Profile" (dropdown), "DKM Profile" (dropdown), and an "AKDS" group box. The "AKDS" group box contains "Verify EPP Serial Number" (unchecked), "AKDS Capability Indicator" (dropdown set to "No AKDS capability"), "Public Key Host Name" (text field), and "EPP Manufacturer" (dropdown set to "Unknown"). A status bar at the bottom indicates "2 - Successful view of LDI_ATM_01." and "280 - Desktop bounds(0,0,914,673)".

Channel ID: LDI_ATM_01

ATM Links

- Status
- Channel Administration
- Totals
- Status Query
- Channel Management

General | Location | Location (Locale) | Transaction Profiles | Receipt Profiles | Other Profiles | Load Groups | Migration | Migration (Locale) | Security

EMV Capability Indicator: ☐

MAC Profile:

DKM Profile:

AKDS

Verify EPP Serial Number: ☐

AKDS Capability Indicator: No AKDS capability


Public Key Host Name:

EPP Manufacturer: Unknown

2 - Successful view of LDI_ATM_01.

280 - Desktop bounds(0,0,914,673)

ATM Channel Profile

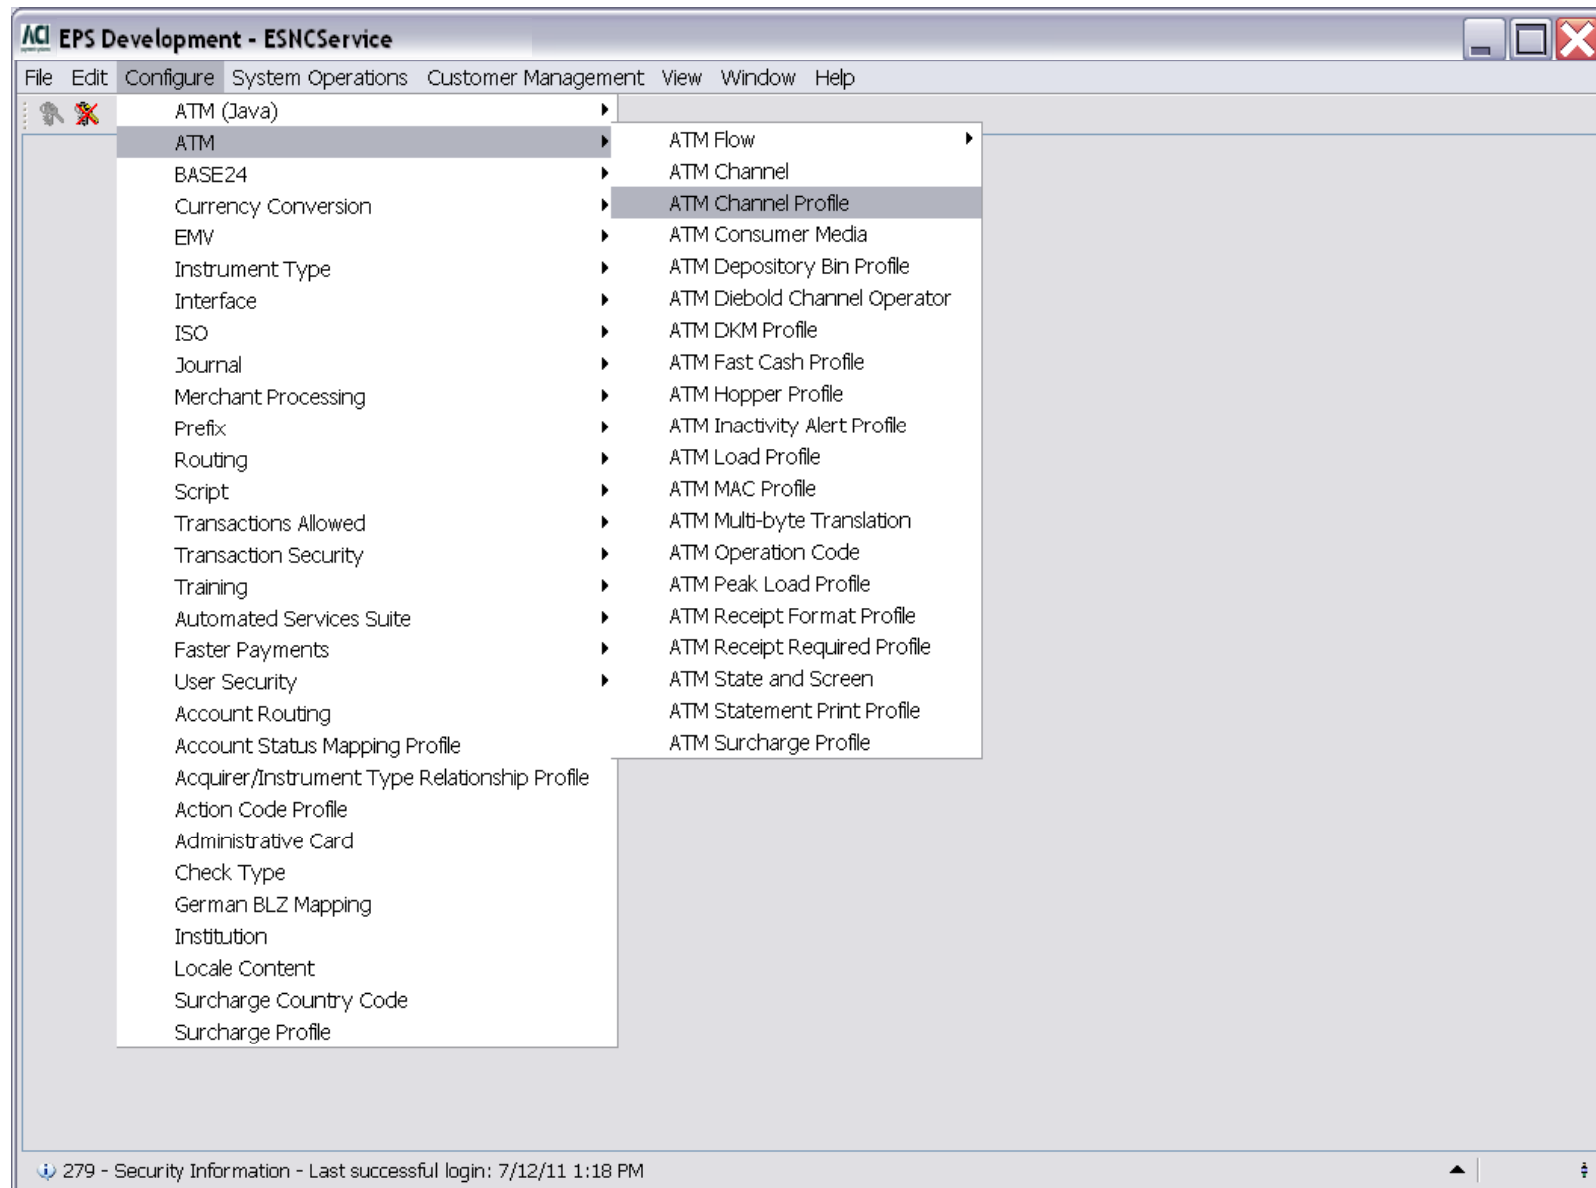

ATM Channel Profile

The screenshot displays the 'EPS Development - ESNService' application window. The main menu includes File, Edit, Configure, System Operations, Customer Management, View, Window, and Help. The toolbar contains icons for file operations and help. The 'ATM Channel Profile Configuration - CNFG_PRFL02' window is open, showing a dropdown menu for 'ATM Channel Profile' set to 'CNFG_PRFL02'. Below this, a series of tabs are visible: Processing (selected), Open Account Relationship, ATM Options, Security, Printing, Noncurrency Dispense, and Migration. The 'Processing' tab contains several configuration fields: 'Balance Type Presented' (Both), 'Balance Display or Print' (Both), 'Currency Code' (VEF (937)), 'Dispense Algorithm Failure Action' (Deny the current transaction and prompt for another transaction.), 'Management External Connection ID' (EXTRNMSGCONN), and 'Amount Includes Decimal' (checked). A 'Routing Numbers' section contains 'Institution Routing Number' (INSTRENUM) and 'Alternate Routing Number' (ATLRENUM). The status bar at the bottom shows '2 - Successful view of CNFG_PRFL02.' and '279 - Security Information - Last successful login: 7/12/11 1:18 PM'.

EPS Development - ESNService

File Edit Configure System Operations Customer Management View Window Help

ATM Channel Profile Configuration - CNFG_PRFL02

ATM Channel Profile CNFG_PRFL02

Processing Open Account Relationship ATM Options Security Printing Noncurrency Dispense Migration

Balance Type Presented Both

Balance Display or Print Both

Currency Code VEF (937)

Dispense Algorithm Failure Action Deny the current transaction and prompt for another transaction.

Management External Connection ID EXTRNMSGCONN

Amount Includes Decimal ☒

Routing Numbers

Institution Routing Number INSTRENUM

Alternate Routing Number ATLRENUM

2 - Successful view of CNFG_PRFL02.

279 - Security Information - Last successful login: 7/12/11 1:18 PM

ATM Channel Profile

The screenshot displays the 'EPS Development - ESNCService' application window. The main menu includes File, Edit, Configure, System Operations, Customer Management, View, Window, and Help. The toolbar contains icons for file operations and help. The 'ATM Channel Profile Configuration - CNFG_PRFL02' window is open, showing a dropdown menu for 'ATM Channel Profile' set to 'CNFG_PRFL02'. Below this, a series of tabs are visible: Processing, Open Account Relationship (selected), ATM Options, Security, Printing, Noncurrency Dispense, and Migration. The 'Open Account Relationship' tab contains three fields: 'OAR Type' set to 'Standard', 'Maximum OAR Accounts' set to '10', and 'Acquirer OAR Capability' set to 'Send from and to accounts together'. The status bar at the bottom shows '2 - Successful view of CNFG_PRFL02.' and '279 - Security Information - Last successful login: 7/12/11 1:18 PM'.

EPS Development - ESNCService

File Edit Configure System Operations Customer Management View Window Help

ATM Channel Profile Configuration - CNFG_PRFL02

ATM Channel Profile CNFG_PRFL02

Processing Open Account Relationship ATM Options Security Printing Noncurrency Dispense Migration

OAR Type Standard

Maximum OAR Accounts 10

Acquirer OAR Capability Send from and to accounts together

2 - Successful view of CNFG_PRFL02.

279 - Security Information - Last successful login: 7/12/11 1:18 PM

ATM Channel Profile

The screenshot displays the 'EPS Development - ESNService' application window. The main menu includes File, Edit, Configure, System Operations, Customer Management, View, Window, and Help. The toolbar contains icons for file operations and help. The 'ATM Channel Profile Configuration - CNFG_PRFL02' window is open, showing a tabbed interface with 'Processing', 'Open Account Relationship', 'ATM Options' (selected), 'Security', 'Printing', 'Noncurrency Dispense', and 'Migration'. The 'ATM Options' tab contains the following fields:

- ATM Channel Profile: CNFG_PRFL02 (dropdown)
- Terminal Location Indicator: On Premises (dropdown)
- Terminal Protocol: TCP/IP (dropdown)
- Message Failure Action: Reverse immediately (dropdown)
- Terminal Subprotocol: Permanent (dropdown)
- Contact Phone Number: 402 390-7602 (text)
- Large Message Max Size: 600 (text)
- Dial-Up Call Management: Middleware auto disconnect (dropdown)


Below these fields is a section titled 'Deposit Bin' with a blue link. It contains:

- Depository Type: Both (dropdown)
- Default Depository Bin: (empty dropdown)

The status bar at the bottom shows two messages:

- 2 - Successful view of CNFG_PRFL02.
- 279 - Security Information - Last successful login: 7/12/11 1:18 PM

ATM Channel Profile

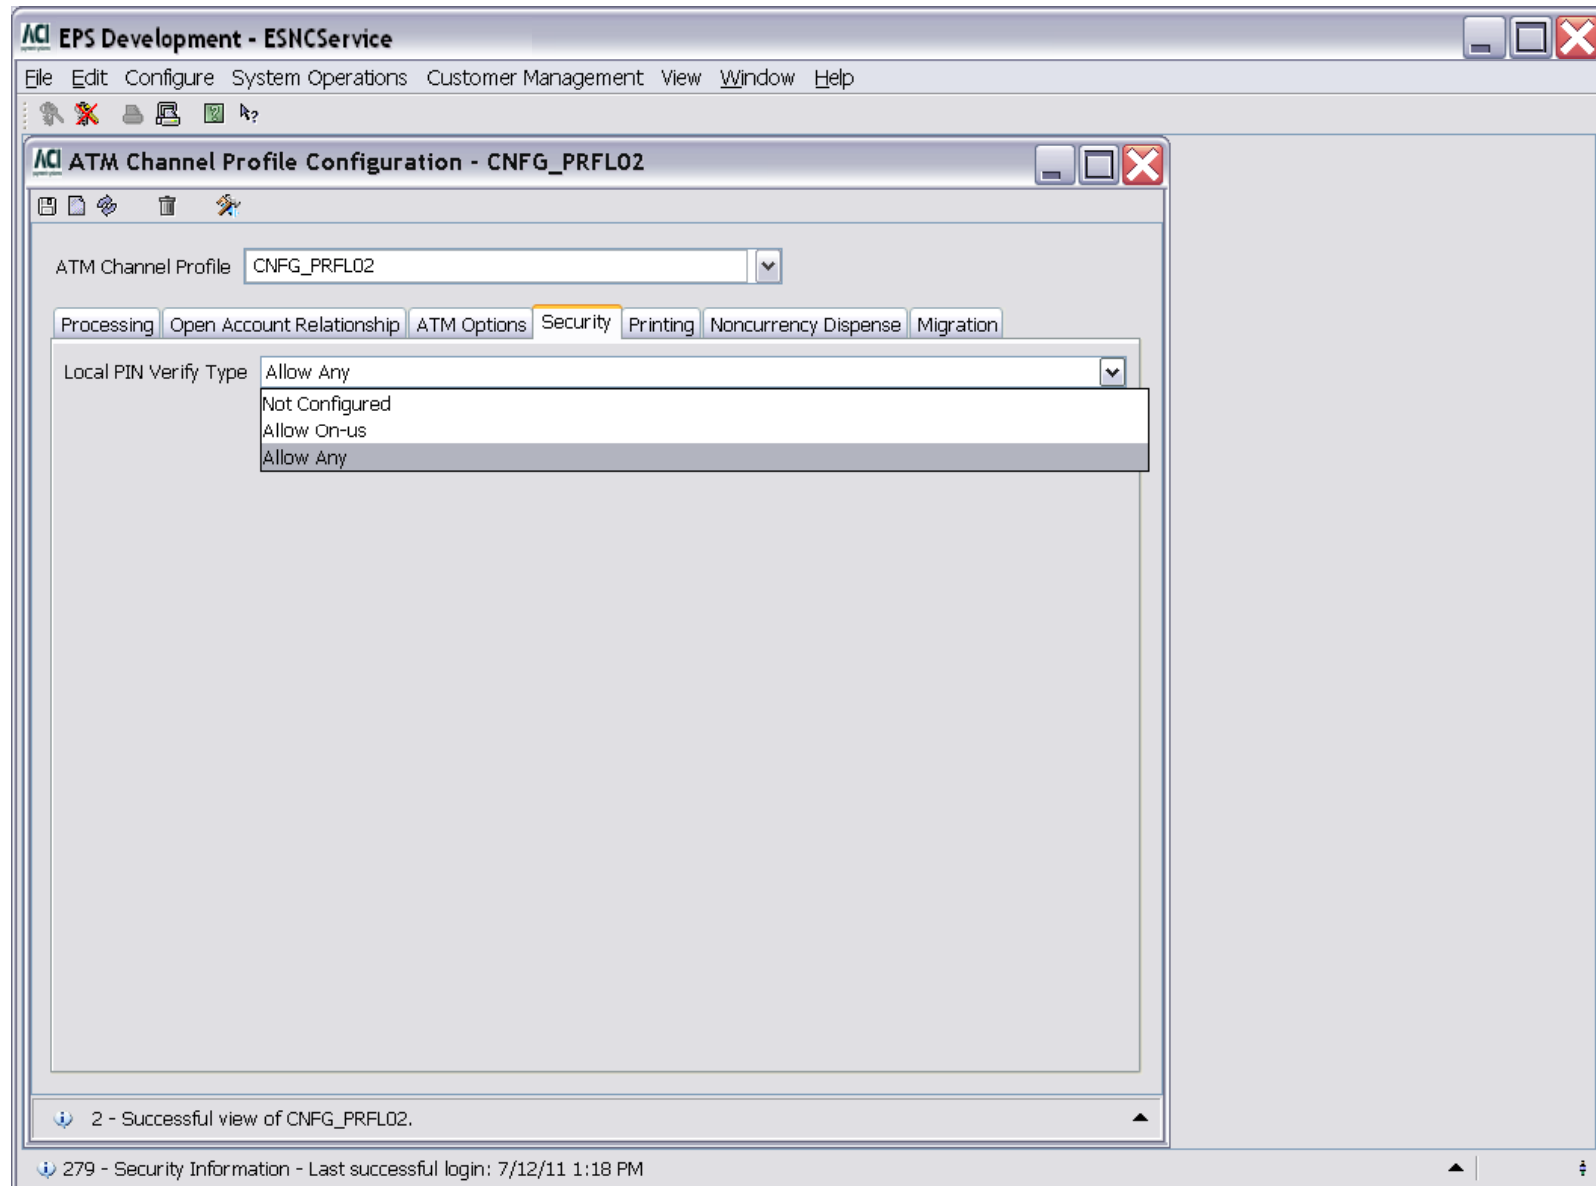

ATM Channel Profile

EPS Development - ESNService

File Edit Configure System Operations Customer Management View Window Help

ATM Channel Profile Configuration - CNFG_PRFL02

ATM Channel Profile CNFG_PRFL02

Processing Open Account Relationship ATM Options Security Printing Noncurrency Dispense Migration

Transactions Per Receipt One

Maximum Lines Per Receipt 40

Optional Receipt Indicator Not Configured

Not Configured
Inoperable
Approved
All

2 - Successful view of CNFG_PRFL02.

279 - Security Information - Last successful login: 7/12/11 1:18 PM

ATM Channel Profile

The screenshot shows a software application window titled "EPS Development - ESNCSERVICE". Inside, there is a sub-window titled "ATM Channel Profile Configuration - CNFG_PRFL02". The sub-window has a menu bar with "File", "Edit", "Configure", "System Operations", "Customer Management", "View", "Window", and "Help". Below the menu bar is a toolbar with icons for file operations. The main area of the sub-window contains a tabbed interface with tabs for "Processing", "Open Account Relationship", "ATM Options", "Security", "Printing", "Noncurrency Dispense" (which is selected), and "Migration".

At the top of the sub-window, there is a label "ATM Channel Profile" followed by a dropdown menu showing "CNFG_PRFL02".

Under the "Noncurrency Dispense" tab, there are several fields and a dropdown menu:

- "Noncurrency Dispense Routing Number" with a text input field containing "NCDRTENUM".
- "Close on Noncurrency Misdispense Indicator" with a dropdown menu showing "Not Configured".
- "Nonvalue for Checking Indicator" with a dropdown menu showing "Allowed".
- "Nonvalue for Savings Indicator" with a dropdown menu showing "Allowed".
- "Nonvalue for Credit Indicator" with a dropdown menu showing "Allowed".


Below these fields, there is a list box containing the following items:

- Not Configured
- Allowed


At the bottom of the sub-window, there is a status bar with the text "2 - Successful view of CNFG_PRFL02." and a small upward-pointing arrow.

At the bottom of the main application window, there is a status bar with the text "279 - Security Information - Last successful login: 7/12/11 1:18 PM" and a small upward-pointing arrow.


ATM Channel Profile

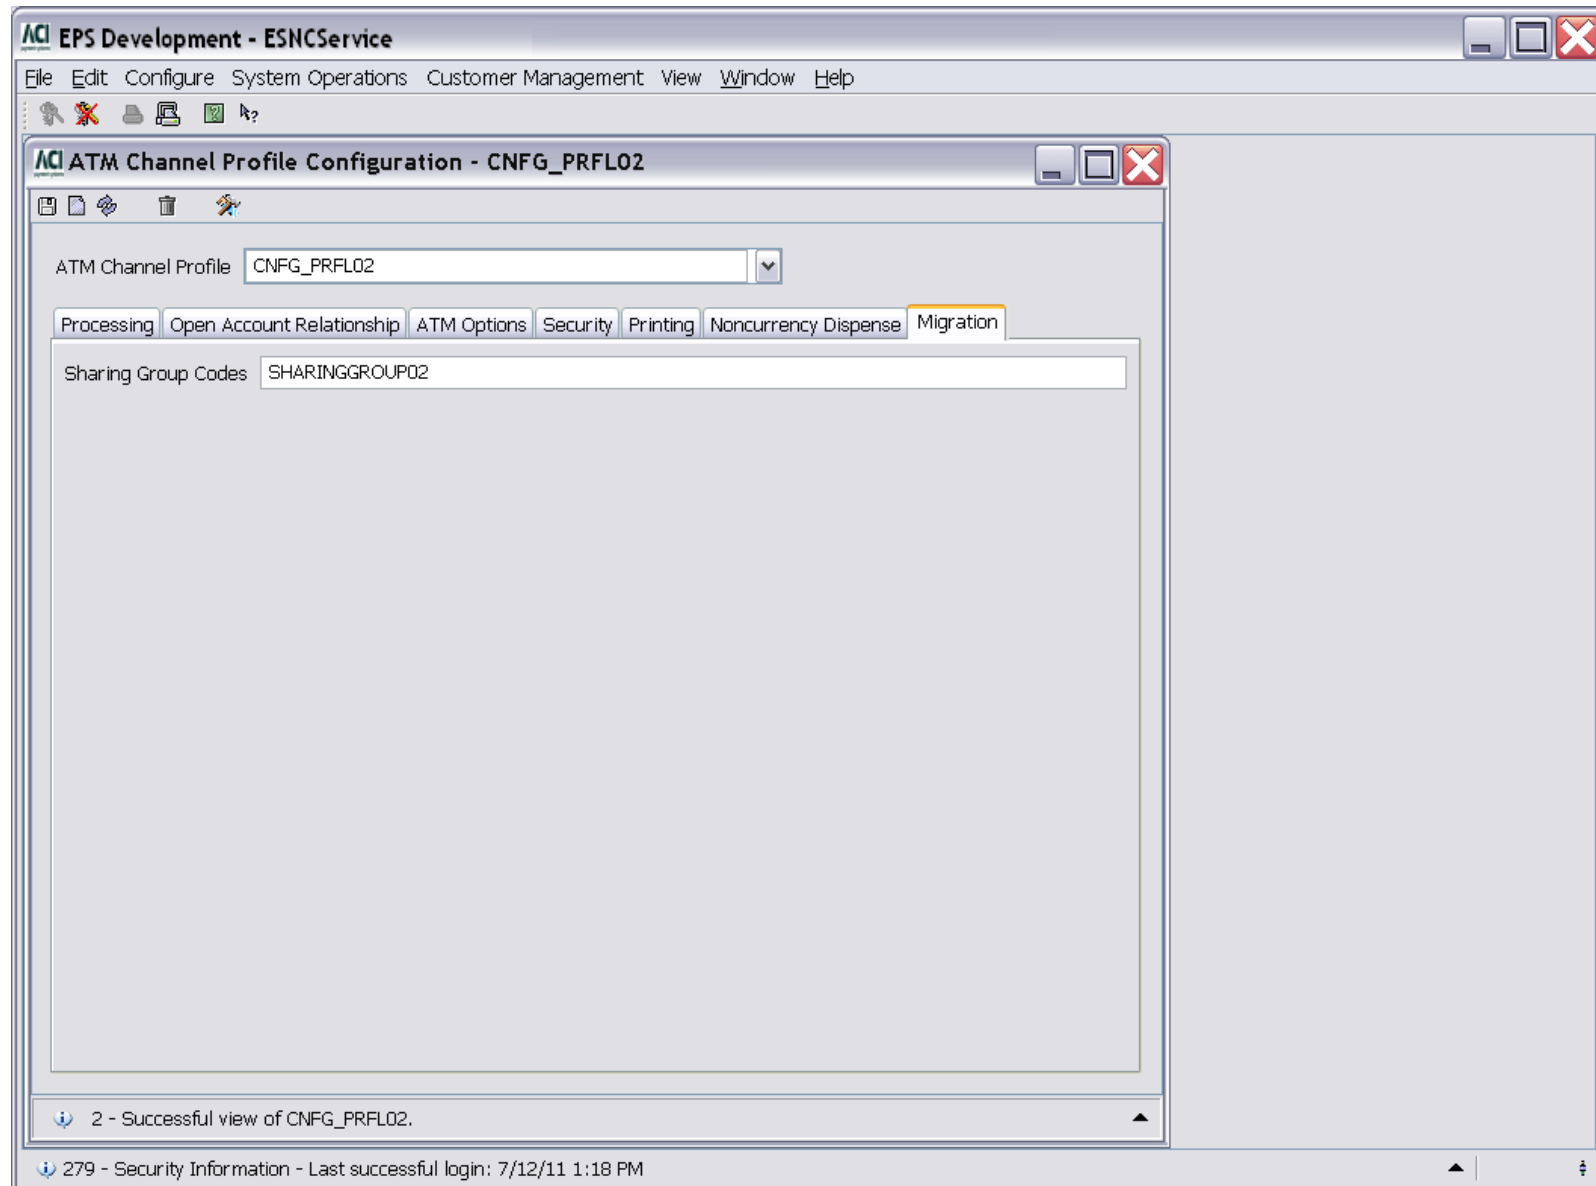


ATM Flow

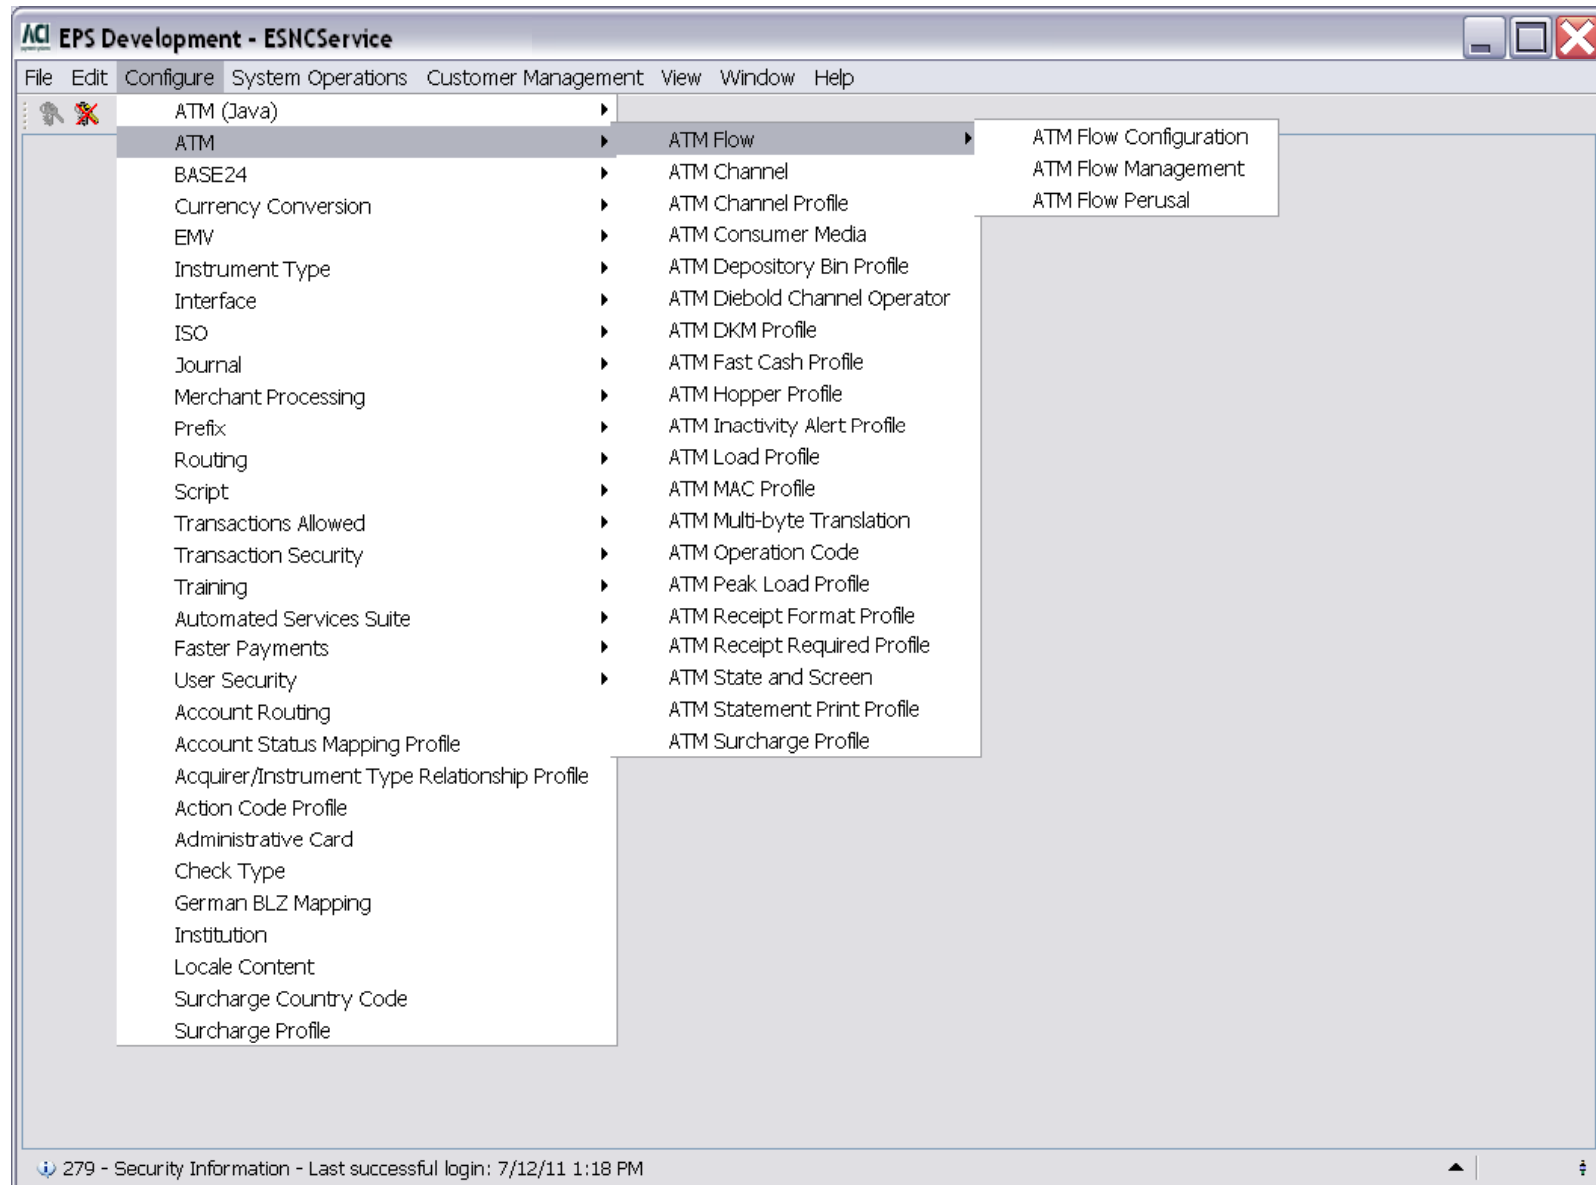


ATM Flow Management

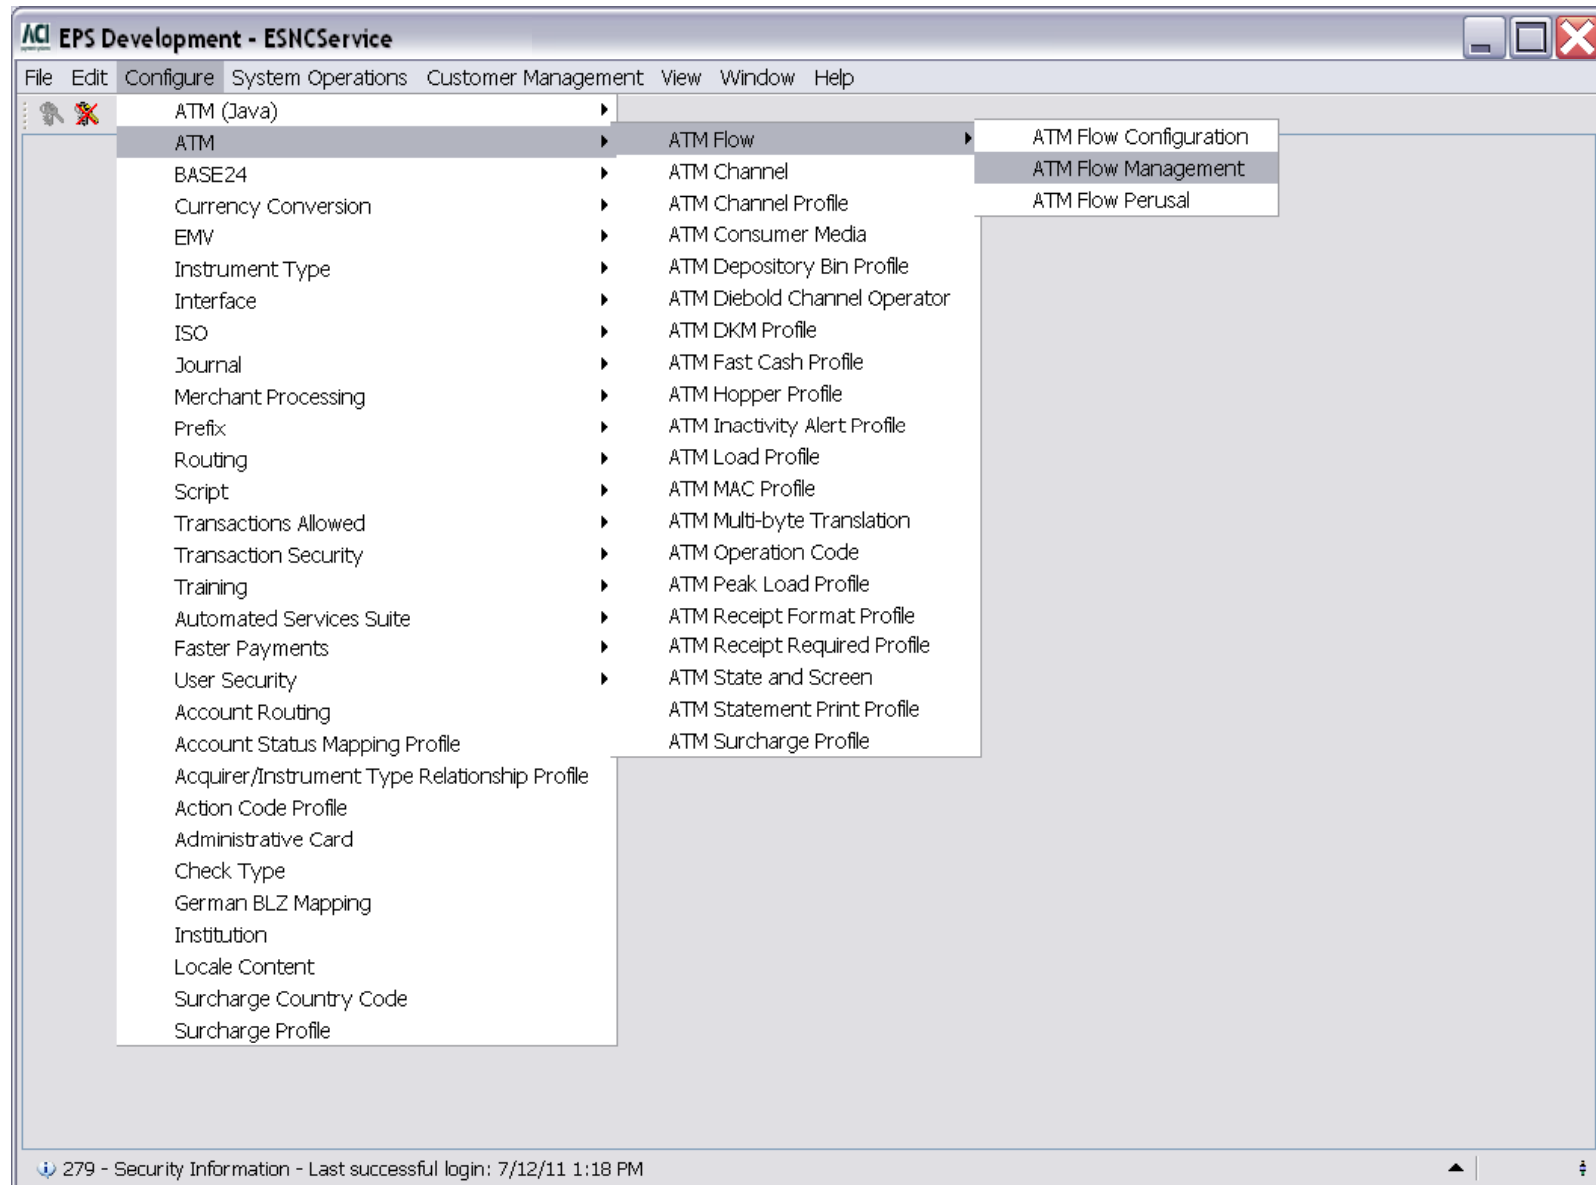

ATM Flow Management

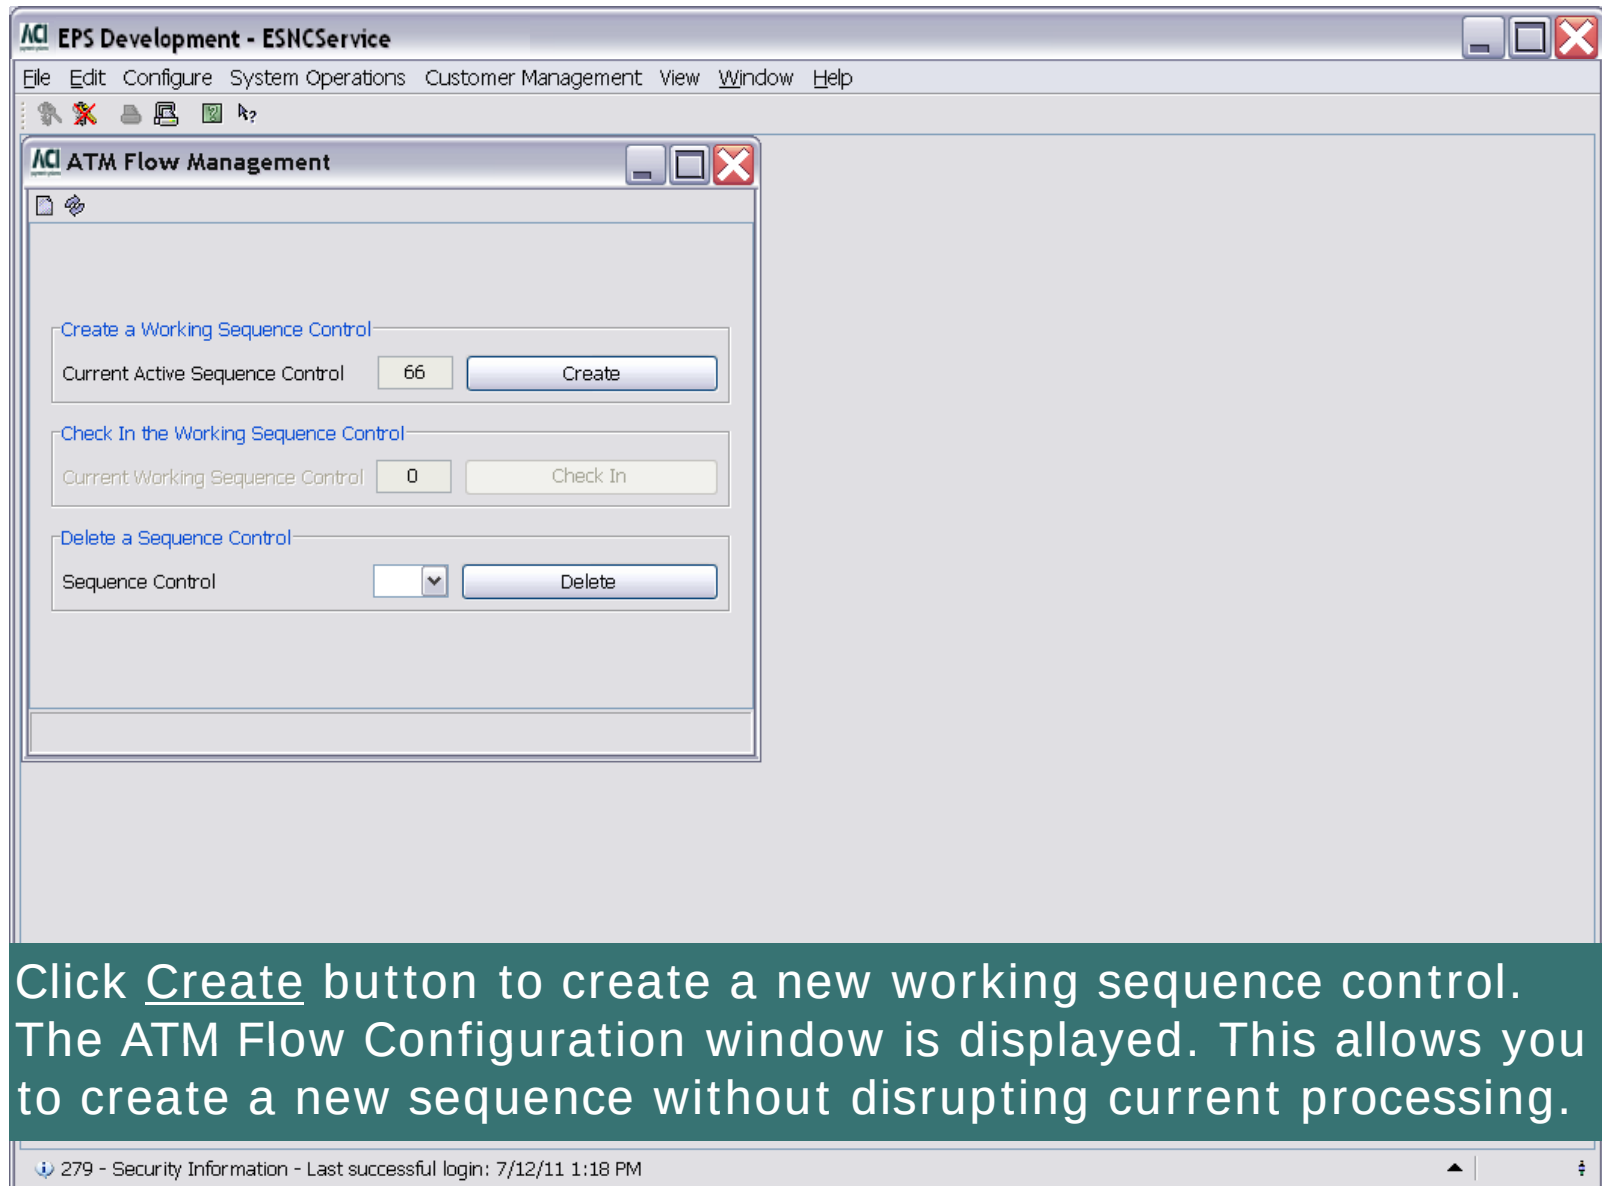

ATM Flow Configuration

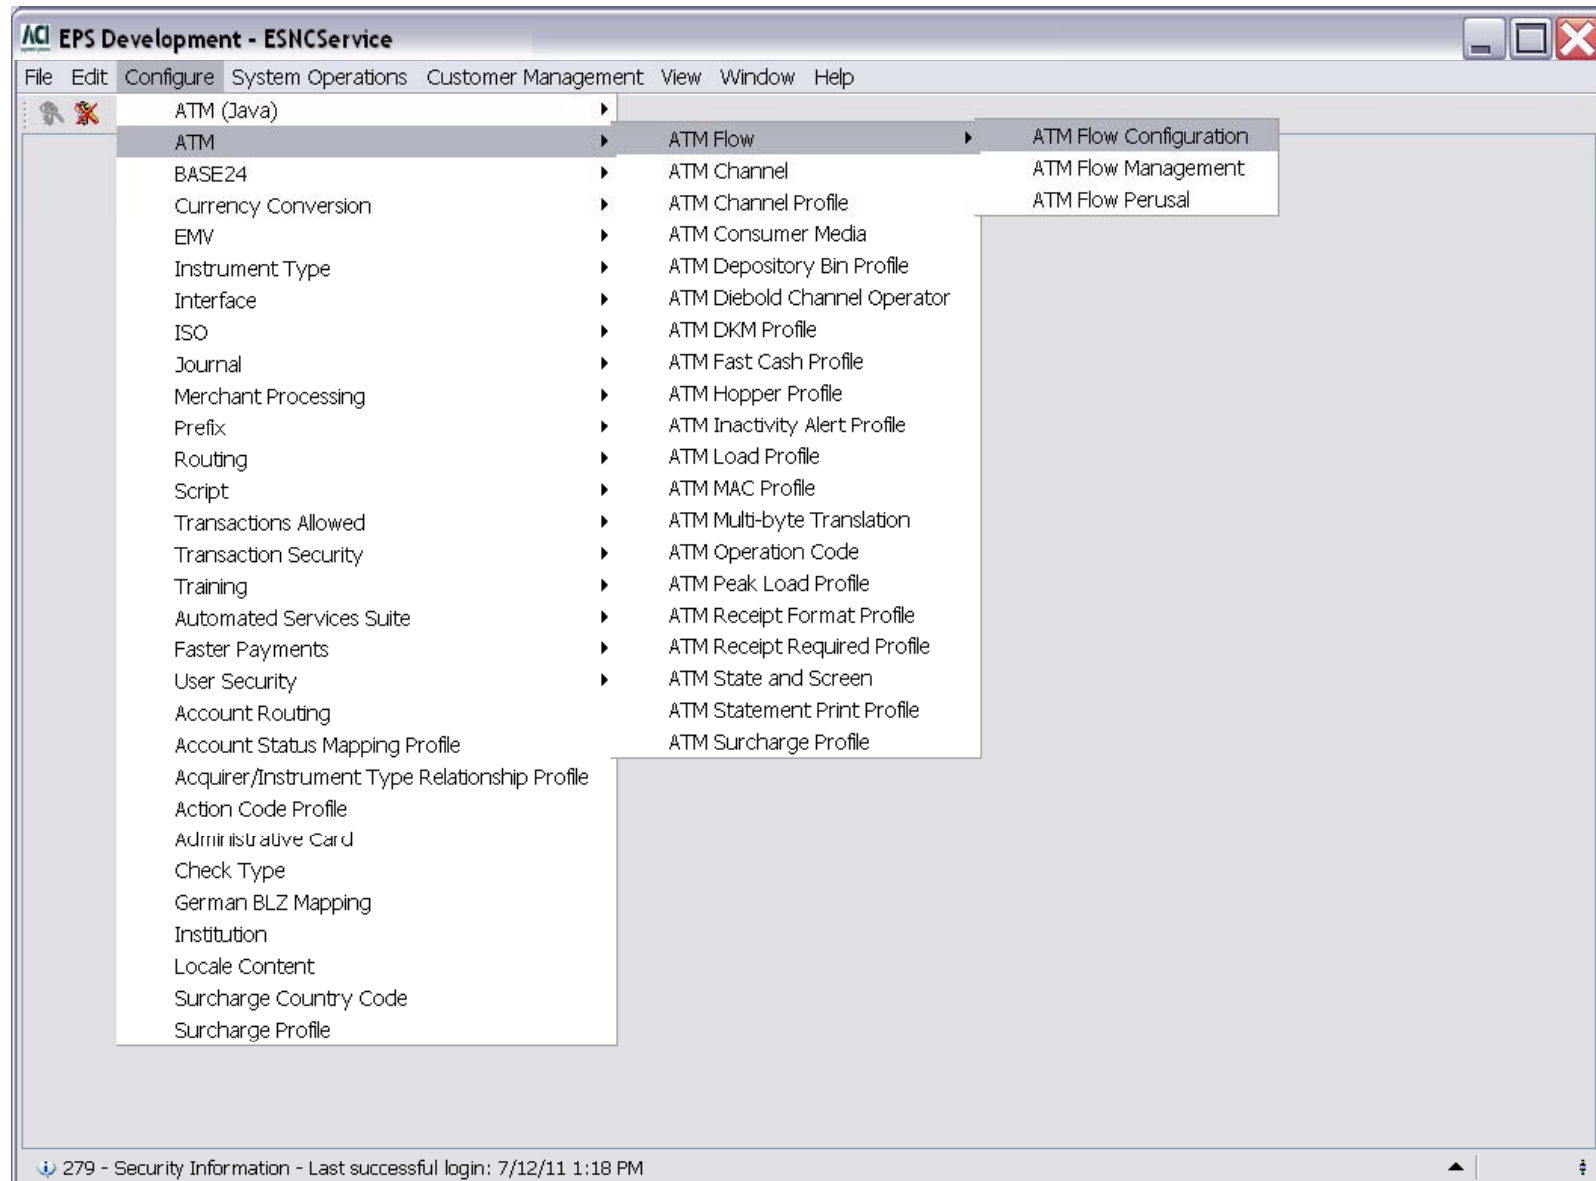

ATM Flow Configuration

The screenshot shows a software interface for configuring ATM flows. The main window is titled "EPS Development - ESNCSERVICE" and contains a menu bar with "File", "Edit", "Configure", "System Operations", "Customer Management", "View", "Window", and "Help". Below the menu bar is a toolbar with various icons. A sub-window titled "ATM Flow Configuration - DBLD01" is open, displaying the following fields:


- Sequence Control:** A text box containing the value "67".
- Service Name:** A dropdown menu with "DBLD01" selected.
- Condition Status:** A dropdown menu with an empty selection.

Below these fields is a table with two columns: "Flow Order" and "Service Names". The table contains nine rows of data:


Flow Order	Service Names
1	AtmRqstDsFetch_1
2	MacValid_1
3	LastTxnStatValid_1
4	CommonRqstProcess_1
5	NatvWdlRqst_1
6	SurchargeRequest_1
7	DispenseAlgo_1
8	MsgRteDsImpact_1
9	MsgToRte_1

Processing flow is a collection of services. Each service provides a defined piece of transaction processing logic. The flow begins with a seed taken from the Device Handler's parse routine. Used for requests, statuses, responses, function management, PCTL UI commands and failed messages.

ATM Flow Perusal

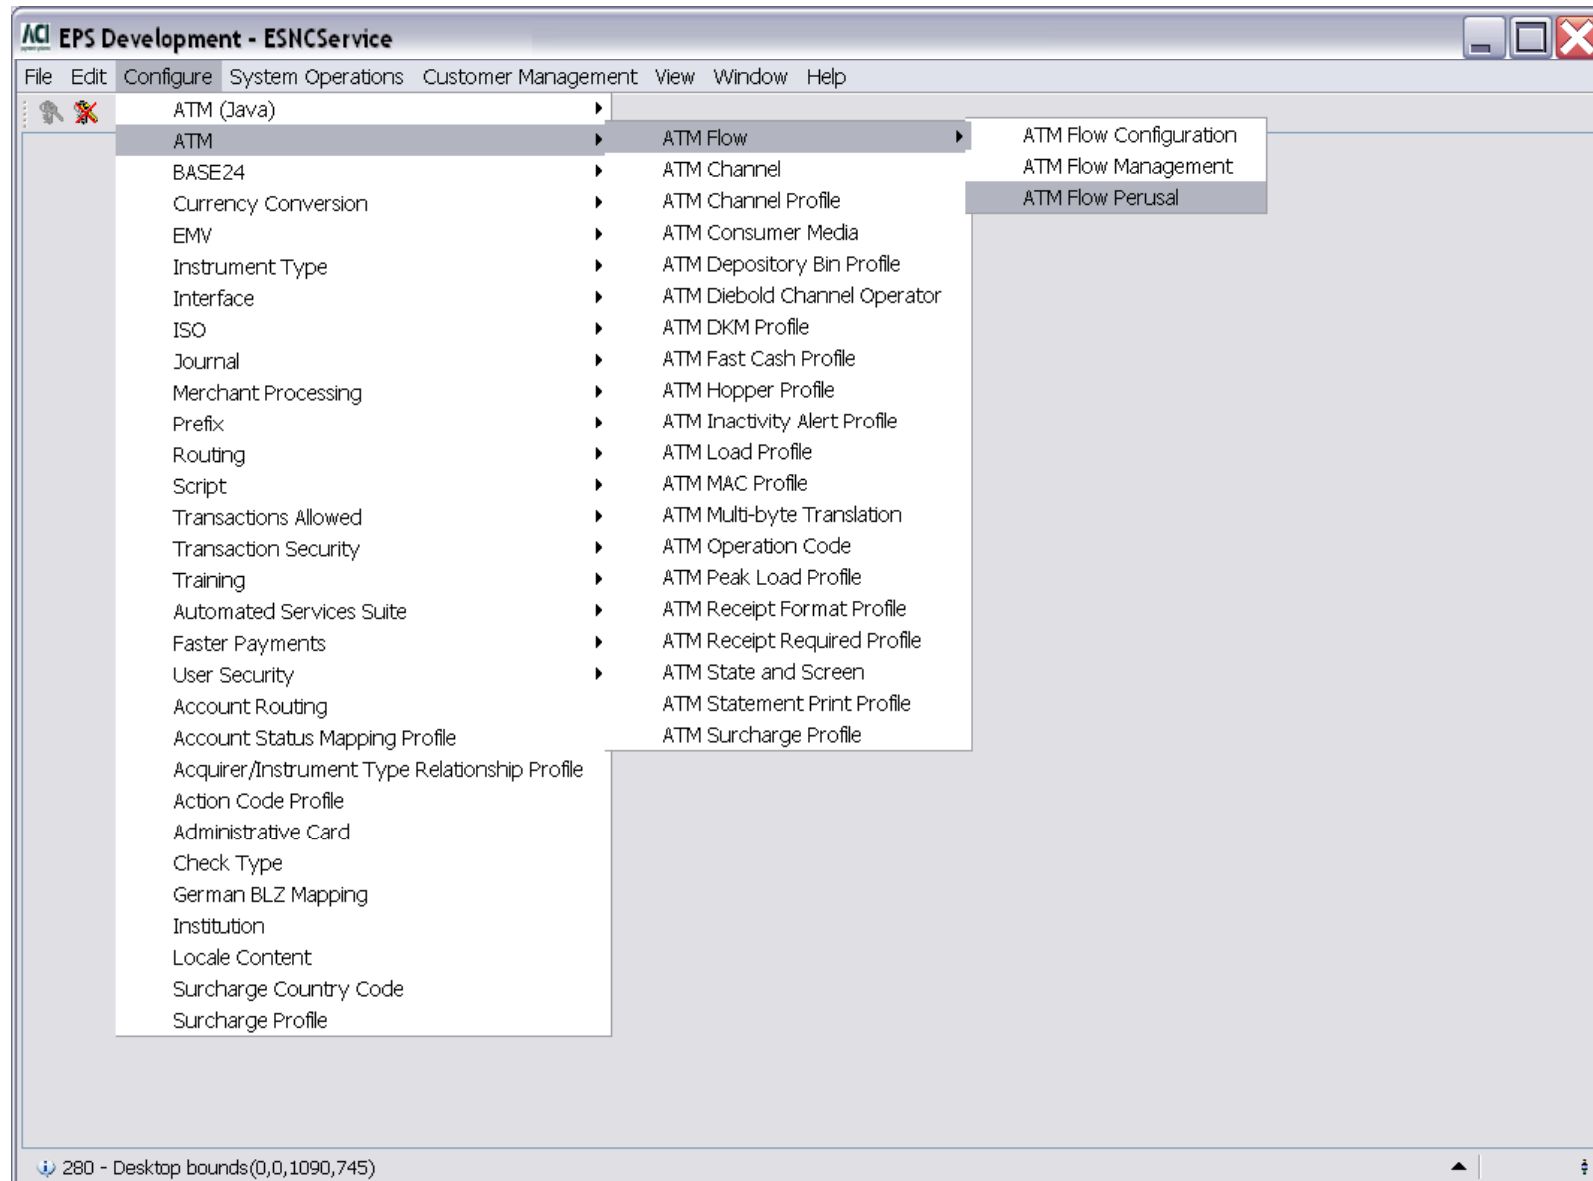


ATM Flow Perusal - Summary

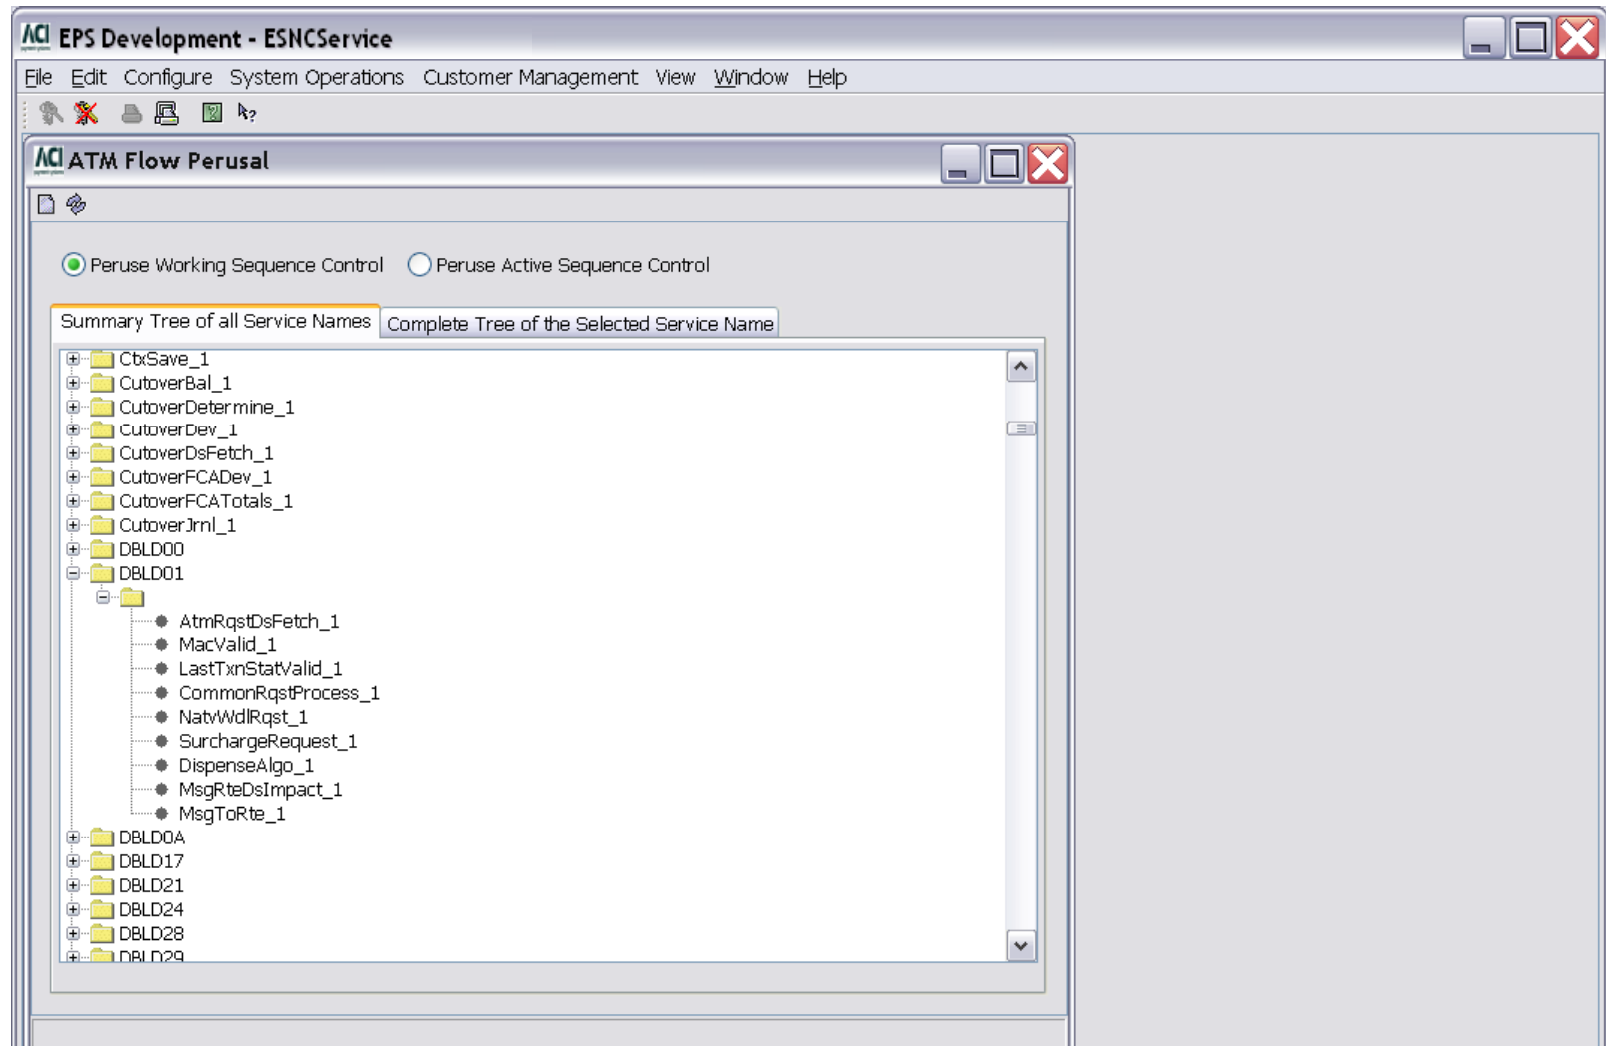


The ATM Flow Perusal window displays a “tree view” of the flow hierarchy of the working or active sequence.


ATM Flow Perusal - Detail

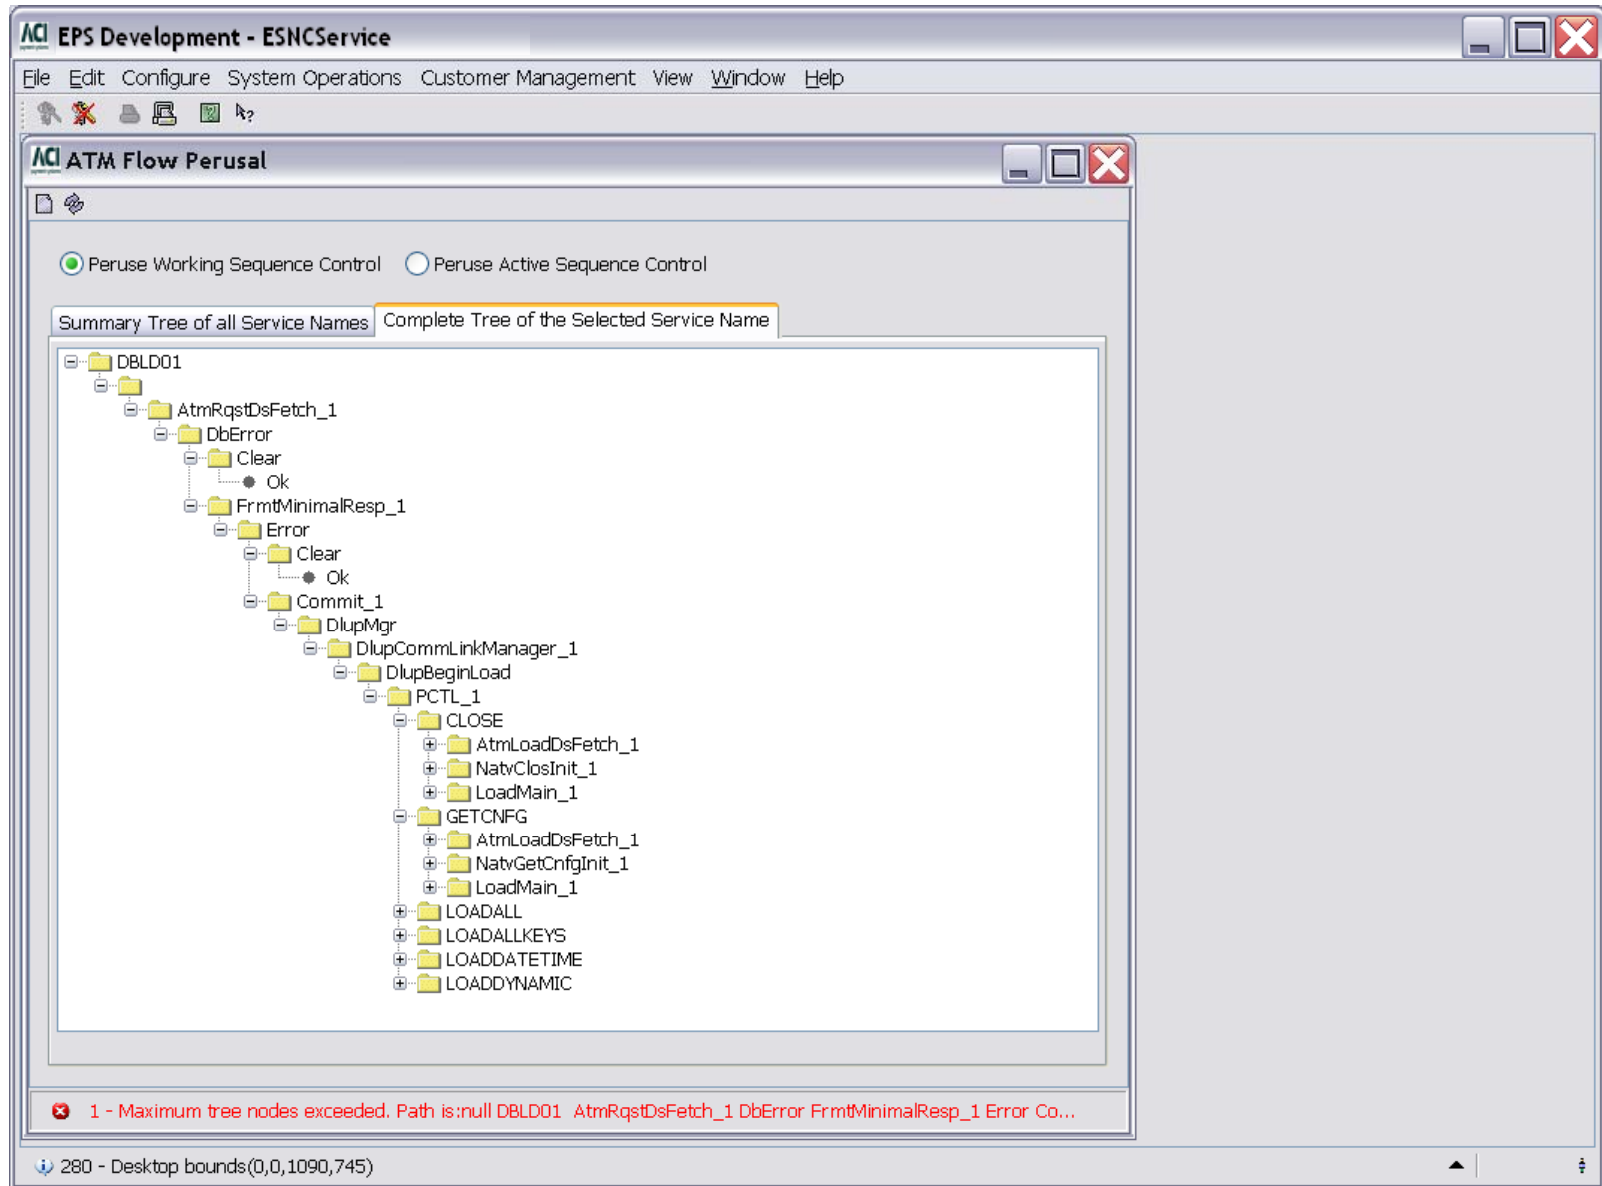

ATM Consumer Media Configuration

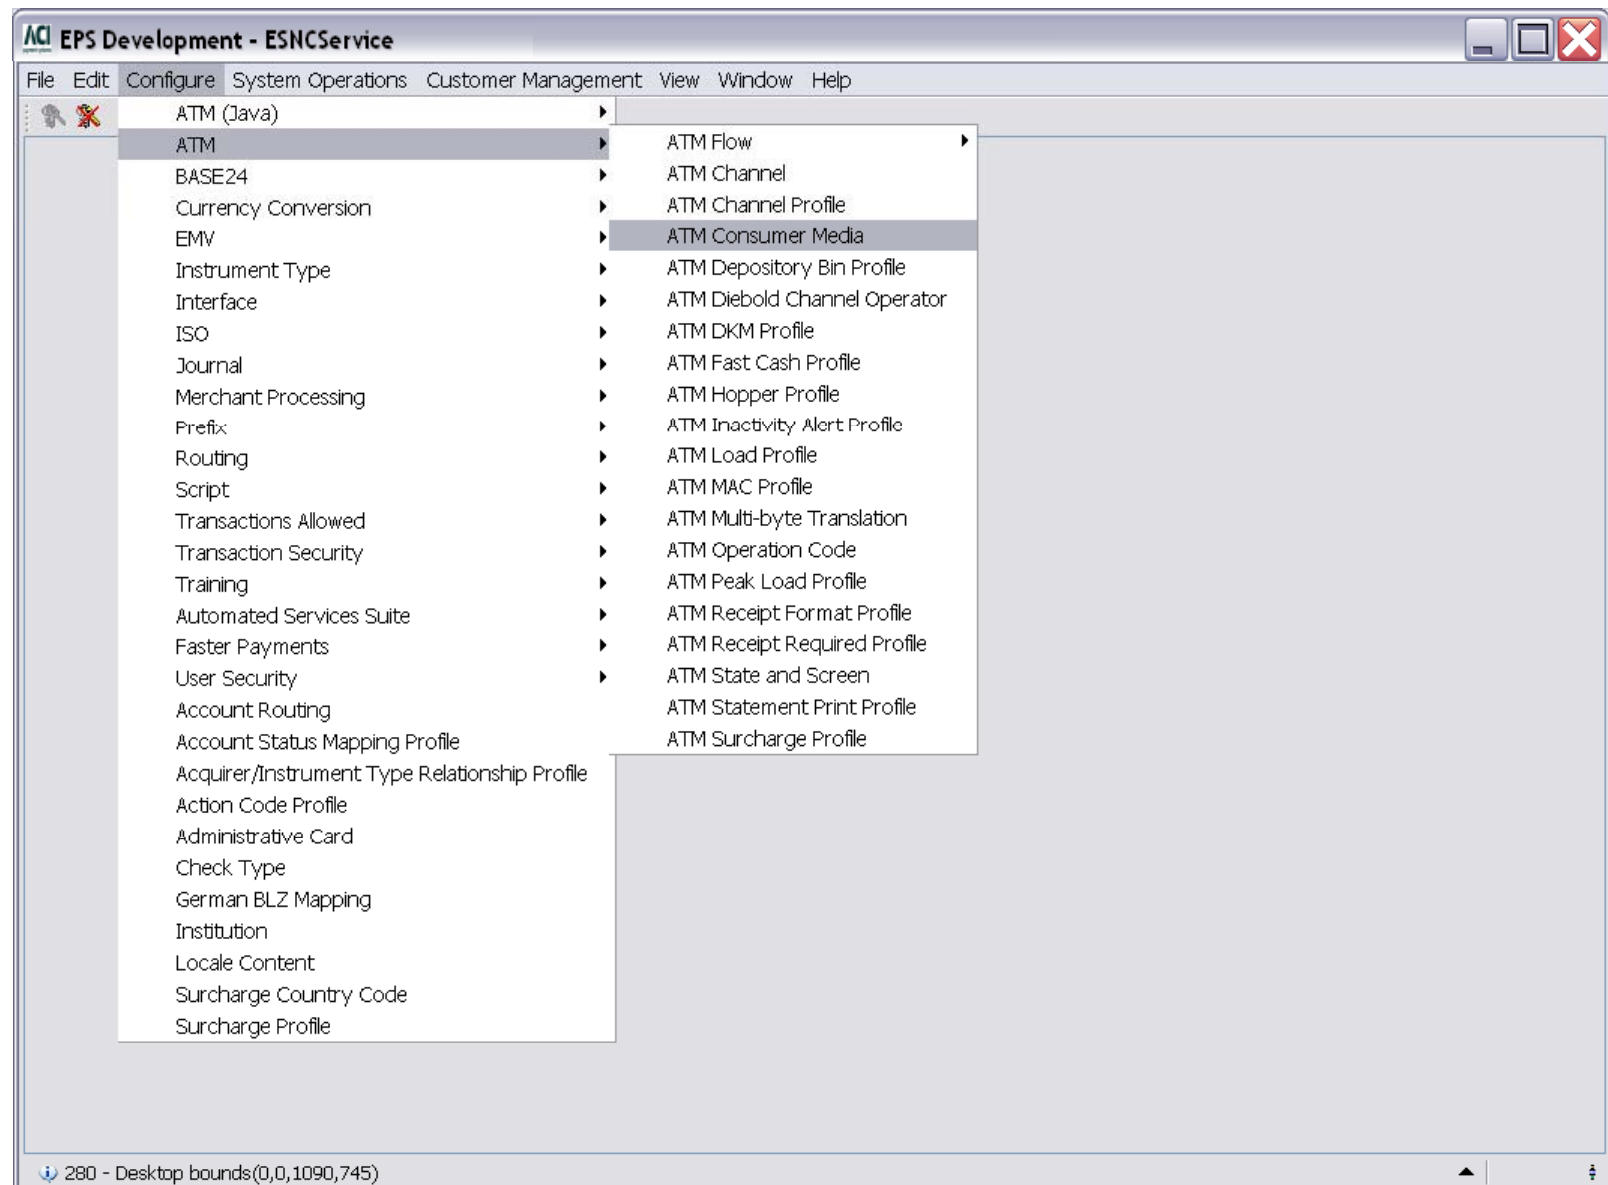

ATM Consumer Media Configuration

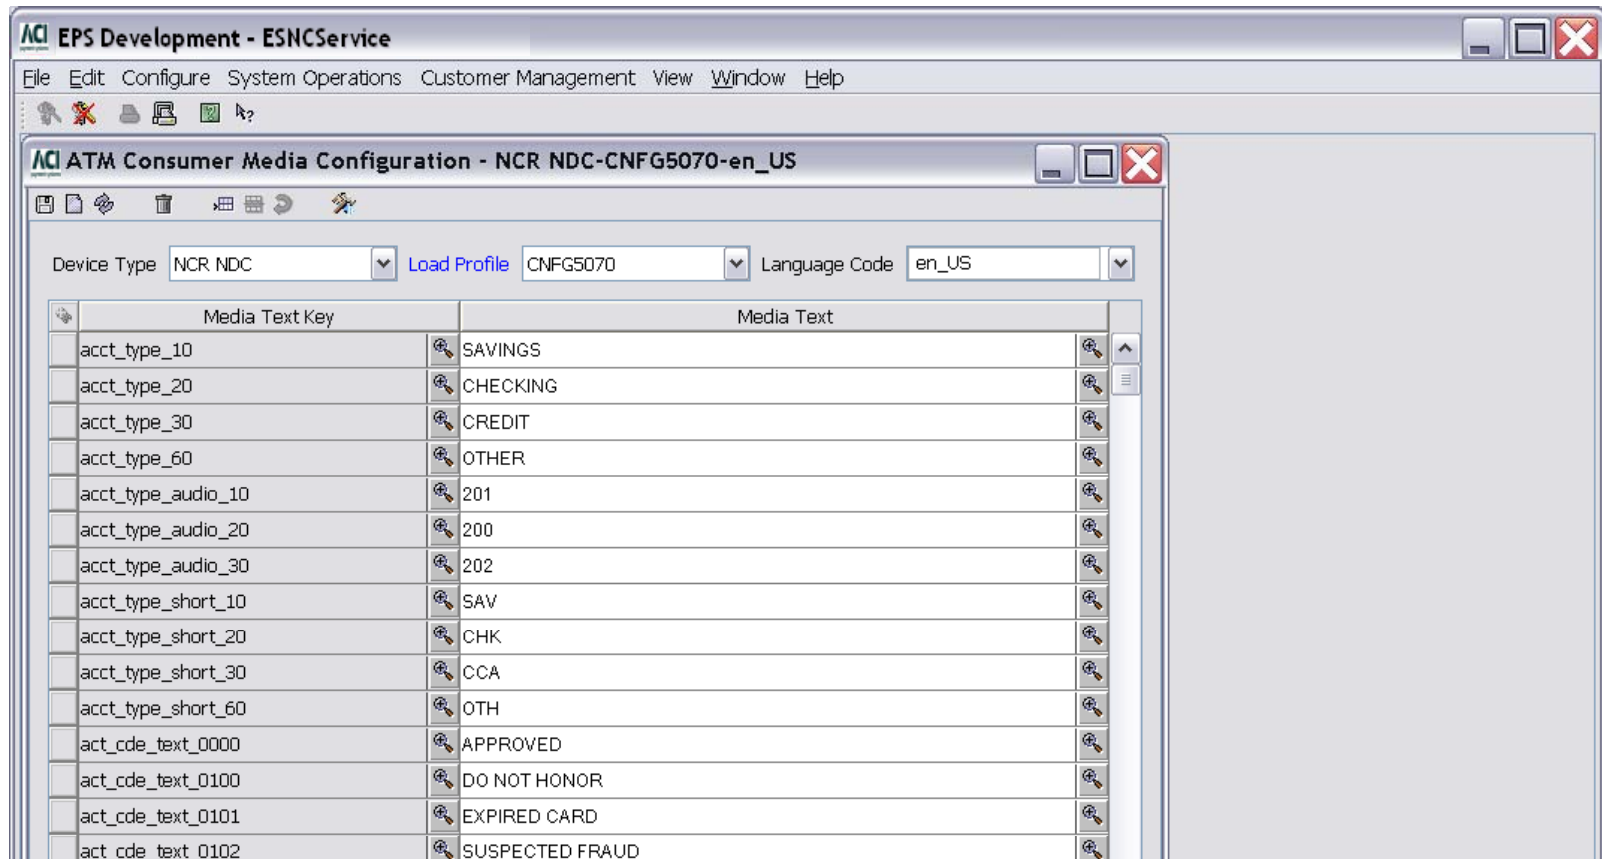

Defines text for display on receipts and statements

Transaction type and action code response text for administrative and cardholder transactions

Account types


Balance types (both available and ledger balances on receipts)

Non-currency dispense items

Screen numbers for ATM screen error notification overlays

Define the format of the account selection menu presented to cardholders for multiple account select

ATM Depository Bin Profile

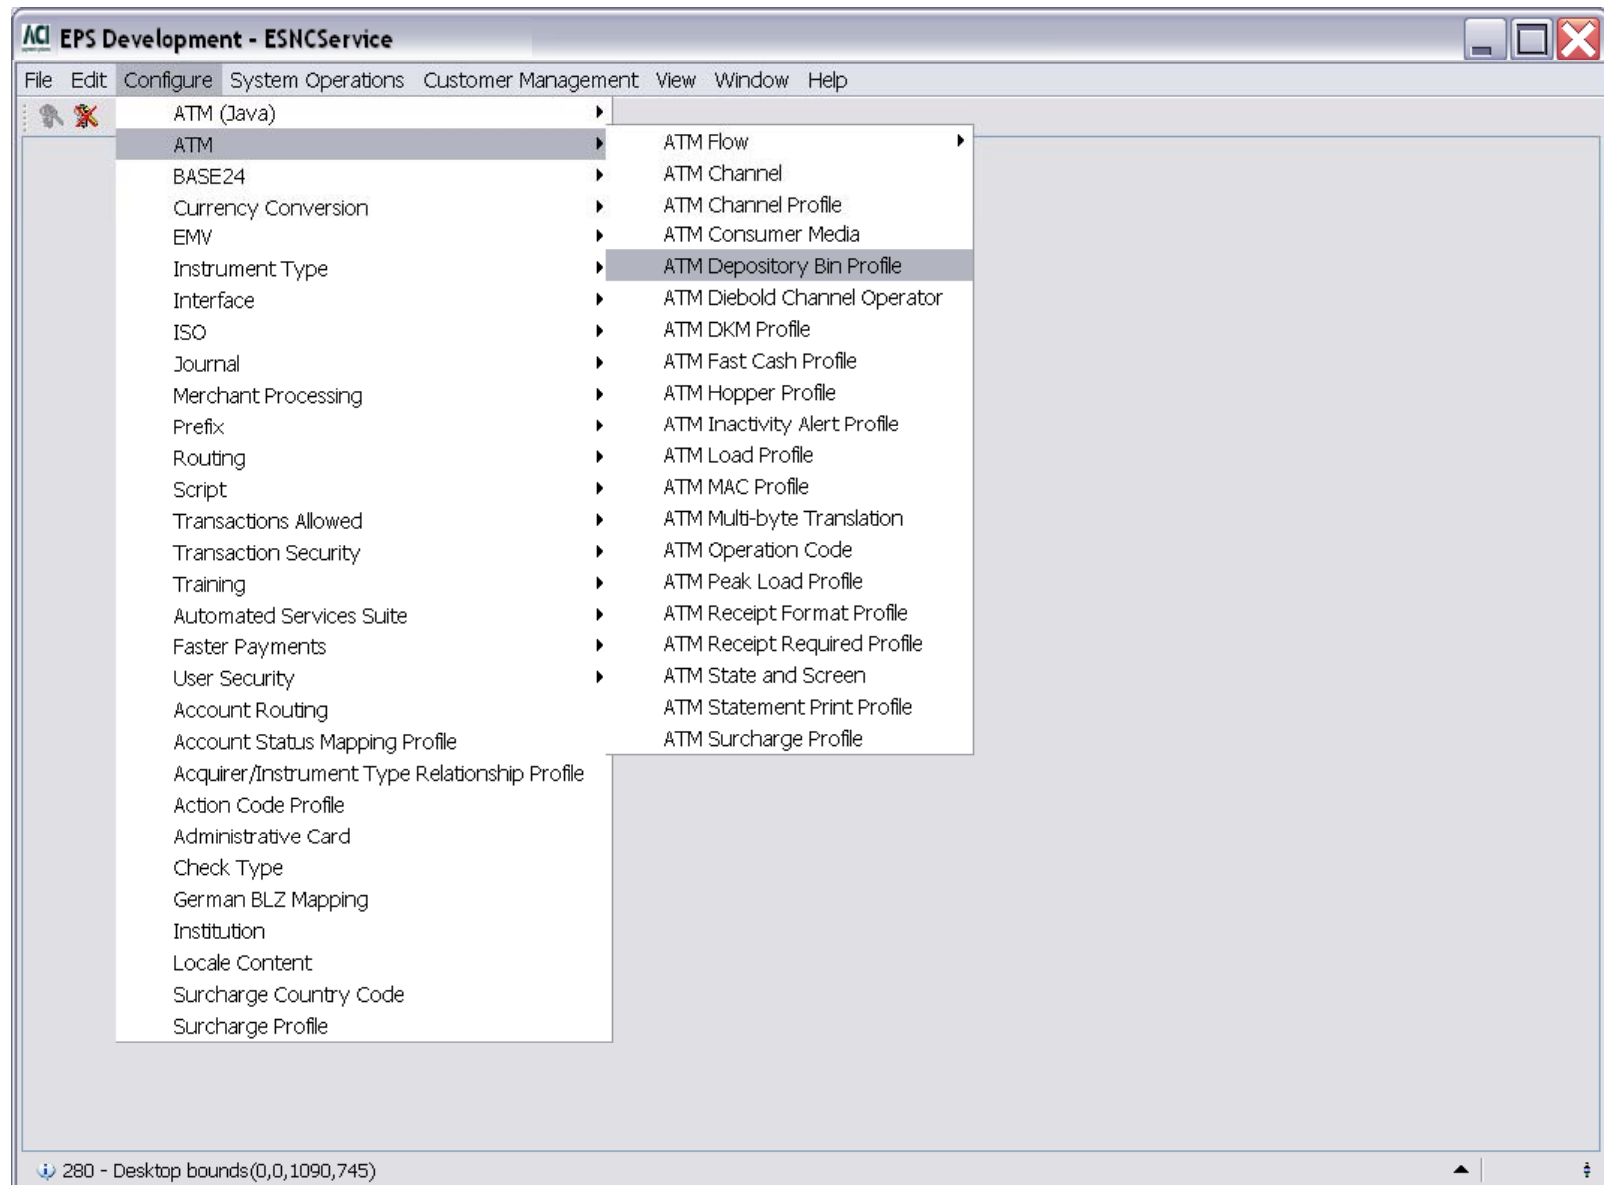

ATM Depository Bin Profile

ACI EPS Development - ESNCService

File Edit Configure System Operations Customer Management View Window Help


ACI ATM Depository Bin Profile Configuration - ATM01

Depository Bin Profile: ATM01


Routing and Transit Number	Deposit Amount Threshold	Threshold Bin	Under Threshold
00000000008	500.00 USD	Bin 1	Bin 0
11111111111	1,000.00 USD	Bin 2	Bin 0
	0.00 USD		

Used to support check processing functions within EPS such as NCR NDC+ Check Processing Module (CPM) and Diebold Intelligent Depository Module (IDM).

ATM Diebold Channel Operator

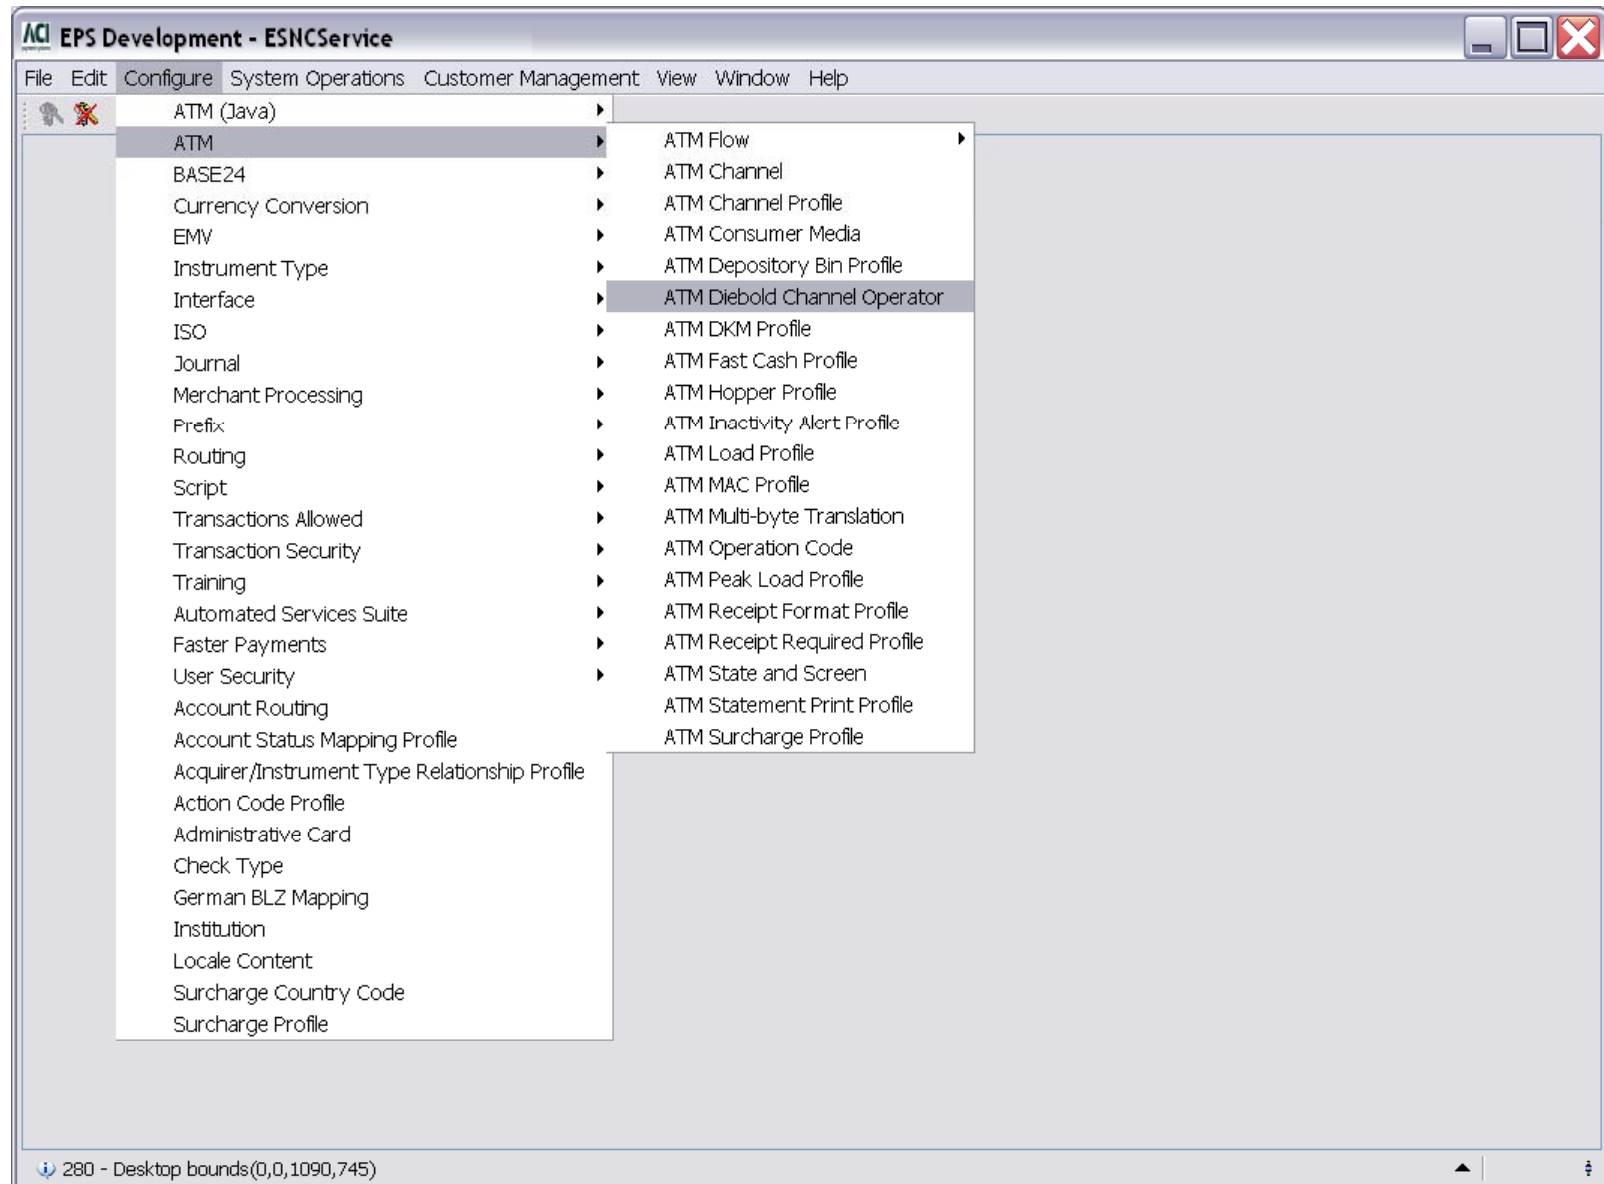


ATM Diebold Channel Operator

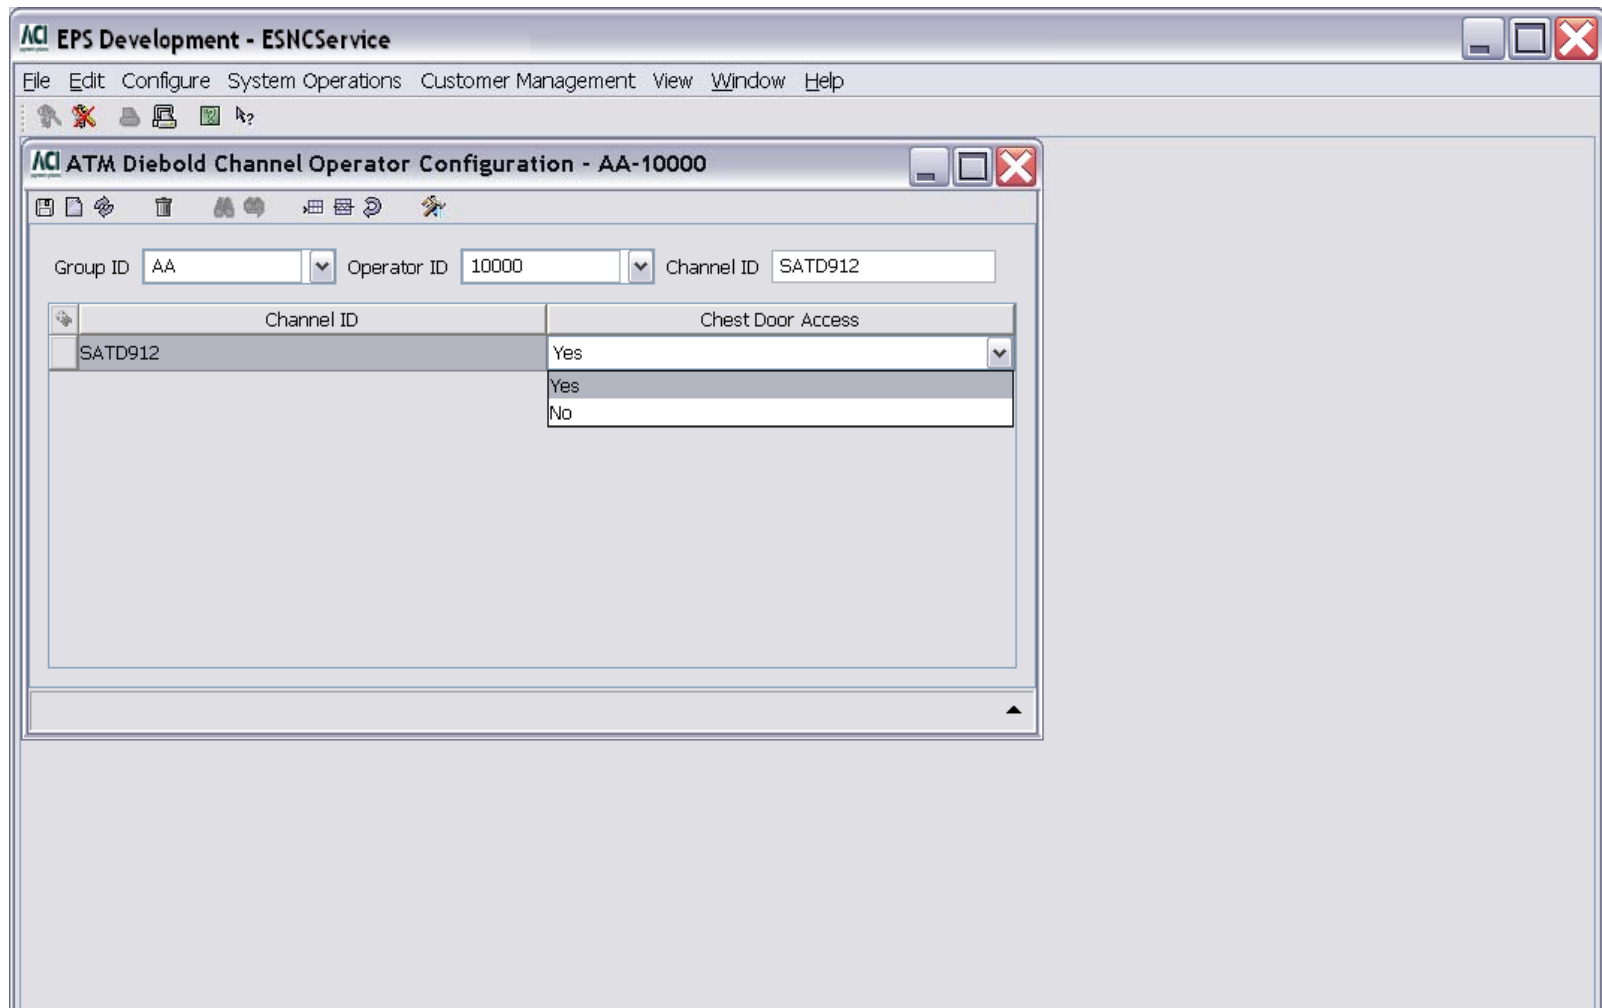


The Diebold Channel Operator UI is used on Diebold devices to determine whether an administrative operator at the ATM can have access, such as chest door access, to the vault.


ATM DKM Profile

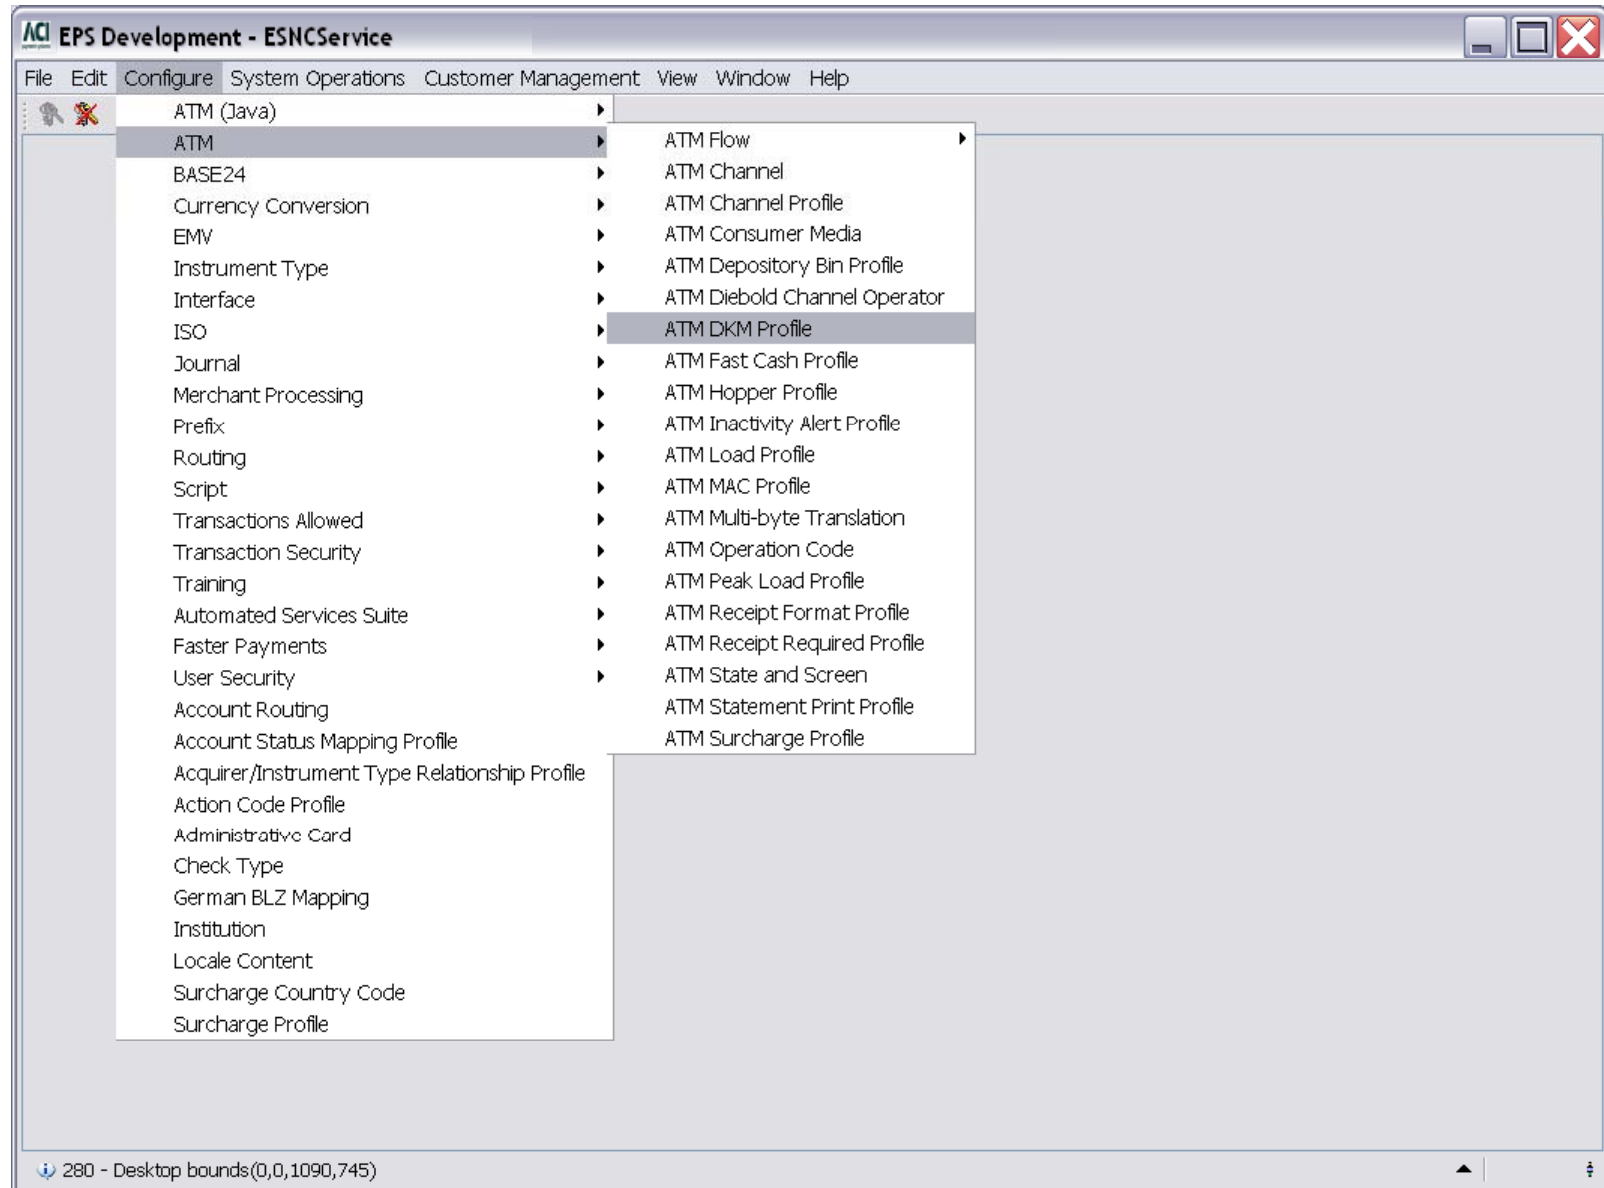

ATM DKM Profile

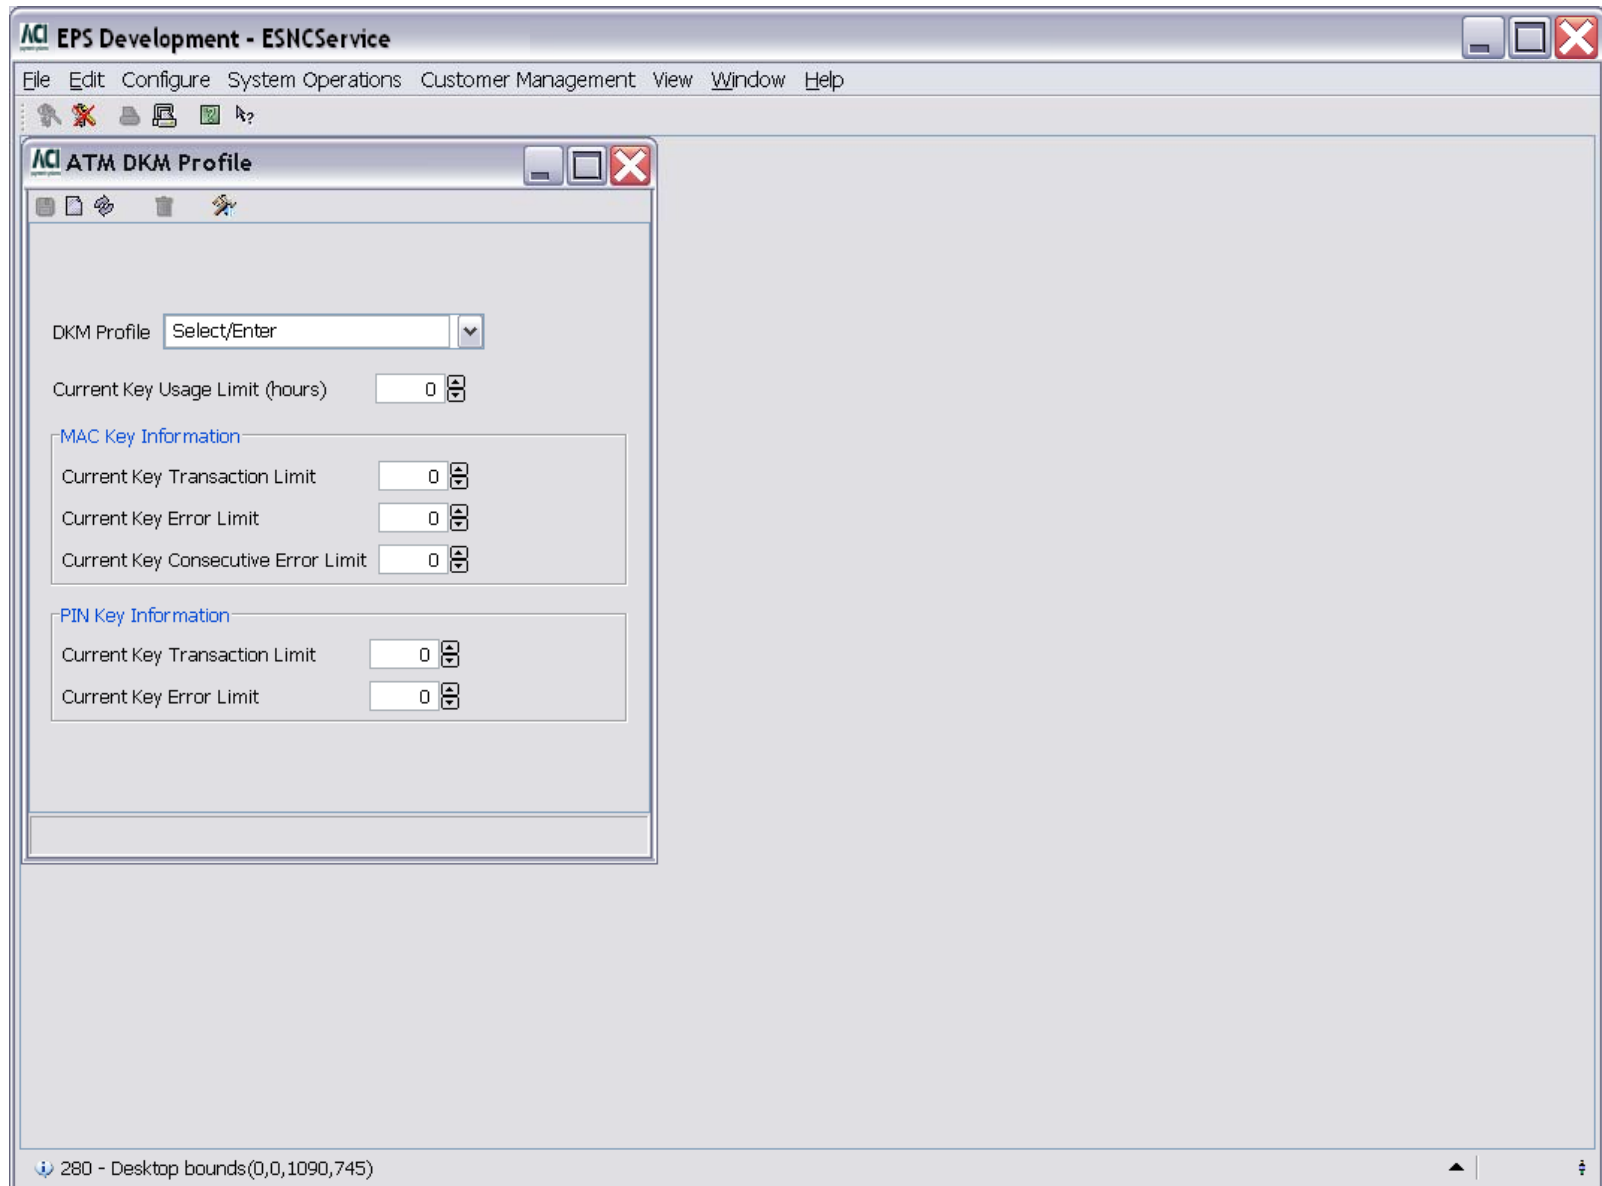

ATM Fast Cash Profile

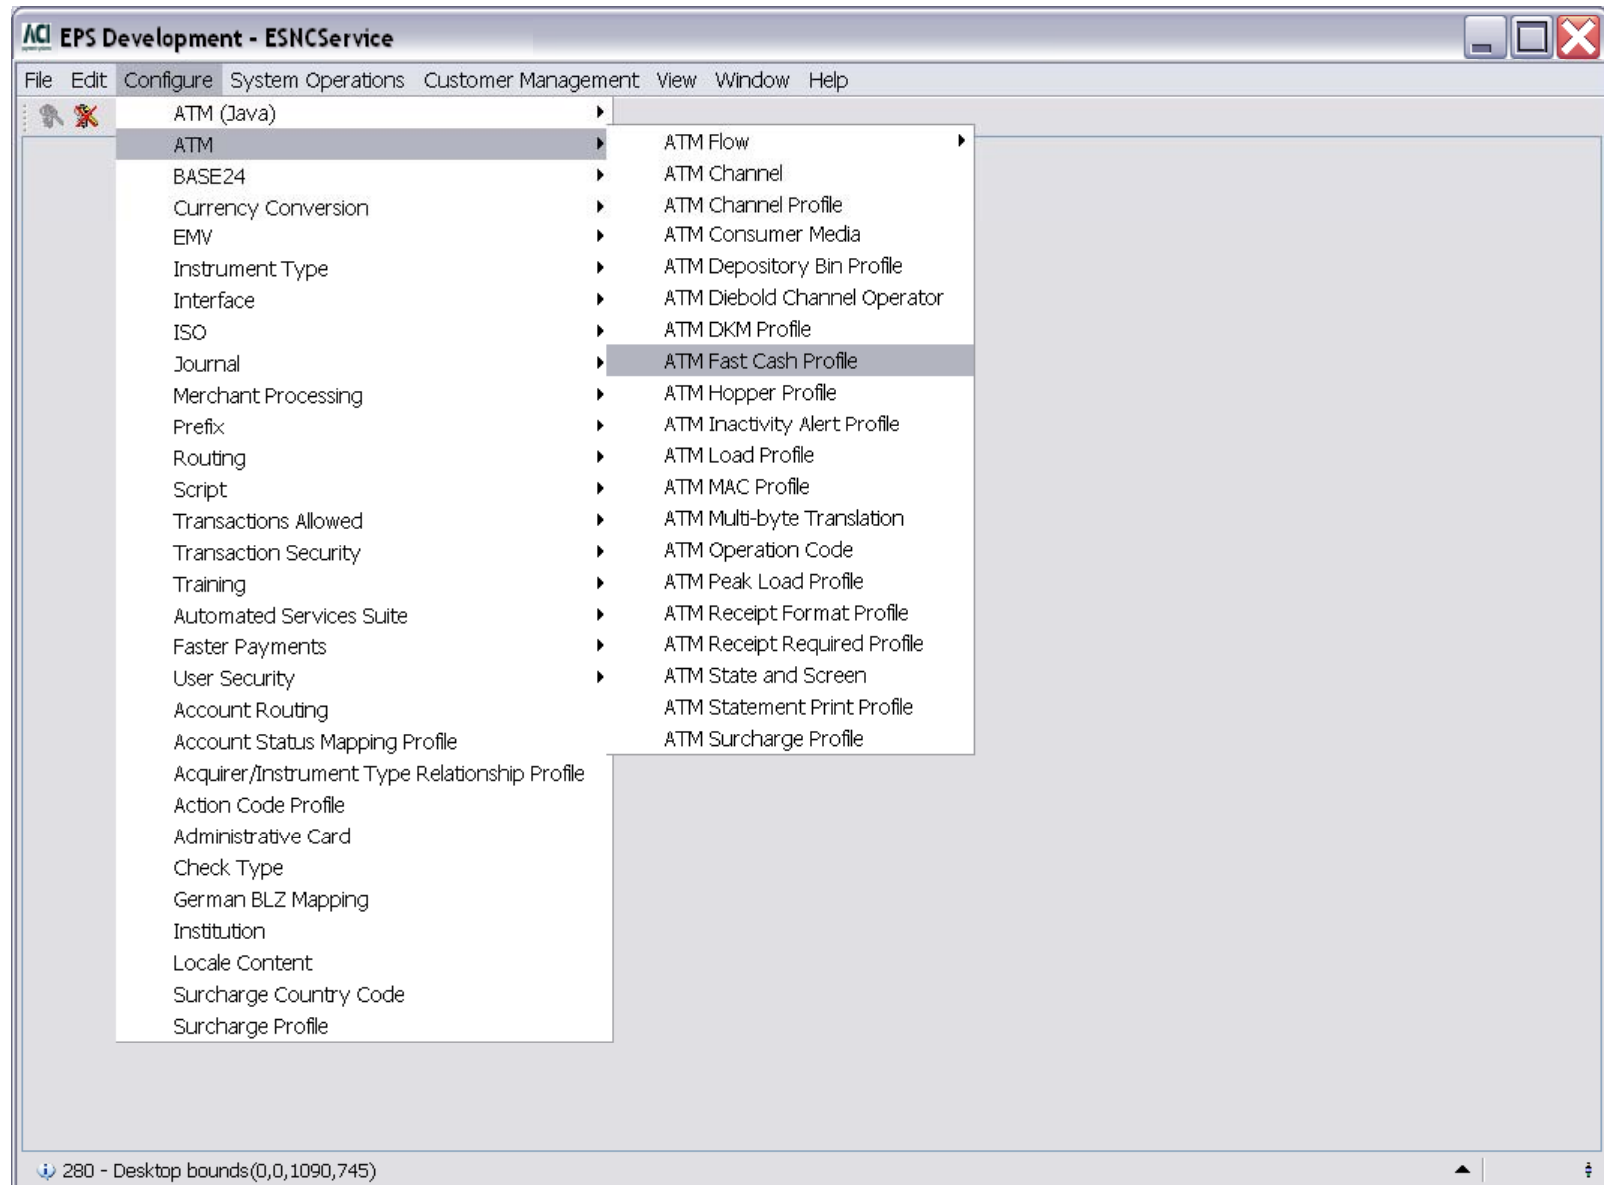


ATM Fast Cash Profile

The screenshot shows a software window titled "ACI EPS Development - ESNCService" with a menu bar (File, Edit, Configure, System Operations, Customer Management, View, Window, Help) and a toolbar. A sub-window titled "ACI ATM Fast Cash Profile Configuration - FAST_CASH..." is open, displaying the configuration for "FAST_CASH_PRFL01". The configuration includes a dropdown for the profile name and eight rows for "Amount 1" through "Amount 8", each with a text input field, a numeric value, and a currency dropdown menu set to "USD". A status bar at the bottom indicates "2 - Successful view of FAST_CASH_PRFL01."

Amount	Value	Currency
Amount 1	10	USD
Amount 2	20	USD
Amount 3	30	USD
Amount 4	40	USD
Amount 5	50	USD
Amount 6	60	USD
Amount 7	70	USD
Amount 8	80	USD

The ATM Fast Cash profile is optional and defines the amounts and currencies for Fast Cash processing. Multiple currencies can be configured. However, the ATM must have dispense cassettes with the appropriate currencies to support the fast cash profile settings.

ATM Hopper Profile Configuration

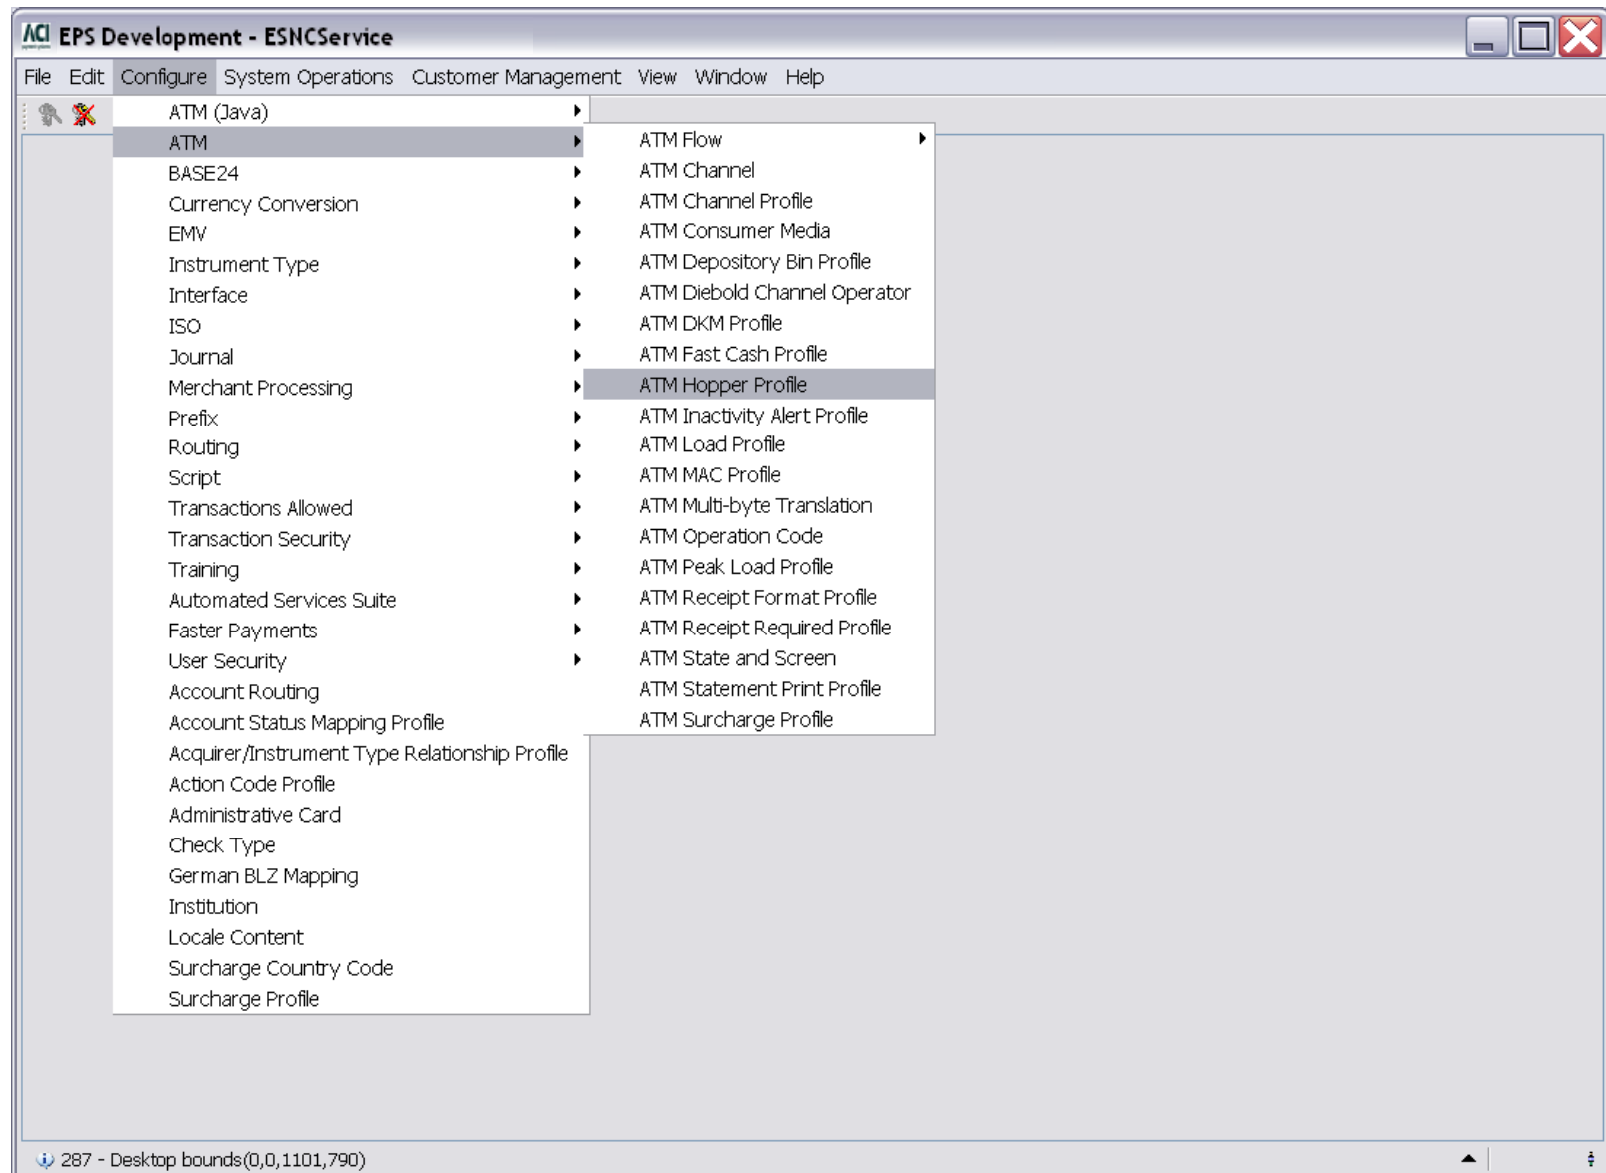

ATM Hopper Profile Configuration

EPS Development - ESNService

File Edit Configure System Operations Customer Management View Window Help

ATM Hopper Profile Configuration - DBLD_HPR_PRFL01

Hopper Profile: DBLD_HPR_PRFL01 Dispense Algorithm: Least Number Of Bills

Maximum Notes: 20 Maximum Coins: 25

Hopper Transaction Amount Thresholds Algorithm Configurable Start/Stop Algorithm

Hopper	Contents	Unit Value	Multicurrency Display	Standard Initial Amount	Cassette Mapping	Nonvalue Dispense	Maximum Units
1	Notes	1.00 USD	1	0.00	A	0.00	0
2	Notes	10.00 USD	2	0.00	B	0.00	0
3	Notes	20.00 USD	3	0.00	C	0.00	0
4	Notes	50.00 USD	4	0.00	D	0.00	0
5	Unused	0.00 USD	0	0.00		0.00	0
6	Unused	0.00 USD	0	0.00		0.00	0
7	Unused	0.00 USD	0	0.00		0.00	0
8	Unused	0.00 USD	0	0.00		0.00	0

The ATM Hopper profile defines all of the cassettes, their contents, denominations, and currency codes. Based on the value of the transaction, the non-value dispense threshold applies to all dispense algorithms and controls the dispensing of non-value coupons to the customer.

Max Notes and Max Coins control the total number of notes and coins that can be dispensed from the ATM in a single transaction. Max units control the maximum number of units that can be dispensed from each cassette (frequently a hardware limitation).

ATM Hopper Profile Configuration

EPS Development - ESNService

File Edit Configure System Operations Customer Management View Window Help

ATM Hopper Profile Configuration - DBLD_HPR_PRFL02

Hopper Profile: DBLD_HPR_PRFL02 Dispense Algorithm: Transaction Amount Thresholds...

Maximum Notes: 40 Maximum Coins: 40

Hopper Transaction Amount Thresholds Algorithm Configurable Start/Stop Algorithm

Hopper	Contents	Unit Value	Hopper Threshold
1	Notes	1.00 USD	0.00
2	Notes	5.00 USD	0.00
3	Notes	10.00 USD	0.00
4	Notes	20.00 USD	0.00
5	Unused	0.00 USD	0.00
6	Unused	0.00 USD	0.00
7	Unused	0.00 USD	0.00
8	Unused	0.00 USD	0.00

The Transaction Amount Thresholds Algorithm tab is used when the dispense algorithm is "threshold." Dispense algorithm starts with the high value cassette and dispenses cash until the threshold is reached.


ATM Hopper Profile Configuration

The screenshot shows the 'ATM Hopper Profile Configuration - DBLD_HPR_PRFL02' window. It features a menu bar (File, Edit, Configure, System Operations, Customer Management, View, Window, Help) and a toolbar. The main area has a 'Hopper Profile' dropdown set to 'DBLD_HPR_PRFL02' and a 'Dispense Algorithm' dropdown set to 'Configurable Start/Stop Algorithm'. Below these are input fields for 'Maximum Notes' and 'Maximum Coins', both set to 40. Three tabs are visible: 'Hopper', 'Transaction Amount Thresholds Algorithm', and 'Configurable Start/Stop Algorithm' (which is active). The active tab contains a table with 6 columns: Hopper, Contents, Unit Value, Starting Dispense Threshold, and Ending Dispense Threshold. The table lists 8 hoppers, with the first four containing notes of 1.00, 5.00, 10.00, and 20.00 USD, and the last four being unused.

Hopper	Contents	Unit Value	Starting Dispense Threshold	Ending Dispense Threshold
1	Notes	1.00 USD	0.00	0.00
2	Notes	5.00 USD	0.00	0.00
3	Notes	10.00 USD	0.00	0.00
4	Notes	20.00 USD	0.00	0.00
5	Unused	0.00 USD	0.00	0.00
6	Unused	0.00 USD	0.00	0.00
7	Unused	0.00 USD	0.00	0.00
8	Unused	0.00 USD	0.00	0.00

This Configurable Start/Stop Algorithm tab is used when the configurable start/stop algorithm is used. Items are dispensed starting with the largest denomination until the remaining value crosses the Ending Dispense Threshold. Then the next cassette is started to dispense cash until the non-dispensed portion of the transaction has been dispensed.

ATM Inactivity Alert Profile

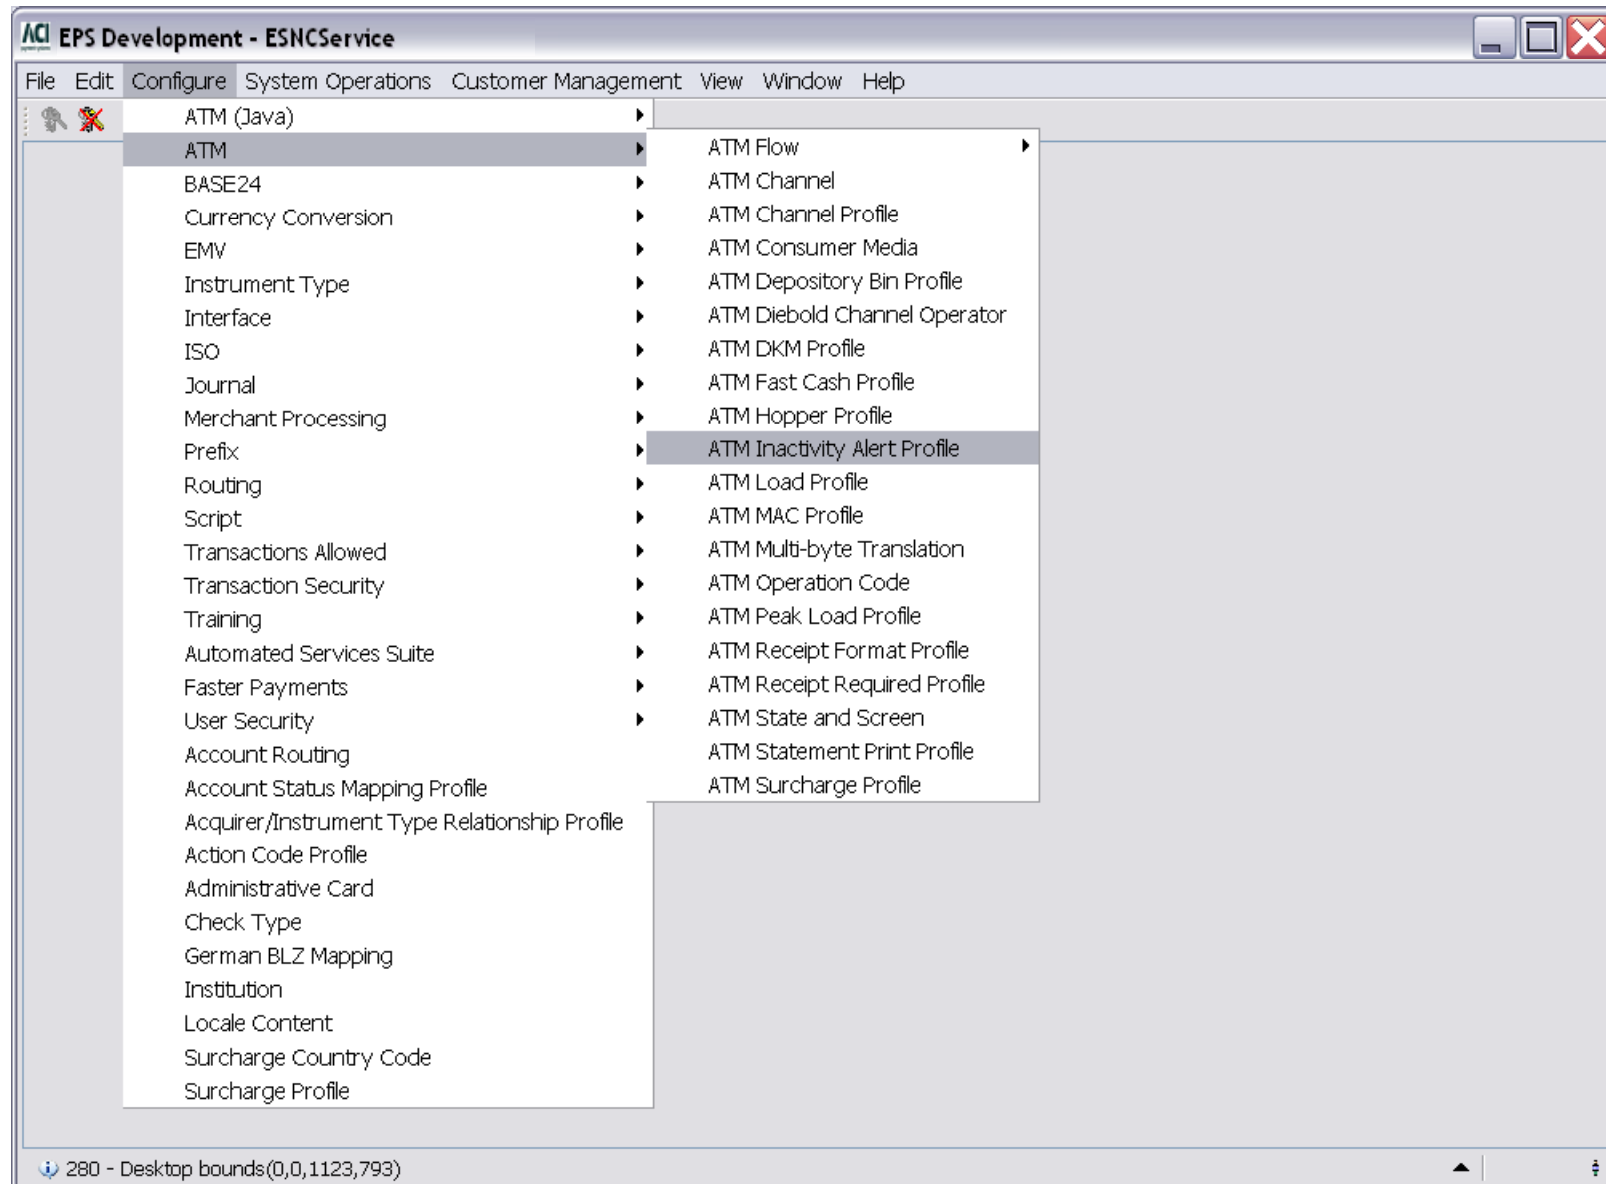

ATM Inactivity Alert Profile

The screenshot shows a software window titled "EPS Development - ESNCService" with a menu bar (File, Edit, Configure, System Operations, Customer Management, View, Window, Help) and a toolbar. A sub-window titled "ATM Inactivity Alert Profile Configuration - INACT_PRFL01" is open, displaying configuration settings for an inactivity alert profile. The profile name "INACT_PRFL01" is selected in a dropdown menu. The configuration is divided into four sections: "Workday Peak" with Start at 04:01 pm, End at 08:01 pm, and an Inactivity Alert Threshold of 5 minutes; "Weekend Peak" with Start at 10:01 am, End at 04:01 pm, and an Inactivity Alert Threshold of 15 minutes; "Non Peak" with an Inactivity Alert Threshold of 10 minutes; and "All Time Periods (Peak and Non Peak)" with a Consecutive Timeout Threshold of 1. A status bar at the bottom of the sub-window shows "2 - Successful view of INACT_PRFL01." The main application window's status bar at the very bottom indicates "280 - Desktop bounds(0,0,1123,793)".

EPS Development - ESNCService

File Edit Configure System Operations Customer Management View Window Help

ATM Inactivity Alert Profile Configuration - INACT_PRFL01

Inactivity Alert Profile INACT_PRFL01

Workday Peak

Start 04:01 pm End 08:01 pm

Inactivity Alert Threshold 5 (Minutes)

Weekend Peak

Start 10:01 am End 04:01 pm

Inactivity Alert Threshold 15 (Minutes)

Non Peak

Inactivity Alert Threshold 10 (Minutes)


All Time Periods (Peak and Non Peak)

Consecutive Timeout Threshold 1


2 - Successful view of INACT_PRFL01.

280 - Desktop bounds(0,0,1123,793)

ATM Load Profile

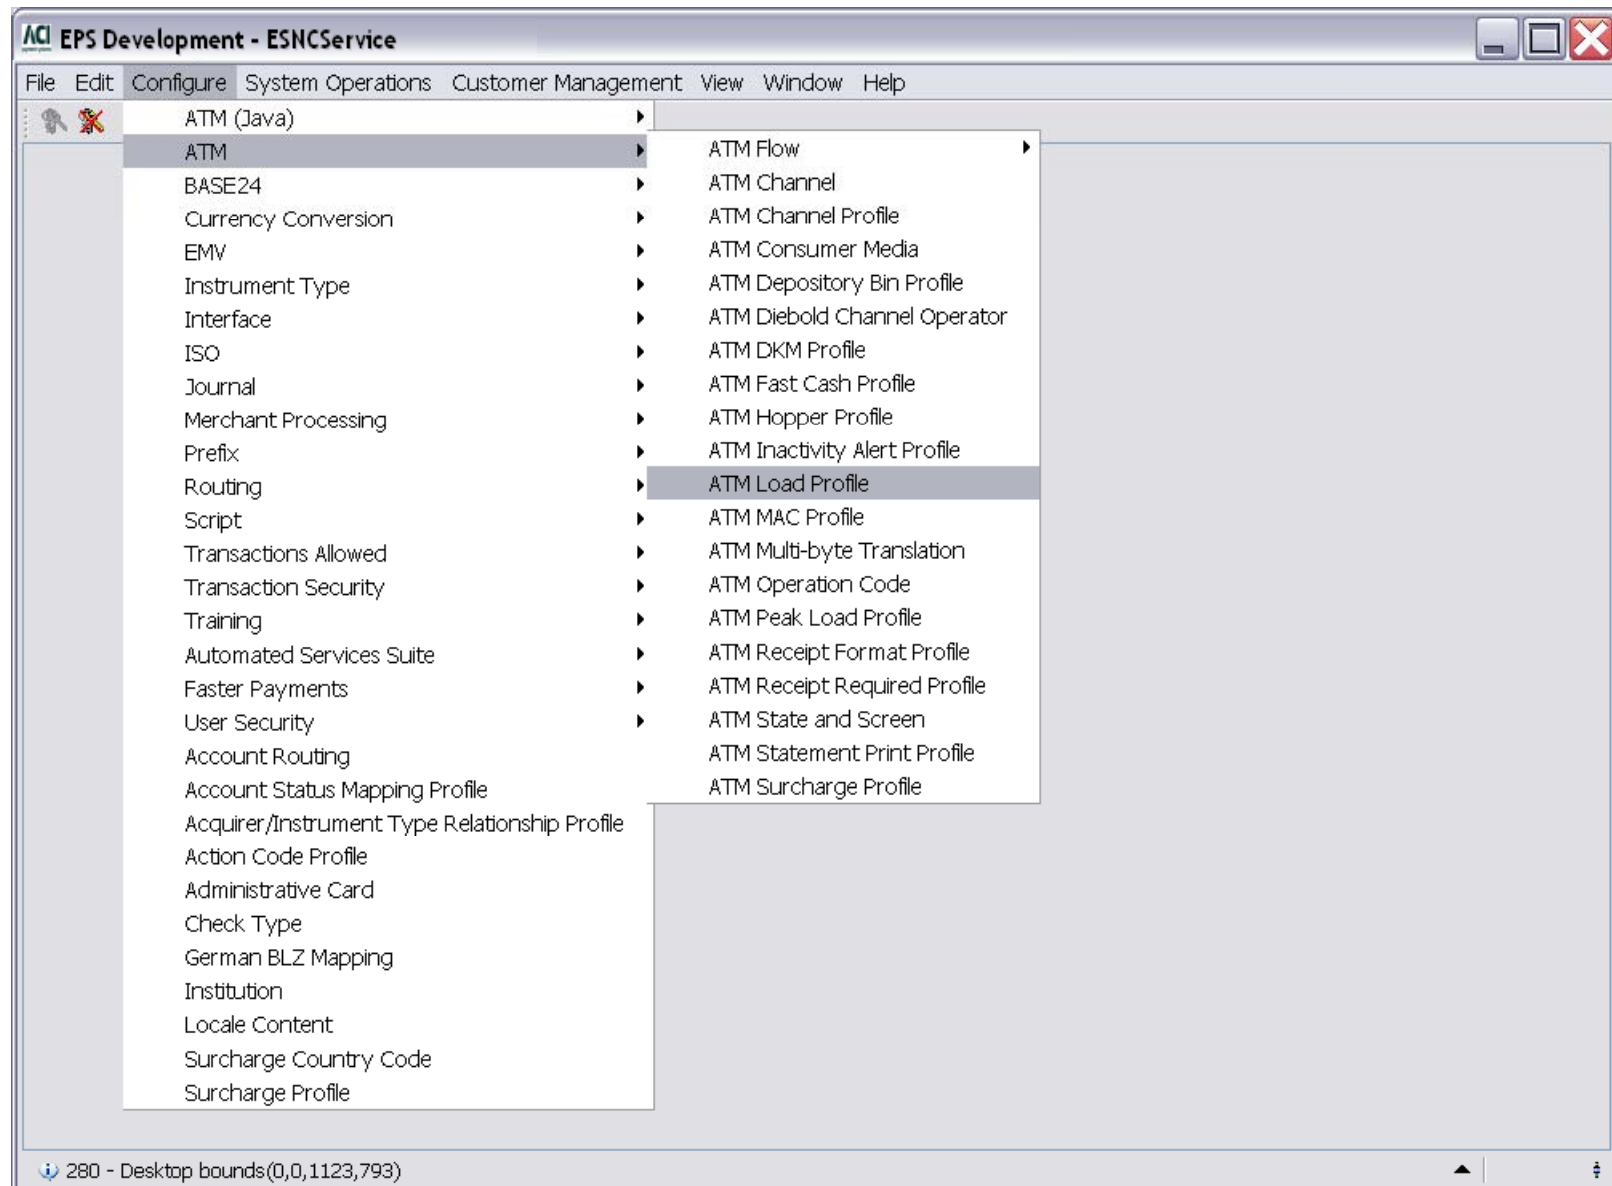


ATM Load Profile

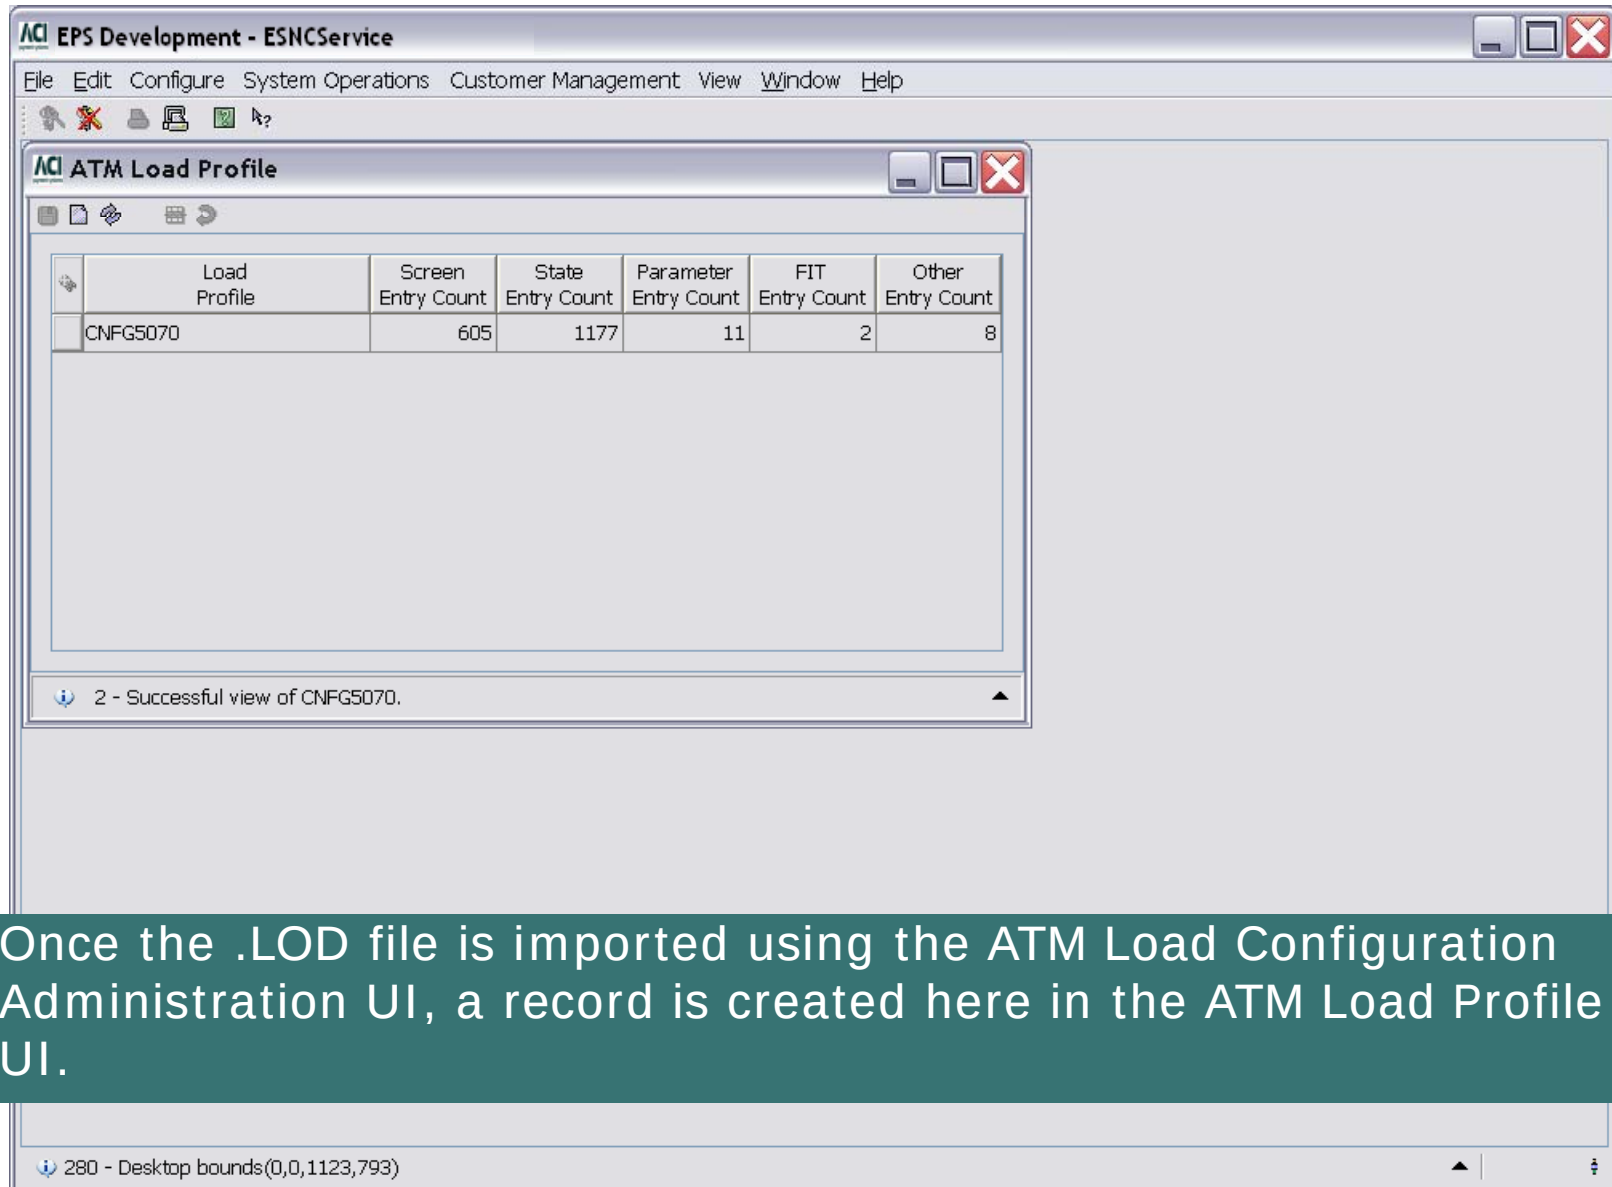


Once the .LOD file is imported using the ATM Load Configuration Administration UI, a record is created here in the ATM Load Profile UI.


ATM MAC Profile Configuration

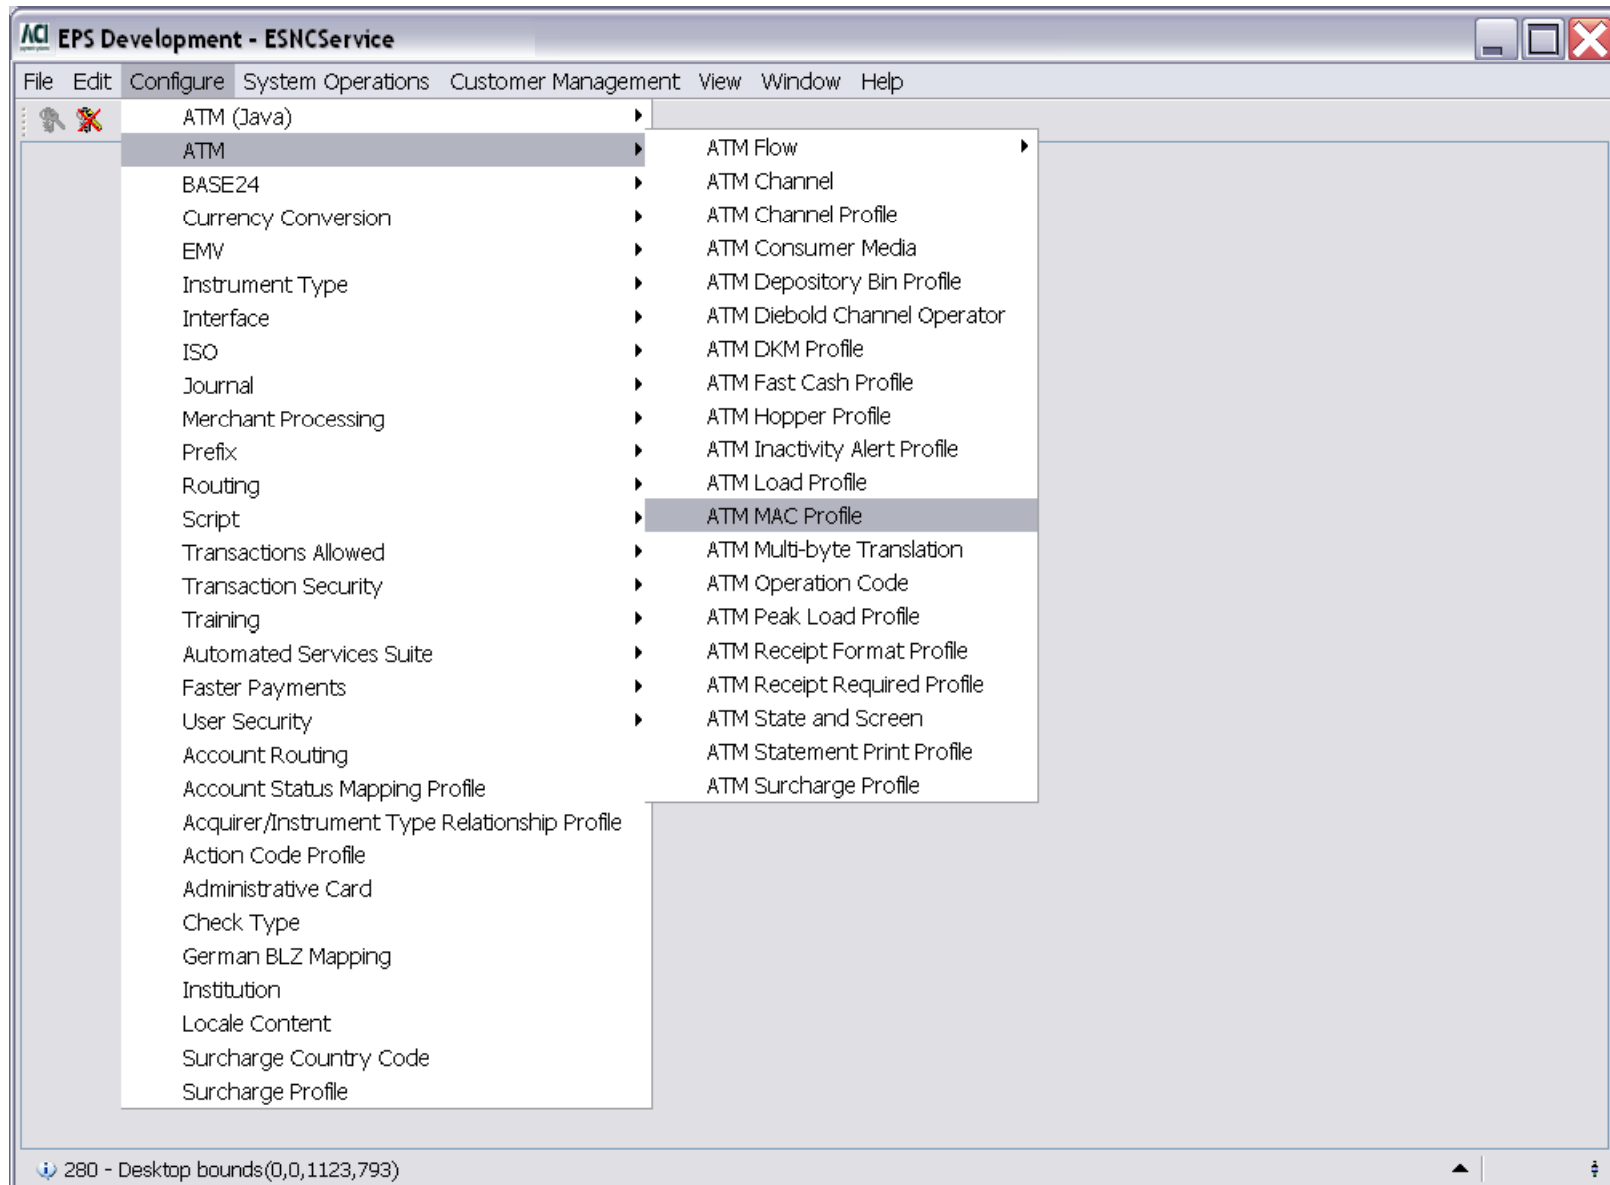


ATM MAC Profile Configuration

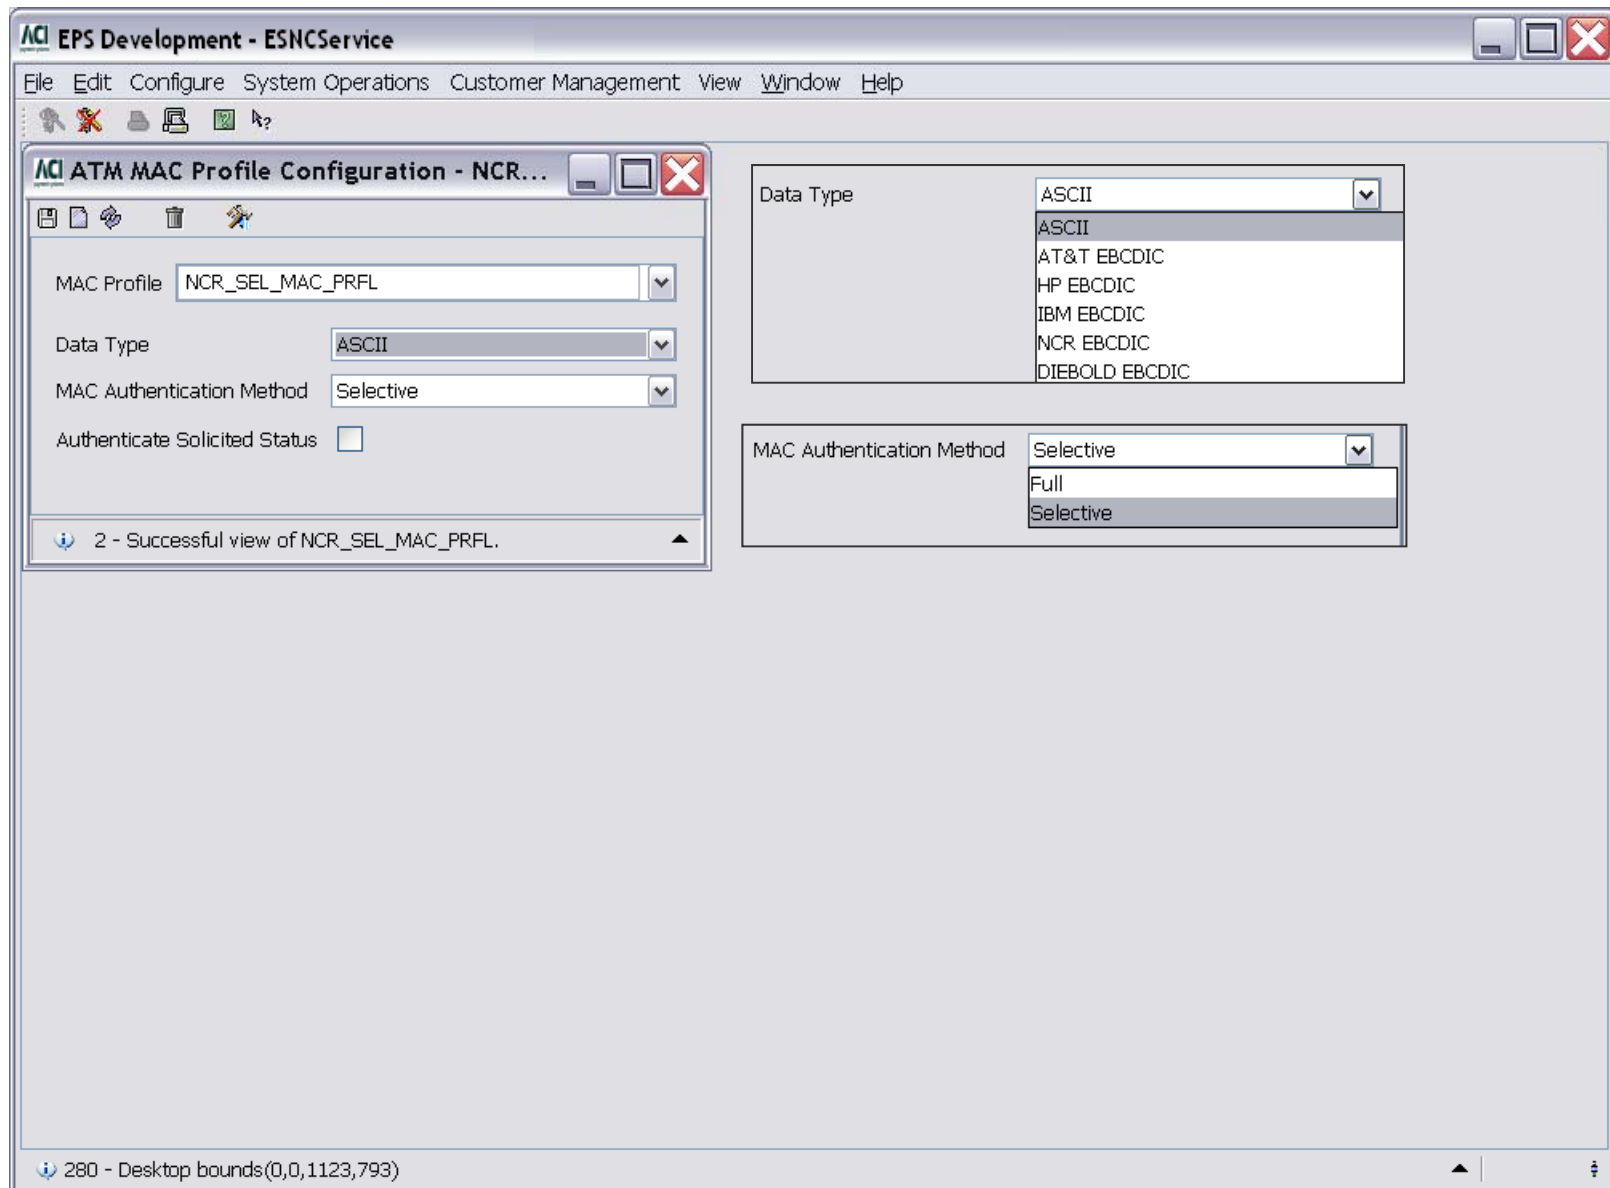

ATM Multi-byte Translation

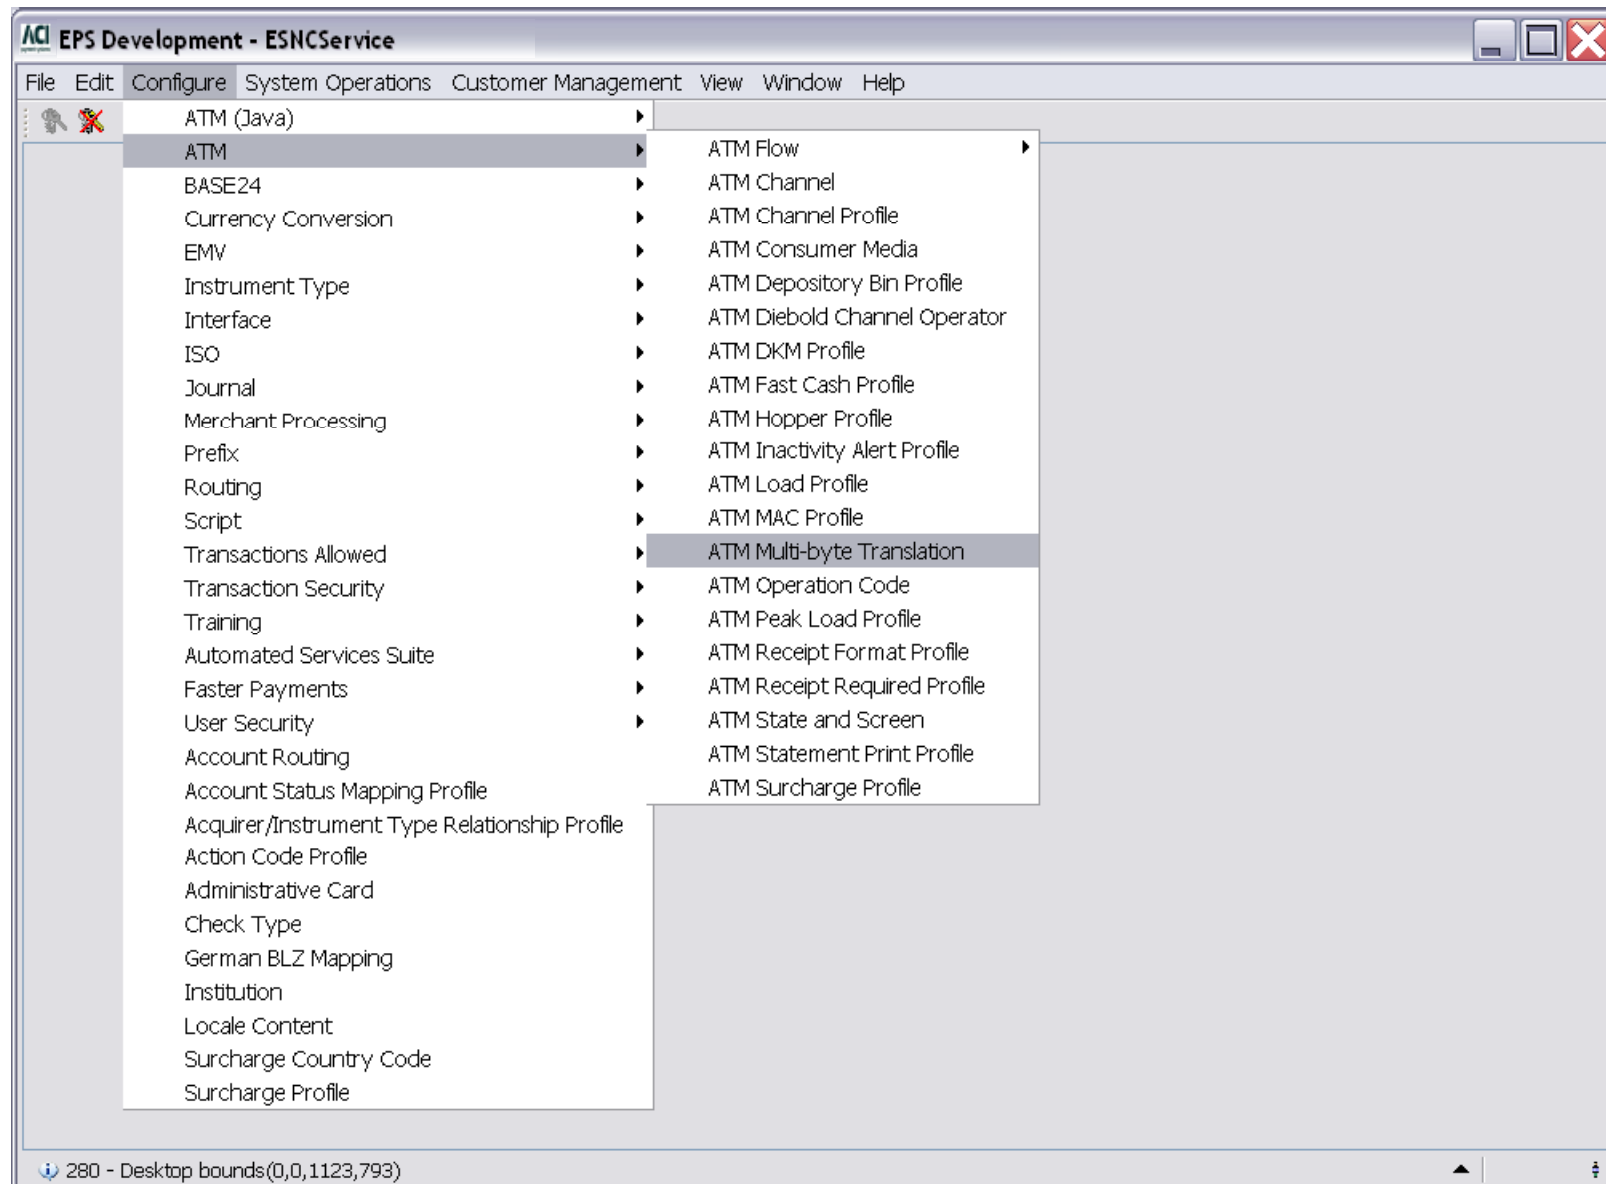


ATM Multi-byte Translation

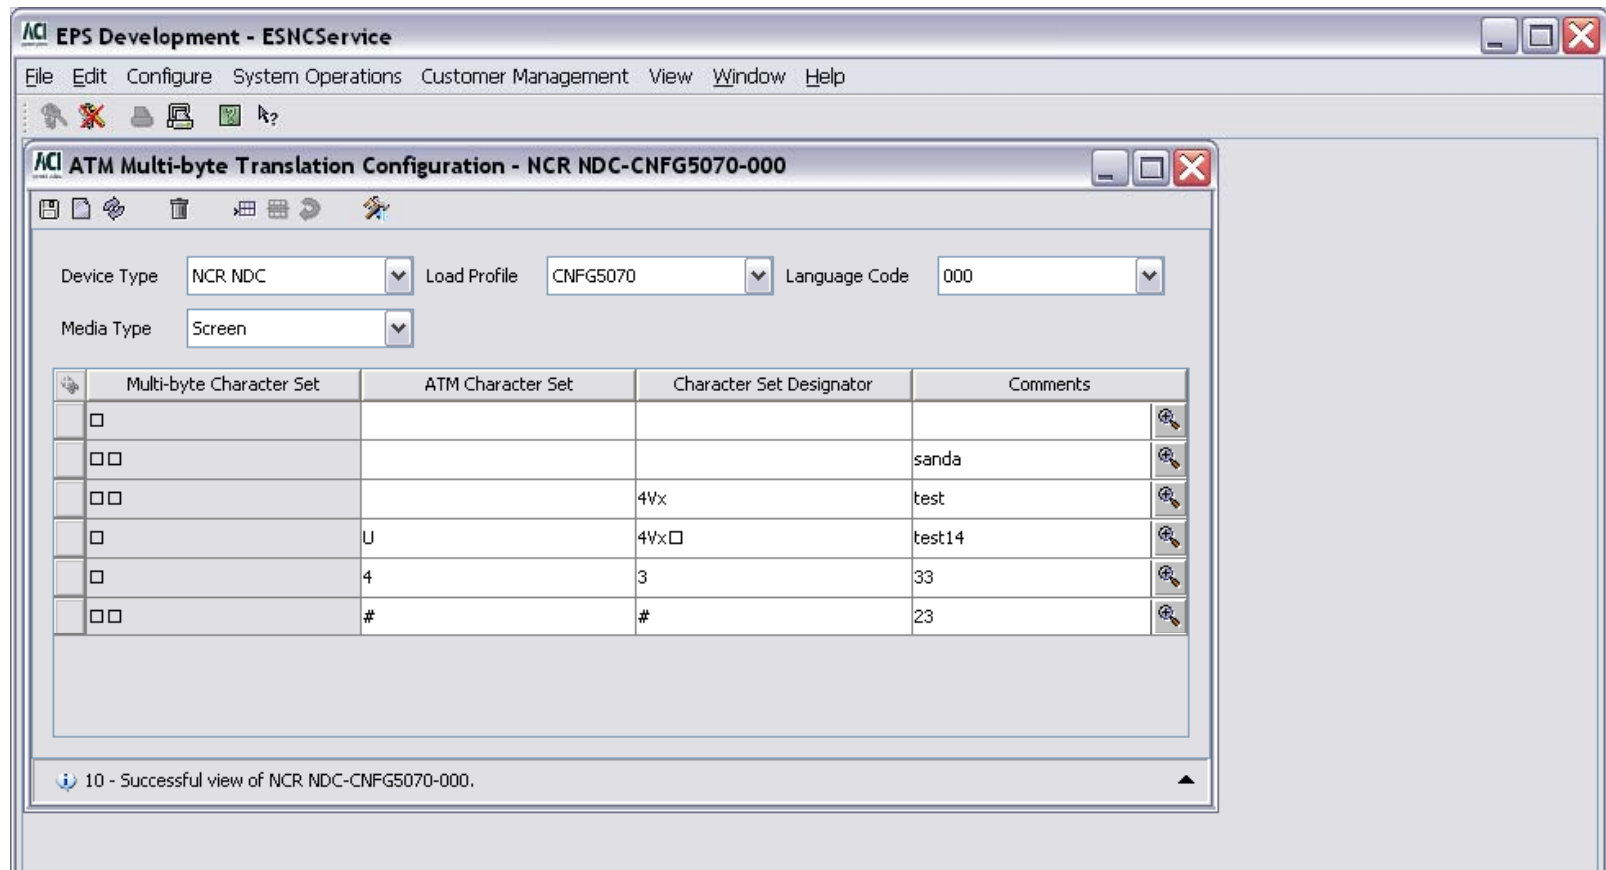

BASE24-eps supports different alphabets, syllabic languages, and character sets that require two or more bytes of data in the representation of a single character. These multi-byte characters can be entered on ACI desktop user interface windows and can be used on ATM screens and customer receipts.

ATM Operation Code Configuration

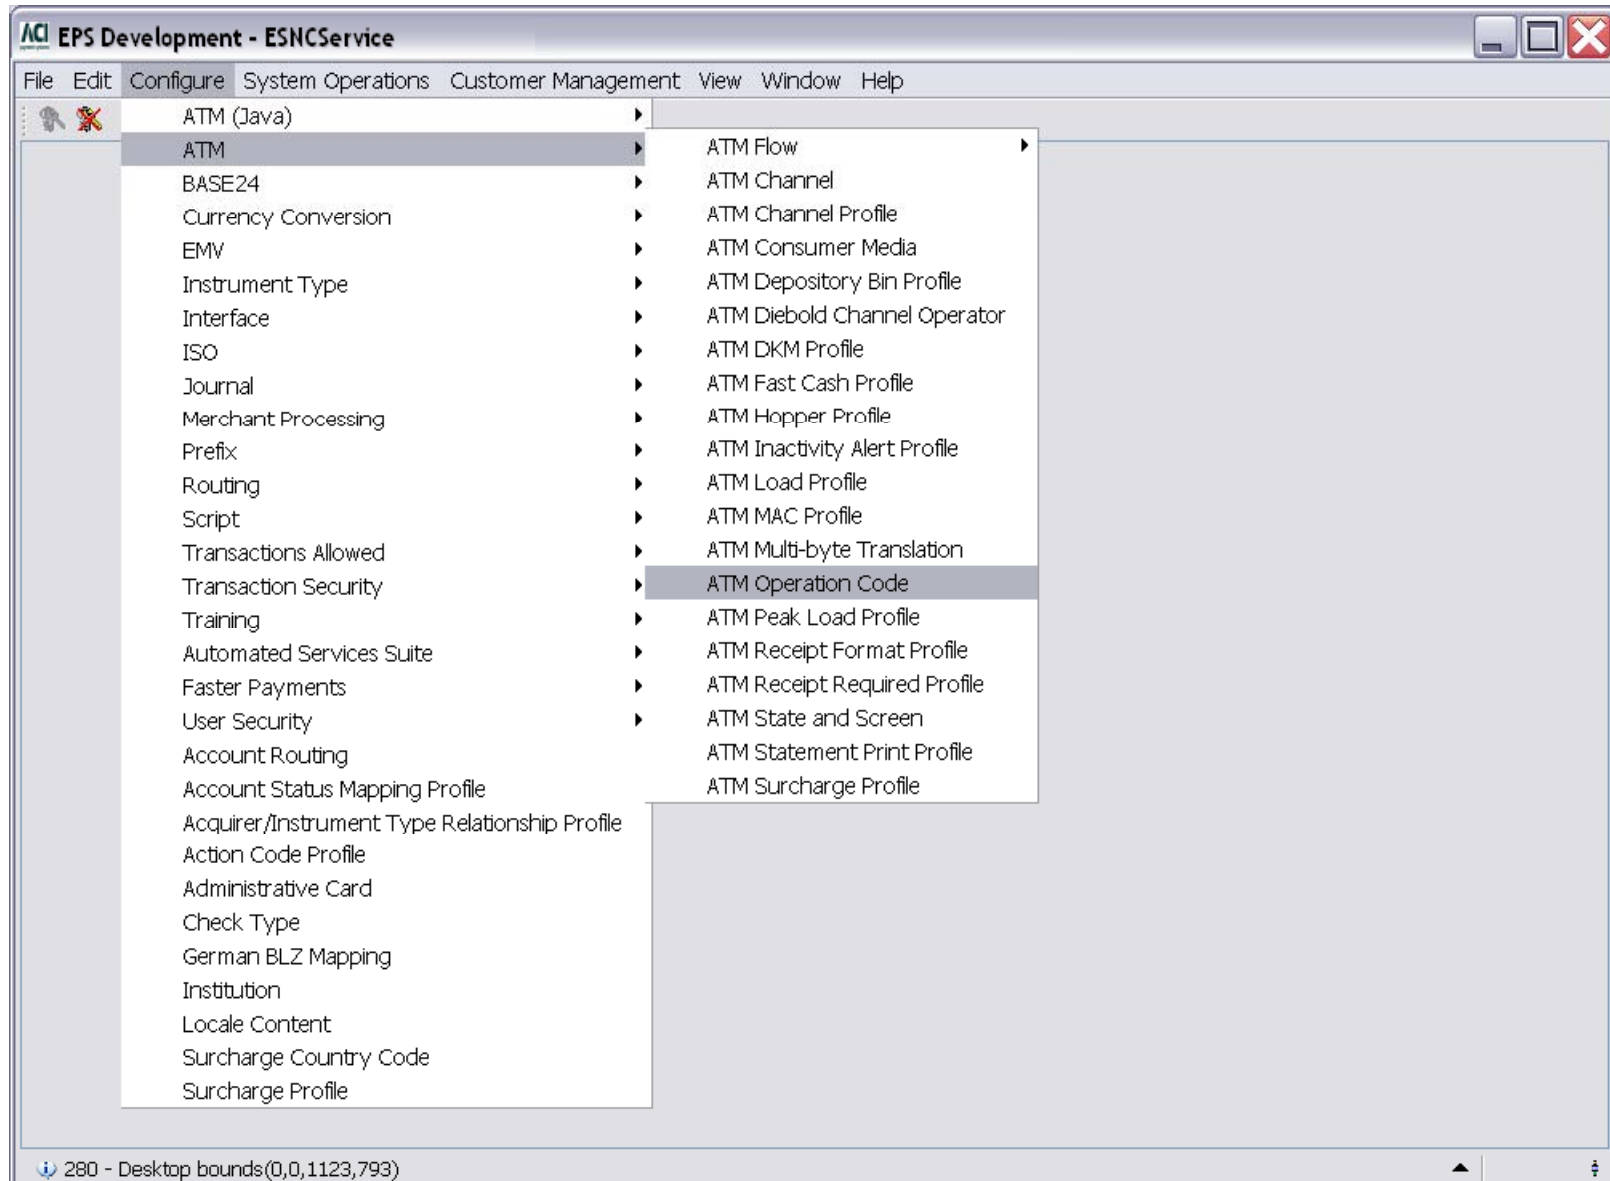

ATM Operation Code Configuration


The screenshot shows the 'EPS Development - ESNService' application window. Inside, the 'ATM Operation Code Configuration - NCR NDC-CNFG5070-AA' dialog is open. The configuration includes:

- Device Type: NCR NDC
- Load Profile: CNFG5070
- Operation Code: AA
- BASE24-eps Processing Code section:
 - Transaction Code: 01 (Withdrawal/...)
 - Account Type 1: 20 (Checking)
 - Account Type 2: 00 (Default/None)
- A table of Setup Task Names and Parameters:

Setup Task Name	Parameter
OpCdeCashBeforeCrd	
OpCdeOptRcptChoice	5BC
OpCdeLangInd	7
OpCdeNcrAudioChoice	6

At the bottom of the dialog, a status bar indicates: '2 - Successful view of NCR NDC-CNFG5070-AA'.

ATM Peak Load Profile

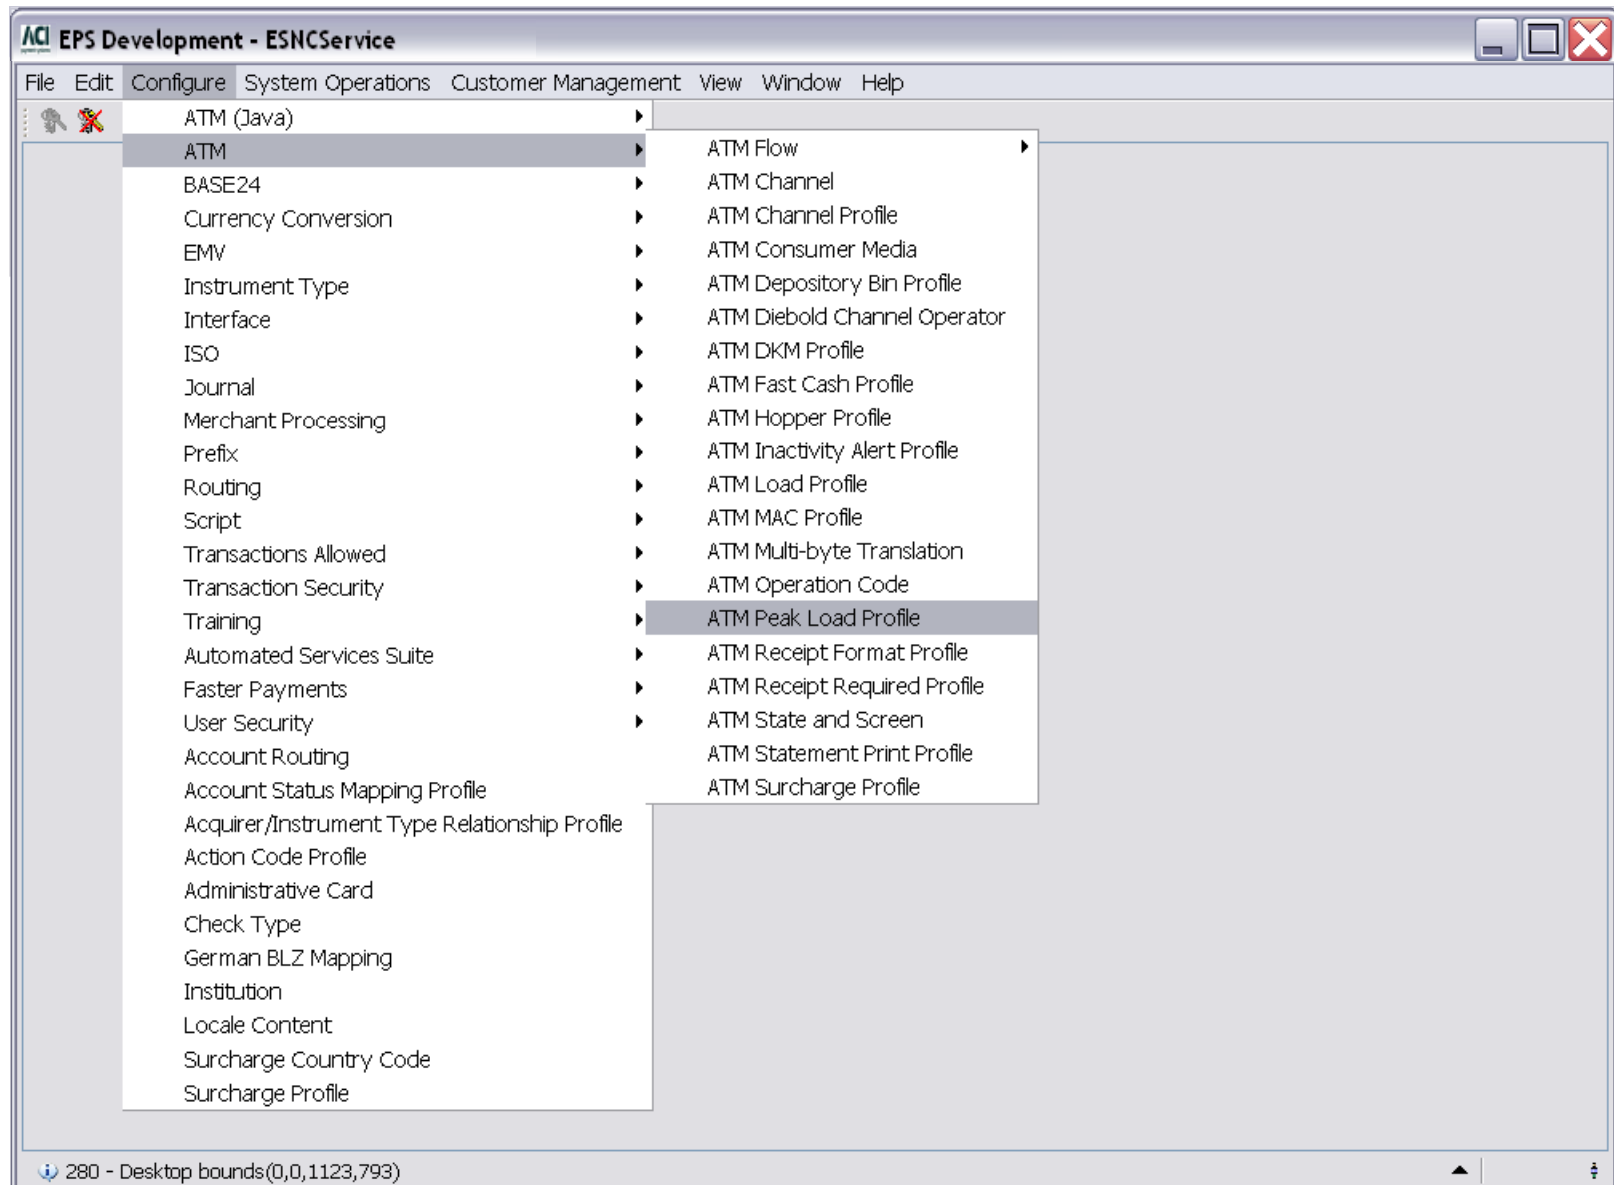

ATM Peak Load Profile

EPS Development - ESNService

File Edit Configure System Operations Customer Management View Window Help

ATM Peak Load Profile Configuration - TEST

Peak Load Profile: TEST

Institution ID: 00001 (RIPLEY'S BANK ONE)

	Peak 1 Start Time	Peak 1 End Time	Peak 2 Usage Indicator	Peak 2 Start Time	Peak 2 End Time
Holiday	08:00 pm	09:00 pm	☒	11:00 am	12:00 pm
Sunday	12:00 am	01:00 pm	☐	12:00 am	12:00 am
Monday	12:00 am	12:00 pm	☐	12:00 am	12:00 am
Tuesday	12:00 am	12:00 pm	☐	12:00 am	12:00 am
Wednesday	12:00 am	12:00 pm	☐	12:00 am	12:00 am
Thursday	12:00 am	12:00 pm	☐	12:00 am	12:00 am
Friday	12:00 am	12:00 pm	☐	12:00 am	12:00 am
Saturday	12:00 am	12:00 pm	☐	12:00 am	12:00 am

Load Groups for the Selected Table Row

Standard Load Groups: 1234


Peak 1 Load Groups: 1234

Peak 2 Load Groups: 1234

14 - Successful view of TEST.

280 - Desktop bounds(0,0,1123,793)

ATM Receipt Format Profile

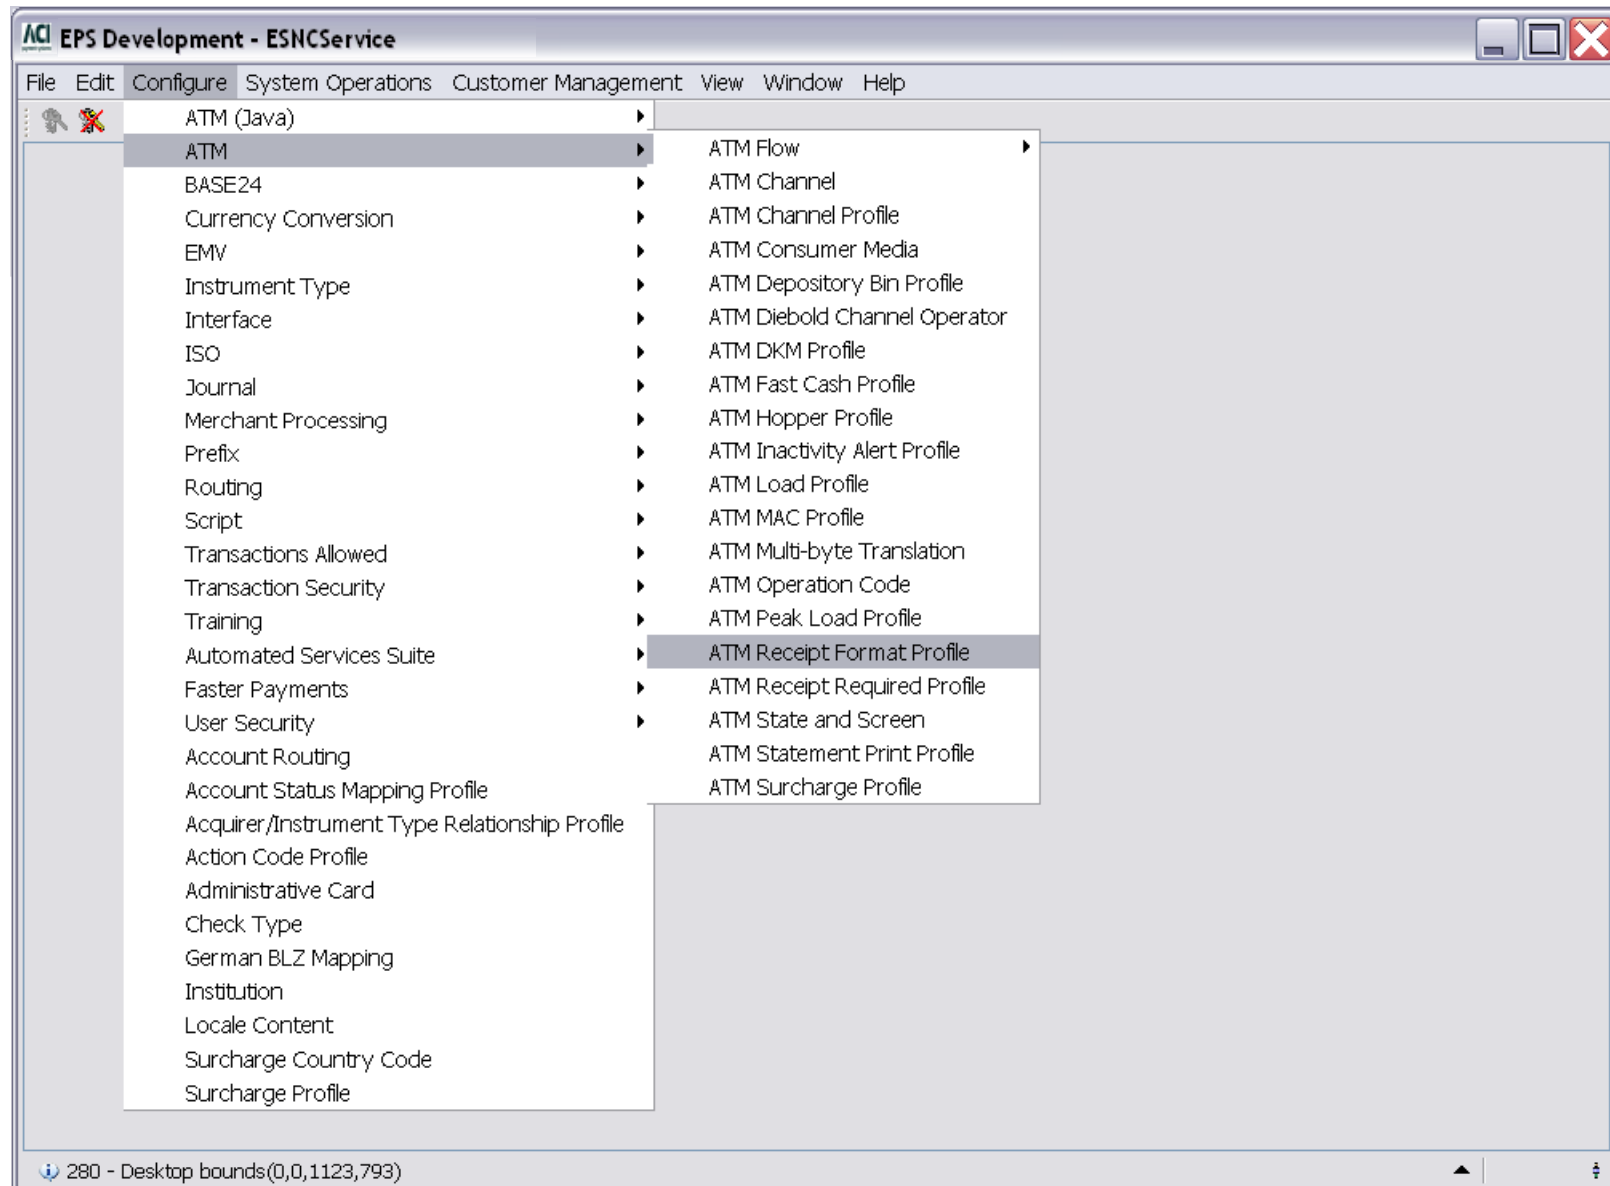

ATM Receipt Format Profile

ACI EPS Development - ESNService

File Edit Configure System Operations Customer Management View Window Help

ACI ATM Receipt Format Profile Configuration - *****-RCPT_PRFL

Issuer Institution ID ***** Receipt Format Profile RCPT_PRFL

Receipt Type Code	Language Code	BASE24-eps Processing Code			Printer Type	Printer Sub Type
		Transaction Code	Account Type 1	Account Type 2		
Body of receipt	0	**	**	**	*	*
Body of receipt	0	**	**	**	Deposit...	*
Body of receipt	0	**	**	**	Generic	*

Template Data View Area (view only)

```
01 @RECORD NO. #SQ>
02 #TT>
```


Template Data Edit Area

Line Number	Field Type	Additional Field Data	Field Value
01	@ (Text)		RECORD N...
01	# (Field Co...)	SQ	
01	> (Line Feed)		
02	# (Field Co...)	TT	
02	> (Line Feed)		

2 - Successful view of *****-RCPT_PRFL.

280 - Desktop bounds(0,0,1123,793)

ATM Receipt Required Profile

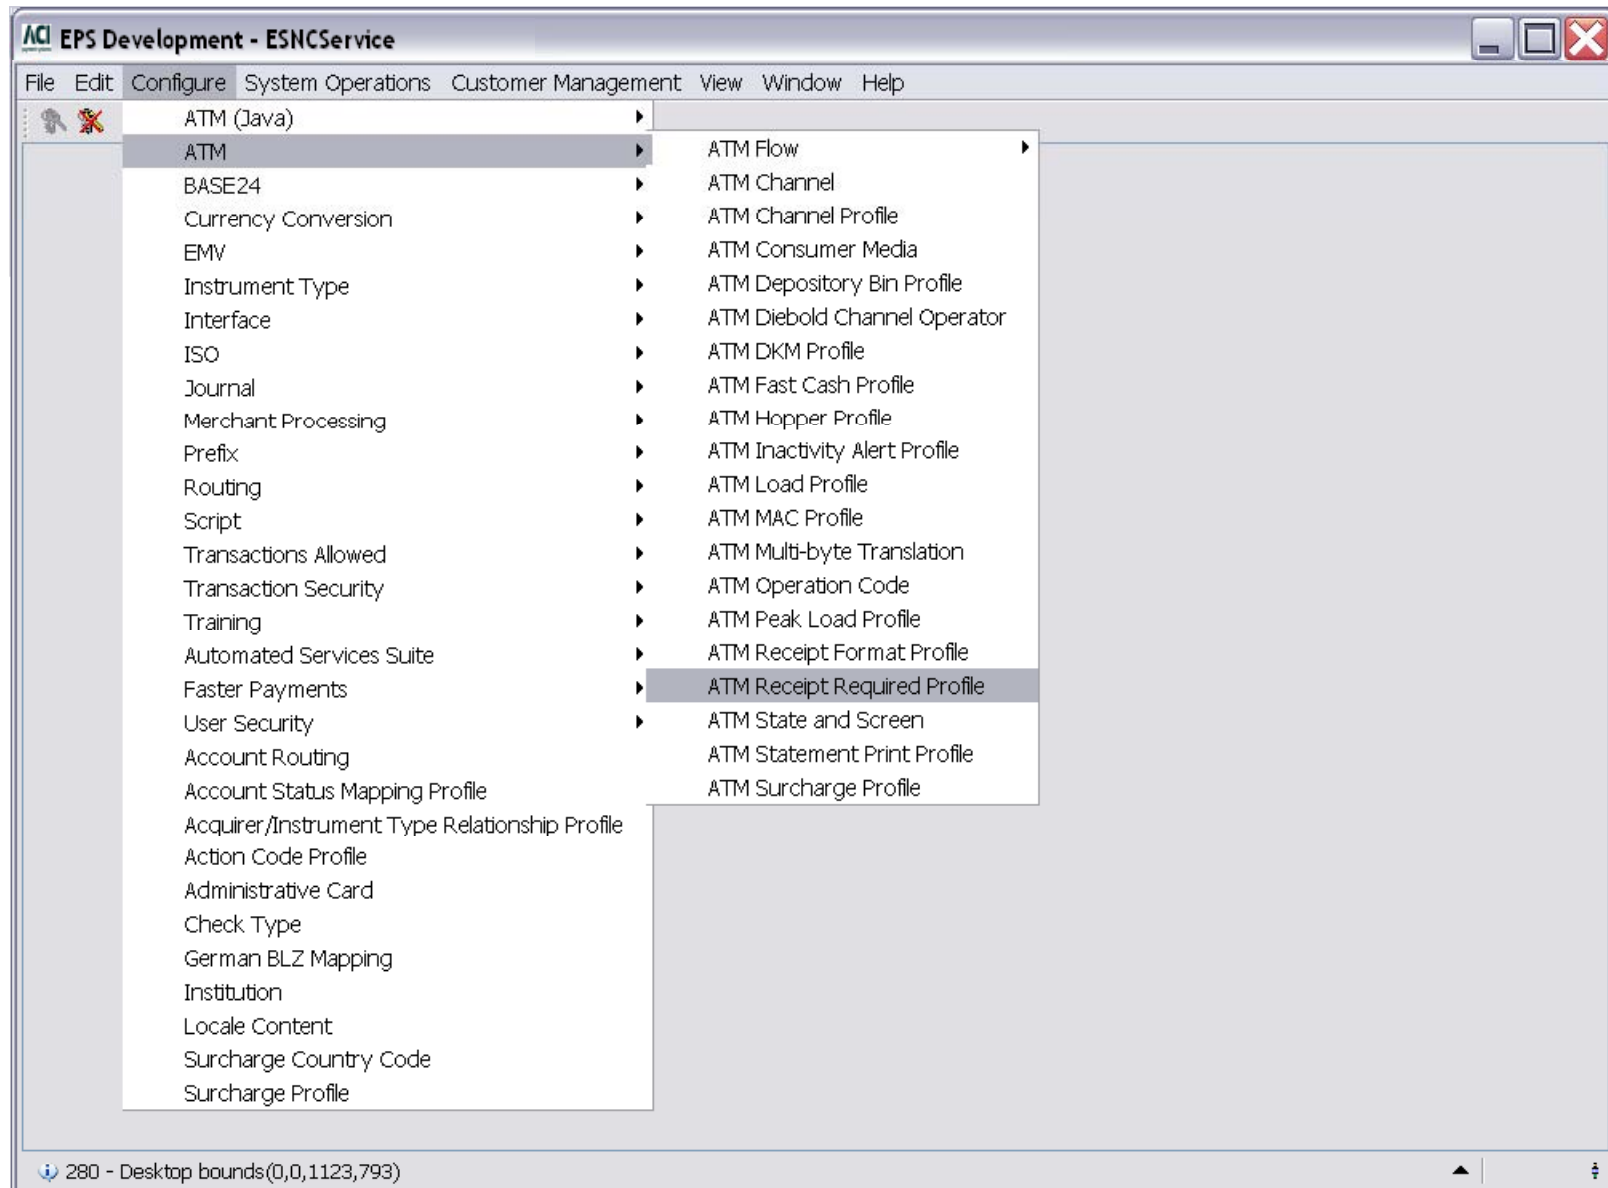

ATM Receipt Required Profile

ACI EPS Development - ESNCService

File Edit Configure System Operations Customer Management View Window Help

ACI ATM Receipt Required Profile Configuration - RQD_RCPT_PRFL01


Receipt Required Profile: RQD_RCPT_PRFL01

	Tran Code	From Account	To Account	Print Receipt if Approved	Print Receipt if Denied	Print Journal if Approved	Print Journal if Denied
	00 (Purchase)	10 (Savings)	00 (Default/None)	Required	Required	Required	Required
	00 (Purchase)	20 (Checking)	00 (Default/None)	Optional	Required	Required	Required
	00 (Purchase)	30 (Credit)	00 (Default/None)	Required	Required	Required	Required
	01 (Withdrawal...)	10 (Savings)	00 (Default/None)	Required	Required	Required	Required
	01 (Withdrawal...)	20 (Checking)	00 (Default/None)	Required	Required	Required	Required
	01 (Withdrawal...)	30 (Credit)	00 (Default/None)	Required	Required	Required	Required
	10 (Non-Cash Fi...)	10 (Savings)	00 (Default/None)	Required	Required	Required	Required
	10 (Non-Cash Fi...)	20 (Checking)	00 (Default/None)	Required	Required	Required	Required
	10 (Non-Cash Fi...)	30 (Credit)	00 (Default/None)	Required	Required	Required	Required
	17 (Fast Cash)	00 (Default/None)	00 (Default/None)	Required	Required	Required	Required
	17 (Fast Cash)	10 (Savings)	00 (Default/None)	Required	Required	Required	Required
	17 (Fast Cash)	20 (Checking)	00 (Default/None)	Required	Required	Required	Required
	17 (Fast Cash)	30 (Credit)	00 (Default/None)	Required	Required	Required	Required
	21 (Deposit)	00 (Default/None)	10 (Savings)	Required	Required	Required	Required
	21 (Deposit)	00 (Default/None)	20 (Checking)	Required	Required	Required	Required

2 - Successful view of RQD_RCPT_PRFL01.

280 - Desktop bounds(0,0,1123,793)

ATM State and Screen Configuration

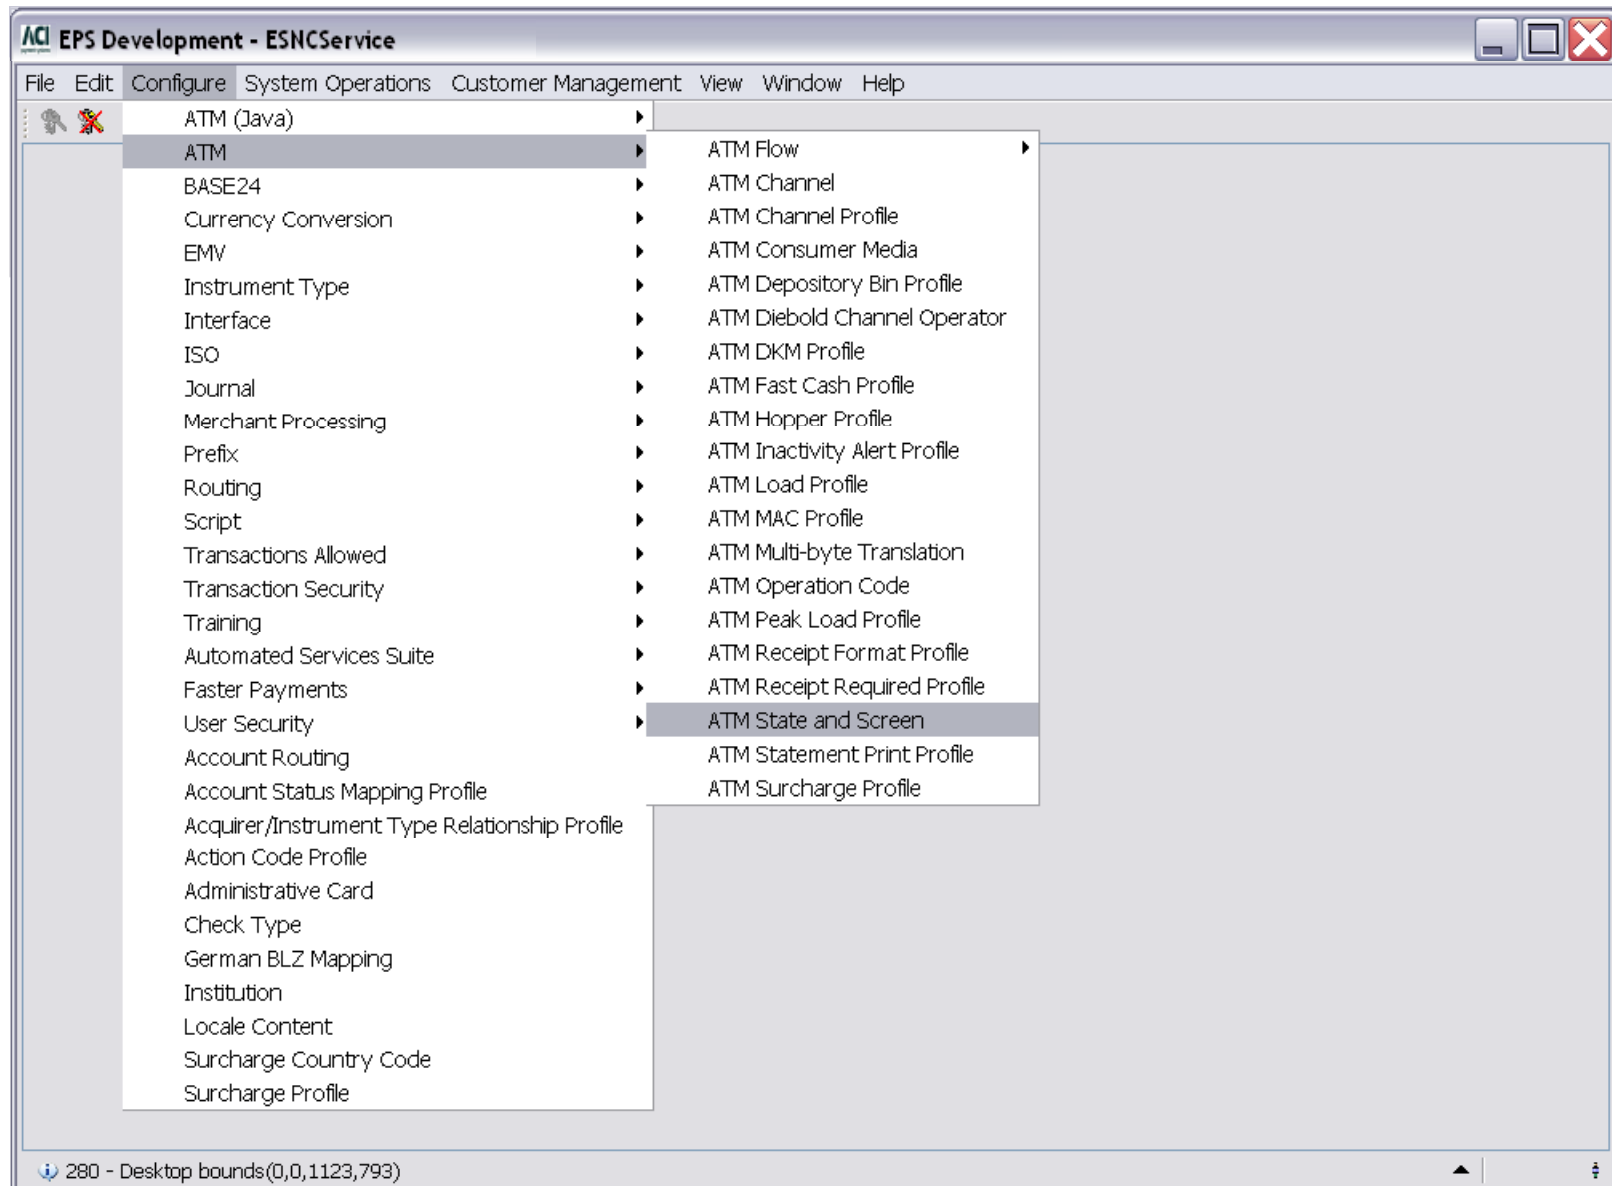

ATM State and Screen Configuration

The screenshot displays the 'EPS Development - ESNCService' application window. The main window is titled 'ATM State and Screen Configuration - Diebold 912-000 Approved'. It features a menu bar with 'File', 'Edit', 'Configure', 'System Operations', 'Customer Management', 'View', 'Window', and 'Help'. Below the menu bar is a toolbar with various icons. The main configuration area includes a 'Device Type' dropdown set to 'Diebold 912', a 'Load Profile' dropdown set to 'CNFG1000', and an 'Action Code' dropdown set to '000 Approved'. A section titled 'Order of ATM Actions for States and Screens' contains a table with the following data:

	Evaluation Order	Action Description
	25	Approved, Balance Inquiry
	26	Approved, Balance Inquiry
	27	Approved, Transfer
	28	Approved, Payment
	29	Approved, PIN Change

Below this table are three tabs: 'Conditions List', 'Function/Screen Formatting', and 'Enhanced Function Formatting'. The 'Conditions List' tab is active, showing a list of conditions on the left: 'CondTranEmv', 'CondTranBalInq', 'CondBalLocScrnOnly', 'CondBalTypAcct1Ledg', and 'CondBalTypAcct1Avail'. On the right, the 'Next State' section shows a 'Number' field with '064' and a 'Description' field with 'Balance Inquiry, Display screen only, Ledger and available'. Below this, the 'Media Action Description' is set to 'No media action required'. There are four checkboxes: 'Suppress Receipt Print Indicator' (checked), 'Capture Card Indicator' (unchecked), 'Include Audio Response Data' (unchecked), and 'Include Dispense Count Data' (unchecked). At the bottom, a status bar shows '2 - Successful view of Diebold 912-000 Approved.' and '280 - Desktop bounds(0,0,1123,793)'.

Enables you to specify the next state and screen to format to the cardholder based on each action code coming from the issuer. States and screens are mapped to action codes.

ATM State and Screen Configuration

The screenshot shows the ACI EPS Development - ESNCService application. The main window is titled "ATM State and Screen Configuration - Diebold 912-000 Approved". It features a menu bar (File, Edit, Configure, System Operations, Customer Management, View, Window, Help) and a toolbar. The configuration area includes dropdowns for Device Type (Diebold 912), Load Profile (CNFG1000), and Action Code (000 Approved). Below these is a section for "Order of ATM Actions for States and Screens" with a table of evaluation orders and action descriptions. At the bottom, there are tabs for "Conditions List", "Function/Screen Formatting" (which is selected), and "Enhanced Function Formatting". The "Function/Screen Formatting" tab contains a table with Function ID, Screen Number, and Task Name. A status bar at the bottom shows a message: "2 - Successful view of Diebold 912-000 Approved."

Evaluation Order	Action Description
25	Approved, Balance Inquiry
26	Approved, Balance Inquiry
27	Approved, Transfer
28	Approved, Payment
29	Approved, PIN Change

Function ID	Screen Number	Task Name
;	000	
5	064	ScrnFrmBalingAmts

2 - Successful view of Diebold 912-000 Approved.

The Function/Screen Formatting Tab contains the screen number and screen formatting tasks.

ATM State and Screen Configuration

The screenshot shows the 'EPS Development - ESNCSERVICE' application window. The 'ATM State and Screen Configuration - Diebold 912-000 Approved' sub-window is active. It features a menu bar (File, Edit, Configure, System Operations, Customer Management, View, Window, Help) and a toolbar. The configuration area includes dropdowns for 'Device Type' (Diebold 912), 'Load Profile' (CNFG1000), and 'Action Code' (000 Approved). Below these is a section titled 'Order of ATM Actions for States and Screens' containing a table with evaluation orders and action descriptions. At the bottom, there are tabs for 'Conditions List', 'Function/Screen Formatting', and 'Enhanced Function Formatting', with the latter being the active tab. The status bar at the bottom indicates '280 - Desktop bounds(0,0,1123,793)'.


Evaluation Order	Action Description
25	Approved, Balance Inquiry
26	Approved, Balance Inquiry
27	Approved, Transfer
28	Approved, Payment
29	Approved, PIN Change

Setup Task Name	Parameter
-----------------	-----------


280 - Desktop bounds(0,0,1123,793)

Contains setup task names used to produce complex content for the message. Usage includes Diebold's Enhanced Function Data, NCR's Virtual Controller Data and Wincor's equivalent.


ATM Statement Print Profile

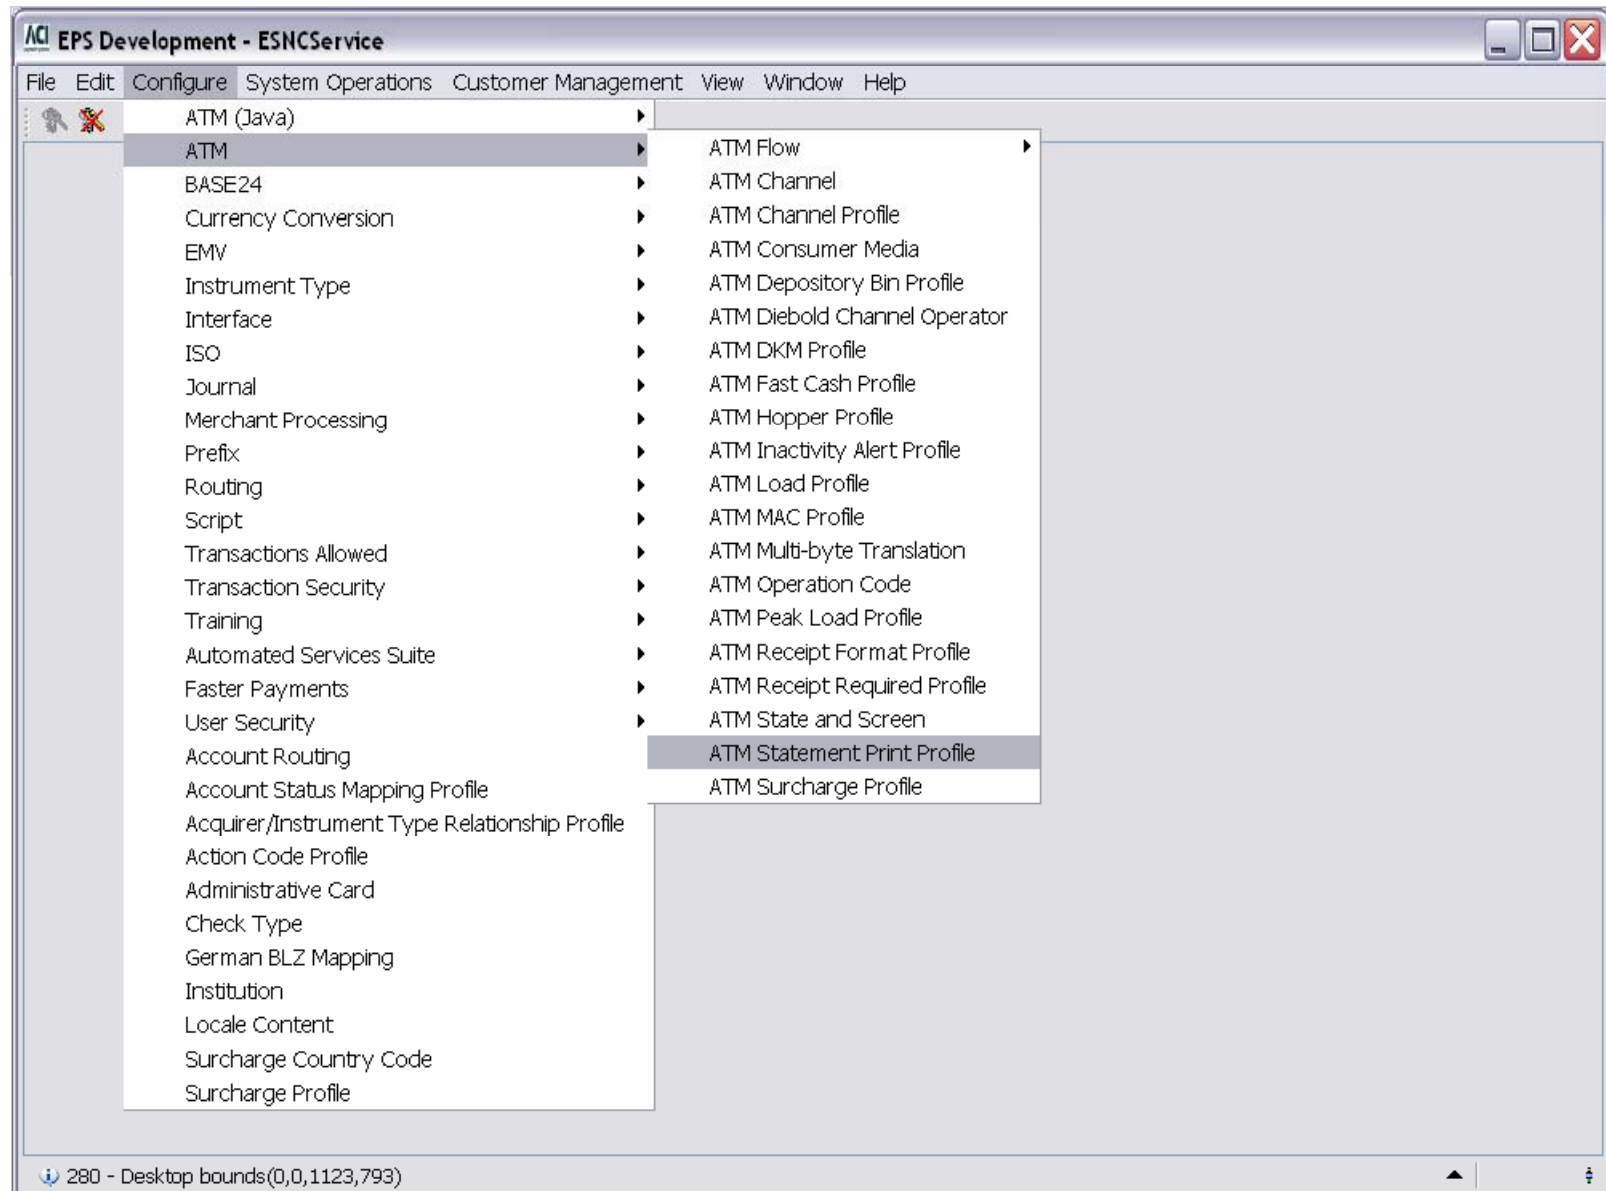


ATM Statement Print Profile

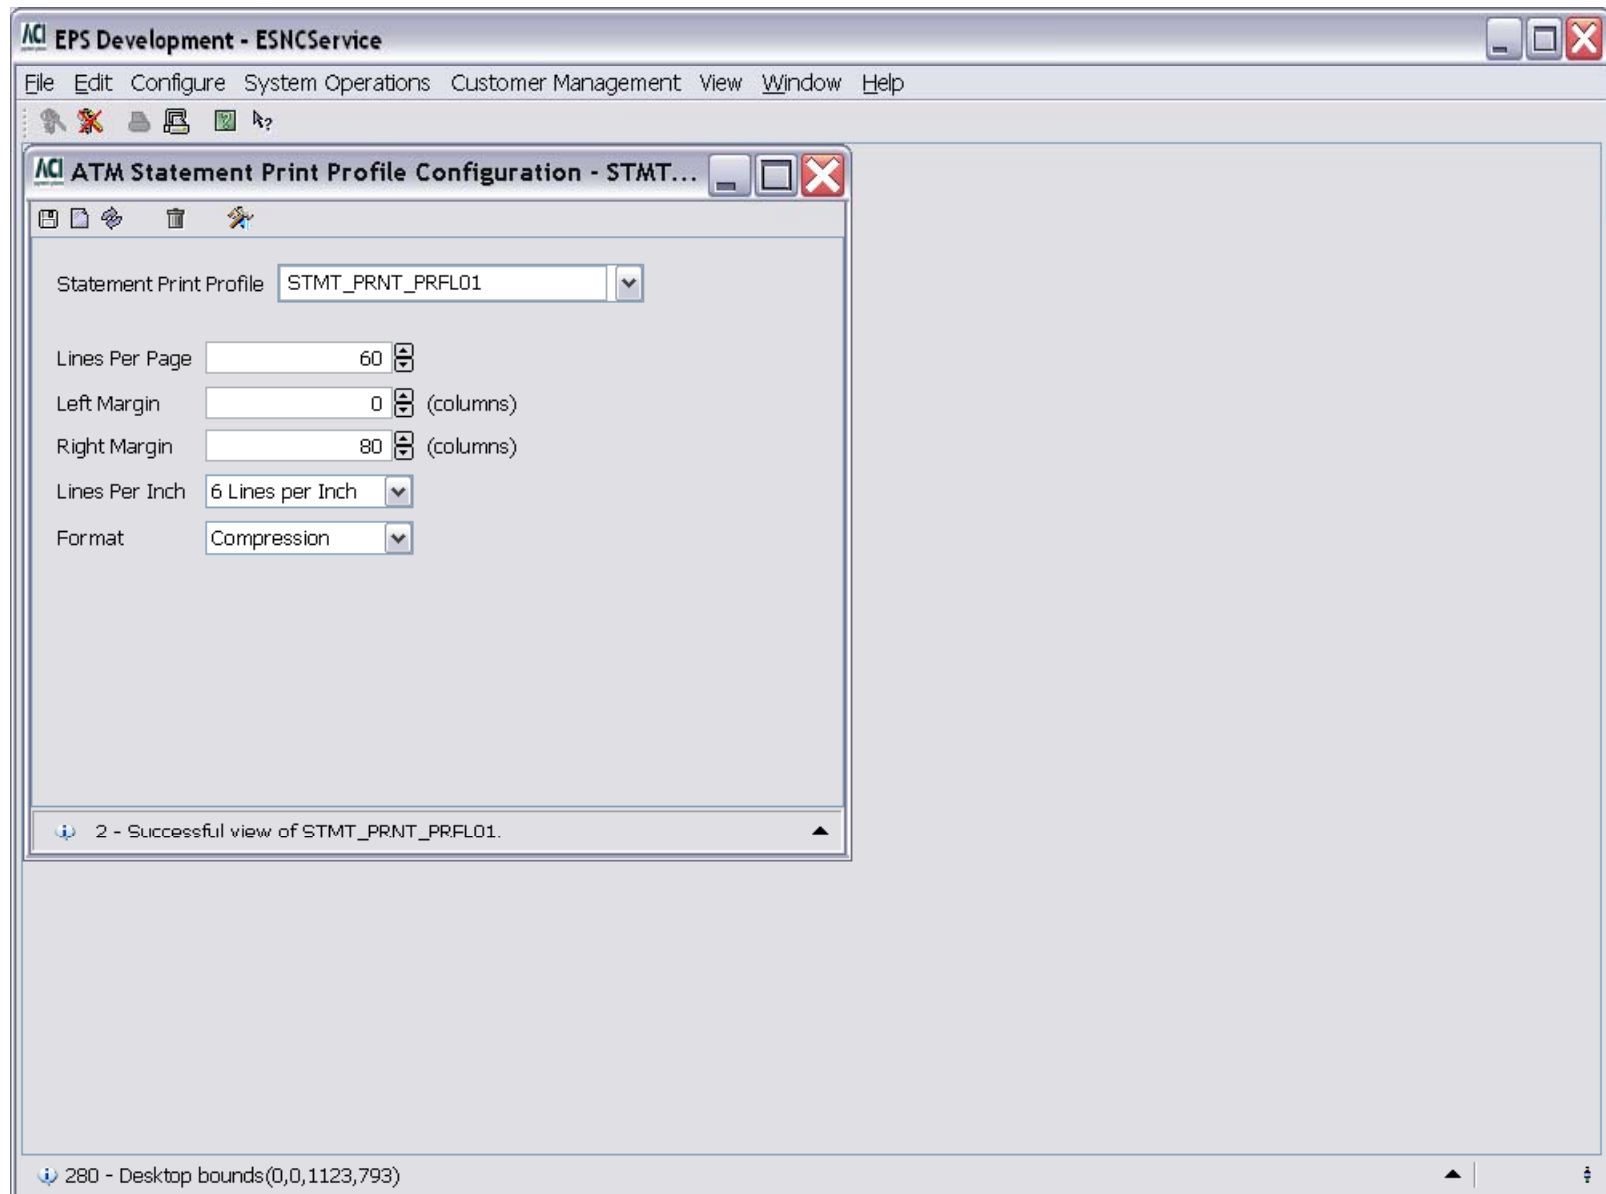

ATM Surcharge Profile Configuration

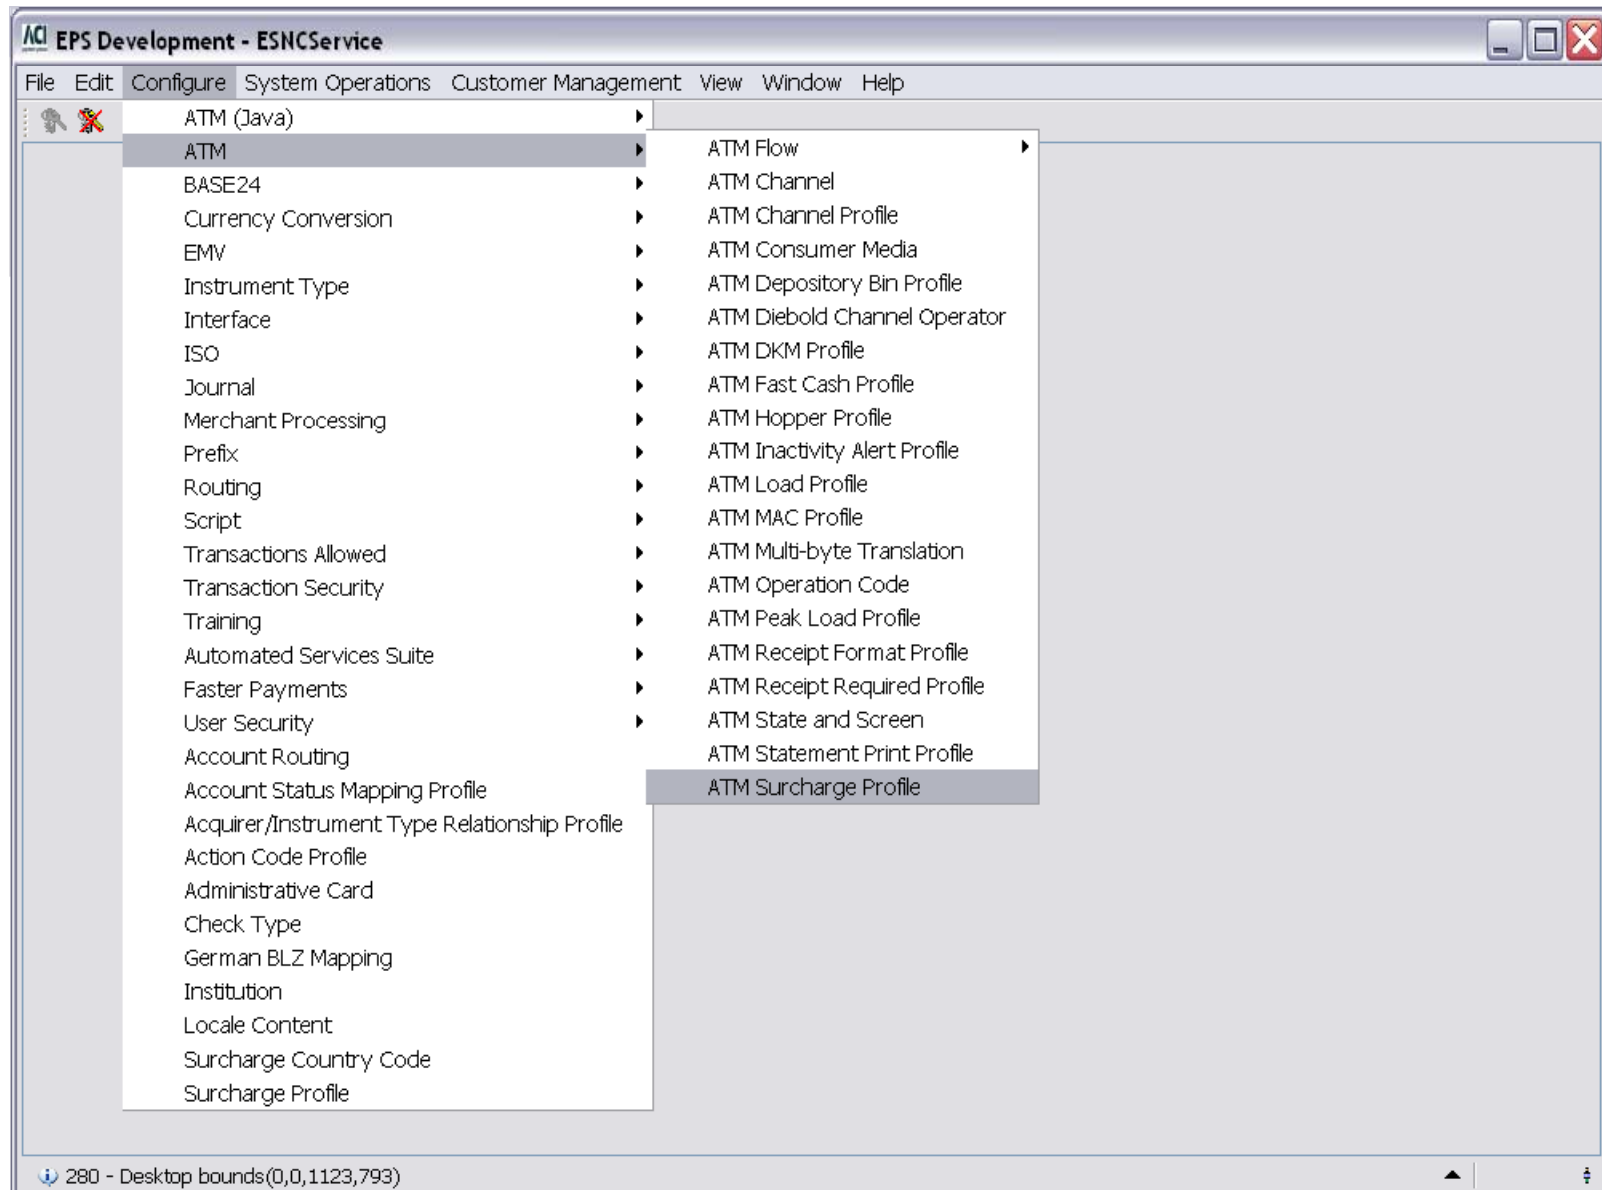

ATM Surcharge Profile Configuration

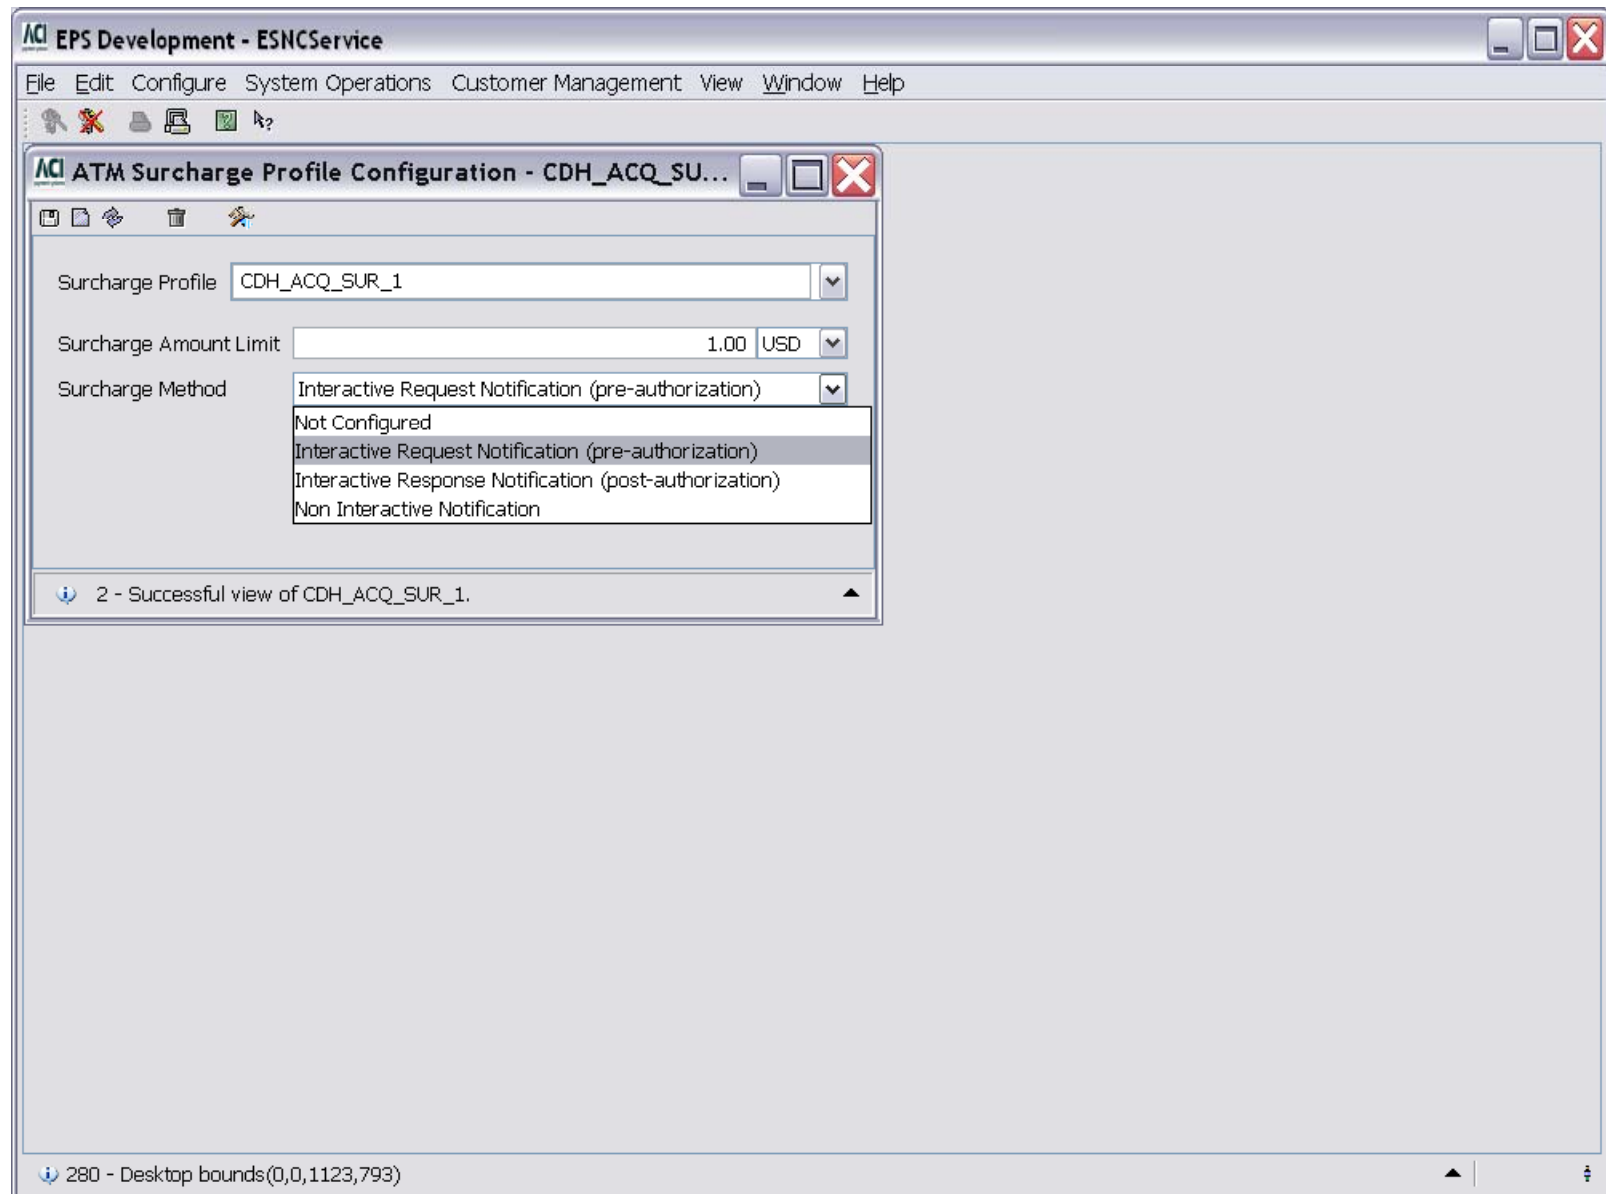

Lab Exercise

BASE24-eps ATM C++ Device Configuration Lab

Lab 8





MEETS THE CHALLENGE OF CHANGE