

EPA Management System

EPA Management System (Administrator)

1. Add New Site

To add a new site on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for viewing active sites:

- Select the **Flameproof Management** tile.
- Open the sidebar and select **Manage FMM**.
- This loads a page that displays all admin functionality, select the **Manage Sites** tile.
- Select the **Active Sites** tile. This opens the following popup to show all active sites:

Add New Site

New Site Name

Insert Site Name

Add Site

2. View All Active Sites

To view all active sites on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for adding a new site:

- Select the **Flameproof Management** tile.
- Open the sidebar and select **Manage FMM**.
- This loads a page that displays all admin functionality.
- Select the **Register New Site** Tile, this opens the following popup.
- Populate the required information and select **Add Site**.

Manage Active Sites

Search site

Site	Action
Site 1	
Site 2	
Site 3	
Site 4	

EPA Management System (Administrator)

3. Modify Active Site

To modify an active site on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for modifying an active site:

- Navigate to the **Active Sites**.
- Locate the site that must be modified and select the **Edit Icon** in the action column for that site.
- This opens the following popup.
- Populate the required fields and select **Rename**.

Rename Site

New Site Name

Site 1

Rename

4. Delete Active Site

To delete an active site on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for deleting an active site:

- Navigate to the **Active Sites**.
- Locate the site that must be deleted and select the **Trash Icon** in the action column for that site.
- This opens the following confirmation popup.
- Select **Delete**.

Delete Site

Do you want to delete the following site?

Site 1

Delete

Keep

EPA Management System (Administrator)

5. View Deleted Sites

To view all deleted sites on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for viewing deleted sites:

- Select the **Flameproof Management** tile.
- Open the sidebar and select **Manage FMM**.
- Select the **Manage Sites** tile.
- Select the **Deleted Sites** tile. This opens the following popup to show all deleted sites:

Manage Deleted Sites ×

🔍

Site	Action
No sites found.	

6. Restore Deleted Sites

To restore a deleted site on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for restoring a deleted site:

- Navigate to the **Deleted Sites**.
- Locate the site that must be restored and select the **Restore Icon** in the action column for that site.
- This opens the following confirmation popup.
- Select the relevant restore type, **Restoring Site Only** will only restore the site, **Restoring Certificates** will restore the site and all its certificates.

Restore Site Certificates ×

This site might has certificates linked to it. Would you like to restore all certificates linked to this site?

Restore Site Only

Restore Certificates

EPA Management System (Administrator)

7. Permanently Remove Deleted Sites

To delete a deleted site on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for deleting a deleted site:

- Navigate to the **Deleted Sites**.
- Locate the site that must be deleted and select the **Trash Icon** in the action column for that site.
- This opens the following confirmation popup.
- Select **Delete**.

Delete Site

Do you want to delete the following site, as well as all certificates linked to it?

Site 4

Delete

Keep

8. Register Multiple Assets

To register multiple assets on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for registering multiple assets:

- Select the **Flameproof Management** tile.
- Open the sidebar and select **Manage FMM**.
- Select the **Register Multiple Assets** tile.
- The following popup will appear, populate and attach the **Site Asset List**.
- Select **Submit**.

Register Multiple Assets

Upload the Site Asset List

No File Selected

Select Excel Document

Submit


EPA Management System (Administrator)

9. Upload Multiple Certificates

To upload multiple certificates on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for uploading multiple certificates:

- Select the **Flameproof Management** tile.
- Open the sidebar and select **Manage FMM**.
- Select the **Upload Batch Certificates** tile.
- The following popup will appear, populate and attach the **Site Certificate List**, and attach all certificates.
- Select **Submit**.

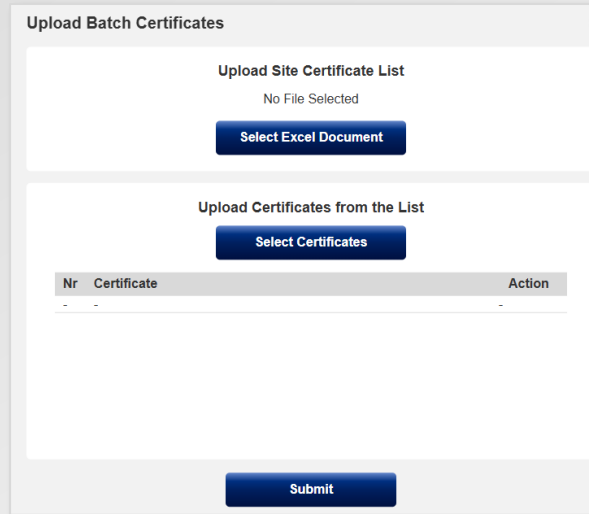


The screenshot shows a modal window titled "Upload Batch Certificates". It contains two main sections. The first section, "Upload Site Certificate List", shows "No File Selected" and a "Select Excel Document" button. The second section, "Upload Certificates from the List", features a "Select Certificates" button and a table with columns "Nr", "Certificate", and "Action". The table is currently empty. A "Submit" button is located at the bottom of the modal.

10. Manage Asset Types

To manage asset types on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for managing asset types:

- Navigate to the **Manage FMM** and select the **Manage Assets** Tile.
- Select the relevant **Asset Type** tile.
- Locate the asset that must be modified and select the **Edit Icon** in the action column to open the popup.
- Select all required components and select **Submit**.

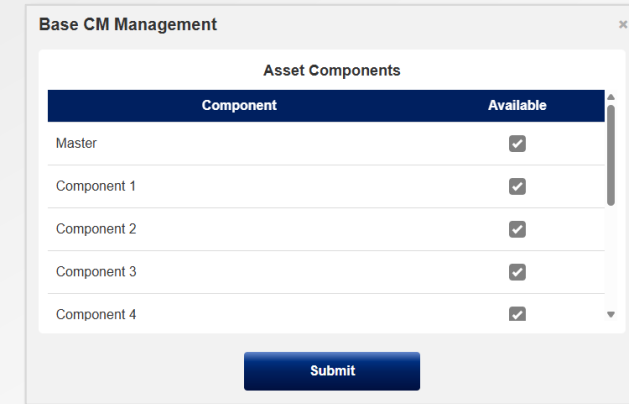

The screenshot shows a modal window titled "Base CM Management". It contains a table titled "Asset Components" with two columns: "Component" and "Available". The table lists five components: "Master", "Component 1", "Component 2", "Component 3", and "Component 4". Each component has a checked checkbox in the "Available" column. A "Submit" button is located at the bottom of the modal.

Component	Available
Master	☒
Component 1	☒
Component 2	☒
Component 3	☒
Component 4	☒


EPA Management System (Administrator)

11. View Certification Bodies

To view certification bodies on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for viewing certification bodies:

- Navigate to the **Manage FMM** and select the **Manage Certification Bodies** Tile.
- The following table will be shown, this table shows all the certification bodies in the system.

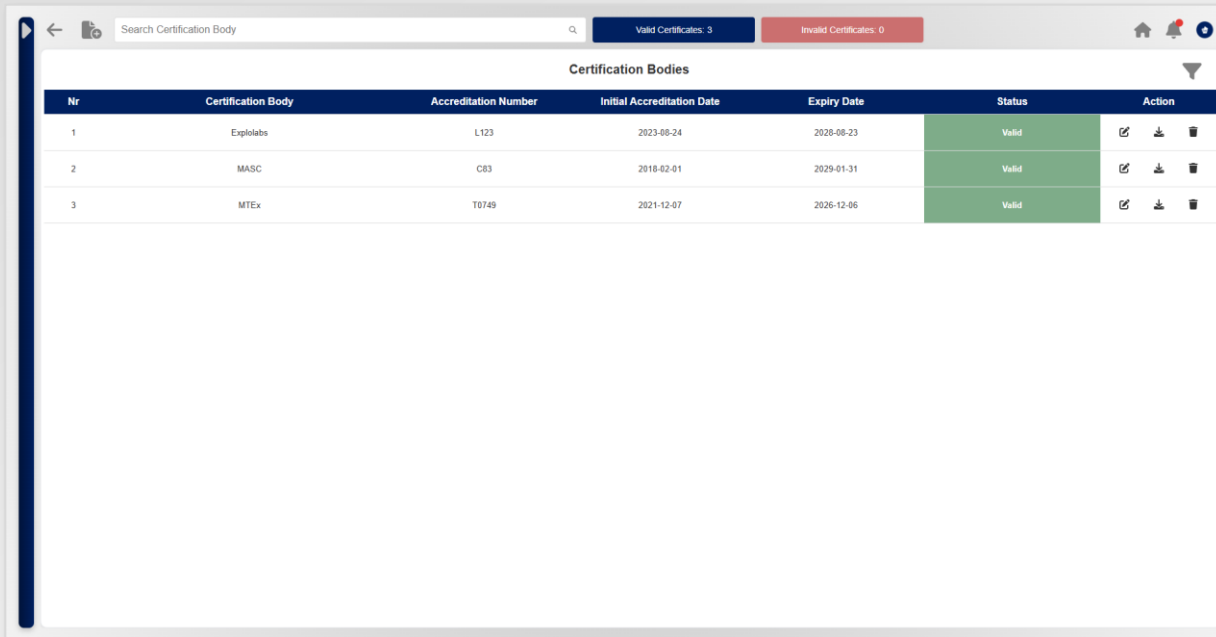

The screenshot shows the 'Certification Bodies' table in the EPA Management System. The table has columns for Nr, Certification Body, Accreditation Number, Initial Accreditation Date, Expiry Date, Status, and Action. There are three rows of data, all with a 'Valid' status. The interface includes a search bar at the top and buttons for 'Valid Certificates: 3' and 'Invalid Certificates: 0'.


Nr	Certification Body	Accreditation Number	Initial Accreditation Date	Expiry Date	Status	Action
1	Explolebs	L123	2023-08-24	2028-08-23	Valid	  
2	MASC	C83	2018-02-01	2029-01-31	Valid	  
3	MTEs	T0749	2021-12-07	2026-12-06	Valid	  

12. Download Certification Body Certificate

To download a certification body certificate on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for download certification body certificate:

- Navigate to **Manage Certification Bodies** view.
- Locate the required certification body and select the **Download Icon** in the action column.
- The following popup will appear.
- Select **Download**.

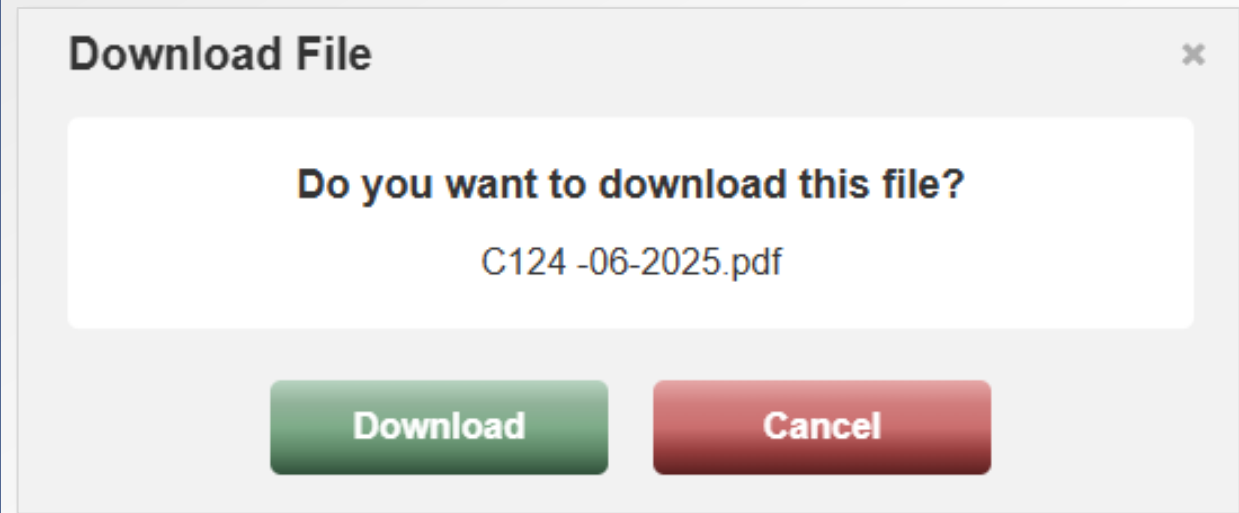

EPA Management System (Administrator)

13. Add Certification Body

To add a new certification body on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for adding a new certification body:

- Navigate to **Manage Certification Bodies** view.
- Select the **Document Icon with a plus** on the top left side of the screen. This will open a popup.
- Populate all required information.
- Select **Submit**.

Add Certification Body

No Accreditation Certification Selected

Choose Accreditation Certification

Certification Body Information

Certification Body *

Insert Certification Body

Accreditation Number *

Insert Accreditation Number

Initial Accreditation Date *

Select Initial Accreditation Date

Expiry Date *

Select Expiry Date

Submit

14. Modify Certification Body

To modify a certification body on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for modifying a certification body:

- Navigate to **Manage Certification Bodies** view.
- Locate the required certification body and select the **Edit Icon** in the action column.
- The following popup will appear, populate required information.
- Select **Submit**.

Update Certification Body

C83-09-2025.pdf

Choose Accreditation Certification

Certification Body Information

Certification Body *

MASC

Accreditation Number *

C83

Initial Accreditation Date *

2018-02-01

Expiry Date *

2029-01-31

Submit


EPA Management System (Administrator)

15. Delete Certification Body

To delete a certification body on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for deleting a certification body:

- Navigate to **Manage Certification Bodies** view.
- Locate the required certification body and select the **Trash Icon** in the action column.
- The following popup will appear.
- Select **Delete**.

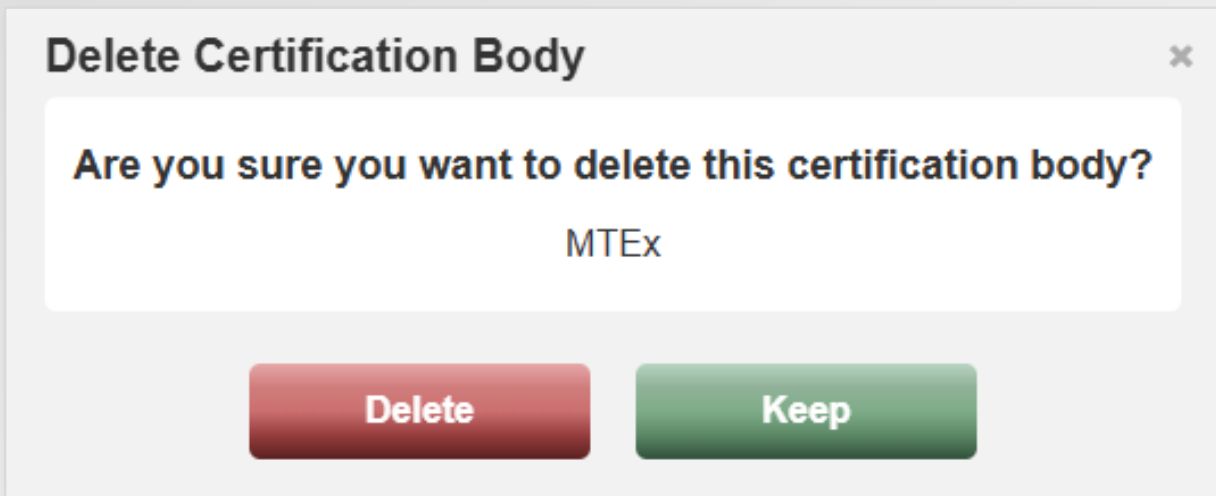


16. View Deleted Certification Bodies

To view deleted certification bodies on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for viewing deleted certification bodies:

- Navigate to **Manage Certification Bodies** view.
- Open the sidebar.
- Select **Deleted Certification Bodies**.
- The following table will be displayed showing all the deleted certification bodies.

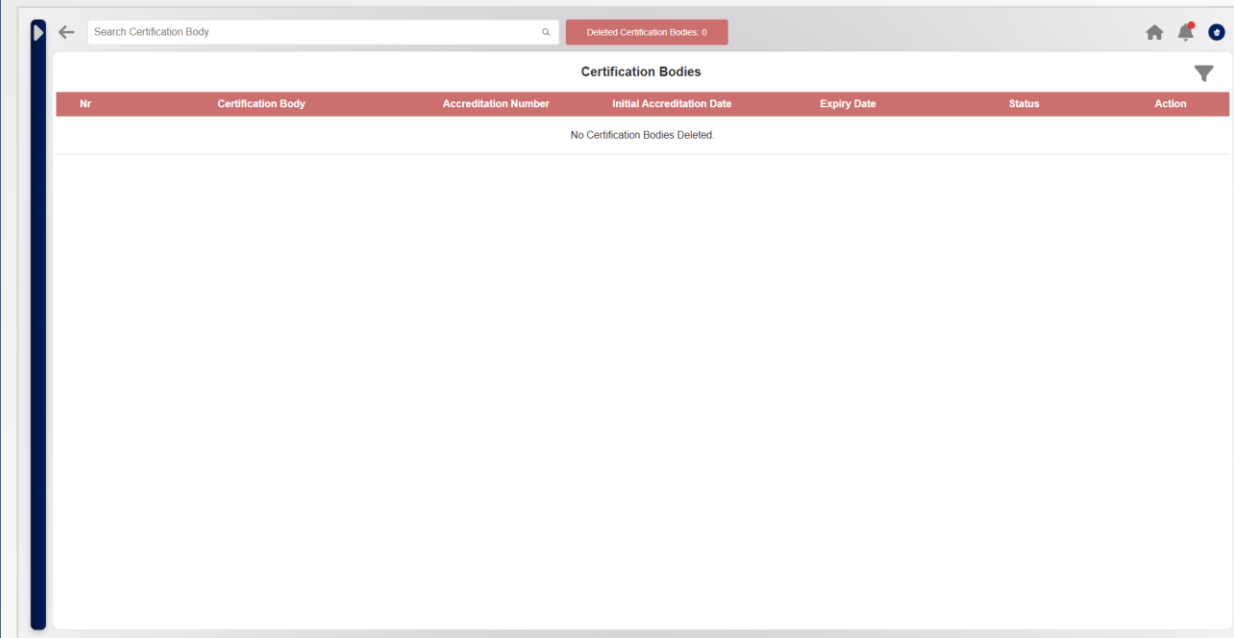

EPA Management System (Administrator)

17. Restore Deleted Certification Bodies

To restore a deleted certification body on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for restoring a deleted certification body:

- Navigate to the **Deleted Certification Bodies**.
- Locate the certification body that must be restored and select the **Restore Icon** in the action column.
- The following popup will appear.
- Select **Restore**.

Restore Certification Body



Are you sure you want to restore this certification body from trash?

MASC

Restore

Cancel

18. Permanently Delete Certification Body

To delete a deleted certification body on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for deleting a deleted certification body:

- Navigate to the **Deleted Certification Bodies**.
- Locate the certification body that must be deleted and select the **Trash Icon** in the action column.
- The following popup will appear.
- Select **Delete**.

Delete Certification Body



Are you sure you want to delete this certification body from trash?

MTE_x

Delete

Keep


EPA Management System (Administrator)

19. Upload Single Certificate

To upload a single certificate on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for registering a single asset:

- Select the **Flameproof Management** tile.
- Select the **Table Icon** on the top left side of the screen. This opens the following popup.
- Populate all required information.
- Select **Register Asset**.

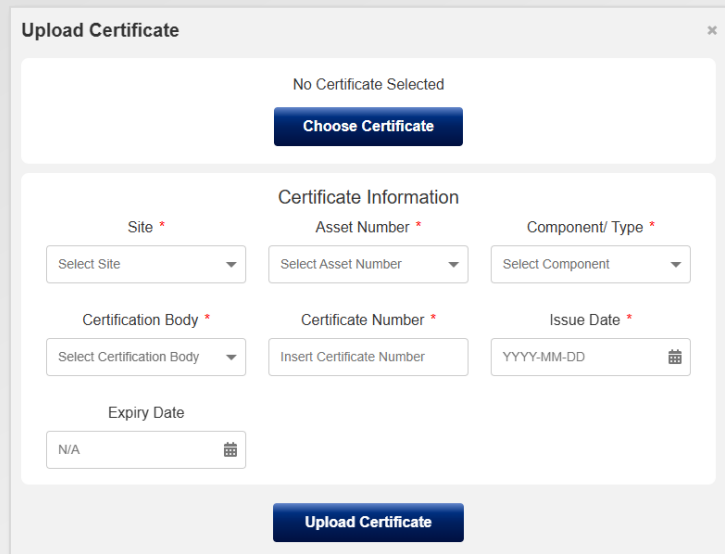

The 'Upload Certificate' popup form contains the following elements:


- A header section with the text 'No Certificate Selected' and a blue 'Choose Certificate' button.
- A 'Certificate Information' section with the following fields:
 - Site ***: A dropdown menu with 'Select Site' as the placeholder.
 - Asset Number ***: A dropdown menu with 'Select Asset Number' as the placeholder.
 - Component/ Type ***: A dropdown menu with 'Select Component' as the placeholder.
 - Certification Body ***: A dropdown menu with 'Select Certification Body' as the placeholder.
 - Certificate Number ***: A text input field with the placeholder 'Insert Certificate Number'.
 - Issue Date ***: A date picker field with the placeholder 'YYYY-MM-DD'.
 - Expiry Date**: A date picker field with the placeholder 'N/A'.
- A blue 'Upload Certificate' button at the bottom.

20. Register Single Asset

To register a single asset on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for uploading a single certificate:

- Select the **Flameproof Management** tile.
- Select the **Document Icon with a plus** on the top left side of the screen. This opens the following popup.
- Populate all required information.
- Select **Upload Certificate**.

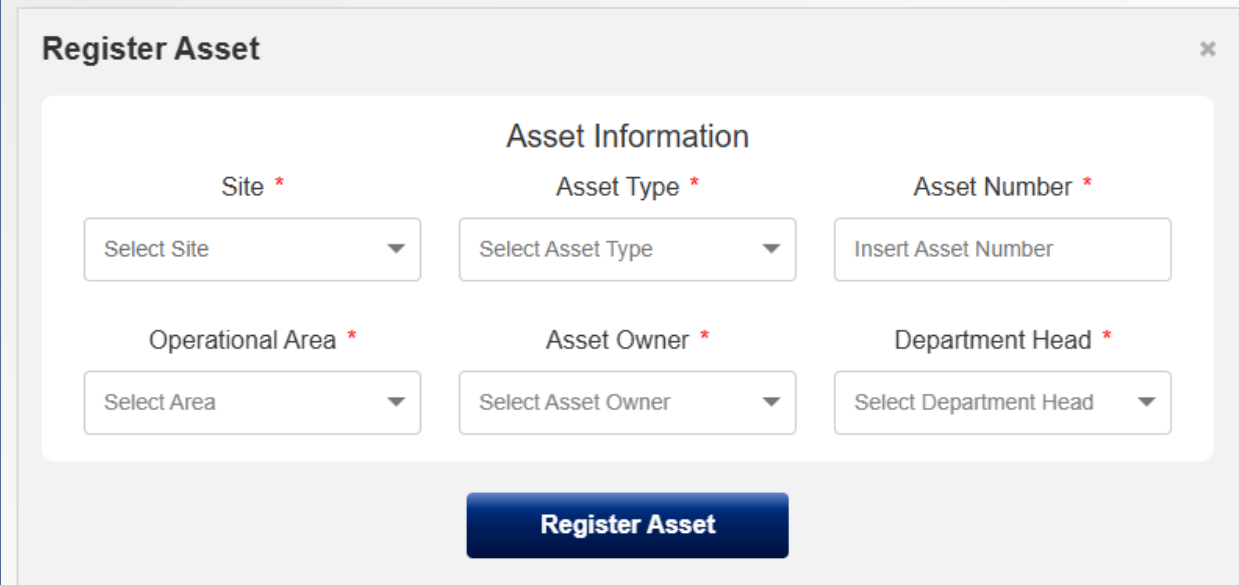

The 'Register Asset' popup form contains the following elements:

- A header section with the title 'Register Asset' and a close button (X).
- An 'Asset Information' section with the following fields:
 - Site ***: A dropdown menu with 'Select Site' as the placeholder.
 - Asset Type ***: A dropdown menu with 'Select Asset Type' as the placeholder.
 - Asset Number ***: A text input field with the placeholder 'Insert Asset Number'.
 - Operational Area ***: A dropdown menu with 'Select Area' as the placeholder.
 - Asset Owner ***: A dropdown menu with 'Select Asset Owner' as the placeholder.
 - Department Head ***: A dropdown menu with 'Select Department Head' as the placeholder.
- A blue 'Register Asset' button at the bottom.


EPA Management System (Administrator)

21. Access and Download Certificates

To access or download certificates on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for accessing a certificate:

- Select the **Flameproof Management** tile.
- Select the **relevant site and asset type** for the certificate by selecting the correct tiles.
- This will show a table with all assets.
- Locate the required asset and select the row to show dropdown options, select **View Certificates**.

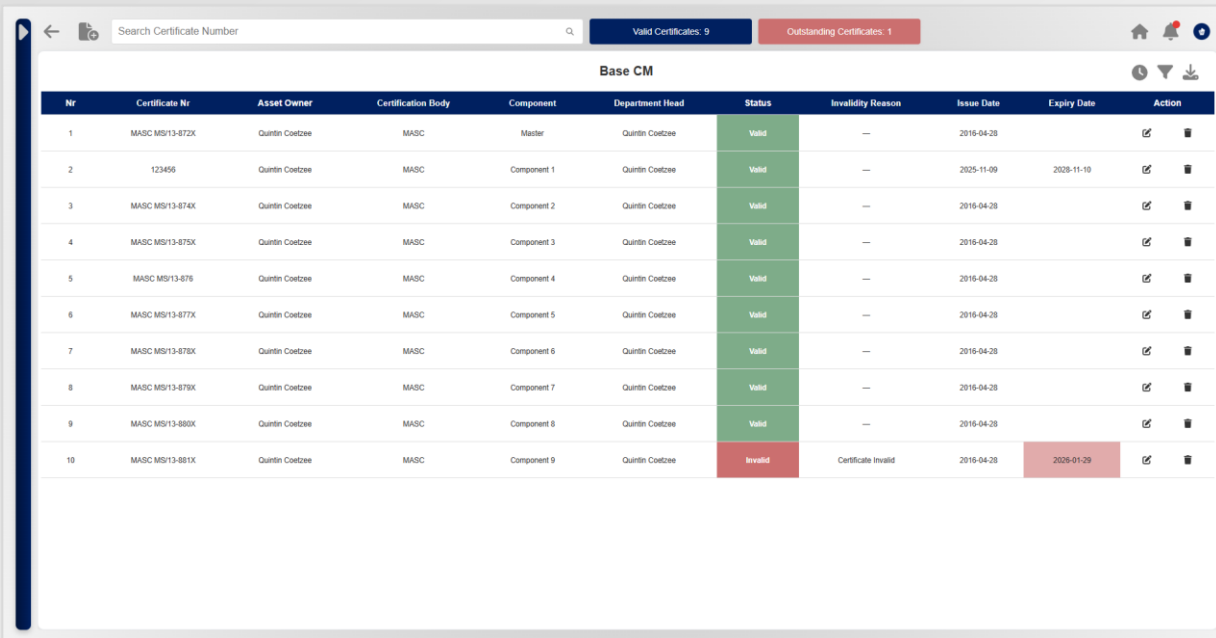

The screenshot shows the 'Base CM' interface with a search bar and two tabs: 'Valid Certificates: 9' and 'Outstanding Certificates: 1'. Below the tabs is a table with the following columns: Nr, Certificate Nr, Asset Owner, Certification Body, Component, Department Head, Status, Invalidity Reason, Issue Date, Expiry Date, and Action. The table contains 10 rows of data. The first 9 rows are 'Valid' and the 10th row is 'Invalid'.


Nr	Certificate Nr	Asset Owner	Certification Body	Component	Department Head	Status	Invalidity Reason	Issue Date	Expiry Date	Action
1	MASC MS/13-872X	Quintin Coetzee	MASC	Master	Quintin Coetzee	Valid	—	2019-04-28		 
2	123456	Quintin Coetzee	MASC	Component 1	Quintin Coetzee	Valid	—	2025-11-09	2028-11-10	 
3	MASC MS/13-874X	Quintin Coetzee	MASC	Component 2	Quintin Coetzee	Valid	—	2019-04-28		 
4	MASC MS/13-875X	Quintin Coetzee	MASC	Component 3	Quintin Coetzee	Valid	—	2019-04-28		 
5	MASC MS/13-876	Quintin Coetzee	MASC	Component 4	Quintin Coetzee	Valid	—	2019-04-28		 
6	MASC MS/13-877X	Quintin Coetzee	MASC	Component 5	Quintin Coetzee	Valid	—	2019-04-28		 
7	MASC MS/13-878X	Quintin Coetzee	MASC	Component 6	Quintin Coetzee	Valid	—	2019-04-28		 
8	MASC MS/13-879X	Quintin Coetzee	MASC	Component 7	Quintin Coetzee	Valid	—	2019-04-28		 
9	MASC MS/13-880X	Quintin Coetzee	MASC	Component 8	Quintin Coetzee	Valid	—	2019-04-28		 
10	MASC MS/13-881X	Quintin Coetzee	MASC	Component 9	Quintin Coetzee	Invalid	Certificate Invalid	2019-04-28	2028-01-29	 

22. Update Component

To update component for an asset on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for updating a component:

- Navigate to the **relevant asset type**.
- Locate the required asset and select the, select **Update Components**.
- This displays a table of all components for the asset, locate the **relevant component** and select the **Edit Icon** to open the following popup.
- Populate the required values and select the **Submit**.

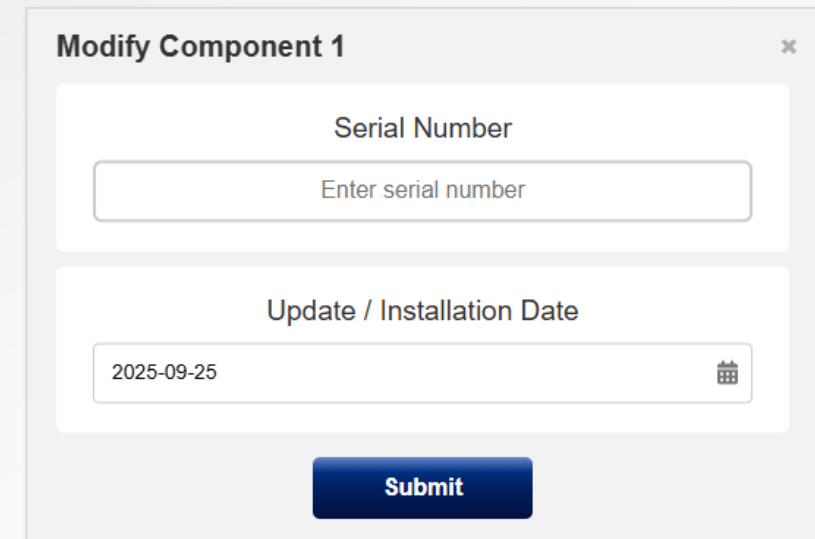

The screenshot shows a 'Modify Component 1' popup form. It has two input fields: 'Serial Number' with a placeholder 'Enter serial number' and 'Update / Installation Date' with a date picker showing '2025-09-25'. At the bottom is a 'Submit' button.

Modify Component 1

Serial Number

Update / Installation Date

Submit

EPA Management System (Administrator)

23. Replace Certificates

To replace a certificate on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for replacing a certificate:

- Navigate to the **required site, asset type and asset** in the system.
- Locate the required certificate and select the row of the certificate. This shows a dropdown list of options, select **Replace Certificate**.
- Populate all required values and select **Submit**.

Replace Certificate

Chosen Certificate

Certification Authorities Code Signing V0.1 (10.11.2025)

Select New Certificate *

No Certificate Selected

Choose Certificate

Certification Body *

MASC

Submit

24. View Certificate Version History

To view the version history of a certificate on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for viewing version history of a certificate:

- Navigate to the **required site, asset type and asset** in the system.
- Locate the required certificate and select the row of the certificate. This shows a dropdown list of options, select **Version History**.
- The following table will be displayed.

Version History

Nr	Name	Version	Certification Body	Certificate Number	Issue Date	Date Replaced	Action
1	Component Flameproof Enclosure - Certificate General (Example)	1	MASC	MASC MS/13-874X	2016-04-28	-	


EPA Management System (Administrator)

25. Access Digital Warehouse

To access the digital warehouse on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for accessing the digital warehouse:

- Select the **Flameproof Management** tile.
- Select the **relevant site** for the digital warehouse.
- Select the **Digital Warehouse** tile.
- This shows the table below.

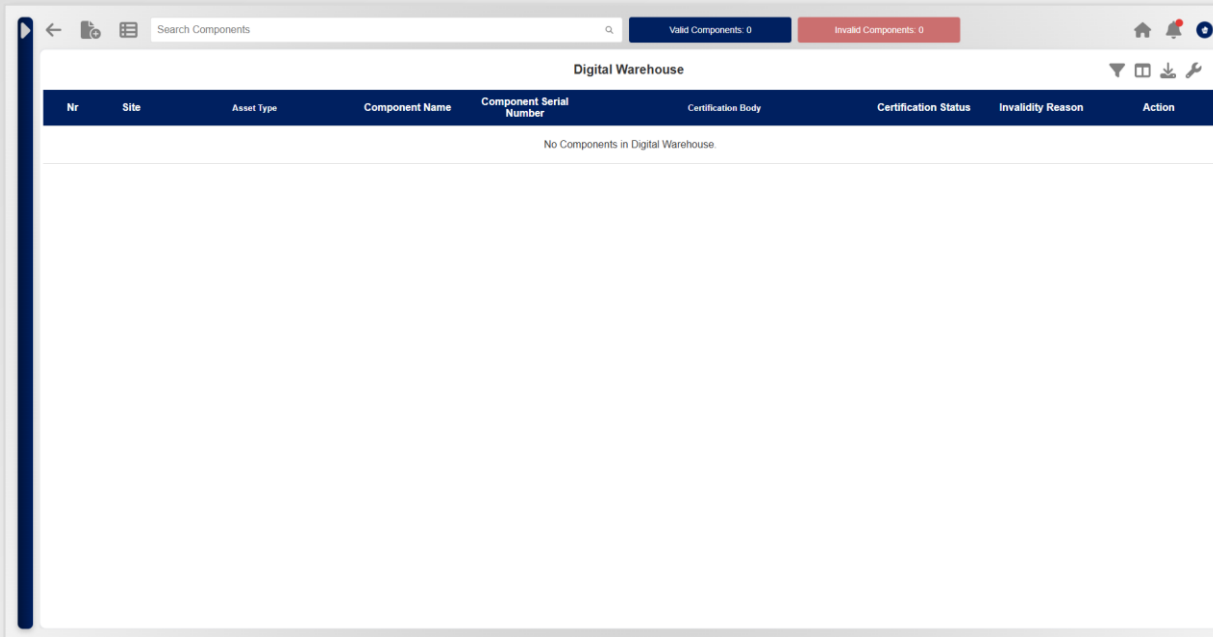

The screenshot shows a web application interface for the Digital Warehouse. At the top, there is a search bar labeled 'Search Components' and two status indicators: 'Valid Components: 0' and 'Invalid Components: 0'. Below this is a table titled 'Digital Warehouse'. The table has a dark blue header with the following columns: 'Nr', 'Site', 'Asset Type', 'Component Name', 'Component Serial Number', 'Certification Body', 'Certification Status', 'Invalidity Reason', and 'Action'. The table body is empty, and a message 'No Components in Digital Warehouse' is displayed below the header.


Nr	Site	Asset Type	Component Name	Component Serial Number	Certification Body	Certification Status	Invalidity Reason	Action
No Components in Digital Warehouse								

26. Fetch Certificate from Digital Warehouse

To fetch a certificate from the digital warehouse on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for fetching a certificate:

- Navigate to the **required site, asset type and asset** in the system.
- Locate the **required certificate** and select the row of the certificate. This shows a dropdown list of options, select **Fetch from Digital Warehouse**.
- The popup will be displayed. Select the **relevant certificate** that must be used.

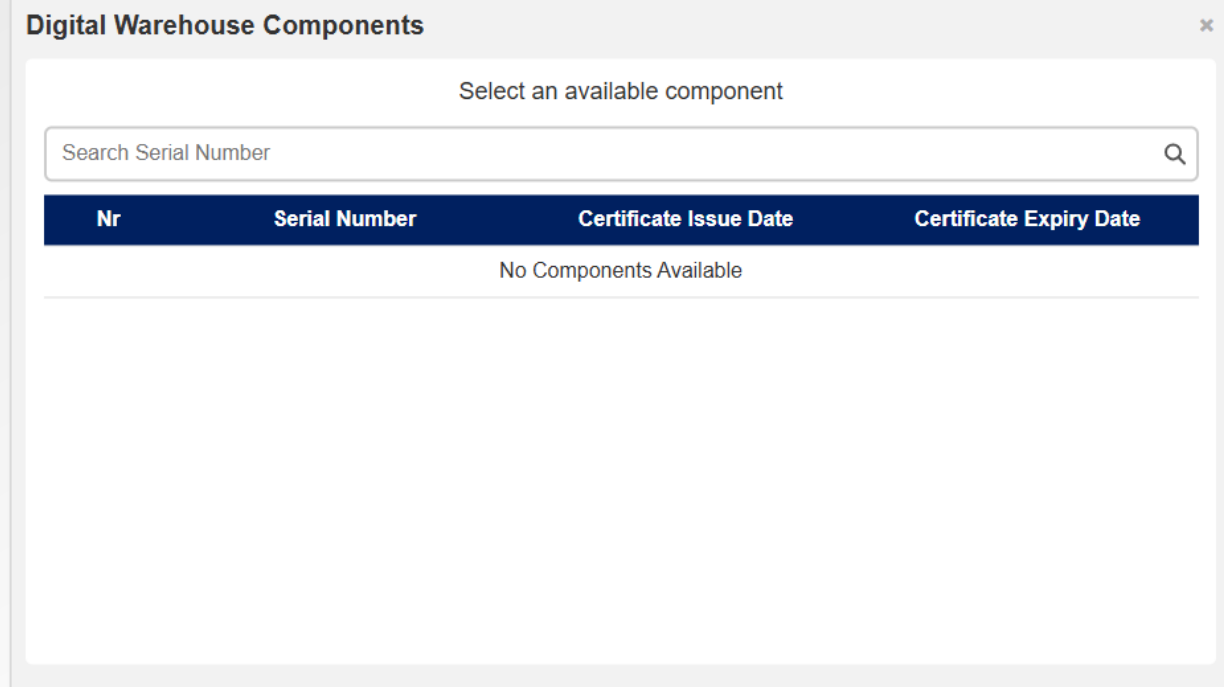

The screenshot shows a popup window titled 'Digital Warehouse Components'. At the top, there is a search bar labeled 'Search Serial Number' and a close button. Below the search bar is a table with the following columns: 'Nr', 'Serial Number', 'Certificate Issue Date', and 'Certificate Expiry Date'. The table body is empty, and a message 'No Components Available' is displayed below the header.

Nr	Serial Number	Certificate Issue Date	Certificate Expiry Date
No Components Available			


EPA Management System (Administrator)

27. Access Components Awaiting Repair

To access components awaiting repair on the flameproof management, navigate to the EPAMS on the home page and follow the steps below:

Steps for accessing the components awaiting repair:

- Navigate to the **Digital Warehouse**.
- Select the **Tool Icon** on the top right of the table.
- This opens a new table that displays all components that are currently awaiting repair.

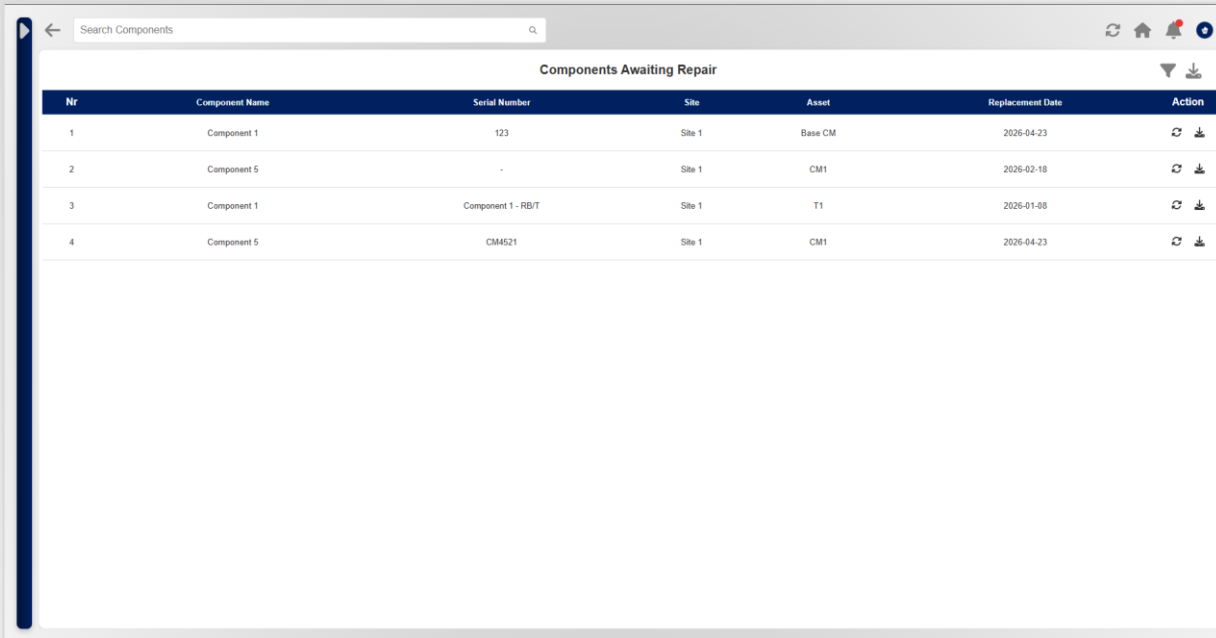

Components Awaiting Repair						
Nr	Component Name	Serial Number	Site	Asset	Replacement Date	Action
1	Component 1	123	Site 1	Base CM	2026-04-23	 
2	Component 5	-	Site 1	CM1	2026-02-18	 
3	Component 1	Component 1 - RB/T	Site 1	T1	2026-01-08	 
4	Component 5	CM4521	Site 1	CM1	2026-04-23	 



THANK YOU.