RPMGLOBAL

AMT - Quick Watch

Training Manual

Copyright © 2024 RPM Software Pty Ltd. All Rights Reserved



RPM SOFTWARE – ASSET MANAGEMENT

Table of Contents

Introduction to AMT **4**

Training Workshops **6**

1. Quick Buttons 6
2. KPIs 7
3. Trigger Quick Watch 8

Preface

The training workshops are developed to supplement instructor-led training. This guide is constructed in a way that teaches students the key functionality of the application through practical hands-on workshops. Each workshop details tasks that the student is required to complete. The workshops build on each other to help ensure a comprehensive understanding of the application is achieved at the completion of the course. Space is provided at the end of each workshop for learning checks and student notes.

Symbol Library



Note

A note for participants about the task.



Important Reminder

An important reminder for the participant about the task.



Learning Check


Check your understanding on the workshop and ask any related questions.

Version

AMT version	8.26

Introduction to AMT

AMT is a comprehensive asset management system consists of integrated modules as depicted below. The functionality covered by this training manual is identified by the Daily Control section in the diagram.

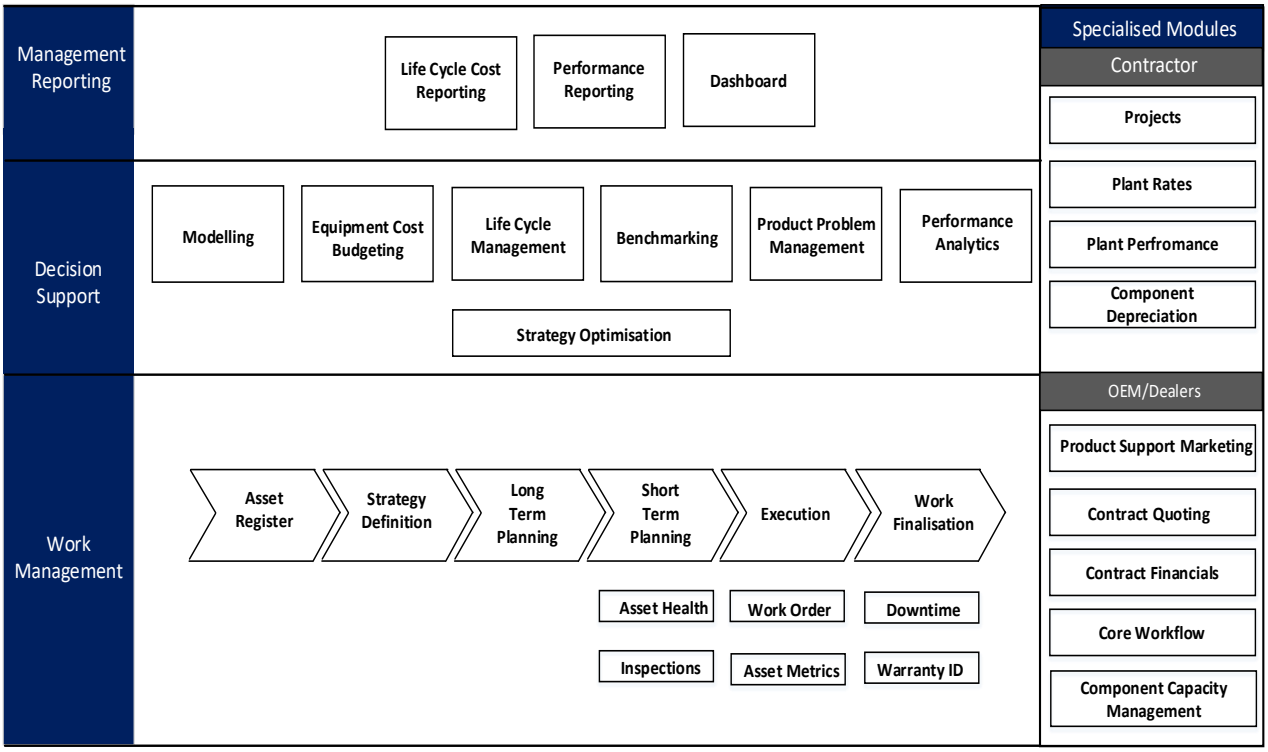

For more information on the modules, see the AMT Functionality presentation.

OVERVIEW OF QUICK WATCH

Quick Watch provides a real-time view of performance indicators to help identify areas that need attention. You can configure Quick Watch items to continually monitor important KPIs.

Navigate to **Main Menu > Home Page.**

SYSTEM CONFIGURATION & SETTINGS

An equipment only becomes visible in Quick Watch after it has been enabled to do so and parameters have been set up. The next two sections describe these steps.

ENABLING QUICK WATCH

To make an equipment available in Quick Watch:

- Edit the equipment.
- Click **Configuration**.
- Enable the Quick Watch KPIs relevant to that equipment.

SETTING PARAMETERS

After the Quick Watch items are enabled for this equipment, additional parameters may be required. Use the Multi-Equipment editor to set the parameters for groups of equipment.

The parameters are described below:

Quick Watch KPI	Description
Workorder Cost Variance	%: Percentage of actual cost greater than estimated. $: Cost value (that is, only consider variances greater than $10,000). Both factors are used.
High Cost	Minimum Cost $: Only consider non-strategy work orders where the actual cost is greater than this value.
PCV Change	No additional parameter required.
Annual Cost Variance	This KPI requires the Budget and Forecast module of AMT to be installed. If installed, the site (under which the equipment is attached) has to be linked to an Accounting Budget from the Budget and Forecast Manager module. Use the **Site Administration** function to select an accounting budget.
Breakdowns (Strategy & Unscheduled)	Minimum Hours: minimum actual downtime hours of events to include.
First Stoppage	Tolerance Hours: only look at stoppages after a PM within a certain tolerance (for example, only look at stoppages within 96 hours of last PM).
Financial Year Cost Change	No additional parameter required.
No recent usage readings	Tolerance Days: number of days since last reading.

Training Workshops

1. Quick Buttons

Measurement	Calculation Method
	%: Percentage of actual cost greater than estimated. $: Cost value (that is, only consider variances greater than $10,000). Both factors are used.
	No additional parameter required.
	This KPI requires the Budget and Forecast module of AMT to be installed. If installed, the site (under which the equipment is attached) has to be linked to an Accounting Budget from the Budget and Forecast Manager module. Use the **Site Administration** function to select an accounting budget.

2. KPIs

Quick watch KPI	Description
Workorder Cost Variance#	Compares the actual cost to estimated cost for strategy tasks only, based on a percentage or cost (only examines negative variances). ***Sort Order: % and value***
High Cost#	Non-strategy tasks with an actual cost greater than a defined cost amount. ***Sort Order: cost and date***
PCV Change^	Movement in PCV for an equipment in last 5 days. ***Sort Order: absolute value of PCV movement***
Annual Cost Variance	Movement in financial year cost in the last 5 days. Requires an accounting budget for that site in order to make a comparison. **Note**: Accounting budgets are set up in the Budget and Forecast module of AMT. ***Sort Order: absolute value of PCV movement***
WIP@	Work order settlements that have been opened for greater than 30 days from today's date. ***Sort Order: WIP days, date***
Strategy Breakdowns#	Completed and In Progress breakdowns for strategy tasks only, based on minimum hours. ***Sort Order: down hours***
First Stoppage#	Highlight the first stoppage after PM if within a parameter. ***Sort Order: hours since previous PM***
Overdue Component	Overdue component changeouts by value. ***Sort Order: cost and next occurrence date***
Financial Year Cost Change^	Examining movement in financial year costs based on a minimum value. ***Sort Order: absolute value of PCV movement***
Unscheduled Breakdowns#	Completed and In Progress breakdowns for non-strategy tasks only based on minimum hours. ***Sort Order: down hours***
No recent usage readings	Show no usage reading within a defined timeframe. ***Sort Order: days of difference***

1. ^ Quick Watch only looks at snapshot data 5 days earlier from today.
2. # Quick Watch only looks at data in the last 14 days.
3. @ Quick Watch only looks at data in the last 30 days.


A number of the KPIs reference a parameter (for example, define cost amount, cost limit, within a parameter). The next section outlines where these parameters are set up.

By default, the Quick Watch KPIs extract the top 20 results. Change this by clicking **Apply Filter**.

3. Trigger Quick Watch

After the Quick Watch KPIs have been enabled for the relevant equipment and the parameters have been set, Quick Watch is ready.

Click on the relevant Quick Watch button to review the data.

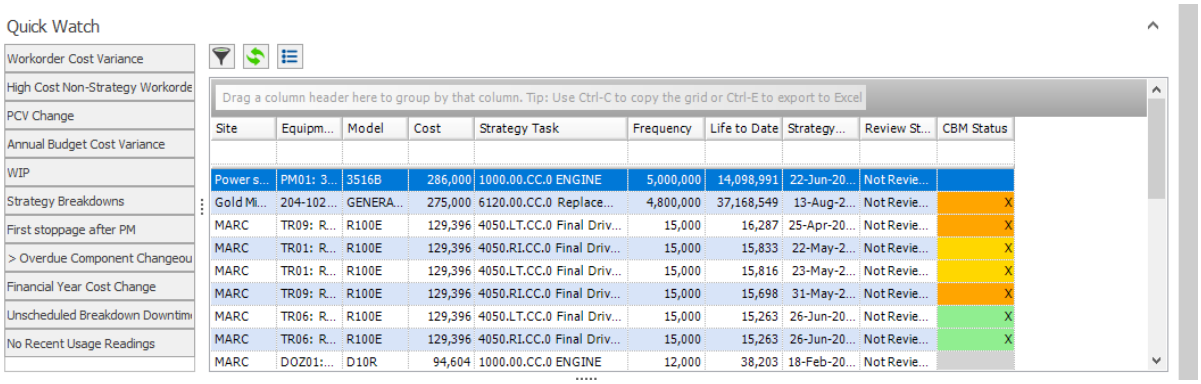

1. Columns can be sorted and grouped.
2. The data in the grid is not calculated. Rather, the data is live (that is, a KPI's data is compiled directly out of the AMT database when a specific Quick Watch KPI button is clicked).
3. **No Data** means that no data in the system met the parameters you entered or there is no data to report (for example, if there aren't any components overdue, AMT reports **No Data**).

Learning Check



Check your understanding of the workshop and ask any related questions.

Notes