RPMGLOBAL

AMT - Standard Job

Training Manual

Copyright © 2024 RPM Software Pty Ltd. All Rights Reserved



RPM SOFTWARE – ASSET MANAGEMENT

Table of Contents

Introduction to AMT **5**

Processes **8**

Training Workshops **10**

1. Maintenance Strategy 10
2. Review Parts Price Group 11
3. Create and Import Parts 12
4. Update Part Pricing 15
5. Review Superseded Parts 16
6. Review Labour Activities and Labour Rates 17
7. Create Standard Job from Standard Job Manager 20
8. Create Operations 23
9. Define Part Requirements 24
10. Define Labour and Misc. Requirements 28
11. Technical Advisor 30
12. Electronic Workscope 31
13. Creating a Standard Job from a Work Order 32
14. Import Standard Jobs from an External System 35
15. Linking Standard Jobs to Strategy Tasks 37
16. Create Strategy Tasks from Standard Jobs 42
17. Exporting Standard Jobs 44

Preface

The training workshops have been developed to supplement instructor-led training. This guide is constructed in a way that teaches students the key functionality of the application through practical, hands-on workshops. Each workshop details tasks that the student is required to complete. The workshops build on each other to help ensure a comprehensive understanding of the application is achieved at the completion of the course. Space is provided at the end of each workshop for learning checks and student notes.

Symbol Library



Note

A note for participants about the task.



Important Reminder

An important reminder for the participant about the task.



Learning Check


Check your understanding on the workshop and ask any related questions.

Course Outline

Pre-requisites	Getting Around AMT, AMT Key Concepts
Target Audience	Maintenance Manager, Strategist, Sales Representative (OEM)
Nominal Duration	
Course Objectives	The objectives of the course are: • Understand margins • Review and update parts manager • Update part pricing • Standard job principles • Security • Understand the structure of a standard job
Learning Outcomes	At the end of the course, participants will have learned to: • Create and modify standard jobs • Import standard jobs • Export standard jobs • Link standard jobs to strategy tasks • Create strategy tasks directly from standard jobs
Assessment Strategy	The completion of workshop tasks.
AMT version	8.26

Introduction to AMT

AMT is a comprehensive asset management system consisting of integrated modules as depicted below. The functionality covered by this training manual is identified by the Strategy Definition section in the diagram.

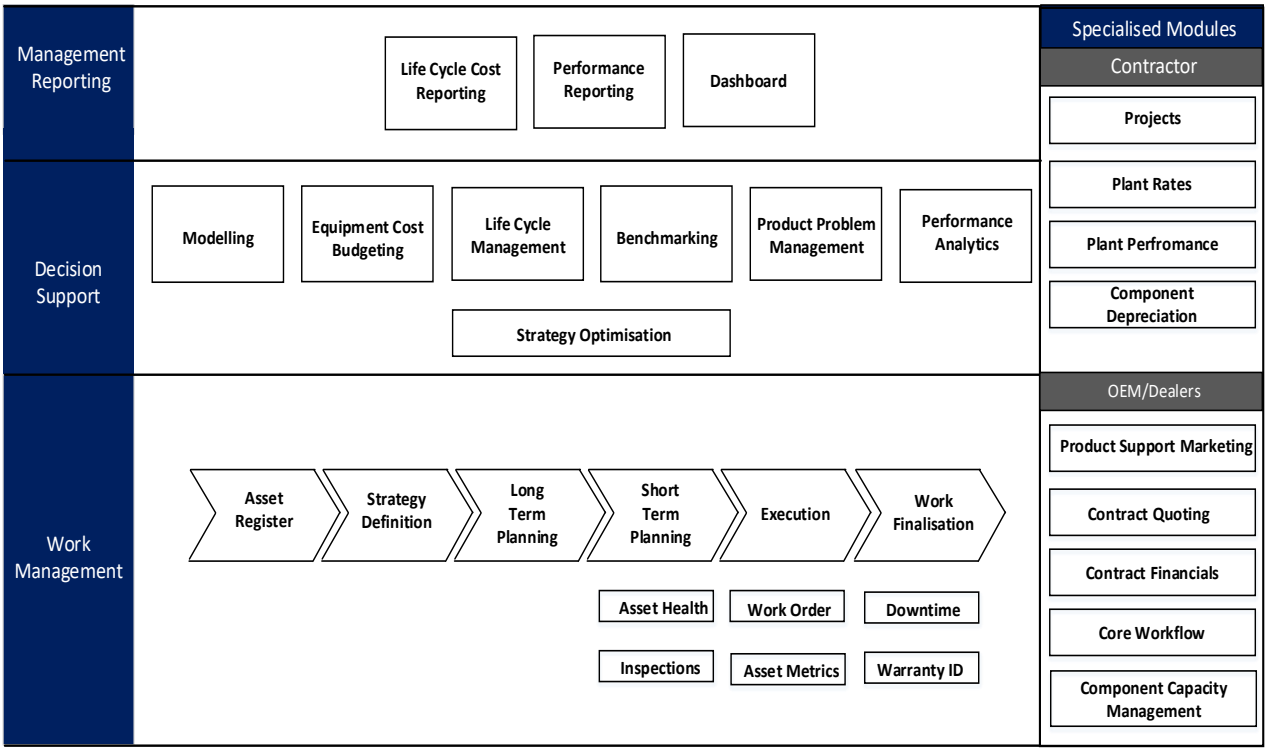

OVERVIEW OF STANDARD JOBS

A standard job is a repeatable task that can be carried out on a particular model of asset (such as repair engine before failure) and is represented as a financial breakdown of the work. A standard job can consist of one or more operations, each containing a bill of materials and multiple labour and miscellaneous costs. Labour is costed by branch and type of activity (such as workshop, field), and parts are identified by a part type, part number and source of supply.

The purpose of this training is to provide a structured process for creating and maintaining standard jobs that encompasses:

- Creating standard jobs.
- Maintaining accurate piece part details in AMT.
- Maintaining accuracy of standard jobs.

AMT has a full standard job system:

- Integrates to AMT Strategy Definition and AMT Planning modules.
- Standard jobs can either be maintained in AMT or the ERP's standard jobs can be replicated into AMT (the latter is our suggested approach).
- Standard jobs can comprise a number of operations (steps).
- Each operation has a labour requirement and a bill of material.
- Nominate the probability of parts usage in bill of materials.

PRINCIPLES

- As part of the process of creating a standard job in AMT, a base priced job is created. Each base priced job has a nominated price group, branch and currency. The currency for the standard job is used to identify the currency for any miscellaneous costs, and/or labour rates added into the standard job.
- In addition to the base priced job, AMT will also create a priced job when the same standard job is used in another price group, branch and or currency automatically.
- Standard jobs can be copied and changed.
- Standard jobs can be created for any currency; if the currency isn't specified, it defaults from the currency in the price group.
- Every standard job has a pricing group.
    - A pricing group might need to be set up for a particular customer because they receive a 5% discount on parts.
- Each labour activity (such a workshop, field) has a rate that is branch-specific.
    - Change labour rates using the Labour Rate system table.
- The projections of centreline, estimate, real assets, and so on, can contain links to one or more standard jobs, so that changes to a standard job can cause changes to the linked projections.
- If a standard job is linked to a projected job (within a strategy task), any changes to the standard job automatically update the projected job with the new costs, and the projected job's pricing date with the current date.

MARGINS

This system setting is only relevant to AMT installations at OEMs. The cost shown in the standard job for parts, labour and miscellaneous items is cost at sell. The cost at cost of the standard job is held in the background. By default, the cost at cost of the standard job is calculated from the margins contained in the Set Margin system table. However, there are two system configuration options that enable cost at cost for the standard job's parts to be based on the cost at cost value of each part within the standard job.



If the settings enable cost at cost to be calculated from the part rather than the Set Margin system table, but the total cost at cost of all parts in the standard job are not greater than zero, AMT reverts to calculating the cost at cost from the Set Margin system table. Otherwise AMT would be projecting a 100% margin for the parts.

SECURITY

In addition to the standard security features in AMT (which applies to functions, reports, branches and sites), you can also restrict the users who can edit specific standard jobs.

To secure a standard job, set the **Secured** flag in the **Reference Code** section of the standard job, and nominate the group that can edit the standard job. AMT system administrators create groups using the **Message Group Administration** function, and choose which users are linked to the group.



Standard job security can only be applied to standard jobs that are created in AMT (that is, System Source = AMT).

LOGIN AND NAVIGATION


For information on logging in to and navigating around AMT, refer to the **AMT Getting Around – RPM Training Manual**.

TERMINOLOGY

For information on AMT terminology, refer to the **AMT Glossary – RPM Training Manual**.

Processes

PROCESS DIAGRAM

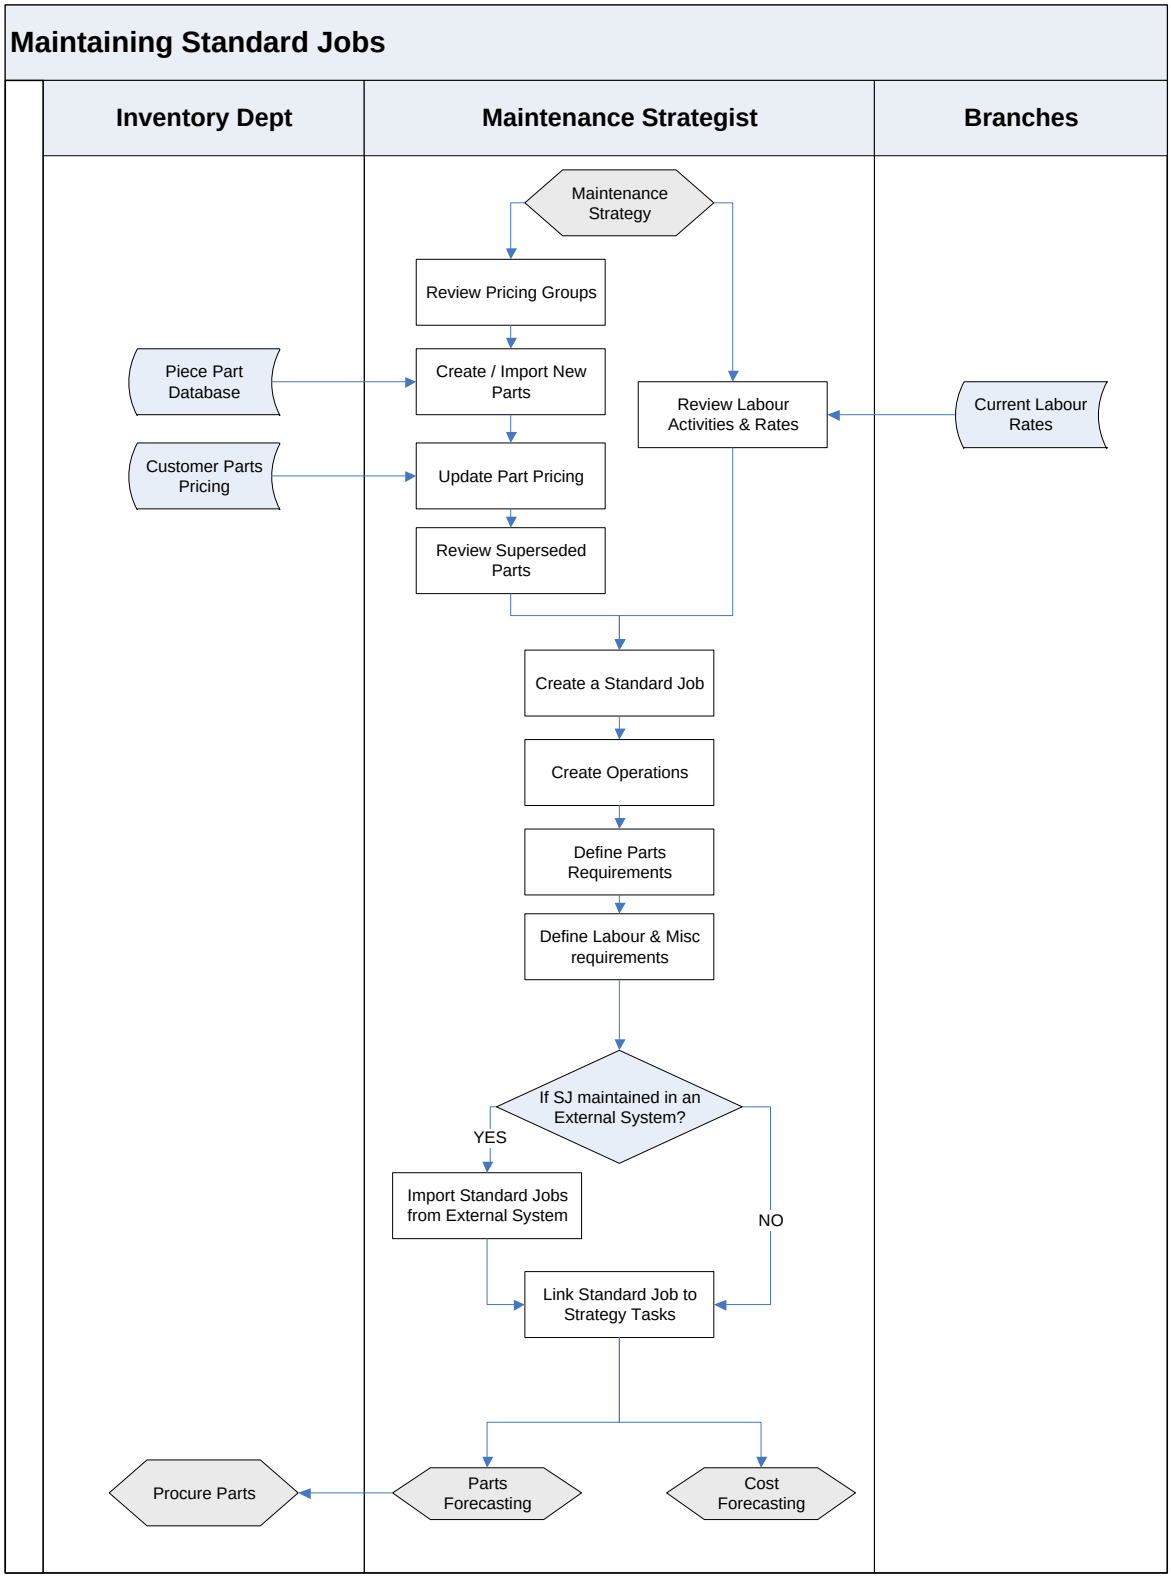

PROCESS OWNER

The owner of the process is the strategist or reliability engineer.

PROCESS INPUTS

The following inputs are required for this process:

1. Parts List
    a. Current list of non-superseded parts from the ERP system.
2. Parts Pricing
    a. Current price of parts per customer from the ERP system.
3. Superseded parts
    a. Notification of which parts have been superseded.
4. Labour Rates
    a. Current labour rates per branch.
5. Maintenance Strategy
    a. Definition of the maintenance strategy per component per model, which guides what kind of standard jobs need to be developed (for example, engine remanufacture versus engine rebuild).
    b. Details such as the application on-site may also be relevant (for example, hard rock versus coal).

PROCESS OUTPUTS

The following outputs can be expected from this process:

1. Accurate parts pricing per customer.
2. Accurate labour rates per branch.
3. Accurate bills of material that can be used to forecast parts for real assets.

Training Workshops

1. Maintenance Strategy


Exercise – Maintenance Strategy

1. Navigate to an assets current projection and filter for all of the strategy tasks

2. Review Parts Price Group

Procedure – Parts Price Group

1. To create a specific part price group in AMT, navigate to **System Administration** > **System Tables** > **Parts & Standard Jobs** > **Parts Price Group**.
2. Click **Add New** and complete the mandatory fields.

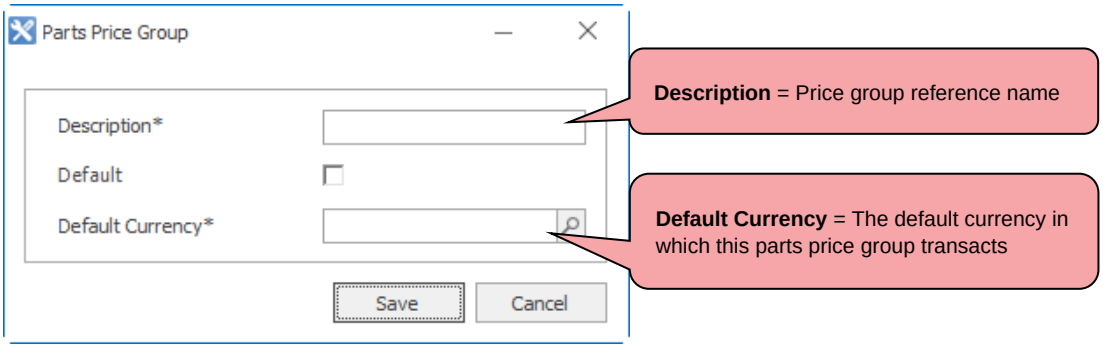

3. Click **Save**.


Exercise – Parts Price Group

1. Review the current parts price group.
2. Create an additional parts price group.


3. Create and Import Parts

Procedure – Parts Manager (Filters)


Below is an example of the process for creating parts in AMT using Parts Manager.

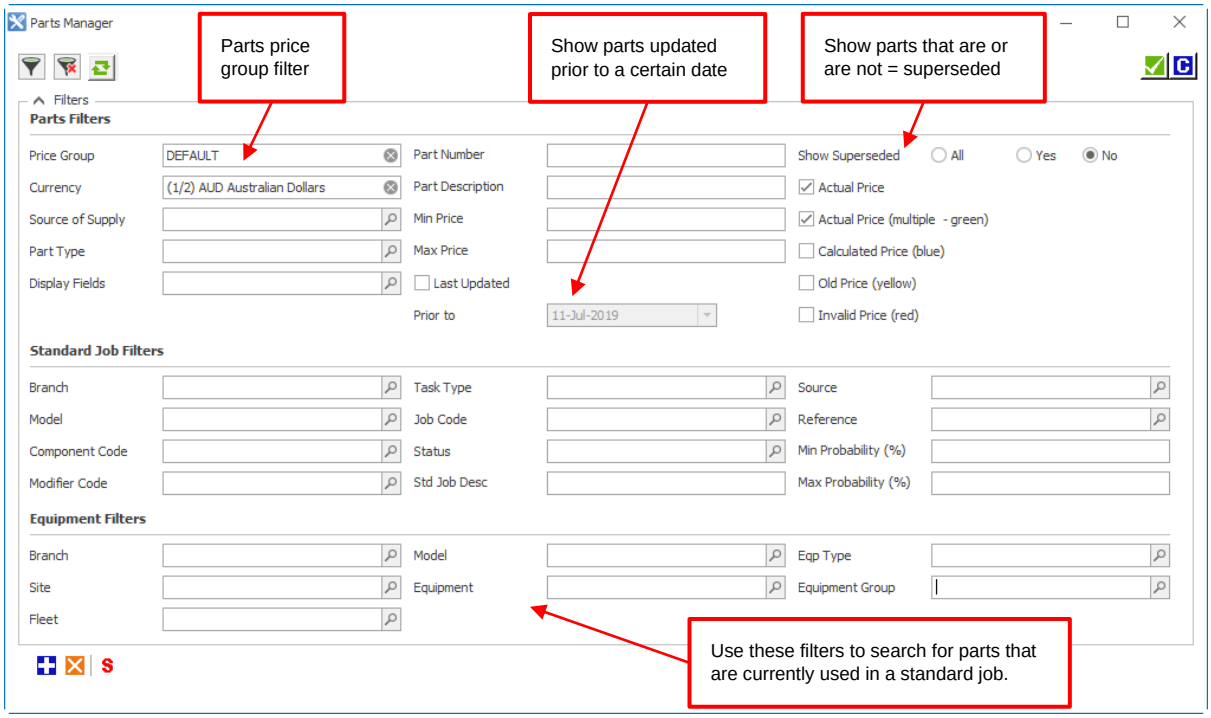

Procedure – Parts Manager Grid (Field Descriptions)

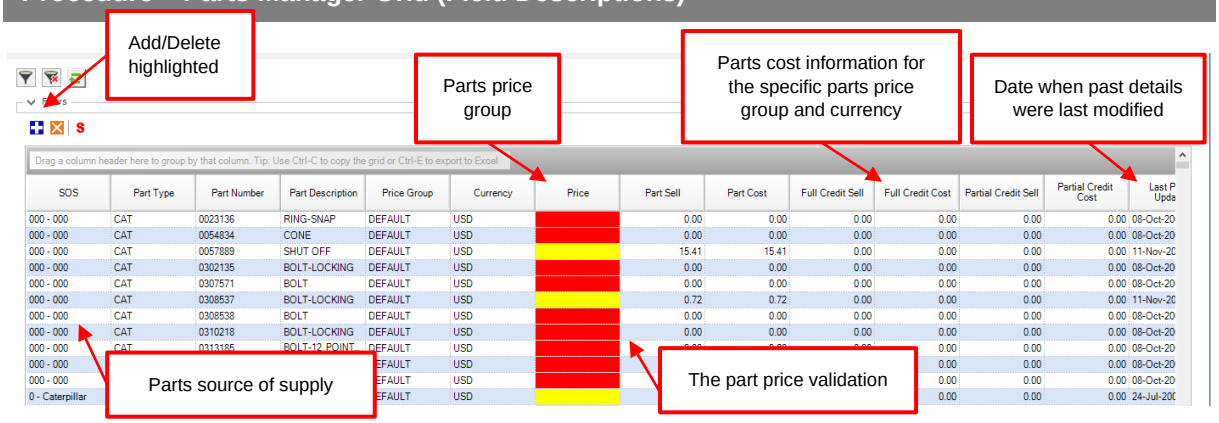

1. To add a new part, click **Add New Part**.
2. To add multiple parts at once, click **Add** multiple times.

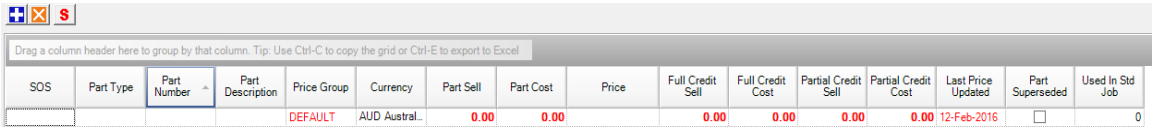

3. Complete all fields and click **Refresh** to save.

Exercise – Manually Add Parts

1. Navigate to **Parts Manager** and add 5 parts.

Learning Check




Check your understanding of the workshop and ask any related questions.

Notes

4. Update Part Pricing

Procedure – Update Part Pricing

1. To update the price of a part manually in **Parts Manager**, search for the part number and modify its price in the result grid per currency per parts price group (see example below).

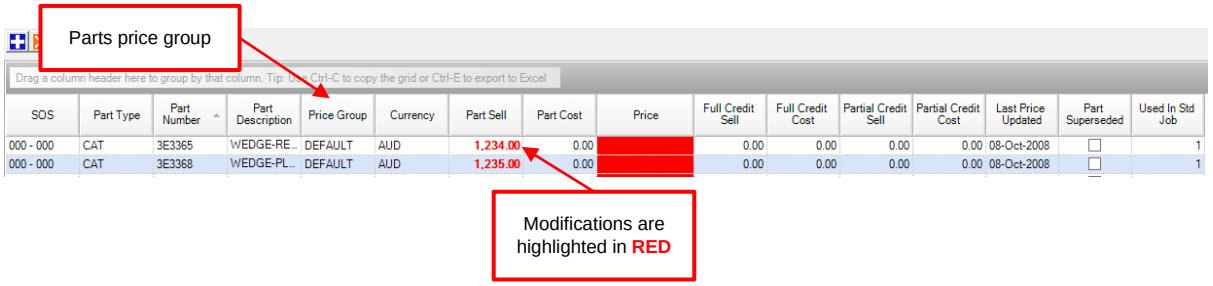

Exercise – Update Part Pricing


1. Update the price of the 5 new parts added in the exercise Manually Add Parts.

5. Review Superseded Parts

Procedure – Review Superseded Parts

The example below shows how to review superseded parts in AMT using **Parts Manager**.

1. Select **S** for Supersede.

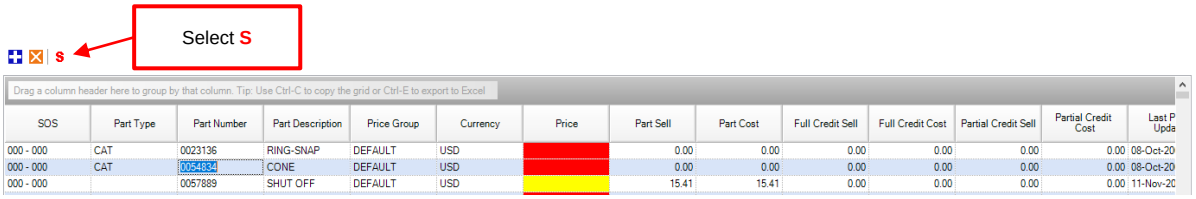



2. Enter the **Superseded Part Number** and click **Save**. The primary part number is updated in strategy tasks.
3. Update with the FIRST of the selected part numbers (it is possible to supersede one part with more than one part).
4. The previous part is marked as superseded.
5. Standard jobs are updated with the superseded parts.


Exercise – Supersede Parts

1. Supersede one of the new parts added in the exercise Manually Add Parts.


6. Review Labour Activities and Labour Rates

Procedure – Review Labour Activities

1. Create labour activities by navigating to System Administration > **System Tables** > **Parts & Standard Jobs** > **Labour Activity**.
2. Click **Add New**.

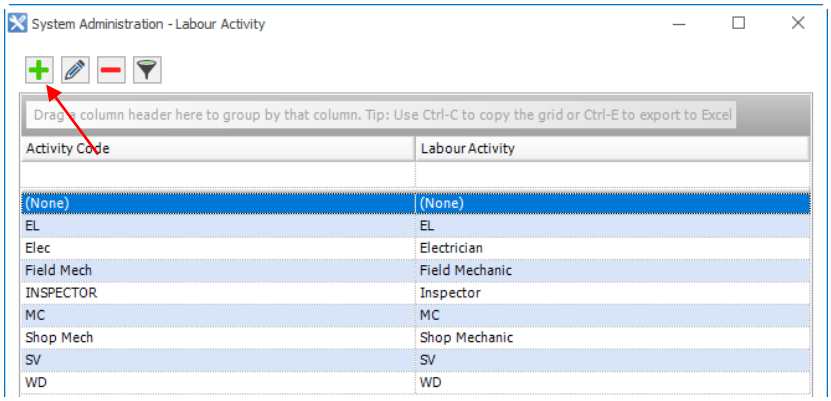


3. Each of these labour activities can have a default labour rate per branch. These rates are set up in the **Labour Rate** system table.

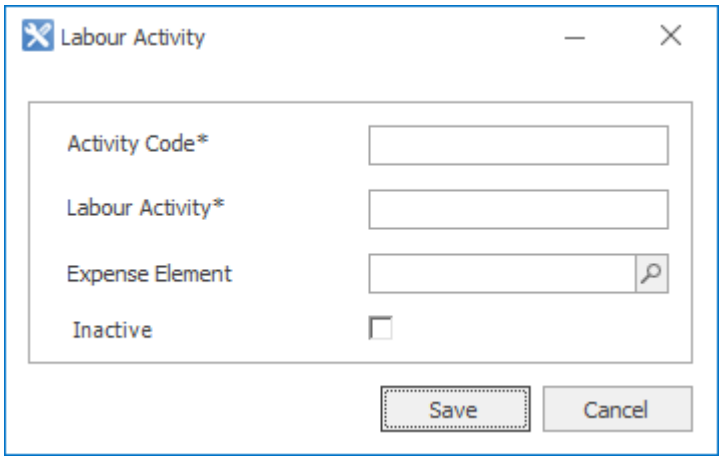

4. Click **Save** and close.

Procedure – Labour Rate

1. Under **System Administration** > **System Tables** > **Parts & Standard Jobs**, double-click on **Labour Rate**.

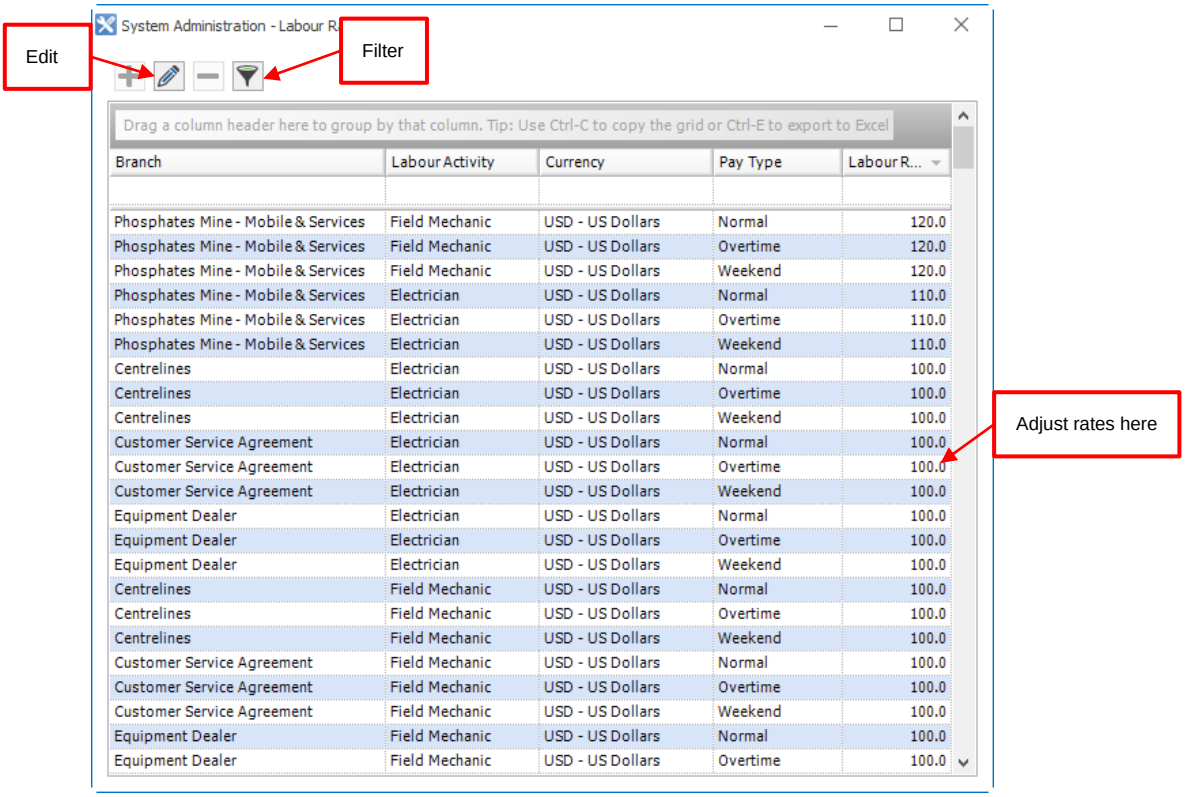

Exercise – Labour Rate

1. Update the labour rate for all labour activities for the default branch.

Learning Check




Check your understanding of the workshop and ask any related questions.

Notes

7. Create Standard Job from Standard Job Manager


Procedure – Create Standard Job from Standard Job Manager

1. Under **Knowledge Database**, double-click **Standard Job Manager**.
2. Review the filters and grid.

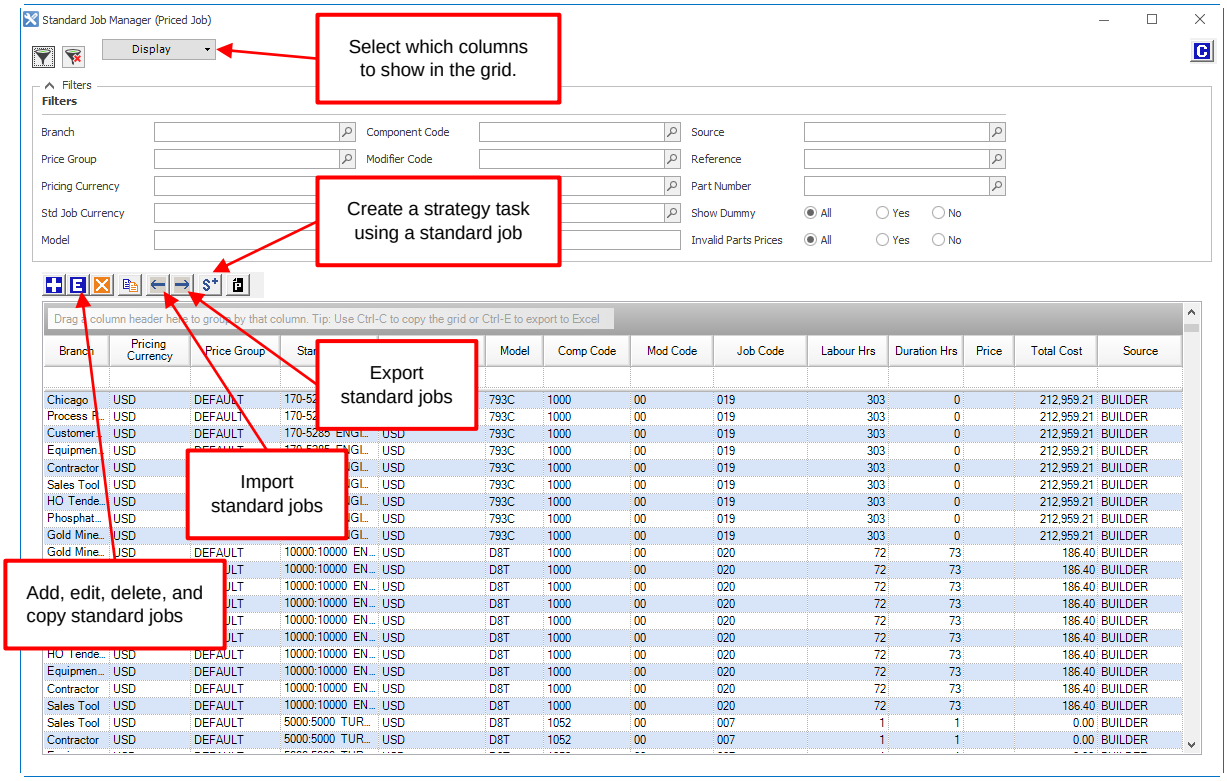


*For OEMs, the **Total Cost** in the grid is cost at sell.*

3. Click **Add New Standard Job**.
4. Enter appropriate codes under Base Details.
5. A series of selectors can be used to establish the characteristics of the standard job, such as model, pricing branch, price group, currency, and reference codes (for example, component code, modifier code).

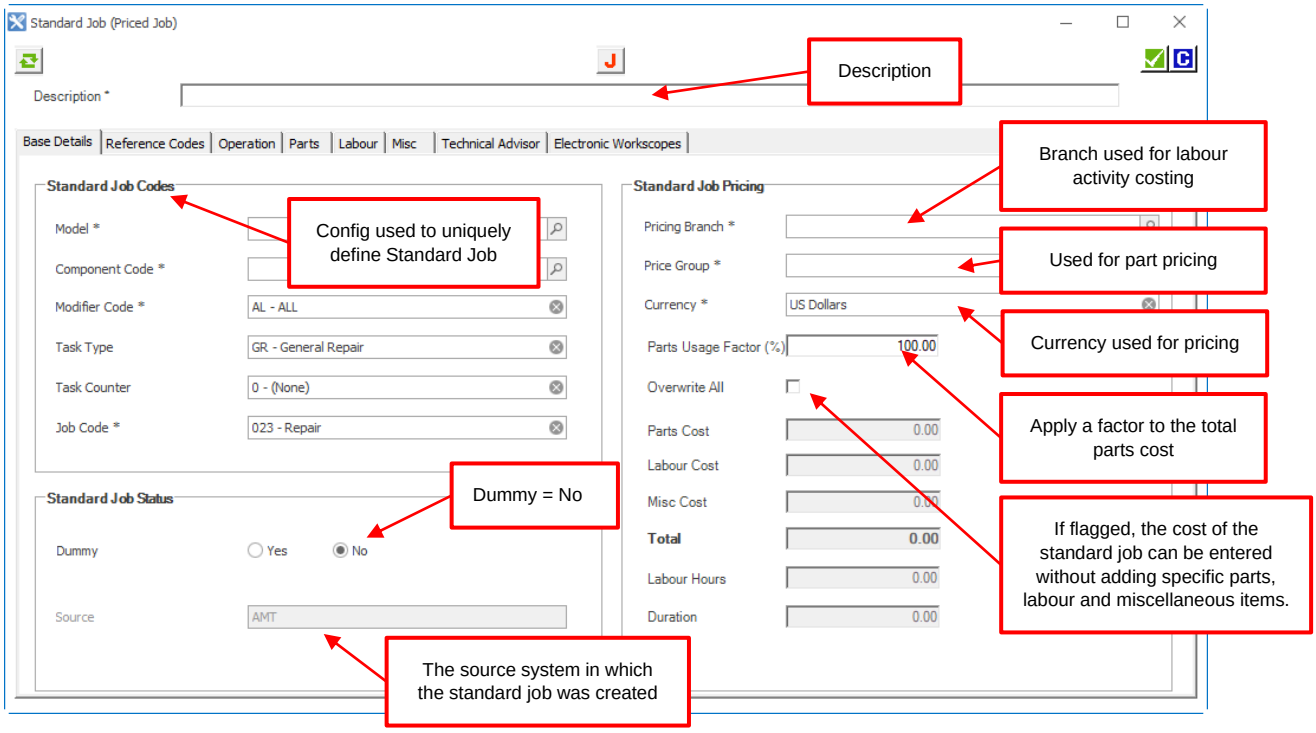

6. Enter any relevant **Reference Codes**. These provide additional information for the user.

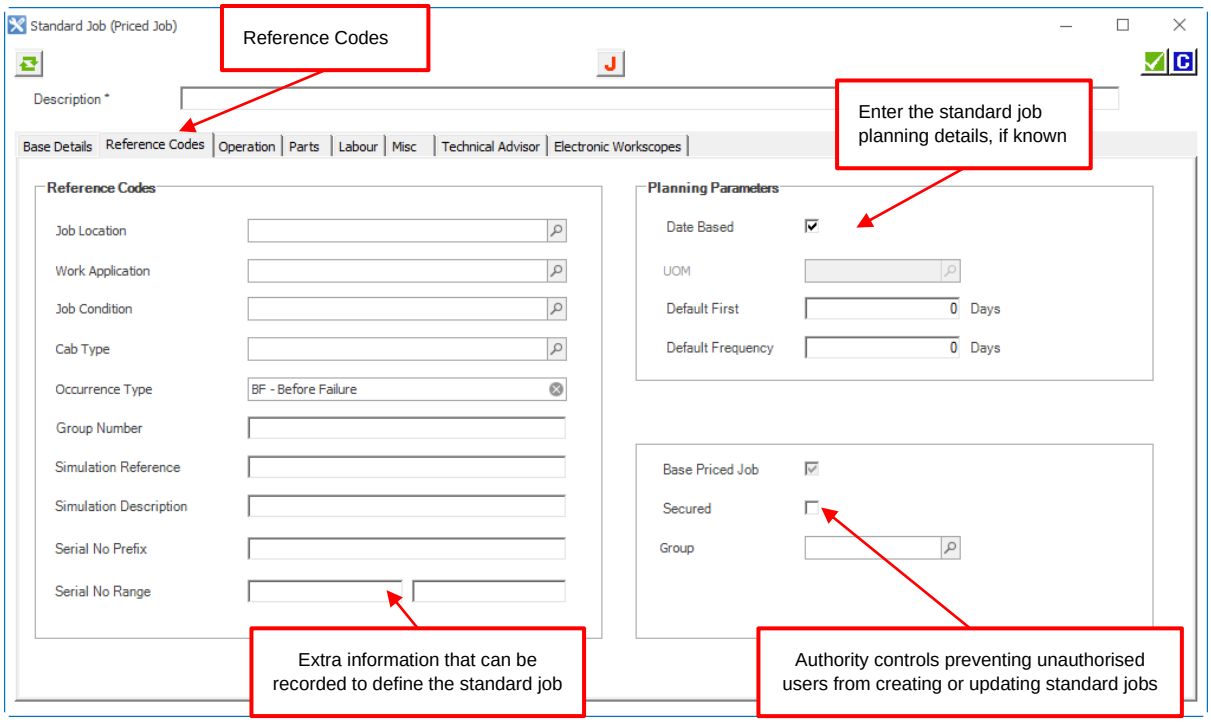

Learning Check




Check your understanding of the workshop and ask any related questions.

Notes

8. Create Operations

Procedure – Create Operations

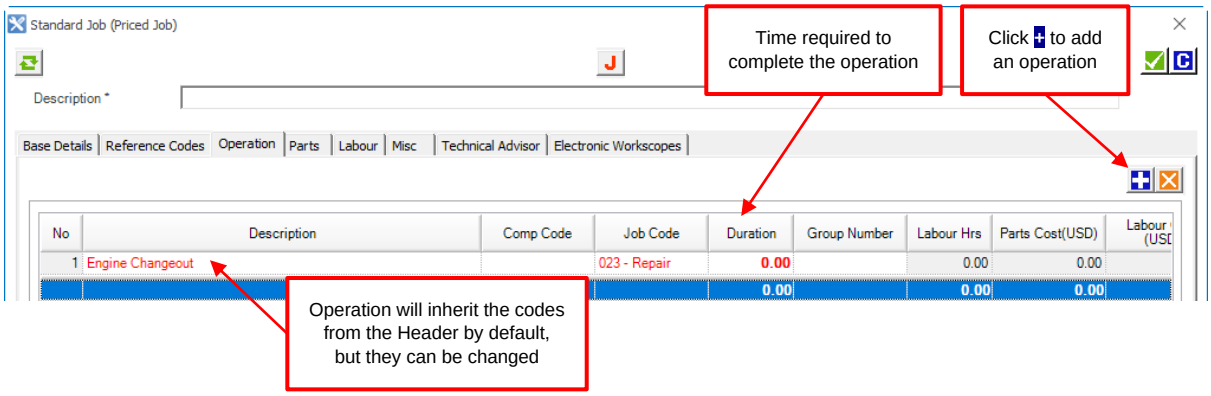


9. Define Part Requirements

Procedure – Define Part Requirements

You can add parts to each operation.


1. Add a part by selecting the relevant operation and clicking  .

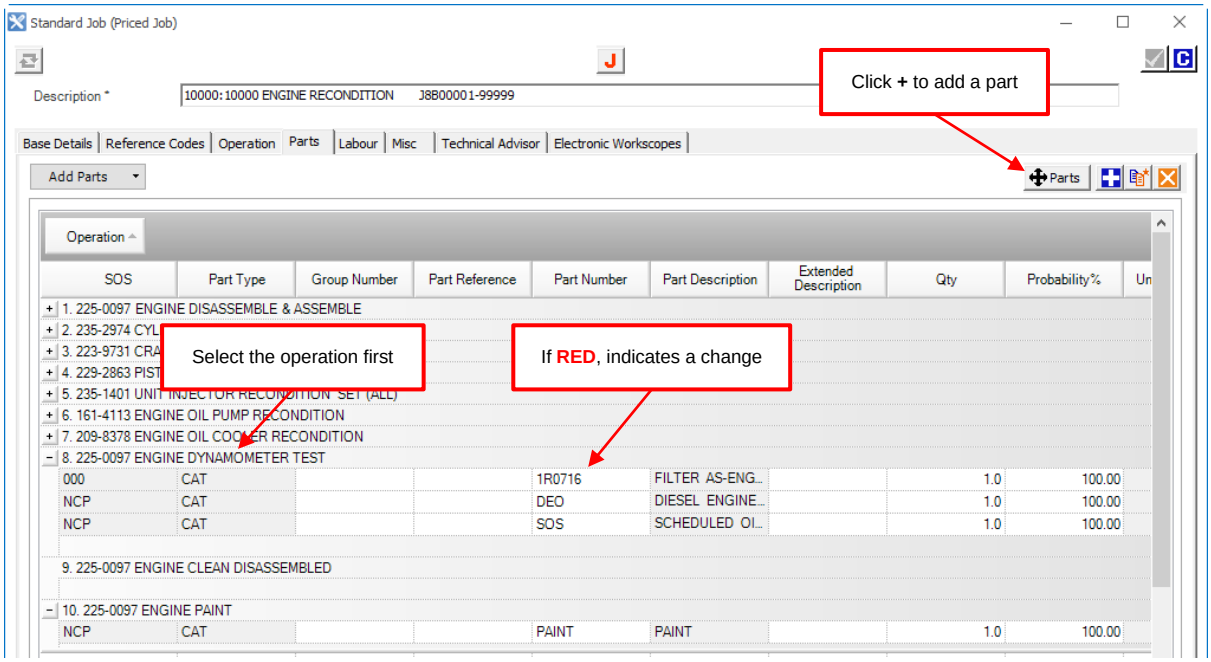


2. If the part is not available in the currency of the standard job, it will show as **Invalid** in the **Price** column.

Part Sell, Full Credit Sell, and Partial Credit Sell values for a part can be viewed using Parts Manager.

3. Add multiple parts at once by dragging and clicking 
.
4. **Ctrl-click** to select multiple parts.

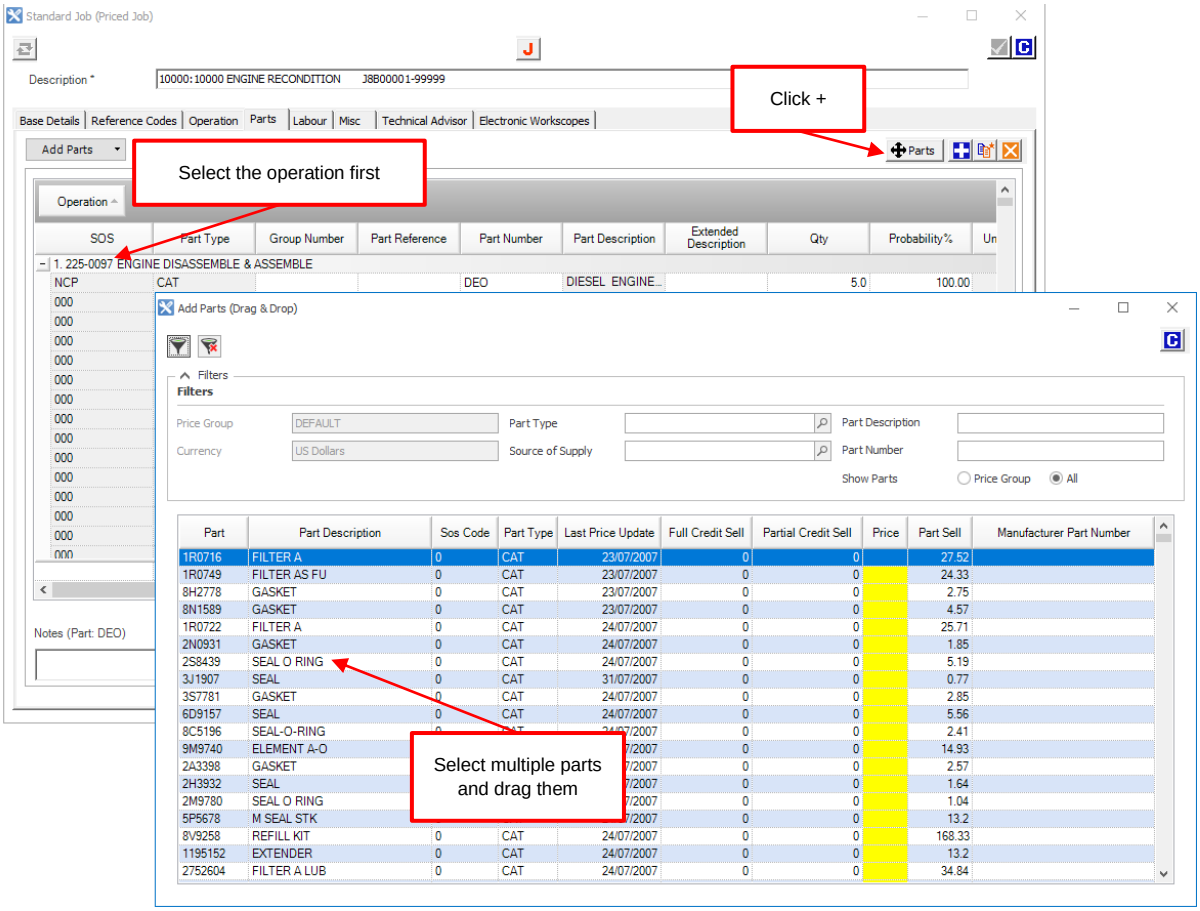

5. Click **Yes**.

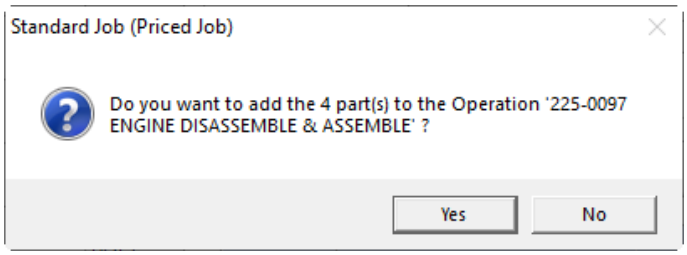

*Drag the parts onto the Operation header line in the **Parts** grid.*


6. After adding the part numbers, determine the following values for the correct part cost to be calculated:
   a. Qty (Quantity).
   b. Prob % (Probability of using the part).
   c. Unit Price (sourced from **Parts Manager**, is read-only, and based on the standard job's pricing group).

d. Credit Type (none, full, partial):
   i. If you select **Partial**, the Unit Price = Part Sell – Partial Credit Sell.
   ii. If you select **Full**, the Unit Price = Part Sell – Full Credit Sell.
   iii. If you select **None**, the Unit Price = Part Sell.

e. Core Charge (depends on the credit type selected, and may alter unit price)

7. Part Costing Formula is: (Unit Price – Core Charge) * Qty * Prob%

8. Alternatively, you can add parts from inventory by selecting **Add Parts**, then selecting **From Inventory**.

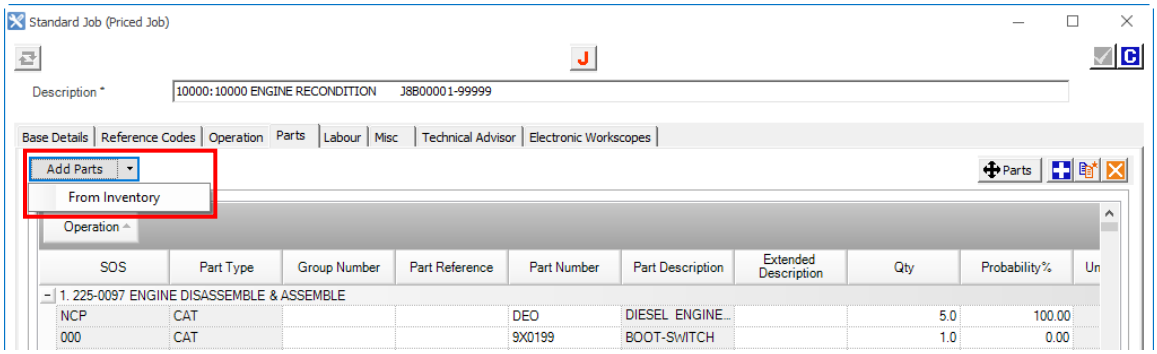

This only works if the Inventory interface has been set up.

9. The column **Price** highlights which parts have invalid part prices. Part prices show as invalid if there is no record of the required parts price in the **Parts Manager** for the selected price group.

Learning Check




Check your understanding of the workshop and ask any related questions.

Notes

10. Define Labour and Misc. Requirements

Procedure – Define Labour Requirements


1. If labour costs are relevant to the standard job, add them.
2. Navigate to the **Labour** tab and select **+** to manually add labour.

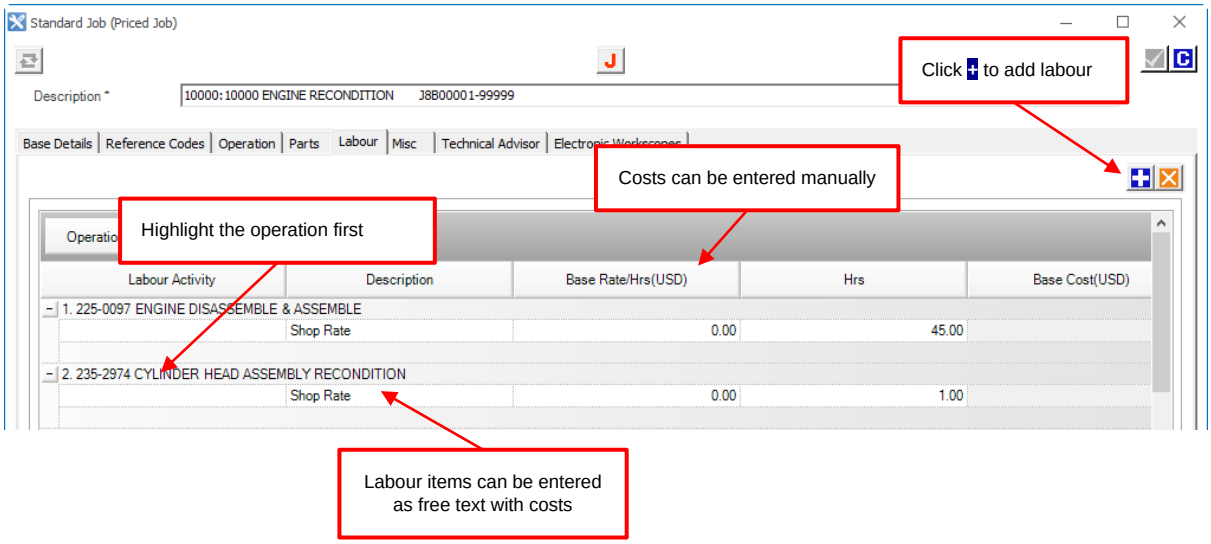

3. If a labour activity is not available or not applicable, enter a description of the labour to be performed, the rate per hour and the number of hours. The cost will be automatically calculated.


Procedure – Define Miscellaneous Requirements

4. If miscellaneous costs are relevant to the standard job, add them.
5. Navigate to the **Misc** tab and select **+** to manually add miscellaneous items.
6. Select a **Category** (source from the **Task Misc Category** system table) and enter a Cost.

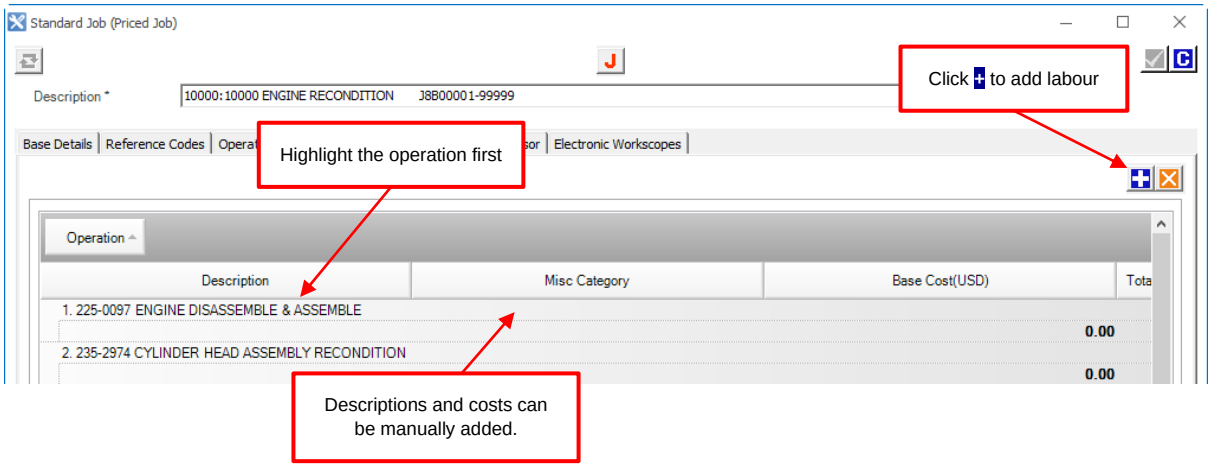


Procedure – Total Cost

After parts, labour and miscellaneous costs have been entered, the total cost shows on the **Base Details** tab.

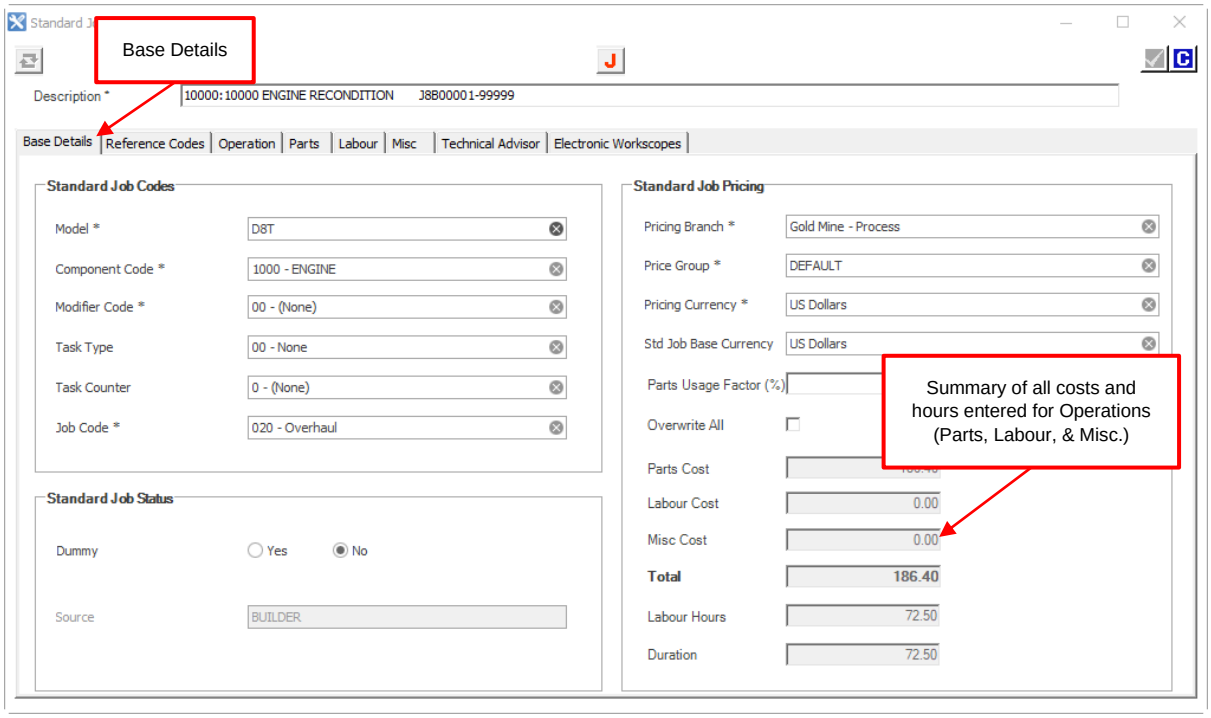

11. Technical Advisor

The Technical Advisor section of the standard job contains information about the failure that the standard job is designed to be used to repair, as well as repair guidelines.

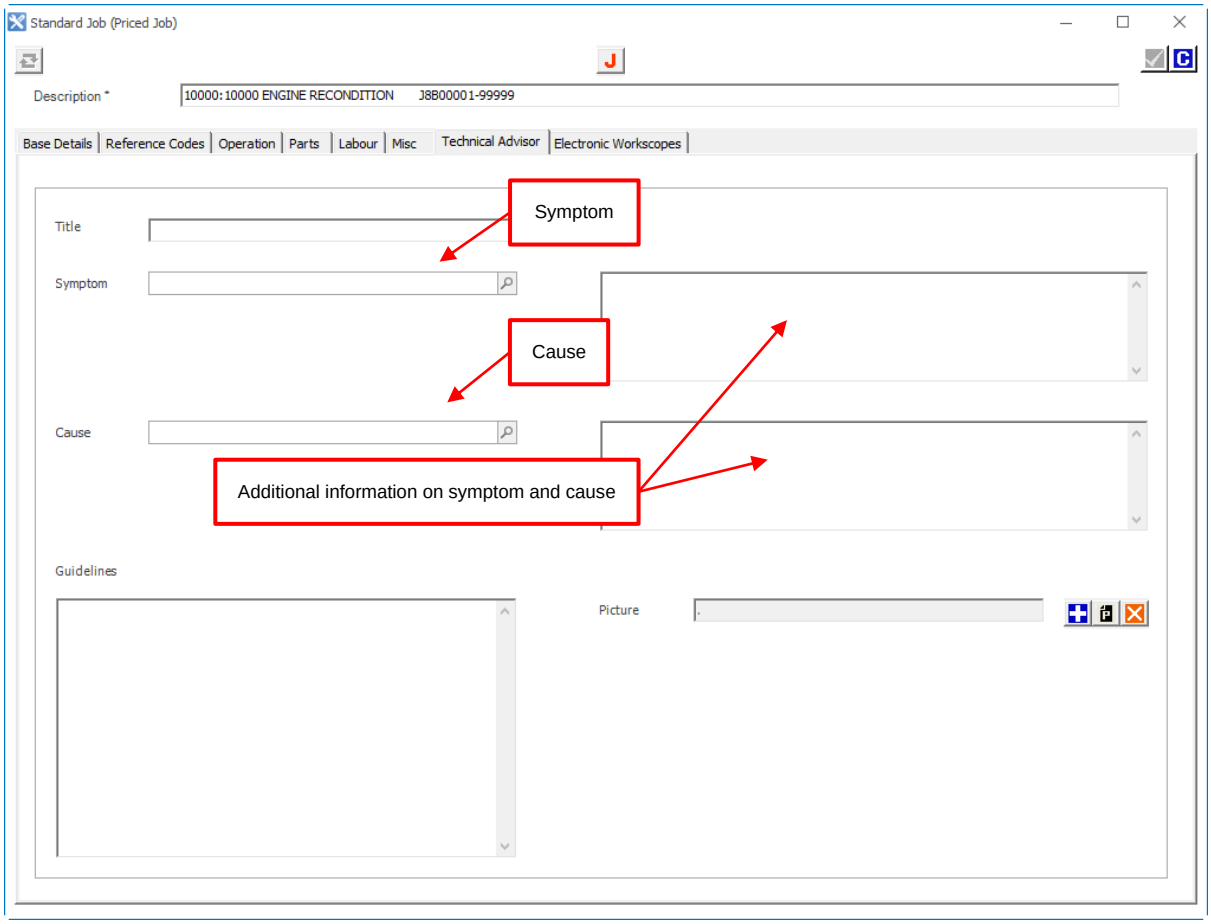


Details can be entered, such as:

- Symptom of failure (code and description).
- Cause of failure (code and description).
- Guidelines for performing the standard job repair.

It is also possible to attach external documents, such as photos or check sheets.

12. Electronic Workscope

An electronic workscope can also be linked to a standard job, which will flow through the strategy task and the strategy task's work orders.

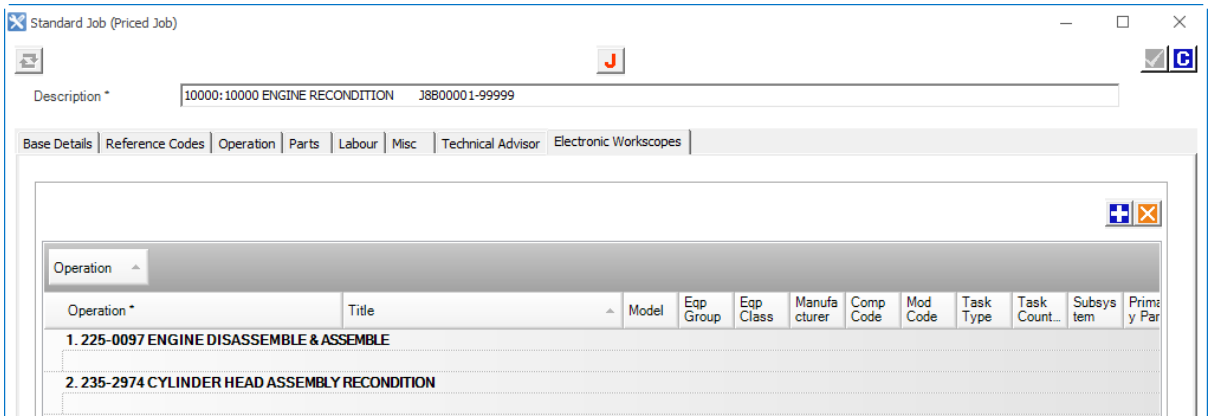


Exercise – Standard Jobs

1. Create five standard jobs for the same model.
2. All five standard jobs should have at least one operation.
3. One of the standard jobs should have three operations.
4. Manually add a part to each standard job.
5. Add five parts to three of the standard jobs by dragging them.
6. Add labour hours to each all of the operations.
7. Add miscellaneous costs to three of the standard jobs.


13. Creating a Standard Job from a Work Order

Procedure – Create a Standard Job from Work Order


1. Open the relevant work order.
2. Select **Quick Links** and **Add Std Job / Technical Advice**.

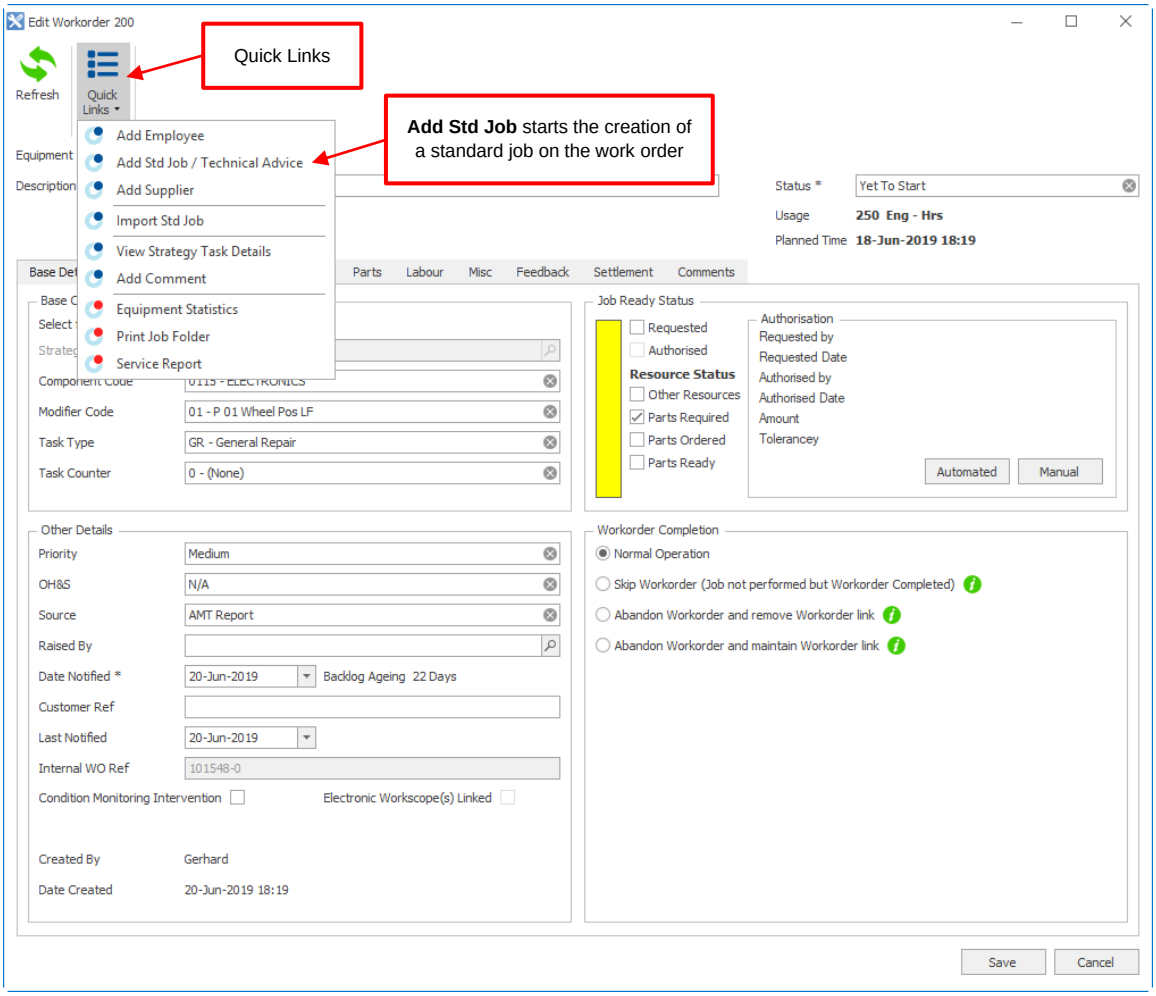

3. Update the coding, which will pre-populate as per the work order. Click **Forward**.

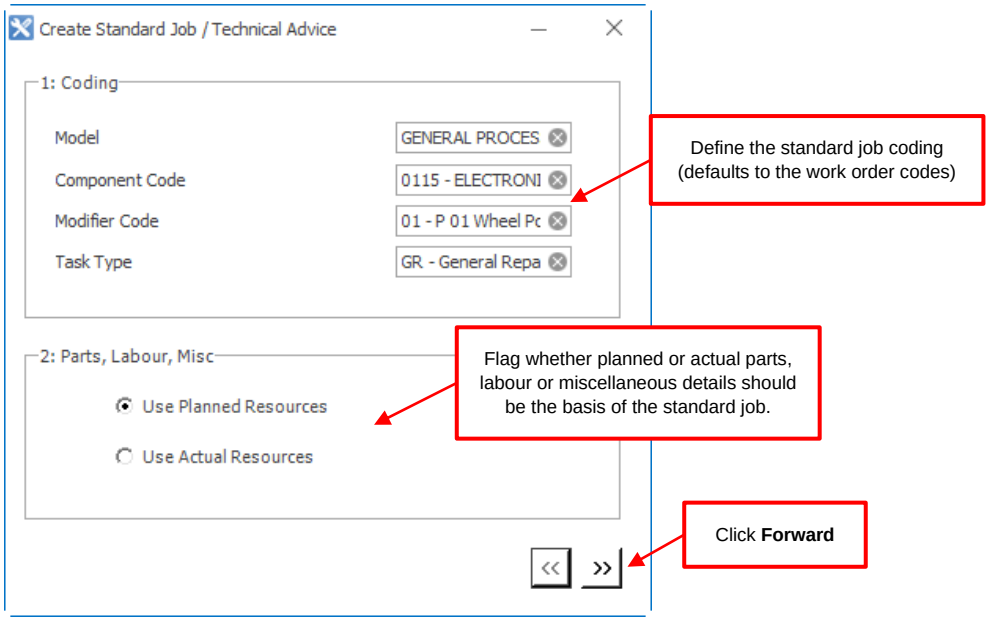

4. Check all details of the standard job.

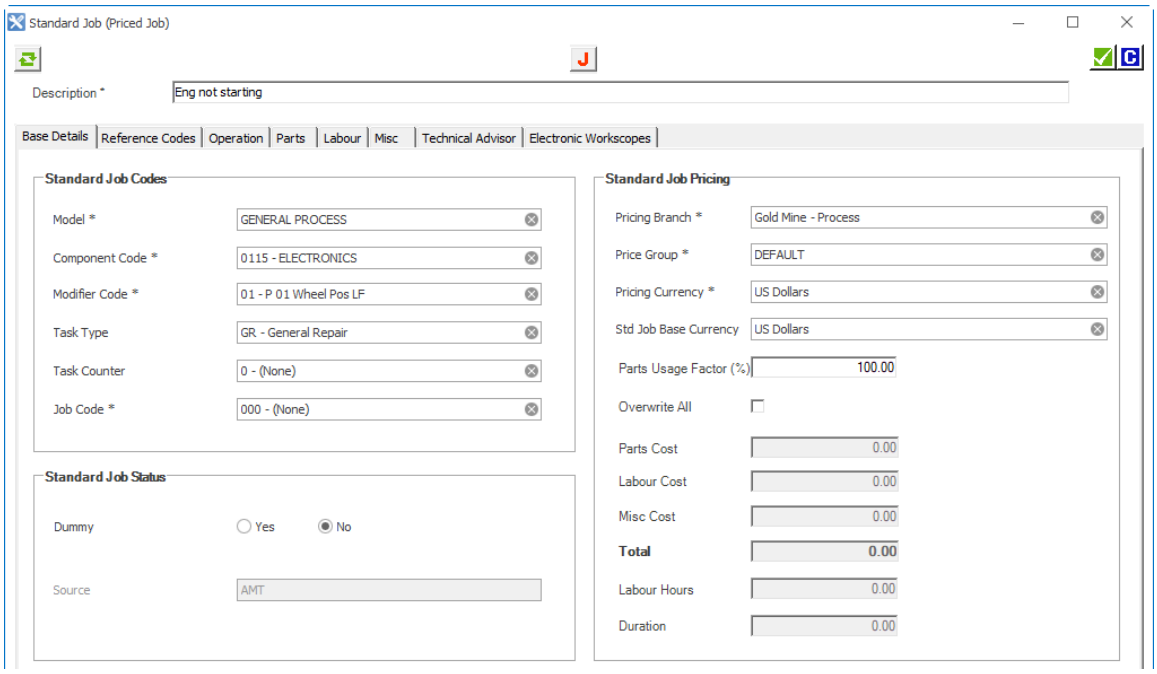

5. Save the standard job.

Exercise – Creating a Standard Job from a Work Order

1. Create one standard job from a work order.

Learning Check



Check your understanding of the workshop and ask any related questions.


Notes

14. Import Standard Jobs from an External System


Procedure – Manually Importing Standard Job

1. Place the XML files in the **Standard Job folder location** on the server. The actual location of this folder is set in the registry on the AMT server. Browse the registry to the following location: \HKEY_LOCAL_MACHINE\RPM\AMT\Application\StdJobsFolder\. If you're unsure where to find the files, contact your AMT system administrator.

2. Select  .

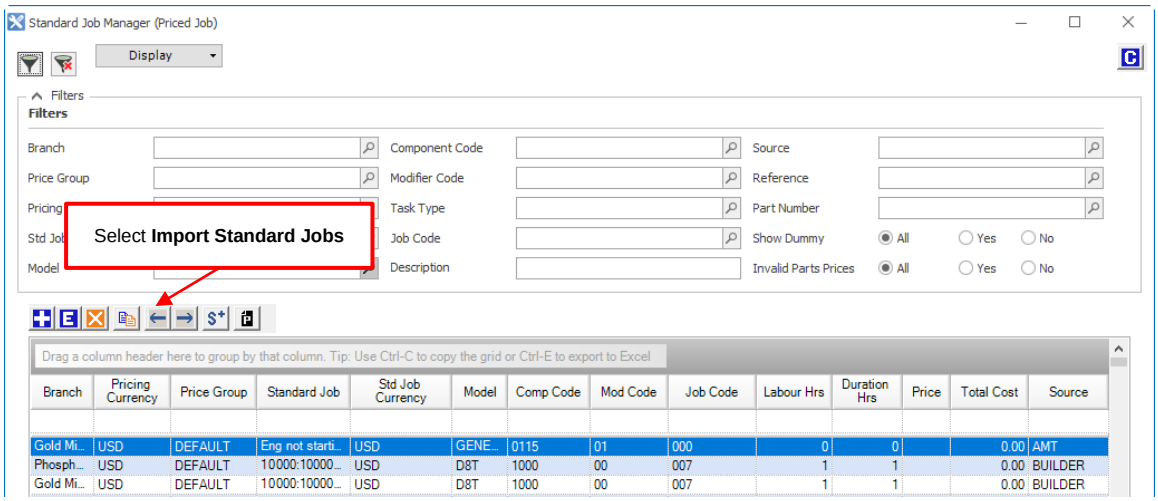


3. Select the standard job import file. After it's selected, AMT begins analysing the file, and all standard jobs found will be listed below the filters.

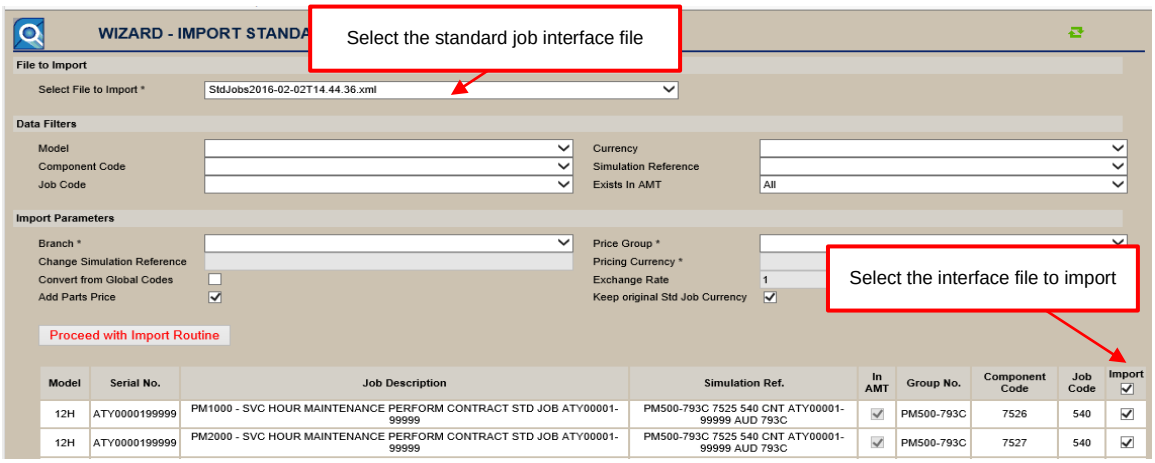

4. Click **Proceed with Import Routine**. AMT will import the standard jobs into AMT.

5. To modify the standard job after it's been imported into AMT, copy the external standard job in **Standard Job Manager** using the copy function . Then modify that copied version following the steps outlined earlier in this document.

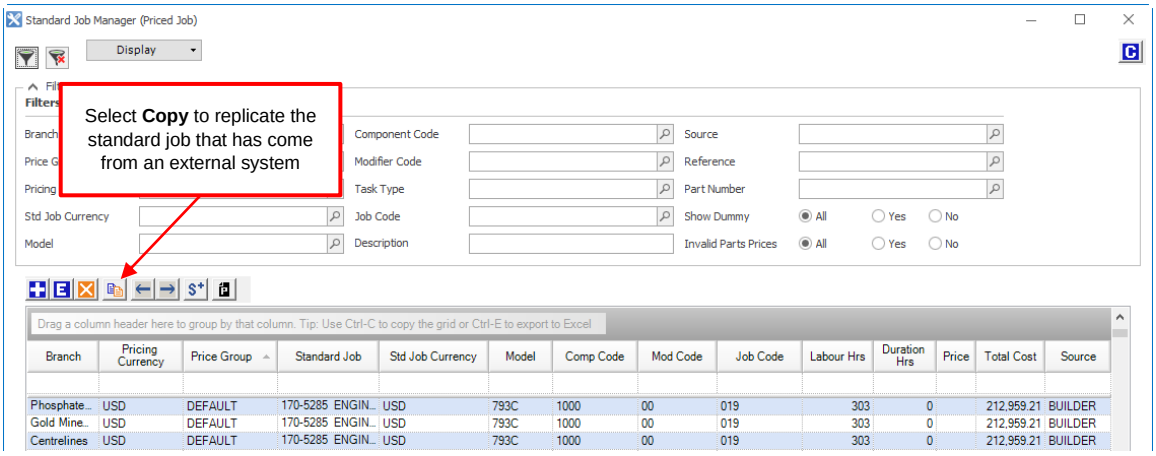


Exercise – Copying an Imported Standard Job

1. Copy three standard jobs from an external source and rename them.


15. Linking Standard Jobs to Strategy Tasks

Procedure – Link Standard Jobs to Strategy Tasks


1. Navigate to the relevant asset and strategy task. Double-click the strategy task.

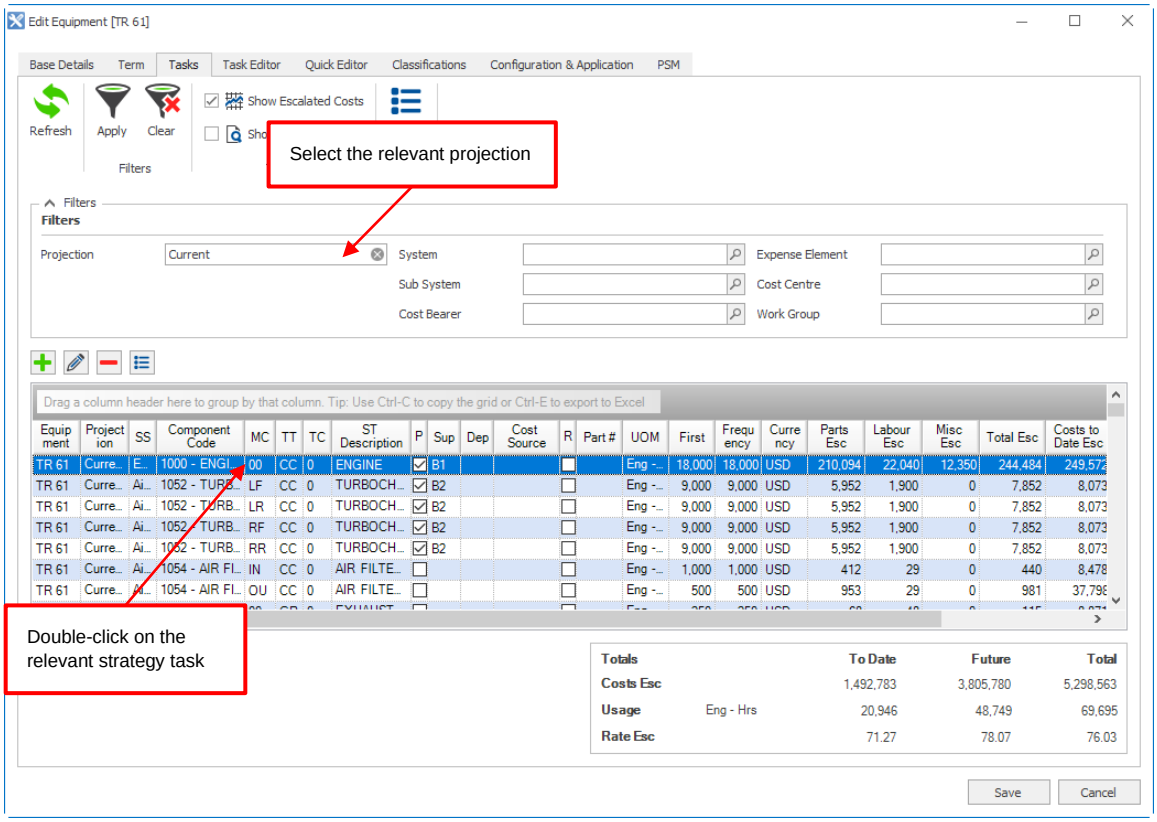


2. Navigate to the **Job Details** tab.

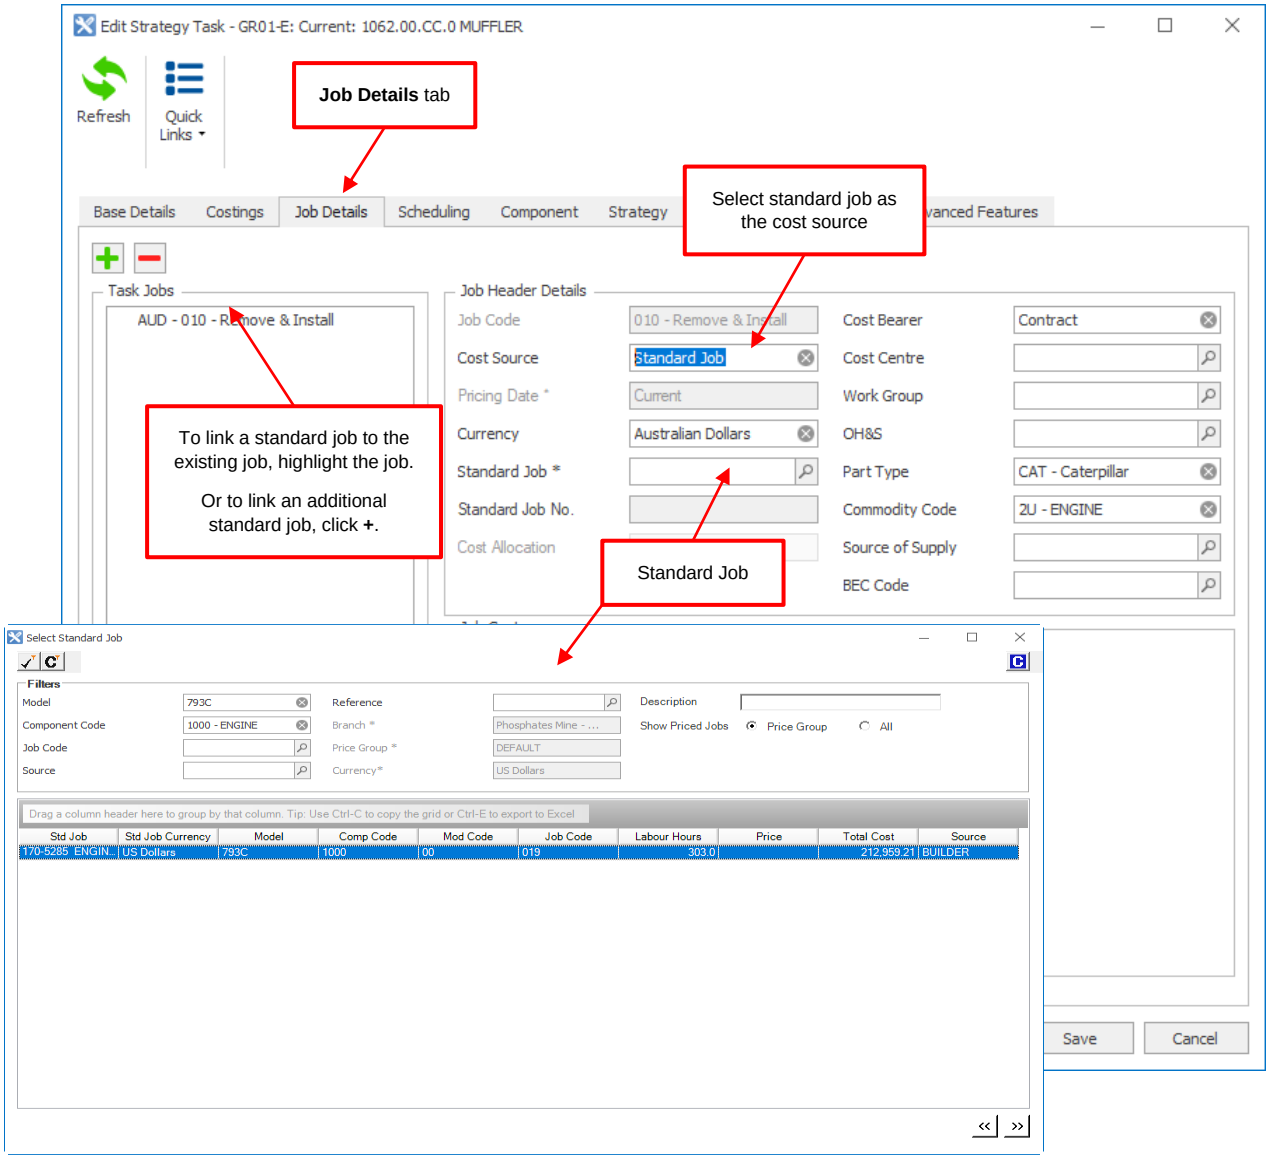

The currency defaults to the currency of the standard job's price group; however this can be overridden.

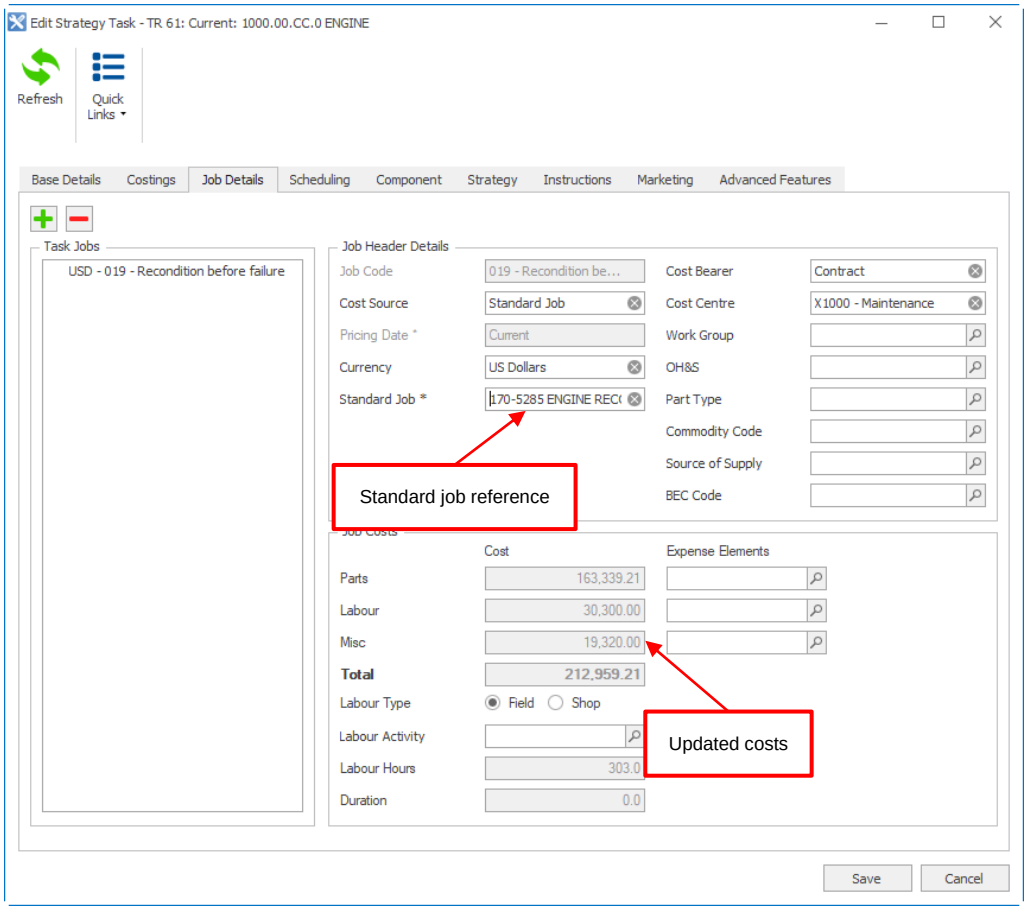

3. Click **Save**.

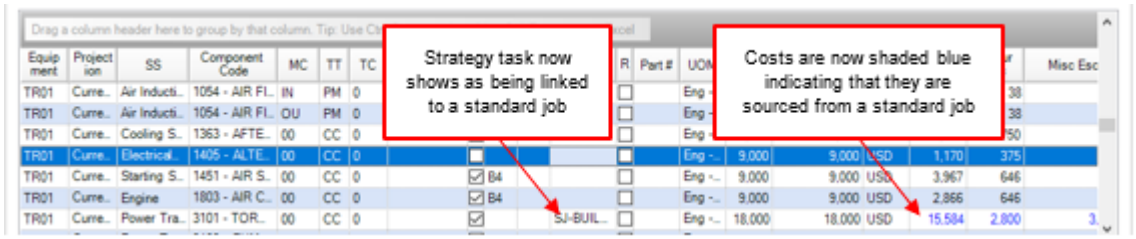

Exercise – Linking Standard Jobs to Strategy Tasks

1. Link five standard jobs to five strategy tasks.

Procedure – Strategy Task's Quick Link

1. If a strategy task is linked to a standard job, but you want to change the standard job, click the strategy task's quick link and select one of these options:

   a. **Edit Standard Job** - Edit the standard job directly, which will update the costs of the strategy tasks after the changes are saved.



*If the standard job is secured and/or imported from an external source, you may not be able to edit the standard job. In this case, select **Edit and Copy Standard Job** (see below). If you can edit the standard job, all other strategy tasks linked to this standard job.*

   b. **Edit and Copy Standard Job**

      i. AMT will make a copy of the standard job, and it is the copied standard job that you are editing and is linked to the strategy task (the original standard job is unlinked). In other words, you have now created a customised standard job for this strategy task.

      ii. This option overcomes the restrictions of using the **Edit Standard Job** function. However, it does result in more standard jobs records being created in AMT.

Learning Check




Check your understanding of the workshop and ask any related questions.

Notes


16. Create Strategy Tasks from Standard Jobs

Procedure – Create Strategy Tasks from Standard Jobs

2. Navigate to **Standard Job Manager** and select S+.

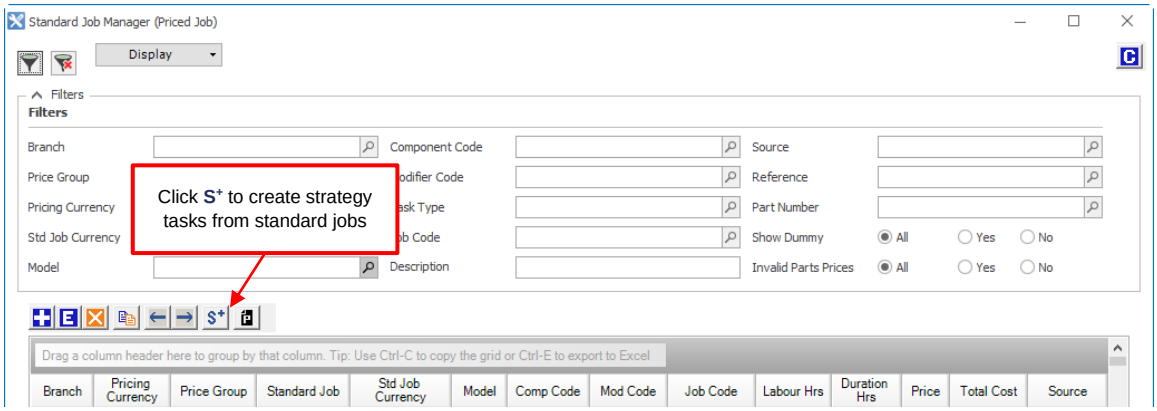

3. Filter for the asset in which the projected task will be created.
4. Select the projection in which the projected task will be inserted (projections available depend on the asset selected in the previous step).
5. Using filters, locate the standard jobs to be used as the basis for projected task.
6. Tick the standard jobs to be imported.

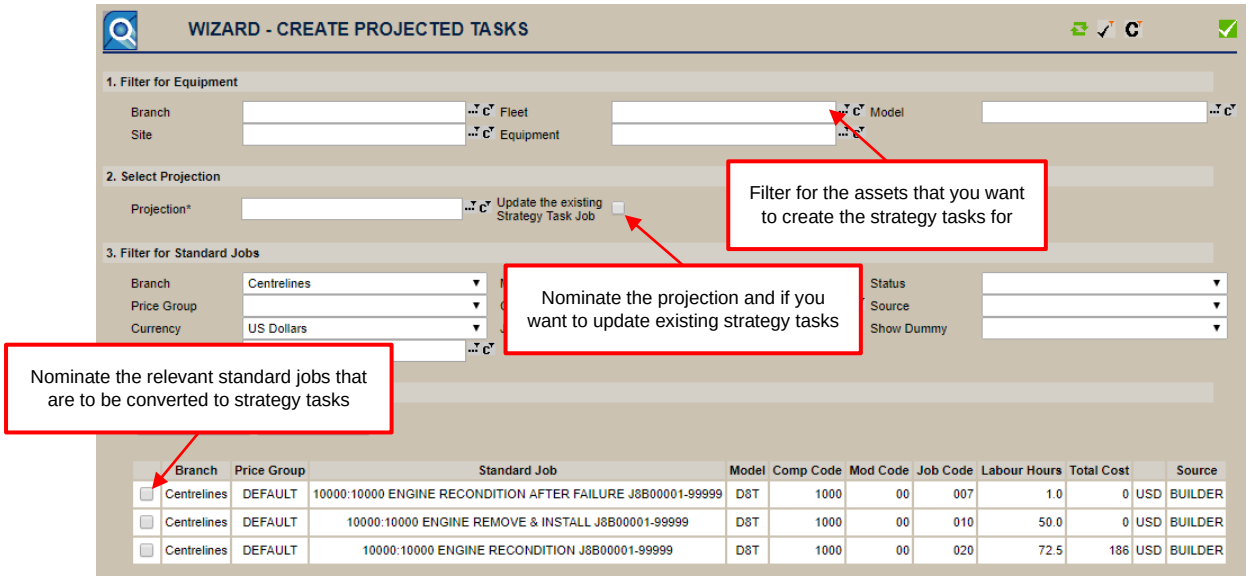

7. Click **Save** to create.
8. If the combination of component code + modifier code + task type + task counter is different for the selected standard jobs, AMT will attempt to create separate strategy tasks for each standard job.
9. If the projected tasks were successfully created, a confirmation message will display.

10. If the following conditions all occur, AMT will create one strategy task with each of the standard jobs attached:
    - The combination of codes is the same for a group of standard jobs.
    - The job code of one of the standard jobs is flagged in the Job Code table as **Remove & Install**.
    - The job codes of the other standard jobs in the group of like codes are flagged as **Include in R&I Job**.




Exercise – Creating Strategy Tasks from Standard Jobs

1. Create five strategy tasks from existing standard jobs.


17. Exporting Standard Jobs

Procedure – Exporting Standard Jobs

1. To export a standard job, navigate to **Standard Job Manager** and click **Export Standard Jobs**.

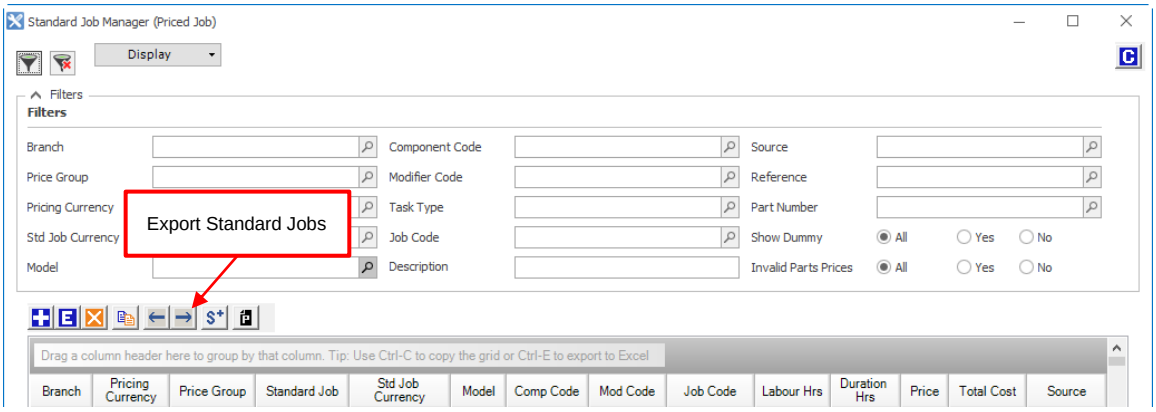

2. Locate the standard job using the data filters, and tick the standard jobs to export.
3. If the current standard job codes are to be converted to the global codes, tick **Convert to Global Codes**.
4. Enter a simulation reference if the standard jobs require a unique identifier (such as the identifier used by the program into which the exported standard jobs will be imported).
5. Enter the file name of the standard job export file.

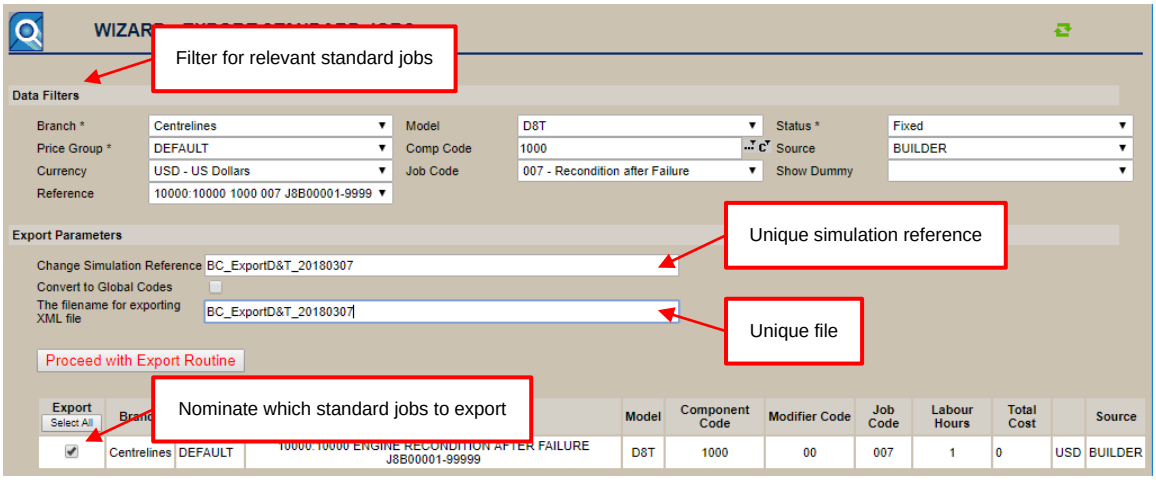

6. Click **Proceed with Export Routine** to export the standard jobs into the XML file that you specified.



Exercise – Export Standard Jobs

1. Export the five standard jobs created in Exercise - Creating Strategy Tasks from Standard Jobs.

Learning Check



Check your understanding of the workshop and ask any related questions.

Notes