
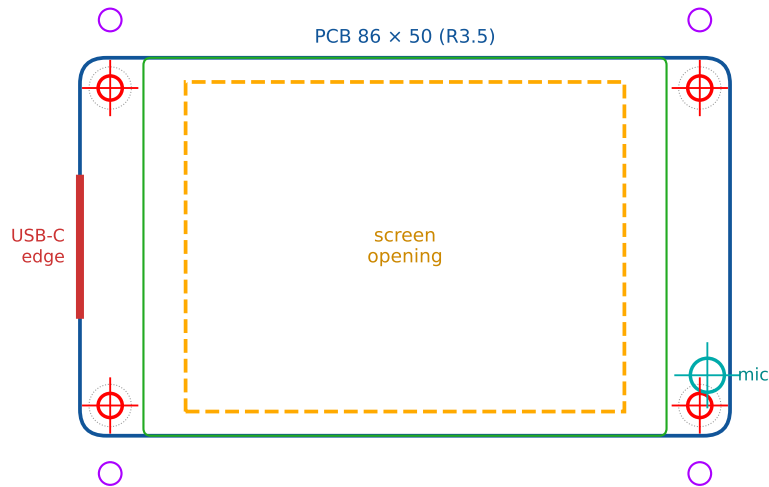


FRONT — board mount + screen check

lay your board SCREEN-UP, USB edge to the LEFT



CALIBRATION: this bar must measure 100 mm



- Align your board outline to the blue rectangle (USB edge left).
- the 4 red holes must line up with your board's Ø3.2 mount holes
- the orange dashed opening should frame your display nicely
- purple ○ = bezel screws · dotted ○ = Ø5.6 head keep-out

BACK — connector position check (ESTIMATED!)

flip your board FACE-DOWN, USB edge to the RIGHT

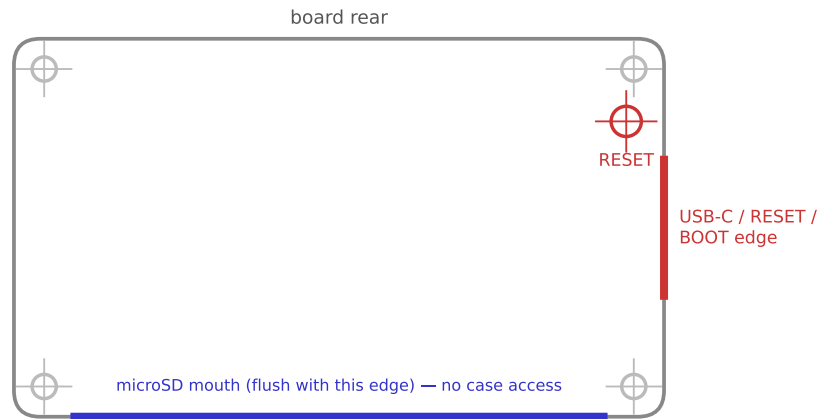

RESET_Y is measured (7.0 mm centre-to-centre from its corner hole); RESET_X is still a photo estimate. Lay your board face-down on the outline and check that RESET ⊕ lands on the real button. If off: measure it from the nearest corner hole and tell me — RESET_X/Y and MIC_X/Y are one-line params. microSD needs no alignment: its mouth is flush with the bottom edge and the case has no card opening — swap the card with the board out of the case.

USB-C panel jack — connector fit check

hold the JUXINICE female end against this outline

CALIBRATION: this bar must measure 100 mm



screws $\varnothing 2.5$ @ 17.0 mm
flange 25.2 $\times$ 8.2



Hold the panel-mount (female) end of the JUXINICE cable here. The flange, the 9 $\times$ 3.5 receptacle, and the two $\varnothing 2.5$ holes at 17 mm should all match. If they don't, tell me the real flange size / screw spacing (PANEL_* params).