


FRONT — board mount + screen check

lay your board SCREEN-UP, USB edge to the LEFT



CALIBRATION: this bar must measure 100 mm

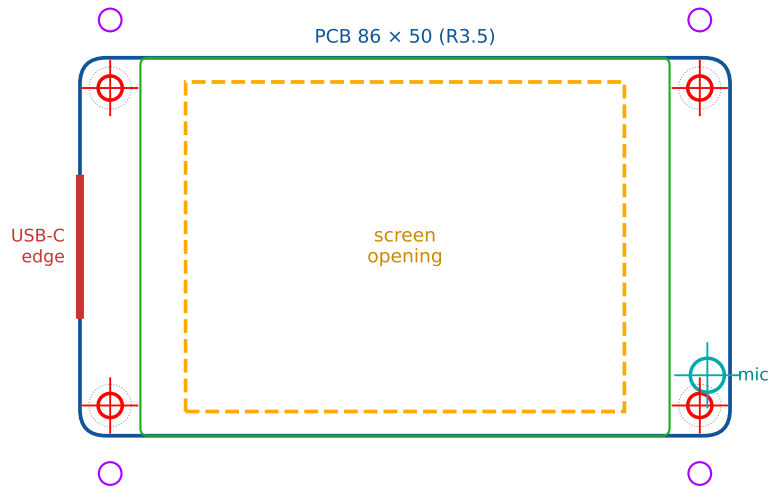

- Align your board outline to the blue rectangle (USB edge left).
- the 4 red holes must line up with your board's Ø3.2 mount holes
- the orange dashed opening should frame your display nicely
- purple ○ = bezel screws · dotted ○ = Ø5.6 head keep-out

BACK — connector position check (ESTIMATED!)

flip your board FACE-DOWN, USB edge to the RIGHT

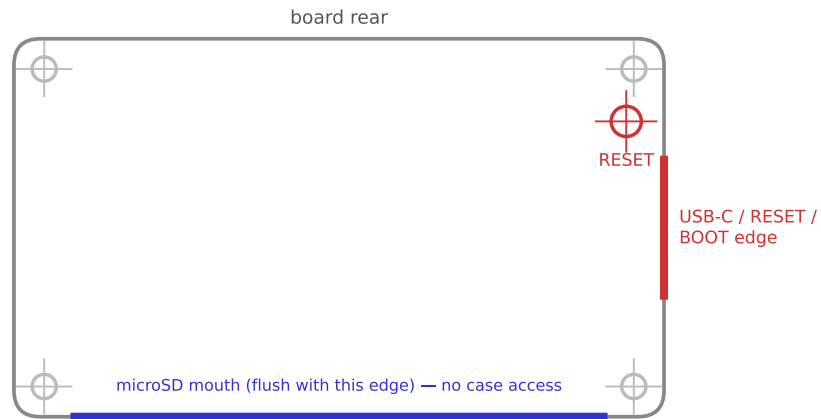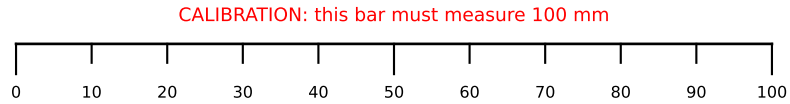


RESET_Y is measured (7.0 mm centre-to-centre from its corner hole); RESET_X is still a photo estimate. Lay your board face-down on the outline and check that RESET ⊕ lands on the real button. If off: measure it from the nearest corner hole and tell me — RESET_X/Y and MIC_X/Y are one-line params. microSD needs no alignment: its mouth is flush with the bottom edge and the case has no card opening — swap the card with the board out of the case.


USB-C side port — plug fit check

hold your USB-C plug against this slot (it is on the -X / left wall)

CALIBRATION: this bar must measure 100 mm

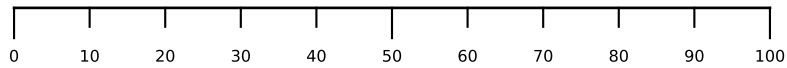

slot 18.0 (along the board) × 12.0 (into the case)

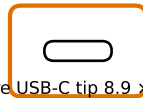

bare USB-C tip 8.9 × 2.6

The rear panel-mount jack is GONE — a normal USB-C cable now plugs straight into the board through this slot in the left (-X) wall. Hold your actual plug here, overmold and all: it must clear the outer rectangle, not just the tip.

A right-angle plug keeps the stand tight to the wall; a straight one sticks out ~18 mm. If it fouls, widen USB_SLOT_Y / USB_SLOT_Z in stand_params.py.