



GER-M300ST G2 Automotive Relay

Summary

- 1. 1000V Main Relay for e-Mobility
- 2. Max. Continuous Current: 300A
- 3. Electrical Life: 100ops. at 250A, 500VDC

• Contact Data

Contact Arrangement	SPST-NO
Max. Operating Voltage	1000VDC
Max. Continuous Current	300A
Min. Switching Load	1A 12VDC
Contact Voltage Drop(Initial)	0.02V (at 20A)
Electrical Life	250A, 500VDC, 100ops.
Mechanical Life	Min. 200,000ops
Short Time Current	300A (cont., 75mm²) 500A (340s., 75mm²) 600A (165s., 75mm²)

Characteristics

Initial Breakdown Voltage Between Open Contacts Between Contacts and Coil	2,600Vrms/min (Detection Current: 10mA)
Initial Insulation Resistance	Min. $100M\Omega$ (at $1000VDC$)
Operate Time (@ 20°C)	Max. 50ms
Release Time (@ 20°C)	Max. 30ms
Shock Resistance Functional Destructive	196m/s²(20G) (1) 490m/s²(50G) (2)
Vibration Resistance Functional Destructive	1.0G (3) 4.5G (4)
Tightening Torque Mounting Hole Main Terminal	(M5): 3 to 4 N·m [M6]: 3.5 to 4.5N·m, 9.0 to 10.0N·m, 3Time, 100rpm
Degree of Protection	IP40
Unit Weight	420g

(1) Relay On: 11ms half sine
(2) Relay On: 9ms half sine wave
(3) 10 to 1,000Hz Time of vibration for each X,Y,Z direction: 8 hours
(4) 10 to 200Hz in increments of 10 Time of vibration for each X, Y, Z direction: 4 hours

• Coil Data

Single Coil					
Rated Voltage	Pick-up Voltage	Drop-out Voltage	Max. Allowable Voltage	Power Consumption	Coil Resistance
12VDC	Max. 9VDC	Min. 1.2VDC	15VDC	4.5W	$3.4\Omega/38.5\Omega$ ± 10% at 12VDC
24VDC	Max. 18VDC	Min. 2.4VDC	30VDC	4.5W	15.2Ω/157.3Ω \pm 10% at 24VDC







• Dimension


GER-M300ST G2

Unit: mm

X Bidirectional

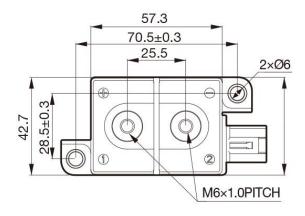


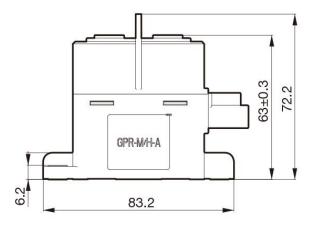

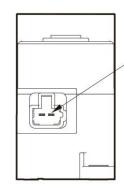

Connector type

- 1. Manufacturer: KET
- 2. Iten code: MG641029

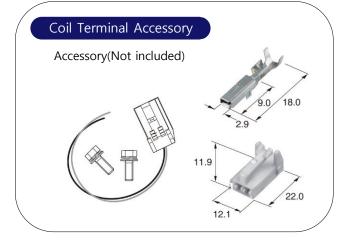

General Tolerance

Less Than 10: ±0.3/ 10-50: ±0.5


More Than 50: ±0.8




• Dimension

GER-M300STSM G2 Unit: mm

X Bidirectional

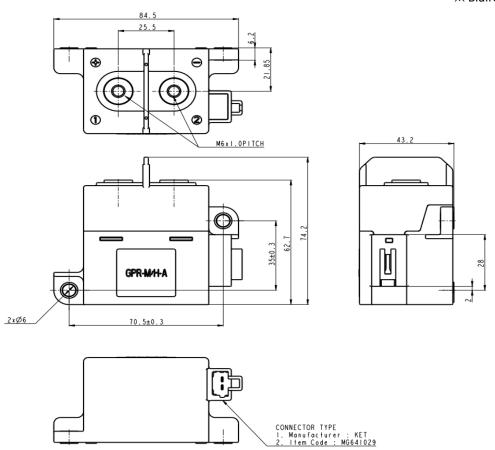

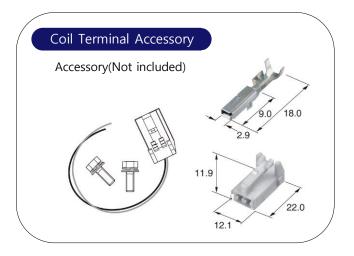

General Tolerance


Less Than 10: $\pm 0.3/$ 10-50: ± 0.5 More Than 50: ± 0.8






• Engineering Data

Operating Voltage Data

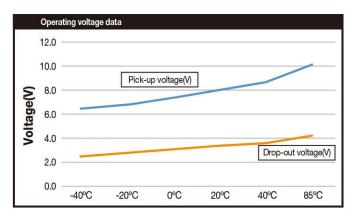

Current Distribution(75mm² @85°C)

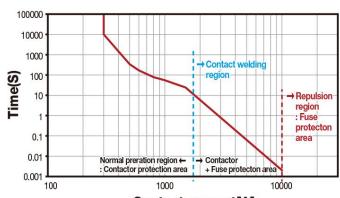

Contact current[A]

BUSBAR /CABLE	Current	Duration
[mm²]	[A]	[s]
	300	Cont.
	500	378
	600	186
75	800	87
	1000	52
	1200	34
	1500	23
100	300	Cont.
	700	99
100	1000	58
	1500	24
120	400	1400
	600	220
	800	99
	1000	70
	1500	25

Expected Life

Electrical Life	(L/R<1ms)	300A	at DC500V	300Cycle	(360 Cycle / Hr)
	(L/R<1ms)	-300A	at DC500V	300Cycle	(360 Cycle / Hr) - Reverse
	(L/R<1ms)	140A	at DC20V	70,000Cycle	(720 Cycle / Hr) - Inrush current
	(L/R<1ms)	650A	at DC1000V	2Cycle	(360 Cycle / Hr)
	(L/R<1ms)	370A	at DC14.5V	200,000Cycle	(720 Cycle / Hr) - Only Making
	(L/R<1ms)	-370A	at DC14.5V	200,000Cycle	(720 Cycle / Hr) - Only Making
	(L/R<1ms)	1400A	at DC800V	30Cycle	(360 Cycle / Hr) – Inrush, 2400µF
Max. Cut -off current	(L/R<1ms)	1800A	at DC500V	5Cycle	(360 Cycle / Hr)
	(L/R<1ms)	-1800A	at DC500V	5Cycle	(360 Cycle / Hr) - Reverse
	(L/R<1ms)	800A	at DC800V	10Cycle	(360 Cycle / Hr)
	(L/R<1ms)	-800A	at DC800V	10Cycle	(360 Cycle / Hr) - Reverse
	(L/R<1ms)	250A	at DC450V	2,000Cycle	(360 Cycle / Hr)
	(L/R<1ms)	20A	at DC450V	50,000Cycle	(600 Cycle / Hr)
	(L/R<1ms)	-20A	at DC450V	50,000Cycle	(600 Cycle / Hr) - Reverse





Ordering Information (Reference)

1 GER: Green Electrical vehicle Relay GPR: Green Power Relay

Operating Voltage

Blank ≤450V M 450-1000V Н 1000-1500V

Conventional thermal Current

010 10A 200 200A 040 40A 250 250A 100 100A 400 400A 150 150A 500 500A

4 Product Type

ST: Standard parts Customized product

- VV **VOLVO**

- VW Volkswagen

- BW BMW

6 Auxiliary Contact

Blank: N/A -A: N-O -B: N-C

6 Control Voltage

Blank: DC12V DC24V: DC24V

Mounting Type

Blank: Bottom Mounting SM: Side Mounting PI: Plug In Type

8 Main Feature

G2: New Generation 2

SL: SLIM

2CO: 2Coil Control 1CO: 1Coil Control PWM: PWM Control

Connector Vertical 48V: Rated Voltage 48V Economic Type ET:

CYET: Cylindrical Effective Type







Instructions for use

Main Contactor

- 1. Length of bolts to main contacts of relay should be 6~8mm except bus bar/terminal.
- 2. Contacts of relay can be oxidized in the air causing some discoloration, but there is no problem to use.
- 3. Excessive load input to main contacts and over-life may cause heat generation.
- 4. Avoid oil or foreign substances adhering to main contacts, there may be heat generation to the contacts.
- 5. Contact resistance may increase due to torque applied to the main contacts or vibration / shock during movement. In this case, please re-measure by applying voltage / current of actual use condition.

Mounting

- 1. Use the torque range specified in catalog, when tightening screws and nuts to fixed mounting or main contacts.
- 2. We generally recommend tightening the relays using bolts. When using nuts, the fixed mounting injection part may be pushed and broken. (Use a flat nut when using nuts.)
- 3. When designing the fixed mounting mounted to relay, please make sure that injection area is not pressed. Fixed mounting of the relay can be broken.

Coil

- 1. Do not turn off the coil while power is supplied to the main contacts of relay. The relay may be damaged.
- 2. Excessive load input to coil part may cause heat generation.
- 3. If voltage is applied slowly to the coil, the relay may not operate. Please operate the coil promptly.
- 4. When load is applied to main contacts and relay coil turns on/off, coil temperature rises so that coil resistance can rise. In this case, operating voltage may exceed the rated voltage. To avoid this situation, we recommend that you take precautions such as increasing the load current, limiting voltage application time, and applying high coil voltage and nominal voltage.
- 5. When measuring the withstanding voltage(Initial Breakdown Voltage), measure the relay in OFF state.

Installation

- 1. Please avoid cross-connection as it may cause malfunction or overheating.
- 2. If distance between relays is close or if heat generating parts are located close to relay, be careful of temperature rise and insulation (minimum distance between relays is at least 10mm).
- 3. Use a conductor suitable for the specific current. Failure to meet recommended size(SQ) of conductor may cause heat problems. (It is necessary to consider the condition when installing the module)
- 4. When wiring, make sure that the power supply is disconnected. Relays can be damaged.



Instructions for use

Environment

- Use pick-up/drop-out voltage according to the operating environment. Pick-up/drop-out voltage may vary.
- Relay life may vary depending on load type used, operating frequency, coil drive circuit and surrounding 2. environment.
- When using a capacitor, make sure that inrush current should not exceed the rated current of relay(95% or more capacitor charging is recommended)
- When using inductive load L / R 1ms, measures such as installing surge absorbers in parallel should be taken in order to prevent shortening of electrical life or contact failure.
- Do not install relays near objects that emit strong magnetic fields or heat.
- If relays are installed close to each other or near magnetic parts such as motors and speakers, the relays may change operating characteristics or cause malfunctions. Therefore, check the performance under actual operating conditions, after installation.
- 7. If a product such as current sensor is installed near relay, check the performance under actual operating conditions. There may be a problem to output.
- When pulling lead wire of the female connector on the opposite side, do not pull it with a force of more than 0.5N. There may be a problem with the product.
- This product is not waterproof. (IP40)
- 10. Do not use the product in an environment where organic solvents such as alcohol, benzene, thinner, and strong alkali (ammonia or caustic soda) can easily adhere to the product.
- 11. Additional components should not be applied to the relay housing.
- 12. Please note that welding may occur in following environments: inrush current, shutdown, short circuit, low coil voltage, fuse combination
- 13. Make sure that resonance does not occur at relay mounting area. Vibration values guaranteed may be exceeded due to the resonance.
- 14. Do not use products that have fallen during use or transportation. It may cause malfunction.
- 15. If temperature changes suddenly, there may be a problem with current-carrying of the relay.
- Headquarter: 95, Baekbong-ro, Heungdeok-gu, Cheongju-si, Chungcheongbuk-do, Republic of Korea (28439)
- Sales team
 - US sales
 - European sales
 - Asian sales
 - China sales

htha@lsems.com mykim2@lsems.com syyoon@lsems.com kjyim@lsems.com

- **Technical team**
 - US sales
 - European sales
 - Asian sales
 - China sales

yjson@lsems.com shyoon2@lsems.com tahn@lsems.com hmrkim@lsems.com

