

# How to run Jconfig Utility

## Prerequisites


To accomplish this process, you will need:

- WP Securebook
- Black (USB) Docking Station
- Red (Wi-Fi) Docking Station
- USB Device
- Jconfig Utility


## Run the Jconfig Utility

To use the Jconfig Utility, follow these steps:


1. Unzip this latest utility

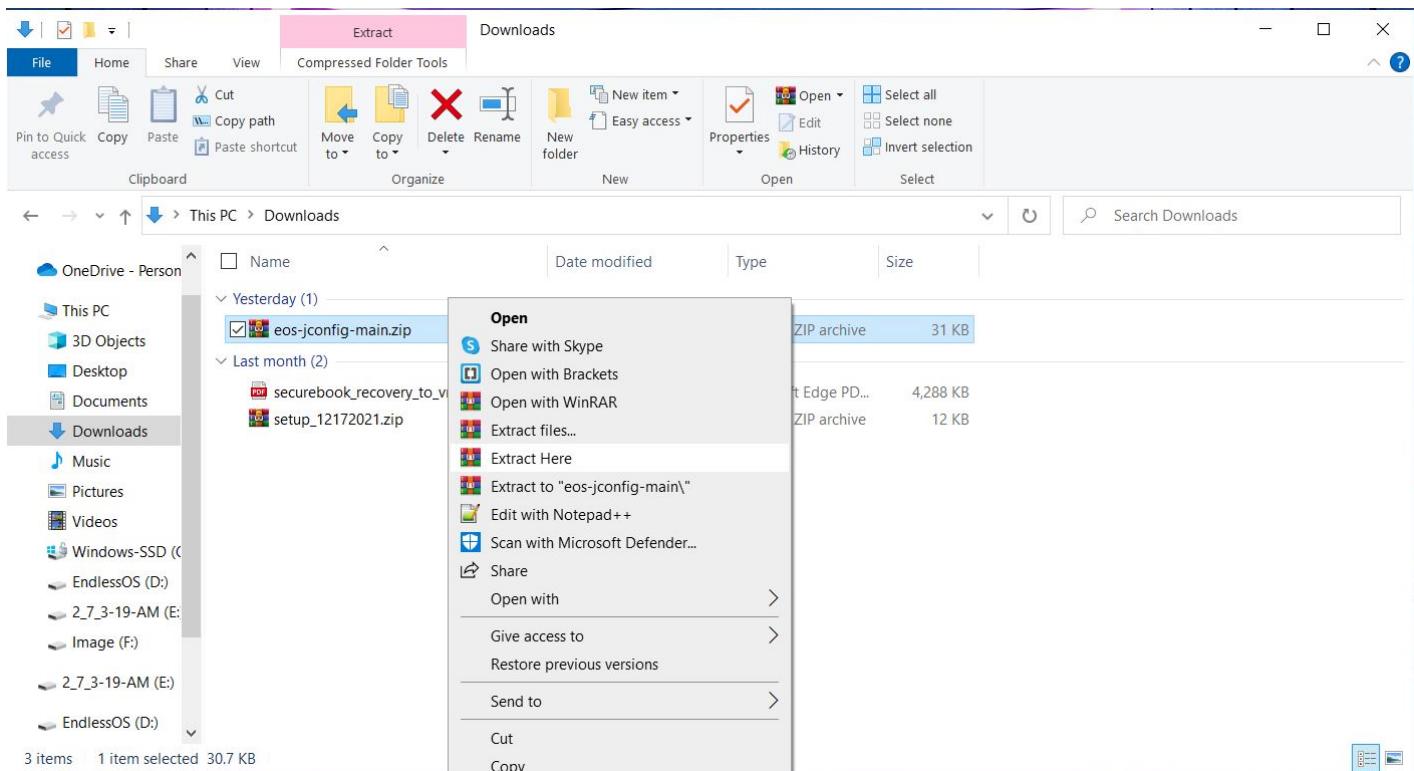


## 2. Place the files from the zip on an exFAT USB drive

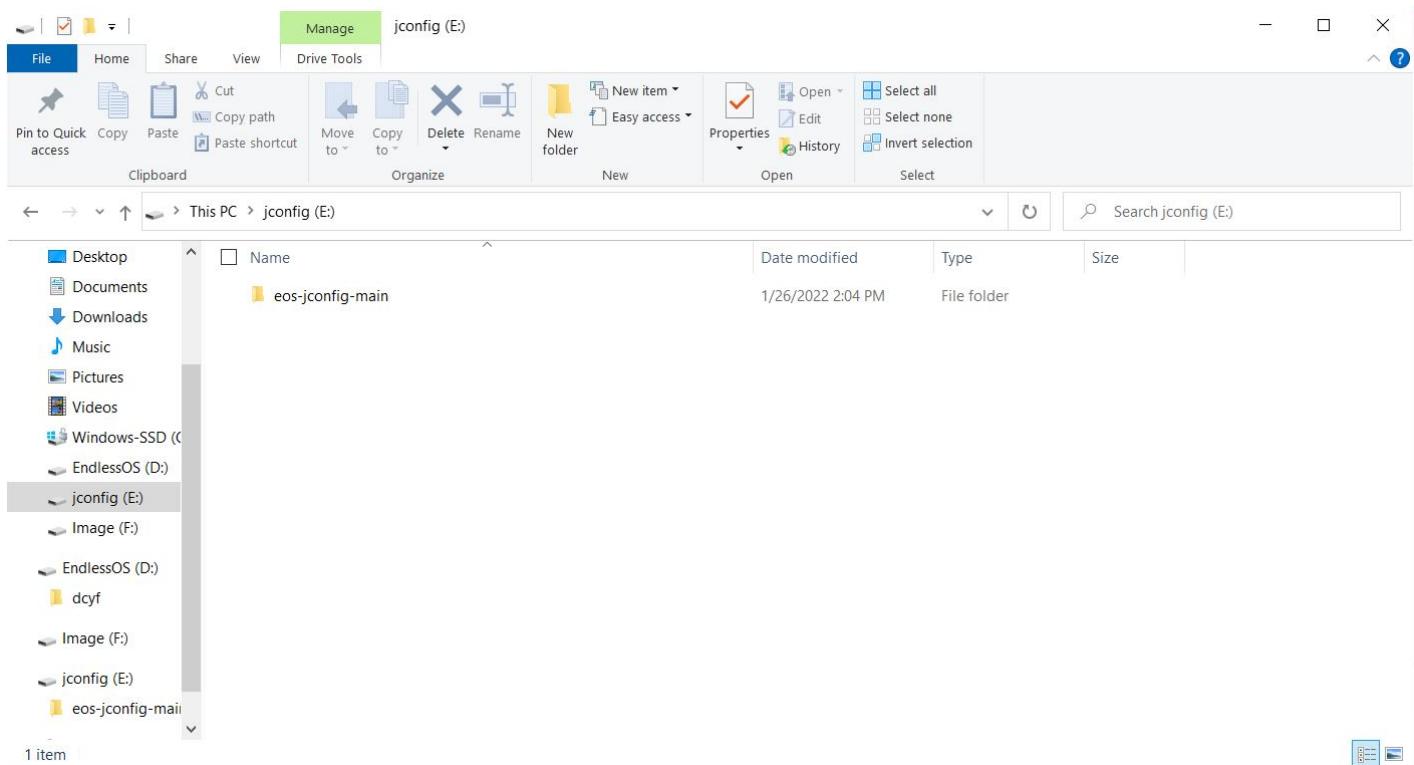


3. Boot the securebook with a black docking station
4. Connect the new exFAT USB stick with the new utility on it in the docking station
5. Login with the jadmin account

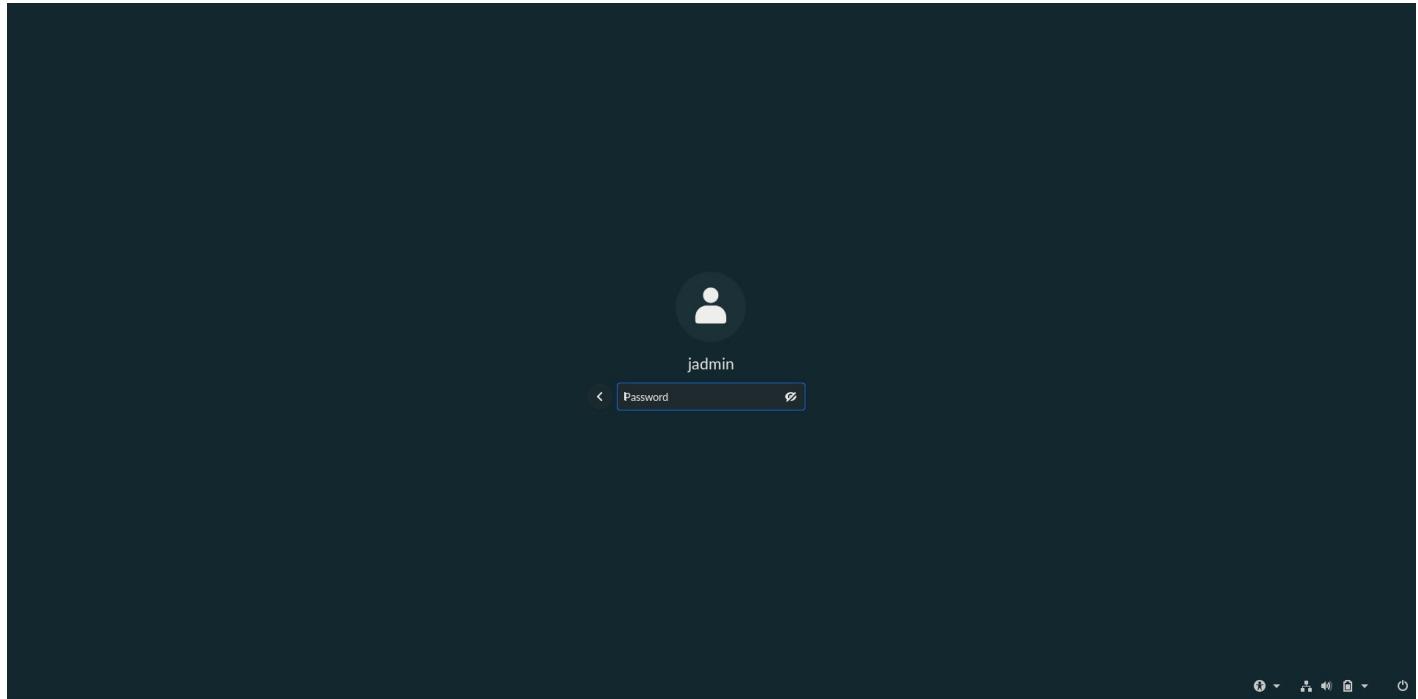


6. Open a terminal window

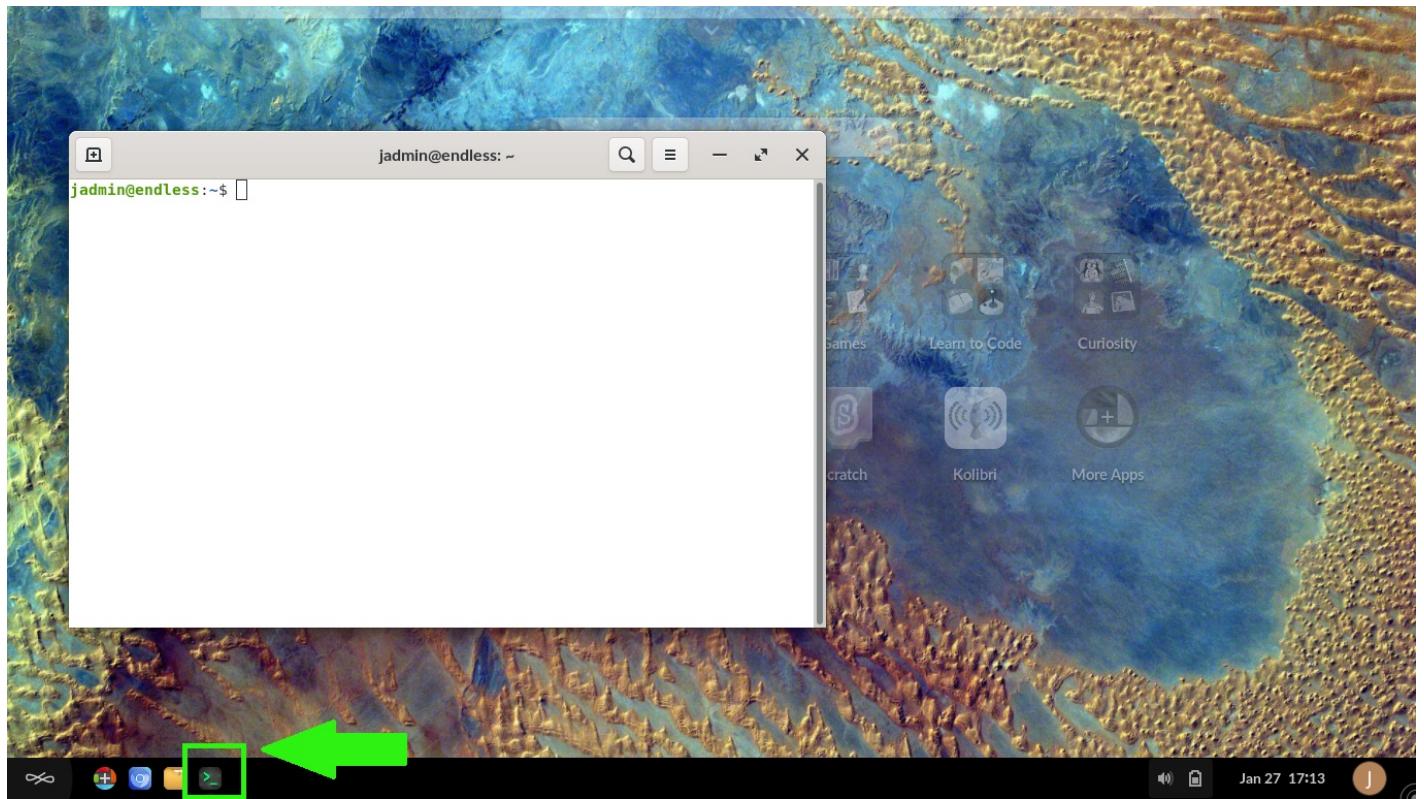


## 7. Open a file manager window

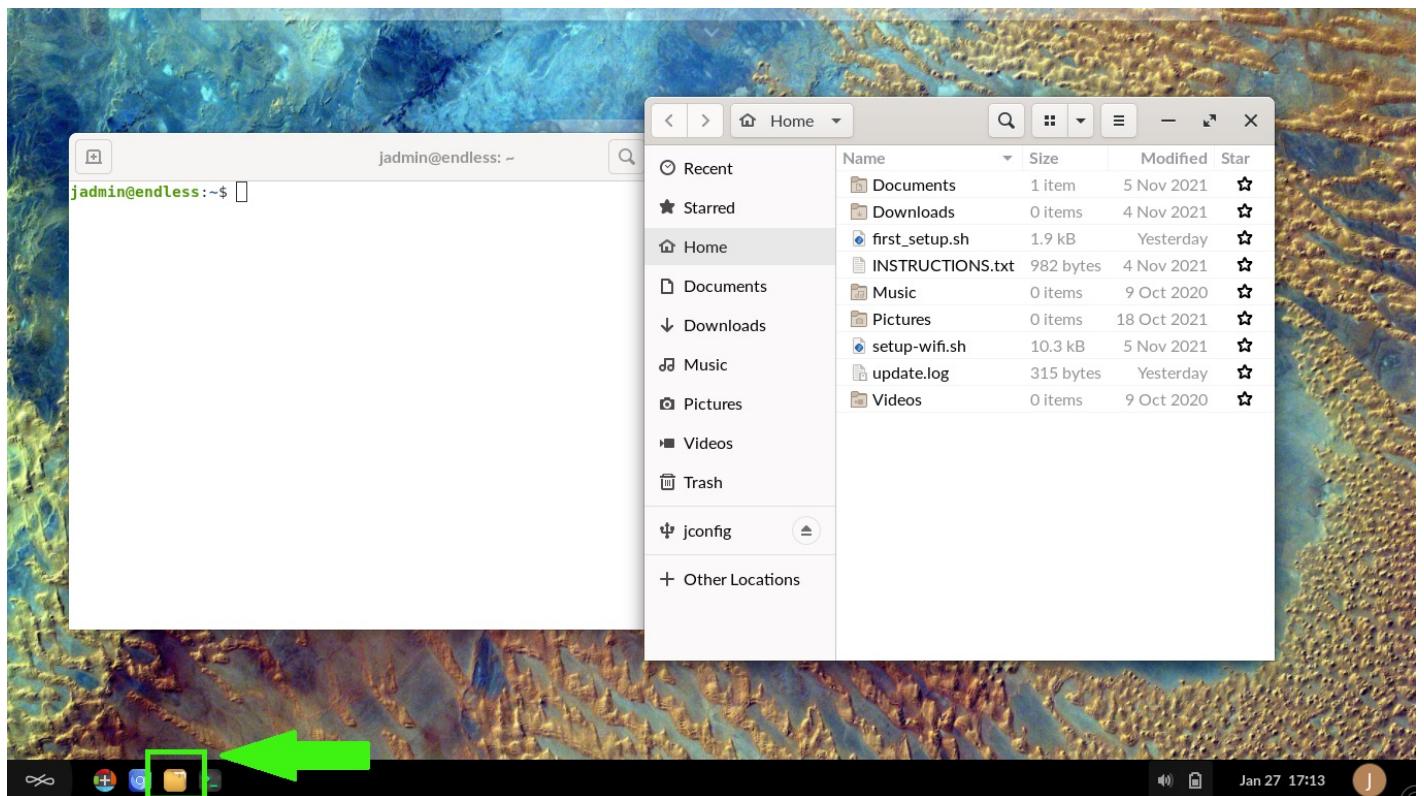

## 8. Navigate to the new USB

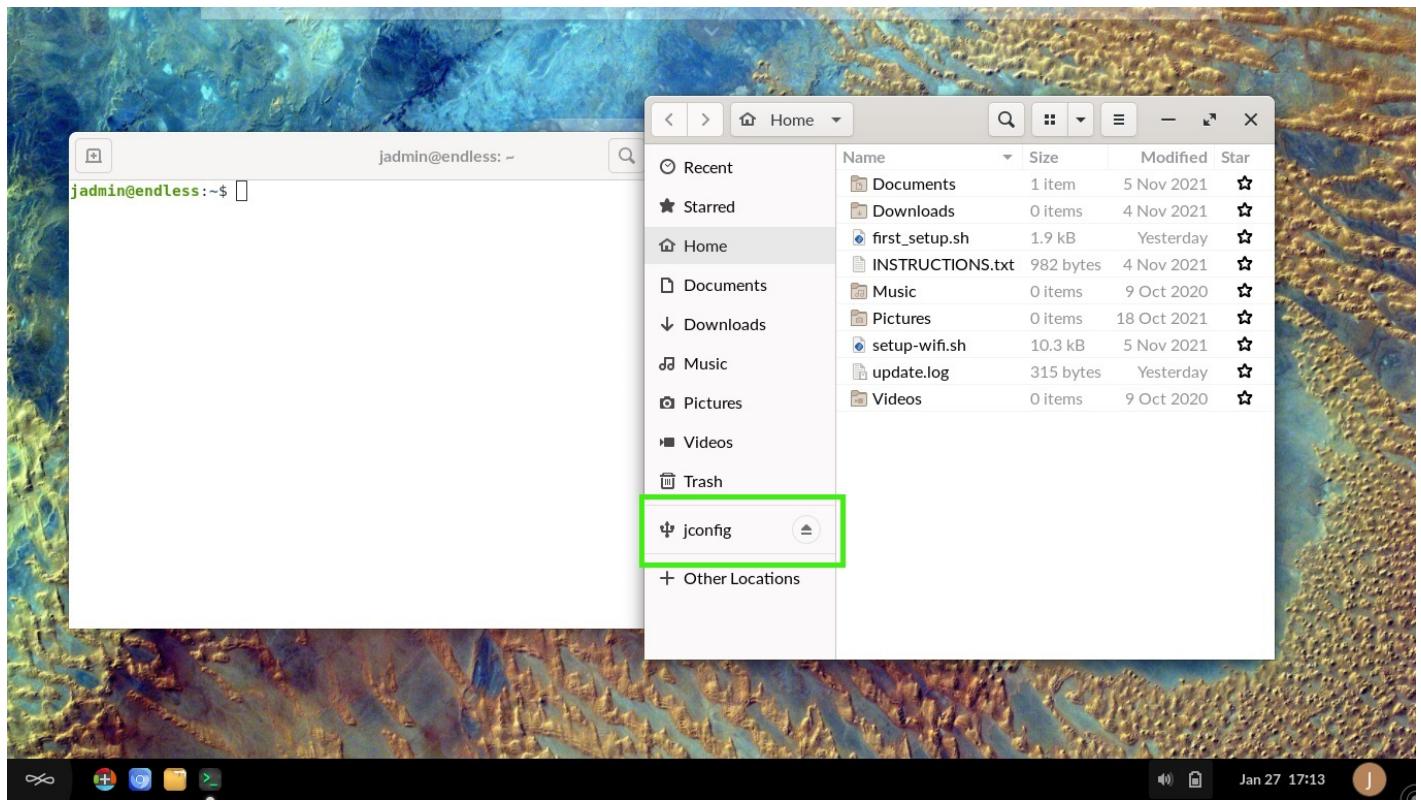


## 9. Drag "setup" onto the terminal window

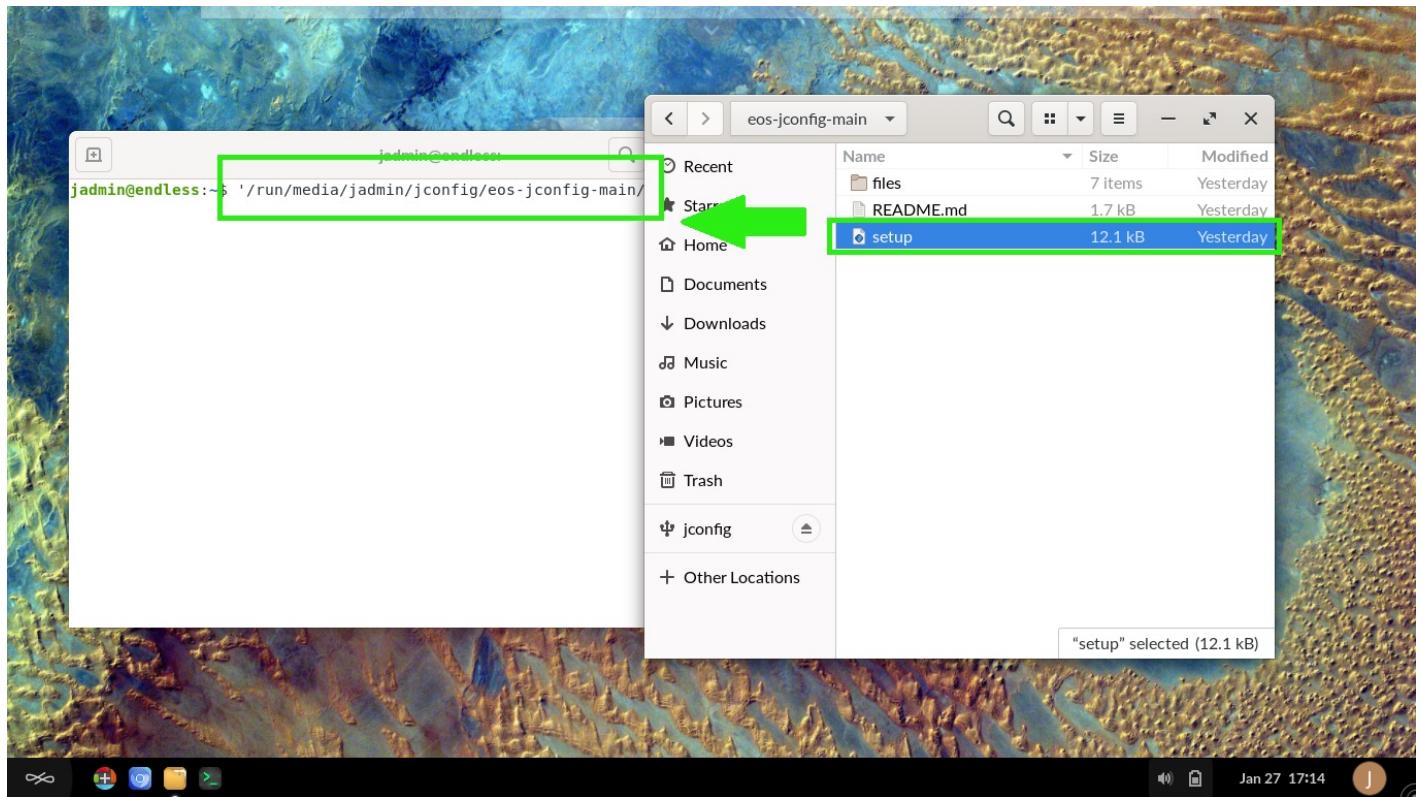

10. Click the terminal window

11. Press enter with the command in place, making sure no changes were made

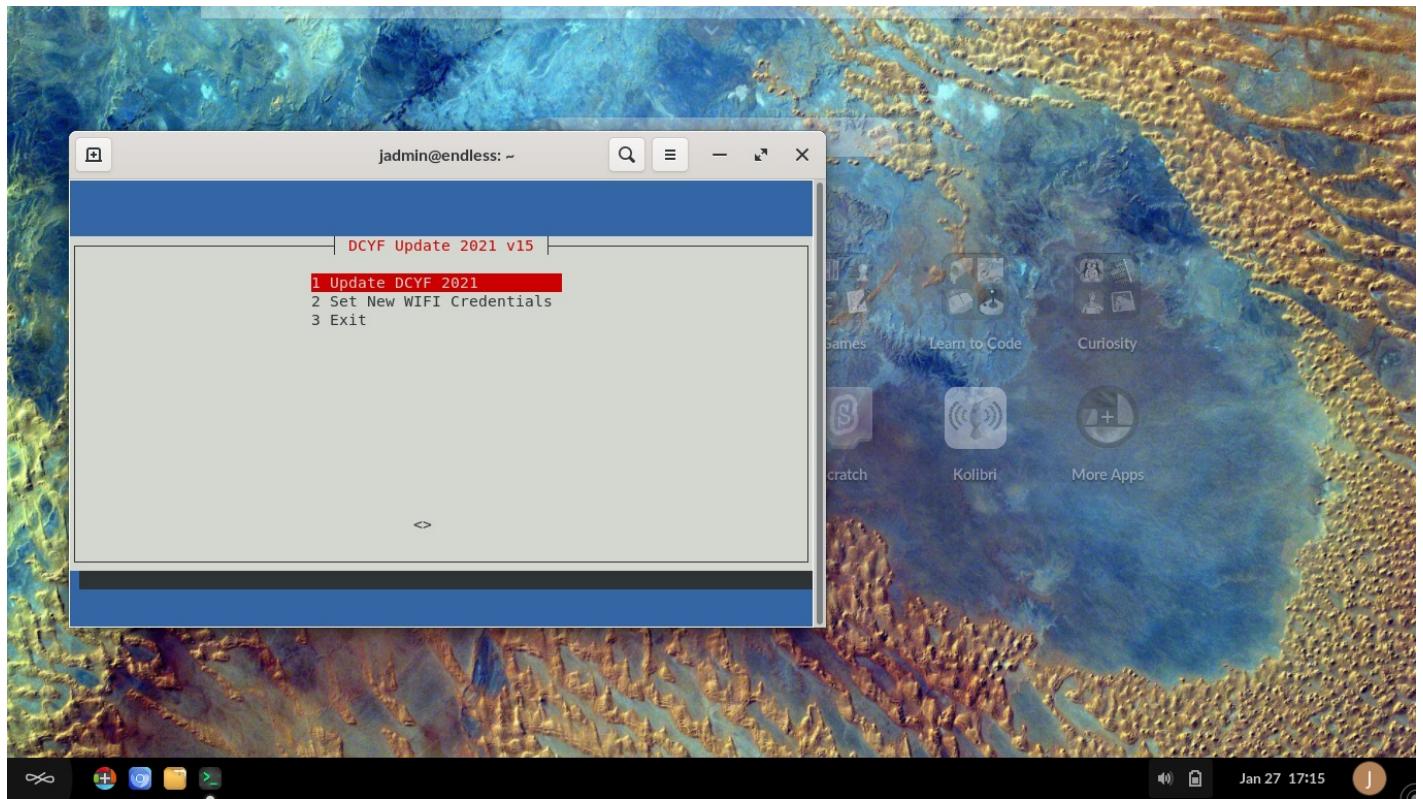


With access to the Jconfig Utility, you now have the ability to run the update script as well as set/change wifi credentials.


## How to change wifi credentials

To use the Jconfig Utility to change wifi credentials, follow these steps:


1. Run the Jconfig Utility

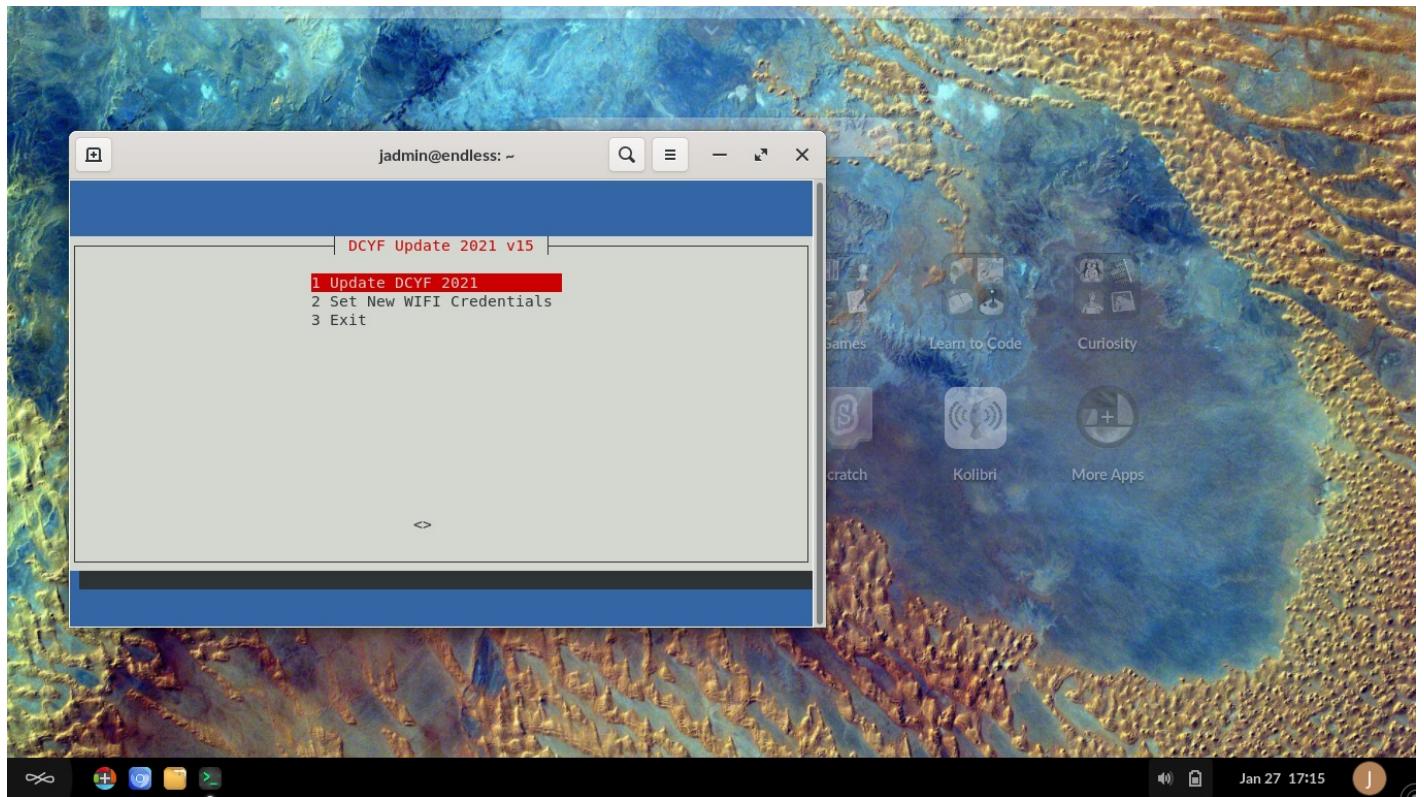

2. Use the arrow key to select "Set New WIFI Credentials" and press ENTER

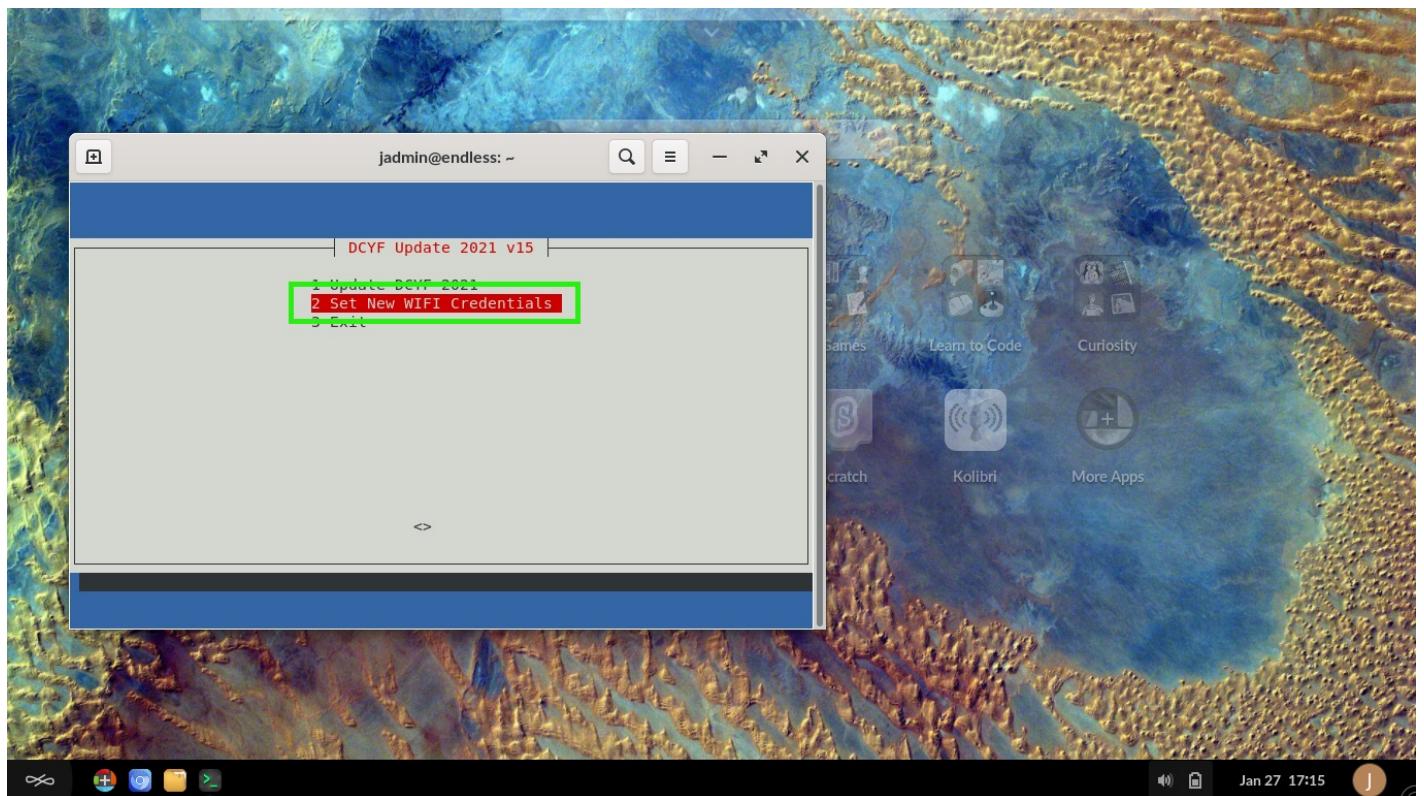


3. Enter the SSID, then press ENTER

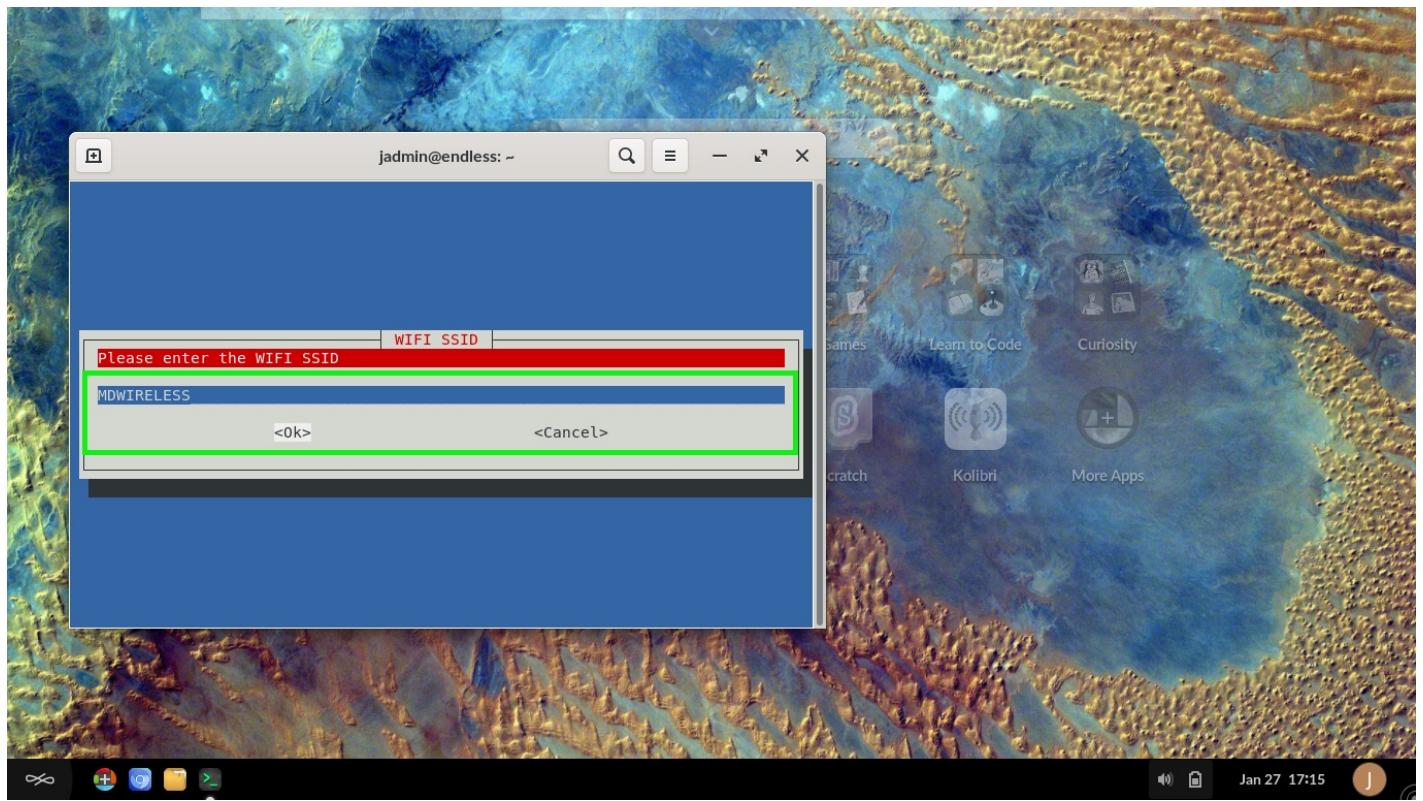


4. Enter the Password, then press ENTER


*Note: Please make sure the network password doesn't use any special characters and only a-z o-9 characters for best results.*

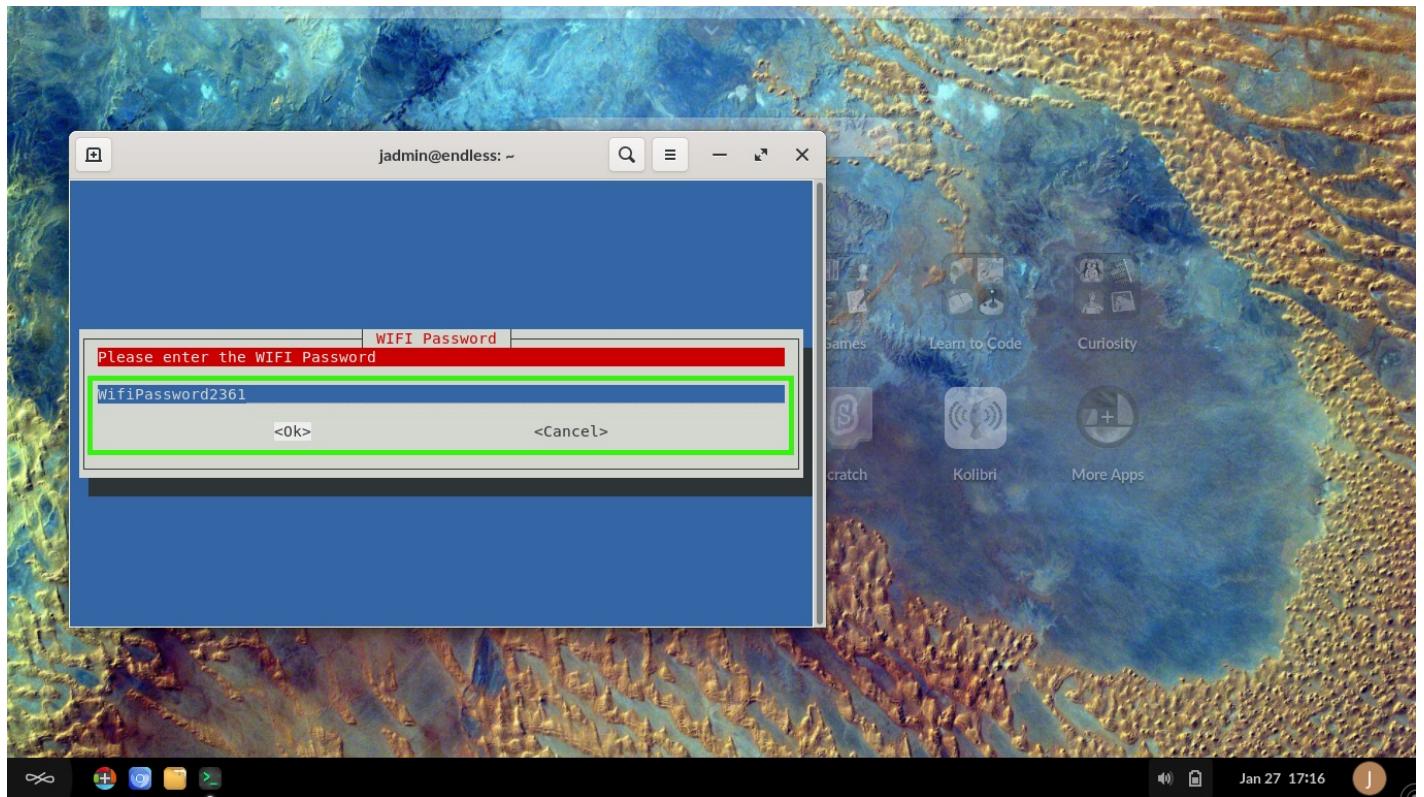

## 5. Press enter to exit any success prompt

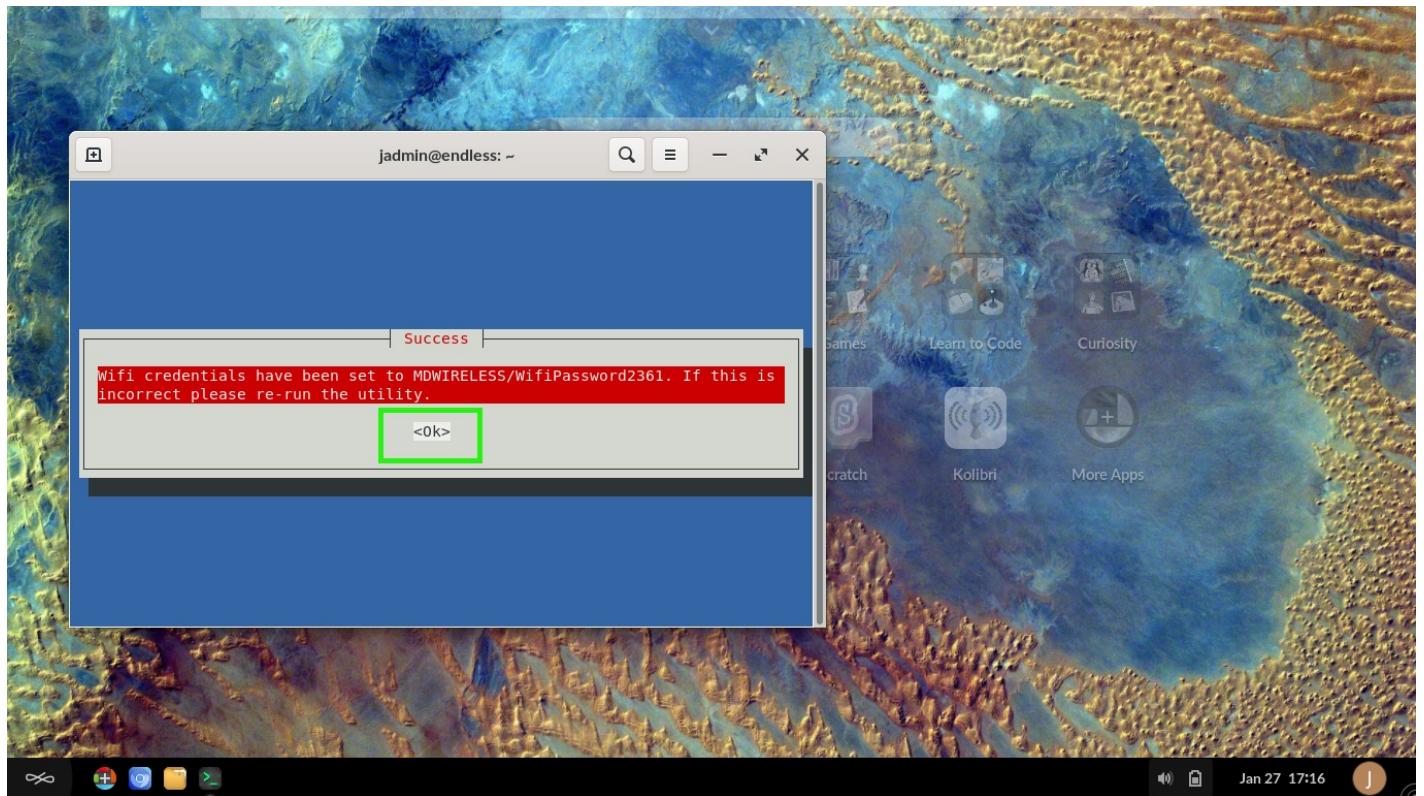

6. Navigate to Exit and press ENTER

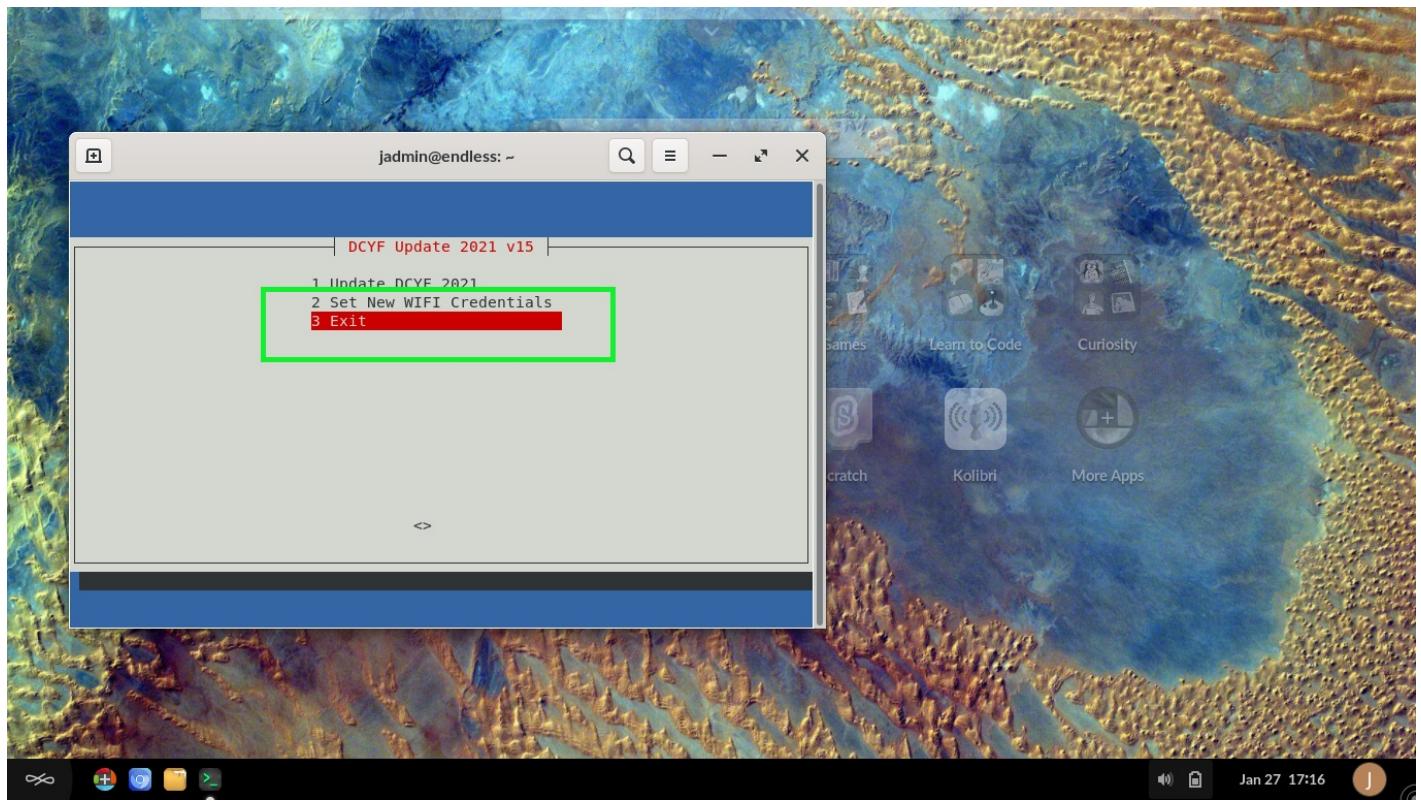

7. Shut the system down
8. Dock to a red WIFI docking station
9. Be in range of the SSID
10. Turn the system on
11. Check that WIFI is properly connected

