


lufsen

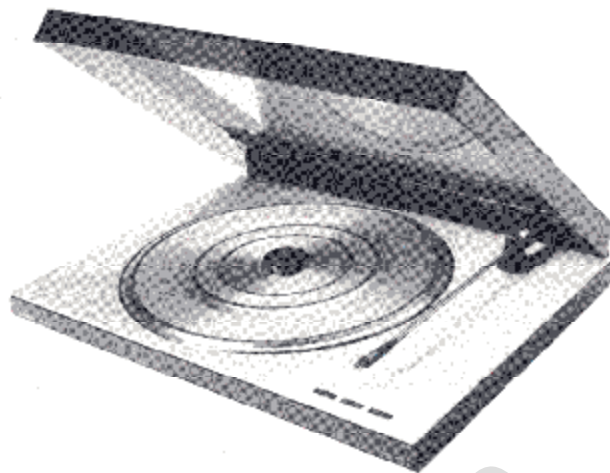

Beogram RX-2

Type 5831 - 5833 - 5835

Supplement for

Beogram 1800, 2000, 5000


SERVICEANVISNING
SERVICE MANUAL
SERVICE ANLEITUNG



0608690231



10-2

BEOGRAM RX-2, type 583X

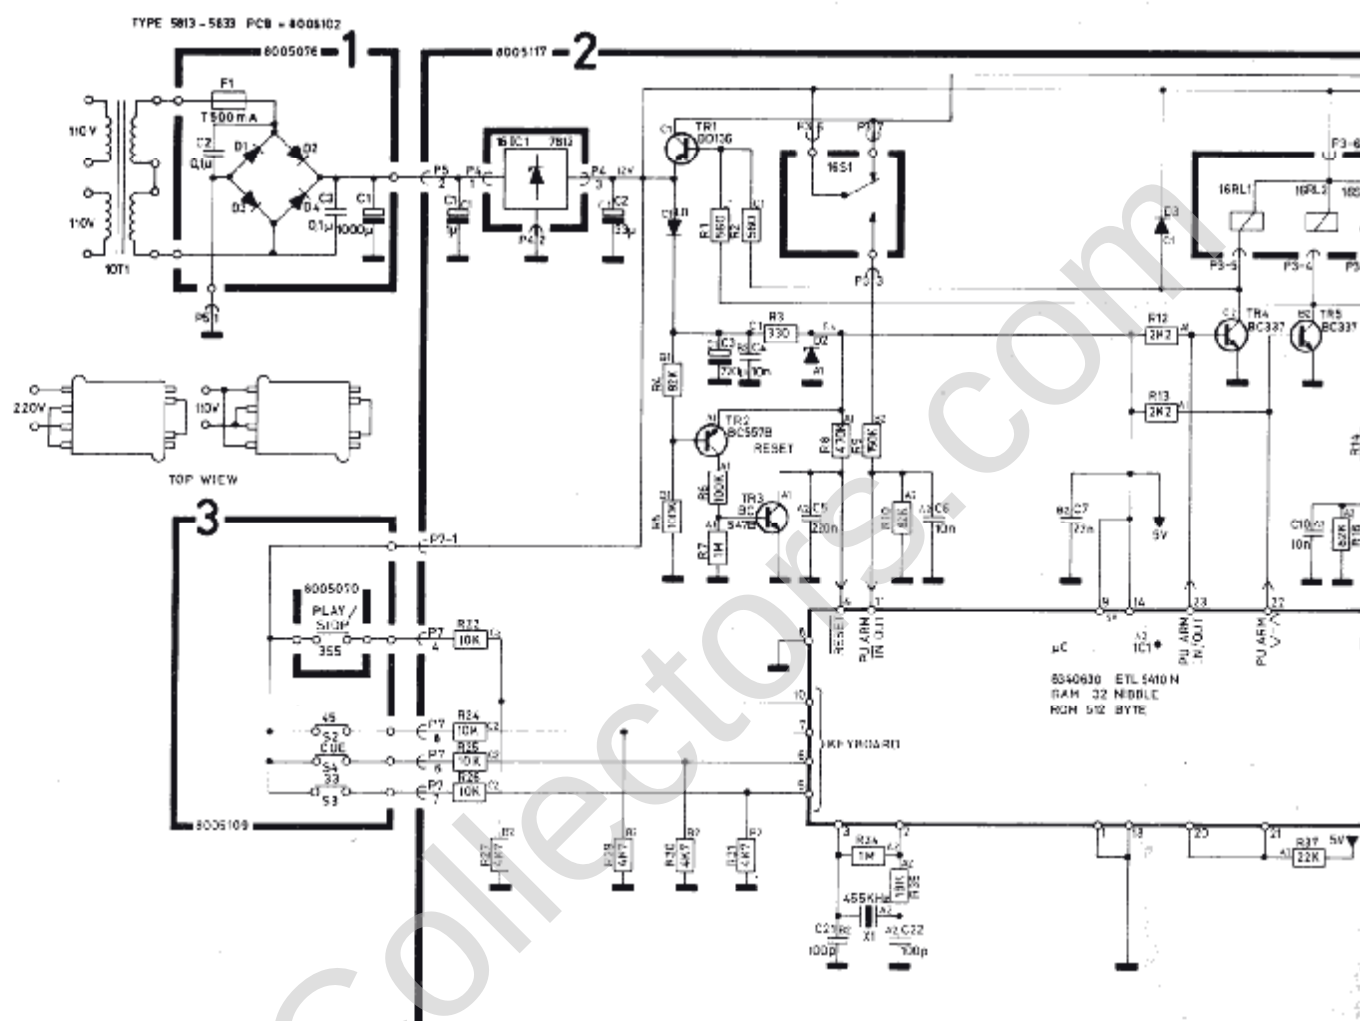

	ACTIVE	PLAY-STOP			CLE		CUE		PLAY-STOP			CUE		RUN OFF STOP		
	From record on turntable	PU up	PU down	Playing	PU up	Pause	PU down	Playing	PU up	PU out	Stop	PU on	PU down	Playing	PU up	PU out/Stop
PU on/in/out output	PIN 23 (15RL1)															
30V/17 cm input	* PIN 13 (16S2)															
PU on/in/out input	PIN 11 (16S1)															
LIFT/lower output	PIN 22 (16RL2)															
LIFT/lower input	PIN 12 (16S3)															

• PIN13 is constant low with 30 cm. record

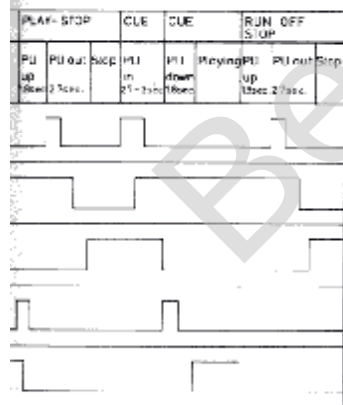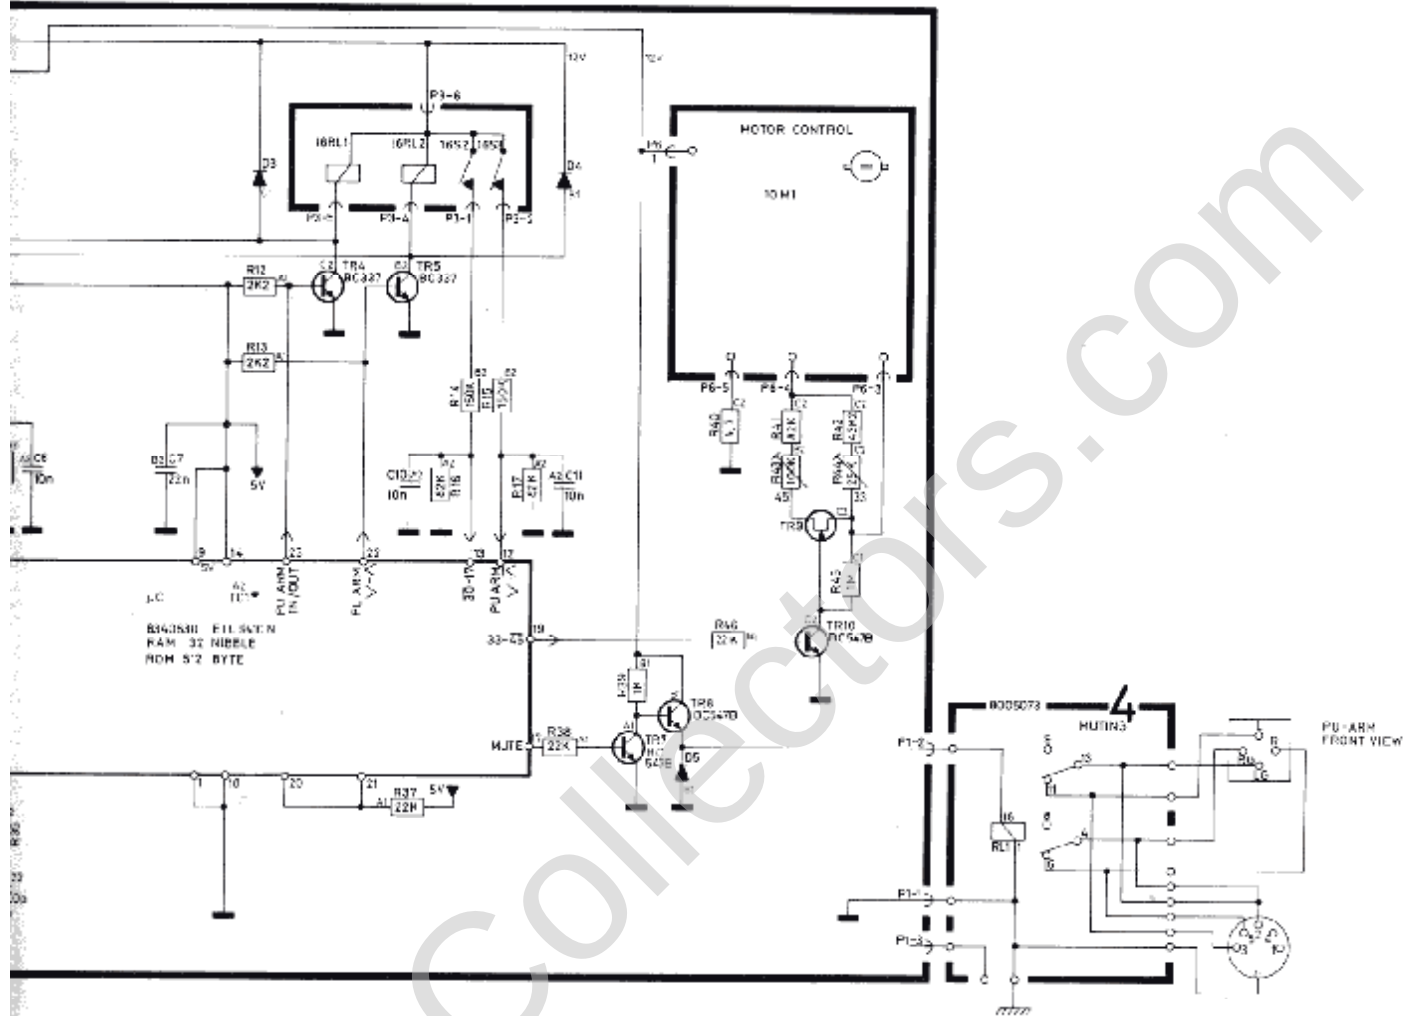

Explanation of the fuse symbols used in the set:
 Replace with same type 500 mA-250 V
 Slow acting fuse.

GND	1	24	D0
CK0	2	23	D1
CK	3	22	D2
RESET	4	21	D3
L7	5	20	D4
L6	6	19	D5
L5	7	18	D6
L4	8	17	D7
L3	9	16	D8
L2	10	15	D9
L1	11	14	D10
	12	13	D11