

Job EditorYRC1000 OPERATOR'S MANUAL

Upon receipt of the product and prior to initial operation, read these instructions thoroughly, and retain for future reference.



DANGER

- **This manual explains the Job EditorYRC1000. Read this manual carefully and be sure to understand its contents before operation.**
- **General items related to safety are listed in the Chapter 1: Safety of Controller Instructions. To ensure correct and safe operation, carefully read Controller Instructions before reading this manual.**



CAUTION

- **YASKAWA is not responsible for incidents arising from unauthorized modification of its products. Unauthorized modification voids your product's warranty.**
- **Software described in this manual is supplied against licensee only, with permission to use or copy under the conditions stated in the license. No part of this manual may be copied or reproduced in any form without written consent of YASKAWA.**

NOTICE

- **The drawings and photos in this manual are representative examples and differences may exist between them and the delivered product.**
- **YASKAWA may modify this model without notice when necessary due to product improvements, modifications, or changes in specifications. If such modification is made, the manual number will also be revised.**
- **If your copy of the manual is damaged or lost, contact a YASKAWA representative to order a new copy. The representatives are listed on the back cover. Be sure to tell the representative the manual number listed on the front cover.**

Notes for Safe Operation

Before using this product, read this manual and all the other related documents carefully to ensure knowledge about the product and safety, including all the cautions.

In this manual, the Notes for Safe Operation are classified as “DANGER”, “WARNING”, “CAUTION”, or “NOTICE”.



Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. Safety Signs identified by the signal word DANGER should be used sparingly and only for those situations presenting the most serious hazards.



Indicates a potentially hazardous situation which, if not avoided, will result in death or serious injury. Hazards identified by the signal word WARNING present a lesser degree of risk of injury or death than those identified by the signal word DANGER.



Indicates a hazardous situation, which if not avoided, could result in minor or moderate injury. It may also be used without the safety alert symbol as an alternative to “NOTICE”.



NOTICE is the preferred signal word to address practices not related to personal injury. The safety alert symbol should not be used with this signal word. As an alternative to “NOTICE”, the word “CAUTION” without the safety alert symbol may be used to indicate a message not related to personal injury.

Even items described as “CAUTION” may result in a serious accident in some situations. At any rate, be sure to follow these important items.



To ensure safe and efficient operation at all times, be sure to follow all instructions, even if not designated as “DANGER”, “WARNING” and “CAUTION”.

Notation for Menus and Buttons

Descriptions of the programming pendant, buttons, and displays are shown as follows:

Item	Manual Designation
Menu	The menus displayed on screen are denoted with { }. ex. {TOOL}.
Button	The buttons, check boxes, radio buttons displayed on screen are denoted with []. ex. [Close]; [Sync] check box; [Fast] radio button.

Description of the Operation Procedure

In the explanation of the operation procedure, the expression "Select • • •" means the following operations:

- To move the cursor to the object item and left-click on it with the mouse.
- To pick out the object item by the tab key and press the Enter key.
(In case of selecting a menu, use arrow keys instead of the tab key to pick out the object item, then press the Enter key.)

Registered Trademark

In this manual, names of companies, corporations, or products are trademarks, registered trademarks, or brand names for each company or corporation. The indications of (R) and TM are omitted.

1 INTRODUCTION

1.1	What Is the Job EditorYRC1000?	9
1.1.1	Features	9
1.2	Hardware Requirements for Job EditorYRC1000	10
1.3	Hardware Lock Key	11
1.4	Installing Job EditorYRC1000	12

2 BASIC OPERATION

2.1	Basic Concept and Operation Flow	13
2.1.1	Operation Flow	13
■	Saving a Parameter File (ALL.PRM)	13
■	Creating a Folder	13
■	Editing	13
■	Loading to the Programming Pendant	13
2.2	Startup of the Job EditorYRC1000	14
2.2.1	Clicking the Job EditorYRC1000	14
2.3	Basic Windows	15
2.4	Selecting a Job	16
2.4.1	Opening One Job	16
2.4.2	Opening Multiple Jobs at One Time	17
2.4.3	Filtering by Job Folder	18
2.5	Creating a Job	20
2.5.1	Creating a Job	20
■	Selecting Options when Creating a Job	21
2.6	Copying a Job	22
2.7	Deleting a Job	24
2.8	When No Job is Provided	25
2.8.1	Opening a Parameter File	25
2.9	Closing a File	26
2.10	Saving a File	27
2.11	Printing	28
2.12	Exit	29

3 EDITING(Standard)

3.1	Change into Standard Mode	30
3.2	Adding an Instruction	31
3.3	Deleting an Instruction	33

3.3.1	Deleting One Line	33
3.3.2	Deleting Multiple Lines	33
3.4	Selecting Multiple Lines	34
3.4.1	Using the Keyboard	34
3.4.2	Using the Mouse	34
3.5	Copying an Instruction	35
3.5.1	Copying One Line	35
3.5.2	Copying Multiple Lines	35
3.6	Pasting an Instruction	36
3.6.1	Paste	36
3.6.2	Reverse	37
3.7	Modifying an Instruction	38
3.7.1	Changing Numeral Values (1)	38
3.7.2	Changing Numeral Values (2)	39
3.7.3	Changing Characters	41
3.8	Changing the Motion Type	42
3.9	Using an Alias	43
3.10	Editing in the Detail Edit Window	45
3.10.1	Changing an Item	45
3.10.2	Adding an Item	47
3.10.3	Deleting an Item	49
3.10.4	Using an Alias	50
3.11	Searching	52
3.11.1	Searching for Character Strings	52
3.11.2	Moving the Line Number or Step Number	52
3.12	Changing the Speed	53
3.12.1	Changing according to Speed Type	53
3.12.2	Changing Speed Relatively (Changing Speed in Ratio for Current Speed)	54
3.13	Edit Lock	55
3.13.1	Changing the Status to Edit Lock	55
3.13.2	Clear the Edit Lock Status	56
3.13.3	Clear the All Edit Lock Status	57
3.14	Comment	58
3.14.1	Changing the Status to Comment	58
3.14.2	Clear the Comment Status	59
3.14.3	Clear the All Comment Status	60
3.15	Adding Comments	61
3.16	Edit the Job Folder Name	62
3.17	Entering the Numbers and Names of Local Variables Used	63
3.18	Displaying Step Nos., I/O Names, or Variable Names	

3.19	Opening a Call Job	66
3.20	Editing an Expression	67
3.21	Using a Macro Command	71

4 EDITING (TEXT)

4.1	Change into Text Mode	72
4.2	Adding an Instruction	74
4.3	Deleting an Instruction	75
4.3.1	Deleting One Line	75
4.3.2	Deleting Multiple Lines	75
4.4	Selecting Multiple Lines	76
4.4.1	Using the Keyboard	76
4.4.2	Using the Mouse	76
4.5	Copying an Instruction	77
4.5.1	Copying One Line	77
4.5.2	Copying Multiple Lines	77
4.6	Pasting an Instruction	78
4.7	Showing the header part	79
4.7.1	Showing the header part	79
4.7.2	Hiding the header part	80
4.8	Checking the job	81
4.9	Saving the Job File	83
4.10	Searching	84
4.11	Checking Alias	85

5 EDITING OTHER ITEMS

5.1	Defining Control Groups	86
5.1.1	Adding a Combination	86
5.1.2	Changing a Combination	87
5.1.3	Deleting a Combination	88
5.2	Defining Position Variables	89
5.3	Increasing the Instruction Types to be Used	90
5.3.1	Changing the Language Level	90
5.3.2	Parameter Option	90
5.4	Changing a Condition File	91
5.4.1	Changing an I/O Name File (IONAME.DAT)	91
5.4.2	Changing a Variable Name File (VARNAME.DAT)	93
5.5	Changing the Font	95

5.6	Changing the Color	96
5.6.1	Changing the Character Color	96
5.6.2	Changing the Background Color	97
5.6.3	Changing the Comment Color	98
5.6.4	Changing the Color of Each Instruction or Tab	99
■	Adding Private Setting	100
■	Changing Private Settings	101
■	Deleting Private Settings	102
5.6.5	Changing Color Definition	103
■	Adding Color Definition	104
■	Changing Color Definition	105
■	Deleting Color Definition	106
5.7	Changing the Language	107
5.8	Batch-Change the Job Folder Name	109
5.9	Changing the Default Mode	111

6 APPENDIX

6.1	Frequently-asked questions	112
6.1.1	When the driver has been installed with USB type key connected to a personal computer	112
6.1.2	When the previous version driver has been installed after installing the driver	112

1 INTRODUCTION

1.1 What Is the Job EditorYRC1000?

The Job EditorYRC1000 is editing software for INFORM III , the control language of the robot controller, the YRC1000, YRC1000micro.

1.1.1 Features

On a personal computer, Job EditorYRC1000 can be used in the same manner as a programming pendant to edit jobs. The displays where editing can be done are the same as those for the programming pendant. Anyone who can edit with the programming pendant can easily use this software.



Since the parameter file used in Job EditorYRC1000 are the same used in the programming pendant, required instructions and additional items (such as tags, numeric data) may not be displayed properly unless presetting each parameter options.

1.2 Hardware Requirements for Job EditorYRC1000

OS	Microsoft Windows 10 (64bit) Microsoft Windows 7 ServicePack1(32bit / 64bit) JAPANESE and ENGLISH Windows version are supported only.*1
CPU	Intel ® Core™ i5 or more multi-core processor.
Memory	2 GB or more
Hardware Disk	1 GB or more
Display	Supported by MS-Windows (with 256 color or more)
Mouse	Supported by MS-Windows
Robot Controller	YRC1000, YRC1000micro
Hardware Lock Key	Used under single user environment. For details, refer to the following section " 1.3 Hardware Lock Key ".

*1 MS-Windows 10/7 is a registered trademark of Microsoft Coporation,USA.

1.3 Hardware Lock Key

For proper operation, connect provided hardware lock key (USB type) to personal computer before using this software.

Check and execute <Check the computing environment> <Installation of driver> before connecting the key to USB port.

<Check the computing environment>

Multi-connection of USB type key is not available for one USB port because of hardware structure. Therefore, only one key should be connected to one USB port. When installing multiple offline software into one personal computer and multi-connectiong USB keys, use the personal computer which is provided same numbers of USB ports as the number of software to be installed.

<Installation of driver>



Please install the driver after detaching the all sentinel hardware key from the personal computer.

Execute "\\SentinelDriver\\Sentinel System Driver Installer 7.6.0.exe" of installation CD-ROM. Refer to "\\SentinelDriver\\Manual\\Sentinel System Driver ReadMe.pdf" for the details of installation.



- Be sure to install the driver.
- When installing the driver, be sure to login in administrator mode in order to add files to system folder and input information in registry.
- If a key is connected to personal computer before installing the driver, the message concerning the driver is displayed. In this case, detach the key from personal computer and then install the driver.

If a key is connected to personal computer before installing the driver under Windows 95/98/NT4.0/2000/XP environment, Windows wizard ([Add New Hardware] Wizard) starts up. In this case, push [cancel], and detach the key from personal computer and then install the driver.

- When installing the driver under Windows NT4.0 environment, please install the driver located in the folder "\\SentinelDriver\\SSD5411\\SSD5411-32bit.EXE" of installation CD-ROM.

For the driver installation procedure, please consult the installation manual "\\SentinelDriver\\SSD5411\\Manual\\us\\Readme.pdf".

Refer to " 6.1 Frequently-asked questions " for other countermeasures concerning hardware lock key.

1.4 Installing Job EditorYRC1000

1. It is strongly recommended that you exit all applications before running the setup program.



Be sure to login in administrator mode when installing the Job EditorYRC1000, or else the system related DLL files in Windows might not be updated.

2. Insert the installation CD into the CD-ROM drive. When the [User Account Control] dialog appears automatically, click [Yes]. [Job EditorYRC1000 - InstallShield Wizard] will be displayed.
3. Follow the on-screen instructions.




If the following message appears during the installation, press [Yes] to continue installation.

This message is displayed when the installation of redistribution package of Visual C ++ 2012 has been executed but installation is required.

If this message is displayed, run manually

\\SSetupPrerequisites\\{BF2F04CD-3D1F-444e-8960-D08EBD285C3F}\\vc_redist_x86.exe after installing Job EditorYRC1000, and install or repair the redistribution package of Visual C ++ 2012.

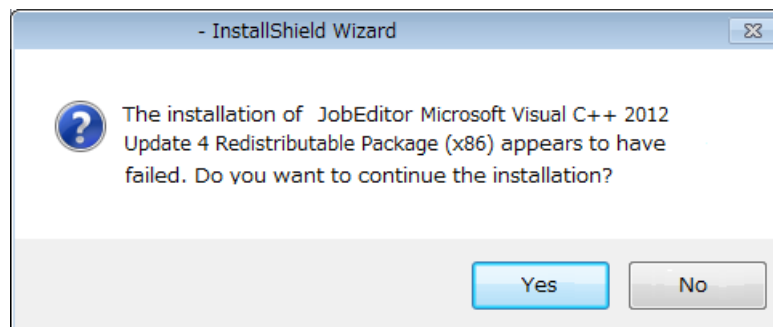

4. When the setup is completed, Job EditorYRC1000 is registered under the {Job EditorYRC1000} folder that appears by clicking the [Start] button in the task bar and selecting {Program} and then {Motoman}. (In the case of Windows10, all menu appears directly under [Motoman].)
5. Connect the hardware key to the printer port or USB port.
For details, refer to " 1.3 Hardware Lock Key " in this chapter.

2 BASIC OPERATION

2.1 Basic Concept and Operation Flow

2.1.1 Operation Flow

This software requires only parameter files. To edit the same instructions as the programming pendant, save the parameter file from the programming pendant in advance.

■ Saving a Parameter File (ALL.PRM)

Save ALL.PRM and the job file to be edited from the programming pendant.



Since the parameter file used in Job EditorYRC1000 are the same used in the programming pendant, required instructions and additional items (such as tags, numeric data) may not be displayed properly unless presetting each parameter options.

■ Creating a Folder

Create a folder anywhere on the personal computer, and copy the parameter file and job file that have been saved from the programming pendant to the folder.

■ Editing

Use the Job EditorYRC1000 to open the job file and save it after editing.

■ Loading to the Programming Pendant


Load the edited file to the programming pendant using the same procedure as described in "Saving a Parameter File (ALL.PRM)".

2.2 Startup of the Job EditorYRC1000

2.2.1 Clicking the Job EditorYRC1000



To start up the Job EditorYRC1000, click the [Start] button and select in the order of [Program], [Motoman], [Job EditorYRC1000] (In the case of Windows10, [Motoman], [Job EditorYRC1000]), and then select "Job EditorYRC1000".

The following window appears with a correct operation:

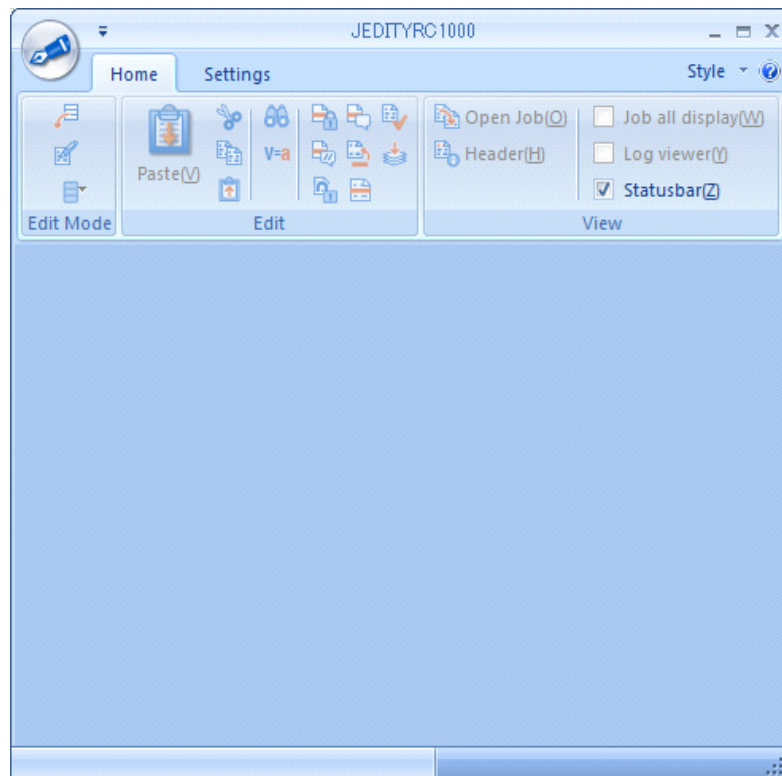

2.3 Basic Windows


The basic windows are the "Main Window," "Line-edit Box," and the "Detail Edit Window."

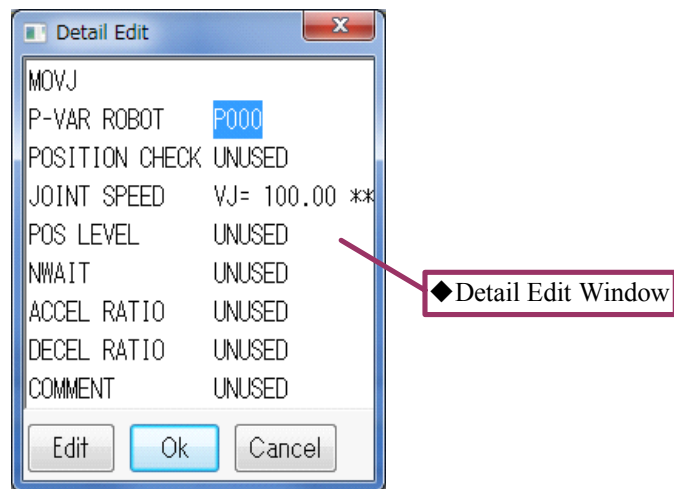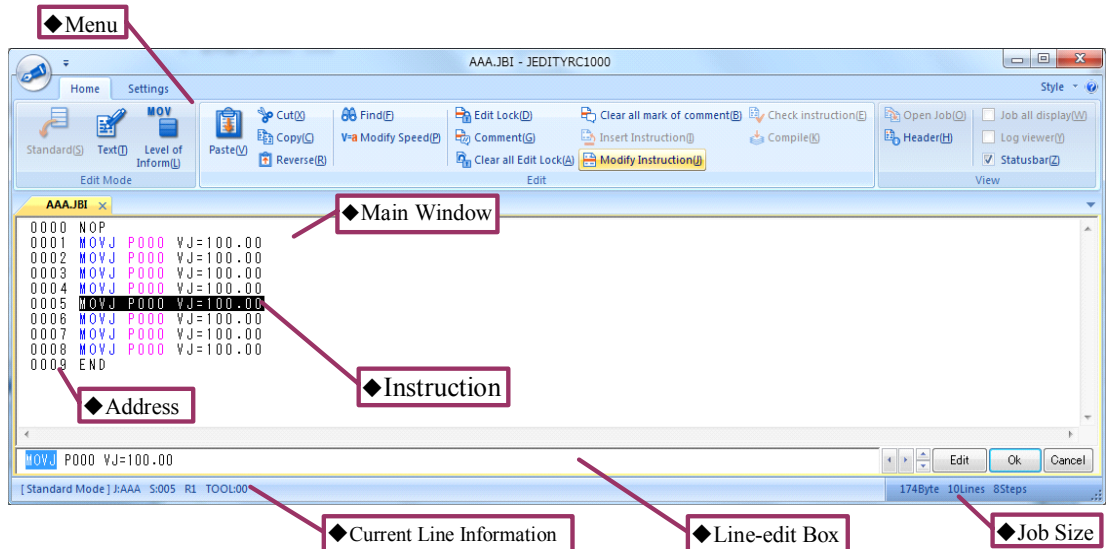


2.4 Selecting a Job

Various basic parameter files and jobs are provided in Sample under the installation folder. Refer to those samples before reading the following procedures.


2.4.1 Opening One Job

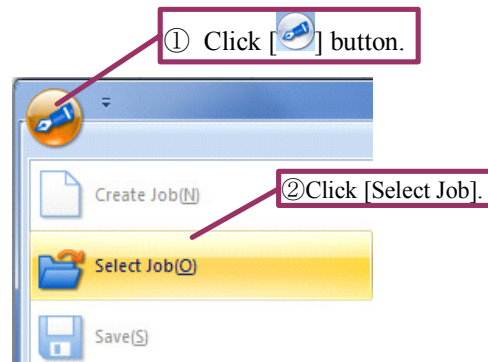


The [Open] dialog box appears.

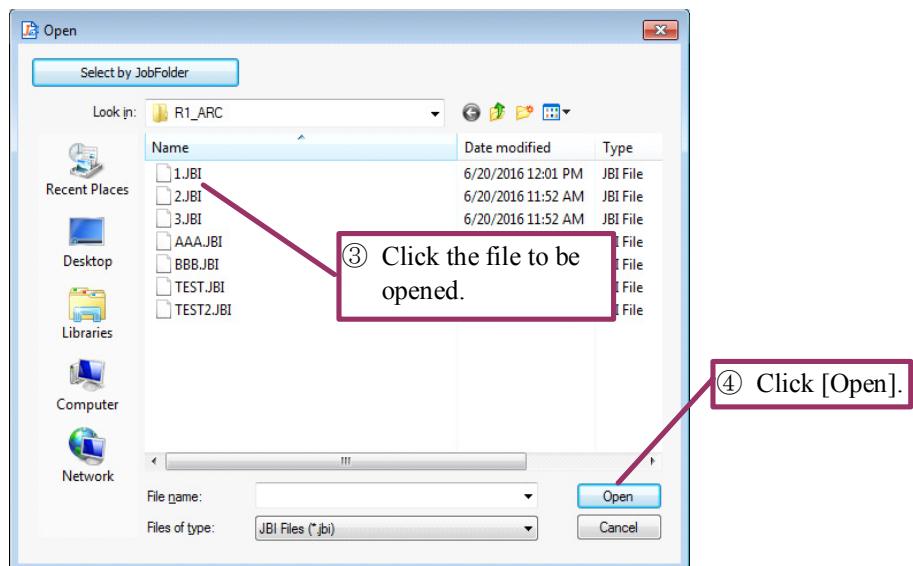


The YRC1000, YRC1000 parameter file (ALL.PRM) must be in the directory having the job. If there is no parameter file, the following warning appears.

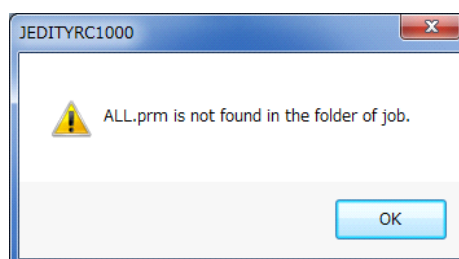


2.4.2 Opening Multiple Jobs at One Time

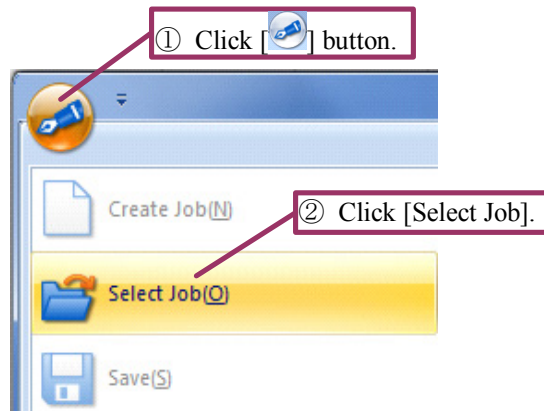


The [Open] dialog box appears.

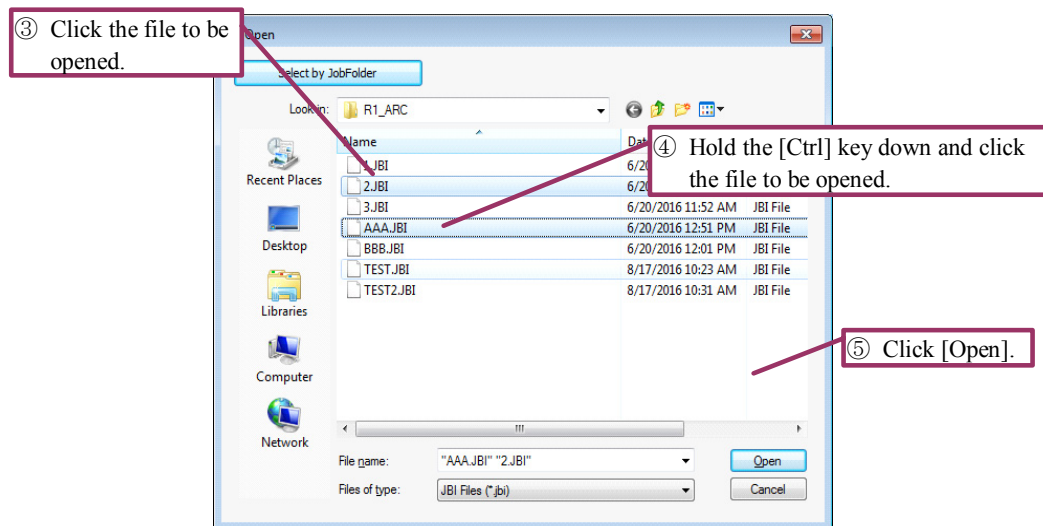


2.4.3 Filtering by Job Folder

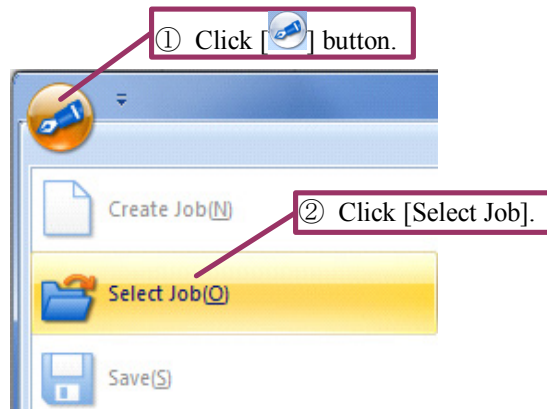


The [Open] dialog box appears.

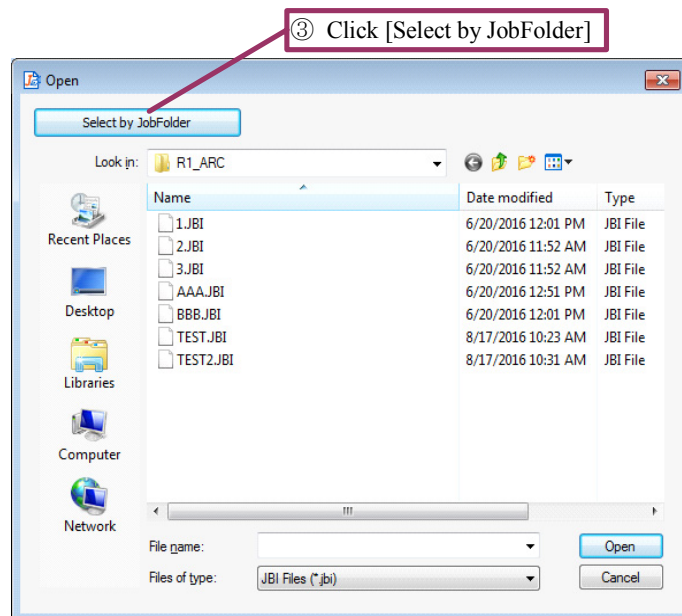

The [Select by Job Folder] dialog box appears.

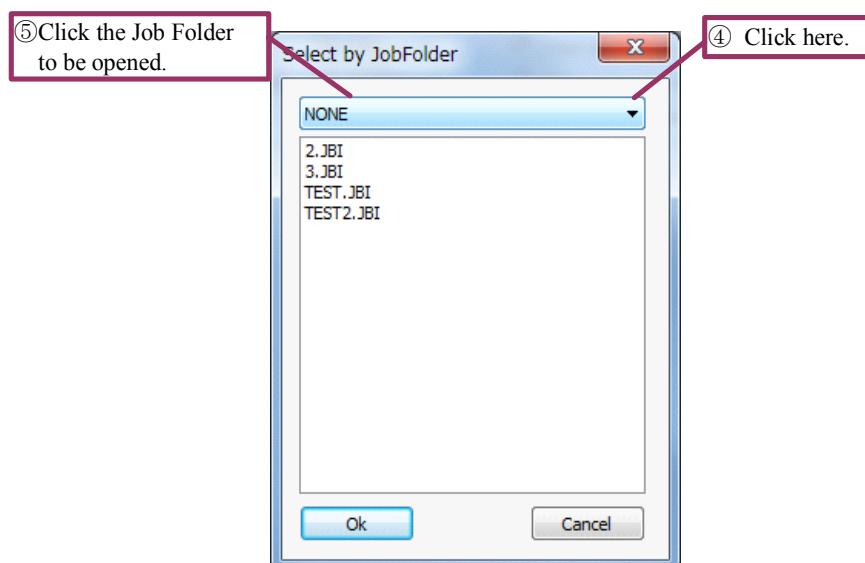


The job list filtered by job folder appears.

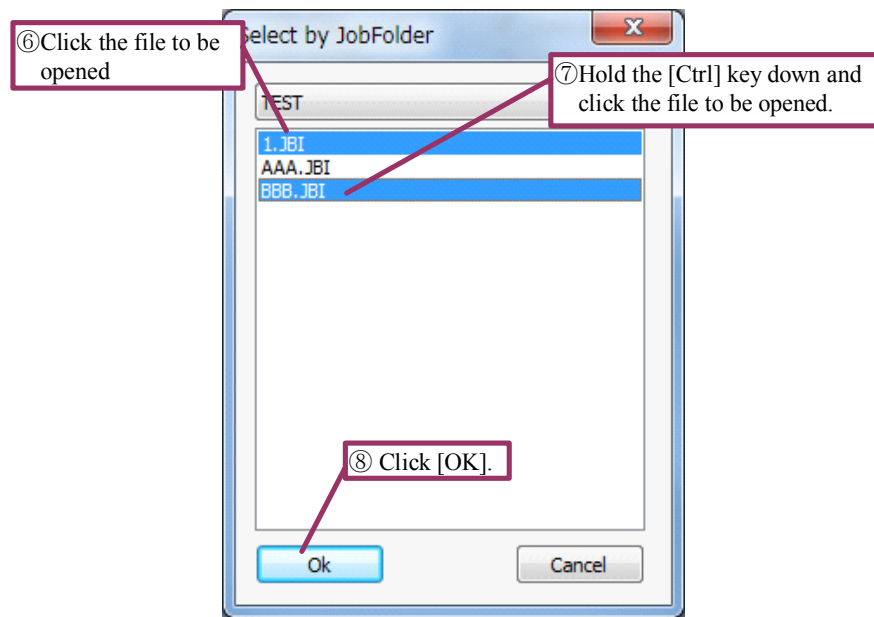


2.5 Creating a Job

If there are no job files, you can create new job file by selecting parameter file.
Refer to " 2.8 When No Job is Provided " for details.


2.5.1 Creating a Job

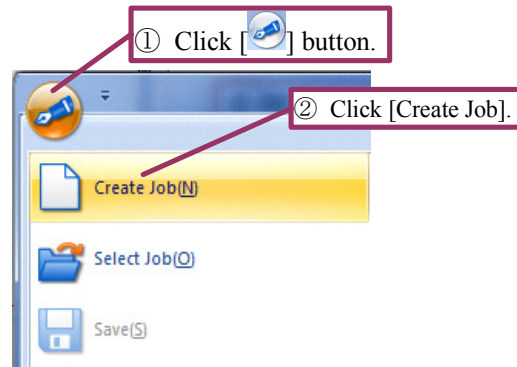

The [Create Job] dialog box appears.

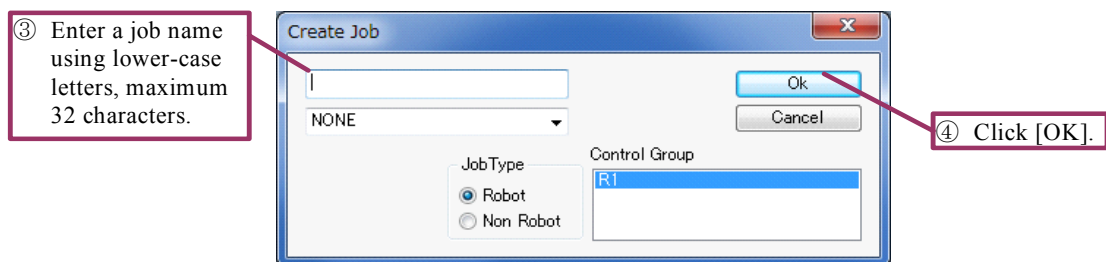


The new job appears.

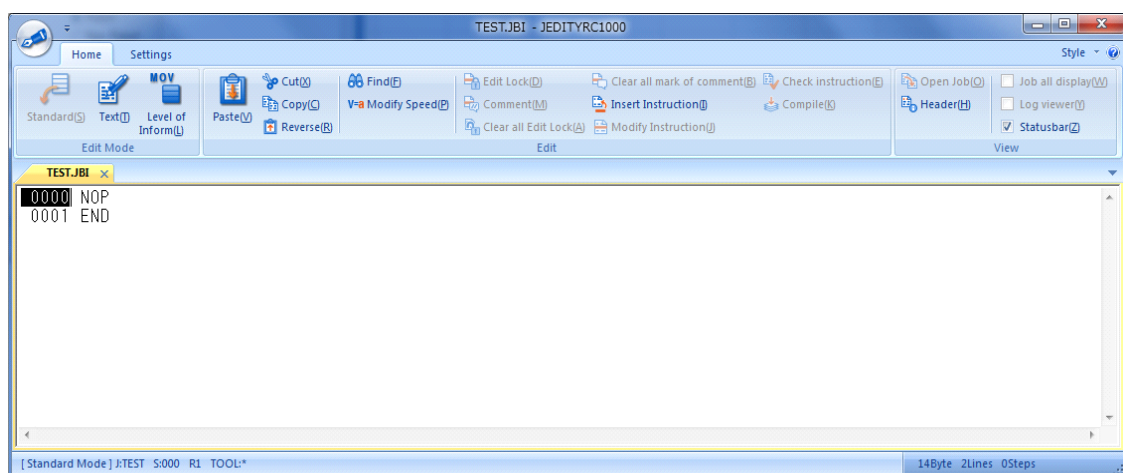




A file is created in the folder. If any existing job has the same name, the following message appears. Select [Yes] only when the existing job is to be overwritten.

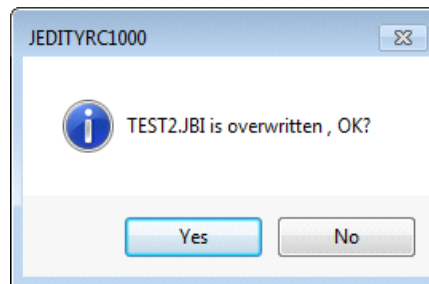

■ Selecting Options when Creating a Job

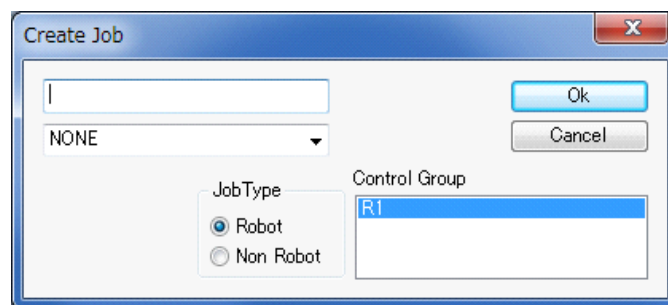

Job Type

Select whether a job including position data is to be created.

"Robot" contains position data, and "Non Robot" contains no position data.

Control Group

Select the job control group. If the control group is not found in this list, register the control group in the "Group Combination Registry," and re-open this window.


(Refer to " 5.1 Defining Control Groups " for details on defining control groups.)

Job Folder Name



Select the job folder name. Or, enter the new job folder name using lower-case letters, maximum 32 characters.

2.6 Copying a Job

First, you open job file that you want to copy by clicking [Select Job], and you operate the following in this state. (Refer to "2.4 Selecting a Job" for details.)

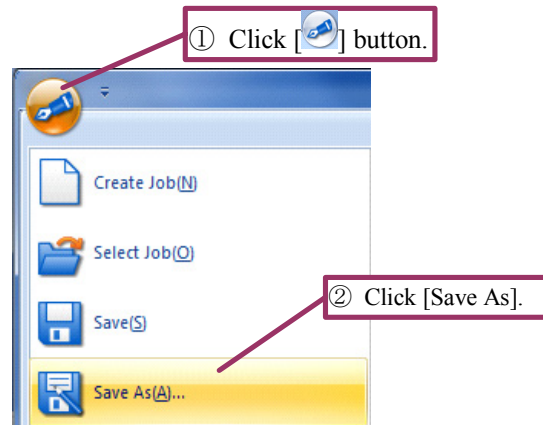


The [Save As] dialog box appears.

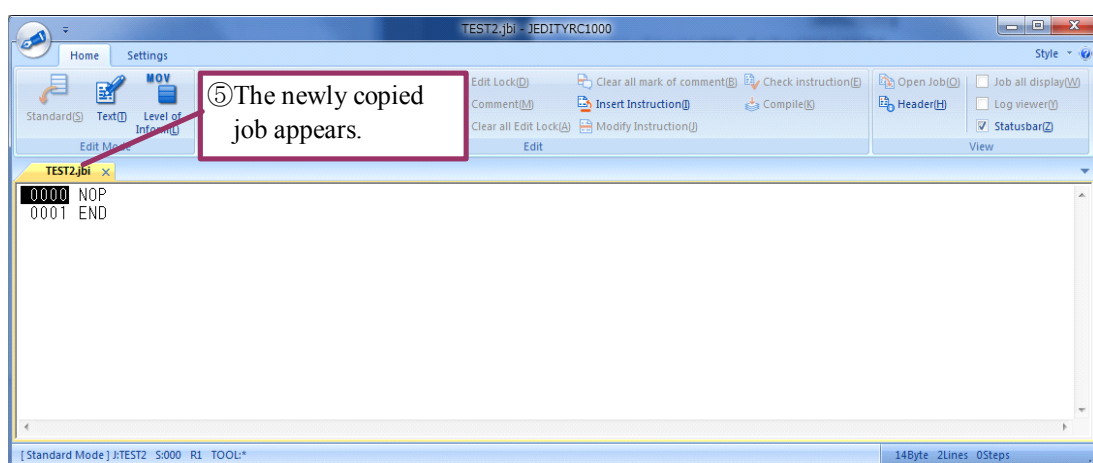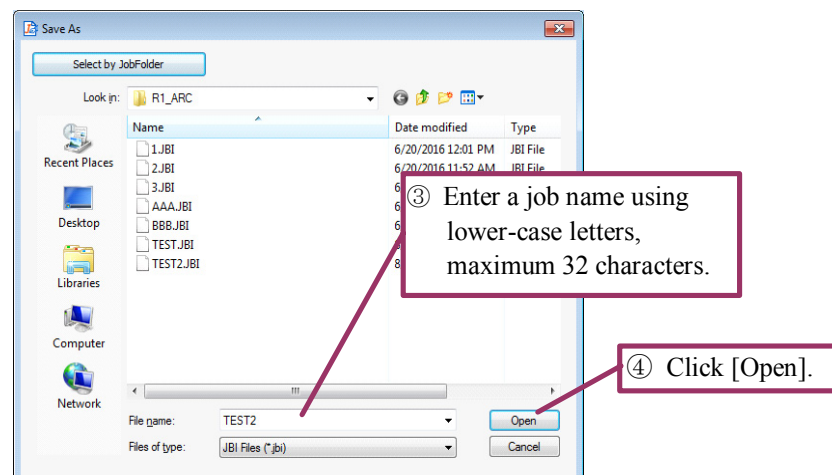




If any existing job has the same name, the following message appears. Select [Yes] only when the existing job is to be overwritten..

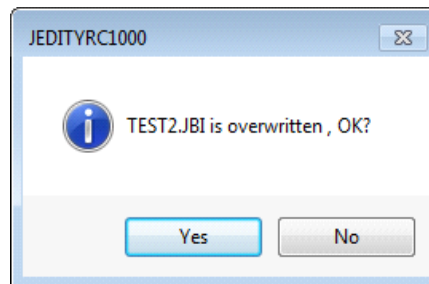


2.7 Deleting a Job

First, you open job file that you want to delete by clicking []-[Select Job], and you operate the following in this state. (Refer to " 2.4 Selecting a Job " for details.)

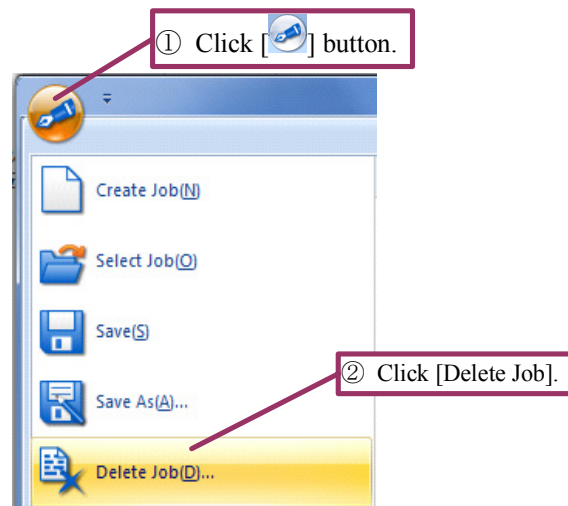

The [Delete Job] dialog box appears.

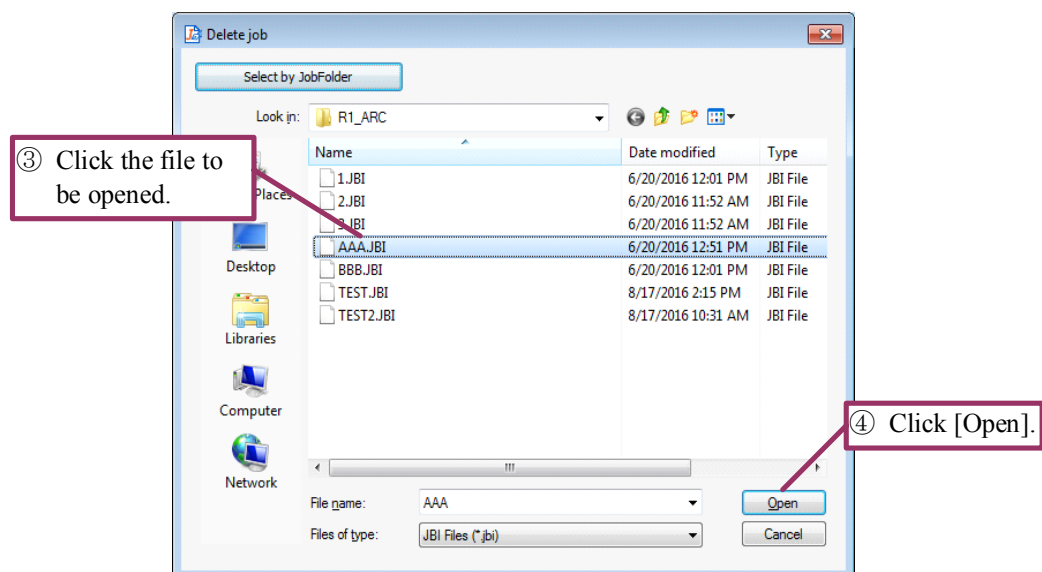

NOTE

- Refer to " 2.4.2 Opening Multiple Jobs at One Time " for details on deleting multiple files at one time.
- Refer to " 2.4.3 Filtering by Job Folder " for details on deleting the files selected by Job Folder.


2.8 When No Job is Provided

When no job is provided, select the parameter file to create an environment for making a new job.


2.8.1 Opening a Parameter File




The [Open] dialog box appears.

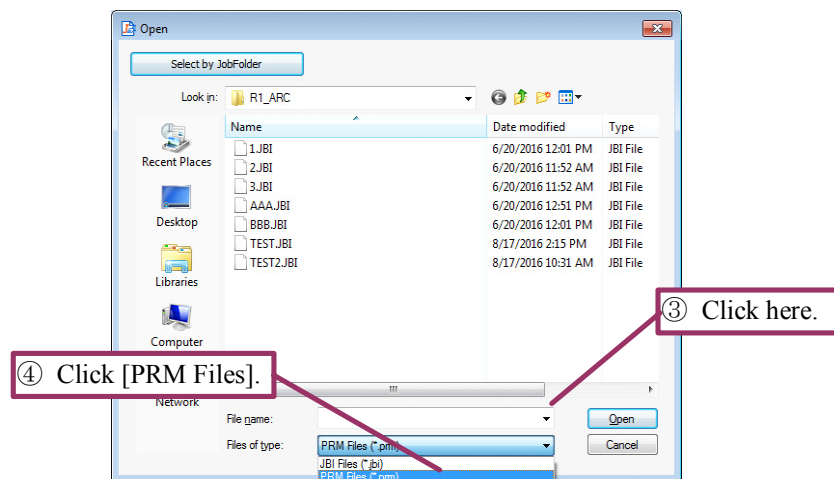


PRM Files appear.

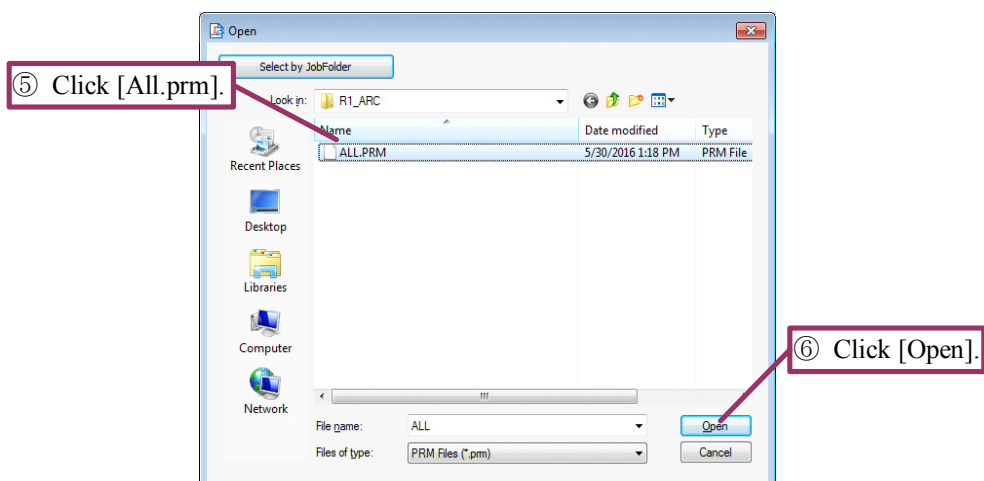

2.9 Closing a File

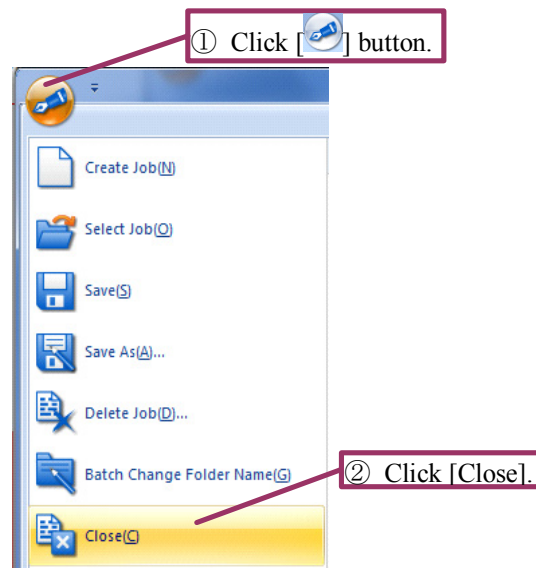


When the file to be closed has been modified, the following message appears.

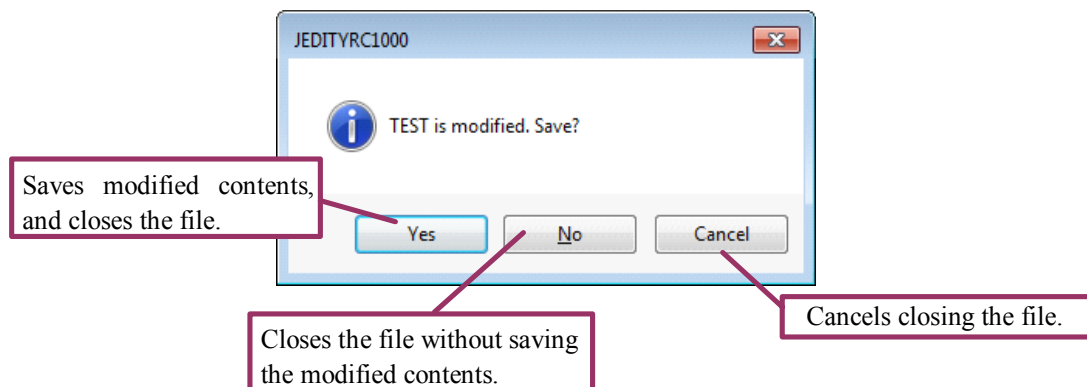


2.10 Saving a File




The following error message may appear when saving a file. This message appears when the position variable is not defined, although there is an instruction using a position variable in the job which was going to be saved. Select [Settings] tab and [Position variable] - [Robot] to define the position variable.

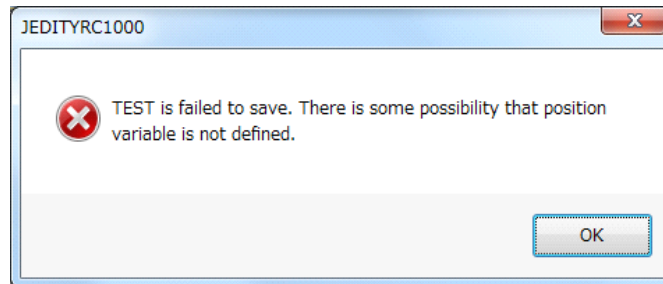


2.11 Printing

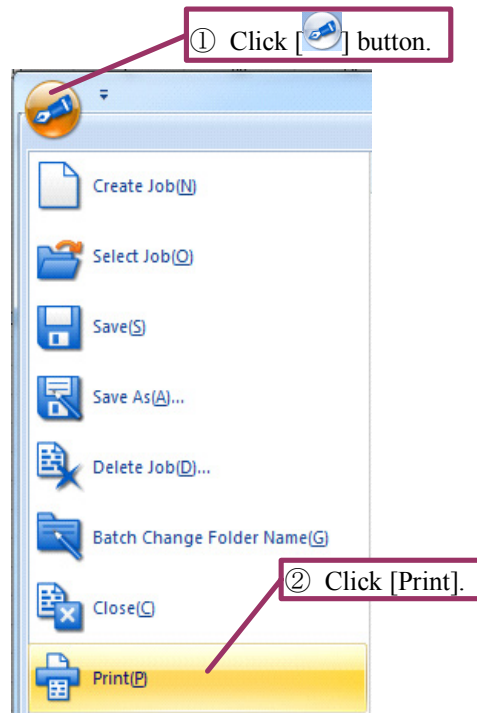

The [Print] dialog box appears.

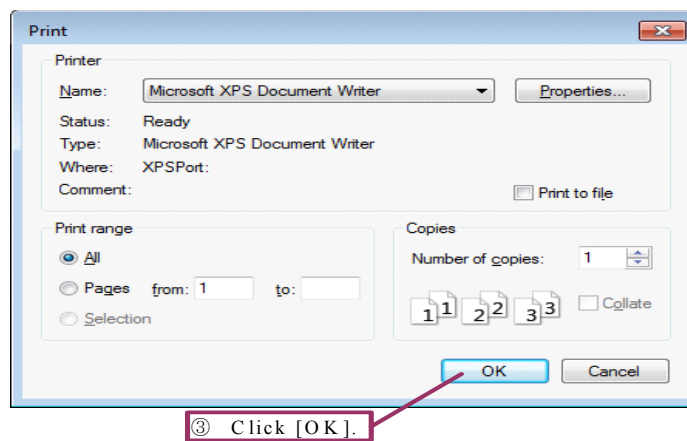

2.12 Exit

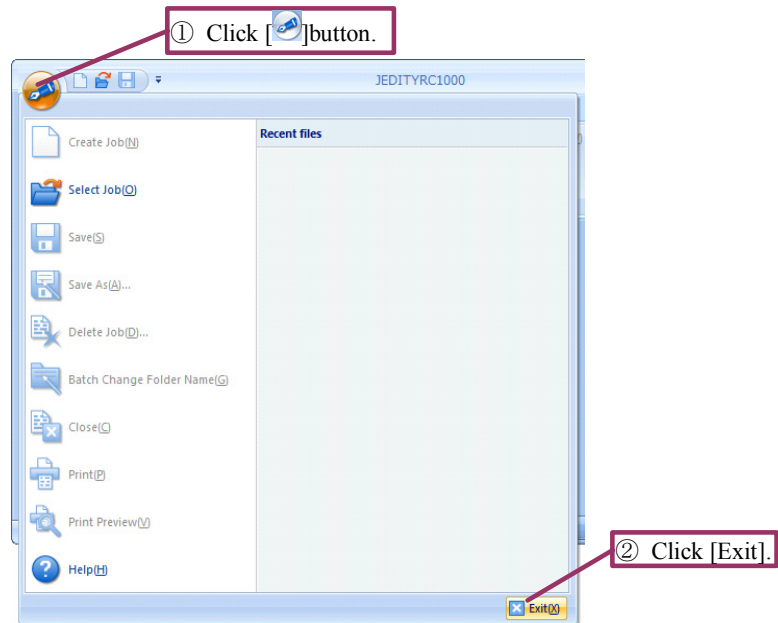


If there is any job that has not been saved when attempting to close the Job EditorYRC1000, the dialog will appear to ask if the edited job is to be saved.


3 EDITING(Standard)

In the standard mode, the job can be edited as the pendant of operation.


3.1 Change into Standard Mode

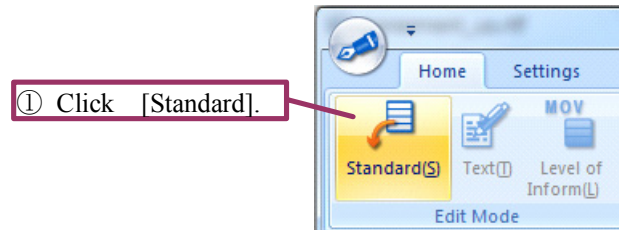

The mode is changed into the standard mode.




When clicking [Standard], the following dialog appears sometimes.
 When clicking [Yes], the file is saved and shift to Standard mode.
 When clicking [No], the file is not saved and shift to Standard mode.
 When clicking [Cancel], mode shift is canceled.

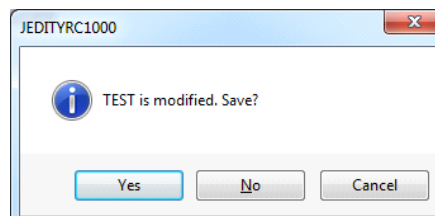

When clicking [Yes], the following dialog appears when the file has something wrong in the text mode.


When clicking [Yes], the file is saved as temporary file and shift to Standard mode.

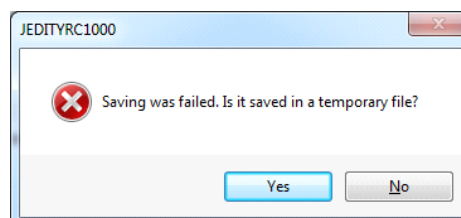

When clicking [No], the following dialog appears.


When clicking [Yes], the file is not saved and shift to Standard mode.

When clicking [No], mode shift is canceled.

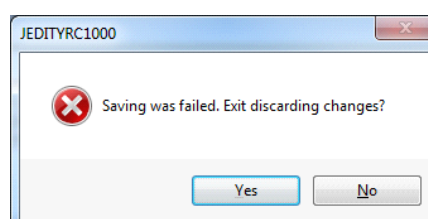


3.2 Adding an Instruction


Press the cursor keys to highlight the address of the line where an instruction is to be added. This can be also done by clicking the mouse directly.

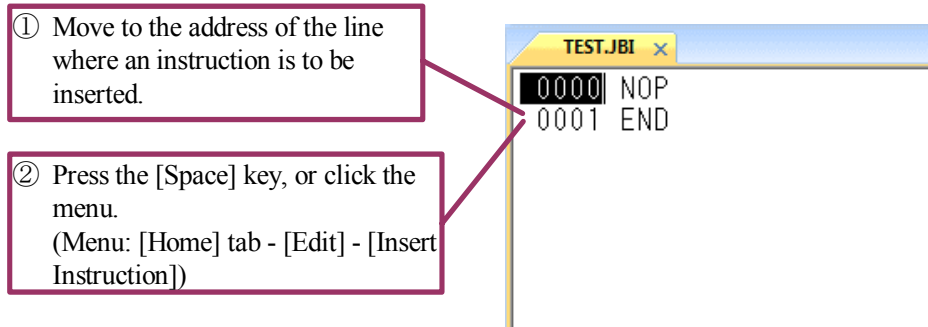

The [Select Inst] dialog box for each group of instructions appears.

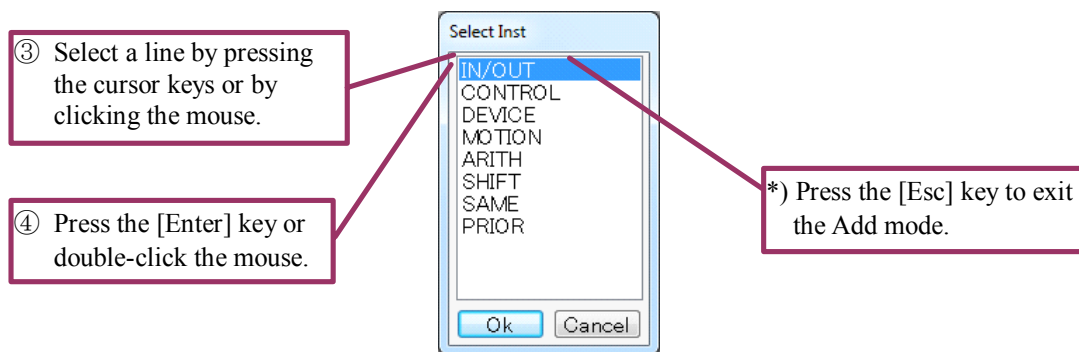

The [Select Inst] dialog box appears.

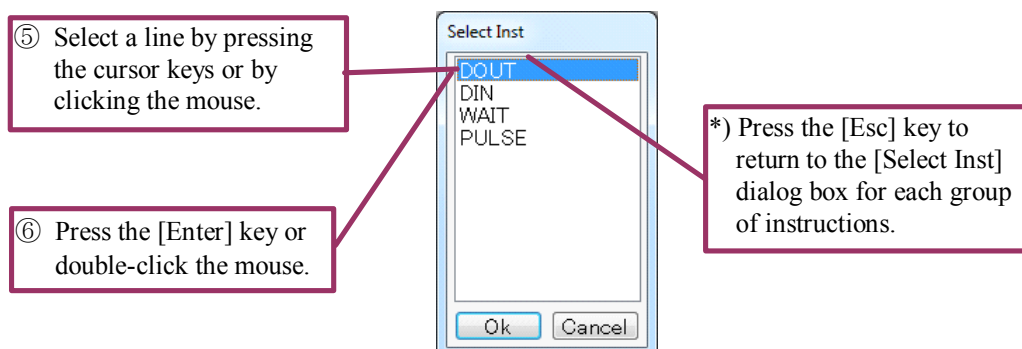


The line-edit box appears in the lower-left of the window.

⑦ Press the [Enter] key or click [OK].



A screenshot of a window titled "TEST.JBI". The window contains a list of instructions: "0000 NOP" and "0001 END". At the bottom of the window, there is a line-edit box containing the text "WAIT IN#(1)=ON". A callout box with a purple border and a purple arrow points to the line-edit box, containing the text "⑦ Press the [Enter] key or click [OK].".


The instruction has been inserted.

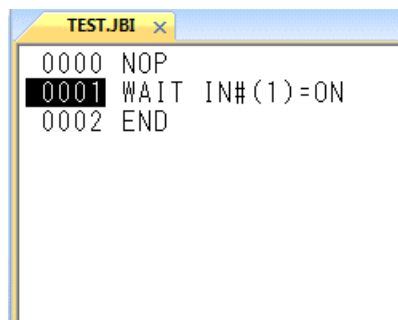


A screenshot of a window titled "TEST.JBI". The window contains a list of instructions: "0000 NOP", "0001 WAIT IN#(1)=ON", and "0002 END". The instruction "0001 WAIT IN#(1)=ON" is highlighted with a black background.

3.3 Deleting an Instruction

3.3.1 Deleting One Line

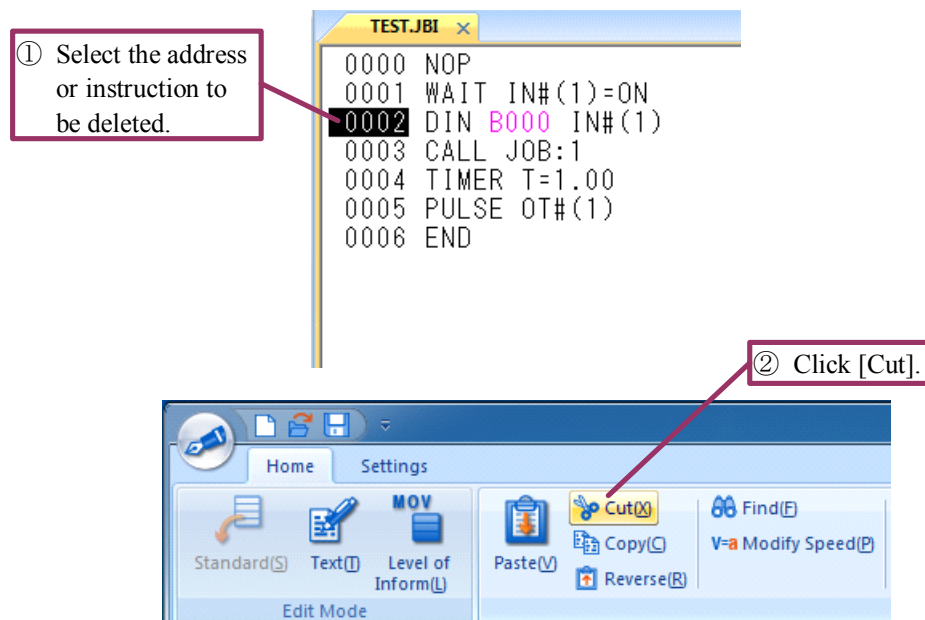

The dialog box appears asking if you are sure you want to delete the line.

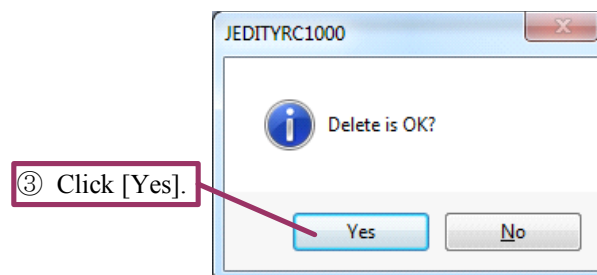

Since the cut contents are copied to the buffer, they can be pasted on another place or job.


3.3.2 Deleting Multiple Lines

Perform the same operation as described in " 3.3.1 Deleting One Line " after selecting multiple lines described in the next section.

3.4 Selecting Multiple Lines

3.4.1 Using the Keyboard


- ① Move to the first line to be selected.

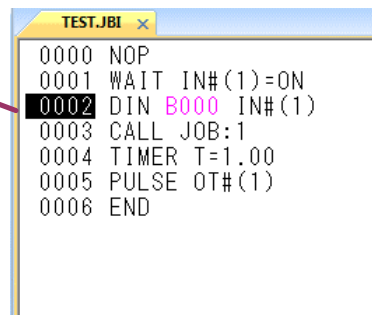

```

TEST.JBI x
0000 NOP
0001 WAIT IN#(1)=ON
0002 DIN B000 IN#(1)
0003 CALL JOB:1
0004 TIMER T=1.00
0005 PULSE OT#(1)
0006 END
  
```


- ② Press the [SHIFT] key.

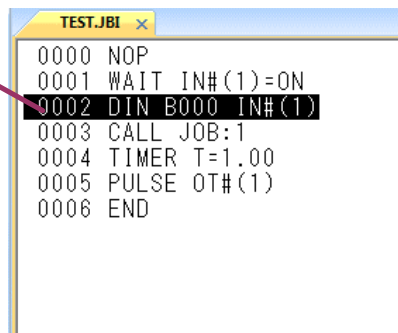

```

TEST.JBI x
0000 NOP
0001 WAIT IN#(1)=ON
0002 DIN B000 IN#(1)
0003 CALL JOB:1
0004 TIMER T=1.00
0005 PULSE OT#(1)
0006 END
  
```

- ③ Move the cursor holding the [SHIFT] key down to select additional lines.

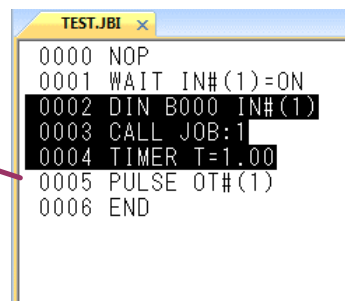


```

TEST.JBI x
0000 NOP
0001 WAIT IN#(1)=ON
0002 DIN B000 IN#(1)
0003 CALL JOB:1
0004 TIMER T=1.00
0005 PULSE OT#(1)
0006 END
  
```

3.4.2 Using the Mouse


- ① Click the first line to be selected.
(Left side of line.)

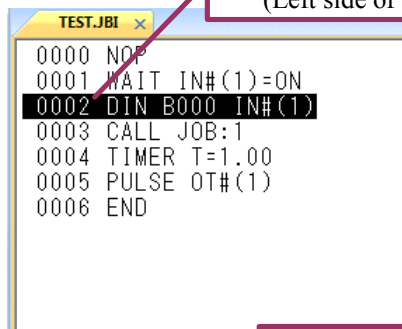

```

TEST.JBI x
0000 NOP
0001 WAIT IN#(1)=ON
0002 DIN B000 IN#(1)
0003 CALL JOB:1
0004 TIMER T=1.00
0005 PULSE OT#(1)
0006 END
  
```

- ② Drag over adjacent lines to select multiple lines.

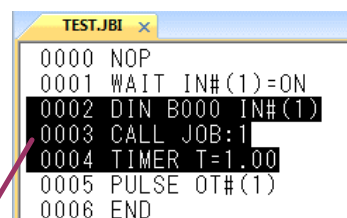


```

TEST.JBI x
0000 NOP
0001 WAIT IN#(1)=ON
0002 DIN B000 IN#(1)
0003 CALL JOB:1
0004 TIMER T=1.00
0005 PULSE OT#(1)
0006 END
  
```

3.5 Copying an Instruction

3.5.1 Copying One Line

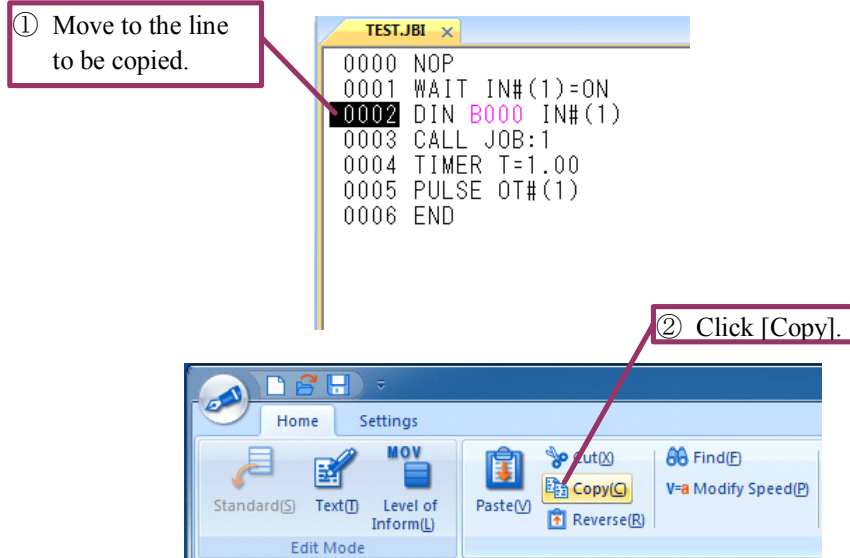

Perform the same operation as described in " 3.6 Pasting an Instruction ".



There is no limitation to the number of instructions that can be copied. Move instructions can also be copied, however, pay attention in operating those copied instructions.

3.5.2 Copying Multiple Lines

Perform the procedure described in " 3.4 Selecting Multiple Lines " and then perform the procedures as described in steps "2" in " 3.5 Copying an Instruction ".


3.6 Pasting an Instruction

3.6.1 Paste

① Move to the line where data is to be pasted.


```
TEST.JBI x
0000 NOP
0001 WAIT IN#(1)=ON
0002 DIN B000 IN#(1)
0003 CALL JOB:1
0004 TIMER T=1.00
0005 PULSE OT#(1)
0006 END
```

② Click [Paste].

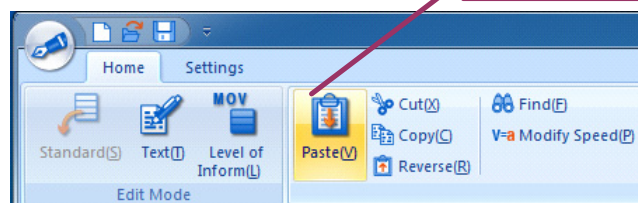

A dialog box appears asking if you are sure you want to paste the data.

③ Click [Yes].

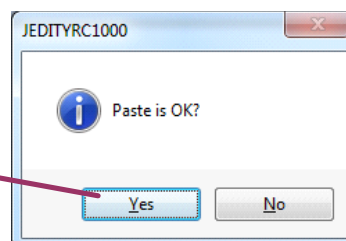

3.6.2 Reverse

"Reverse" pastes several copied lines in the opposite order of how they were copied.

A group of move instructions for returning can be simply created by copying the group of move instructions for going, and reverse-pasting them.


① Select multiple lines and copy them.

```
TEST.JBI x
0000 NOP
0001 WAIT IN#(1)=ON
0002 DIN B000 IN#(1)
0003 CALL JOB:1
0004 TIMER T=1.00
0005 PULSE OT#(1)
0006 END
```

② Move to the position where the data is to be inserted. The data will be inserted on the next line.


```
TEST.JBI x
0000 NOP
0001 WAIT IN#(1)=ON
0002 DIN B000 IN#(1)
0003 CALL JOB:1
0004 TIMER T=1.00
0005 PULSE OT#(1)
0006 END
```

③ Click [Reverse].

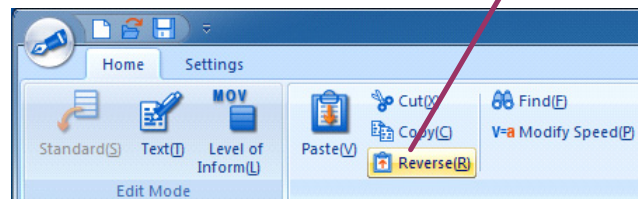

A dialog box appears asking if you are sure you want to reverse-paste the data.

④ Click [Yes].

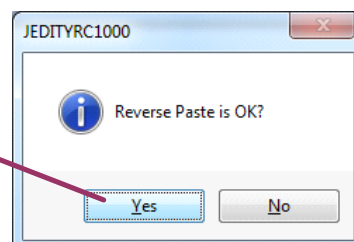


The data has been reverse-pasted.


```
TEST.JBI x
0000 NOP
0001 WAIT IN#(1)=ON
0002 DIN B000 IN#(1)
0003 CALL JOB:1
0004 TIMER T=1.00
0005 PULSE OT#(1)
0006 TIMER T=1.00
0007 CALL JOB:1
0008 DIN B000 IN#(1)
0009 END
```

3.7 Modifying an Instruction


3.7.1 Changing Numeral Values (1)

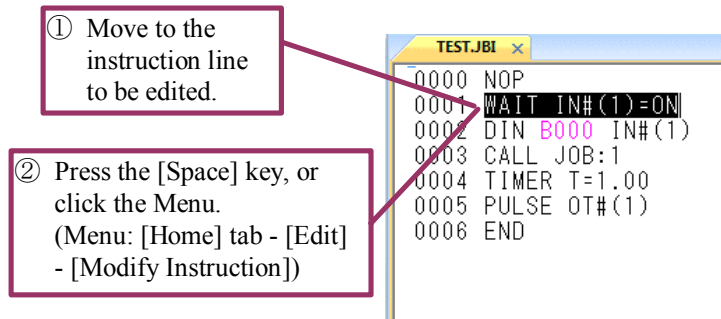


The line-edit box appears in the lower-left of the window.

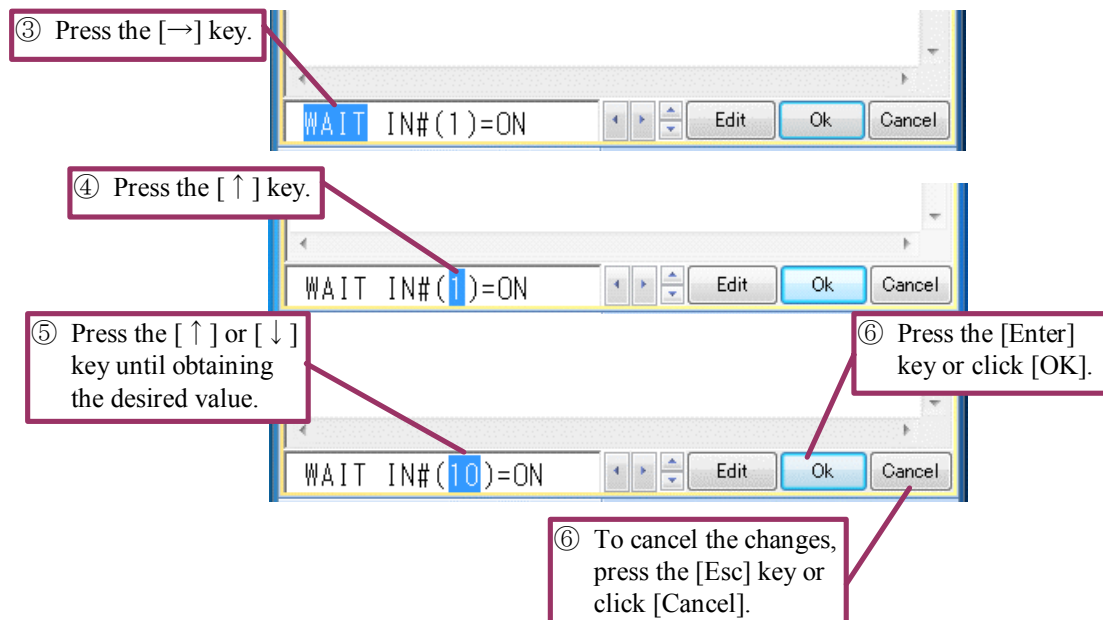


The new data appears in the main window.

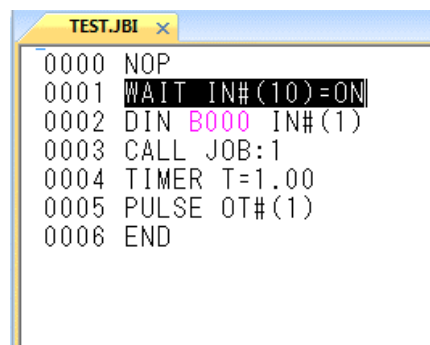


3.7.2 Changing Numeral Values (2)

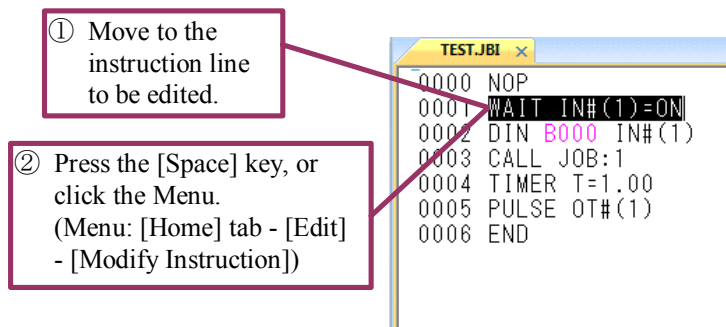


The line-edit box appears in the lower-left of the window.

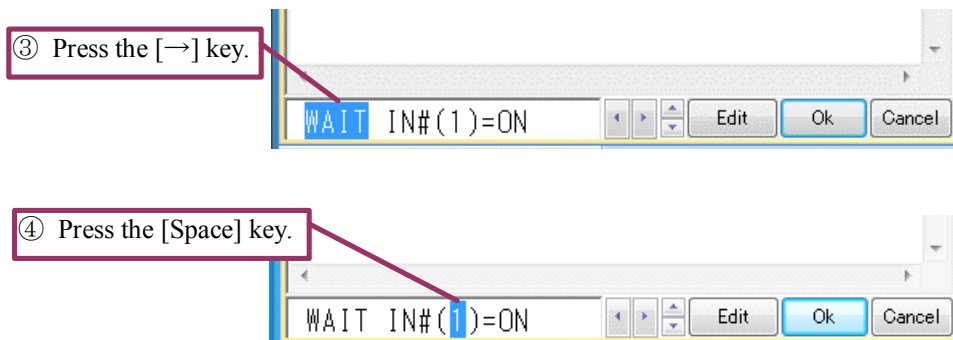

The [Value Input] dialog box appears.

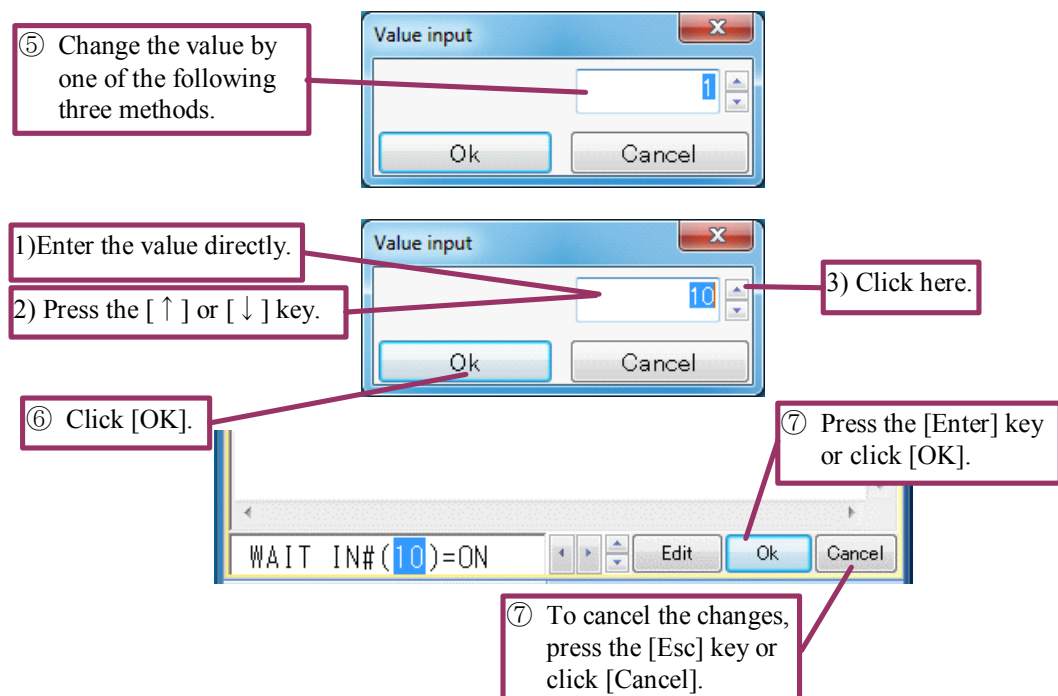

The new data appears in the main window.

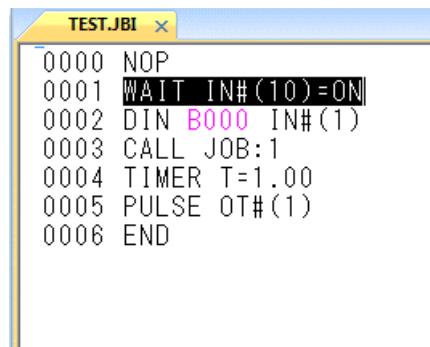


```
0000 NOP
0001 WAIT IN#(10)=ON
0002 DIN B000 IN#(1)
0003 CALL JOB:1
0004 TIMER T=1.00
0005 PULSE OT#(1)
0006 END
```




Lines cannot be moved in the main window during line editing.


3.7.3 Changing Characters

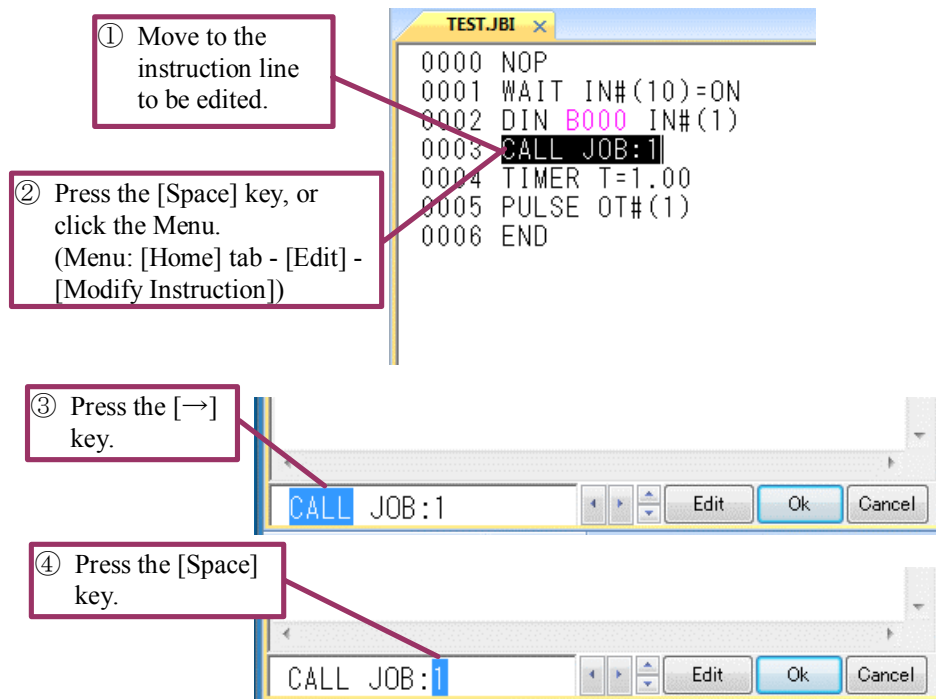

The [Character Input] dialog box appears.

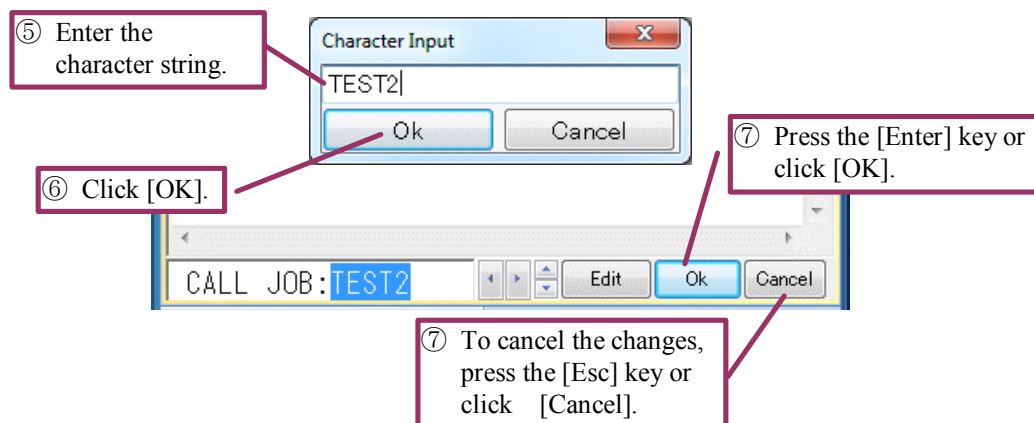

The new data appears in the main window.

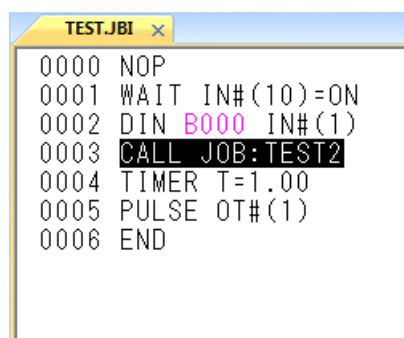

3.8 Changing the Motion Type

① Move to the instruction line to be edited.

② Press the [Space] key, or click the Menu.
(Menu: [Home] tab - [Edit] - [Modify Instruction])

```
TEST2.jbi x
0000 NOP
0001 MOVJ P000 VJ=50.00
0002 END
```

The line-edit box appears in the lower-left of the window.

③ Press the [↑] or [↓] key to select the desired motion type.

MOVJ P000 VJ=50.00 Edit Ok Cancel

MOVJ P000 VJ=50.00
MOVL P000 V=4500
MOVCL P000 V=4500
MOVSL P000 V=4500

Motion types can be changed in this order. Speed is relative speed and converted automatically.

④ Press the [Enter] key or click [OK].


MOVL P000 V=4500 Edit Ok Cancel

④ To cancel the changes, press the [Esc] key or click [Cancel].


The instruction line with the new motion type appears in the main window.

```
TEST2.jbi x
0000 NOP
0001 MOVL P000 V=4500
0002 END
```


3.9 Using an Alias

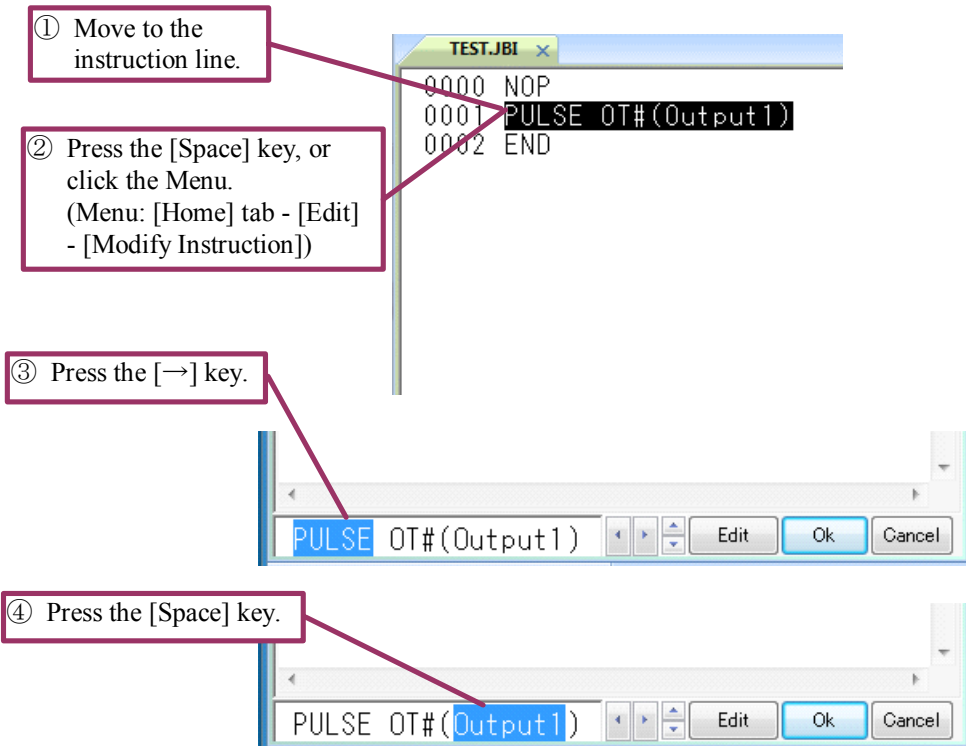

The [Condition file edit] dialog box appears.

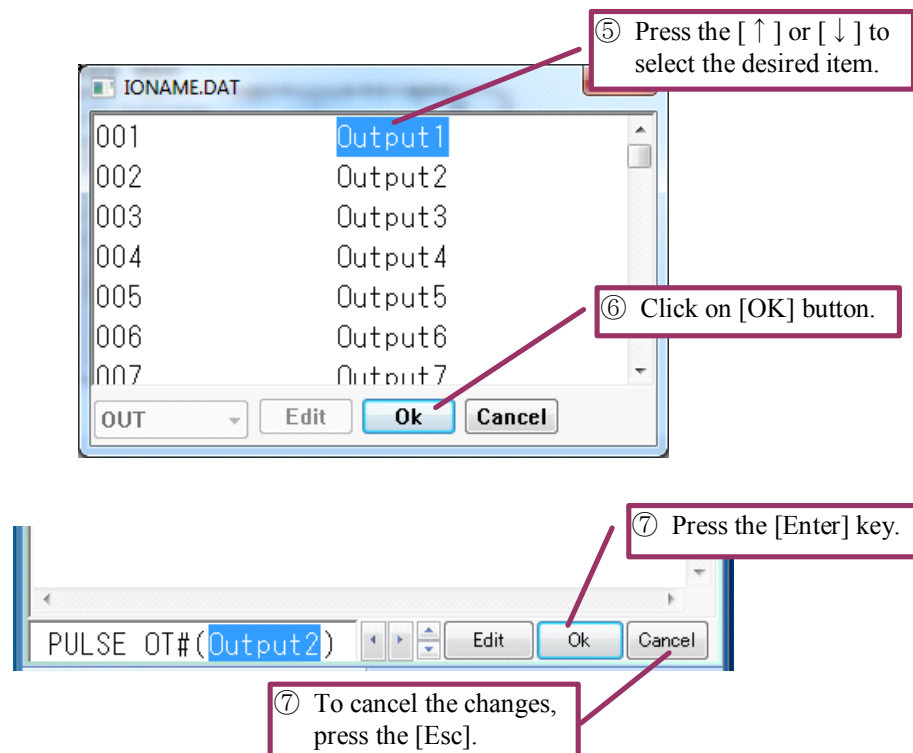

The new data appears in the main window.

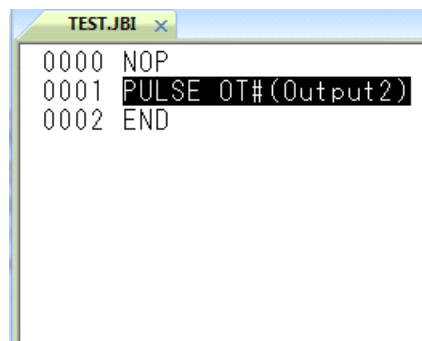


```
0000 NOP
0001 PULSE OT#(Output2)
0002 END
```




The alias function may not be used depending on parameter settings.
The names such as I/O name or variable name cannot be changed in the main window.

3.10 Editing in the Detail Edit Window


3.10.1 Changing an Item

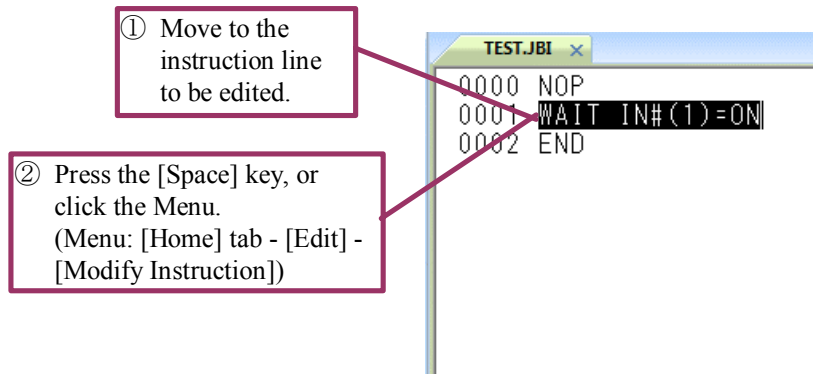


The line-edit box appears in the lower-left of the window.

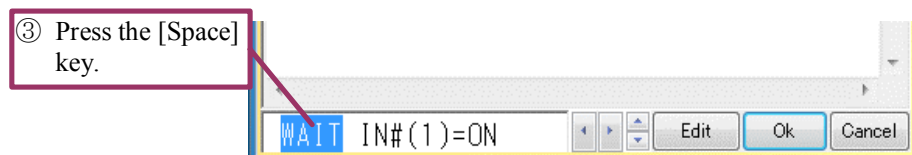


The [Detail Edit] window appears.

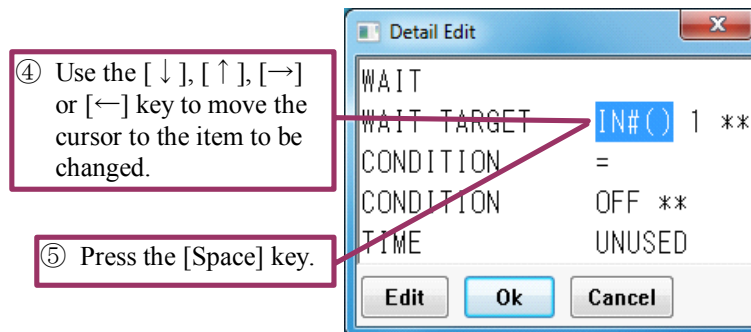


A selection list appears.

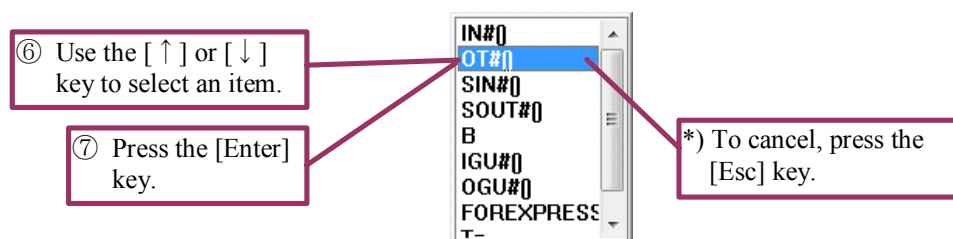


The new item appears in the [Detail Edit] window.

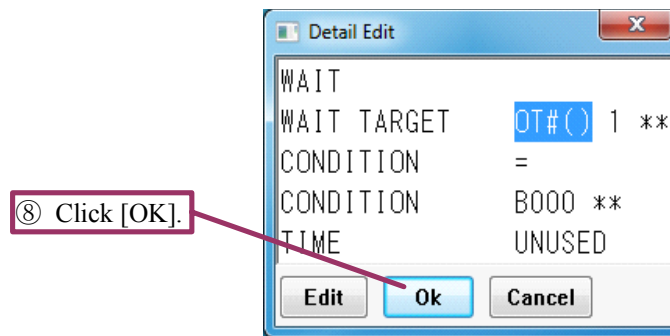

The line-edit box appears in the lower-left of the window.

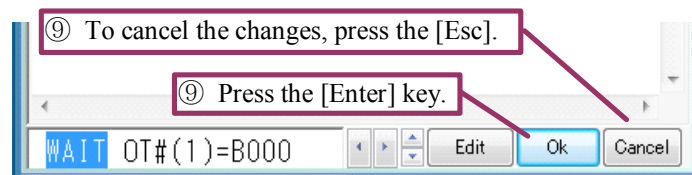


The new instruction appears in the main window.

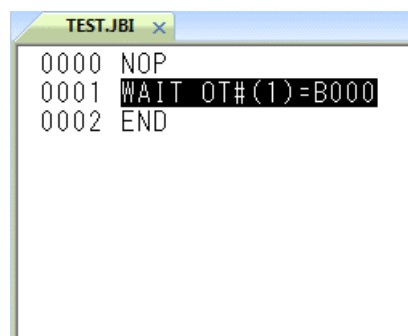


3.10.2 Adding an Item

To call up the Detail Edit window, perform the same procedure as described in steps "1" to "3" of "3.10.1 Changing an Item".

- ① Use the [↓], [↑], [→] or [←] key to move the cursor to the item to be changed.

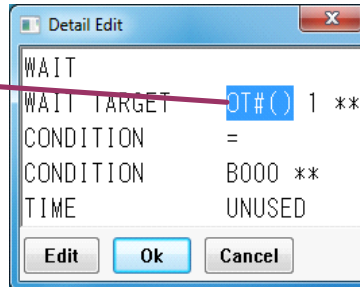


- ② Press the [Space] key.

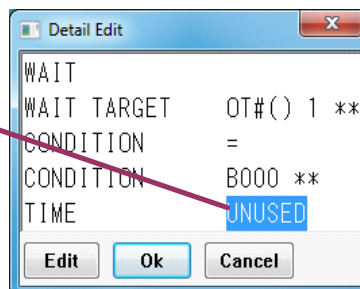

A selection list appears.


- ③ Use the [↓] or [↑] key to make a selection.

- ④ Press the [Enter] key.

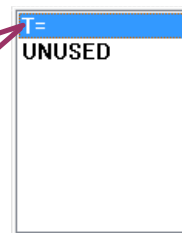


The added item appears in the [Detail Edit] window.


- ⑤ Move the cursor to the numerical data when the numerical value of the item is to be changed.

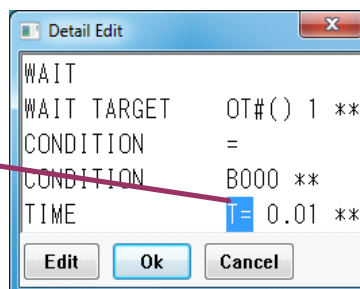


- ⑥ Press the [Space] key.

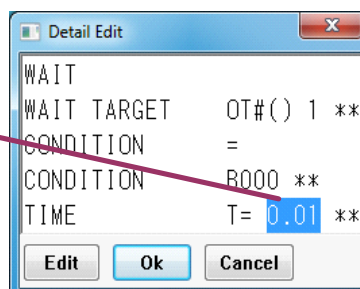

The [Value Input] dialog box appears.

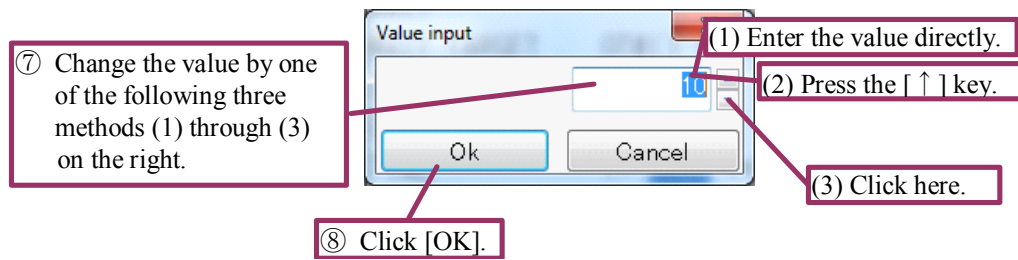

The [Detail Edit] window appears with the new value.

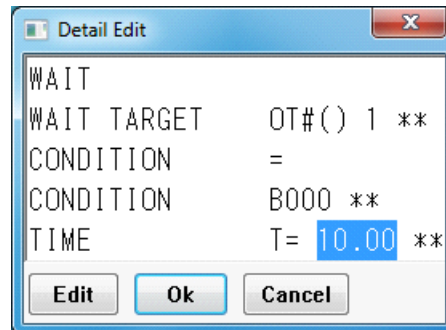


Perform the same procedure as described in " 3.10.1 Changing an Item " to return to the main window.


3.10.3 Deleting an Item

To call up the Detail Edit window, perform the same procedure as described in "1" to "3" of "3.10.1 Changing an Item "

- ① Use [↓], [↑], [→] or [←] key to move the cursor to the item to be deleted.

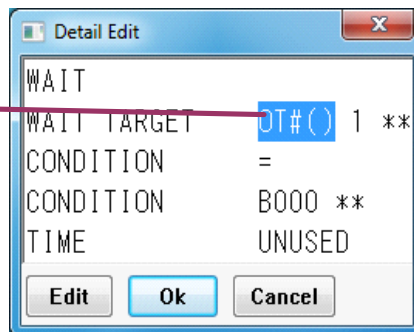


- ② Press the [Space] key.

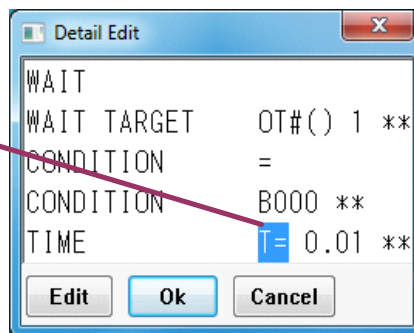


A selection list appears.

- ③ Use the [↓] or [↑] key to make a selection.

- ④ Press the [Enter] key.

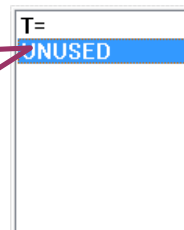

The [Detail Edit] window appears with the item deleted.

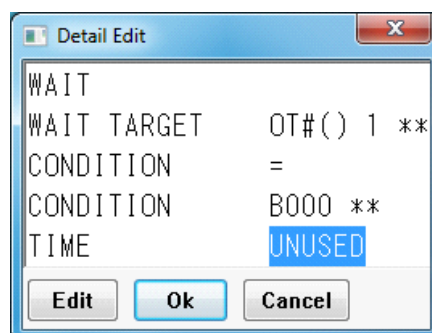


Perform the same procedure as described in "3.10.1 Changing an Item " to return to the main window.


3.10.4 Using an Alias

To call up the Detail Edit window, perform the same procedure as described in steps "1" to "3" of " 3.10.1 Changing an Item ".

- ① Use [↓], [↑], [→] or [←] key to move the cursor to the item to be deleted.

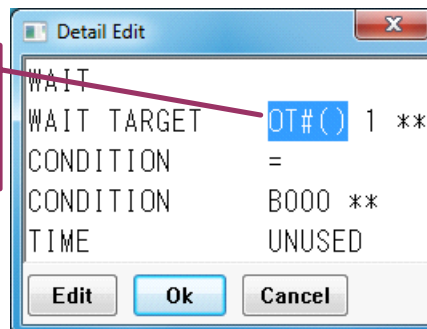


- ② Press the [Space] key.

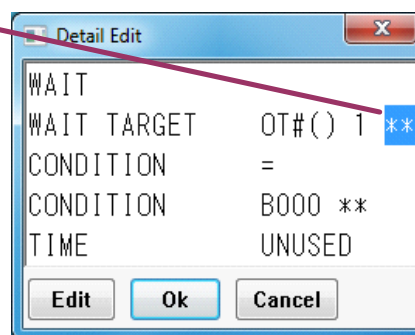


A selection list appears.

- ③ Use the [↓] or [↑] key to make a selection.

- ④ Press the [Enter] key.

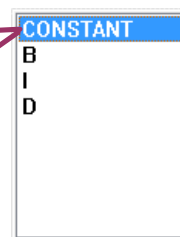


A confirmation dialog box appears after selecting an item available for alias.

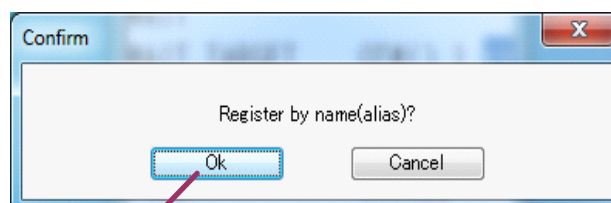


- ⑤ Click on [OK] button.

The [Condition file edit] window appears.

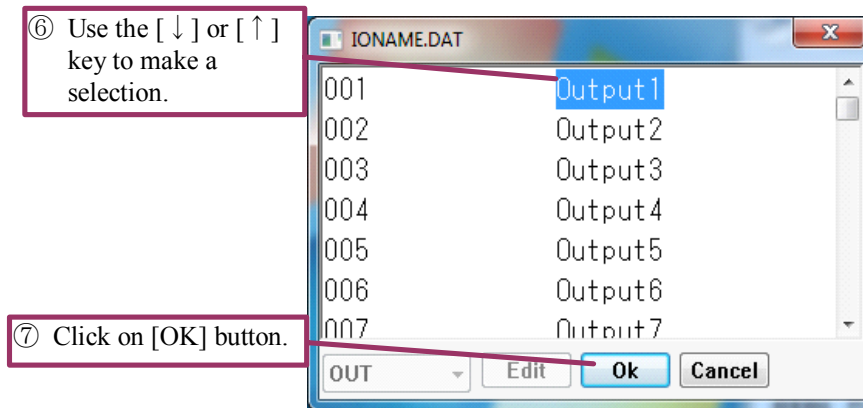

The [Detail Edit] window appears with the item changed to the alias.

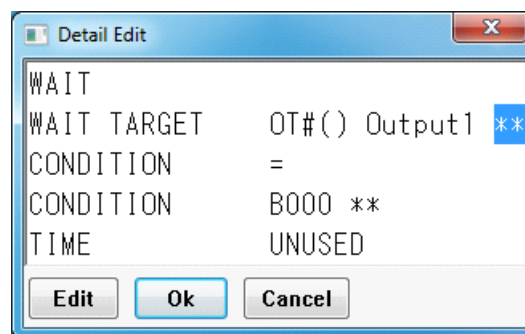


Perform the same procedure as described in " 3.10.1 Changing an Item " to return to the main window.




The alias function may not be used depending on parameter settings.
The names such as I/O name or variable name cannot be changed in the main window.

3.11 Searching

3.11.1 Searching for Character Strings

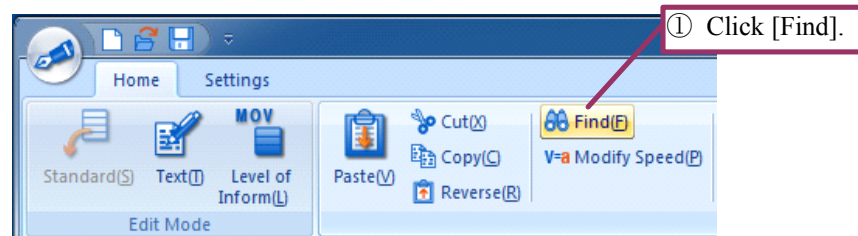

The [Find and Jump] dialog box appears.

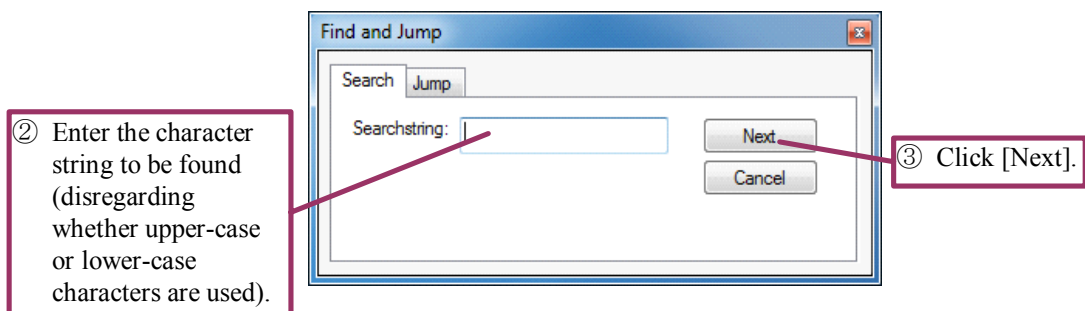


The search for the character string starts.



The search starts from the cursor's position and goes down the list.

3.11.2 Moving the Line Number or Step Number

To call up the [Find and Jump] dialog box, perform the same procedure as described in steps "1" to "3" of " 3.11.1 Searching for Character Strings ".

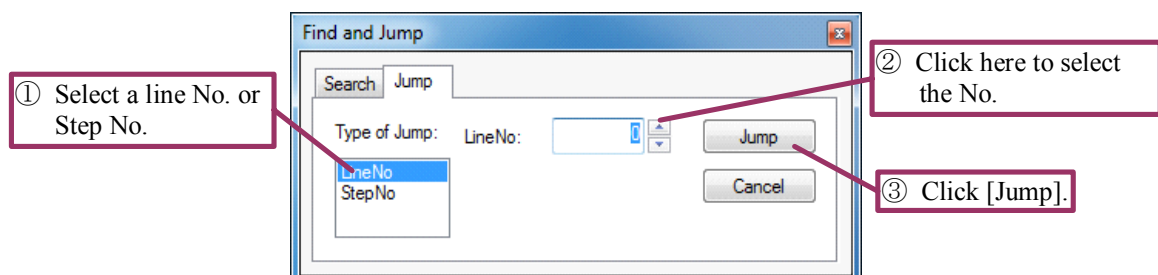


The search for the line No. or Step No. starts.




The search starts from the cursor's position and goes down the list.

3.12 Changing the Speed

3.12.1 Changing according to Speed Type

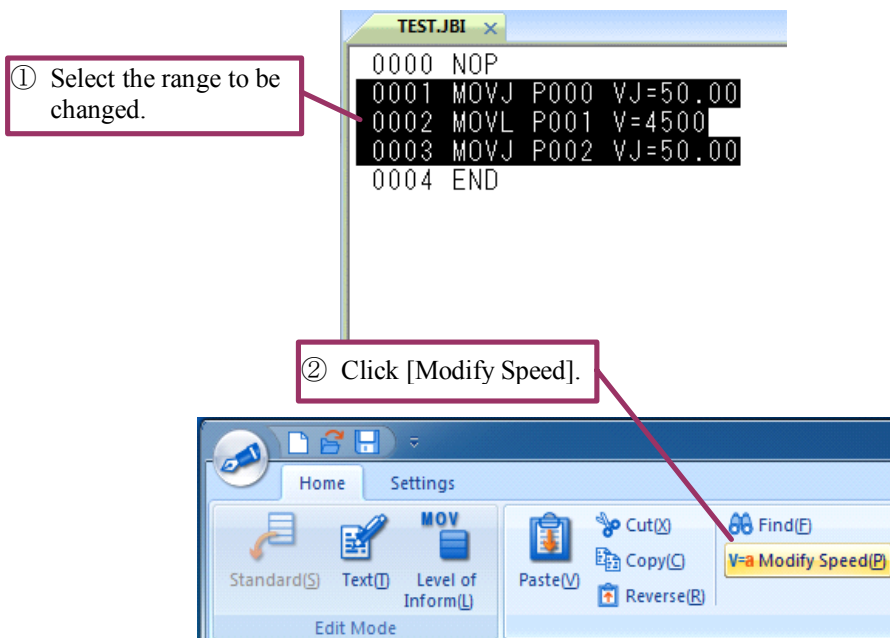

The [Modify speed] dialog box appears.

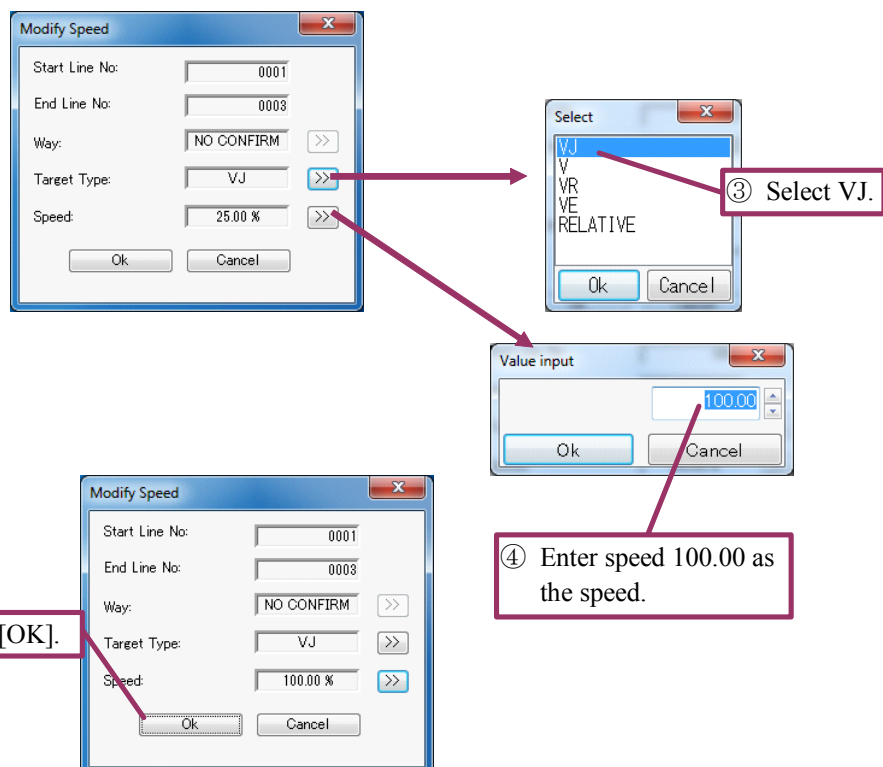

The main window appears with only VJ changed to 100.00.


```

TEST.JBI
0000 NOP
0001 MOVJ P000 VJ=100.00
0002 MOVL P001 V=4500
0003 MOVJ P002 VJ=100.00
0004 END

```

3.12.2 Changing Speed Relatively (Changing Speed in Ratio for Current Speed)

To call up the "Modify speed" dialog box, perform the same procedure as described in " 3.12.1 Changing according to Speed Type "

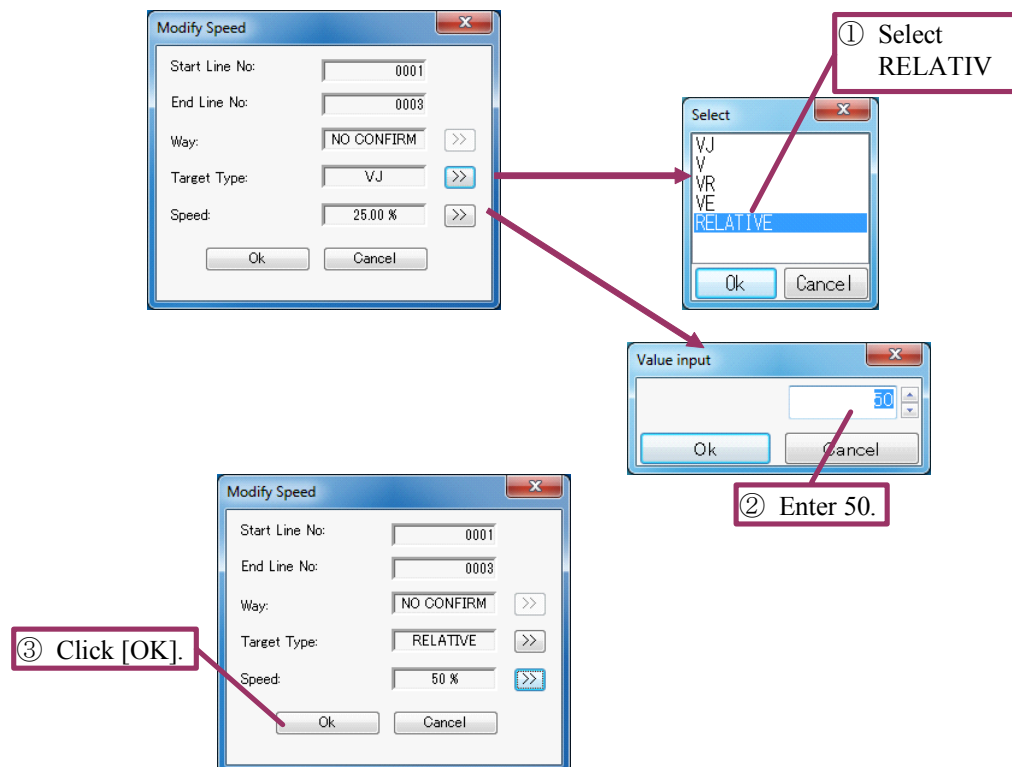

The main window appears with all the speeds changed to 50%.


```

TEST.JBI
0000 NOP
0001 MOVJ P000 VJ=25.00
0002 MOVL P001 V=2250
0003 MOVJ P002 VJ=25.00
0004 END

```



3.13 Edit Lock

3.13.1 Changing the Status to Edit Lock

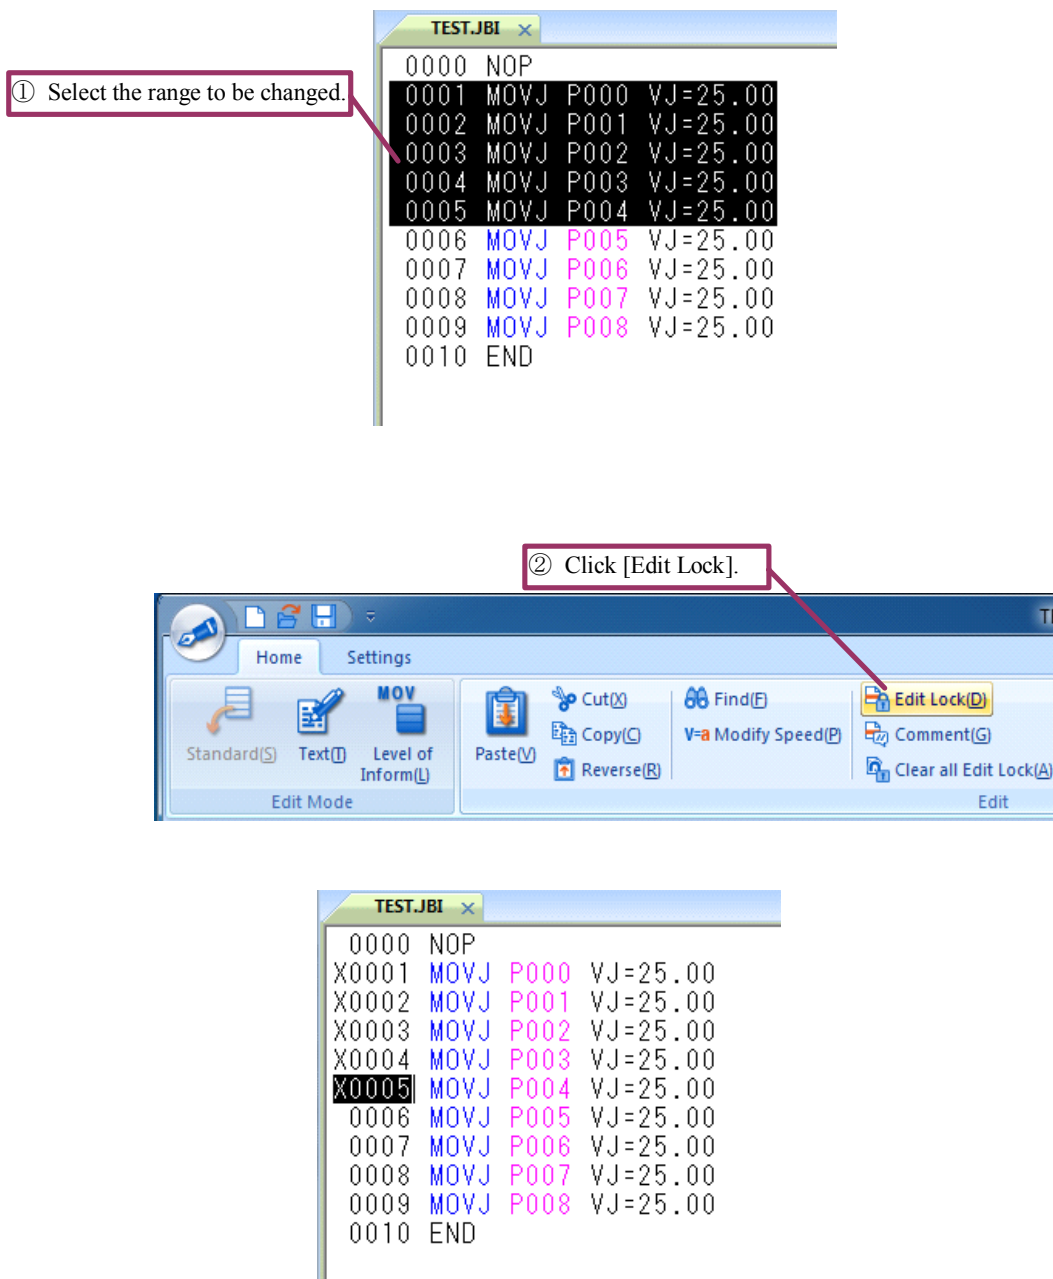


The selected range is changed to edit lock status.

3.13.2 Clear the Edit Lock Status

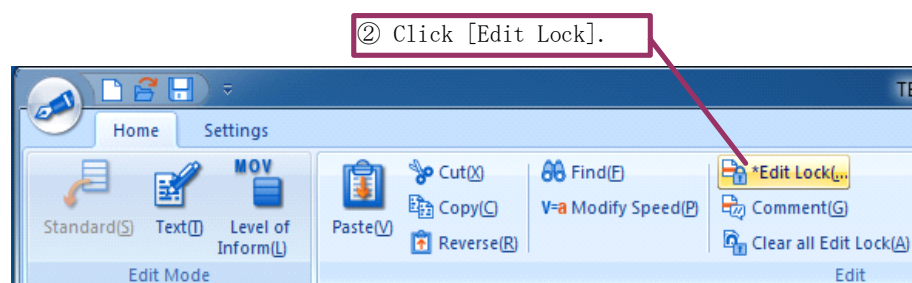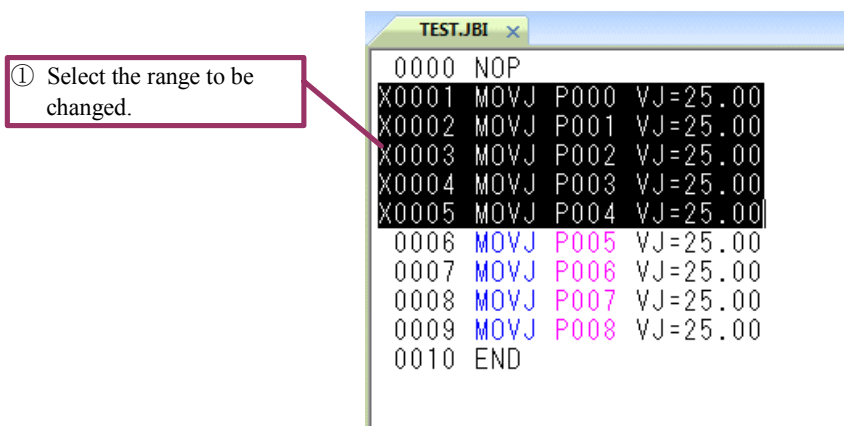

If the status of the selected range is edit lock, the * mark appears. Click [Edit Lock] when the * mark does not appear, the status of lines which are not edit lock will be edit lock.

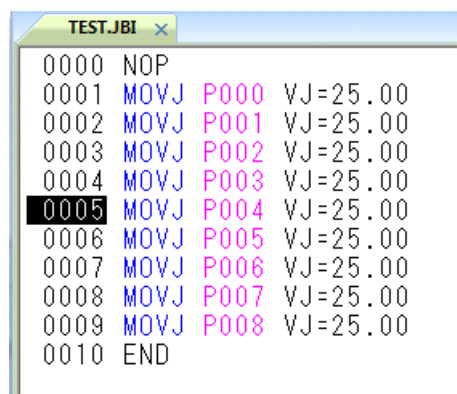

The selected range is cleared edit lock status.

3.13.3 Clear the All Edit Lock Status

① Move to the instruction line to be edited.

```
TEST.JBI x
0000 NOP
X0001 MOVJ P000 VJ=25.00
0002 MOVJ P001 VJ=25.00
X0003 MOVJ P002 VJ=25.00
0004 MOVJ P003 VJ=25.00
0005 MOVJ P004 VJ=25.00
0006 MOVJ P005 VJ=25.00
0007 MOVJ P006 VJ=25.00
0008 MOVJ P007 VJ=25.00
0009 MOVJ P008 VJ=25.00
0010 END
```

② Click [Clear Edit Lock].



```
TEST.JBI x
0000 NOP
0001 MOVJ P000 VJ=25.00
0002 MOVJ P001 VJ=25.00
0003 MOVJ P002 VJ=25.00
0004 MOVJ P003 VJ=25.00
0005 MOVJ P004 VJ=25.00
0006 MOVJ P005 VJ=25.00
0007 MOVJ P006 VJ=25.00
0008 MOVJ P007 VJ=25.00
0009 MOVJ P008 VJ=25.00
0010 END
```

All edit lock status is cleared.


3.14 Comment

3.14.1 Changing the Status to Comment

①Select the range to be changed.

```
TEST.JBI x
0000 NOP
0001 MOVJ P000 VJ=25.00
0002 MOVJ P001 VJ=25.00
0003 MOVJ P002 VJ=25.00
0004 MOVJ P003 VJ=25.00
0005 MOVJ P004 VJ=25.00
0006 MOVJ P005 VJ=25.00
0007 MOVJ P006 VJ=25.00
0008 MOVJ P007 VJ=25.00
0009 MOVJ P008 VJ=25.00
0010 END
```


②Click [Comment].

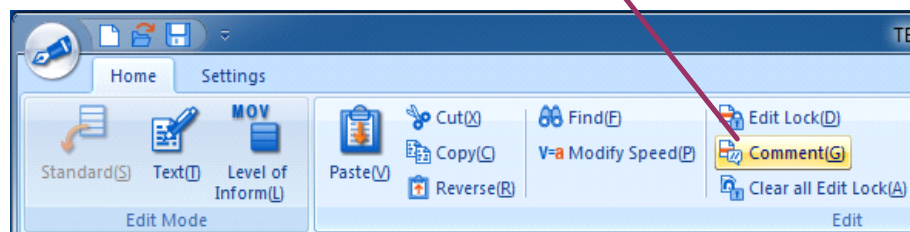


```
TEST.JBI x
0000 NOP
0001 //MOVJ P000 VJ=25.00
0002 //MOVJ P001 VJ=25.00
0003 //MOVJ P002 VJ=25.00
0004 //MOVJ P003 VJ=25.00
0005 //MOVJ P004 VJ=25.00
0006 MOVJ P005 VJ=25.00
0007 MOVJ P006 VJ=25.00
0008 MOVJ P007 VJ=25.00
0009 MOVJ P008 VJ=25.00
0010 END
```

The selected range is changed to comment status.

3.14.2 Clear the Comment Status

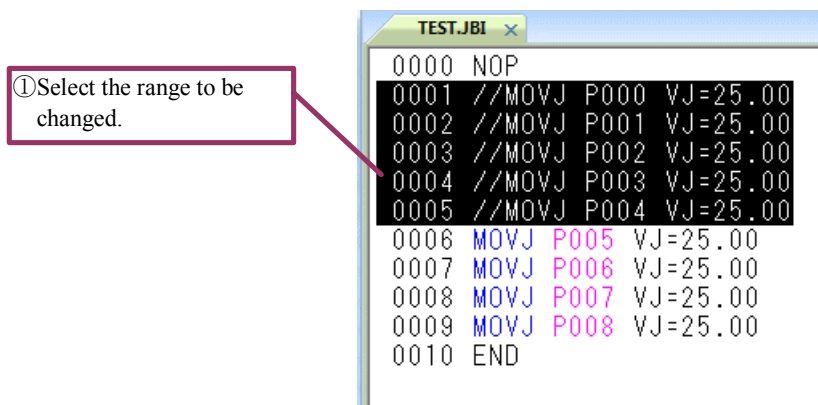

If the status of the selected range is comment, the * mark appears. Click [Comment] when the * mark does not appear, the status of lines which are not comment will be comment.

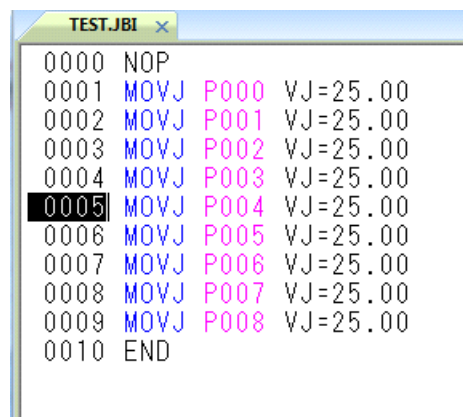


The selected range is cleared comment status.

3.14.3 Clear the All Comment Status

① Move to the instruction line to be edited.

```
TEST.JBI x
0000 NOP
0001 //MOVJ P000 VJ=25.00
0002 MOVJ P001 VJ=25.00
0003 //MOVJ P002 VJ=25.00
0004 MOVJ P003 VJ=25.00
0005 MOVJ P004 VJ=25.00
0006 MOVJ P005 VJ=25.00
0007 MOVJ P006 VJ=25.00
0008 MOVJ P007 VJ=25.00
0009 MOVJ P008 VJ=25.00
0010 END
```


② Click [Clear all mark of comment].

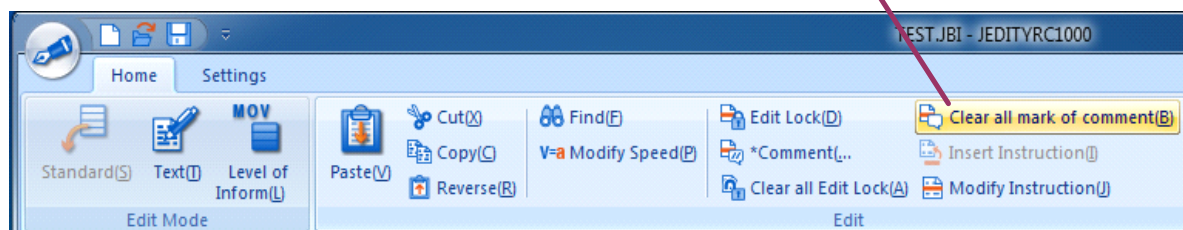


```
TEST.JBI x
0000 NOP
0001 MOVJ P000 VJ=25.00
0002 MOVJ P001 VJ=25.00
0003 MOVJ P002 VJ=25.00
0004 MOVJ P003 VJ=25.00
0005 MOVJ P004 VJ=25.00
0006 MOVJ P005 VJ=25.00
0007 MOVJ P006 VJ=25.00
0008 MOVJ P007 VJ=25.00
0009 MOVJ P008 VJ=25.00
0010 END
```

All comment status is cleared.

3.15 Adding Comments

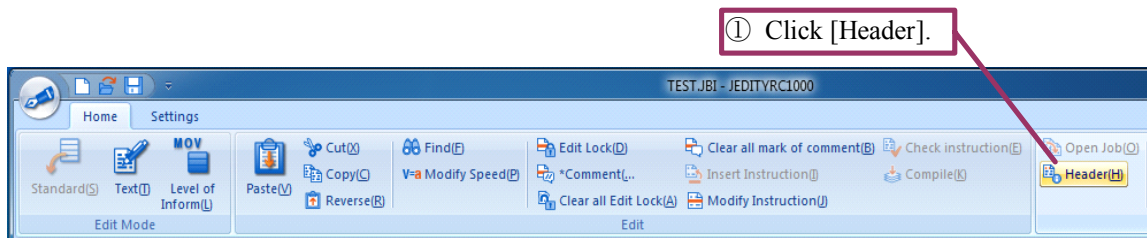


The [Header of Job] dialog box appears.

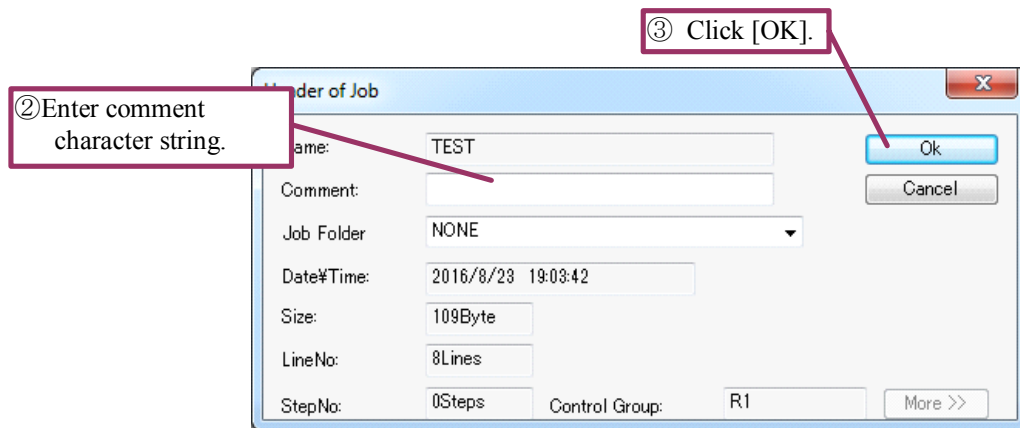


Enter maximum of 32 characters for the comment character string.

3.16 Edit the Job Folder Name

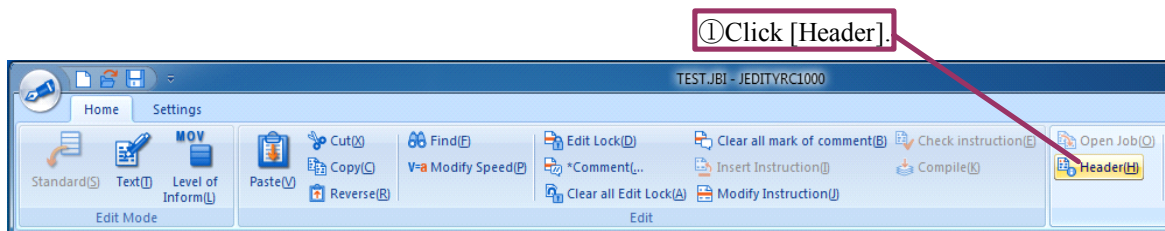


The [Header of Job] dialog box appears.

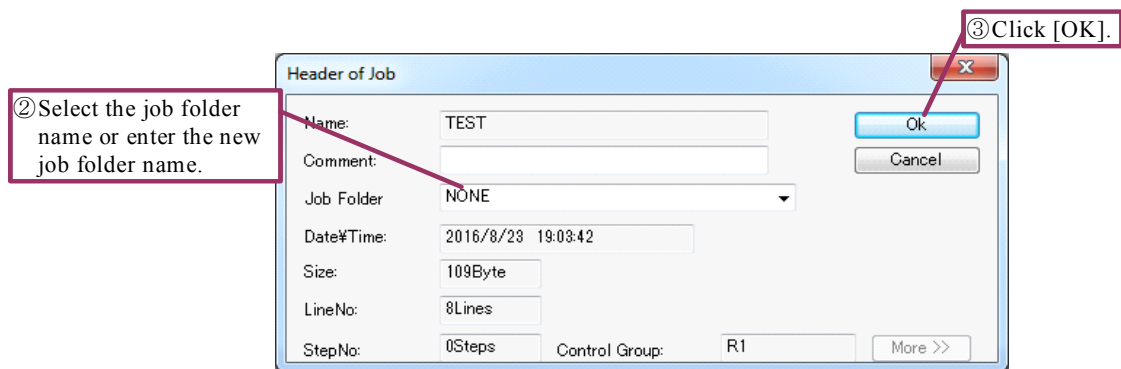


NOTE Enter maximum of 32 characters for the job folder name.


3.17 Entering the Numbers and Names of Local Variables Used

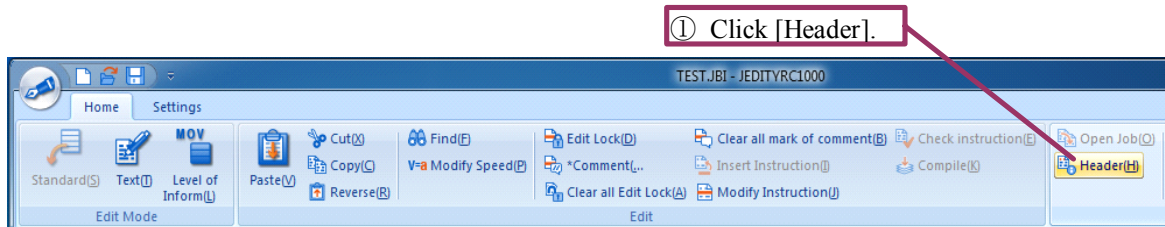


The [Header of Job] dialog box appears.

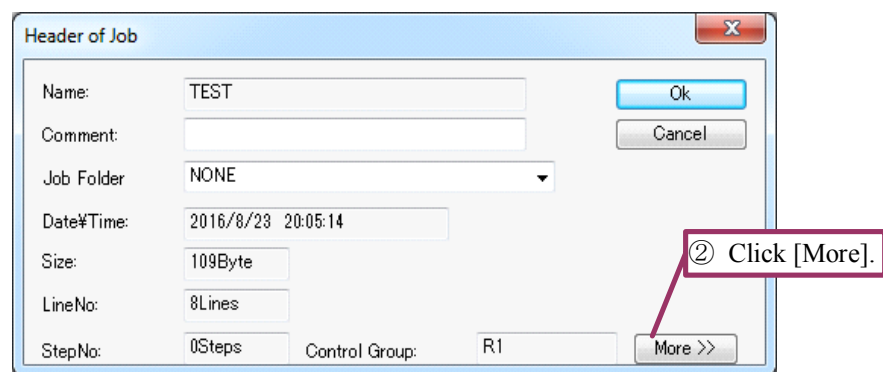

The Local variable Num text boxes appear.

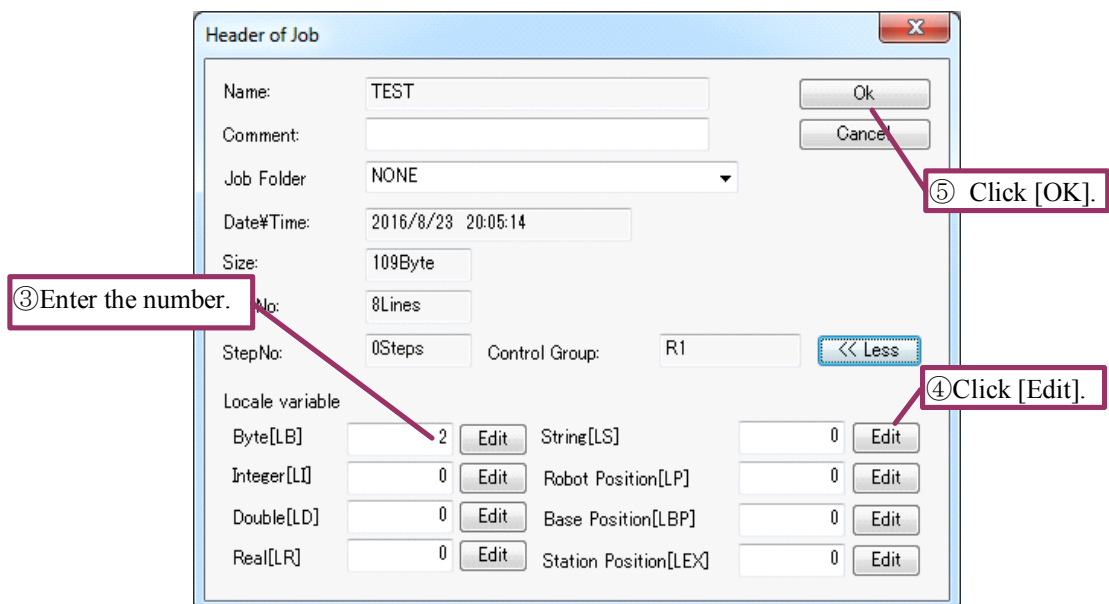


The [Local variable edit] window appears.

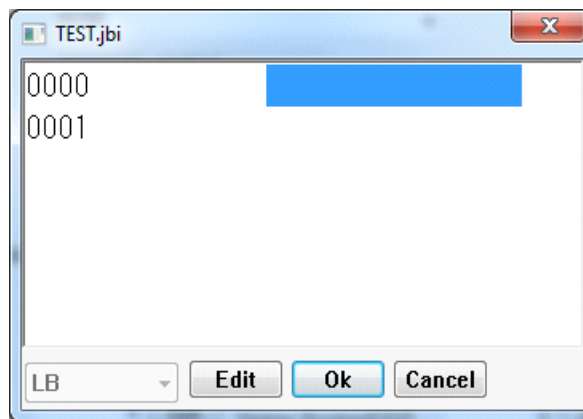


- The [More] button occasionally be invalidated and becomes unable to select.
- The [Local variable edit] window may not appear after clicking on the [Edit] button depending on parameter settings.

3.18 Displaying Step Nos., I/O Names, or Variable Names

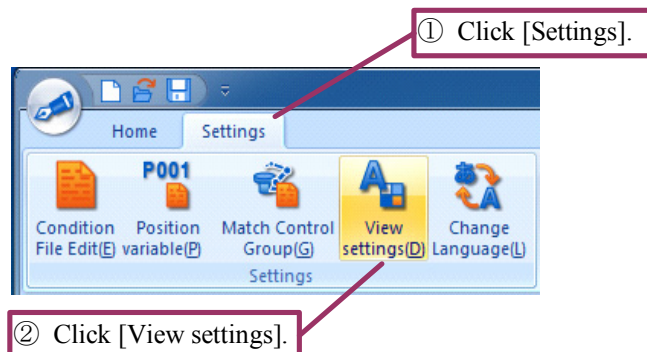

The [Display Setting] dialog box appears.

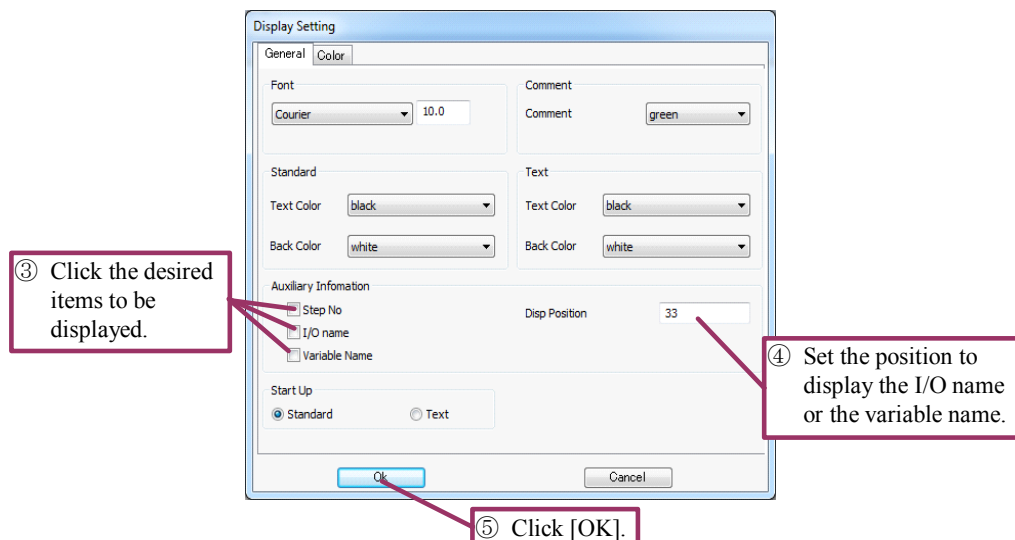

```

TEST.JBI
0000 NOP
0001 WAIT IN#(10)=ON
0002 DIN B000 IN#(1)
0003 CALL JOB:TEST2
0004 MOVJ P000 VJ=50.00
0005 MOVJ P001 VJ=50.00
0006 MOVJ P002 VJ=50.00
0007 TIMER T=1.00
0008 PULSE OT#(1)
0009 END

```

Names and numbers are displayed.

```


TEST.JBI
0000 NOP
0001 WAIT IN#(10)=ON
0002 DIN B000 IN#(1)
0003 CALL JOB:TEST2
0004 0001 MOVJ P000 VJ=50.00
0005 0002 MOVJ P001 VJ=50.00
0006 0003 MOVJ P002 VJ=50.00
0007 TIMER T=1.00
0008 PULSE OT#(1)
0009 END

```


IN#(1)=OUTPUT1
P000=POINT1
P001=POINT2
P002=POINT3
OT#(1)=Output1

3.19 Opening a Call Job

This function can be used only with a CALL instruction or a JUMP instruction.

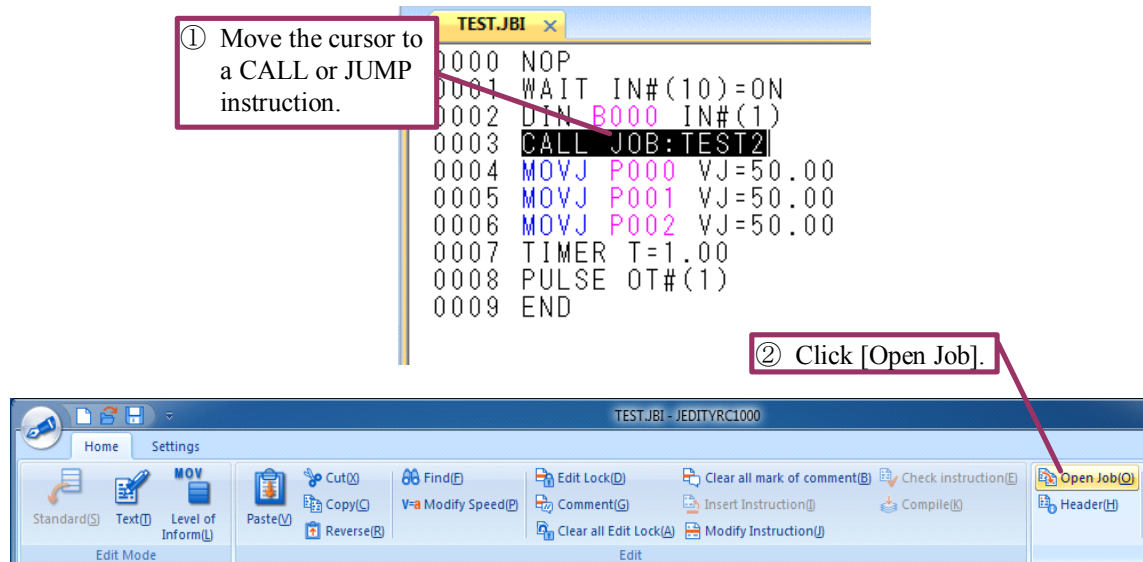

The job that is designated in the CALL or JUMP instruction appears.

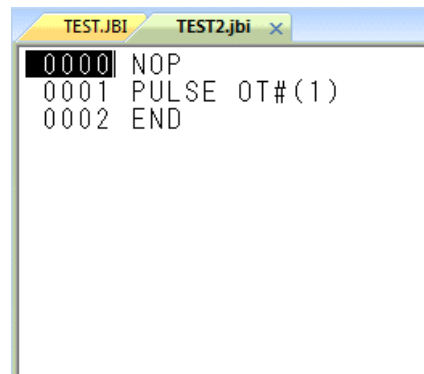


3.20 Editing an Expression


To edit an expression, use a "SET" instruction.




To edit an expression, set the language level to "Standard" or "Extension".

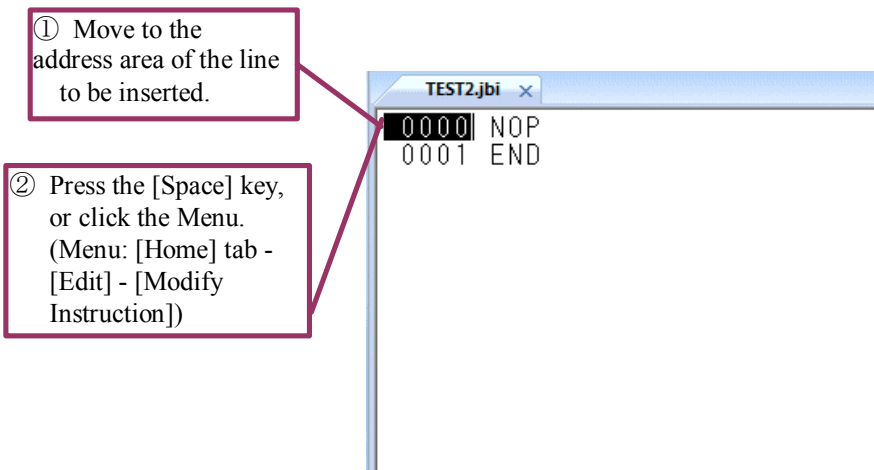


The [Select Inst] dialog box for each group of instructions appears.

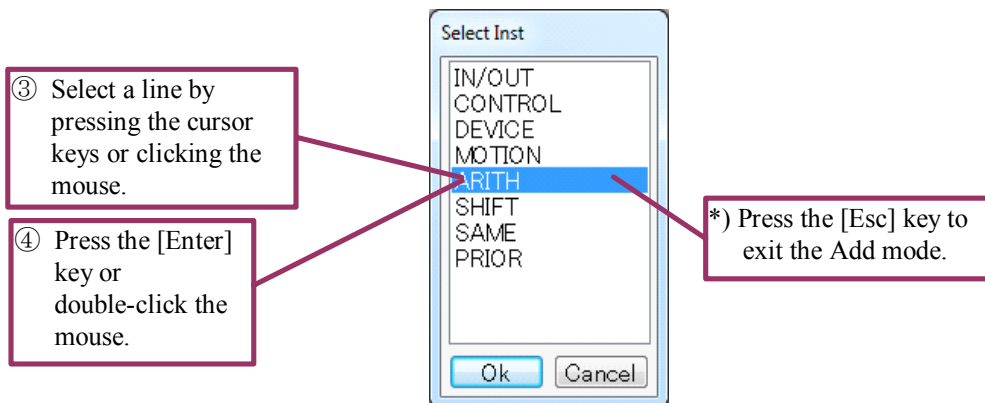


The [Select Inst] dialog box appears.

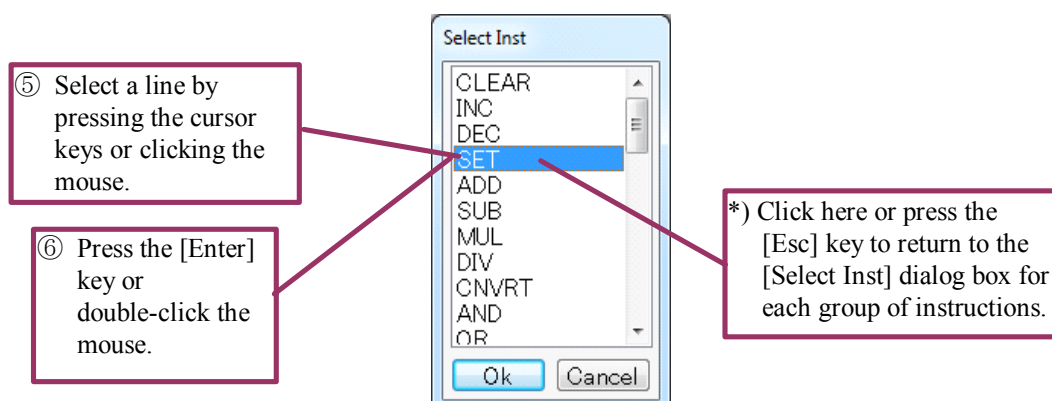


The line-edit box appears in the lower-left of the window.

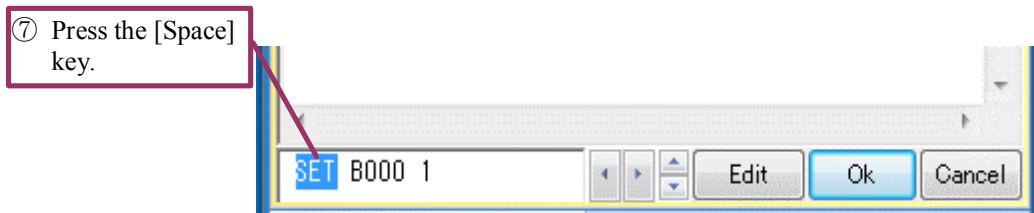


The [Detail Edit] dialog box for the SET instruction appears.

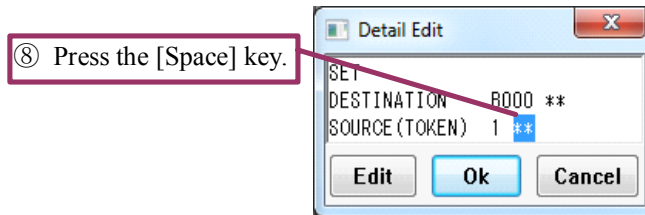

A selection list appears.

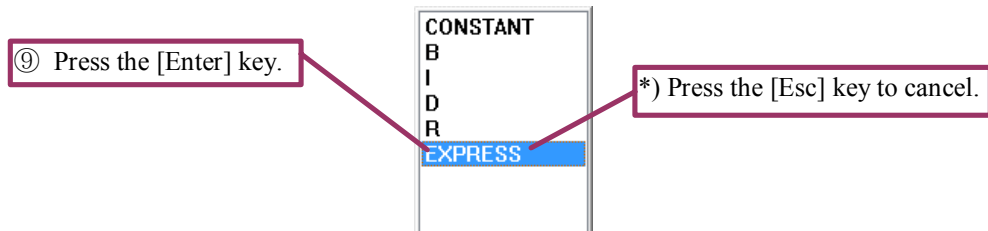

The [Detail Edit] dialog box for EXPRESS appears.

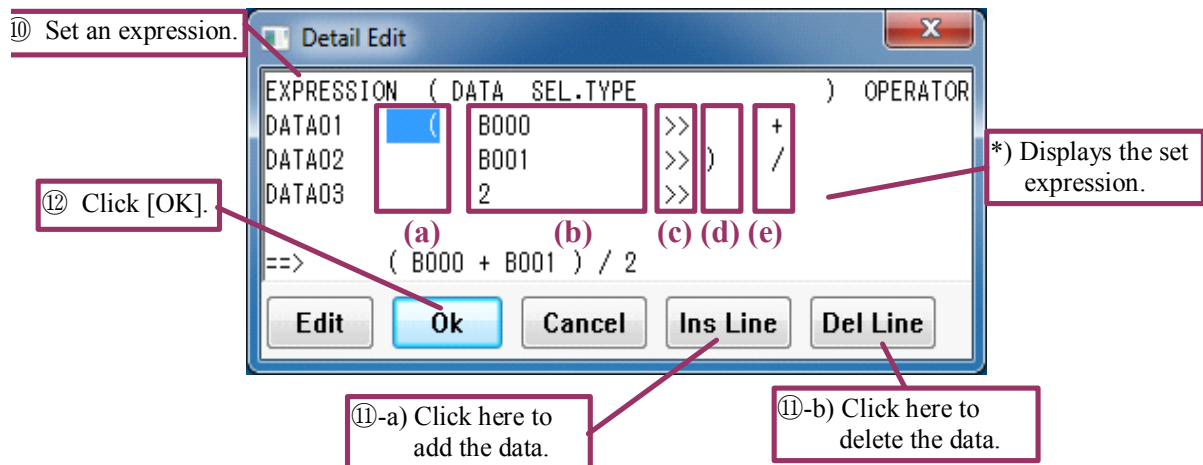

Double-click the position or click [Edit] to select the following items.


(a) Left parenthesis

By performing double-click or clicking [Edit], the display changes in the following order.

(→ ((→ (((→ - (→ - ((→ - (((



(b) Data

The [Value Input] box appears.

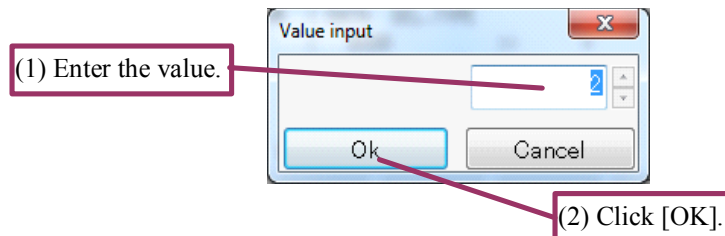

(c) Changing the data type

A selection list appears.

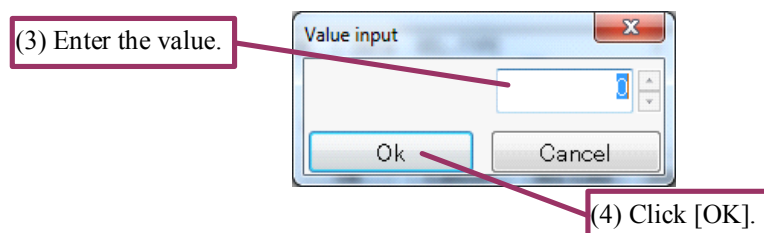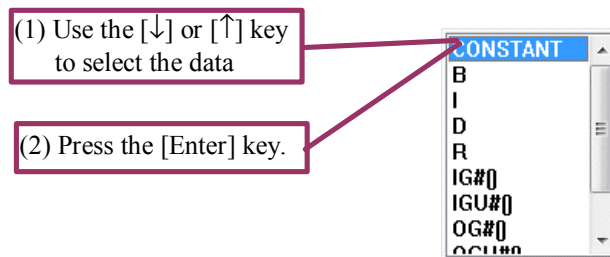


(d) Right parenthesis

By performing double-click or clicking [Edit], the display changes in the following order.


) →)) →)))

(e) Operator


A selection list appears.

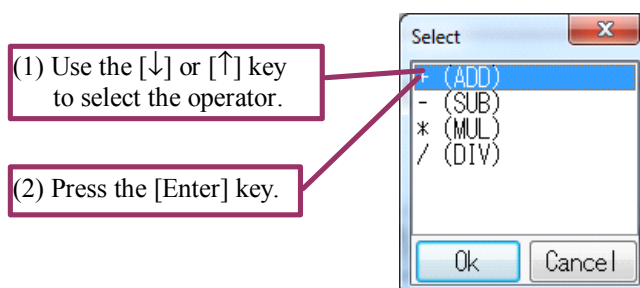


The [Detail Edit] dialog box for the SET instruction appears again.

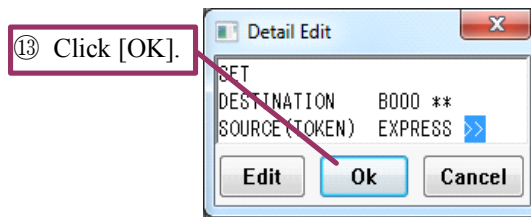

The line-edit box appears in the lower-left of the window.

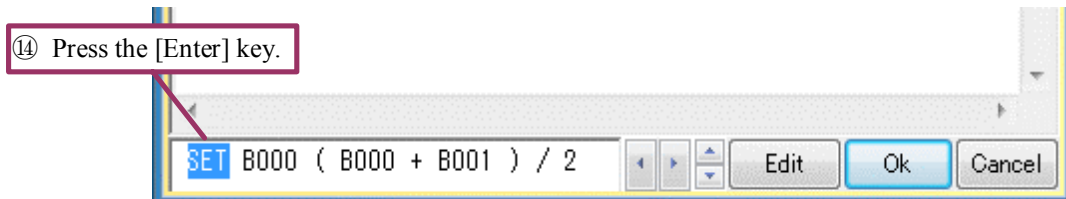


The changed main window appears.

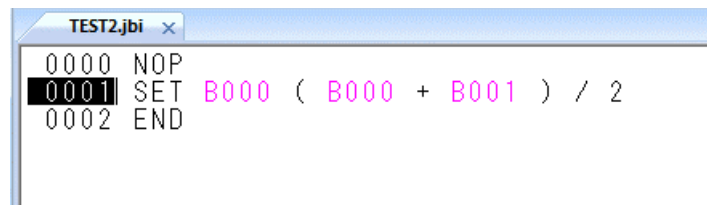


3.21 Using a Macro Command

By storing the macro definition file (MACRO.DAT) in the same folder as the parameter file (All.prm), the defined macro command can be used.

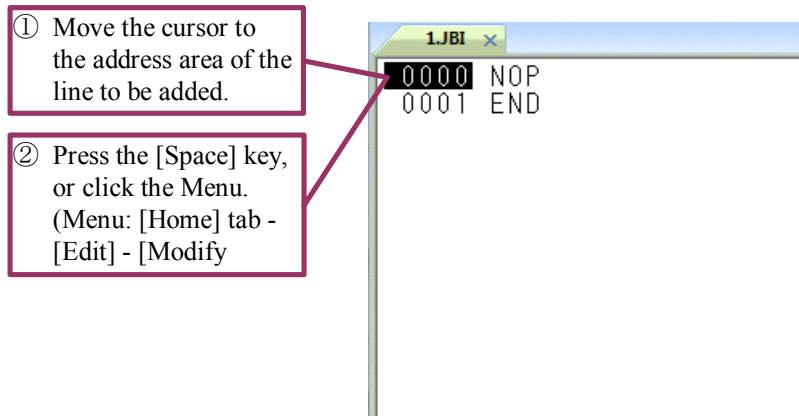

The [Select Inst] dialog box for each group of instructions appears.

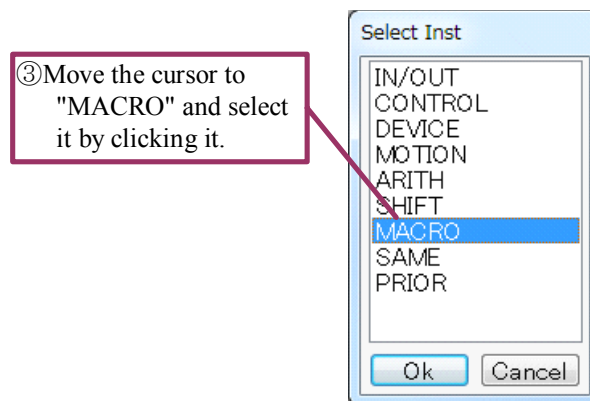

The [Select Inst] dialog box appears.

Instructions that have been defined in the macro definition file appear. These instructions are used to add or edit the macro command.




The Job Editor YRC1000 can use a macro command but cannot create the command. To use this function, use the parameter file of which option for "INFORM creation function" is available.


4 EDITING (TEXT)

In the Text mode, the job can be edited as "Notepad".

4.1 Change into Text Mode

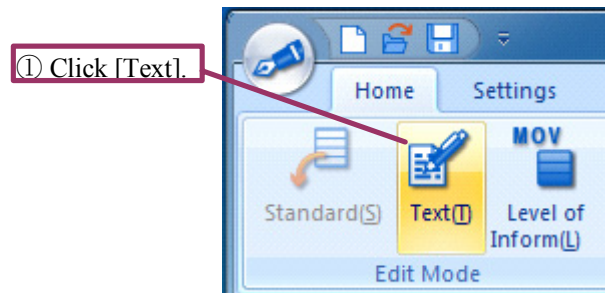

The mode is changed into the text mode.



The job can be edited as "Notepad".

```
TEST.JBI x
0000 NOP
0001 WAIT IN#(1) OFF
0002 DIN B000 IN#(1)
0003 WAIT
0004 DOUT OT#(1) ON
0005 CALL JOB:TEST2
0006 TIMER T=1.00
0007 PULSE OT#(1)
0008 END
```


NOTE

In the text mode, There are the following restrictions.


- Job header part is not be automatically corrected. If move instruction or aliases is modified, the header part needs to be modified in the manual.
- Macro instruction does not appear in the macro job name.
- There are restrictions on the input support function.
 - Input Support is case-sensitive.
 - The candidates display depends on the language level.
 - ON/OFF and CONTANT is not displayed.
 - About the structured language, the candidates of the conditional statement and the candidates (AND or OR) after the conditional statement is not available.
 - The displayed format is the text data saved in ex. memory. So, WHILE, IFTHEN, AND and Or are displayed as WHILEEXP, IFTHENEXP, ANDEXP and OREXP.
 - The candidates after the EXPRESS of SET instruction is not available.
 - The candidates of macro instruction is not available.
 - The candidates of aliases is not available.

When clicking [Text], the following dialog appears sometimes.

When clicking [Yes], the file is saved and shift to Text mode.

When clicking [No], the file is not saved and shift to Text mode.


When clicking [Cancel], mode shift is canceled.

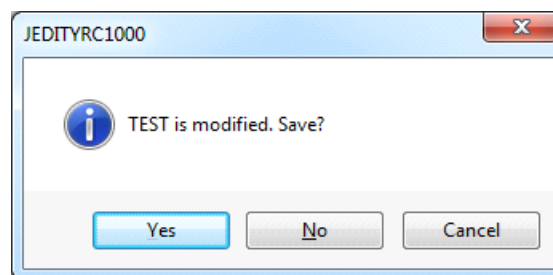

If there is a temporary file that has been saved in the previous text mode, the following dialog appears.

When clicking [Yes], the temporary file is opened instead of the current job file and shift to Text mode.

When clicking [No], the current is opened and shift to Text mode.

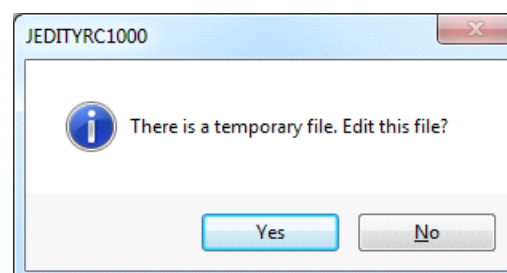

The temporary file is automatically deleted when the job file has been successfully saved in text mode.

4.2 Adding an Instruction

Press the cursor keys where an instruction is to be added. This can be also done by clicking the mouse directly.

① Click the text.

```
TEST.JBI x
0000 NOP
0001 WAIT IN#(1)=OFF
0002 DIN 8000 IN#(1)
0003 |
0004 CALL JOB:TEST2
0005 TIMER T=1.00
0006 PULSE OT#(1)
0007 END
```

② Input by keyboard.

```
TEST.JBI x
0000 NOP
0001 WAIT IN#(1)=OFF
0002 DIN 8000 IN#(1)
0003 D DEFAULT
0004 CADOUT ST2
0005 TIDIN 0
0006 PULSE OT#(1)
0007 END
```

③ Use the [↑] or [↓] key to select an item, and press the [Enter] key.

④ Press the [Space]

```
TEST.JBI x
0000 NOP
0001 WAIT IN#(1)=OFF
0002 DIN 8000 IN#(1)
0003 DOUT OT#(1) 出力先
0004 CALL JOG#(1) 出力先
0005 TIMER T=1.00
0006 PULSE OT#(1)
0007 END
```

⑤ Use the [↑] or [↓] key to select an item, and press the [Enter] key.

⑥ Input ON, OFF or CONSTANT by keyboard


```
TEST.JBI x
0000 NOP
0001 WAIT IN#(1)=OFF
0002 DIN 8000 IN#(1)
0003 DOUT OT#(1) ON
0004 CALL JOB:TEST2
0005 TIMER T=1.00
0006 PULSE OT#(1)
0007 END
```

4.3 Deleting an Instruction

4.3.1 Deleting One Line

Select the line to be deleted.


① Move the cursor to the top of line to be deleted.

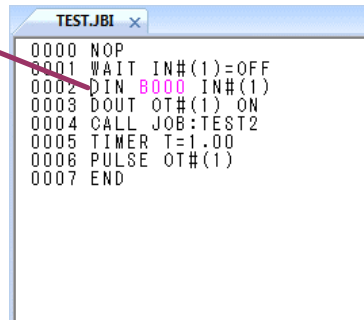

```

0000 NOP
0001 WAIT IN#(1)=OFF
0002 DIN B000 IN#(1)
0003 DOUT OT#(1) ON
0004 CALL JOB:TEST2
0005 TIMER T=1.00
0006 PULSE OT#(1)
0007 END
  
```


② Move the cursor holding the [Shift] key down to select the line.

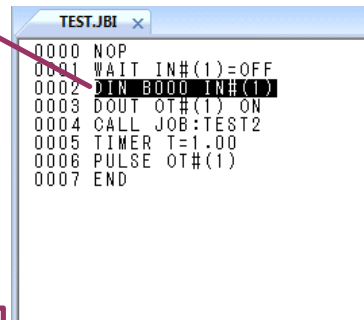

```

0000 NOP
0001 WAIT IN#(1)=OFF
0002 DIN B000 IN#(1)
0003 DOUT OT#(1) ON
0004 CALL JOB:TEST2
0005 TIMER T=1.00
0006 PULSE OT#(1)
0007 END
  
```

③ Click [Cut].

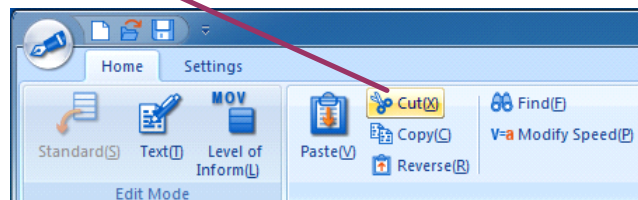

Since the cut contents are copied to the buffer, they can be pasted on another place or job.


4.3.2 Deleting Multiple Lines

Perform the same operation as described in " 4.3.1 Deleting One Line " after selecting multiple lines described in the next section.

4.4 Selecting Multiple Lines


4.4.1 Using the Keyboard

① Move to the first

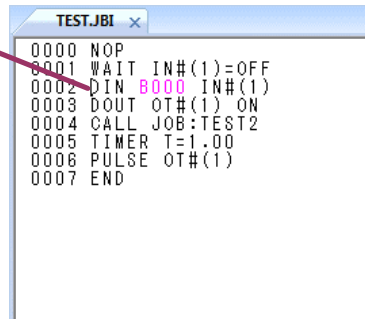

```
0000 NOP
0001 WAIT IN#(1)=OFF
0002 DIN B000 IN#(1)
0003 DOUT OT#(1) ON
0004 CALL JOB:TEST2
0005 TIMER T=1.00
0006 PULSE OT#(1)
0007 END
```


② Move the cursor holding the[Shift] key down to select lines.

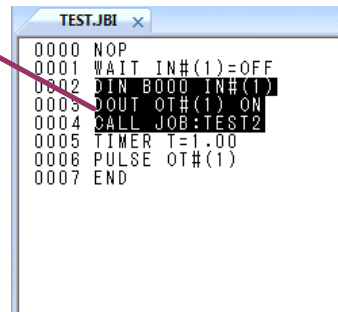

```
0000 NOP
0001 WAIT IN#(1)=OFF
0002 DIN B000 IN#(1)
0003 DOUT OT#(1) ON
0004 CALL JOB:TEST2
0005 TIMER T=1.00
0006 PULSE OT#(1)
0007 END
```


4.4.2 Using the Mouse

① Click the first line to be selected.

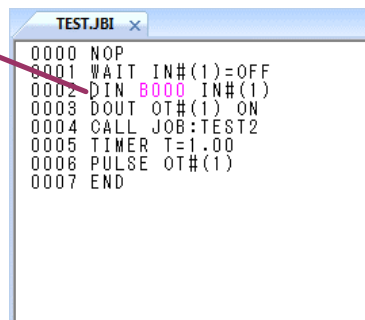

```
0000 NOP
0001 WAIT IN#(1)=OFF
0002 DIN B000 IN#(1)
0003 DOUT OT#(1) ON
0004 CALL JOB:TEST2
0005 TIMER T=1.00
0006 PULSE OT#(1)
0007 END
```

② Drag over adjacent lines to select multiple lines.

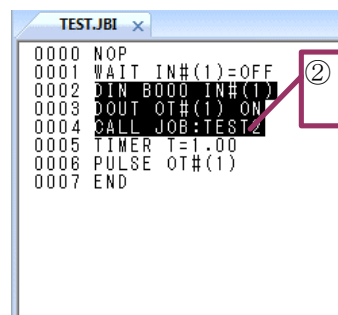


```
0000 NOP
0001 WAIT IN#(1)=OFF
0002 DIN B000 IN#(1)
0003 DOUT OT#(1) ON
0004 CALL JOB:TEST2
0005 TIMER T=1.00
0006 PULSE OT#(1)
0007 END
```

4.5 Copying an Instruction

4.5.1 Copying One Line

① Move the cursor to the top of line to be copied.

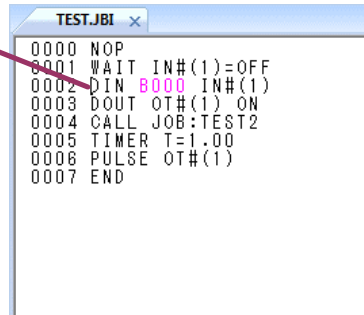


```

0000 NOP
0001 WAIT IN#(1)=OFF
0002 DIN B000 IN#(1)
0003 DOUT OT#(1) ON
0004 CALL JOB:TEST2
0005 TIMER T=1.00
0006 PULSE OT#(1)
0007 END

```

② Move the cursor holding the [Shift] key down to select the line.

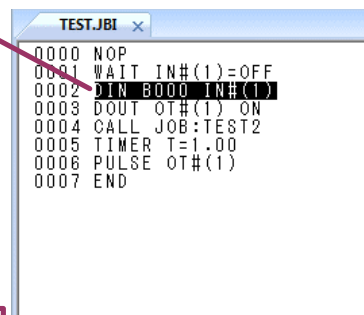


```

0000 NOP
0001 WAIT IN#(1)=OFF
0002 DIN B000 IN#(1)
0003 DOUT OT#(1) ON
0004 CALL JOB:TEST2
0005 TIMER T=1.00
0006 PULSE OT#(1)
0007 END

```

③ Click [Copy].

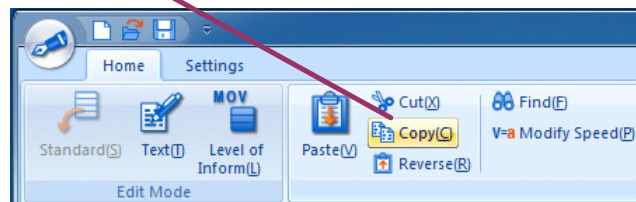

Perform the same operation as described in " 4.6 Pasting an Instruction ".



It does not limit to copy instructions, but please caution if copy the move instruction or structured language.


4.5.2 Copying Multiple Lines

Perform the procedure described in " 4.4 Selecting Multiple Lines " and then perform the procedures as described in step 3 in " 4.5.1 Copying an Instruction ".

4.6 Pasting an Instruction


① Move the cursor to the top of line to be copied.

② Click [Paste].

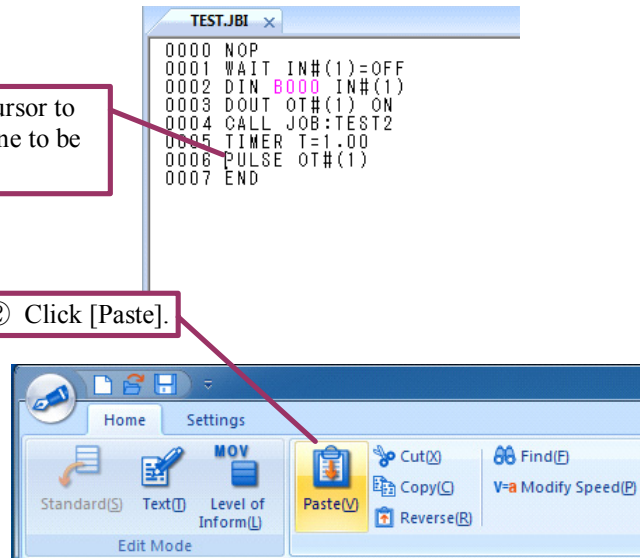


4.7 Showing the header part

4.7.1 Showing the header part

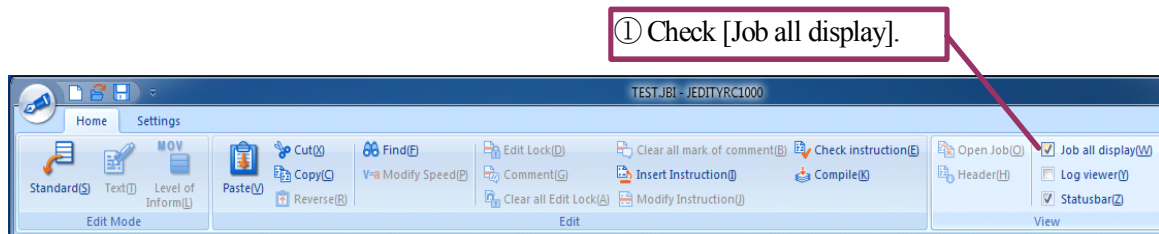

When editing the job, the following dialog appears.

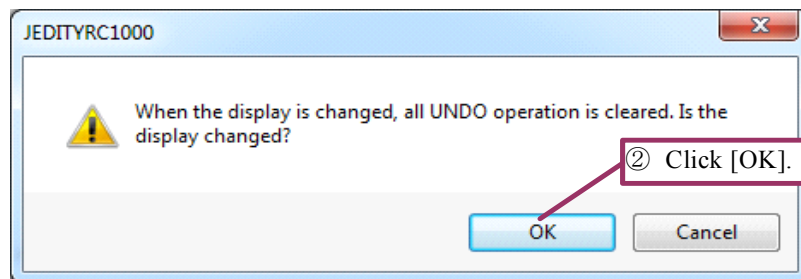


The header part is displayed.

```


TEST.JBI
0000 /JOB
0001 //NAME TEST
0002 //POS
0003 ///NPOS 0,0,0,0,0,0
0004 //INST
0005 ///DATE 2016/08/16 18:36
0006 ///COMM
0007 ///ATTR SC,RW
0008 ///GROUP1 RB1
0009 ///LVAR5 2,0,0,0,0,0,0
0010 NOP
0011 WAIT IN#(1)=OFF
0012 DIN B000 IN#(1)
0013 DOUT OT#(1) ON
0014 CALL JOB:TEST2
0015 TIMER T=1.00
0016 PULSE OT#(1)
0017 END

```

4.7.2 Hiding the header part

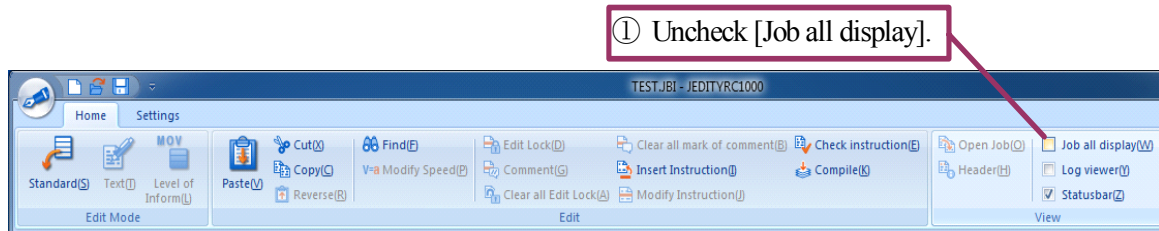

When editing the job, the following dialog appears.

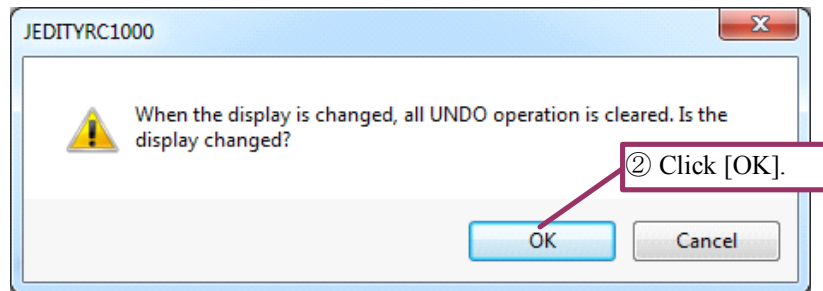


The header part is hidden.

```
TEST.JBI x
0000 NOP
0001 WAIT IN#(1)=OFF
0002 DIN B000 IN#(1)
0003 DOUT OT#(1) ON
0004 CALL JOB:TEST2
0005 TIMER T=1.00
0006 PULSE OT#(1)
0007 END
```



4.8 Checking the job

Checking the syntax of job.


① Click [Check instruction]

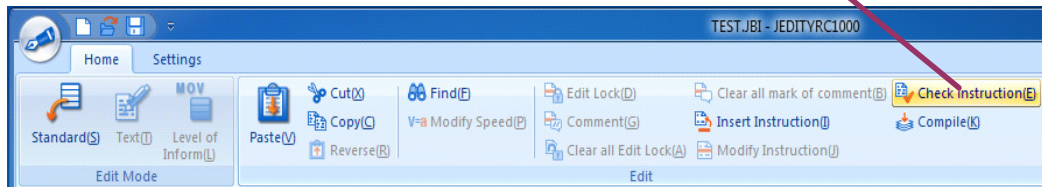


When there are any syntax error, the following log appears.

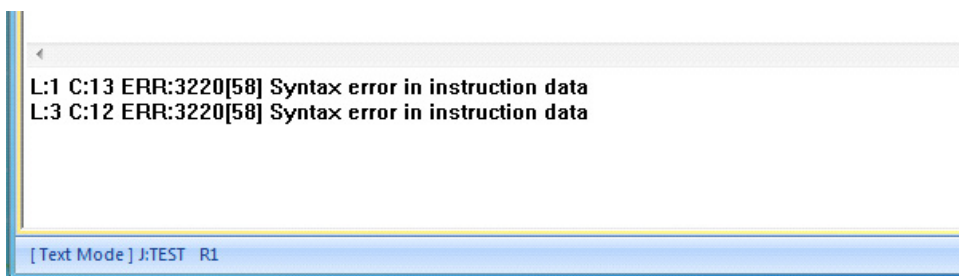


When the log is double-clicked, the cursor moves to the error point.

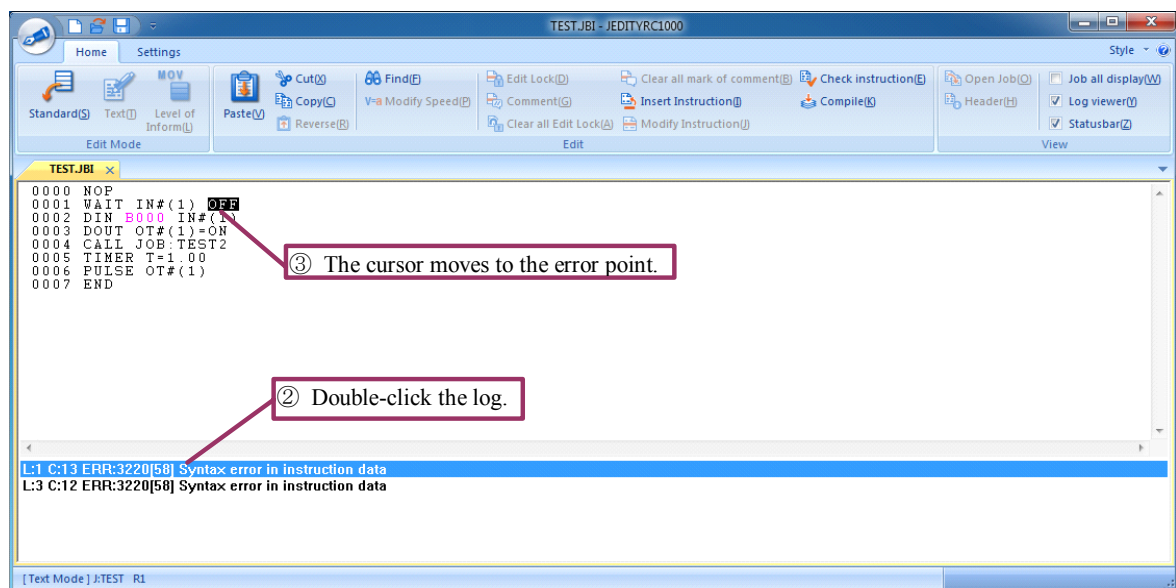

When there is no error, the following log is displayed.

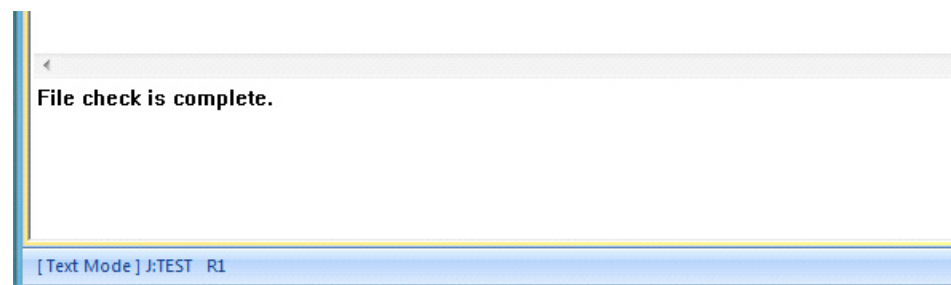


When unchecking the [Log viewer], the log window is hidden.

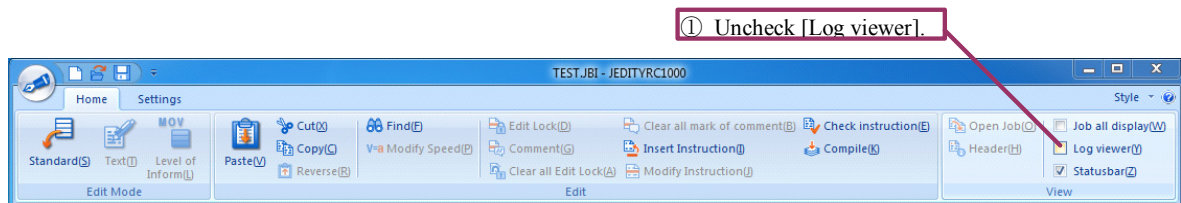


4.9 Saving the Job File


Compile the edit, and save it to a file. Syntax check is performed automatically.

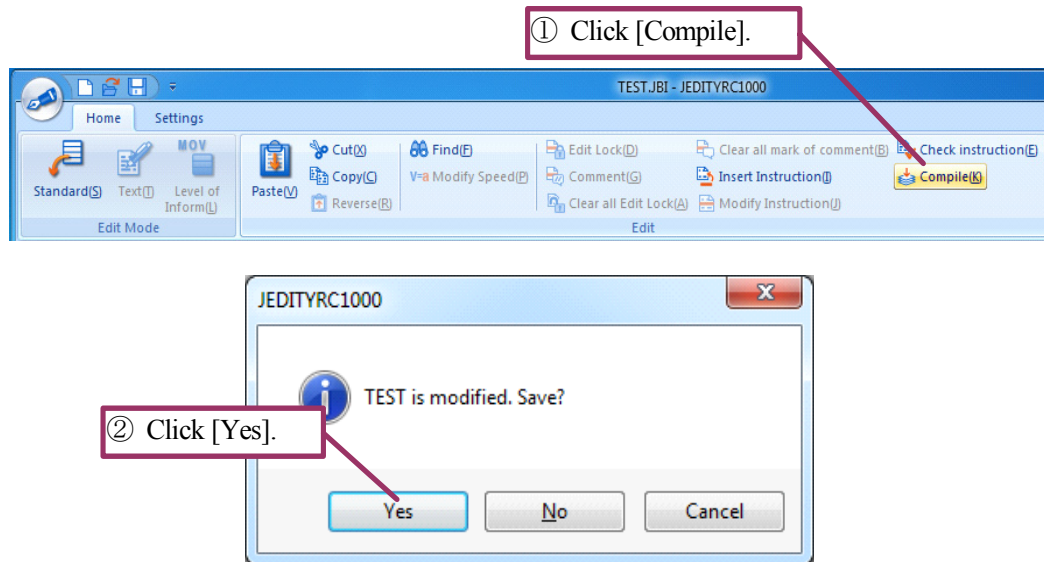

When there are any syntax error, the following log appears.

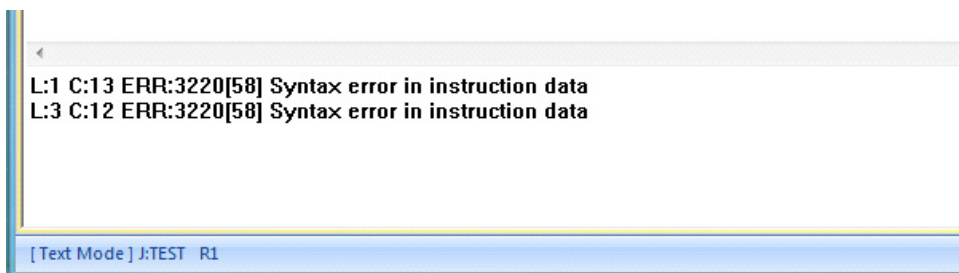


Job file is not saved, and the following dialog appears.

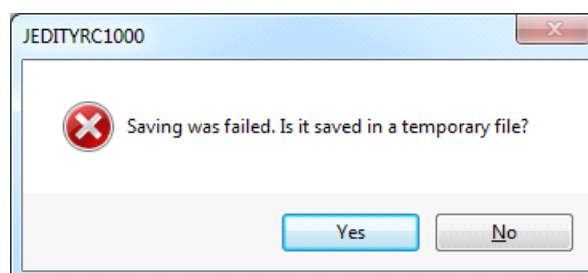


When clicking [Yes], the file is saved as temporary file. When click [No], a temporary file is not saved.

4.10 Searching

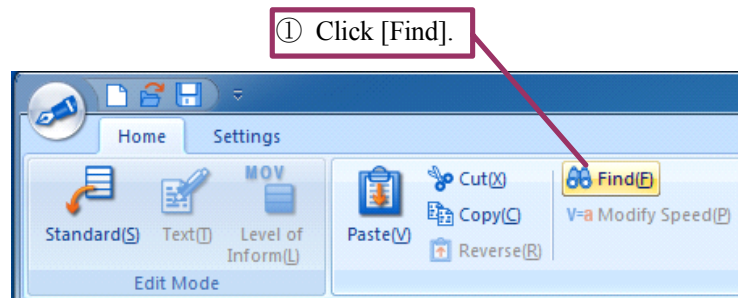

The [Find] dialog box appears.

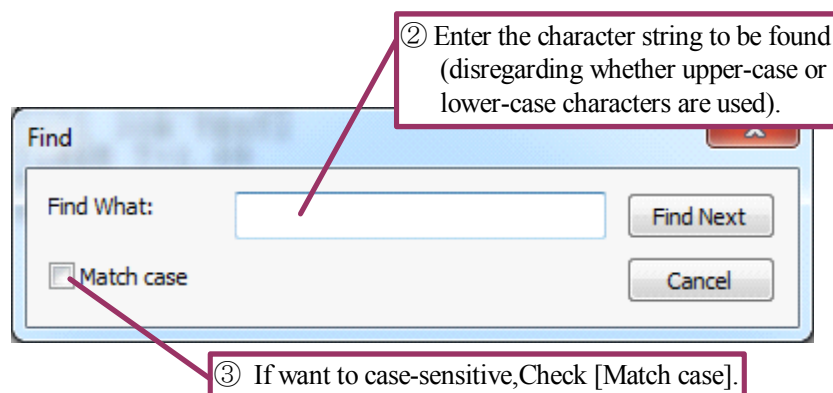


The search for the character string starts.




The search starts from the cursor's position and down the list.

4.11 Checking Alias

Check the number of I/O or variable described by the alias.

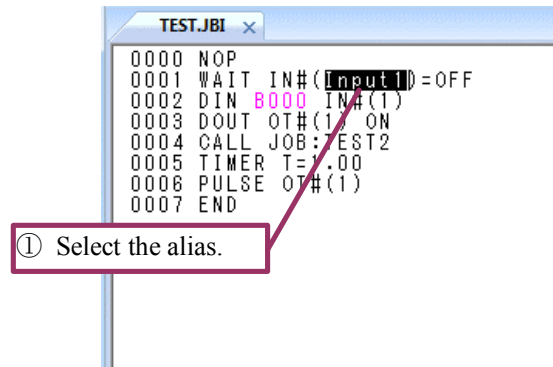

Press the [F12] key. The following dialog appears.

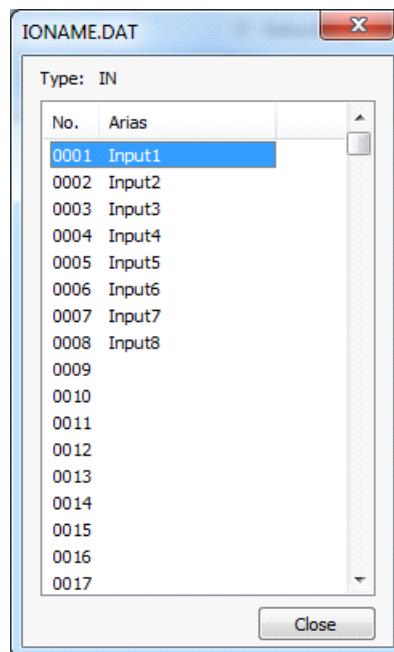


Please caution if edit the alias.

5 EDITING OTHER ITEMS


5.1 Defining Control Groups

When there is more than one control group, the combination can be defined. The control group to be selected for new job creation, etc. does not appear on the window when creating a job unless it is defined here.


5.1.1 Adding a Combination

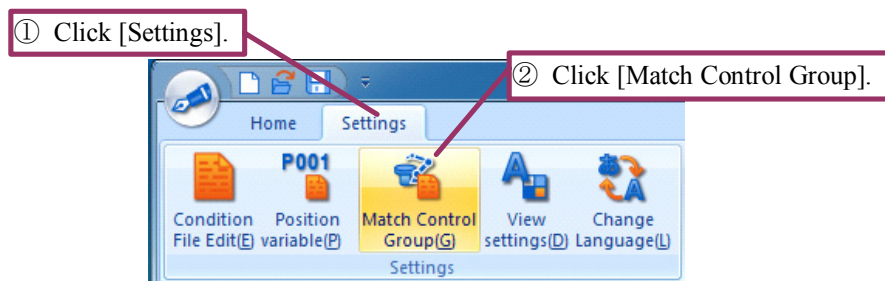


The [Regist Match of Group] dialog box appears.

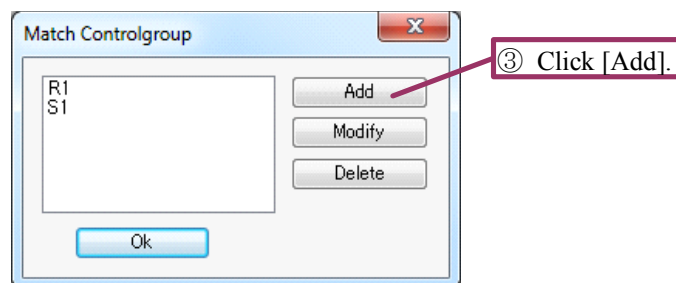

The [Select Group] dialog box appears.

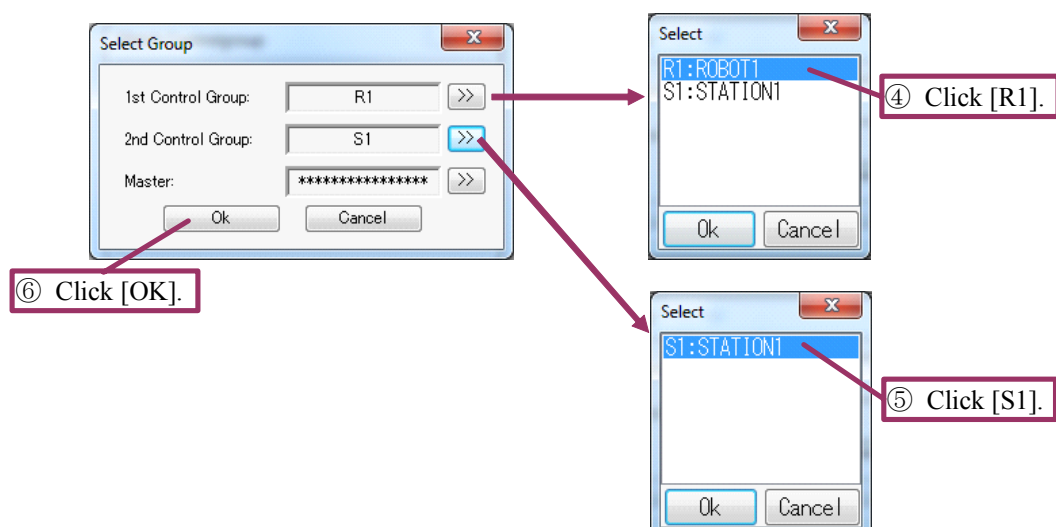


"R1 + S1" has been added to the Regist Match of Group list.

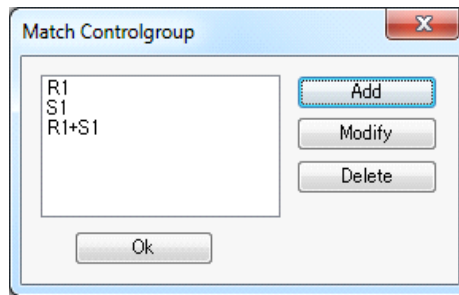

5.1.2 Changing a Combination


To call up the "Regist Match of Group" dialog box, perform the same procedure as described in steps "1" and "2" of " 5.1.1 Adding a Combination "

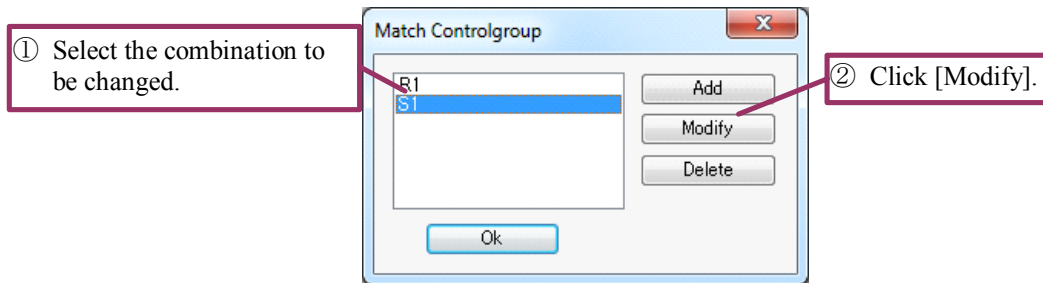

The [Select Group] dialog box appears.


To define the group combination, perform the same procedure as described in steps "1" and "2" of " 5.1.1 Adding a Combination ".

"S1" in the [Regist Match of Group] dialog box has been changed to "R1 + S1".

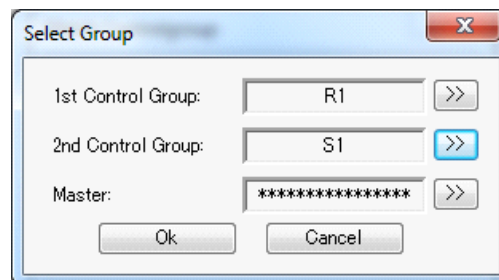


5.1.3 Deleting a Combination


To call up the "Regist Match of Group" dialog box, perform the same procedure as described in steps "1" and "2" of " 5.1.1 Adding a Combination ".

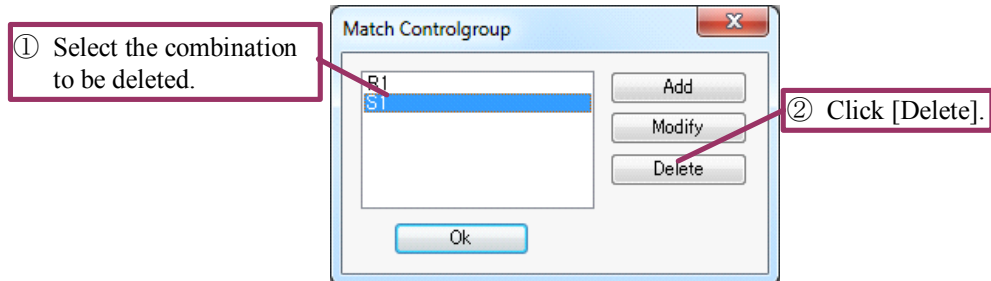



"S1" has been deleted from the [Regist Match of Group] dialog box.

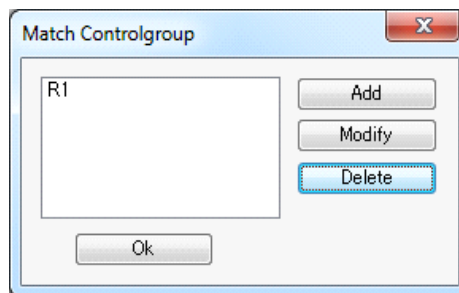

5.2 Defining Position Variables

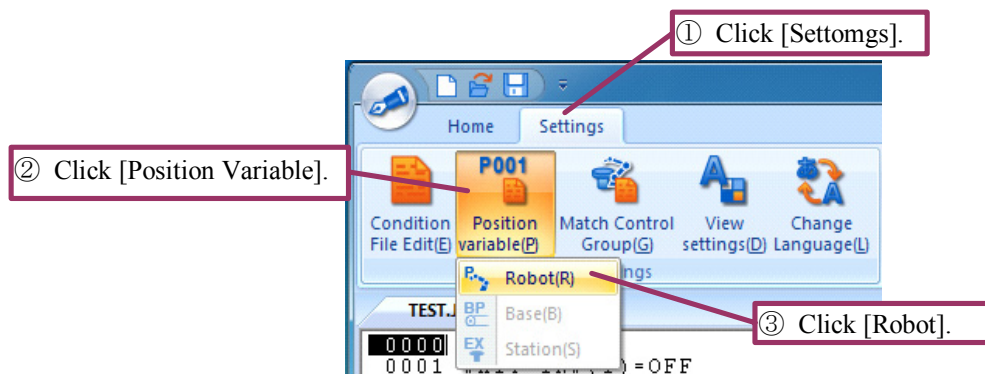

The [Position Variable] dialog box appears.

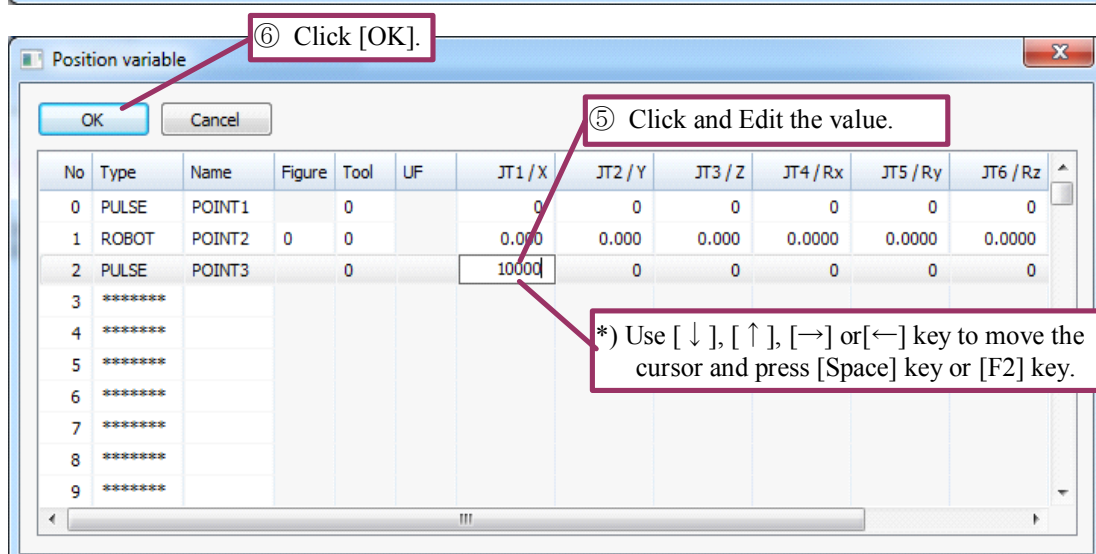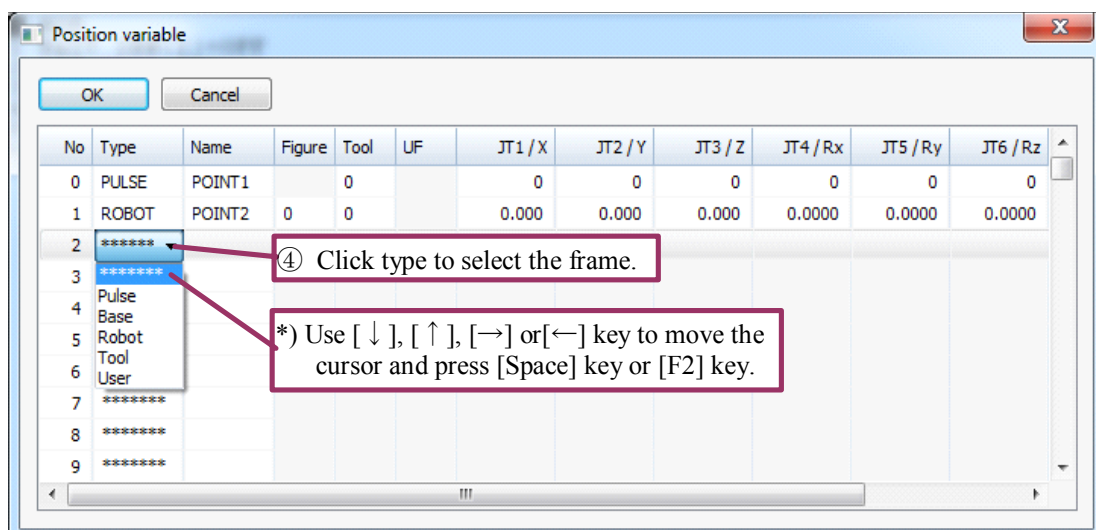


NOTE To create a job using position variables, the position variables must be defined in this window before saving the data.

5.3 Increasing the Instruction Types to be Used

5.3.1 Changing the Language Level

Since the "language level" is set to "Reduction" by default, the instruction types displayed are less than the total number available. Setting the language level to "Extension" increases the number of instruction types displayed.

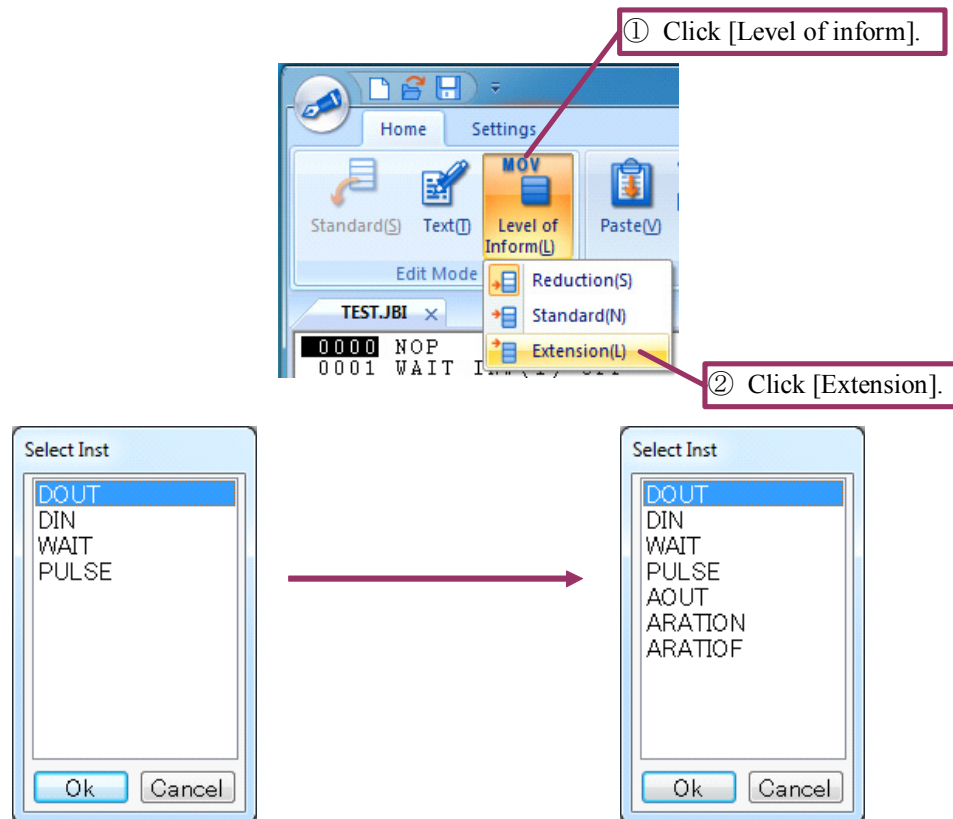


The number of instructions increases.

5.3.2 Parameter Option


For example, the SRCH tag is one of several instructions that can be added to MOVL. Because the instruction is a parameter option, it requires the parameter file, where the flag permitting the use of the SRCH tag is valid, from the programming pendant.

5.4 Changing a Condition File


5.4.1 Changing an I/O Name File (IONAME.DAT)

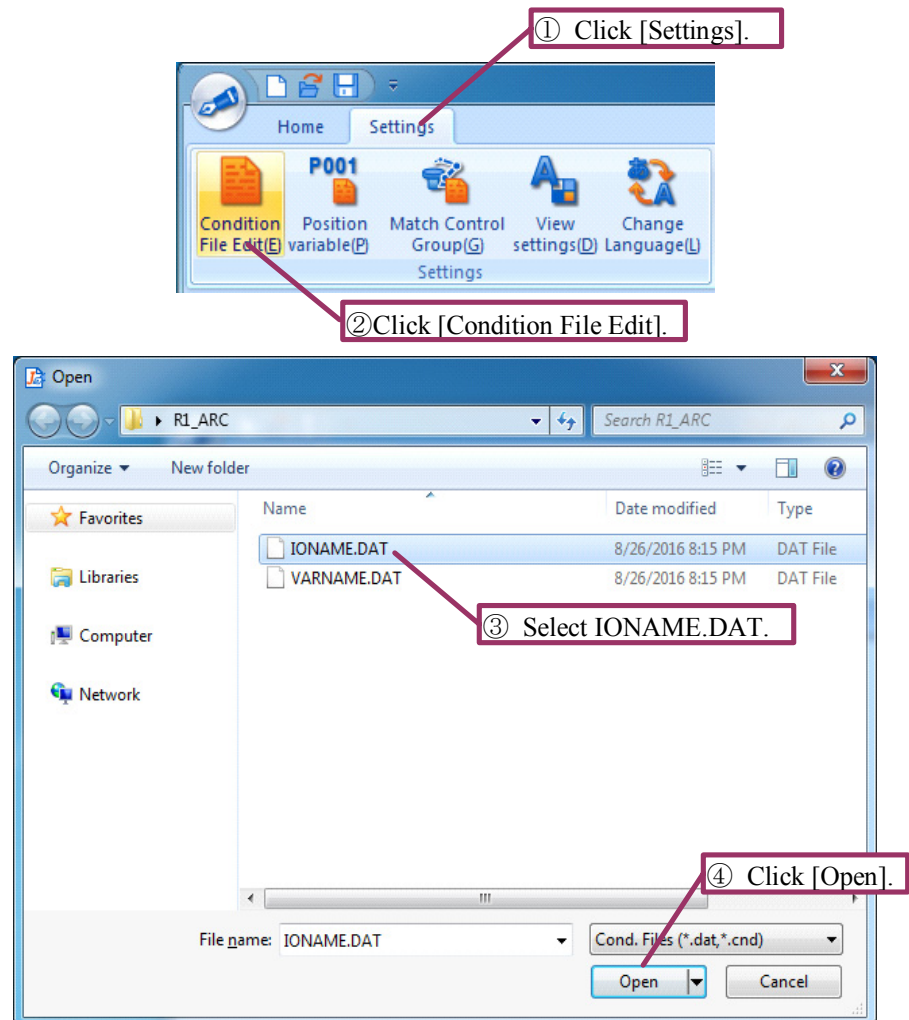

The [Condition file edit] dialog box appears.

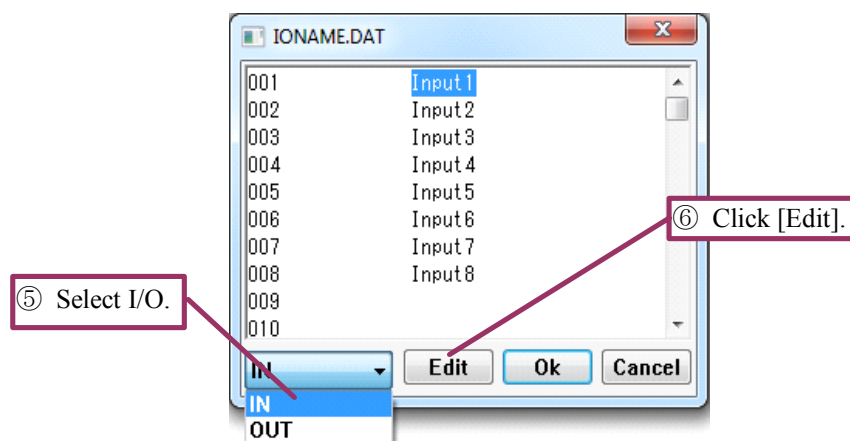


The [Character edit] dialog box appears.

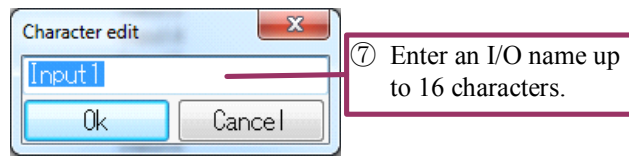


If there is no I/O name file, a file is automatically created after entering the I/O name in step "5". This I/O name file can also be used with the programming pendant in the same way as a job edited by the Job EditorYRC1000 can be used with the programming pendant.


5.4.2 Changing a Variable Name File (VARNAME.DAT)

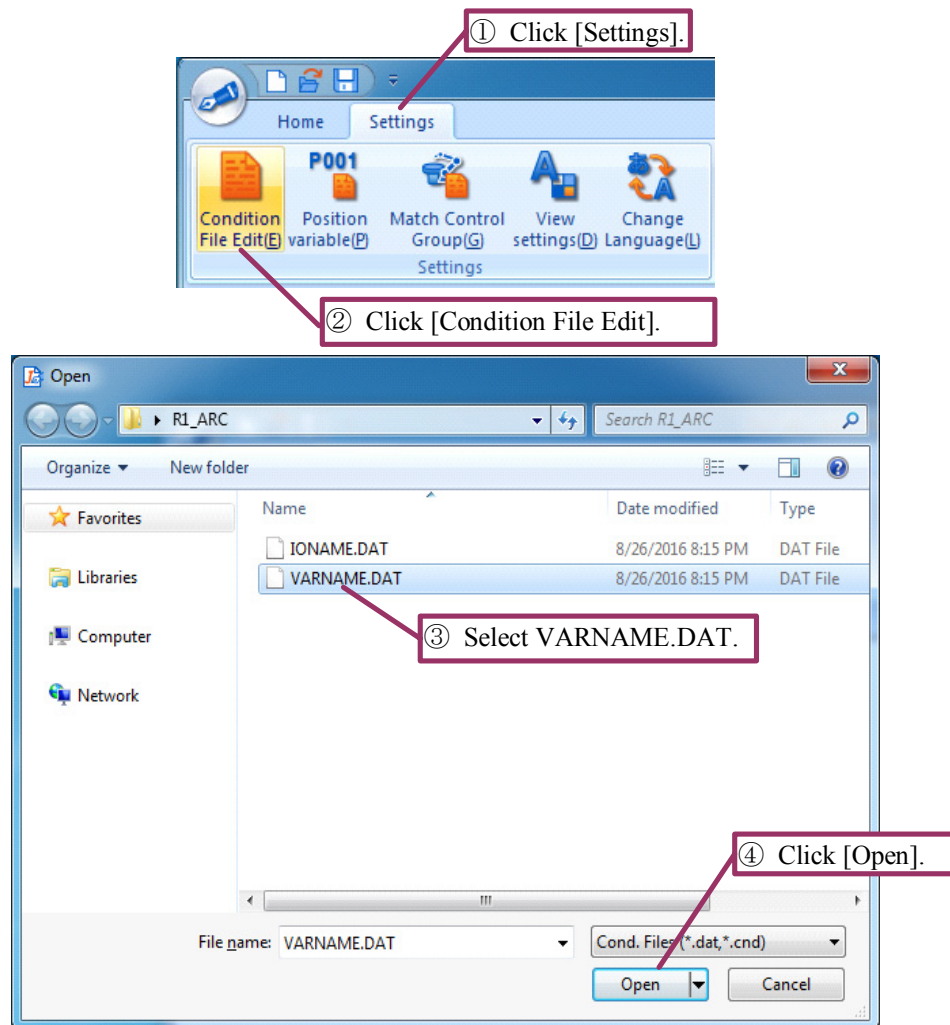

The [Condition file edit] dialog box appears.

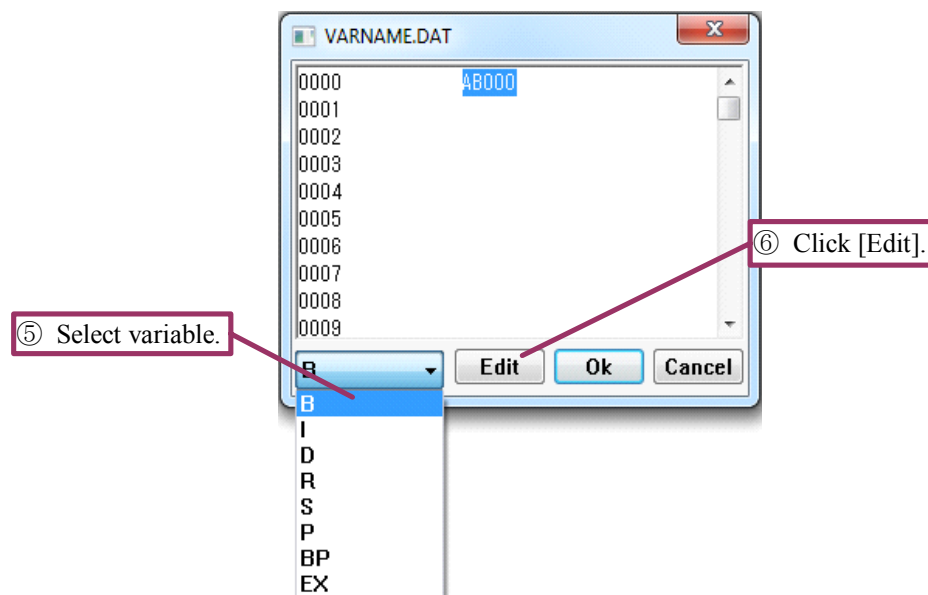


The [Character edit] dialog box appears.

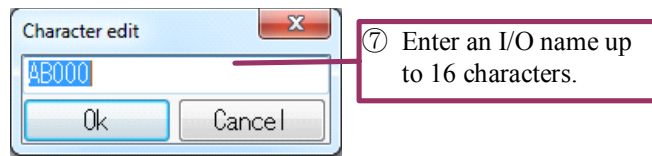


If there is no variable name file, a file is automatically created after entering the variable name in step “5” . This variable name file can also be used with the programming pendant in the same way as a job edited by the Job EditorYRC1000 can be used with the programming pendant.

5.5 Changing the Font


The font can be changed in the "Main Window," "Line-edit Box," or "Detail Edit Window."

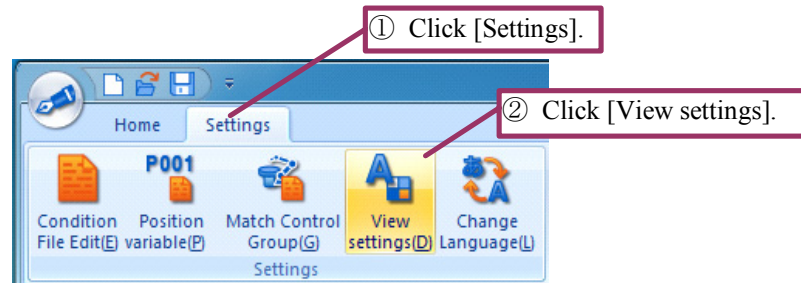

The [Font] dialog box appears.

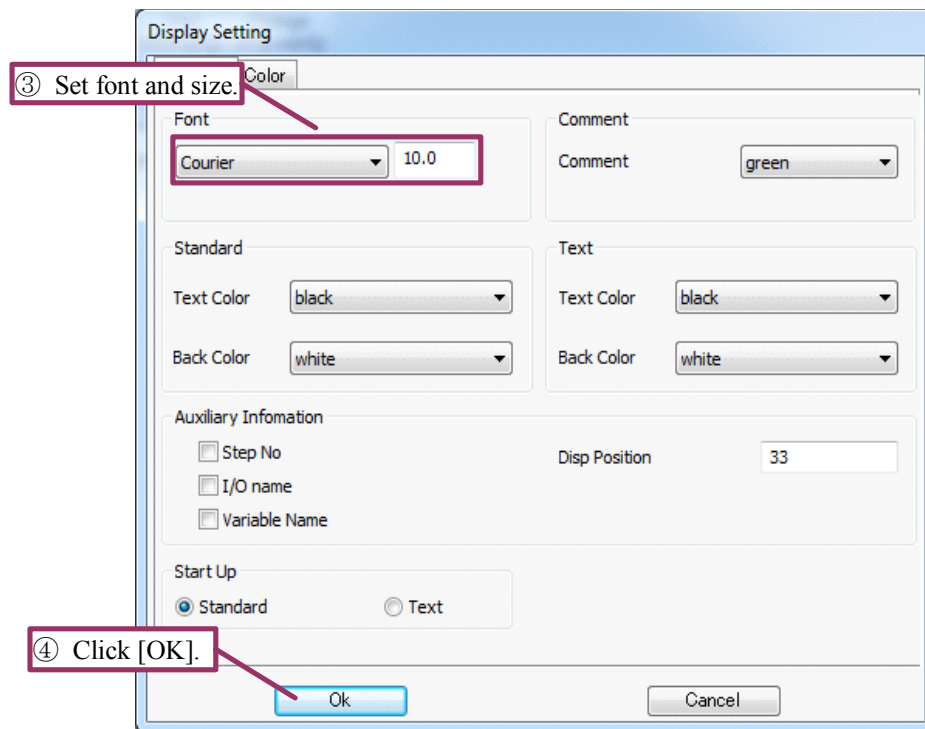


The following dialog appears. Please restart JobEditorYRC1000.

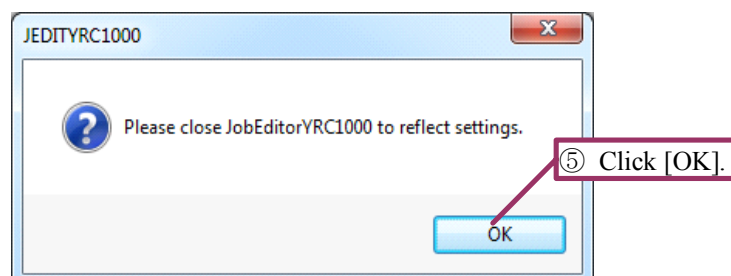


5.6 Changing the Color

5.6.1 Changing the Character Color


The character color can be changed in the standard mode or text mode.

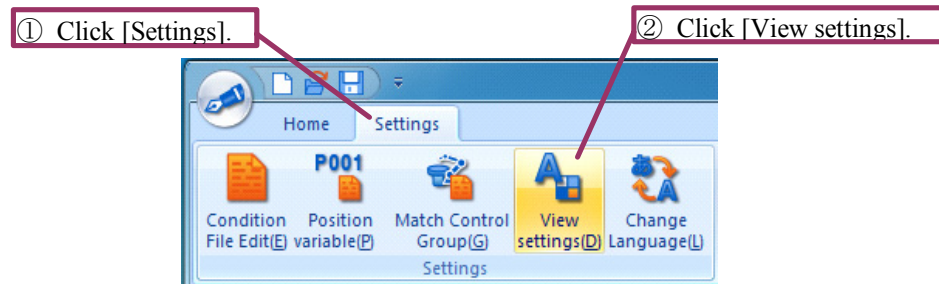

The [Display Setting] dialog box appears.

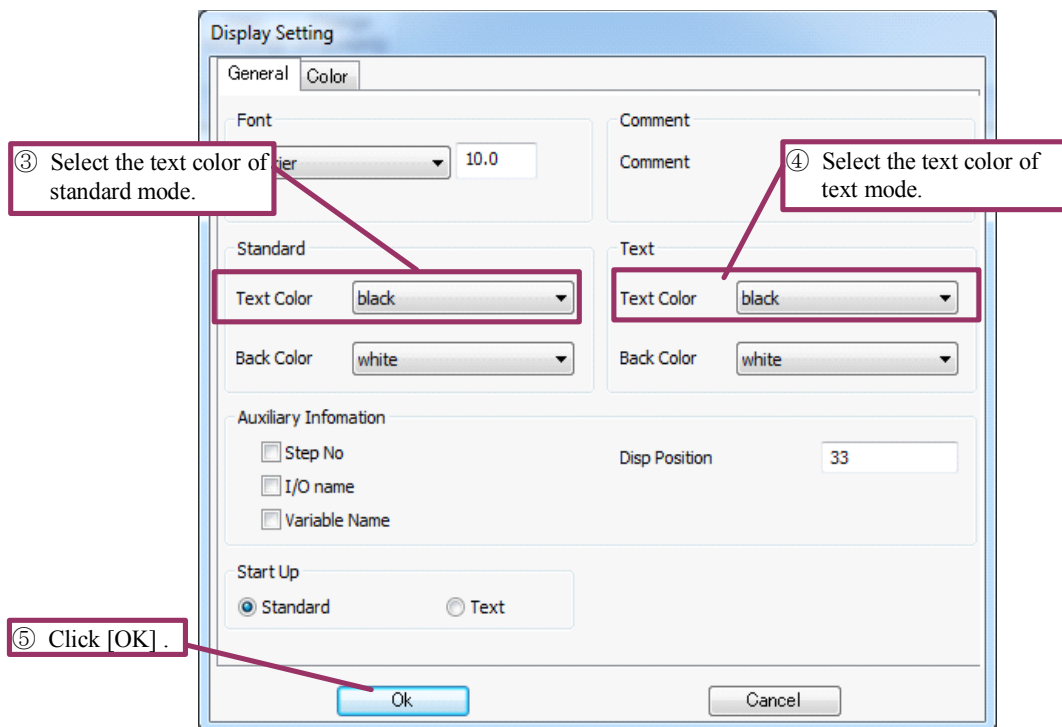


The following dialog appears. Please restart JobEditorYRC1000.

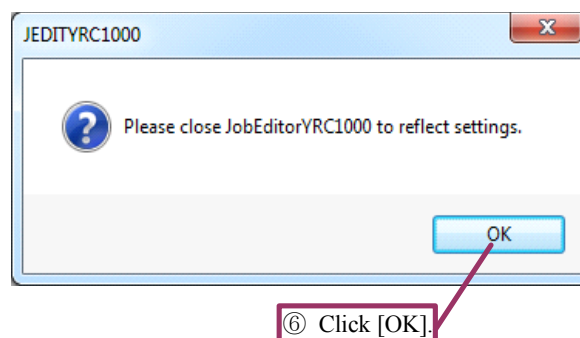


5.6.2 Changing the Background Color


The character color can be changed in the standard mode or text mode.

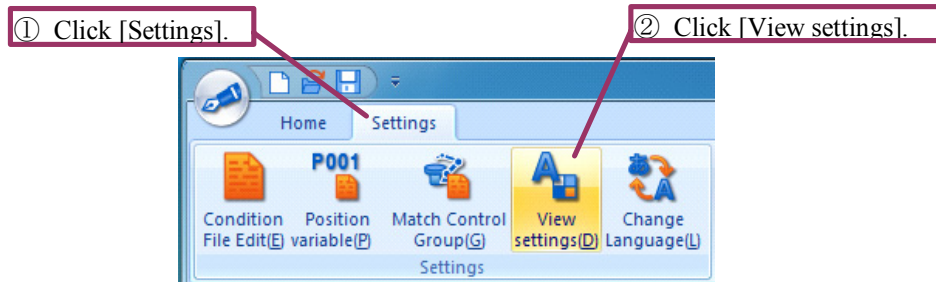


The [Display Setting] dialog box appears.

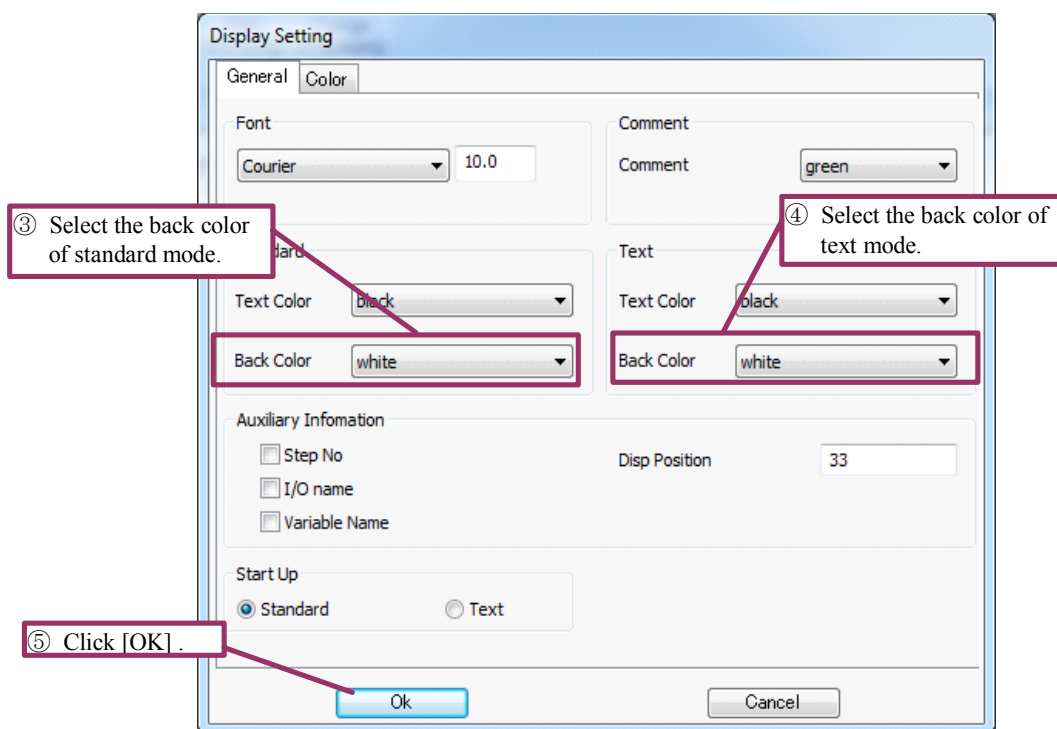


The following dialog appears. Please restart JobEditorYRC1000.

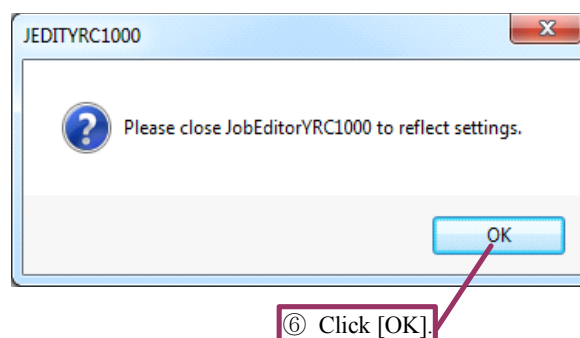


5.6.3 Changing the Comment Color

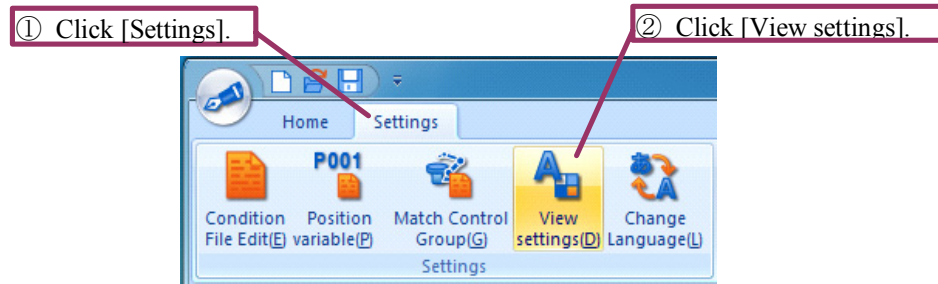

The [Display Setting] dialog box appears.

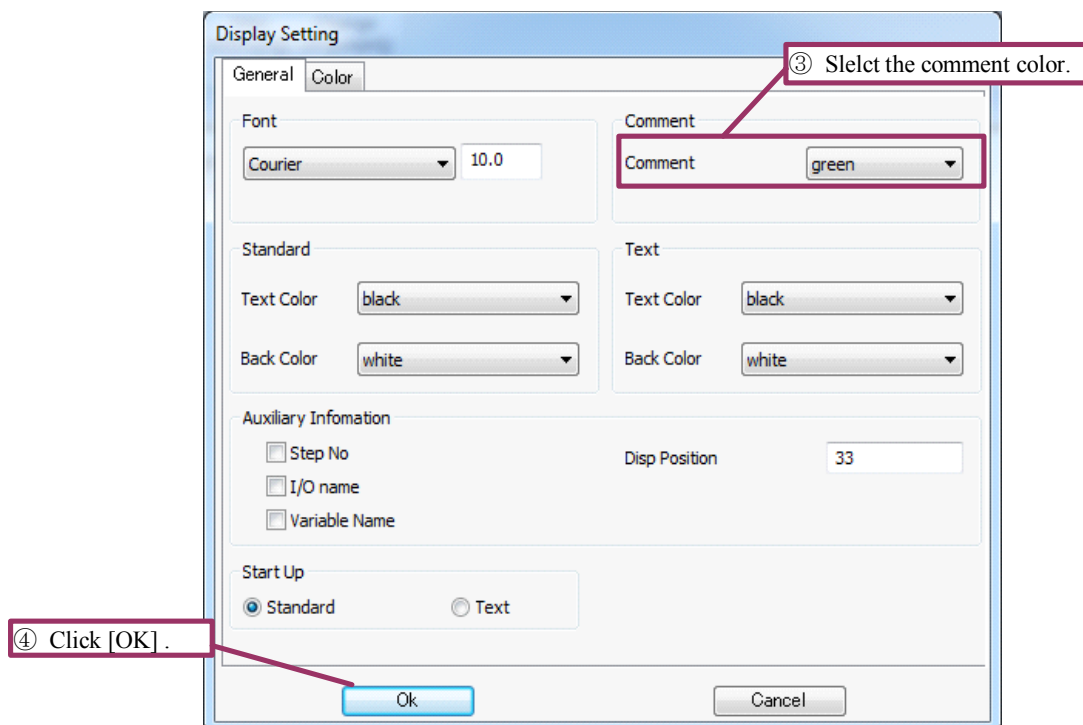


The following dialog appears. Please restart JobEditorYRC1000.

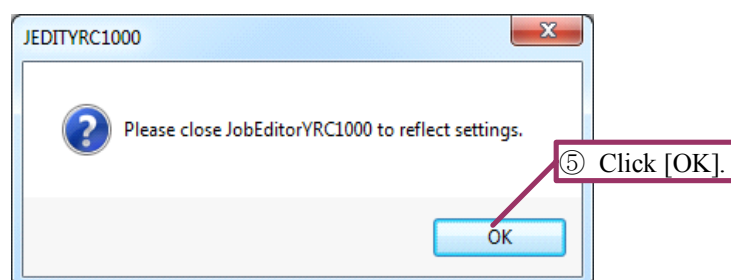


5.6.4 Changing the Color of Each Instruction or Tab


The color of each instruction or tab can be changed.

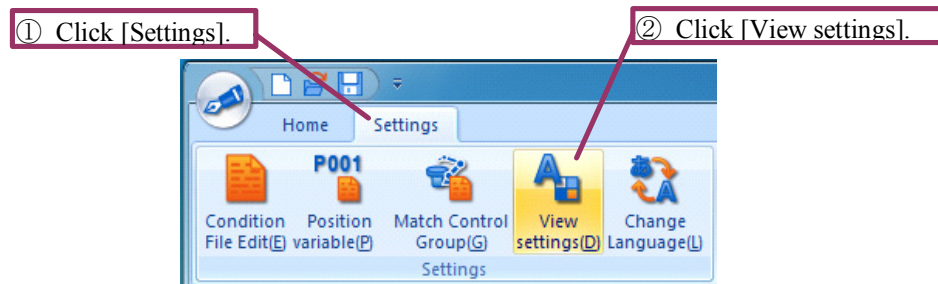



The [Display Setting] dialog box appears.

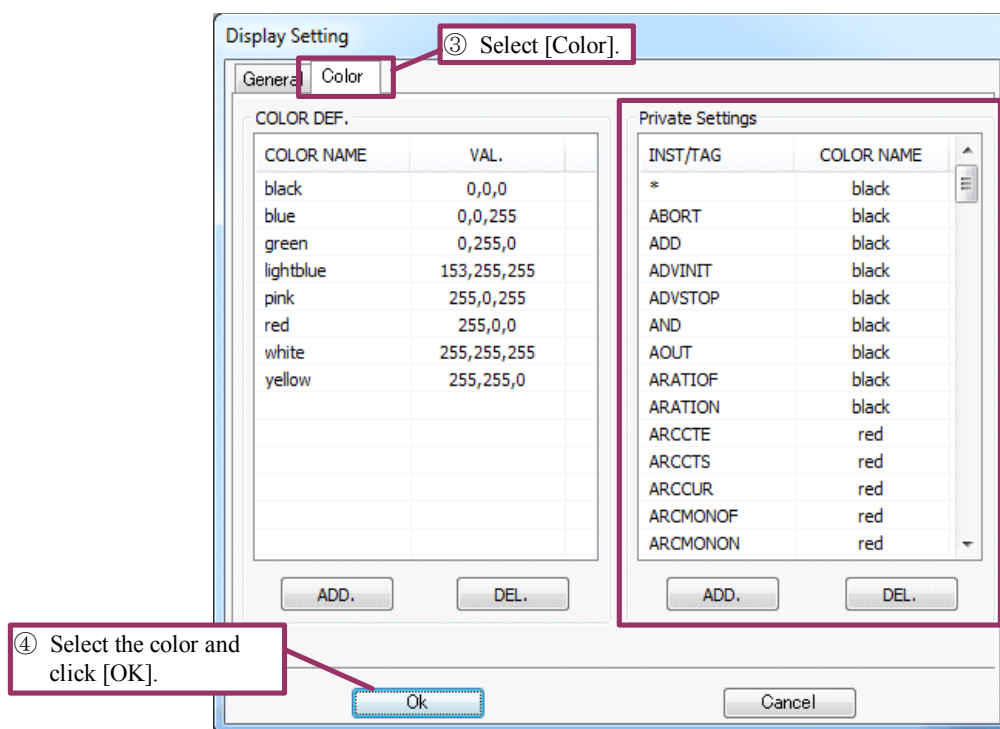



The following dialog appears. Please restart JobEditorYRC1000.

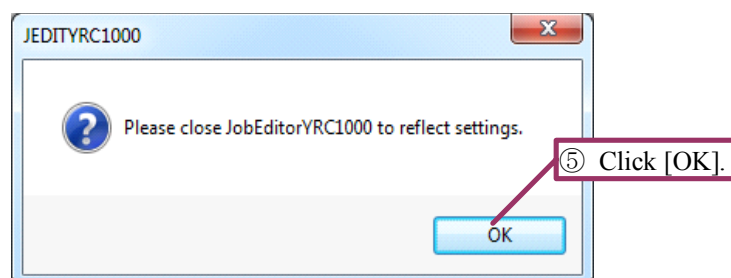


■ Adding Private Setting

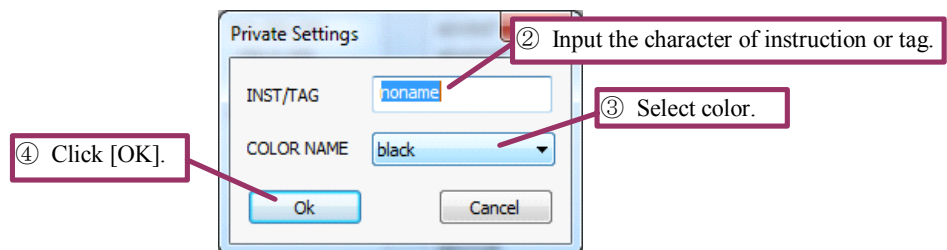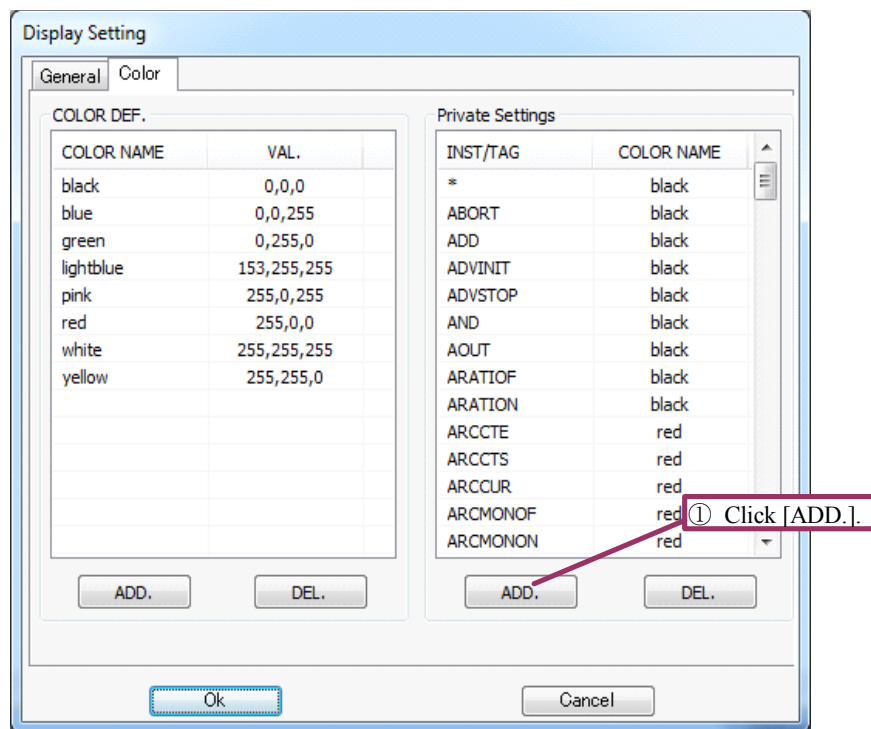

■ Changing Private Settings

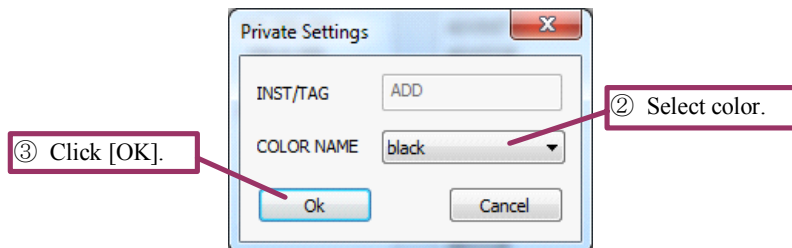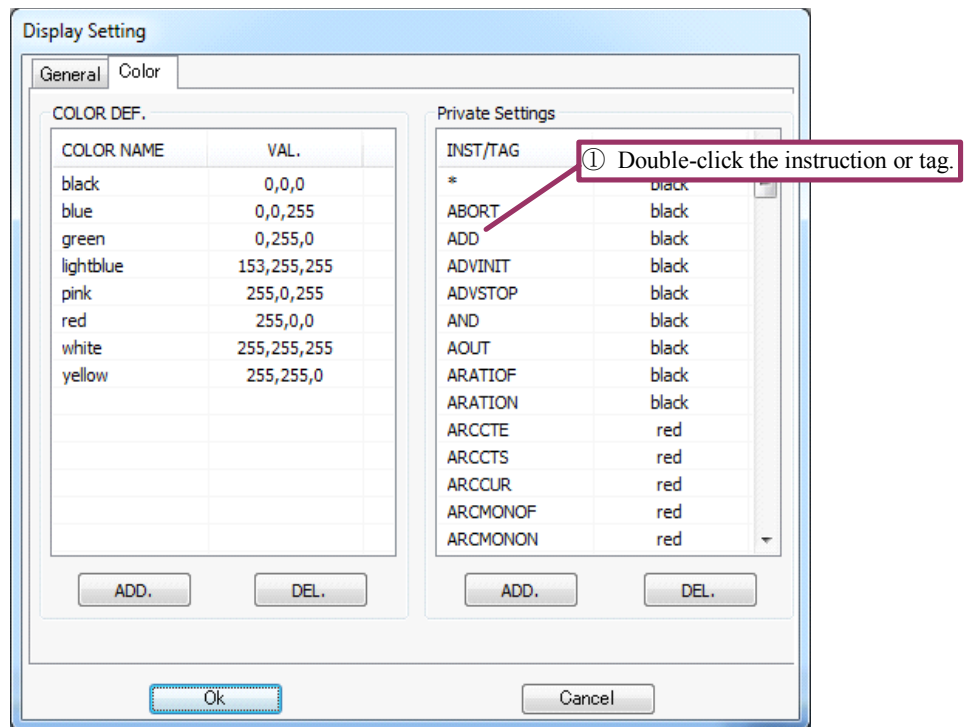


■ Deleting Private Settings

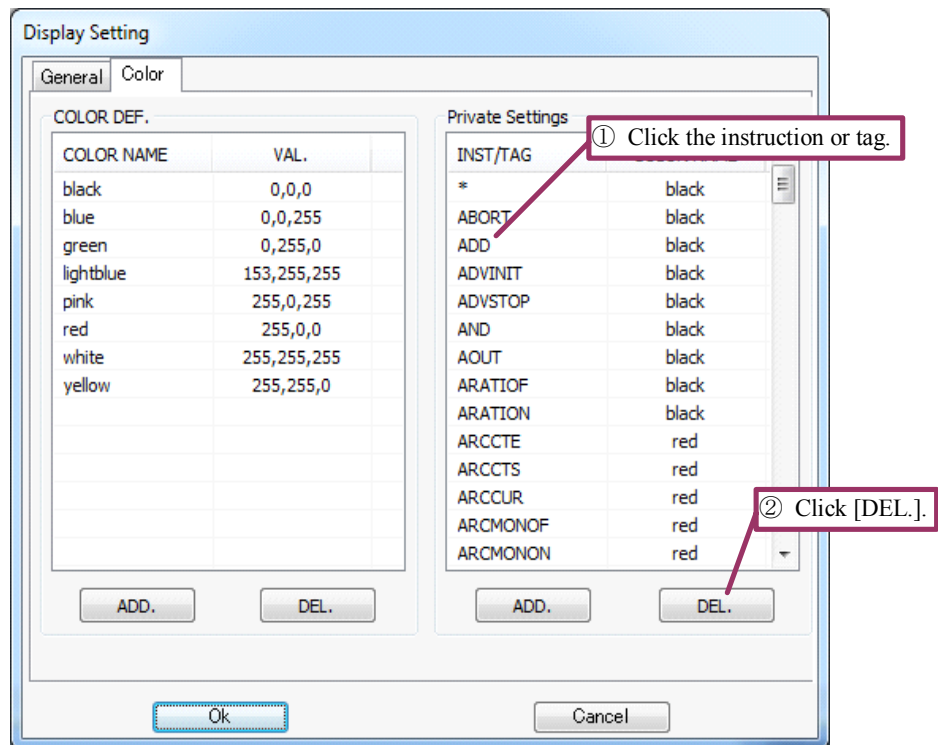


5.6.5 Changing Color Definition


The color definition can be changed.

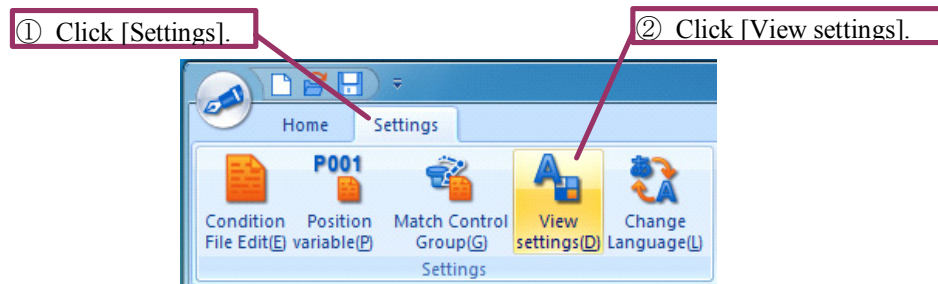



The [Display Setting] dialog box appears.

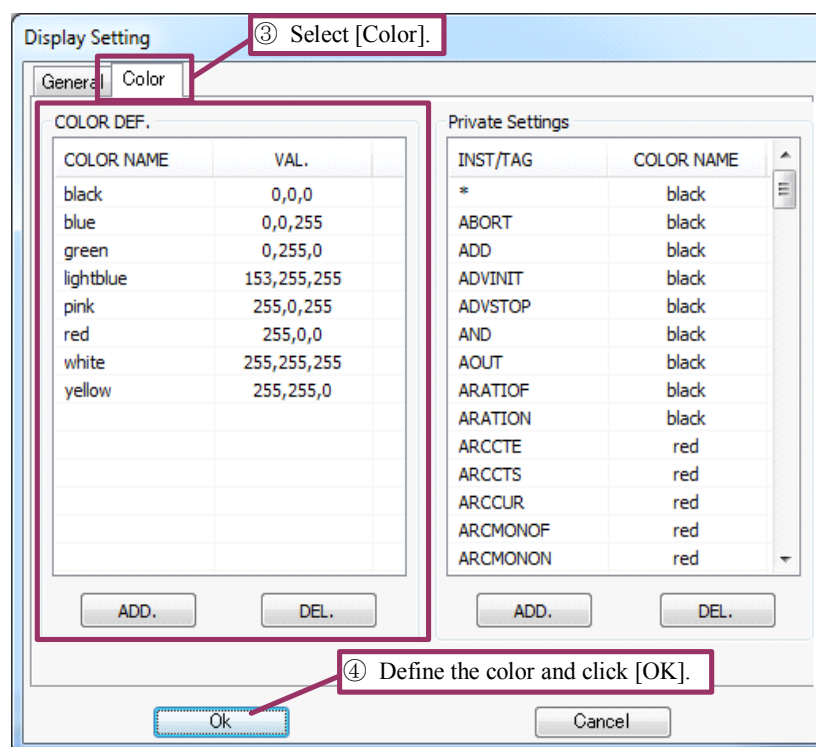


The following dialog appears. Please restart JobEditorYRC1000.

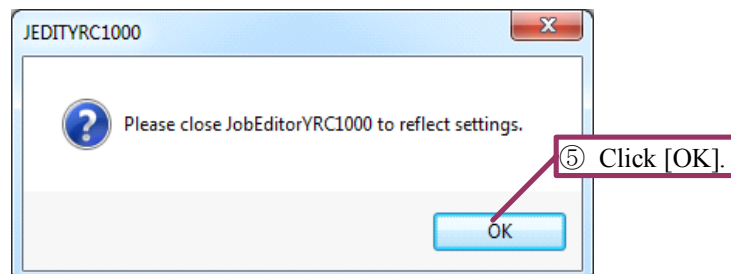


■ Adding Color Definition

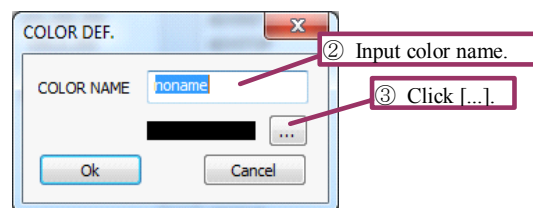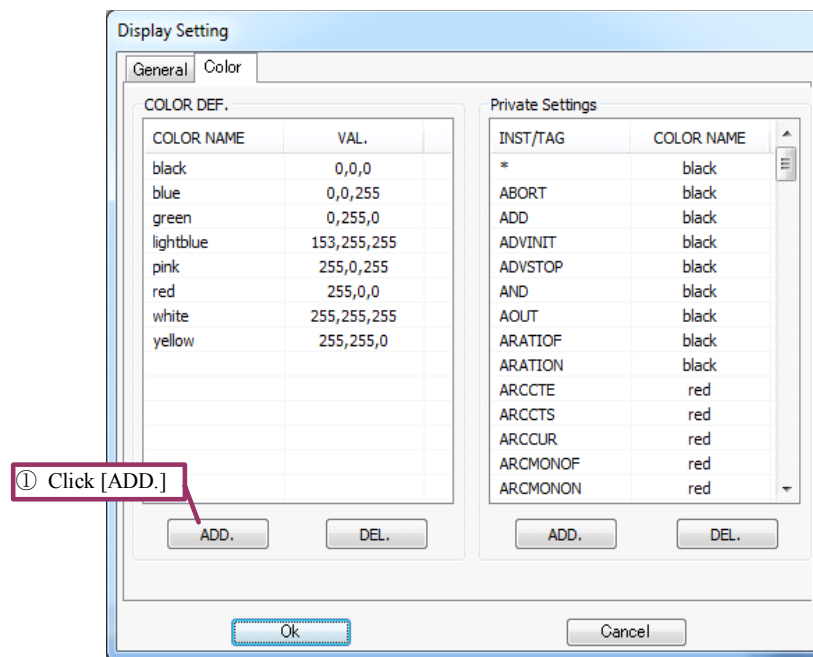



The [Color] dialog box appears.

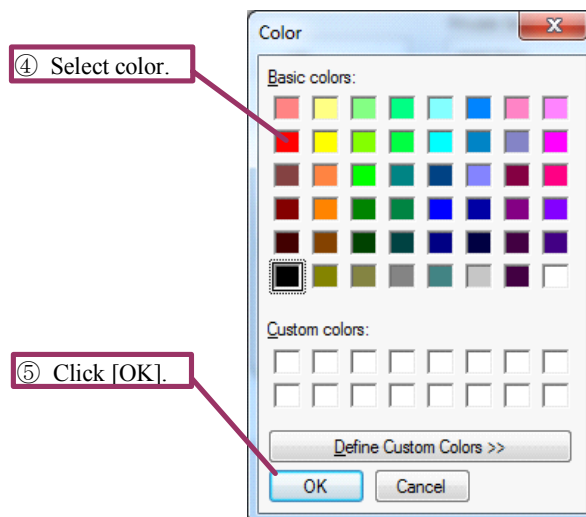


The focus returns to the [COLOR DEF.] dialog.

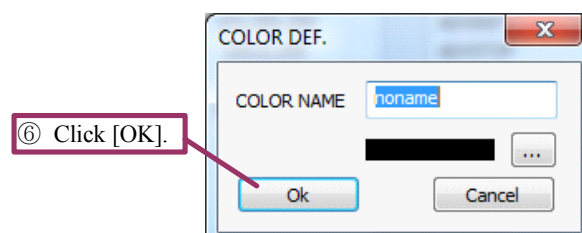


■ Changing Color Definition

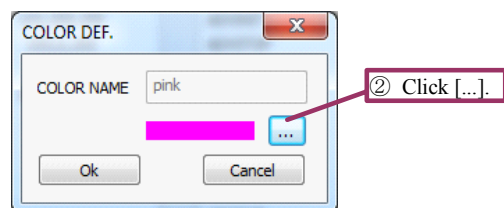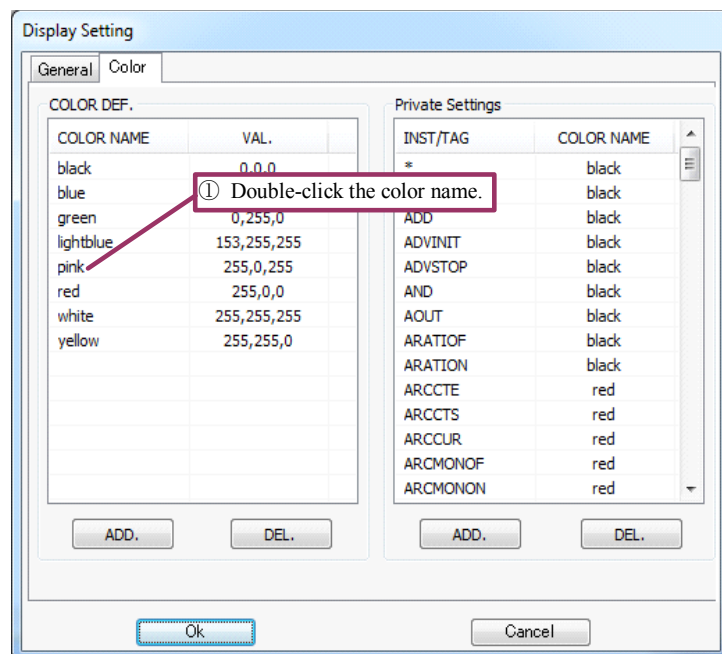


The [Color] dialog box appears.

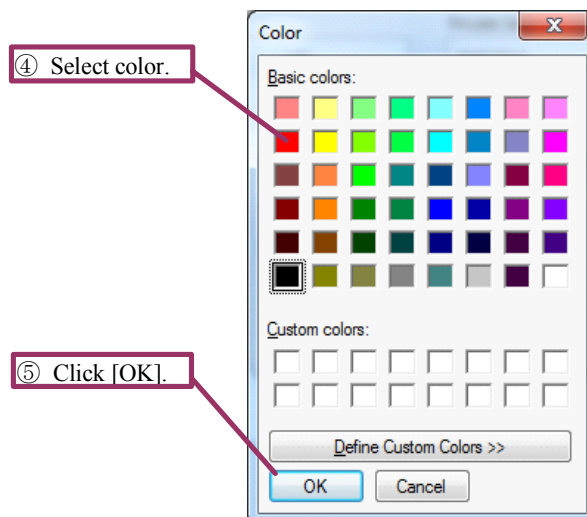


The focus returns to the [COLOR DEF.] dialog.

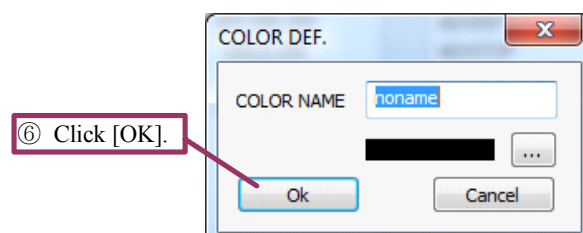


■ Deleting Color Definition

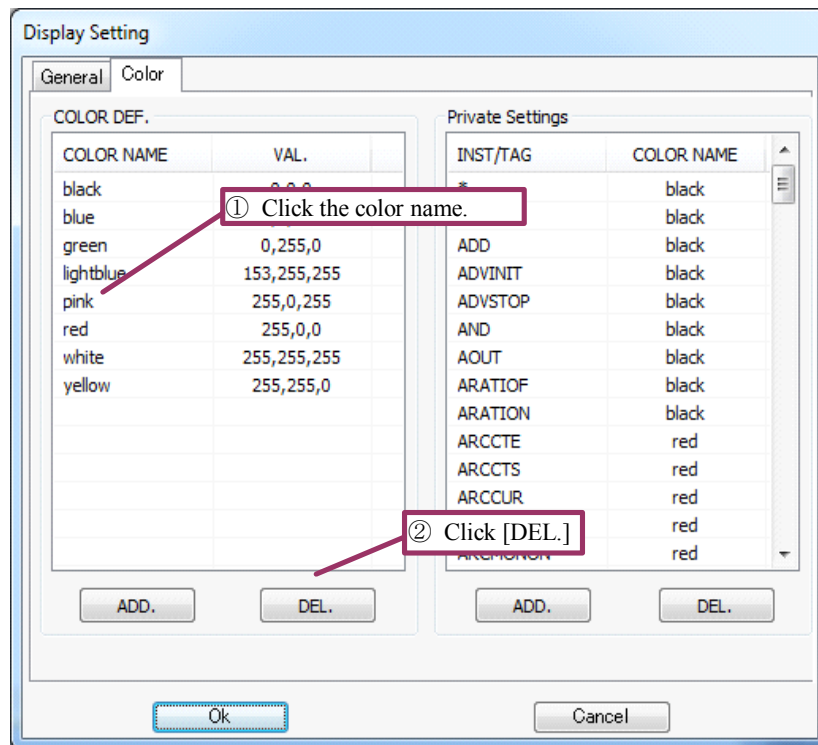


5.7 Changing the Language

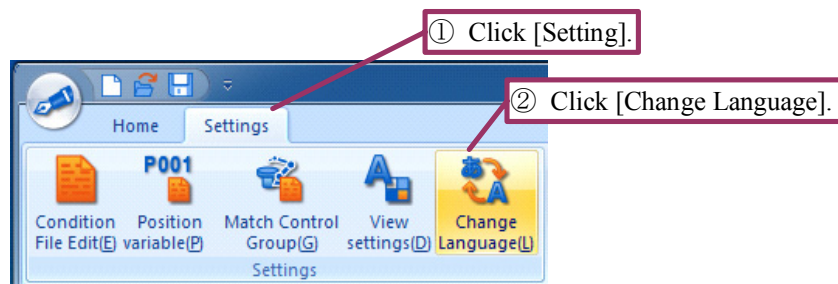


The [Select Language] dialog box appears.

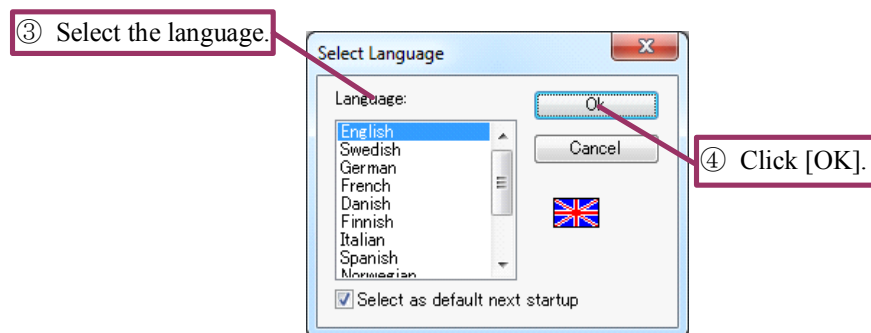

The following dialog appears and JobEditorYRC1000 is restarted.

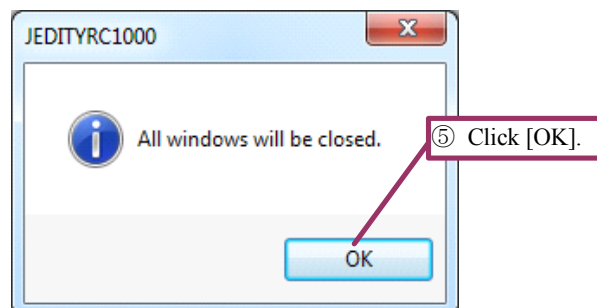

When there are edited files, the following dialog appears.

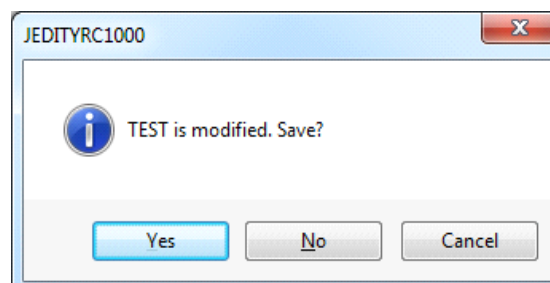


When clicking [Yes], the file is saved and JobEditorYRC1000 is restarted.

When clicking [No], the file is not saved and JobEditorYRC1000 is restarted.

When clicking [Cancel], changing language is canceled.


When there are edited files in text mode, syntax of the file is checked and the file is saved.

When the file has something wrong, the file is not saved and the following dialog appears.

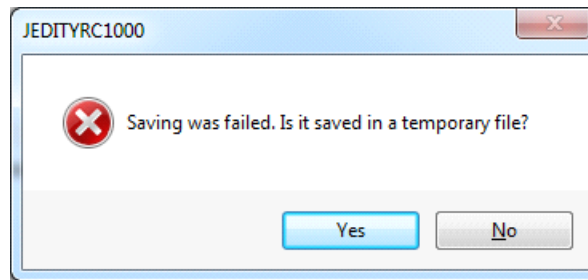

When clicking [Yes], the file is saved as temporary file and shift to Standard mode.


When clicking [No], the following dialog appears.

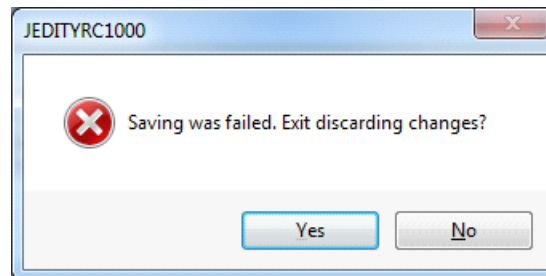


When clicking [Yes], the file is not saved and JobEditorYRC1000 is restarted.

When clicking [No], changing language is canceled.


5.8 Batch-Change the Job Folder Name

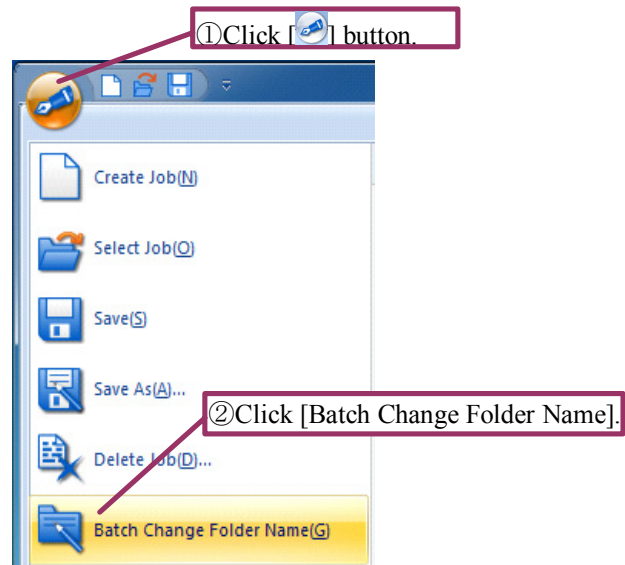


To batch-change the job folder name, all opened files are closed.

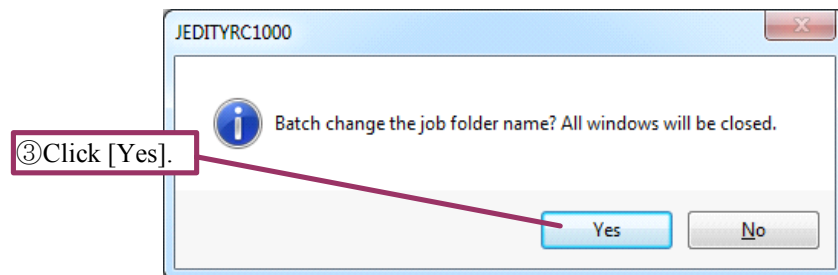

The [Batch Change Folder Name] dialog box appears.

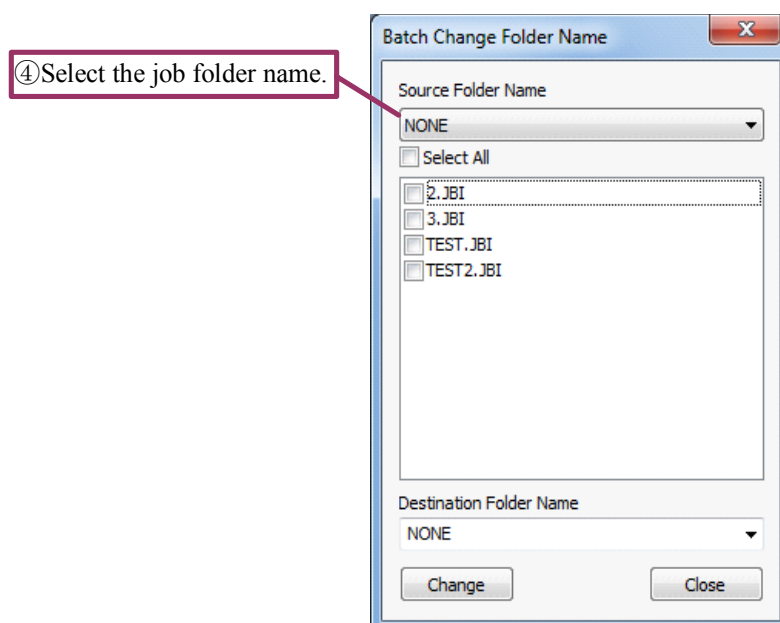


The jobs which are using the selected job folder name is displayed in a list.

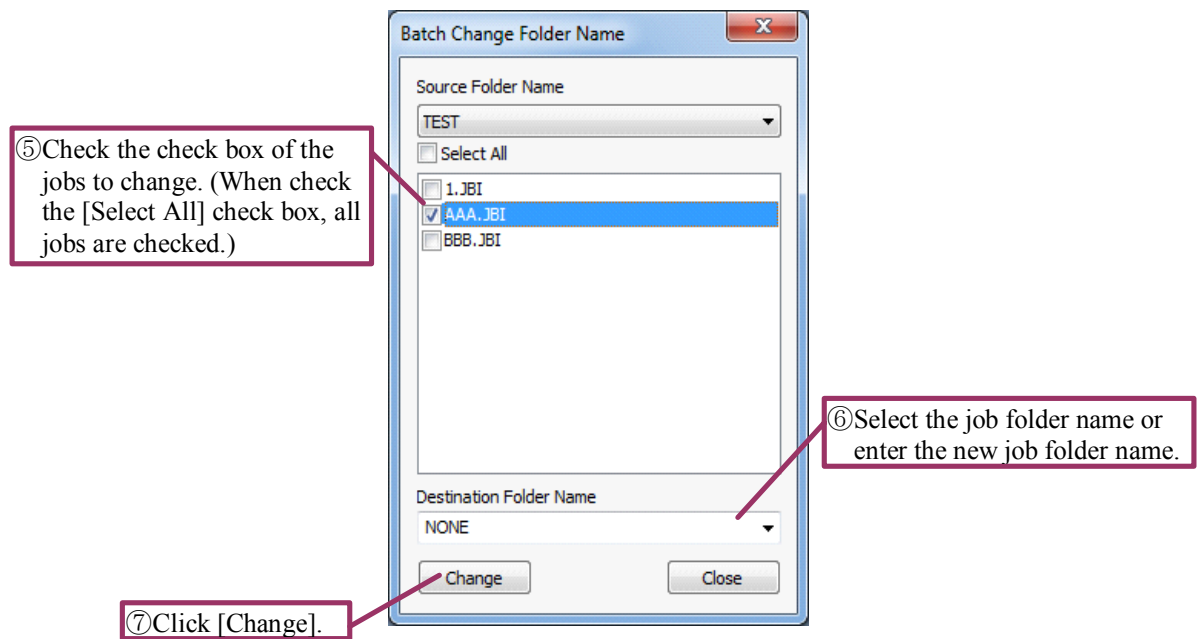


Enter maximum of 32 characters for the job folder name.

5.9 Changing the Default Mode


Change the mode when opening a job file . The default is the standard mode .

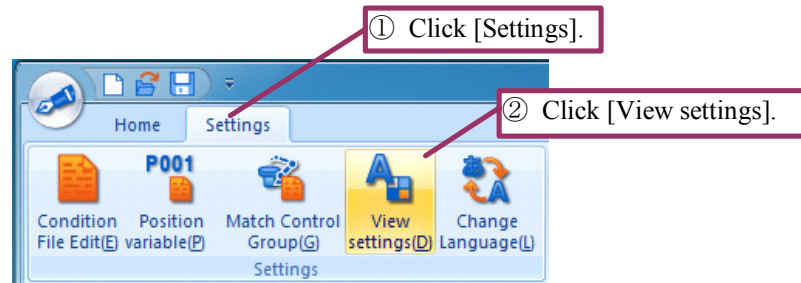

The [Display Setting] dialog box appears.

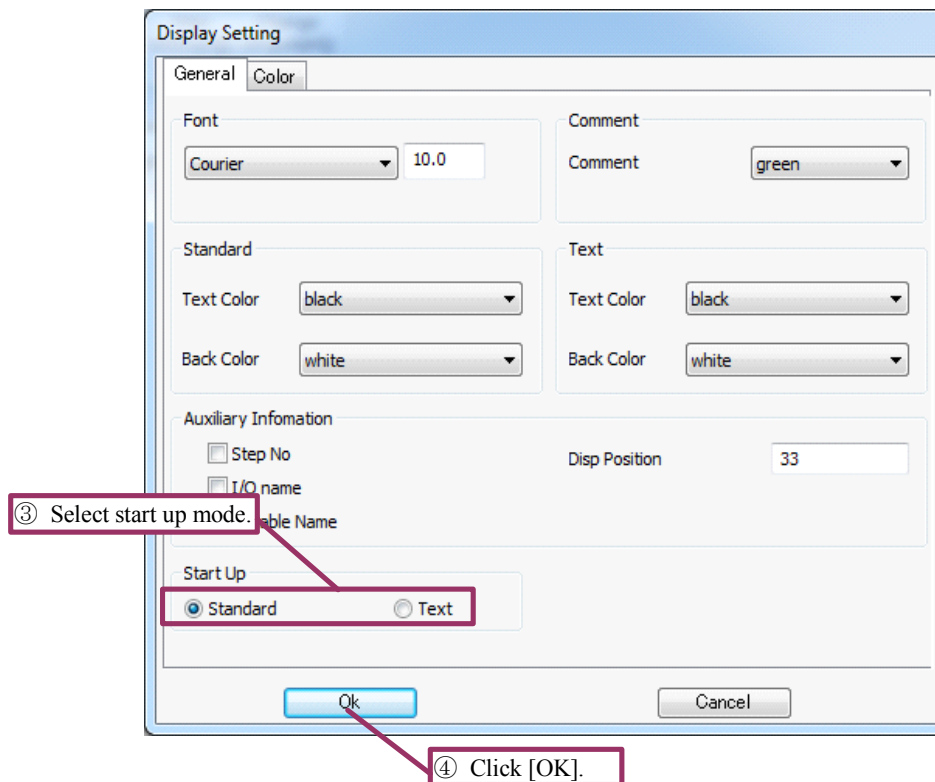

The following dialog appears. Please restart JobEditorYRC1000.

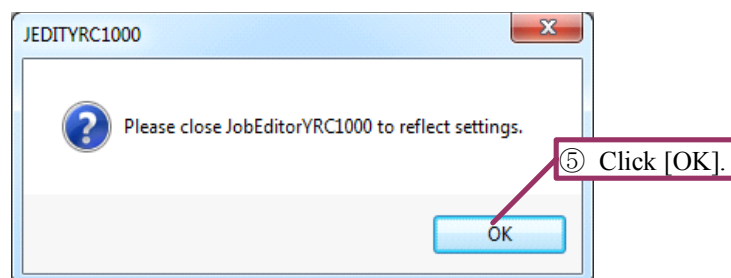

6 APPENDIX

6.1 Frequently-asked questions

6.1.1 When the driver has been installed with USB type key connected to a personal computer

1. Under the state that the USB type key is attached to the personal computer, delete the item registered as "USB Token" in Device Manager.
2. Uninstall the driver (Sentinel System Driver) with [Add/Remove Programs].
3. Install the driver with key detached from personal computer. With the procedure above, the driver can be performed normally.
(For installation, refer to "1.2 Hardware Lock Key" in the following section.)

6.1.2 When the previous version driver has been installed after installing the driver

In this case, a problem may arise rarely. Therefore, uninstall the driver ?Sentinel System Driver?by [Add / Remove Programs].

(For installation, refer to "1.2 Hardware Lock Key" in the following section.)

Job EditorYRC1000 OPERATOR'S MANUAL

**For inquiries or after-sales service on this product, contact
your local YASKAWA representative as shown below.**

YASKAWA ELECTRIC CORPORATION

2-1 Kurosakishiroishi, Yahatanishi-ku, Kitakyushu, 806-0004, Japan
Phone: +81-93-645-7703 Fax: +81-93-645-7802
www.yaskawa.co.jp

YASKAWA AMERICA, INC. (MOTOMAN ROBOTICS DIVISION)

100 Automation Way, Miamisburg, OH 45342, U.S.A.
Phone: +1-937-847-6200 Fax: +1-937-847-6277
www.motoman.com

YASKAWA EUROPE GmbH (ROBOTICS DIVISION)

Yaskawastrasse 1, 85391, Allershausen, Germany
Phone: +49-8166-90-100 Fax: +49-8166-90-103
www.yaskawa.eu.com

YASKAWA NORDIC AB

Verkstadsgratan 2, Box 504, SE-385 25 Torsås, Sweden
Phone: +46-480-417-800 Fax: +46-486-414-10
www.yaskawa.se

YASKAWA ELECTRIC (CHINA) CO., LTD.

22F, One Corporate Avenue, No.222 Hubin Road, Huangpu District, Shanghai 200021, China
Phone: +86-21-5385-2200 Fax: +86-21-5385-3299
www.yaskawa.com.cn

YASKAWA SHOUGANG ROBOT CO., LTD.

No.7 Yongchang North Road, Beijing E&T Development Area, Beijing 100076, China
Phone: +86-10-6788-2858 Fax: +86-10-6788-2878
www.ysr-motoman.cn

YASKAWA ELECTRIC KOREA CORPORATION

35F, Three IFC, 10 Gukjegeumyung-ro, Yeongdeungpo-gu, Seoul, 07326, Korea
Phone: +82-2-784-7844 Fax: +82-2-784-8495
www.yaskawa.co.kr

YASKAWA ELECTRIC TAIWAN CORPORATION

12F, No.207, Sec. 3, Beishin Rd., Shindian District, New Taipei City 23143, Taiwan
Phone: +886-2-8913-1333 Fax: +886-2-8913-1513
www.yaskawa.com.tw

YASKAWA ASIA PACIFIC PTE. LTD.

30A Kallang Place, #06-01, 339213, Singapore
Phone: +65-6282-3003 Fax: +65-6289-3003
www.yaskawa.com.sg

YASKAWA ELECTRIC (THAILAND) CO., LTD.

59, 1st-5th Floor, Flourish Building, Soi Ratchadapisek 18, Ratchadapisek Road, Huaykwang,
Bangkok 10310, Thailand
Phone: +66-2-017-0099 Fax: +66-2-017-0199
www.yaskawa.co.th

PT. YASKAWA ELECTRIC INDONESIA

Secure Building-Gedung B Lantai Dasar & Lantai 1 Jl. Raya Protokol Halim Perdanakusuma,
Jakarta 13610, Indonesia
Phone: +62-21-2982-6470 Fax: +62-21-2982-6471
www.yaskawa.co.id

YASKAWA INDIA PRIVATE LIMITED (ROBOTICS DIVISION)

#426, Udyog Vihar Phase-IV, Gurugram, Haryana 122016, India
Phone: +91-124-475-8500 Fax: +91-124-475-8542
www.yaskawaindia.in

Specifications are subject to change without notice
for ongoing product modifications and improvements.

YASKAWA

YASKAWA ELECTRIC CORPORATION

© Printed in Japan December 2020 16-08

MANUAL NO.

HW1483919

113/113