

Cuddo Baby **Baby Bouncer**

OWNER'S MANUAL



- IMPORTANT! Read all instructions before using the infant bouncer seat.
- Keep instructions for future use.

Instructions for use

Securing Your Infant

Place your child in the seat. Position the restraint pad between your child's legs.



- Fasten the restraint belts to the restraint pad. Make sure you hear a "click" on both sides.
- Tighten each waist belt so that the restraint system is snug against your child. Please refer to the next section for instructions to tighten the waist belts.
- Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached.

(!) CAUTION

Always use the restraint system. Make sure that both buttons are locked. You can adjust between two positions.

Stop using the product as a bouncer when your child starts trying to sit up or has reached 29 lbs/ 13kg, whichever comes first.

Stop using as chair when your child can walk and sit on his or her own or max 29 lbs/13 kg or 2 years, whichever comes first.


Instructions for use

2 Positions

It is easy to start using the bouncer. Place it in front of you and fold up the seat until you hear a click.

() Important! Only an adult shall unfold.

This Cuddo Baby baby bouncer has four positions. The lowest position C is recommended for newborns sitting in the bouncer. Positions A and B can be used when the child can hold his or her back and head upright in these positions without a problem. It is not dangerous to exceed the recommended maximum weight for a position, but the rocking function will not work as well.

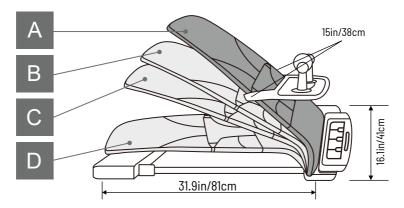

The bottom width of the bouncy chair is about 16in/41cm, and the total length is about 32in/81cm. It can lie with a width of about 15in/38cm and a length of about 28in/71cm.

- 1. The ground clearance of the first gear is about 24in/61cm.
- 2. The second gear is about 21in/53cm off the ground.
- 3. Three levels of ground clearance (about 20in/50cm).
- A. Highest position up to 29 lbs/13 kg.
- B. Medium position up to 22 lbs/10 kg.
- C. Lowest position up to 15.5 lbs/7 kg.
- D. Transportation mode when the product is not being used.

TO WASH THE FABRIC

To wash the fabric seat, loosen the two elastic loops at the bottom and pull it off the frame. Wash separately, warm/40°C. Do not tumble dry.



TECHNICAL INFORMATION


Weight: 7.9 lbs/3.6 kg Height/length/width:

Transport mode: 4.5 x 31.8 x 16.1 in/11 x 81 x 41 cm Carton Size: 16.1*5.9*18.6 in/41*15*47 cm


Main ingredients: ABS, steel, Polyester fiber

Instructions for use

3 Installation precautions

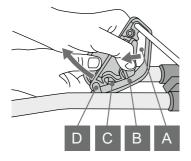

Make sure that the positioner is securely locked into place before putting your child in the bouncer. If you adjust the bouncer's position when your child is sitting in it, make sure that the positioner is locked into place before letting go of the backrest.

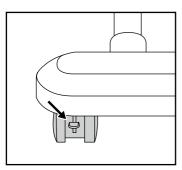

Be sure to lock the wheels before placing your baby when installing them.

A WARNING

Fall Hazard: Babies have suffered skull fractures falling while in and from bouncers.

- Use bouncer ONLY on floor.
- ALWAYS use restraints. Adjust to <u>fit snugly</u>, even if baby falls asleep.
- NEVER lift or carry baby in bouncer.
- NEVER use toy bar as a handle.

 ${\color{red} \textbf{Suffocation Hazard:} Babies have} \, \underline{\textbf{suffocated}} \, \, \text{when bouncers tipped over on soft surfaces.} \\$

- NEVER use on a bed, sofa, cushion, or other soft surface.
- NEVER leave baby unattended.


To prevent falls and suffocation:

- ALWAYS use restraints. Adjust to fit snugly, even if baby falls asleep.
- STOP <u>using bouncer</u> when baby starts trying to sit up, or has reached 29 lbs (13 kg), whichever comes first.


This product is not intended to replace a crib or bassinet for prolonged periods of sleep.

Installation instructions

1 List of accessories

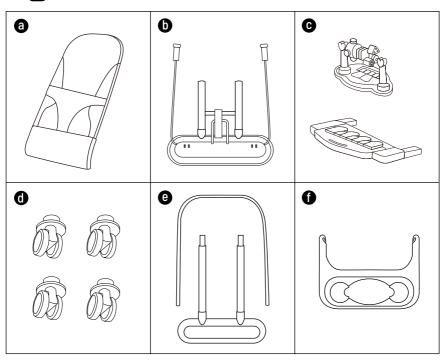



2 Installation steps

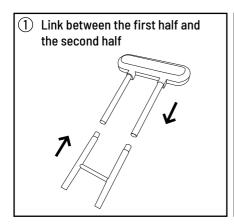





Installation instructions

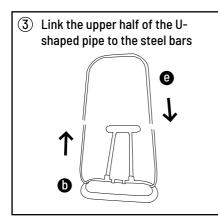

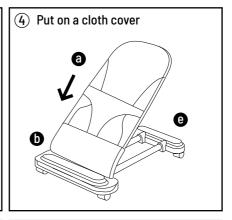

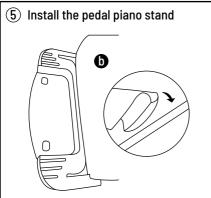




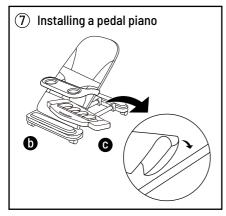



Cuddo Baby baby bouncer comes with two Sounds and Light-up Pianos. It has 4 ways to play as baby grows: Kick & Play, Sit& Play, Snack Time and Take-Along

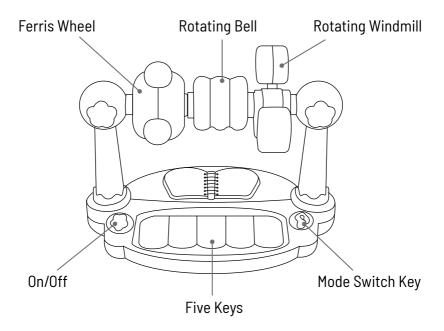

Specification:

Size: 7.1*4.1*5.5 in/18*10.8*14cm

Material: ABS

Power supply: 3*AA batteries (not included)


1 Mode1: Musical Fun

Press the keys to learn colors, the notes of the scale, or for counting fun!

2 Mode2: Learning Time

Press the keys to "build a song." Each time you press a key, you hear part of a song.

Kick & play piano

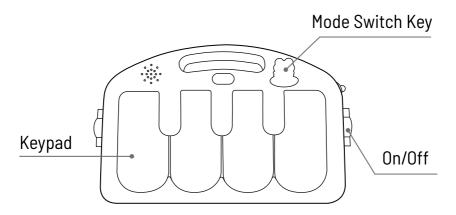

• Specification:

Size: 10.2*6.6in/26*17cm

Material: ABS

Power supply: 3*AA batteries (not included)

1 Mode1: Musical note Click on the note button to play.

2 Mode2: Play the piano Select this mode to play songs.

3 Mode3: Dynamic MIDI Select this mode to automatically play rhythmic MIDI music.

4 Mode4: Hypnotic music MIDI Select this mode to automatically play lullabies.


5 Mode5: Animal MIDI Select this mode to automatically play animal MIDI music.

Precautions for batteries

Battery Replacement



For longer life, use alkaline batteries.




- Locate the battery compartment door on the back of the piano.
- Loosen the screws in the battery compartment door and remove the door.
- Remove the exhausted batteries and dispose properly.
- Insert three, new AA (LR6) alkaline batteries.
- Replace the battery compartment door and tighten the screws. Do not over-tighten.
- If this product begins to operate erratically, you may need to reset the electronics.
 Slide the power/volume switch off and then back on.
- When sounds become faint or stop, it's time for an adult to change the batteries.


Remove Lock-out Fastener




This package contains small parts. For adult assembly only.

This toy includes a lock-out fastener on the back of the piano. To unlock all modes, be sure to remove it!

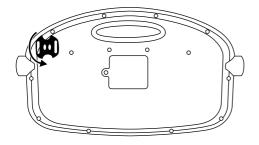

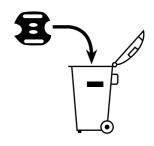

- Turn the lock-out fastener and pull to remove.
- Properly dispose of the lock-out fastener.

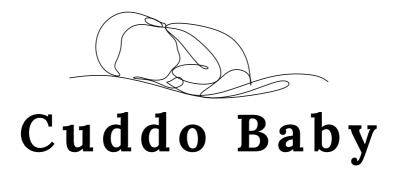



For any inquiries, missing parts, or issues with damage, please **refrain from returning** the product directly to the store to avoid second-hand purchases for safety reasons. Do not return to stores, please reach out to support@cuddobaby.com for prompt and responsible customer support within 24 hours.

We're here to assist you and guide you through a more reliable warranty claim process.