WINDOW AIR CONDITIONER

OWNER'S MANUAL

Please read this manual carefully before operating the machine

Content

OPERATION NOTICES

Precautions.....1
Identification of Parts 6

FEATURES (WITH LCD TYPE REMOTE)

Display Panel 7
Remote Control 7
Introduction for Icons on Display Screen.....8
Introduction for buttons on Remote Controller 9

FEATURES (WITHOUT LCD TYPE REMOTE)

Transmitter feature 13
Introduction for buttons on Remote Controller 14-16

INSTALLATION INSTRUCTIONS

Installing the Unit 17
Draining the Unit 18

CARE AND MAINTENANCE

Clean Filter 19

TROUBLESHOOTING

Troubleshooting Tips..... 20
Normal Operation 20
Abnormal Operation. 20
Error Code 21


Testing Frequency Setting Method..... 21

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.

Explanation of Symbols

⚠ DANGER	Indicates a hazardous situation that, if not avoided, will result in death or serious injury.
⚠ WARNING	Indicates a hazardous situation that, if not avoided, could result in death or serious injury.
⚠ CAUTION	Indicates a hazardous situation that, if not avoided, may result in minor or moderate injury.
NOTICE	Indicates important but not hazard-related information, used to indicate risk of property damage.
⚠	Indicates a hazard that would be assigned a signal word WARNING or CAUTION.

Disposal of Electrical and Electronic Equipment/product/Commodity

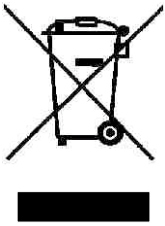

Do not mix the electronic waste with solid waste

Operation Notices

Precautions



WARNING

Operation and Maintenance

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children.
- Do not connect air conditioner to multi-purpose socket. Otherwise, it may cause fire hazard.
- Do disconnect power supply when cleaning air conditioner. Otherwise, it may cause electric shock.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- After removing the filter, do not touch fins to avoid injury.
- Do not use fire or hair dryer to dry the filter to avoid deformation or fire hazard.
- Maintenance must be performed by qualified professionals. Otherwise, it may cause personal injury or damage.

Operation Notices

Precautions

WARNING

- Do not repair air conditioner by yourself. It may cause electric shock or damage.
- Do not extend fingers or objects into air inlet or air outlet. It may cause personal injury or damage.
- Do not block air outlet or air inlet. It may cause malfunction.
- Do not spill water on the remote controller, otherwise the remote controller may be broken.
- When below phenomenon occurs, please turn off air conditioner and disconnect power immediately
  - Power cord is overheating or damaged.
  - There is abnormal sound during operation.
  - Circuit break trips off frequently.
  - Air conditioner gives off burning smell.
  - Indoor unit is leaking.
- If the air conditioner operates under abnormal conditions, it may cause malfunction, electric shock or fire hazard.
- When turning on or turning off the unit by emergency operation switch, please press this switch with an insulating object other than metal.
- Do not step on top panel of outdoor unit, or put heavy objects. It may cause damage or personal injury.

Operation Notices

Precautions

WARNING

Attachment

- Installation must be performed by qualified professionals. Otherwise, it may cause personal injury or damage.
- Must follow the electric safety regulations when installing the unit.
- According to the local safety regulations, use qualified power supply circuit and circuit break.
- Do install the circuit break. If not, it may cause malfunction.
- An all-pole disconnection switch having a contact separation of at least 3mm in all poles should be connected in fixed wiring.
- Including an circuit break with suitable capacity, please note the following table. Air switch should be included magnet buckle and heating buckle function, it can protect the circuit-short and overload.
- Air Conditioner should be properly grounded. Incorrect grounding may cause electric shock.
- Don't use unqualified power cord.
- Make sure the power supply matches with the requirement of air conditioner. Unstable power supply or power incorrect wiring can malfunction. Please install proper supply cables before using the air conditioner.
- Properly connect the live wire, neutral wire and grounding wire of power socket.
- Be sure to cut off the power supply before proceeding any work related to electricity and safety.

Operation Notices

Precautions

WARNING

- Do not put through the power before finishing installation.
- The temperature of refrigerant circuit will be high, please keep the interconnection cable away from the copper tube.
- The appliance shall be installed in accordance with national wiring regulations.
- The air conditioner is the first class electric appliance. It must be properly grounding with specialized grounding device by a professional. Please make sure it is always grounded effectively, otherwise it may cause electric shock.
- The yellow-green wire in air conditioner is grounding wire, which can't be used for other purposes.
- The grounding resistance should comply with national electric safety regulations.
- The appliance must be positioned so that the plug is accessible.
- All wires of indoor unit and outdoor unit should be connected by a professional.
- If the length of power connection wire is insufficient, please contact the supplier for a new one. Avoid extending the wire by yourself.

Operation Notices


Precautions

WARNING

- For the air conditioner with plug, the plug should be reachable after finishing installation.
- For the air conditioner without plug, an circuit break must be installed in the line.
- If you need to relocate the air conditioner to another place, only the qualified person can perform the work. Otherwise, it may cause personal injury or damage.
- Select a location which is out of reach for children and far away from animals or plants.If it is unavoidable, please add the fence for safety purpose.
- The indoor unit should be installed close to the wall.

Operation Notices

Identification of Parts

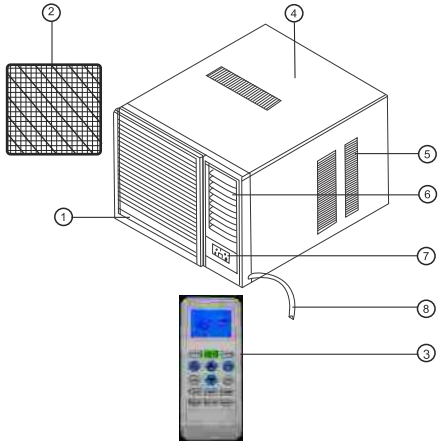

1. Front panel
2. Airfilter
3. Remote control
4. Cabinet
5. Air inlet grill(outdoorside)
6. Air outlet grill
7. Electronic control keypad
8. Power supply cord

1. Power cord conductors are distinguished according to color as follows (shown in Fig.1).
2. For your safety and protection, this unit is earthed through the power cord (shown in Fig.1).
   Please contact the manufacturer or its service dealer or a similarly qualified person if you want to replace it.
3. This unit is earthed through the power cord.
   The wall outlet should be provided with reliable earth wire (shown in Fig.2).
4. The unit should be provided with an individual circuit and the circuit breaker/fuse rating should be the same as that of the power cord and walloutlet.

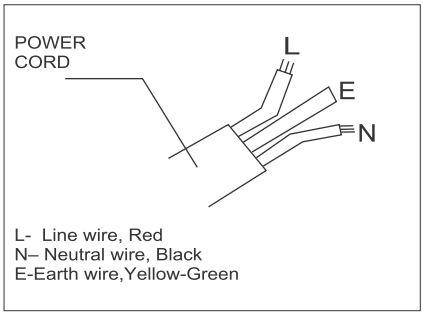


Fig.1


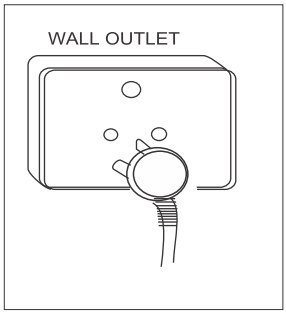


Fig.2

Features

Display Panel

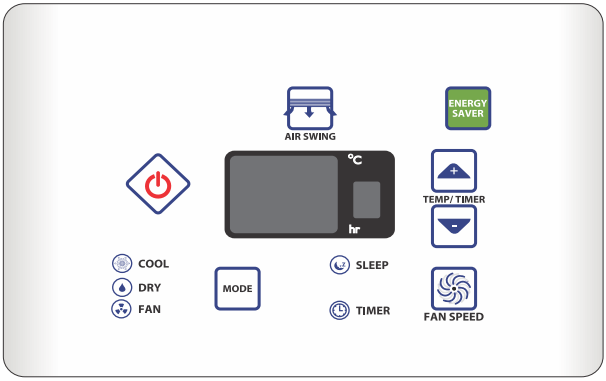


Remote Control



Display content or position may be different from above graphics, please refer to actual products.


Introduction for Icons on Display Screen

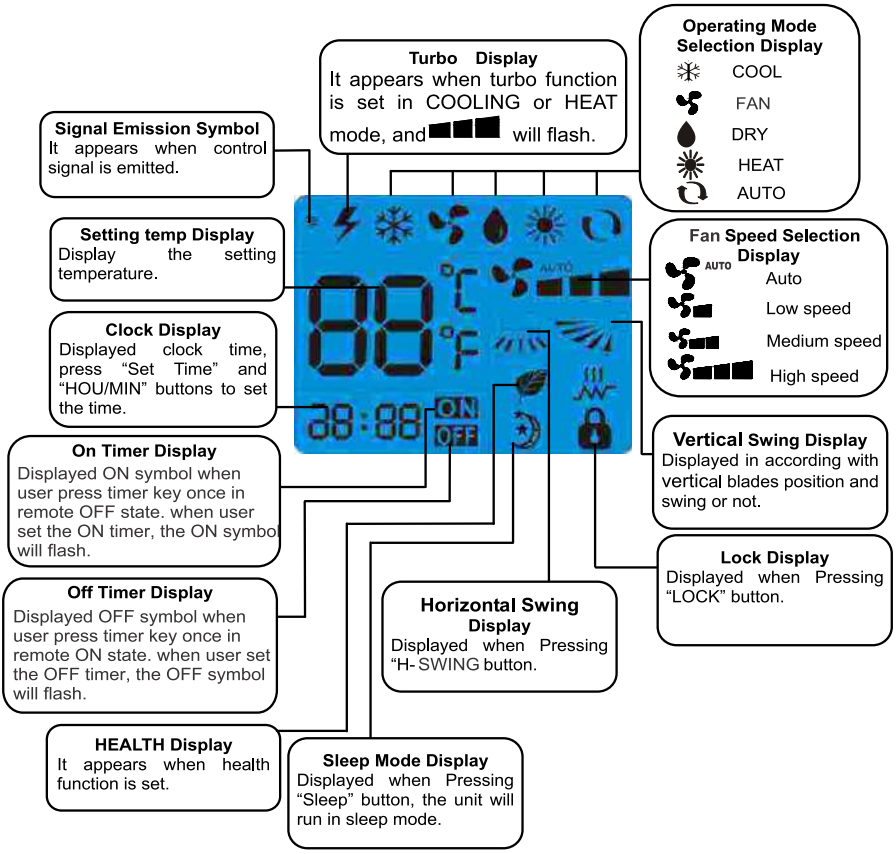

Instruction for remote controller

- The remote controller uses two AAA alkaline batteries under normal condition, the batteries last for about 6 months. Please use two new batteries of similar type (pay attention to the poles in installing).
- The effective control distance of the remote controller is about 8m.
- When using remote controller, please point the signal emitter towards indoor unit receiver; There should be no obstacle between remote controller and indoor unit.
- Pressing two buttons simultaneously will result wrong operation.
- Do not use wireless equipment (such as mobile phone) near indoor unit. If interference occurs because of this, please switch off the unit, pull out power plug, then plug again and switch on after a while.
- There is no direct sunlight to the indoor receiver, or it can not receive the signal from the remote controller.
- Don' t cast the remote controller.
- Don' t put the remote controller under the sunlight or near the oven.
- Don' t sprinkle water or juice on the remote controller, use soft cloth for cleaning if it occurs.
- The batteries must be removed from the appliance before it is scrapped and that they are disposed of safety.

Introduction for Buttons on Remote Controller

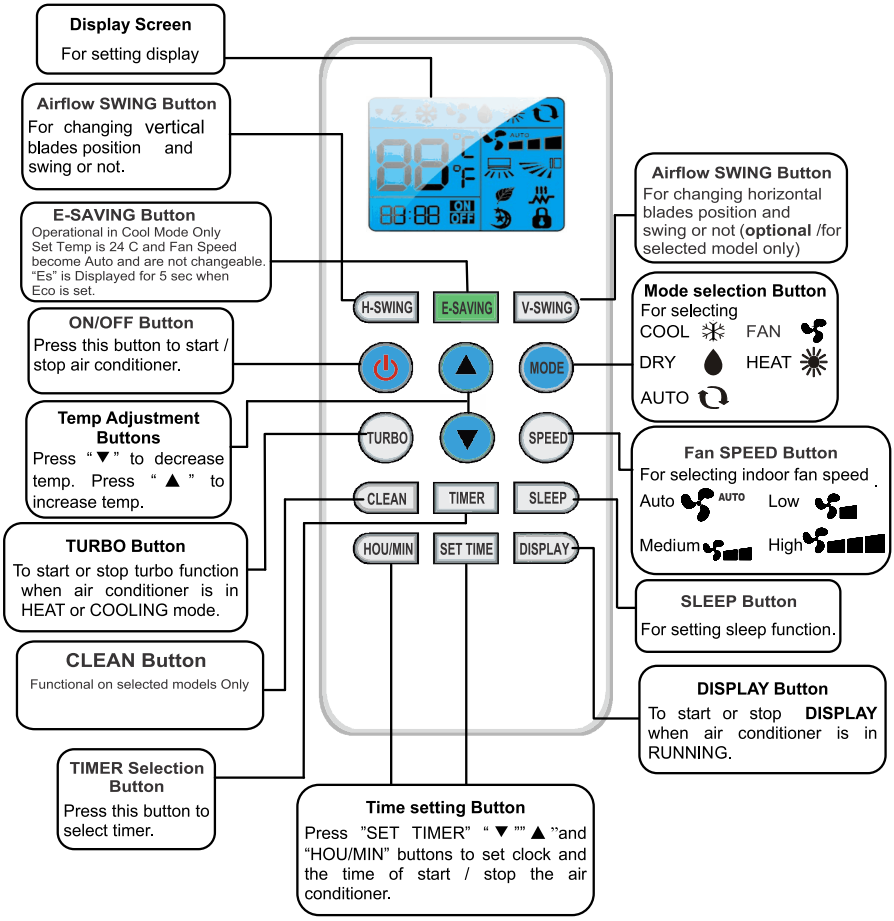


Remarks:

1. Temperature can be set between 16°C~30°C.
2. Heat feature are not applicable in cooling mode.
3. If user want to make the room air cool or warm quickly ,user can press "turbo" button in cooling or heating mode,air conditioner will run in power function.If press "turbo" button again, air conditioner will exit power function.
4. The above illustration of remote controller is only for reference, it may be slightly different from the actual product you selected.

Introduction for Buttons on Remote Controller

AUTO, HEAT, COOL,FAN and DRY operation

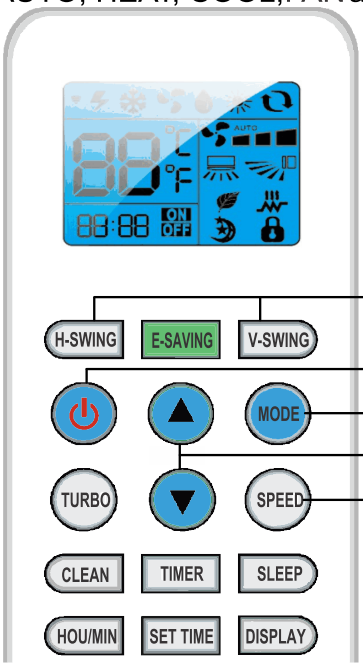

Switch On
Press On/Off button to start air conditioner. 1

Setting Operation Mode
AUTO HEAT FAN
COOL DRY 2

Temp Adjustment Buttons
Press "▼" "▲" buttons to set temp as needed 3

Airflow selection
Press "H-SWING" and "V-SWING" button to select airflow direction. 4

Setting Fan Speed
Four speeds can be selected
Auto Low
Medium High 5

Switch Off
Press On/Off button to stop air conditioner. 6

Remarks:

1. When "AUTO" mode is set, Air Conditioner will adapt to COOL mode according to the Room and set temperature.
2. When "AUTO" mode is set, Temperature, Fan, Turbo and E-Saving can't be adjusted.
3. When "DRY" mode is set, Air Conditioner will work according to room and set temperature, humidity decrease automatically.
4. When "FAN" mode is set, Temperature, Turbo, E-Saving and Clean can't be adjusted.
   Step 3 of operating procedures is not effective. Only high, medium and low fan speed can be set.
5. If the unit is turned OFF and turned ON by remote, default 24°C set temperature will be automatically selected by remote & corresponding function will be transmitted from the remote after turning ON.
6. If previous set temperature is between 16°C to 23°C, after switching OFF the unit by remote, **set temperature will be set to default 24°C** when unit is turned ON by remote.
7. If previous set temperature is equal or above 24°C, after switching OFF the unit by remote, **set temperature remains unchanged** when unit is turned ON by remote.

Features

Introduction for Buttons on Remote Controller

Clock Setting

1. Press “Set Time” button to select to set time , hour of clock display will flash.
2. (Pressing “HOU/MIN” button can change between minute and hour setting)Press “▼”or “▲” buttons to set hour as needed, each press of “▼”or “▲”button will decrease or increase the time display by 1 hour/1 minute; hour display will be changed continuously when pressing “▼”or “▲” continuously.
3. Press “HOU/MIN” button to change to the minute display, minute of clock display will flash. And then press “▼”or “▲” buttons to set minute as needed(the method as step 2), The hour/minute display will flash for 10 seconds after setting, the remote controller displays current time.



On Timer


1. Set the clock time as 〖Clock Setting〗, Press “Set Time” button to select “Timer ON” , hour of clock display will flash.
2. Press “HOU/MIN” and “▼” “▲”button, set the time to turn on the air conditioner on timer. each press of “▼”or “▲”button will decrease or increase the time display by 1 hour/10 minutes; hour/minute display will be changed continuously when pressing “▼”or “▲” continuously. The hour/minute display will flash for 10 seconds after setting, the remote controller will display current time also.
3. Press “Timer” button to select timer “**ON**” .



Note:

1. When “On Timer” function is set, air conditioner will be turned off immediately. It will be turned on at the set time, symbol “**ON** ” will be deleted. If the set time is as same to the current time, air conditioner will be turned on at this time of next day.
2. Press “On/Off” to cancel “On Timer” function, air conditioner will be turned on immediately.


Introduction for Buttons on Remote Controller

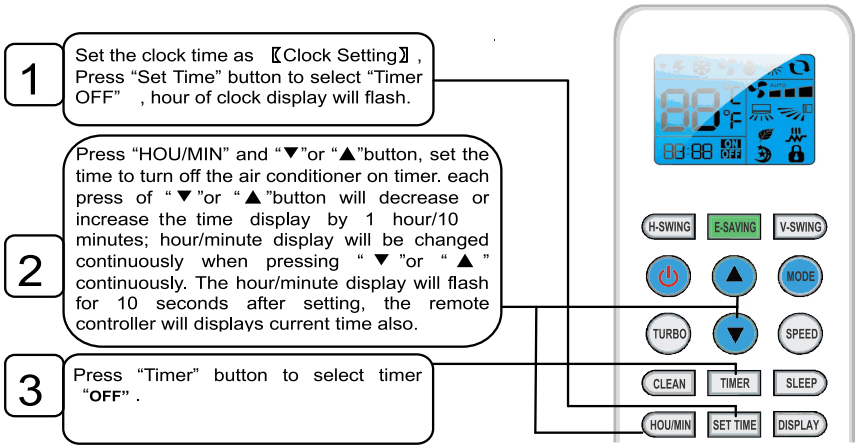

Note:

1. When "Off Timer" function is set, air conditioner will be turned on immediately. It will be turned off at the set time, symbol " **OFF** " will be deleted. If the set time is as same to the current time, the air conditioner will be turned off at this time of next day.
2. Press "On/Off" to cancel "Off Timer" function, air conditioner will be turned off immediately.

Timer on-off

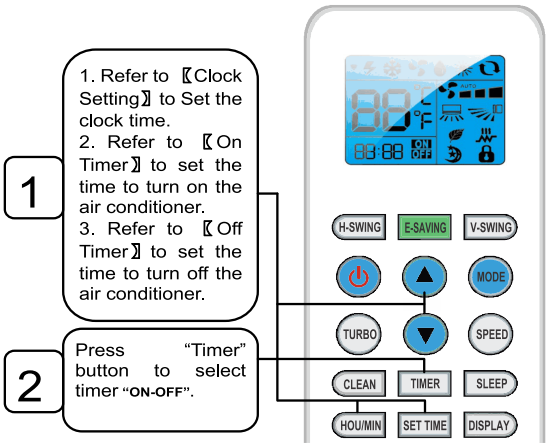

Note:

1. In accordance with the clock time, air conditioner will select to work in "On Timer"(symbol "ON" in remote controller will flash) or "Off Timer" (symbol "OFF" in remote controller will flash)mode automatically: Selecting On Timer or Off Timer must follow the principle of time preference.

2. One time is only effective for Timer On-Off. If user presses "On/Off" button by hand before the set time, "Off timer" and "On timer" function will be both cancelled, and the air conditioner will change to start(if On Timer is effective before pressing "On/Off" button)or stop(if Off Timer is effective before pressing "On/Off" button).

Transmitter Feature

Transmitter Features - Various keys & the function associated with them are as follows :

POWER : To switch the system on or off.

UP : Used for incrementing the preset temperature or timer time.

DOWN : Used for decrementing the preset temperature or timer time.

FAN SPEED : To change fan speed.

SLEEP : This Key set/cancel the Sleep function.

SWING : Used for turning swing motor on/off

1HR. OFF : To set 1hr off timer.

TURBO : To active Turbo feature, press this key.

MODE : To change mode.

TIMER : Used to set timer. Timer value can be changed by pressing up/down key after pressing timer key.


ENERGY SAVER : To active/deactivate energy saver function (In cool mode only).

TEMP : NA


Switching ON/OFF

Remote Control	Operation
ON / OFF  POWER	1. To start the operation of the unit press the POWER button
	2. To stop the operation of the unit, press the POWER button again.

Adjusting Operation Mode

Remote Control	Operation
MODE 	 Using this button Cool, Dry and Fan mode can be selected cyclically. • **COOL MODE** - CL will appear at display of air conditioner for 5 sec after that set temp will display. Temp. setting16-30°C and Fan speed variable (Low, Medium, High & Auto) and all keys are functional. • **DRY MODE** - dr will appear at air conditioner display for 5 sec. Fan speed will be auto in this mode & temperature will vary. Turbo &Energy saver not applicable in this mode. • **FAN MODE** - Fn will appear at the display of air conditioner. Fan speed variable (Low, Medium & High). Turbo & Energy saver not applicable in this mode. Note :- In COOL, DRY mode (Cooling modes), If the unit is turned OFF and turned ON by remote, default 24°C set temperature will be automatically selected by remote & corresponding function will be transmitted from the remote after turning ON If previous set temperature is between 16°C to 23°C, after switching OFF the unit by remote, set temperature will be set to default 24°C when unit is turned ON by remote. If previous set temperature is equal or above 24°C, after switching OFF the unit by remote, set temperature remains unchanged when unit is turned ON by remote. **This will be applicable to all the product manufactured after JAN-2020 as per regulation.** 

Selecting Fan Speed

Remote Control	Operation
 FAN SPEED	Using this button, Auto, Low, Medium and High fan speed can be cyclically selected. Operate Auto in cool mode the fan speed will be slected automatically to Low, Medium or High.  Low fan Medium fan High fan Auto

Adjusting Airflow Direction

Remote Control	Operation
 SWING	Press the swing button to select Air Swing. The vertical **louver** start to rotate for better air flow and distribution around the room. Press the swing button again to stop Air Swing function. Note: Using your hands to adjust the direction of the **louver** may cause them to malfunction. If this happens, stop operation immediately and restart.

Energy Saver Operation

Remote Control	Operation
 ENERGY SAVER	Energy Saver function can be selected in Cool Mode only. "**ES**" is displayed on the AC Control Panel when Energy Saver is set. Set Temp becomes 24°C and Fan Speed becomes medium and are not changeable. If you change the Mode or Press ON/OFF key, Energy Saver will get cancelled.

Introduction for Buttons on Remote Controller

Remote Control	Operation
TIMER    1 HR OFF	Timer: Press the timer button to set the unit "ON Timer" when the unit is off. Press the timer button to set the unit "OFF Timer" when the unit is in operation. UP and DOWN bottons can be used with Timer buttons to adjust the timer by an interval of 1 hour 1 HR OFF : You can set quick "One Hour OFF Timer" by pressing this button. The unit will switch off1 hour after pressing this button.

TURBO

Remote Control	Operation
 TURBO	Turbo function can be selected in Cool Mode only. "Set Temperature" will be displayed on the AC Control Panel when Turbo is set. If Set Temp < Room Temperature and the user presses Turbo Key the Fan Speed will become HIGH and the Compressor Delay Time (3 min) will be bypassed and Compressor will switch ON Immediately. If Set Temp > Room Temperature, Turbo can't be set. If you change the Mode or Press ON/OFF key, turbo will get cancelled.

SLEEP Mode

Remote Control	Operation
 SLEEP	Press this button to select "Sleep On" or "Sleep Off". At power on, Sleep Off is the default. When Sleep function is set, the Sleep signal will be displayed on the unit. It is possible to set the timer in Sleep mode. Sleep mode is not available under Fan and dry modes. When the unit is turned off, the Sleep function is cancelled. In this mode the set temperature increases automatically by 1°C every hour for next 2 hours. "SL" is displayed on the Control Panel for 5 sec in every min. After 8 hour : Sleep gets deactivated automatically (Set temp. return back to initial set temp. before sleep activation)


Adjusting the Set Temperature and On -Off Timer

Remote Control	Operation
+  - 	UP and DOWN buttons can be used to adjust the set temperature setting of the unit by an interval of 1°C or timer by an interval of 1 hour.

Installation Instructions


Installing the Unit

Do not install the unit near a heat source, steam source and flammable gas. Select a location where the power supply is within 1.5 meters. Prepare the installation hole slightly bigger than the actual cabinet size. Ensure that the minimum distances around the unit are maintained as shown below.

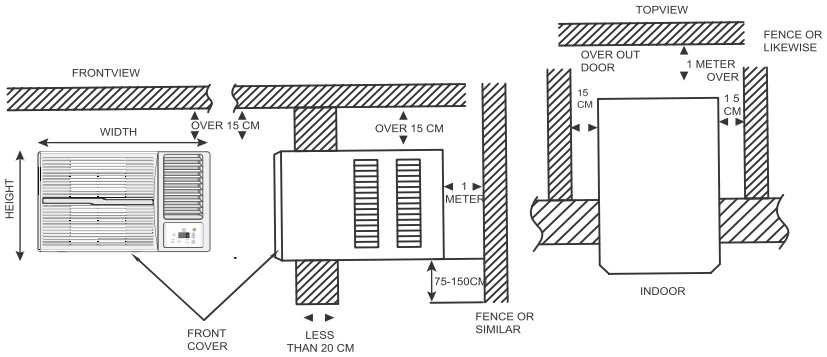

For testing purpose and enhanced performance use the installation guidelines given below

- The unit should be inclined 15-20mm towards the back for optimum performance
- For optimum performance drain should be plugged

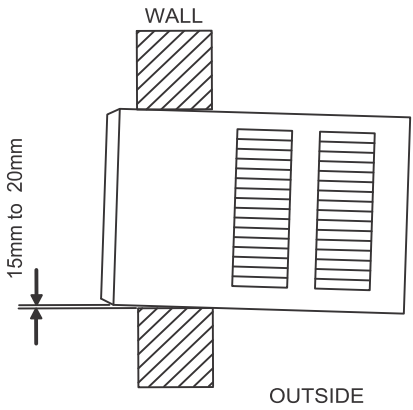

Installation Instructions

Installing the Unit


1, 2.




3.



4.

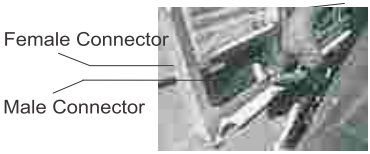

5

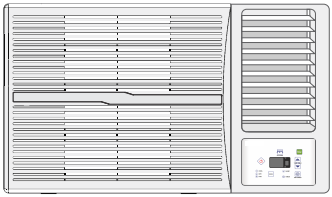

1) Remove the rear screw and save it for later use. Pullout the chassis by grasping the front handle.


2) Place the cabinet into the opening and secure it by fasteners.

3) Slide the chassis into the cabinet.

4) Connect the Harness connector(male), coming out from main chassis, to the display PCB fitted on the front Grill(female) connector.

5) Install the Filter and attach the Grill with cabinet .

Draining the Unit

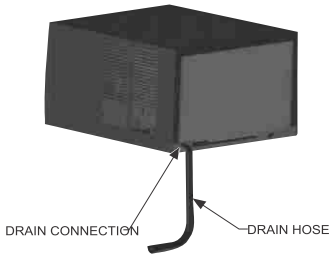

Drainage to the bottom

For Normal Climate Condition :
Drain Should be plugged.

For High Humidity Climate condition :
Make sure that the drain connection is attached to the unit and connect a drain hose to drain connection.

Note :
If the unit is installed on the upper floor of an apartment or building, make sure drainage water is channeled properly to avoid dripping onto any person.

Care and Maintenance

Clean Filter

WARNING: Be sure to turn off the main power supply before commencing maintenance work.

Removing The Air Pre-Filter

A dirty air filter will cause the reduction of air flow, which in trouble causes the unit to overload and also consumes more electricity. Therefore, regular cleaning is necessary for an efficient and trouble-free operation.


- Turn off the unit.
- Remove the Air Pre-Filter by sliding out.
- Vacuum the filter or wash the lter in warm water.
- Do not use water above 40℃ for cleaning, as this will cause discoloration and deformation.
- Let the lter dry thoroughly before reinstalling it.




(applicable on select models only)

Cleaning Front Panel, Horizontal Louver and Air Pre-Filter

- Always use a soft cloth or sponge with luke warm water and mild detergent to clean the Front Panel, Horizontal Louver and AirPre-Filter
- Do not use water hose to clean the unit

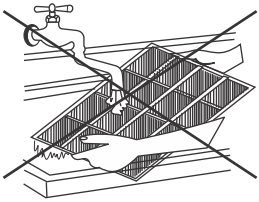

CAUTION: Do not use thinner, abrasive powders, benzene or hot water to clean the unit.

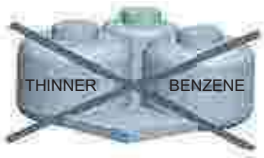

Troubleshooting

Troubleshooting Tips

Save time and money! Review the chart below and you may not need to call for service.

Normal Operation

- You may hear a pinging noise caused by water being picked up and thrown against the condenseron rainy days or when the humidity is high. This design feature helps remove moisture and improve efficiency
- You may hear the thermostat click when the compressor cycles On and Off
- Water will collect in the base pan during high humidity or on rainy days. The water may overflow and drip from the outdoorside ofthe unit
- The fan may continue to operate when the compressor has cycled off

Abnormal Operation

Problem	Possible Causes	What To Do
Airconditioner does not start	•The air conditioner is unplug	• Make sure the air conditioner plug is pushed completely into the outlet and switched on
	•The fuse is blown/circ breaker is trippe	• Check the house fuse/circuit breaker box and replace the fuse or reset the breaker
	• Power failure	• If power failure occurs, switch off and disconnect/unplug the power cord. When power is restored, reconnect (plug in) the power cord, switch on the power and wait for 3 minutes to restart the airconditioner to prevent tripping of the compressor in case of overload
Air conditioner does not coolas it should	•Airflow is restricted	• Make sure there are no curtains, blinds or furniture blocking the front of the air conditioner
	•The airfilteris dirty	• Clean the filter at least once every 2weeks. See the operating instructions section
	•The room may have been hot	• When the air conditioner is first turned on, you need to allow time for the room to cool down
	• Cold air is escaping	• Check for open furnace floor registers and cold air returns
	• Check for the leakage and choking	
Air conditioner freezing up	• Ice blocks the air flowand stops the air conditioner from cooling the room	• Set the fan at MED or HIGH until the ice melts
Air conditioner does not heat (only forheat cool machine type)	•The set temperature may be lower than the actual room temperature	Make sure the set temperature is higher than the actual room temperature

Error Codes

Error Code

ERROR SIGNALS ON THE DISPLAY FOR FIXED SPEED MODELS

Code	Error Description
E1	Ambient/Room temperature sensor fault
E2	Evaporator/Coil temperature sensor fault
dF	Defrost protection

ERROR SIGNALS ON THE DISPLAY FOR INVERTER MODELS

Code	Error Description
EE	Indoor machine EE fault
E3	Indoor coil sensor fault
E4	Indoor ambient temperature sensor fault
E0	Outdoor EE fault
E6	main board and drive board communication fault
F1	Compressor starting abnormal (phase, failure, reverse)
F2	Compressor out of step fault
F3	IPM module fault
F5	Discharge temperature sensor fault
F8	Outdoor ambient temperature sensor fault

Testing Frequency Setting Method

Full-Capacity

1. Switch on the AC and wait for compressor start working, set the mode to cooling Mode and temperature to 16°C and Fan speed high by remote controller.
2. Press the "DISPLAY" button on remote controller 8 time continuously.

Half-Capacity

1. Switch on the AC and wait for compressor start working, set the mode to cooling Mode and temperature to 17°C and Fan speed high by remote controller.
2. Press the "DISPLAY" button on remote controller 8 time continuously.

(These setting are for laboratory testing and hence not to be used for normal operation)

Note:- Full / Half Capacity are applicable for INVERTER Models.