

Electronic Instrumentation





User Manual UM2748

DT5743

8 Channel 12bit 3.2 GS/s Switched Capacitor Digitizer
Rev.2 - February 9th, 2016

Purpose of this Manual

This document contains the full hardware description and the principle of operating of the DT5743 Digitizer. For any detail on the library functions mentioned in the document, please consult [RD4].

Change Document Record

Date	Revision	Changes
November 17 th , 2014	00	Initial release
January 12 th , 2015	01	Removed "Preliminary". Updated Chap. 5, Sect. Acquisition
		Synchronization, Sect. Data Transfer Capabilities and Events
		Readout. Added Sect. Self-Trigger. Added bit[26] in Sect. Event
		Structure.
February 9 th , 2016	02	Fully revised. Added Sect. Digital Memory Buffer, Sect. BUSY Front
		Panel LED, Sect. Majority Level, Sect. Veto for the Trigger Rate
		Counter, Sect. Timer Reset, Sect. Troubleshooting.

Symbols, Abbreviated Terms and Notation

DLL	Delay Line Loop
INL	Integral Non-Linearity
PLL	Phase-Locked Loop
TDC	Time to Digital Converter
USB	Universal Serial Bus

Reference Documents

[RD1] GD2512 – CAENUpgrader QuickStart Guide

[RD2] GD2783 - First Installation Guide to Desktop Digitizers & MCA

[RD3] GD2812 – DeskBoot QuickStart Guide

[RD4] UM1935 - CAENDigitizer User & Reference Manual

[RD5] UM1934 - CAENComm User & Reference Manual

[RD6] UM2754 - WaveCatcher User Manual

All documents can be downloaded at: http://www.caen.it/csite/LibrarySearch.jsp

CAEN S.p.A.

Via Vetraia, 11 55049 Viareggio (LU) - ITALY Tel. +39.0584.388.398 Fax +39.0584.388.959 info@caen.it www.caen.it

© CAEN SpA - 2016

Disclaimer

No part of this manual may be reproduced in any form or by any means, electronic, mechanical, recording, or otherwise, without the prior written permission of CAEN SpA.

The information contained herein has been carefully checked and is believed to be accurate; however, no responsibility is assumed for inaccuracies. CAEN SpA reserves the right to modify its products specifications without giving any notice; for up to date information please visit www.caen.it.

MADE IN ITALY: We stress the fact that all the boards are made in Italy because in this globalized world, where getting the lowest possible price for products sometimes translates into poor pay and working conditions for the people who make them, at least you know that who made your board was reasonably paid and worked in a safe environment. (this obviously applies only to the boards marked "MADE IN ITALY", we cannot attest to the manufacturing process of "third party" boards).





Index

	Purpose of this Manual	2
	Change Document Record	
	Symbols, Abbreviated Terms and Notation	
	Reference Documents	2
Ind	dex	3
l is	st of Figures	4
	st of Tables	
1	Introduction	
2	Block Diagram	7
3	Technical Specifications	8
4	Packaging and Compliancy	
5	Cooling Management	
6	Power Requirements	11
7	Panels Description	12
	Front Panel	13
	Rear Panel	16
8	Functional Description	
	Analog Input Stage	
	Sampling in the Analog Memory	
	Digital Memory Buffer	
	Clock Distribution	
	PLL Mode	
	Changing the Sampling Frequency	
	Data Correction	
	Line Offset Correction	
	Individual Pedestal Correction	
	Time INL Correction	
	Trigger Threshold DAC Offset Correction	25
	Acquisition Run/Stop	26
	Running in Charge Mode	26
	Event Structure	27
	Header	
	Data	
	Acquisition Synchronization	
	BUSY Front Panel LED	
	Trigger Management	
	Software Trigger	
	External Trigger	
	Self-TriggerTrigger Coincidence Level	
	Majority Level	
	Trigger Distribution	
	Test Pattern Pulser	
	Hit Rate Monitor	
	Veto for the Trigger Rate Counter	
	Reset, Clear and Default Configuration	
	Global Reset	
	Memory Reset	37
	Timer Reset	37
	Data Transfer Capabilities and Events Readout	
	Block Transfers	
	Single Data Transfer	
	Optical Link and USB Access	
9	Drivers & Libraries	40

	Drivers	40
	Libraries	40
10	Software Tools	42
	WaveCatcher	
	CAENUpgrader	
	13	
	CAENComm Demo	
11	HW Installation	45
	Power-On Sequence	45
	Power-On Status	45
12	Firmware and Upgrades	46
	Firmware Upgrades	
	Firmware File Description	
	· ·	
	Troubleshooting	
13	• • • • • • • • • • • • • • • • • • • •	
	Returns and Repairs	
	Technical Support Service	48
Lis	st of Figures	
	2.1: Block Diagram	
	4.1: Front view	
	4.2: Rear view	
	6.1: AC/DC Power supply provided with the DT5743 kit	
	7.1: Front panel view	
_	7.2: Rear panel view	
_	8.1: Analog input diagram	
	8.2: Input diagram	
	8.4: Sampled waveform before line offset correction	
	8.5: Zoom on the sampled waveform before line offset correction	
	8.6: Sampled waveform after line offset correction	
	8.7: Zoom on the sampled waveform after line offset correction	
	8.8: Sampled waveform after individual pedestal correction	
	8.9: Example of INL before time correction	
	8.10: Example of INL after time correction	
	8.11: Parameters used for the charge measurement mode	
Fig.	8.12: Event format	27
Fig.	8.13: Group data format	29
Fig. 8	8.14: Group data format in Charge Mode	30
	8.15: Trigger management block diagram	
	8.16: Self-trigger generation, trigger request and common trigger logic	
	8.17: Self-Trigger generation	
	8.18: Trigger configuration of GPO front panel connector	
	8.19: FPGA Test pulse with 0xC755 pattern	
	8.20: FPGA Test pulse in reflectometer mode	
	8.21: Principle of the Hit Rate Monitor	
	9.1: Required libraries and drivers	
	10.1: WAVECatcher software	
	10.2: CAENOpgrader Graphical Oser Interfaces	
	11.1: Front panel LED status after power-on	
_		43
LIS	st of Tables	
	. 1.1: Table of models and related items	
	. 3.1: Specifications table	
iab.	. o. i. map of avaliable Calivolytuzer library functions for the self-trigger management	33

1 Introduction

The Mod. DT5743 is a Desktop module housing a 8-channel 12-bit 3.2 GS/s Switched Capacitor Digitizer issued from the collaboration with CEA/IRFU & CNRS/IN2P3/LAL and based on the SAMLONG chip.

The input dynamic range is $2.5 \, V_{pp}$ (DC coupled) on single ended MCX coaxial connectors. The DC offset is adjustable in the $\pm 1.25 \, V$ range via a 16-bit DAC on each channel (see Sect. **Analog Input Stage**).

Considering the sampling frequency and the number of bits, it is well suited for very fast signals as the ones generated by fast scintillators coupled to PMTs, Silicon Photomultipliers, APD, Diamond detectors and others.

The analog input signals are continuously sampled inside the SAMLONG chips in a circular analog memory buffer (1024 cells) at the default sampling frequency of 3.2 GS/s (312.5 ps of sampling period); frequencies of 1.6 GS/s, 0.8 and 0.4 GS/s are also software selectable. As a trigger signal arrives, all analog memory buffers are frozen and subsequently digitized with a resolution of 12 bits into a digital memory buffer with independent read and write access. Channel digital memory with software selectable buffer organization depending on the event size allows for up to 7 full events per channel (1 event = 1024 * 12 bits) consecutively storable.

Each input channel is equipped with a discriminator with a 16-bit programmable threshold, which generates trigger requests. Requests from all channels are processed by the board to generate a common trigger causing all the channels to acquire an event simultaneously. The common board trigger can also be provided externally by software command, or by the front panel TRG-IN input, or by any combination of the channel discriminators and/or the TRG-IN.

During analog to digital conversion process, the DT5743 cannot handle other triggers, thus generating a Dead Time (maximum 125 µs, decreasing proportionally with the recording depth thanks to the configurable recording depth).

Each input channel is equipped with an individual hit rate monitor based on its own discriminator and on two counters giving the number of hits which cross the programmed discriminator threshold (also during the Dead Time) and the time elapsed with a 1 MHz clock (see Sect. **Hit Rate Monitor**). This permits among others measuring the hit rate with respect to the signal amplitude.

Each input channel is equipped with a digital programmable charge integrator which permits a high rate measurement in charge mode (see Sect. **Running in Charge Mode**).

Each pair of channels is equipped with a 40-bit TDC (counter) tagging the trigger with the clock delivered to the SAMLONG chips (200 MHz down to 25 MHz depending on the selected sampling frequency).

DT5743 houses a fixed amplitude pulser on each analog input, which permits an easy complete functionality test and the use of the module in reflectometer mode (see Sect. **Test Pattern Pulser**).

The module features front panel CLK-IN connector as well as an internal PLL for clock synthesis from internal/external references.

DT5743 houses USB 2.0 and Optical Link interfaces. USB 2.0 allows data transfers up to 30 MB/s. The Optical Link supports transfer rate of 80 MB/s and offers Daisy chain capability. Therefore, it is possible to connect up to 8 ADC modules to a single A2818 Optical Link Controller, or up to 32 using a A3818 (4-link version). Optical Link and USB accesses are internally arbitrated.

Board Models	Description	Product Code					
DT5743	DT5743 - 8 Channel 12bit 3.2 GS/s Switched Capacitor Digitizer	WDT5743XAAAA					
Related Products	Description	Product Code					
A2818	A2818 – PCI Optical Link (Rhos compliant)	WA2818XAAAAA					
A3818A	A3818A – PCIe 1 Optical Link	WA3818AXAAAA					
A3818B	A3818B – PCle 2 Optical Link	WA3818BXAAAA					
A3818C	A3818C – PCle 4 Optical Link	WA3818CXAAAA					
Accessories	Description	Product Code					
A318	SE to Differential Clock Cable Adapter	WA318XAAAAAA					
A654	Single Channel MCX to LEMO Cable Adapter	WA654XAAAAAA					
A654 KIT4	4 MCX TO LEMO Cable Adapter	WA654K4AAAAA					
A654 KIT8	8 MCX TO LEMO Cable Adapter	WA654K8AAAAA					
A659	A659 - Single Channel MCX to BNC Cable Adapter	WA659XAAAAAA					
A659 KIT4	4 MCX TO BNC Cable Adapter	WA659K4AAAAA					
A659 KIT8	8 MCX TO BNC Cable Adapter	WA659K8AAAAA					
AI2730	Optical Fibre 30 m simplex	WAI2730XAAAA					
AI2720	Optical Fibre 20 m simplex	WAI2720XAAAA					
AI2705	Optical Fibre 5 m simplex	WAI2705XAAAA					
AI2703	Optical Fibre 30 cm simplex	WAI2703XAAAA					
AY2730	Optical Fibre 30 m duplex	WAY2730XAAAA					
AY2720	Optical Fibre 20 m duplex	WAY2720XAAAA					
AY2705	Optical Fibre 5 m duplex	WAY2705XAAAA					

Tab. 1.1: Table of models and related items

2 Block Diagram

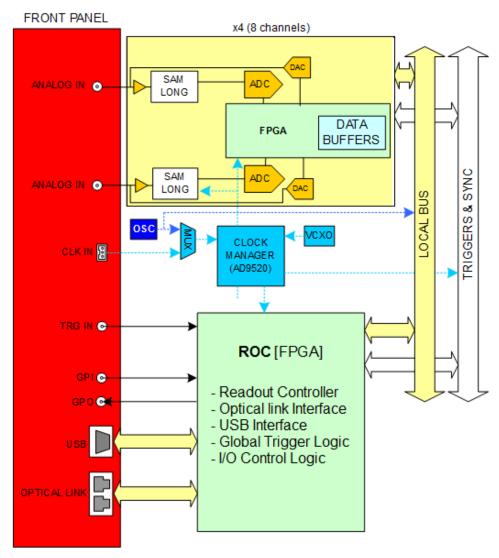


Fig. 2.1: Block Diagram

3 Technical Specifications

OF UEDAL	Form Factor		Weight						
GENERAL	154x50x164 mm3 (WxHxD) Desktop		680 g						
	Channels	Connector	Bandwidth						
	8 channels	MCX	500 MHz						
	Single ended								
ANALOG INPUT									
	Impedance	Full Scale Range	Offset						
	Z _{in} : 50 Ω	2.5 V _{pp}	Programmable 16-bit DAC for						
		DC coupled	DC offset adjustment on each						
TEST FUNCTIONALITY	One pulser per channel with programmable 16	hit nattorn (fixed amn	channel. Range: ±1.25 V						
TEST TONCHONALITY	Analog Memory (Switched Capacitor Array)	Dead Time (Event A/D Conversion)							
	SAMLONG Fast Analog Memory chip	125 μs (max. @ 1024	•						
	2 channels, 1024 storage cells/ch	Note: value decreasing proportionally with the							
DIGITAL CONVERSION	320 ns minimum recorded time/event	recording depth (configurable record length)							
DIGITAL CONVENSION									
	Sampling Rate	Resolution							
	3.2/1.6 /0.8/0.4 GS/s	12 bits							
	SW selectable < 20 ps RMS before time calibration								
	< 5 ps RMS after time calibration								
TIMING RESOLUTION	Note: obtained with factory calibration and du	al-pulse timing measure	ement with pulse generator. Test						
	conditions: periodic input pulses with 1V Ampl								
	resolution does not change significantly when								
NOISE LEVEL	0.75 mV RMS								
	Synchronization clock source: internal/externa								
CLOCK GENERATION	On-board PLL provides generation of the main		nternal (50 MHz loc. oscillator) or						
	external (front panel CLK-IN connector) referen								
	CLK-IN (AMP Modu II)	TRG-IN (LEMO)	at 16 to a constitution of the Line of						
	AC coupled differential input clock LVDS, ECL, PECL, LVPECL, CML (single ended		rt/Stop acquisition digital input:						
	NIM/TTL available)	NIM/TTL, $Z_{in} = 50 \Omega$							
	Jitter<100ppm requested								
DIGITAL I/O	sitter (100ppin requested								
	GPI (LEMO)	GPO (LEMO)							
	Trigger Time Stamp reset or Start/stop	Common trigger digita	al output:						
	acquisition digital input:	NIM/TTL, $R_t = 50 \Omega$							
	NIM/TTL, $Z_{in} = 50 \Omega$								
DIGITAL MEMORY	Multi-Event Buffer with up to 7 full events/ch (1024 samples per even	t) storable consecutively						
	Trigger Source	Trigger Propagation							
	Self-trigger: channel over/under threshold	GPO programmable d	igital output						
	(based on analog discriminator on each	Tricana Timo Stama							
	channel with DAC adjusted threshold) for	Trigger Time Stamp	esolution, 83-min range						
TRIGGER	Common trigger generation • External-trigger: common trigger by TRG-IN	T							
	connector								
	• Software-trigger: common trigger by	Trigger Threshold							
	software command	Programmable throug	gh a 16-bit DAC in the range of						
		±1.25 V on each chan	nel						
ADC & MEM CONTROLLER	Altera Cyclone EP3C16 (1 FPGA serves 4 chann	els)							
	Optical Link	USB							
	CAEN CONET proprietary protocol	USB 2.0 compliant							
COMMUNICATION	Up to 80 MB/s transfer rate	Up to 30 MB/s transfe	er rate						
INTERFACE	Daisy chainable: it is possible to								
	connect up to 8/32 ADC modules to a single Optical Link Controller								
	(Mod.A2818/A3818)								
DIGITAL PULSE	Software selectable embedded Charge Mode f	or input pulse high rate	charge integration and fast						
PROCESSING	histogramming								
FIRMWARE UPGRADE	Firmware can be upgraded via USB/Optical Lin	k							
	General purpose C libraries and configuration t	tools (Windows and Lin	ux support)						
SOFTWARE	WaveCatcher readout software (Windows only	•	1/12						
	The module is powered by external AC/DC stab	'	cluded in the kit (12 VDC, 45 W)						
POWER CONSUMPTIONS	Operating Supply Voltage: +12 VDC ± 10%								
	Consumptions (@ +12 VDC): 1.5 A (Typ.) ± 10%	tolerance							
Tab. 3.1: Specifications table									

Tab. 3.1: Specifications table

4 Packaging and Compliancy

The unit is a Desktop module housed in a 154 W x 50 H x 164 D mm³ alloy box. Weight is about 680 g (packaging free).



Fig. 4.1: Front view



Fig. 4.2: Rear view

<u>CAEN provides the specific document "Precautions for Handling, Storage and Installation", available in the documentation tab of the product's web page, that the user is mandatory to read before to operate with CAEN equipment.</u>

CAUTION: to manage the product, consult the operating instructions provided.



A potential risk exists if the operating instructions are not followed!

5 Cooling Management

Starting from **revision 4** of the hardware (readable by bit[7:0] at 0xF04C), the DT5743 features an automatic fan speed control to guarantee an appropriate cooling in consequence of internal temperature variations. The automatic control is managed by the ROC FPGA firmware from **revision 4.4** on.

WARNING: It is recommended not to run ROC FPGA firmware revision < 4.4 on DT5743 with hardware revision ≥ 4 as the fans will work always at the maximum speed to prevent from hardware damages, but with a high noisiness on the other hand.

6 Power Requirements

The module is powered by the external AC/DC stabilized power supply provided with the digitizer and included in the delivered kit (12 VDC, 45 W).

The board's maximum power consumption is: 1.5 A (@+12V).

Note.: Using a different power supply source, like battery or linear type, it is recommended the source to provide +12V and, at least 1.5 + 10% current; the power jack is a 2.1 mm type, a suitable cable is the RS 656-3816 type (or similar).





Fig. 6.1: AC/DC Power supply provided with the DT5743 kit

7 Panels Description




Fig. 7.1: Front panel view




Fig. 7.2: Rear panel view

Front Panel

FUNCTION Input connectors (CH0 to CH7) receiving the input analog signals. ELECTRICAL SPECS Sign. type: single ended. Input dynamics: 2.5 V_{pp}. Input impedance (Z_{in}): 50 Ω. FUNCTION MECHANICAL SPECS Series: MCX connectors. Type: CS 85MCX-50-0-16. Manufacturer: SUHNER. Suggested plug: MCX-50-2-16 type. Suggested cable: RG174 type.

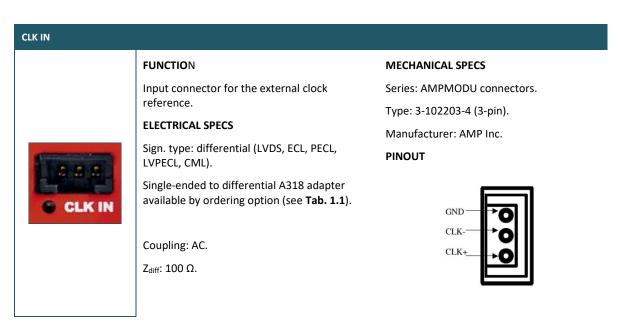

CLK IN LED (GREEN): indicates the external clock is enabled.

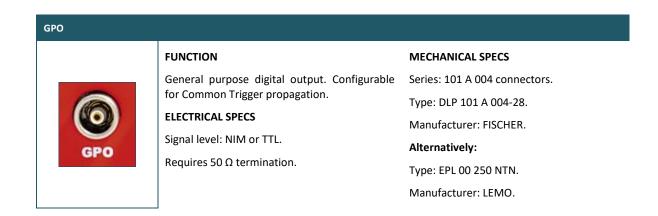

TRG IN



FUNCTION

Digital input connector for external trigger signal or as Start/Stop acquisition (see Sect. Acquisition Run/Stop).

ELECTRICAL SPECS

Signal level: NIM or TTL. Input impedance (Z_{in}): 50 Ω .

MECHANICAL SPECS

Series: 101 A 004 connectors.

Type: DLP 101 A 004-28.

Manufacturer: FISCHER.

Alternatively:

Type: EPL 00 250 NTN.

Manufacturer: LEMO.

GPI



FUNCTION

General purpose digital input. Configurable as reset of the time stamps (see Sect. **Timer Reset**) or Start/Stop acquisition (see Sect. **Acquisition Run/Stop**).

ELECTRICAL SPECS

Signal level: NIM or TTL. Input impedance (Z_{in}): 50 Ω .

MECHANICAL SPECS

Series: 101 A 004 connectors.

Type: DLP 101 A 004-28.

Manufacturer: FISCHER.

Alternatively:

Type: EPL 00 250 NTN.

Manufacturer: LEMO.

OPTICAL LINK PORT



FUNCTION

Optical LINK connector for data readout and flow control. Daisy chainable. Compliant to Multimode 62.5/125µm cable featuring LC connectors on both sides.

ELECTRICAL SPECS

Transfer rate: up to 80 MB/s.

MECHANICAL SPECS

Series: SFF Transceivers.

Type: FTLF8519F-2KNL (LC connectors).

Manufacturer: FINISAR.

PINOUT



TX (red wrap)

RX (black wrap)

LINK LEDs (GREEN/YELLOW): right LED (GREEN) indicates the network presence, while left LED (YELLOW) signals the data transfer activity.

USB PORT



FUNCTION

USB connector for data readout and flow control.

ELECTRICAL SPECS

Standard: compliant to USB 2.0 and USB 1.0.

Transfer rate: up to 30 MB/s.

USB LINK LED (GREEN): indicates the USB communication is active.

MECHANICAL SPECS

Series: USB connectors.

Type: 787780-2 (B-Type).

Manufacturer: AMP Inc.

DIAGNOSTICS LEDs



TTL (GREEN): indicates GPO, TRG IN, and GPI signals are TTL;

NIM (GREEN): indicates GPO, TRG IN, and GPI signals are NIM;

PLL LOCK (GREEN): indicates the PLL is locked to the reference clock;

PLL BYPS (GREEN): indicates the PLL drives directly the ADCs. PLL circuit is switched off and PLL LOCK LED is turned off;

RUN (GREEN): indicates the acquisition is running (data taking).

TRG (GREEN): indicates the trigger is accepted;

DRDY (GREEN): indicates the event/data is present in the Output Buffer;

BUSY (RED): indicates all the buffers are full for at least one channel or the board cannot accept new triggers due to the digital conversion dead time.

Rear Panel

SPARE LINK



FUNCTION

Auxiliary connector reserved for CAEN usage.

ELECTRICAL SPECS

Not available.

MECHANICAL SPECS

Series: Header connectors.

Type: 7610-5002-5+5.
Manufacturer: 3M.

DC INPUT



FUNCTION

Input power supply (+12 VDC).

ELECTRICAL SPECS

See Chap. 6.

MECHANICAL SPECS

Series: CC power supply connectors.

Type: RAPC722X (DC power jack).

Manufacturary Coultabaraft Inc

Manufacturer: Switchcraft Inc.

PINOUT



ON/OFF SWITCH



FUNCTION

Panel switch for module power supply ON/OFF:

 $\mathbf{O} \rightarrow$ power supply OFF;

 $I \rightarrow$ power supply ON.

ELECTRICAL SPECS

Not available.

MECHANICAL SPECS

Series: A1 switches.

Type: A11331122000 (Single pole two

way).

Manufacturer: Molveno.

IDENTIFYING LABEL



FUNCTION

Board's identifying label indicating:

- the model;
- The Input range;
- the serial number (S/N);
- the symbol of the CE conformity marking.

8 Functional Description

Analog Input Stage

Input dynamics is 2.5 V_{pp} on single ended MCX coaxial connectors (see Chap. 7). A 16-bit DAC allows to add up to a ± 1.25 V DC offset to preserve the full dynamic range also in the extreme case of unipolar, positive or negative input signal.

The input bandwidth ranges from DC to 500 MHz (@3dB) by 2nd order linear phase anti-aliasing low pass filter.

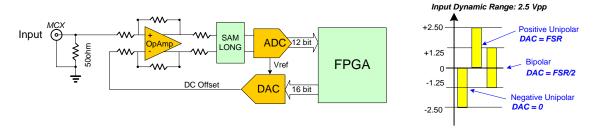


Fig. 8.1: Analog input diagram

Setting the DC offset can be managed by WaveCatcher software or through the Set/GetChannelDCOffset() functions of the CAENDigitizer library.

Sampling in the Analog Memory

The analog input signals from each pair of channels are continuously sampled into one SAMLONG chip, which consists of a matrix of Delay Line Loops (DLLs) generating a 3.2 GS/s sampling frequency from an input clock of 200 MHz; 1.6 GS/s, 0.8 and 0.4 GS/s frequencies are also software selectable (see Sect. **Changing the Sampling Frequency**).

Signals produced by the DLLs simultaneously open write switches in both sampling channels, where the differential input signals are sampled (1024 sampling capacitance cells per channel).

After being started by the so-called "Run" signal (corresponding to the WRITE signal on **Fig. 8.2**) going high, the DLLs run continuously in a circular fashion (after reaching the end of the matrix, samples are over written) until decoupled from the write switches when the Run signal goes down. This actually takes place after the arrival of a trigger signal synchronously delayed by the so-called post-trigger delay (managed by the <code>SetSAMPostTriggerSize()</code> function of the CAENDigitizer library) which finally provokes the freezing of the currently stored signal in the sampling capacitance cells.

Subsequently, the cells are multiplexed into the 12-bit ADCs whose output are stored by the FPGA into the Digital Memory Buffer and made ready for readout in the shape of events data.

A 16-bit DAC allows to add up a ±1.25 V DC offset to preserve the full dynamic range also in the extreme case of unipolar positive or negative input signals (see Sect. **Analog Input Stage**).

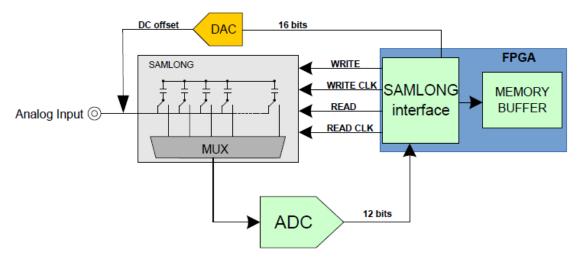


Fig. 8.2: Input diagram

Detailed documentation of the SAMLONG chip is available at:

http://electronique.lal.in2p3.fr/echanges/USBWaveCatcher/Documentation/Boards&Chips/doc SAMLONG rev1.pdf

(in case the active link above doesn't work, copy and paste it on the internet browser)

Digital Memory Buffer

Each pair of input channels shares a SRAM memory in the channel FPGA (see **Fig. 2.1**) that is organized into buffers whose number depends on the event size. This Digital Memory can consecutively store up to 7 full events per channel (1 full event = 1024 samples). It is possible to configure the board to read less than 1024 samples per event, so extending the number of events consecutively storable in the Digital Memory. This option is managed by the *SetRecordLength()* function of the CAENDigitizer library (**[RD4]**) or by the WaveCatcher software (**[RD6]**).

Clock Distribution

The module clock distribution takes place on two domains: OSC-CLK and REF-CLK.

OSC-CLK is a fixed 50 MHz clock provided by an on-board oscillator and handles Optical Link, USB and Local Bus, which is the communication between motherboard and mezzanine boards (see red traces in the **Fig. 8.3**).

REF-CLK handles trigger logic, acquisition logic (samples storage into RAM, buffer freezing on trigger) through a clock chain. Such domain can use either an external source (i.e. a signal on CLK-IN front panel connector) or an internal one (via the local oscillator) source; in the latter case, OSC-CLK and REF-CLK will be synchronous (the operating mode remains the same anyway). Internal source is the default option. The external clock signal must be differential (LVDS, ECL, PECL, LVPECL, CML) with a jitter lower than 100 ppm (see **Tab. 3.1**).

The DT5743 makes use of an integrated phase-locked-loop (PLL) and clock distribution device: AD9520. REF-CLK is processed by the AD9520, which delivers 200 MHz clock signals directly to SAMLONG chips (WRITE_CLK on **Fig. 8.2**, Wr_Clk on **Fig. 8.3**) and to the mezzanine FPGA. The latter will divide it to produce the 10 MHz clock used both for the readout of the SAMLONG chips (READ_CLK on **Fig. 8.2**) and for driving the ADC conversion (ADC_Clk on **Fig. 8.3**).

The AD9520 device also provides a 100 MHz clock to the trigger logics.

Refer to the AD9520 datasheet for more details:

http://www.analog.com/static/imported-files/data sheets/AD9520-0.pdf

(in case the active link above doesn't work, copy and paste it on the internet browser)

When running with the reduced sampling frequencies, the 200 MHz clock is divided inside the mezzanine FPGA before being sent to the SAMLONG chips via the clock multiplexer as shown in **Fig. 8.3**.

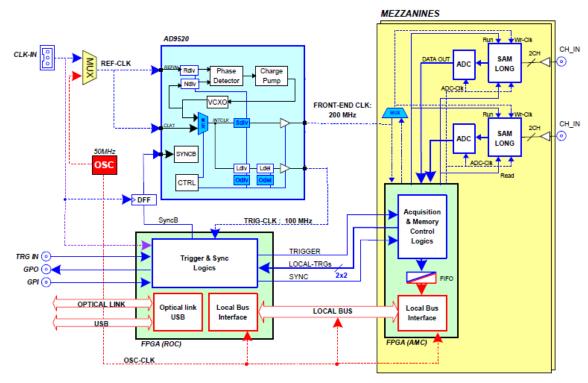


Fig. 8.3: Clock distribution diagram

PLL Mode

As introduced in Sect. **Clock Distribution**, the source of the REF-CLK signal can be external (see **Fig. 8.3**) on the front panel CLK-IN connector or internal from the 50 MHz local oscillator (default option). Selecting the REF-CLK source internal or external is possible by setting bit[6] of 0x8100 register address ("0" = internal reference; "1" = external reference). In case of external clock source, the CLK-IN LED must be on (see Sect. **Front Panel**).

The following options are allowed:

- 1. <u>50 MHz internal clock source</u> It's the standard operating mode; the default AD9520 configuration and the clock source setting do not require to be changed. OSC-CLK = REF-CLK.
- 50 MHz external clock source the clock source must be set to external; as the external clock reference is identical to the frequency of the internal oscillator, the AD9520 dividers must not be reprogrammed. CLK-IN = OSC-CLK = REF-CLK.
- 3. <u>External clock source different from 50 MHz</u> the clock source must be set to external and the AD9520 must be reprogrammed to lock at the new frequency. **Please, contact CAEN for information** (see Chap. **13**).

PLL programming files can be loaded by the user through the CAENUpgrader software tool (see Chap. 10).

If the digitizer is locked, the PLL-LOCK front panel LED must be on.

Changing the Sampling Frequency

The sampling frequency of the SAMLONG chips can be programmed by software through the SetSAMSamplingFrequency() library function.

The admitted values are:

3.2 GS/s (default)

1.6 GS/s

0.8 GS/s

0.4 GS/s

Data Correction

Different types of data correction are required to compensate for unavoidable construction differences among the SAMLONG chips. The data correction is not applied at FPGA level, but must be implemented runtime/offline at software level by the user. All boards are factory calibrated during production test and calibration parameters are saved on-board. Application software provided by CAEN, automatically recovers the calibration parameters and runs them in order to correct the stored data events (refer to [RD4] and [RD6]).

The different data correction types are:

- Line Offset Calibration: this calibration permits reducing the baseline noise down to ~ 0.95 mV RMS. With this sole calibration performed, waveform data is already directly usable with a dynamic range of 11.5 bits and a sampling time precision of ~ 20 ps RMS.
- **Individual Pedestal Calibration:** this calibration permits reducing the baseline noise down to ~ 0.75 mV RMS, thus increasing the dynamic range to 11.7 bits.



Note: The user is recommended to perform the Individual Pedestal Calibration once he has his setup ready.

- Time INL Calibration: this calibration compensates the fixed time dispersion along the sampling matrix. The
 eventual sampling time precision scales down to ~ 5 ps RMS. The factory calibration parameters cannot be
 modified by the user.
- **Trigger Threshold DAC Offset Calibration:** this calibration is necessary to obtain the best precision for small signals on the trigger threshold for the channel input discriminator. The factory calibration parameters cannot be modified by the user.



Note: The user is not allowed to store his own calibration parameters on the board, except for the Individual Pedestal Calibration, which is managed by WaveCatcher software.

Line Offset Correction

The SAMLONG structure is a matrix of 16 lines and 64 columns. Whereas this structure guarantees a very stable time base, it also has the characteristic that each line is equipped with its own buffer, which provokes an offset modulo 16 in the baseline pattern. Nevertheless, this offset remains very stable. Thus, in order to compensate for it, each line of the chip is equipped with individual correction DACs.

The raw waveform before any correction (vertical scale is 20 mV/div) is shown in **Fig. 8.4**, while **Fig. 8.5** displays a zoom on one channel where the fixed pattern modulo 16 linked to the matrix structure can be distinguished.

Fig. 8.6 displays the sampled waveform after line offset correction with the same vertical scale (20 mV/div) and **Fig. 8.7** shows the same plot as **Fig. 8.6** but with a vertical scale of 2 mV/div.

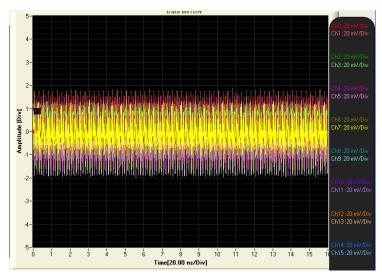


Fig. 8.4: Sampled waveform before line offset correction

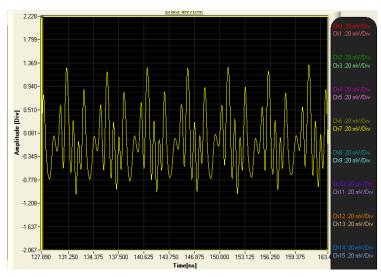


Fig. 8.5: Zoom on the sampled waveform before line offset correction

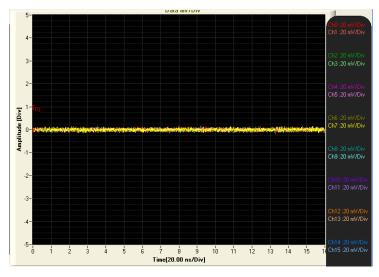


Fig. 8.6: Sampled waveform after line offset correction

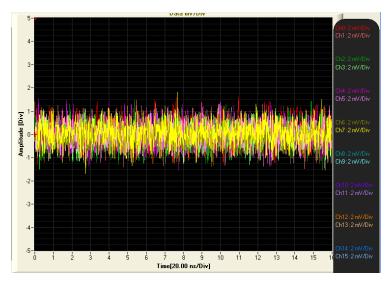


Fig. 8.7: Zoom on the sampled waveform after line offset correction

Individual Pedestal Correction

After the Line Offset correction, there is still a small residual individual offset distribution remaining on the baseline. This calibration will remove it. **Fig. 8.8** displays the waveform after this residual pedestal correction.

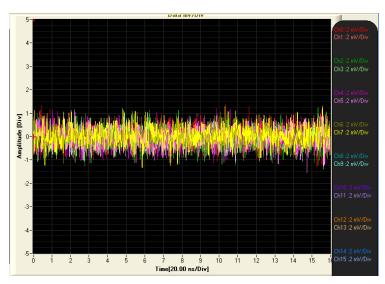


Fig. 8.8: Sampled waveform after individual pedestal correction

Individual pedestal calibration can be performed though the WaveCatcher software (see Chap. 10) in the following conditions:

- All the board channels must be disconnected.
- Calibration must be done after the board is at its thermal regime.
- Calibration must be done each time the temperature conditions vary significantly.

Please, consult [RD6] for the specific calibration operations.

Time INL Correction

The sampling sequence is handled by SAMLONG through 1024 physical delay elements spread over the sampling matrix; the unavoidable construction differences between such delay elements can be compensated through a time calibration. The following figures show an example of the integral non-linearity (INL) time profile of SAMLONG chips, before and after correction. Note the extremely low residual value on **Fig. 8.10**.

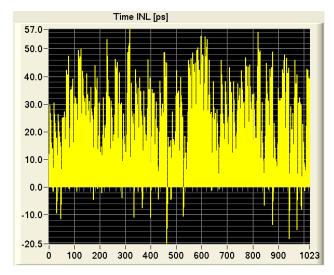


Fig. 8.9: Example of INL before time correction

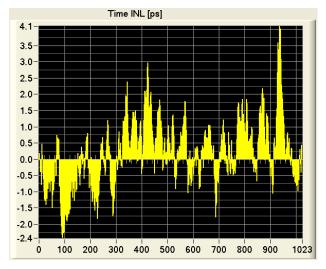


Fig. 8.10: Example of INL after time correction

Trigger Threshold DAC Offset Correction

The latter calibration permits setting the zero of the trigger discriminator threshold with a high precision, thus allowing triggering efficiently on very small signals around zero (a few mV).

Acquisition Run/Stop

The acquisition can be started and stopped in different ways configurable by the Set/GetAcquisitionMode(), SWStartAcquisition() and SWStopAcquisition() functions of the CAENDigitizer library:

- SW CONTROLLED: Start and Stop take place by software command.
- GPI CONTROLLED MODE: Start is issued as the GPI signal is set high and the Stop occurs when it is set low.
- FIRST TRIGGER CONTROLLED: Start is issued on the first trigger pulse (leading edge) on the TRG-IN connector. This pulse is not used as a trigger; actual triggers start from the second pulse on TRG-IN. The Stop acquisition must be SW controlled.



Note: CAEN WaveCatcher software only manages the SW Controlled mode.

Running in Charge Mode

The DT5743 features an embedded Charge Mode which permits using the FPGA to calculate the charge comprised within a predefined part of each event. As the calculation is performed by the firmware, the acquisition rate can raise up to 7 kHz for full events (depending on the signal input rate). The system will start the summation at a predefined cell value (REF_CELL_FOR_CHARGE). It will last until a total number N (CHARGE_LENGTH) of cells have been summed. Then the result will be stored in a dedicated FIFO (CHARGE_FIFO) together with the physical position of the column where REF_CELL_FOR_CHARGE is located, in order to allow the concerned cells to have their pedestal corrected if necessary. The storage into the FIFO might optionally be filtered by a programmable threshold set on the charge result (CHARGE_THRESHOLD).

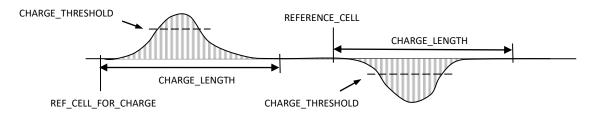


Fig. 8.11: Parameters used for the charge measurement mode

Fig. 8.11 describes the meaning of the different parameters quoted here above, for the integration of both a positive and a negative signal.

These operations are performed in parallel and independently on all channels. The event is readout only when the charge FIFOs will get full (they contain 256 events). To this end, the board front-end is automatically restarted as long as this doesn't happen.

As the number of words might be different in both channels in specific trigger modes, the charge and cell position will get forced to zero when the corresponding read FIFO is empty.

Charge mode is managed by WaveCatcher software and dedicated functions are available in the CAENDigitizer library ([RD4]).

Event Structure

The event can be readout either via USB or Optical Link as:

- Header (four 32-bit words)
- Data (variable size and format)

Data format is 32-bit long word (see Fig. 8.12).

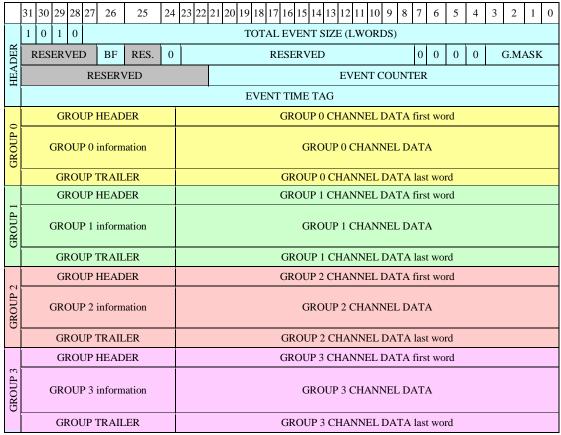


Fig. 8.12: Event format



Note: A group is composed by 2 adjacent analog channels (GROUP 0 = channels 0 - 1, GROUP 1 = channels 2 - 3, GROUP 2 = channels 4 - 5, GROUP 3 = channels 6 - 7) managed by the same SAMLONG chip.

Header

The Header consists in 4 words including the following information:

- TOTAL EVENT SIZE (Bit[27:0] of 1st header word): it is the size of the event, including the header (number of 32-bit words):
- BOARD FAIL FLAG (Bit[26] of 2nd header word): implemented from ROC FPGA firmware revision 4.5 on (reserved otherwise), this bit is set to "1" in consequence of a hardware problem (e.g. PLL unlocking). The user is then recommended to contact CAEN Support Service (see Chap. 13).
- EVENT MODE (Bit[24] of 2nd header word) = this bit identifies the event format; in case of 743 digitizer family, it must be set to "1";



Note: the bit is set to "0" by default in the firmware; WaveCatcher software automatically sets it to "1" during the board initialization, but the user must set it manually when developing a customized software.

- G.MSK (Bit[3:0] of 2nd header word): It is the mask of the groups participating in the event (e.g. GROUP 0 and GROUP 1 participating → G.MSK = 0x3; this information must be used by the software to acknowledge what group the samples are coming from; the first event contains the samples from the group with the lowest number):
- EVENT COUNTER (Bit[21:0] of 3rd header word): It is the trigger counter;
- EVENT TIME TAG (Bit[31:0] of 4th header word): It is a 31-bit counter and the 32nd bit as roll over flag; the counter is reset when the acquisition starts or by an external signal (see Sect. Timer Reset) and is incremented at each trigger clock hit (10 ns @100MHz). It corresponds to the time when the event is created in the digitizer memory and it is not related to any physical quantity. The Trigger Time Tag time reference, which gives information on when the trigger occurred, is the 40-bit counter of TDC field in the data format (see Fig. 8.13).

Data

Data are the stored information from each enabled group; data from masked groups are not read. The part of an event related to each group presents the format described in **Fig. 8.13** (example based on GROUP 0).

31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12	11 10 9 8 7 6 5 4 3 2 1 0
GROUP HEADER = 0x69	ADC DATA CHANNEL 1 SAMPLE 0	ADC DATA CHANNEL 0 SAMPLE 0
HIT_COUNTER CH0 LSB	ADC DATA CHANNEL 1 SAMPLE 1	ADC DATA CHANNEL 0 SAMPLE 1
HIT_COUNTER CH0 MSB	ADC DATA CHANNEL 1 SAMPLE 2	ADC DATA CHANNEL 0 SAMPLE 2
TIME_COUNTER CH0 LSB	ADC DATA CHANNEL 1 SAMPLE 3	ADC DATA CHANNEL 0 SAMPLE 3
TIME_COUNTER CH0 MSB	ADC DATA CHANNEL 1 SAMPLE 4	ADC DATA CHANNEL 0 SAMPLE 4
HIT_COUNTER CH1 LSB	ADC DATA CHANNEL 1 SAMPLE 5	ADC DATA CHANNEL 0 SAMPLE 5
HIT_COUNTER CH1 MSB	ADC DATA CHANNEL 1 SAMPLE 6	ADC DATA CHANNEL 0 SAMPLE 6
TIME_COUNTER CH1 LSB	ADC DATA CHANNEL 1 SAMPLE 7	ADC DATA CHANNEL 0 SAMPLE 7
TIME_COUNTER CH1 MSB	ADC DATA CHANNEL 1 SAMPLE 8	ADC DATA CHANNEL 0 SAMPLE 8
SAMPLING_FREQUENCY	ADC DATA CHANNEL 1 SAMPLE 9	ADC DATA CHANNEL 0 SAMPLE 9
EVENT_ID	ADC DATA CHANNEL 1 SAMPLE 10	ADC DATA CHANNEL 0 SAMPLE 10
FCR LSB	ADC DATA CHANNEL 1 SAMPLE 11	ADC DATA CHANNEL 0 SAMPLE 11
FCR MSB	ADC DATA CHANNEL 1 SAMPLE 12	ADC DATA CHANNEL 0 SAMPLE 12
TDC Byte 0 (LSB)	ADC DATA CHANNEL 1 SAMPLE 13	ADC DATA CHANNEL 0 SAMPLE 13
TDC Byte 1	ADC DATA CHANNEL 1 SAMPLE 14	ADC DATA CHANNEL 0 SAMPLE 14
TDC Byte 2	ADC DATA CHANNEL 1 SAMPLE 15	ADC DATA CHANNEL 0 SAMPLE 15
TDC Byte 3	ADC DATA CHANNEL 1 SAMPLE 16	ADC DATA CHANNEL 0 SAMPLE 16
TDC Byte 4 (MSB)	ADC DATA CHANNEL 1 SAMPLE 17	ADC DATA CHANNEL 0 SAMPLE 17
DUMMY	ADC DATA CHANNEL 1 SAMPLE 18	ADC DATA CHANNEL 0 SAMPLE 18
DUMMY	ADC DATA	ADC DATA
GROUP TRAILER = 0x96	ADC DATA CHANNEL 1 SAMPLE N-1	ADC DATA CHANNEL 0 SAMPLE N-1

Fig. 8.13: Group data format

In the group data described above, the number of words directly corresponds to the number of columns read in the SAMLONG chips multiplied by 16 (fixed number of lines). Bits 0 to 23 always correspond to digitized event data. Both channels are grouped inside the same word. Bits 24 to 31 are used for header, trailer, and event information.

- For each channel, **HIT_COUNTER** and **TIME_COUNTER** are 16-bit counters used to calculate the hit rate linked to the activity on the channel since the last event. HIT_COUNTER counts the number of times the input discriminator has be toggling since the last event, whereas TIME_COUNTER counts the time in units of 1 μs. The first counter saturating blocks the other. Taking care of memorizing this information long enough in the software, this measurement can range from 0.1 Hz to > ~400 MHz (see Sect. **Hit Rate Monitor**).
- SAMPLING_FREQUENCY = it is common to all channels and coded on 2 bits as follows:

```
00 => 3.2 GS/s
01 => 1.6 GS/s
10 => 0.8 GS/s
11 => 0.4 GS/s
```

- **EVENT_ID** = it corresponds to the 8 lower significant bits of the event number since the beginning of the run.
- FCR = it is the address of the First Cell Read in the SAMLONG chip for the current event. It is coded on 10 bits (which corresponds to the 1024 cells).
- **TDC** = it is the value of the individual channel counter and is coded over 40 bits. This is the Trigger Time Tag reference. The corresponding counter runs with the SAMLONG clock, thus covering a maximum of 1h30 at 200 MHz. It is reset when the acquisition starts or by an external signal (see Sect. **Timer Reset**).

In case of charge readout mode (see Sect. **Running in Charge Mode**), the part of an event related to each group presents the format as in **Fig. 8.14** (example of GROUP 0).

	_							_		_	_	_	_			_	_		_	_	_	_	_	_				
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	1	2 1	1	10	9 8	7	6 5	5 4 :	3 2	1 0
0	0	RE	EF C	ELL	CO	LUN	ΊN	1		,			CF	IAF	RG	ΕC	H	AN	NE	EL (0 E	EVE	ENT	Γ1				
0	0	RE	EF C	ELL	CO	LUN	1N	1					CF	IAF	RG	ΕC	CH	AN.	NE	EL	1 E	EVE	EN7	Γ1				
0	0	RE	EF C	ELL	CO	LUN	ΙN	1					CF	IAF	RG	ΕC	CH	AN.	NE	EL (0 E	EVE	EN7	Г2				
0	0	RE	EF C	ELL	CO	LUN	1N	1					CF	IAF	RG	ΕC	CH	AN.	NE	EL :	1 E	EVE	ENT	Г2				
-	-							1																				
0	0	RE	EF C	ELL	CO	LUN	1N	1					CH.	AR	GE	CI	ΗA	NN	ΙEΙ	٠ 0	ΕV	VEN	ΝT	25	6			
0	0	RE	EF C	ELL	CO	LUN	1N	1					CH.	AR	GE	CI	ΗA	NN	ŒΙ	J 1	ΕV	VEN	٧T	25	6			

Fig. 8.14: Group data format in Charge Mode

In the group data described above, the number of words (512) corresponds to twice the charge FIFO depth per channel (256 words). Charge data is coded in two's complement over 23 bits and expressed in pC. **REF CELL COLUMN** corresponds to the number of the physical column where the charge calculation started inside the SAMLONG chip (0 to 63). It is necessary for optional software correction purpose.

Acquisition Synchronization

As introduced in Sect. **Digital Memory Buffer**, each pair of input channels shares a SRAM memory in the channel FPGA (see **Fig. 2.1**) that is organized into a variable number of buffers, according to the programmable event size. Up to 7 full events per channel, that is to say 7 kS/ch (1 event = 1024 samples or 1024 * 12 bits) can be consecutively stored. When the trigger occurs, the acquisition takes place as described in Sect. **Sampling in the Analog Memory**.

When the Digital Memory Buffer is filled, the board is considered FULL: no trigger is accepted and the acquisition stops. As soon as at least one buffer is readout, the board exits the FULL condition and acquisition restarts.

BUSY Front Panel LED

The BUSY red LED on the digitizer front panel lits when at least one of the following condition is reached:

- The board is not available to accept the triggers because of the conversion dead-time (SAMLONG).
- The board is FULL.

UM2748 – DT5743 User Manual Rev. 2

Trigger Management

All the channels of the board share the same trigger (common trigger), which means that they acquire an event simultaneously and in the same way (a determined number of samples and position with respect to the trigger).

The common board trigger is generated basing on different trigger sources:

- Software trigger: produced via a software command.
- External trigger: received via the front panel TRG-IN signal.
- **Self-trigger:** generated by the individual discriminator, with programmable threshold, placed on each analog channel. The two self-trigger signals coming from a couple of adjacent channels then generate a single trigger request. The trigger requests from all the couples finally contribute to the common board trigger generation.
- Coincidence between channels.
- Programmable majority of the trigger requests.

As a common board trigger is issued, the analog buffers related to that trigger are frozen, then digitized by the 12-bit ADCs, finally stored into the digital memory buffer and so available for readout (refer to Sect. **Sampling in the Analog Memory**).

The analog-to-digital conversion process is affected by a dead time during which the module cannot handle other triggers. This dead time depends on the number of samples to be digitized (13 μ s + (N_{samples} / 16) * 1.75 μ s). The DT5743 features a maximum dead time of 125 μ s (@ 1024-sample recording).

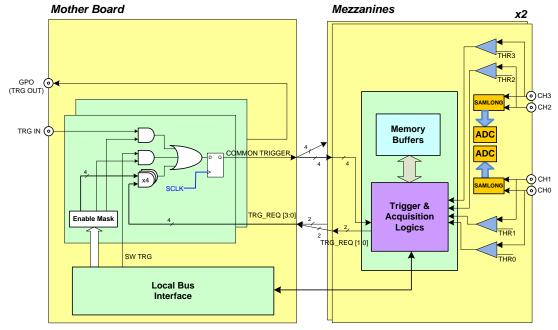


Fig. 8.15: Trigger management block diagram

Software Trigger

Software triggers are internally generated via a software command over USB or Optical Link (through the WaveCatcher software or the SendSWTrigger() function of the CAENDigitizer library).

External Trigger

A TTL or NIM external signal can be provided in the front panel TRG-IN connector (configurable through the WaveCatcher software or the Set/GetExtTriggerInputMode() function of the CAENDigitizer library). The external trigger is synchronized with the internal 100 MHz trigger clock.

Self-Trigger

The DT5743 is equipped with a discriminator with a 16-bit programmable threshold on each channel, which permits generating a self-trigger signal when the digitized input pulse exceeds the threshold value. The self-triggers of each couple of adjacent channels are then processed to provide out a single trigger request. The trigger requests are propagated to the central trigger logic to produce the common trigger, which is finally distributed back to all channels causing the event acquisition (see Fig. 8.15). Fig. 8.16 schematizes the self-trigger generation, the trigger request and common trigger logic.

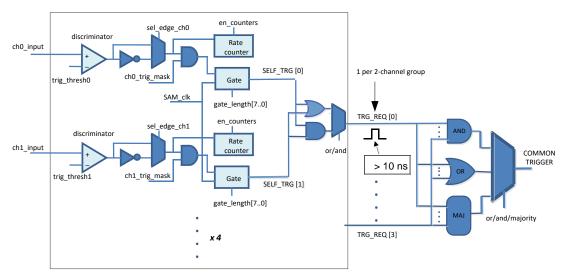


Fig. 8.16: Self-trigger generation, trigger request and common trigger logic

Tab. 8.1 shows the library functions involved in the self-trigger management.

Signal/Function	Reference Library Function
Trig_thresh0/1	SetChannelTriggerThreshold()
sel_edge_ch0/ch1	SetTriggerPolarity()
ch0/ch1_trig_mask	SetChannelSelfTrigger()
gate_length[7:0]	SetChannelPairTriggerLogic()
or/and	SetChannelPairTriggerLogic()
or/and/majority	SetTriggerLogic()

 Tab. 8.1: Map of available CAENDigitizer library functions for the self-trigger management

The *SetChannelPairTriggerLogic()* function of CAENDigitizer library programs the FPGA in order the self-trigger to be a pulse of configurable width (see **Fig. 8.17**).

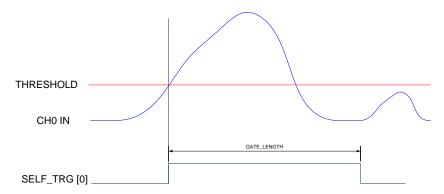


Fig. 8.17: Self-Trigger generation

The SetChannelPairTriggerLogic() function of CAENDigitizer library programs the FPGA in order the trigger request for a couple of adjacent channels to be the AND or OR of the relevant self-trigger signals (see Fig. 8.16).

The SetTriggerLogic() function of CAENDigitizer library programs the FPGA in order the common trigger to be the OR, the AND or the Majority of the enabled trigger requests (see Fig. 8.16).

Default Conditions: by firmware default, the FPGA is programmed so that:

- All the channels are disabled to generate trigger requests, while the external trigger and software trigger are enabled.
- Each trigger request is the OR of two pulses whose width is fixed by default depending on the board operating frequency: 15 ns (@3.2 GS/s); 20 ns (@1.6 GS/s); 30 ns (@0.8 GS/s); 50 ns (@0.4 GS/s).
- The common trigger is generated as the OR of the enabled trigger requests.

Trigger Coincidence Level

T. b. d.

Majority Level

According to the scheme of **Fig. 8.16**, it is possible to configure the board for the common trigger to be the result of the majority operation among the trigger requests coming from the channel couples. This option and the majority level are configurable through the <code>SetTriggerLogic()</code> function of CAENDigitizer library or by the WaveCatcher software.

The majority level can be set in the range:

[0: (number of couples -1)]

where majority level = 0 means that the common trigger is issued when at least the trigger request from one couple arrives.

Trigger Distribution

As described in Sect. **Trigger Management**, the OR of all the enabled trigger sources (only software trigger and external trigger by default firmware), synchronized with the internal clock, becomes the common trigger of the board and is fed in parallel to all channels, which consequently provokes the capture of an event.

A Trigger Out signal is also generated on the relevant front panel GPO connector (NIM or TTL) for the common trigger signal external propagation. Trigger Out logic is described in **Fig. 8.18**, where only the software trigger is propagated out by firmware default (red path).

The involved CAENDigitizer library functions are:

- SetSWTriggerMode()
- SetExtTriggerInputMode()
- SetChannelSelfTrigger()

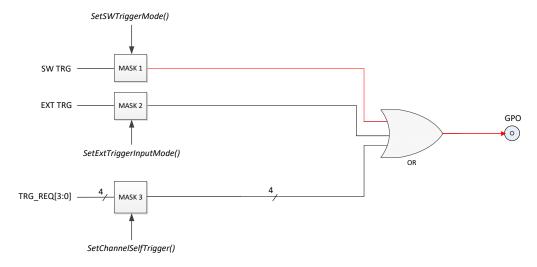


Fig. 8.18: Trigger configuration of GPO front panel connector

Test Pattern Pulser

Each input channel is equipped with an individual pulser. Whereas the pulse amplitude is fixed (\sim 0.7 V with no cable plugged, half this value otherwise), the pattern can be programmed over 16 consecutive bits of the SAMLONG main clock and will be sent every 3.5 μ s (see example on **Fig. 8.19**). This permits an easy testing of the board functionality, as well as it gives the possibility to use the board as a reflectometer. As this pulse pattern is produced from an autonomous clock source, trigger can be set on the discriminators.

Pulser function is fully managed by WaveCacther software. Reference CAENDigitizer library functions for this feature are: Enable / DisableSAMPulseGen(), SendSAMPulse().

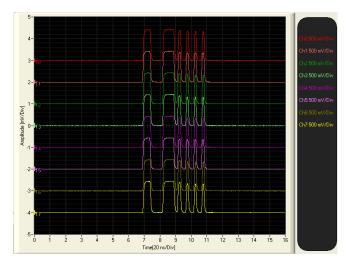


Fig. 8.19: FPGA Test pulse with 0xC755 pattern

Each channel can make use of his pulser as a reflectometer. An example of this application is shown on **Fig. 8.20**, where a 40-ns wide square pulse produced internally is sent to a 1-meter open cable connected to the board.

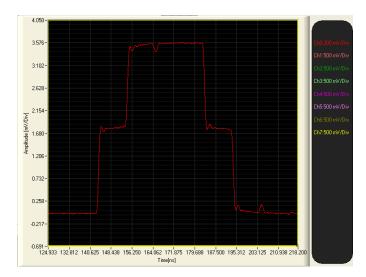


Fig. 8.20: FPGA Test pulse in reflectometer mode

Hit Rate Monitor

Each input channel is equipped with an individual hit rate monitor. As shown on Fig. 8.21, the latter is based on two counters, one counting the number of hits crossing the programmed discriminator threshold (TRIG_COUNT), the other counting the time elapsed with a 1-MHz clock (TIME_COUNT). These counters are reset and restarted after each read access. Their content is stored into the event data (see Sect. Event Structure). As soon as any of them saturates, both are frozen, and thus their values are always valid. The rate counters work up to ~400 MHz and, if this information is memorized long enough in the software along events, rate measurement can work as low as ~0.1 Hz.

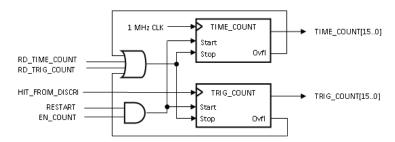


Fig. 8.21: Principle of the Hit Rate Monitor

Veto for the Trigger Rate Counter

It is possible to configure the board to inhibit the trigger counting within an adjustable time window after the digitization starts. This option can be used to reject unwanted after-pulses and is configurable through the SetSAMTriggerCountVetoParam() function of CAENDigitizer library.

Reset, Clear and Default Configuration

Global Reset

Global Reset is performed at Power ON of the module or via software by the *SendSWtrigger()* function of CAENDigitizer library. It allows to clear the data off the Output Buffer, the event counter and performs a FPGAs global reset, which restores the FPGAs to the default configuration. It initializes all counters to their initial state and clears all detected error conditions.

Memory Reset

The Memory Reset clears the data off the Output Buffer.

The Memory Reset can be forwarded by the ClearData() function of CAENDigitizer library.

Timer Reset

The Timer Reset allows to initialize the timers which allow to tag an event (Event Time Tag and TDC described at Sect. **Event Structure**). The Timer Reset can be forwarded with a pulse sent to the front panel GPI input (leading edge sensitive).

Data Transfer Capabilities and Events Readout

In the DT5743, each pair of input channels share a SRAM memory in the channel FPGA that is organized into buffers. Once they are written in the memory, events become available for readout via USB or Optical Link. During the memory readout, the board can continue to store more events (independently from the readout) on the free buffers. This guarantees that no dead time due to the acquisition process (i.e. readout) occurs until the memory becomes full. The only dead time the board remains affected is due to the A/D conversion.

Although the memories are SRAMs, addresses are taken from a FIFO. Therefore, data are read from the memories sequentially, according to the selected Readout Logic, from a memory space mapped on 4 Kb (0x0000÷0x0FFC).

The events are readout sequentially and completely, starting from the Header of the first available event, followed by the Trigger Time Tag, the Event Counter and all the samples of the group channels (from 0 to 1). Once an event is completed, the relevant memory buffer becomes free and ready to be written again (old data are lost). After the last word in an event, the first word (Header) of the subsequent event is readout. It is not possible to readout an event partially.

The board supports 32-bit single data readout and block transfers.

Block Transfers

The Block Transfer readout mode allows to read N complete events sequentially, where N is set by using the MaxNumEventsBLT() function of CAENDigitizer library.

When developing programs, the readout process can be implemented on different basis:

- Using Interrupts: as soon as the programmed number of events is available for readout, the board sends an interrupt to the PC over the optical communication link (not supported by USB).
- Using Polling (interrupts disabled): by performing periodic read accesses to a specific register of the board it is
 possible to know the number of events present in the board and perform a BLT read of the specific size to read
 them out.
- Using **Continuous Read** (interrupts disabled): continuous data read of the maximum allowed size (e.g. total memory size) is performed by the software without polling the board. The actual size of the block read is determined by the board that terminates the BLT access at the end of the data, according to the configuration of the *SetMaxNumEventsBLT()* function above mentioned. If the board is empty, the BLT access is immediately terminated and the "Read Block" function will return 0 bytes (it is the *ReadData()* function of CAENDigitizer Library).

Whatever the method from above, it is suggested to ask the board for the maximum of the events per block being set. Furthermore, the greater this maximum, the greater the readout efficiency, despite of a greater memory allocation required on the host station side that is actually not a real drawback, considering the features of the personal computers available on the market.

Single Data Transfer

This mode allows to readout a word per time, from the header (actually 4 words) of the first available event, followed by all the words until the end of the event, then the second event is transferred. The exact sequence of the transferred words is shown in Sect. **Event Structure**.

It is suggested, after the 1st word is transferred, to check the TOTAL EVENT SIZE information and then do as many cycles as necessary (actually TOTAL EVENT SIZE -1) in order to read completely the event.

Optical Link and USB Access

The board houses a USB2.0 compliant port, providing a transfer rate up to 30 MB/s, and a Daisy-chainable Optical Link (communication path which uses optical fibre cables as physical transmission line) providing transfer rate up to 80 MB/s. Therefore, it is possible to connect up to eight (8) DT5743 boards to a single A2818 PCI Optical Link Controller or up to thirty-two (32) DT5743 boards to a single A3818 PCIe Optical Link Controller (4-link A3818C version). Detailed information on CAEN PCI/PCIe controllers can be find on CAEN website at the path:

Home / Products / Modular Pulse Processing Electronics / PCI/PCIe / Optical Controllers

The parameters for read/write accesses via optical link are Address Modifier, Base Address, data Width, etc.; wrong parameter settings cause Bus Error.

It is possible to enable the module to broadcast an interrupt request on the Optical Link; the enabled Optical Link Controllers propagate the interrupt on the PCI bus as a request from the Optical Link is sensed. Interrupts are managed at the CAENDigitizer library level (see "Interrupt Configuration" in [RD4]).

9 Drivers & Libraries

Drivers

To interface with the DT5743, CAEN provides the drivers for all the different types of physical communication channels featured by the board and compliant with Windows® and Linux® OS:

• **USB 2.0 Drivers** are downloadable on CAEN website (www.caen.it) in the "Software/Firmware" tab at the DT5743 web page (**login required**).



Note: For Windows® OS, the USB driver installation is detailed in [RD2].

Optical Link Drivers are managed by the A2818 PCI controller or the A3818 PCIe controller. The driver
installation package is available on CAEN website in the "Software/Firmware" area at the A2818 or A3818
page (login required)



Note: For the installation of the Optical Link driver, refer to the User Manual of the specific controller.

Libraries

CAEN libraries are a set of middleware software required by CAEN software tools for a correct functioning. These libraries, including also demo and example programs, represent a powerful base for users who want to develop customized applications for the digitizer control (communication, configuration, readout, etc.):

CAENDigitizer is a library of functions designed specifically for the Digitizer family and it supports also the
boards running the DPP firmware. The CAENDigitizer library is based on the CAENComm library. For this
reason, the CAENComm libraries must be already installed on the host PC before installing the
CAENDigitizer.

The CAENDigitizer installation package is available on CAEN website in the 'Download' area at the CAENDigitizer Library page. Reference document: [RD4].

CAENComm library manages the communication at low level (read and write access). The purpose of the
CAENComm is to implement a common interface to the higher software layers, masking the details of the
physical channel and its protocol, thus making the libraries and applications that rely on the CAENComm
independent from the physical layer. Moreover, the CAENComm requires the CAENVMELib library (access to
the VME bus) even in the cases where the VME is not used. This is the reason why CAENVMELib has to be
already installed on your PC before installing the CAENComm.

The CAENComm installation package, and the link to the required CAENVMELib, is available on CAEN website in the 'Download' area at the CAENComm Library page. Reference document: [RD5].

WHEN TO INSTALL CAEN LIBRARIES:

WINDOWS® compliant CAEN software = NOT. CAEN software for Windows® OS are stand-alone, which means the program locally installs the DLL files of the required libraries.

LINUX © **compliant CAEN software = YES.** CAEN software for Linux® OS is not stand-alone. The user must install the required libraries apart to run the software.

WINDOWS[®] and **LINUX**[®] compliant customized software = **YES**. The user must install the required libraries apart in case of custom software development.

The CAENComm (and so the CAENDigitizer) supports the following communication channels:

 $PC \rightarrow USB \rightarrow DT5743$

 $PC \rightarrow PCI (A2818) \rightarrow CONET \rightarrow DT5743$

 $PC \rightarrow PCIe (A3818) \rightarrow CONET \rightarrow DT5743$

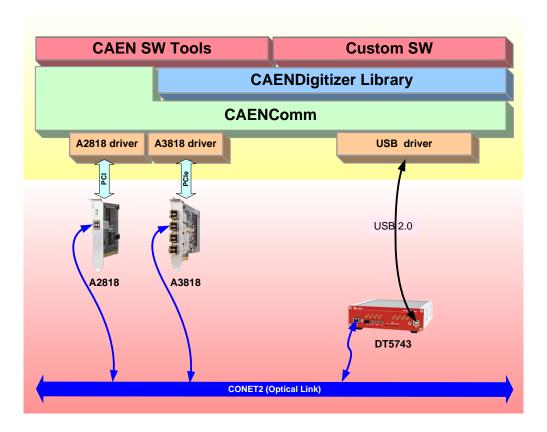


Fig. 9.1: Required libraries and drivers

10 Software Tools

CAEN provides software tools to interface with the DT5743, which are available for <u>free download</u> on CAEN website (www.caen.it) at:

Home / Products / Firmware/Software / Digitizer Software

WaveCatcher

The DT5743 can be fully controlled through the WaveCatcher software:

Home / Products / Firmware/Software / Digitizer Software / Readout Software

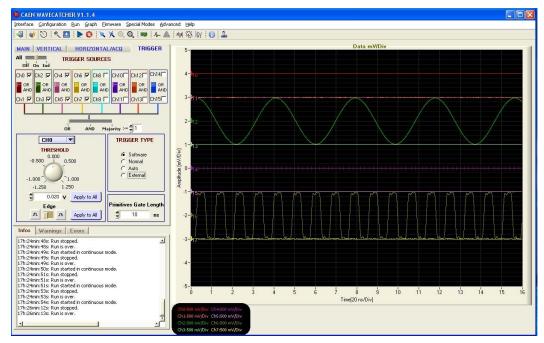


Fig. 10.1: WAVECatcher software

The WaveCatcher software is a complete tool made by CNRS/IN2P3/LAL and capable to control a single board of the 743 Digitizer series.

The tool offers a graphical user-friendly interface which permits to take benefit of all the functionalities of the hardware: sampling frequency, different trigger modes, waveforms and charge data acquisition, channel pulses, etc.

The WaveCatcher also features different tools for on-line measurements and histograms plotting: graphical cursors, noise level, raw hit rates, charge amplitude and time measurements, time distance histograms between channels (fixed threshold and digital CFD methods), charge histograms, FFT, etc.

All acquired data and computed measurements can be saved to files for further replay or off-line analysis.

The software installation package can be downloaded on CAEN web site (login required) at:

Home / Products / Firmware/Software / Digitizer Software / Readout Software / WaveCatcher

Find the program detailed description and usage descripted in [RD6].



Note: the WaveCatcher is available for Windows® platforms (32 and 64-bit) as a stand-alone version (all the required CAEN libraries are installed locally with the program). Only the drivers for the specific communication link must be installed apart by the user.

CAENUpgrader

The CAENUpgrader is a software composed of command line tools together with a Java Graphical User Interface.

With a DT5743, the tool allows in few easy steps to:

- Upload different firmware versions on the digitizer
- Select which copy of the stored firmware must be loaded at power-on.
- Read the firmware release of the digitizer and the bridge (if included in the communication chain)
- upgrade the internal PLL
- get the board info file



Note: CAENUpgrader locally stores a set of ready-to-use basic PLL programming files. Special files must be generated by CAEN upon user's specifications by contacting the Support Service (see Chap. **13**)

The program relies on CAENComm and CAENVMELib libraries (see Chap. 9), and requires the third-party Java SE 8 update 40 (or higher).

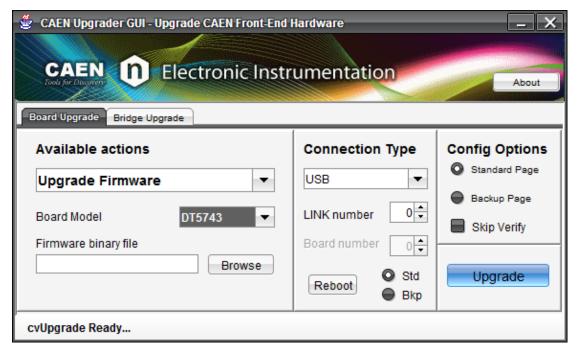


Fig. 10.2: CAENUpgrader Graphical User Interface

The software installation package can be downloaded on CAEN web site (login required) at:

Home / Products / Firmware/Software / Digitizer Software / Configuration Tools / CAENUpgrader

The reference document for installation instructions and program detailed description is [RD1].



Note: the CAENUpgrader is available for Windows® platforms (32 and 64-bit) as a stand-alone version (all the required CAEN libraries are installed locally with the program). Only the drivers for the specific communication link must be installed apart by the user. The CAENUpgrader version for Linux® platform is not stand-alone, so it needs the required libraries to be installed apart by the user.

CAENComm Demo

The CAENComm Demo is a simple program developed in C/C++ source code and provided both with Java^m and LabVIEW^m GUI interfaces. The demo mainly allows for a low-level full board configuration by direct read/write access to the registers and may be used as a debug instrument.



Fig. 10.3: CAENComm Demo graphical interfaces

The Demo is included in the CAENComm library installation Windows® package, which can be downloaded on CAEN web site (login required) at

Home / Products / Firmware/Software / Digitizer Software / Software Libraries / CAENComm Library

The reference document for installation instructions and program detailed description is [RD5].



Note: the CAENComm Demo is available for Windows® platforms (32 and 64-bit) and requires CAENComm and CAEVMElib libraries as additional software to be installed apart by the user (see Chap. 9).

11 HW Installation

Power-On Sequence

To power on the board, follow the procedure below:

- 1. Connect the 12V DC power supply to the DT5743 through the DC input rear connector;
- 2. power up the DT5743 through the ON/OFF rear switch

See Sect. Rear Panel to identify the relevant components

Power-On Status

At power-on, the module is in the following status:

- the Output Buffer is cleared;
- registers are set to their default configuration

After power-on, the correct front panel LEDs status is when only the NIM and PLL LOCK remain ON (see Fig. 11.1).

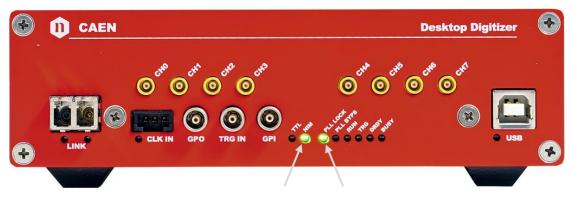


Fig. 11.1: Front panel LED status after power-on

12 Firmware and Upgrades

The board hosts one FPGA on the mainboard and one FPGA on each mezzanine (i.e. one FPGA serves 4 channels). The channel FPGAs firmware is identical. A unique file is provided, that updates all the mezzanine FPGAs and the mainboard FPGA at the same time.

ROC FPGA MAINBOARD FPGA (Readout Controller + VME interface):

FPGA Altera Cyclone EP1C20.

AMC FPGA MEZZANINE FPGA (ADC readout/Memory Controller):

FPGA Altera Cyclone EP3C16

The firmware is stored onto the on-board FLASH memory. Two copies of the firmware are stored in two different pages of the FLASH, referred to as Standard (STD) and Backup (BKP). The board is usually factory equipped with the same firmware version on both pages.

At power-on, a microcontroller reads the FLASH memory and programs the module automatically loading the first working firmware copy, that is the STD one in normal operating.

Firmware Upgrades

The default firmware updates are available for download on CAEN website in the Software/Firmware tab at the DT5743 web page (login required):

Home / Products / Modular Pulse Processing Electronics / VME / Digitizers / DT5743

It is possible to upgrade the board firmware via USB or Optical Link by writing the FLASH with the CAENUpgrader software (see Chap. 10).

IT IS STRONGLY SUGGESTED TO OPERATE THE DIGITIZER UPON THE STD COPY OF THE FIRMWARE. UPGRADES ARE SO RECOMMENDED ONLY ON THE STD PAGE OF THE FLASH. THE BKP COPY IS TO BE INTENDED ONLY FOR RECOVERY USAGE. IF BOTH PAGES RESULT CORRUPTED, THE USER WILL NO LONGER BE ABLE TO UPLOAD THE FIRMWARE VIA USB OR OPTICAL LINK AGAIN AND THE BOARD NEEDS TO BE SENT TO CAEN IN REPAIR!

Firmware File Description

The extension of the programming firmware file is CFA (CAEN Firmware Archive), which is a sort of archive format file aggregating all the firmware files compatible with the same family of digitizers.

The firmware file name follows this general scheme:

x743_revX.Y_W.Z.CFA

where:

- x743 are all the boards the file is compliant to: DT5743, N6743, V1743, VX1743;
- X.Y is the major (X) and minor (Y) revision number of the mainboard FPGA;
- W.Z is the major (W) and minor (Z) revision number of the mezzanine FPGA.

Troubleshooting

In case of upgrading failure (e.g. STD page is corrupted), the user can try to reboot the board: after a power cycle, the system automatically programs the board from the alternative FLASH page (e.g. BKP page), if this is not corrupted as well. The user can so perform a further upgrade attempt on the STD page to restore the firmware copy.

NOTE THAT old versions of the digitizer motherboard have a slightly different FLASH management. Use CAENUpgrader 1.6.0 or higher to get the Board Info file from the board ("Get Information" function) and check if FLASH Type = 0.

In this case, at power-on the microcontroller loads the firmware copy from the STD page of the FLASH.

When a failure occurs while upgrading the STD page, which compromises the communication with the DT5743, the user can perform the following recovering procedure as first attempt:

- Force the board to reboot loading the copy of the firmware stored on the BKP page of the FLASH. For this purpose, the Reboot option in CAENUpgrader software tool must be used (see **Fig. 10.2**).
- Use CAENUpgrader to read the firmware revision (in this case the one of the BKP copy). If this succeeds, it is possible now to communicate again with the board.
- Use CAENUpgrader to load again the firmware on the STD page, then power-cycle in order the board to get operative again.

If neither of the procedures here described succeeds, the board needs to be sent back to CAEN in repair (see Chap. 13).

13 CAEN Support

CAEN support services are available for the user by accessing the *Support & Services* area on CAEN website at www.caen.it.

Returns and Repairs

Users who need for product(s) return and repair must fill and send the Product Return Form (PRF) in the *Returns and Repairs* area at *Home / Support & Services*, describing the specific failure. A printed copy of the PRF must also be included in the package to be shipped.

Contacts for shipping are reported on the website at *Home / Contacts*.

Technical Support Service

CAEN makes available the technical support of its specialists at the e-mail addresses below:

support.nuclear@caen.it (for questions about the hardware)

support.computing@caen.it (for questions about software and libraries)



Electronic Instrumentation



CAEN SpA is acknowledged as the only company in the world providing a complete range of High/Low Voltage Power Supply systems and Front-End/Data Acquisition modules which meet IEEE Standards for Nuclear and Particle Physics. Extensive Research and Development capabilities have allowed CAEN SpA to play an important, long term role in this field. Our activities have always been at the forefront of technology, thanks to years of intensive collaborations with the most important Research Centres of the world. Our products appeal to a wide range of customers including engineers, scientists and technical professionals who all trust them to help achieve their goals faster and more effectively.



CAEN S.p.A.
Via Vetraia, 11
55049 Viareggio
Italy
Tel. +39.0584.388.398
Fax +39.0584.388.959
info@caen.it
www.caen.it

CAEN GmbH

Klingenstraße 108

D-42651 Solingen
Germany
Phone +49 (0)212 254 4077

Fax +49 (0)212 25 44079

Mobile +49 (0)151 16 548 484
info@caen-de.com

www.caen-de.com

CAEN Technologies, Inc. 1140 Bay Street - Suite 2 C Staten Island, NY 10305 USA Tel. +1.718.981.0401 Fax +1.718.556.9185 info@caentechnologies.com www.caentechnologies.com

CAEN
Tools for Discovery



Electronic Instrumentation

UM2748 - DT5743 - User Manual rev. 2 - February 9th, 2016

00100-12-DT5743-MUTX

Copyright @ CAEN SpA. All rights reserved. Information in this publication supersedes all earlier versions. Specifications subject to change without notice.