

Manualslib.com - The Global Manuals Library

[Manuals](#) / [Brands](#) / [Judge Manuals](#) / [Bread Maker](#) / [JEA43](#) / [Instruction manual & recipe booklet](#) / PDF

JUDGE JEA43 INSTRUCTION MANUAL & RECIPE BOOKLET

Quick Links

[Recipe Book](#)

[Programme 1: Basic](#)

Table of Contents

Identifying the parts of your Judge Digital Bread Maker

Functions

Before First Use

Cleaning

Operating Instructions

Measuring Ingredients

Adding Ingredients

Flour

Sugar

Salt

Bread Mix

Water and Other Liquids

Recipes and Baking Tips

Quick Programme

Ultra Fast Programmes

Yogurt

Troubleshooting

Cautions

Specification

Recipe Book

Controls

Before you start

Crusty White Farmhouse Loaf

French Loaf

When the Programme ends

PROGRAMME 1: BASIC

PROGRAMME 2: FRENCH

Large Granary Loaf

Quick Banana and Walnut Cake

PROGRAMME 3: WHOLE WHEAT

PROGRAMME 4: QUICK

Small Fruit Loaf

Ultra Fast Small White Loaf

PROGRAMME 5: SWEET

Ultra Fast Large White Loaf

Granary Bread Rolls

PROGRAMME 7: ULTRA FAST

Chorizo, Mushroom and Pesto Pizza

Marmalade

Fruit Loaf Cake

PROGRAMME 10: CAKE

Small Sandwich Loaf

Gluten Free Crusty Bread

1 Litre Home Made Plain Yoghurt

Tips for Home Made Yoghurt

Other ManualsLib Projects



Digital Bread Maker

Model No: JEA43



Instruction Manual & Recipe Book

Please read this instruction manual carefully before use and save for later reference.

Version 003 2018




UNPACK YOUR DIGITAL BREAD MAKER CAREFULLY AND REMOVE PACKING PIECES, LABELS AND STICKERS BEFORE USE.

Identifying the parts of your Judge Digital Bread Maker

(with Part Numbers for customer replaceable items)



- 10 Time + (Increase) Button
- 11 Time - (Decrease) Button
- 12 Programme Running Indicator
- 13 Start/Stop Button
- 14 Menu Button
- 15 Colour Button
- 16 Loaf Size Button
- 17 Selected Programme
- 18 Time Left
- 19 Selected Loaf Colour
- 20 Selected Loaf Weight

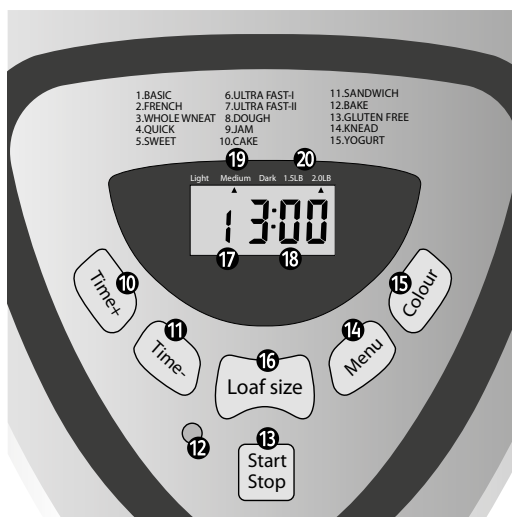

Functions

The functions provided by the Controls and Indicators above are as follows. Please familiarise yourself with these before operating the Bread Maker.

At Power-On

When the Bread Maker is plugged in and switched on at the mains, a single long “beep” will sound, the Selected Programme ⑰ will be displayed as ‘1’ and the Time Left ⑱ will be displayed as 3:00, in the format h:mm, with the colon “:” displayed steadily. The Selected Loaf Colour ⑲ and Weight ⑳ are each indicated by a small triangle and are initially displayed as Medium and 2lb, respectively.

Programme Select

There are 15 different numbered programmes available, listed at the top of the Controls & Indicators panel ⑨; these are described in more detail under “Programmes”. The selected programme number (1 to 15) is shown in the digital display ⑰.

Pressing the Menu Button ⑭ increases the programme number with each press, until Programme 15 is reached, after which it will cycle to Programme 1.

Loaf Colour

Baking programmes allow three alternative loaf colours to be selected, Light, Medium or Dark, defaulting to Medium. The Selected Loaf Colour ⑲ is indicated by a small triangle and selected using the Loaf Colour Button ⑮, which cycles through the three options.

Loaf Size/Weight

Baking programmes allow two alternative loaf sizes to be selected, 1.5lb or 2.0lb (approximately 0.7kg or 0.9kg), defaulting to 2.0lb. The Selected Loaf Weight ⑳ is indicated by a small triangle and selected using the Loaf Size Button ⑯, which alternates between 1.5lb and 2.0lb.

Starting and Stopping the Programme

When the required programme (with any adjustment - see Programme Time) has been selected, pressing the Start/Stop Button ⑬ will start the programme. The Program Running Indicator ⑫ will illuminate and the Time Left ⑱ display will count down, with the “:” flashing. All buttons except Stop/Start are disabled during this period.

The programme can be stopped at any time by pressing the Start/Stop Button ⑬ and holding for 3 seconds. A single long “beep” will sound and the display will return to its Power-on status (see “At Power-on”).

Programme Time Delay

It is possible to delay the start of many of the programmes, for example if you want a loaf to be freshly baked for the following morning. Pressing the Time+ Button ⑩ repeatedly will increase the overall time by delaying the start in increments of 10 minutes; pressing the Time- Button ⑪ reduces this delay. Holding down either button causes the time to adjust rapidly in increments of 10 minutes. The total Time Left ⑱ (delay + baking time) is displayed; the maximum extended programme time is 13 hours.

For example, if you wish your bread to be ready for 07:00 am the following day and it is now 08:30 pm (20:30) today, you need your bread to finish baking in 10 hours and 30 minutes. After adding your ingredients, you can select your required programme and the total programme time will be displayed as Time Left ⑱, for example 3:50 for Programme 1. Use the Time+ ⑩ and Time- ⑪ Buttons to adjust the displayed Time Left ⑱ to 10:30. Once the Start/Stop Button ⑬ is pressed, the Time Left ⑱ will count down until it reaches 3:50, then the baking programme will begin and run for 3 hours and 50 minutes.

DO NOT USE THE PROGRAMME TIME DELAY WITH EASILY PERISHABLE INGREDIENTS, SUCH AS EGGS, FRESH MILK, FRUIT OR ONIONS.

Keep Warm

After baking bread, but not other programmes, the Bread Maker will automatically keep the bread warm for up to 60 minutes, or until the Start/Stop Button **15** is pressed.

Power Interruptions

The Bread Maker has a memory feature, to allow it to continue after an interruption to the mains power during a programme. If the power is restored within 15 minutes, the Bread Maker will resume the programme automatically. Otherwise, the programme will have to be reselected and restarted, with fresh ingredients unless the interrupted programme is still in the kneading phase.

Programmes

The following programmes are available. Some buttons have no effect, or have a different function in certain programmes, as shown in the table.

Programme	Description	Time±	Loaf Size	Colour
1 Basic	Knead, rise and bake normal bread. You may also add ingredients for flavouring	✓	2lb/1.5lb	L/M/D
2 French	Knead, rise and bake with a longer rise time, for crisper crust and lighter texture	✓	2lb/1.5lb	L/M/D
3 Whole Wheat	Knead, rise and bake with a longer preheat time to allow the grain to soak up water and expand	N/R	2lb/1.5lb	L/M/D
4 Quick	Knead, rise and bake with baking soda or baking powder - smaller with dense texture	✓	1.5lb	L/M/D
5 Sweet	Knead, rise and bake sweet (crisp) bread	✓	2lb/1.5lb	L/M/D
6 Ultra Fast I	Knead, rise and bake in shortest time. Usually loaf is smaller and rougher than using Quick	✗	1.5lb	L/M/D
7 Ultra Fast II	As Ultra Fast - I, but for larger loaf	✗	2lb	L/M/D
8 Dough	Knead and rise but no bake, to allow the dough to be removed and shaped, e.g. for rolls, pizza, steamed bread	✓	✗	✗
9 Jam	For boiling jams and marmalades	✗	✗	✗
10 Cake	Knead, rise and bake cake mixture with baking soda or baking powder	✓	✗	✗
11 Sandwich	Knead, rise and bake light texture bread with a thinner crust	✓	2lb/1.5lb	✗
12 Bake	Bake, no knead or rise. Can be used to extend baking time	✓	✗	✗
13 Gluten Free	Knead, rise and bake using gluten-free ingredients	✓	2lb/1.5lb	L/M/D
14 Knead	Knead only, no rise or bake	✗	✗	✗
15 Yogurt	Making yogurt from milk and starter. Maintains ingredients at correct temperature	8h/6h	✗	✗

✓ Function available ✗ Function unavailable


N/R Function available but not recommended L/M/D Light/Medium/Dark

Before First Use

Remove any labels and/or swing tickets.

In order to remove any residue from the manufacturing process before use, proceed as follows:

1. Follow the “Cleaning” instructions. Ensure the parts are completely dry.
2. Place the Bread Pan ③ in the Bread Maker Body ① at an angle (see diagram) and adjust until it drops home. Rotate the Bread Pan ③ clockwise to lock into place.

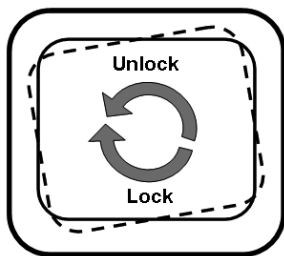

3. Locate the Kneading Blade ④ on the spindle in the centre of the Bread Pan ③ and push down until it is seated.
4. Select the Bake Programme ⑫ using the Menu Button ⑭. Start the programme using the Start/Stop Button ⑬.
 - It is normal for smoke and a hot smell to be emitted during this process; manufacturing residues are being removed.
5. After 10 minutes, stop the programme using the Start/Stop Button ⑬. Allow the machine to cool for 20 minutes.
6. Repeat steps 1 to 3 above to clean and re-assemble the Bread Maker.
 - DO NOT IMMERSE ANY PART OF THE BREAD MAKER BODY ① IN WATER

Cleaning

Disconnect the Bread Maker from the power and allow to cool before cleaning.

1. Rotate the Bread Pan ③ counterclockwise to unlock (see diagram). Lift out of the Bread Maker Body ①.
2. Hold the Kneading Blade ④ firmly and pull upwards to remove it from the spindle in the centre of the Bread Pan ③.
 - If the Kneading Blade ④ is difficult to remove, fill the Bread Pan ③ with hot water and allow to soak for about 30 minutes.
3. Wash the Bread Pan ③ and Kneading Blade ④ in warm water and detergent or washing-up liquid. Do not use any harsh or abrasive cleaning materials. Both these items are dishwasher safe.
4. Wash the Cup ⑤, Spoon ⑥ and Hook ⑦ in warm water and detergent or washing-up liquid. Do not use any harsh or abrasive cleaning materials.
5. Wipe the Bread Maker Body ① and Lid ② with a cloth, slightly dampened with warm water and detergent. Do not use any abrasive cleaning materials.
6. Dry all parts thoroughly before storing, when the Lid ② should be left closed.

Operating Instructions

Please familiarise yourself with the “Functions” provided by the Controls and Indicators before operating the Bread Maker.

1. Place the Bread Pan ❸ in the Bread Maker Body ❶ at an angle (see diagram) and adjust until it drops home. Rotate the Bread Pan ❸ clockwise to lock into place.
2. Locate the Kneading Blade ❹ on the spindle in the centre of the Bread Pan ❸ and push down until it is seated.
3. Measure and add the ingredients to the Bread Pan ❸ in accordance with your recipe book or the instructions on a ready bread mix, but subject to the guidance and limits given under “Ingredients”. Close the Lid ❷ gently.
4. Insert the Plug ❺ into a mains socket.
5. Select the desired programme using the Menu Button ❹.
6. Select the required crust colour, using the Colour Button ❶ (not available in all programmes).
7. Select the appropriate loaf size, using the Loaf Size Button ❷ (not available in all programmes).
8. If required, set the start delay, using the Time+ ❸ and Time- ❹ Buttons (not available in all programmes).
9. Start the programme, using the Start/Stop Button ❶.
10. During the programme, if the Bread Maker pauses and sounds 10 short “beeps”, you may add additional ingredients, such as fruit.
11. When the programme is completed, the Bread Maker will pause and sound 10 short “beeps”, followed by one long “beep”. It will keep the bread warm for a further 60 minutes if left.
 - To halt the Keep Warm function, or stop the programme before completion, press and hold the Start/Stop Button ❶ for about 3 seconds until a long “beep” sounds.
12. Rotate the Bread Pan ❸ counterclockwise to unlock (see diagram). Lift out of the Bread Maker Body ❶.
 - THE BREAD PAN AND BREAD WILL BE VERY HOT. ALWAYS HANDLE WITH CARE AND USE OVEN MITTS OR GLOVES.
13. Use a non-metallic spatula to gently loosen the bread from the sides of the Bread Pan ❸.
14. Turn the Bread Pan ❸ upside down onto a rack or clean cooking surface and gently shake until the bread falls out. Allow to cool for 20 minutes before slicing.
15. If the Kneading Blade ❹ is stuck in the bread, use the Hook ❷ to remove it.
16. Disconnect the Bread Maker from the mains power.

Ingredients

This section introduces the main ingredients used in baking bread and making yogurt and how to measure them. Exact instructions will be found in your recipe book or the ingredient packet.

Measuring Ingredients

The quantity of ingredients you use is very important to achieving good results. To assist in this, both a Measuring Cup **5**, which is graduated in liquid ounces, millilitres and fractions of a cup, and a Measuring Spoon **6**, which has a teaspoon and tablespoon measure.

Water, other liquids and larger quantities of dry ingredients such as flour should be measured using the Measuring Cup **5**; ensure you are viewing the cup horizontally. Wash the cup thoroughly between ingredients other than water.

Smaller quantities should be measured using the Measuring Spoon **6**.

Ensure that measured dry powder ingredients are level with the rim of the spoon, for example with a knife blade. Store such ingredients in cool and dry conditions, loosely packed.

THE MAXIMUM QUANTITY OF FLOUR IS 4 CUPS. THE MAXIMUM QUANTITY OF YEAST IS 3 TEASPOONS.

Adding Ingredients

It is important to add ingredients in the correct sequence, as applicable:

Usually, water or other liquid should be added first, then eggs, followed by sugar, salt and flour, then yeast or baking powder as the last ingredient. An exception to this is heavy dough with high rye or wholemeal content, in which case it is advisable to add yeast, then other dry ingredients first, then liquid ingredients. This will give better results from kneading.

Do not allow yeast to come into contact with liquid or salt whilst adding ingredients. This requires that some flour is kept dry to

allow yeast to be added. To add yeast, first make a small indentation in a dry area of flour, then add the yeast to the indentation.

Additional fruit ingredients, such as raisins, should not be included with the original ingredients, as they can lose flavour during mixing. During the following programmes, a series of 10 short “beeps” will sound to indicate that additional ingredients can be added:

- Basic
- French
- Whole Wheat
- Sweet
- Sandwich.

Flour

Flour is the most important ingredient in bread making.

Bread flour (also called “strong flour”) has a high protein content which results in a high gluten production during kneading. It has good elasticity, should rise well and maintain the bread size after rising, to give a larger loaf with good texture.

Wholemeal flour (also called “whole wheat flour”) is made by grinding the entire wheat kernel, so is heavier and contains more nutrients. Bread made from wholemeal flour will tend to be smaller and heavier in texture, so some recipes call for a proportion of bread flour as well.

Plain flour should not normally be used for making bread, except in the Quick Bread and Ultra Fast programmes, or for cakes, mixed with baking soda or baking powder.

Flour made from other grains, such as corn or oatmeal does not produce gluten but can be added to enhance the flavour and produce a rougher texture.

Cake Powder

Cake powder is made by grinding soft wheat or low protein wheat and is specifically intended for making cakes.

Sugar

Sugar provides food for the yeast, as well as adding sweetness to the taste, creating a finer and softer texture and giving colour to the crust. Certain recipes may call for sugars other than white granulated or caster, such as brown sugar.

Yeast

Yeast is a living organism which is nourished by the sugars in the mixture, causing it to ferment and create carbon dioxide gas, which makes the bread rise and gives it its open texture. You can use active dry yeast or instant yeast, with 1 ½ teaspoons of active dry yeast equivalent to 1 teaspoon of instant yeast. Observe the storage instructions on the packet.

If the yeast is inactive or dead, the bread will not rise properly. You can test if the yeast is living as follows:

1. Half fill a cup with warm water (45° to 50°)
2. Dissolve 1 teaspoon of white sugar in the water, then sprinkle 2 teaspoons of yeast over the water; do not stir.
3. Place the cup in a warm place for about 10 minutes.
4. The yeast should produce froth, up to the top of the cup. If it does not, this indicates that it is dead and should not be used.

Salt

Salt can be used to enhance the flavour of the bread. It also strengthens the structure of the gluten and makes it more stretchable. However, it also inhibits the action of the yeast and therefore rising, so it is important not to use too much.

Eggs

Adding lightly beaten eggs can improve bread texture, add nourishment and make the loaf larger. This can also help increase the storage life of the bread.

Fats

Fats (such as butter, margarine or oils) can be added to make bread softer, add flavour and help increase the storage life of the bread.

Baking Powder and Soda

Baking powder or soda is used in the Quick Bread and Ultra Fast programmes, as well as for cakes. When combined with liquid and heated, it produces gas from a chemical reaction, to make the mixture rise.

Bread Mix

A wide variety of ready mixed Bread Mixes are available with all the necessary ingredients and requiring only the addition of water. Follow the instructions on the packet.

Water and Other Liquids

Water is an essential ingredient in making bread. For most types of bread, the initial water temperature should be between 20° and 25°; however, for an Ultra Fast programme, the initial water temperature should be between 48° and 50°, as measured by a cooking thermometer. Water may be replaced by fresh milk, or water mixed with 2 % milk powder, which may enhance the bread flavour and improve crust colour. Some recipes may call for juice (e.g. apple, orange or lemon) to enhance the flavour.

Yoghurt is made from milk, with a starter - see "Baking Tips".

Recipes & Baking Tips

Recipes

See the separate Judge Digital Bread Maker Recipe Book, included with the machine or available at www.horwood.co.uk

Quick Programme

Quick breads are made with baking powder or soda which are activated by moisture and heat. Add liquids first, then dry ingredients. If ingredients collect in the corner of the Bread Pan ❸, you may need to assist the machine mix with a non-metallic spatula.

Ultra Fast Programmes

The water temperature is critical and should be between 48° and 50°, as measured by a cooking thermometer, otherwise the bread will not rise.

Yogurt

Yogurt is made from milk, with a starter. The milk may be skimmed, semi-skimmed, or full fat pasteurised; soya or powdered milk may also be used. Soya milk should be boiled before use and the powdered milk mixture should be filtered before use. The milk should be cooled or warmed to just under 40°.

The starter should preferably be a lactobacillus culture, which is sold for yogurt making; use in the proportions specified on the product packaging. Alternatively, active “live” yogurt can be used, in the proportion of 1 tablespoon to 1 pint of milk. Ensure that the starter is mixed thoroughly with the milk.

Generally, the default programme time of 8 hours should be used, but the alternative time of 6 hours can be selected using the Time+ ❿ or Time- ⓫ Buttons for milk with a high fat content.

- DO NOT DISTURB THE YOGURT DURING THE FERMENTATION PERIOD.

Troubleshooting

Problem	Possible cause(s)	Solution(s)
Display shows H:HH	Starting temperature too high	Stop programme, open Lid ❷, allow to cool for 20 minutes
Display shows E:EE	Temperature sensor fault	Contact Customer Services
Smoke from ventilation slots when baking	Heating element contaminated with ingredients	Unplug, allow to cool, wipe element clean, dry
Bread bottom crust too thick	Bread kept warm for too long, so dries out	Remove bread sooner
Bread difficult to remove	Kneader blade sticking to Bread Pan ❸ shaft	Soak and clean kneader and Bread Pan ❸ before next use
Ingredients not stirred evenly	Wrong programme selected	Select correct programme
	Kneader not rotating properly, possibly because bread mix is too thick	Check rotation without Bread Pan ❸. If OK, use less thick bread mix; otherwise, contact Customer Services
Dry bread and/or crust is not brown	Opening Lid ❷ too often	Do not open Lid ❷ unnecessarily
Bread or dough size too large	Excessive quantity of yeast, flour or water, or ambient temperature too high	Follow recipes correctly, reduce quantities if necessary. Do not operate above 34° ambient
Bread size too small	Yeast insufficient or poor, in contact with salt, water too hot	Check factors suggested and correct as necessary
	Room temperature too low	Do not operate below 15°
Bread collapses in middle during baking	Incorrect flour used	Use bread or strong flour
	Yeast temperature too high	Use yeast at room temperature
	Excessive water	Reduce the amount of water
Bread too heavy or dense	Too much flour or insufficient water	Reduce flour or increase water
	Too many fruit ingredients or too much wholegrain flour	Reduce appropriate ingredients and increase yeast
Bread hollow in middle	Excessive water or yeast, no salt	Adjust ingredients accordingly
	Water temperature too high	Check water temperature
Colour too dark	Excessive sugar	Either use less sugar or stop the programme 5-10 minutes early, then leave in bread pan with cover closed for 20 minutes

- If you think the appliance has a fault, do not attempt to dismantle it and repair it yourself. Check the above possible causes and follow the advice given. If the fault is not corrected contact Judge Customer Services.

Cautions

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Always keep the appliance out of the reach of children.
- Ensure that your home electrical supply corresponds to the requirements of the appliance - see "Specifications".
- Do not connect the Mains Plug into the socket, or use the appliance, if your hands or the appliance are wet.
- Unplug the appliance whenever it is not in use.
- **THE APPLIANCE MUST ALWAYS BE EARTHED** - always connect to a mains socket with an earth connection.
- **THE BREAD PAN AND BREAD WILL BE VERY HOT DURING AND IMMEDIATELY AFTER BAKING. ALWAYS HANDLE WITH CARE AND USE OVEN MITTS.**
- The Power Cable should be positioned so as not to cause an obstruction or to overhang the edge of the surface, where it could accidentally be snagged or pulled by children.
- Ensure that the Power Cable is not near any hot surface.
- Pull the Plug (do not pull Power Cable) to disconnect from mains socket.
- Do not pull the Power Cable to move the appliance.
- If the Power Cable becomes damaged, contact JUDGE Customer Services.
- Do not use the appliance outdoors.
- Do not place the appliance close to a heat source.
- When baking has finished and you have finished using the 'Keep Warm' function, unplug the Bread Maker from the socket.
- The appliance should be used only as instructed and for the purpose for which it was intended; there is potential for injury or damage from misuse.
- This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Do not switch on the appliance without properly placed Bread Pan ❸ filled ingredients.
- Do not use undue force to remove the Bread Pan ❸; this may damage the Bread Pan ❸.
- Metal foils or other materials must not be inserted into the Bread Maker Body ❶ as this can give rise to the risk of a fire or short circuit.
- Never cover the Bread Maker with a towel or any other material; heat and steam must be able to escape freely. A fire can be caused if it is covered by, or comes into contact with combustible material.
- Do not switch on or attempt to operate the appliance if it appears to be faulty in any way - contact Judge Customer Services at the address given in the warranty section.
- Never attempt to make any repair to the appliance yourself - contact Judge Customer Services at the address given in the warranty section.
- **DO NOT IMMERSE THE BREAD MAKER BODY ❶ IN WATER, OR ALLOW ELECTRICAL CONNECTIONS TO GET DAMP.**
- Should the appliance accidentally fall into water, unplug immediately and do not use; contact Judge Customer Services at the address given in the warranty section.
- The appliance is intended for domestic use only.
- Please keep your purchase receipt.

Specification

Name	Model No.	Rated Wattage	Rated Frequency	Rated Power	Capacity
Digital Bread Maker	JEA43	600W	50Hz	230V	2lb



Judge 2 Year Domestic Electrical Guarantee

- The Judge 2 Year Domestic Electrical Guarantee covers the product to be free of defects in materials and workmanship for a period of TWO YEARS from the date of original retail purchase.
- During this period, JUDGE will, at their option, repair or replace defective parts of the product, or replace the product, providing the Use Care and Safety Advice have been followed.
- The Guarantee does not cover damage, defect or failure caused by or resulting from accidents, external damage, alteration, modification, abuse, misuse or misapplication.
- The Guarantee does not cover any damage caused by taking the appliance apart yourself, or attempting to repair the appliance yourself.
- **THE PRODUCT IS INTENDED FOR DOMESTIC USE ONLY.**
- Please keep your Purchase Receipt and contact us directly if you encounter any problems with your product.

HORWOOD SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT (INCLUDING COLOUR FADING, SCRATCHES OR ACCUMULATED DIRT) WITHOUT FOLLOWING THE USE, CARE & SAFETY INSTRUCTIONS.

Note: Due to the introduction of improvements from time to time, the right is reserved to supply products which differ slightly from those illustrated and described in this publication.

Errors and Omissions Excepted.

JUDGE

CUSTOMER SERVICES

Horwood, Avonmouth Way,
Bristol, BS11 9HX, Great Britain

www.horwood.co.uk

customerservice@horwood.co.uk

Tel: 0117 940 0000



FOR DOMESTIC USE ONLY

CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

 JUDGE
Digital Bread Maker

Model No: JEA43



Recipe Book



- | | | |
|--------------------|----------------------|------------------------|
| ① Menu Button | ④ Start/Stop Button | ⑦ Selected Loaf Colour |
| ② Loaf Size Button | ⑤ Selected Programme | ⑧ Selected Loaf Weight |
| ③ Colour Button | ⑥ Time Left | |

Tips for successful bread making

- Always make sure that the Bread Pan is clean before beginning a new recipe.
- Measure ingredients as accurately as possible. A measuring cup and spoon are included with your Bread Maker.
- Ensure the ingredients are at room temperature unless otherwise stated.
- Water should be 20-25°C. This is especially important for the Ultra Fast programmes.
- Make sure the any yeast you use is fresh – check the use by date.
- Ensure the ingredients are placed into the Bread Pan in the order given in the recipe. As a general rule liquid ingredients are added first, followed by all dry ingredients except the flour. The flour is then added gently on top of the other ingredients. Finally, make well in the flour and add the yeast. This keeps the yeast separate from liquid and the salt, both of which may affect the action of the yeast. This is especially important when using the Programme Time Delay function.

Before you start... Make sure that the Bread Pan is clean and the Dough Paddle is in place at the base of the Bread Pan. Ingredients should be at room temperature.

Crusty White Farmhouse Loaf

PROGRAMME 1: BASIC

 3:00 HOURS

275g Warm Water (20-25°C)

1 tbsp Olive Oil

1.5 tsp Salt

1 tbsp Caster Sugar

500g Strong White Flour

1 x 7g Sachet Fast Action Dried Yeast

- Pour the water into the Bread Pan, followed by the olive oil, salt and sugar. Gently and evenly add the flour over the top of the liquid. Make a little well in the flour and pour in the dried yeast, taking care that it is kept separate from the wet ingredients and salt. Close the Lid.
- Press the Menu Button **1** to select Programme 1 (Basic). Press the Loaf Size Button **2** to select 2.0lb (Large Size). Press the Colour Button **3** to choose either light, medium or dark crust. Press the Start Button **4** and the programme will begin.

French Loaf

PROGRAMME 2: FRENCH

 3:50 HOURS

310ml Warm Water (20-25°C)

1.5 tbsp Olive Oil

1.5 tsp Salt

2 tbsp Caster Sugar

480g Strong White Bread Flour

1 x 7g Sachet Fast Action Dried Yeast

- Pour the water into the Bread Pan, followed by the olive oil, salt and sugar. Gently and evenly add the flour over the top of the liquid. Make a little well in the flour and pour in the dried yeast, taking care that it is kept separate from the wet ingredients and salt. Close the Lid.
- Press the Menu Button **1** to select Programme 2 (French). Press the Loaf Size Button **2** to select 2.0lb (Large Size). Press the Colour Button **3** to choose either light, medium or dark crust. Press the Start Button **4** and the programme will begin.

Tip: If you want to make a traditional long French baguette or stick, first make the dough using Programme 8 (Dough) and then knead using Programme 14 (Knead). The dough can then be removed and shaped for baking in a normal oven.

When the Programme ends... The Bread Maker will signal it has finished.

Open the Lid and using oven mitts, carefully remove the Bread Pan by twisting slightly anticlockwise and lifting clear.

Release the bread by turning the Bread Pan upside down and lightly tapping the contents onto a board. Transfer to a wire rack to cool.

Remember to remove paddle from base of loaf using the supplied Paddle Hook.

Before you start... Make sure that the Bread Pan is clean and the Dough Paddle is in place at the base of the Bread Pan. Ingredients should be at room temperature.

Large Granary Loaf

PROGRAMME 3: WHOLE WHEAT

 3:40 HOURS

250ml Warm Water (20-25°C)

25g Butter, melted or 25ml Vegetable Oil

1.5 tsp Salt

1 tbsp Caster Sugar

475g Strong Granary Bread Flour

1 x 7g Sachet Fast Action Dried Yeast

- Pour the water into the Bread Pan, followed by the melted butter (or vegetable oil), salt and sugar. Gently and evenly add the flour over the top of the liquid. Make a little well in the flour and pour in the dried yeast, taking care that it is kept separate from the wet ingredients and salt. Close the Lid.
- Press the Menu Button **1** to select Programme 3 (Whole Wheat). Press the Loaf Size Button **2** to select 2.0lb (Large Size). Press the Colour Button **3** to choose either light, medium or dark crust. Press the Start Button **4** and the programme will begin.

When the Programme ends...

The Bread Maker will signal it has finished. Open the Lid and using oven mitts, carefully remove the Bread Pan by twisting slightly anticlockwise and lifting clear.

Release the bread by turning the Bread Pan upside down and lightly tapping the contents onto a board. Transfer to a wire rack to cool.

Remember to remove the paddle from base of loaf using supplied Paddle Hook.

Quick Banana and Walnut Cake

PROGRAMME 4: QUICK

 1:40 HOURS

175g Bananas, mashed
(1 to 2 Bananas)

50g Sultanas

30g Butter, melted

1 tbsp Milk

Zest of 1 Lime

125g Chopped Walnuts

215g Plain Flour

½ tsp Bicarbonate of Soda

½ tsp Baking Powder

115g Caster Sugar

½ Tsp Salt

- In a large bowl, place the bananas, sultanas, butter, milk, zest of lime and chopped walnuts and beat until well blended.
- In a second bowl, sift in the plain flour, bicarbonate of soda and baking powder, then add in the sugar and salt and blend together.
- Tip the contents of both bowls into the Bread Pan. Close the Lid.
- Press the Menu Button **1** to select Programme 4 (Quick). Press the Colour Button **3** to choose either light, medium or dark crust. Press the Start Button **4** and the programme will begin.

Before you start... Make sure that the Bread Pan is clean and the Dough Paddle is in place at the base of the Bread Pan. Ingredients should be at room temperature.

Small Fruit Loaf

PROGRAMME 5: SWEET

 **2:50 HOURS**

280ml Warm Water (20-25°C)

2.5 tbsp Vegetable Oil

1.5 tsp Salt

60g Caster Sugar

3 tbsp Milk Powder

1 tsp Ground Cinnamon

445g Strong White Bread Flour

1 x 7g Sachet Fast Action Dried Yeast

100g Mixed Fruit such as Cranberries,
Glacé Cherries, Sultanas and Raisins

- Pour the water into the Bread Pan, followed by the vegetable oil, salt, sugar, milk powder and ground cinnamon. Gently and evenly add the flour over the top of the liquid. Make a little well in the flour and pour in the dried yeast, taking care that it is kept separate from the wet ingredients and salt. Close the Lid.
- Press the Menu Button **1** to select Programme 5 (Sweet). Press the Loaf Size Button **2** to select 1.5lb (Small Size). Press the Colour Button **3** to choose either light, medium or dark crust. Press the Start Button **4** and the programme will begin.
- After approximately 25 minutes the Bread Maker will signal to add the extra ingredients, simply open the Lid and pour the mixed fruit in.

Ultra Fast Small White Loaf

PROGRAMME 6: ULTRA FAST I

 **58 MINUTES**

270ml Warm Water (20-25°C)

4 tbsp Olive or Sunflower Oil

1 tsp Salt

4 tsp Caster Sugar

2 tbsp Milk Powder

425g Strong White Flour

2 x 7g Sachet Fast Action Dried Yeast

- Pour the water into the Bread Pan, followed by the olive or sunflower oil, salt, sugar and milk powder. Gently and evenly add the flour over the top of the liquid. Make a little well in the flour and pour in the dried yeast, taking care that it is kept separate from the wet ingredients and salt. Close the Lid.
- Press the Menu Button **1** to select Programme 6 (Ultra Fast I). Press the Loaf Size Button **2** to select 1.5lb (Small Size). Press the Colour Button **3** to choose either light, medium or dark crust. Press the Start Button **4** and the programme will begin.

When the Programme ends... The Bread Maker will signal it has finished.

Open the Lid and using oven mitts, carefully remove the Bread Pan by twisting slightly anticlockwise and lifting clear.

Release the bread by turning the Bread Pan upside down and lightly tapping the contents onto a board. Transfer to a wire rack to cool.

Remember to remove paddle from base of loaf using the supplied Paddle Hook.

Before you start... Make sure that the Bread Pan is clean and the Dough Paddle is in place at the base of the Bread Pan. Ingredients should be at room temperature.

Ultra Fast Large White Loaf

PROGRAMME 7: ULTRA FAST II

 **58 MINUTES**

360g Warm Water (20-25°C)

5 tbsp Olive or Sunflower Oil

1 tsp Salt

5 tsp Caster Sugar

3 tbsp Milk Powder

575g Strong White Flour

2 x 7g Sachet Fast Action Dried Yeast

- Pour the water into the Bread Pan, followed by the olive or sunflower oil, salt, sugar and milk powder. Gently and evenly add the flour over the top of the liquid. Make a little well in the flour and pour in the dried yeast, taking care that it is kept separate from the wet ingredients and salt. Close the Lid.
- Press the Menu Button **①** to select Programme 7 (Ultra Fast II). Press the Loaf Size Button **②** to select 2.0lb (Large Size). Press the Colour Button **③** to choose either light, medium or dark crust. Press the Start Button **④** and the programme will begin.

When the Programme ends...

The Bread Maker will signal it has finished. Open the Lid and using oven mitts, carefully remove the Bread Pan by twisting slightly anticlockwise and lifting clear.

Release the bread by turning the Bread Pan upside down and lightly tapping the contents onto a board.

Transfer to a wire rack to cool.

Remember to remove the paddle from base of loaf using supplied Paddle Hook.

Granary Bread Rolls

PROGRAMME 8: DOUGH

 **1:30 HOURS**

325ml Warm Water (20-25°C)

25g Unsalted Butter, melted

1.5tsp Salt

1.5tsp Caster Sugar

500g Strong Wholemeal Flour

115g Poppy, Sunflower and Pumpkin Seeds, zapped in a food processor

1 x 7g Sachet Fast Action Dried Yeast

- Pour the water into the Bread Pan, followed by the melted butter, salt, sugar, half the flour and half the zapped seeds. Gently and evenly add the remainder of the flour over the top. Make a little well in the flour and pour in the dried yeast, taking care that it is kept separate from the wet ingredients and salt. Close the Lid.
- Press the Menu Button **①** to select Programme 8 (Dough). Press the Start Button **④** and the programme will begin.
- Prepare a large baking tray by brushing with a little oil.
- The machine will bleep after the allotted time to tell you that the dough is made and risen. Remove onto a floured surface, knead lightly with floured hands and cut into 8 equal sized pieces.
- Form into balls and place onto the prepared baking tray and then using the flat of your hand, press down to flatten slightly. Sprinkle with the remaining seeds. Cover with clingfilm and allow to rest for 30 minutes to rise/prove again. Meanwhile preheat your oven to 225°C.
- Remove the clingfilm and place into the oven and bake for 15 minutes until golden brown, tapping the bottom to ensure that they sound hollow, indicating they are cooked through.
- Transfer to a wire rack to cool.

Before you start... Make sure that the Bread Pan is clean and the Dough Paddle is in place at the base of the Bread Pan. Dough ingredients should be at room temperature.

Chorizo, Mushroom and Pesto Pizza **PROGRAMME 8: DOUGH** ⌚ 1:30 HOURS

For the pizza dough

300ml Warm Water (20-25°C)

25ml Olive Oil

1 tsp Salt

1 tsp Caster Sugar

475g Italian 00 flour

1½ x 7g Sachet Fast Action Dried Yeast

2 tbsp Semolina Flour
(for dusting)

For the pizza sauce

15ml Olive Oil

2 Small Onions, thinly chopped

2 cloves Garlic, crushed

1 Green Pepper, deseeded
and finely chopped

1 tsp Dried Oregano

500g Passata

1 tbsp Jalapeño Paste

Ground Black Pepper

Sea Salt

For the toppings

6 chestnut mushrooms,
thinly sliced

12 slices Chorizo

4 tsp Pesto

75g Mozzarella Cheese, grated

50g Cheddar Cheese

Olive Oil for drizzling

Fresh Basil Leaves, torn

To make the pizza dough:

- Pour the water into the Bread Pan, followed by the olive oil, salt and sugar. Gently and evenly add the flour over the top of the liquid. Make a little well in the flour and pour in the dried yeast, taking care that it is kept separate from the wet ingredients and salt. Close the Lid.
- Press the Menu Button **1** to select Programme 8 (Dough). Press the Start Button **4** and the programme will begin.
- When the Programme has finished, the dough should have doubled in size.

Whilst the dough is being made:

- Preheat your oven to 250°C
- In a large saucepan, heat up the olive oil until hot then add the onions, garlic and green pepper and cook, stirring occasionally until the onion has softened.
- Add the oregano, passata, jalapeño paste, salt and pepper and cook on a low to medium heat for 15 minutes or until the sauce has reduced to a paste.

When the dough is ready:

- Remove from the breadmaker and place the dough onto a lightly floured surface and knead gently for a few minutes shaping into a large ball.
- Using a palette knife, split the dough in half.
- Now sprinkle semolina flour over the surface and with a floured rolling pin, roll each of the dough balls into 2 rectangular pizzas measuring 12" x 6" each.
- Lightly oil 2 (12"x5") lipped rectangular baking pans and gently place the dough into each one.
- Spread the sauce evenly over the base of the dough up to the edges, then add the toppings, finishing with the cheese and bake in the oven for 12-15 minutes or until golden brown.
- To give the bases a lovely crispy bottom, carefully remove each one from their tray and place directly onto the oven racks and bake for a further 5 minutes or until golden brown.
- Cut each pizza into slices, drizzle with a little olive oil and sprinkle over some fresh basil leaves to serve.

Before you start... Make sure that the Bread Pan is clean and the Dough Paddle is in place at the base of the Bread Pan. Ingredients should be at room temperature.

Marmalade

PROGRAMME 9: JAM

 1:20 HOURS

Zest and juice from 3 Seville Oranges

225g Jam Sugar

1 tbsp Water

- Open up the Lid of your Bread Maker and place all the ingredients into the baking pan.
- Press the Menu Button **1** to select Programme 9 (Jam). Press the Start Button **4** and the programme will begin.
- While the Marmalade is being made clean and sterilise a 400ml size jar and lid, allow to dry and then place in a warm oven.
- Place a clean dry saucer into the fridge.
- When the Bread Maker indicates that the marmalade is ready, spoon a little marmalade onto the saucer and place into the fridge for 5 minutes. Take the cold saucer out of the fridge and with your finger push into the marmalade. If the marmalade “wrinkles” then it has reached setting point. If it doesn’t then restart the jam programme and test again periodically until the “wrinkle” test is positive.
- When the marmalade is ready, carefully fill up the jar, cover with a round piece of wax paper and seal with a Lid.

Fruit Loaf Cake

PROGRAMME 10: CAKE

 2:50 HOURS

225ml of Warm Water (20-25°C)

25g Butter, melted

½ tsp Salt

50g Caster Sugar

375g Strong White Flour

1 x 7g Sachet Fast Action Dried Yeast

75g Glacé Cherries, chopped

50g Sultanas

35g Mixed Fruit

40g Walnut Pieces

To glaze:

1 tbsp Caster Sugar mixed with 1 tbsp Water

- Lightly grease the inside of the Bread Pan.
- Pour the water into the Bread Pan, followed by the melted butter, salt and sugar. Gently and evenly add the flour over the top of the liquid. Make a little well in the flour and pour in the dried yeast, taking care that it is kept separate from the wet ingredients and salt. Close the Lid.
- Press the Menu Button **1** to select Programme 10 (Cake). Press the Start Button **4** and the programme will begin.
- After approximately 20 minutes the Bread Maker will signal to add the extra ingredients. Open the Lid and pour in the fruit and walnut pieces, close the Lid and the Programme will continue.
- After the Programme has finished, open up the Lid, brush on the glaze and leave in the tin for 10 minutes before turning out onto a wire rack to cool completely.
- Remember to remove paddle from base of loaf using supplied Paddle Hook.

Before you start... Make sure that the Bread Pan is clean and the Dough Paddle is in place at the base of the Bread Pan. Ingredients should be at room temperature.

Small Sandwich Loaf

PROGRAMME 11: SANDWICH

 **2:55 HOURS**

260ml Warm Water (20-25°C)

30g Butter, melted

½ tsp Salt

3 tbsp Caster Sugar

2 tbsp Powdered Milk

450g Strong White Flour

1 x 7g Sachet Fast Action
Dried Yeast

- Pour the water into the Bread Pan, followed by the melted butter, salt, sugar and powdered milk. Gently and evenly add the flour over the top of the liquid. Make a little well in the flour and pour in the dried yeast, taking care that it is kept separate from the wet ingredients and salt. Close the Lid.
- Press the Menu Button **1** to select Programme 11 (Sandwich). Press the Loaf Size Button **2** to select 1.5lb (Small Size). Press the Colour Button **3** to choose either light, medium or dark crust. Press the Start Button **4** and the programme will begin.

Gluten Free Crusty Bread

PROGRAMME 14: KNEAD & 13: GLUTEN FREE

 **15 MINUTES** +  **3:30 HOURS**

350ml Warm Semi Skimmed Milk (20-25°C)

2 Eggs, lightly beaten

6 tbsp Vegetable Oil

1 tsp Vinegar

1 tsp Salt

2 tbsp Caster Sugar

260g Gluten Free White Bread Flour

200g Gluten Free Brown Bread Flour

1 x 7g Sachet Fast Action Dried Yeast

- In a mixing bowl whisk together the milk, eggs, oil, vinegar, salt and the caster sugar until well blended together. Pour into the Bread Pan. Gently and evenly add the flour over the top of the liquid. Make a little well in the flour and pour in the dried yeast, taking care that it is kept separate from the wet ingredients and salt. Close the Lid.
- Press the Menu Button **1** to select Programme 14 (Knead). Press the Start Button **4** and the programme will begin.
- After the Programme has finished, open the lid and push all the excess flour mixture off the sides of the Bread Pan walls into the main mixture using a spatula. Close the Lid.
- Press the Menu Button **1** to select Programme 13 (Gluten Free). Press the Loaf Size Button **2** to select 2.0lb (Large Size). Press the Colour Button **3** to choose either light, medium or dark crust. Press the Start Button **4** and the programme will begin.

When the Programme ends... The Bread Maker will signal it has finished.

Open the Lid and using oven mitts, carefully remove the Bread Pan by twisting slightly anticlockwise and lifting clear.

Release the bread by turning the Bread Pan upside down and lightly tapping the contents onto a board. Transfer to a wire rack to cool.

Remember to remove paddle from base of loaf using the supplied Paddle Hook.

1 Litre Home Made Plain Yoghurt

PROGRAMME 15: YOGHURT

 8:00 HOURS

Before you start... Make sure that the Bread Pan is very clean and the Dough Paddle is **Removed** from the base of the Bread Pan.

1 Litre UHT milk

3 tbsps Milk Powder

1 tbsps "live" yoghurt

- Mix the live yoghurt and milk powder together in the Bread Pan (the milk powder helps thicken the yoghurt) and whilst stirring gradually add in the UHT milk.
- Press the Menu Button **1** to select Programme 15 (Yoghurt). Press the Start Button **4** and the programme will begin.
- **Do not attempt to move the Bread Machine or lift the Lid while the programme is running. Take care not to knock it. Any disturbance may affect the fermentation process and the firmness of the yoghurt.**
- When the Programme ends the Bread Maker will signal it has finished.
- Open the Lid and carefully remove the Bread Pan by twisting slightly anticlockwise and lifting clear.
- Transfer yoghurt to sterilised container(s). Store in the fridge.

Tips for Home Made Yoghurt

- Yoghurt fermentation is a natural bacterial action that may be affected by several factors, such as the ingredients used, their freshness and the ambient temperature.
- U.H.T milk produces the best and most consistent results. Full or reduced cream may be used according to taste and dietary requirements.
- The chances of failure increase the older the 'live' yoghurt starter.
- Do not use ingredients that are past their "best before" date.
- Do not use flavoured yoghurts.
- If the yoghurt has an unpleasant odour, this may be due to a tainted ingredient. It must be discarded.
- You may add fruit, sweetener or honey to taste, after the run time is complete. Serve the yoghurt cool and consume within 10 to 14 days.

Notes

[illegible]



www.horwood.co.uk

 **JUDGE** Horwood Avonmouth Way Bristol BS11 9HX Great Britain
customerservice@horwood.co.uk Tel: 0117 940 0000

Other ManualsLib Projects

 www.manualslib.com

 www.manualslib.de

 www.manualslib.es

 www.manualslib.fr

 www.manualslib.nl

 www.manualslib.mx

 www.manualslib.tech 30+ Languages