

Display Instructions

1) CAUTION

1. Never attempt your own maintenance. If something appears strange, please turn the TV off and consult your TV dealer or the company. The TV is composed of many delicate electronic components that can be damaged or broken if you open the TV or attempt to modify it.
2. Do not expose the TV high humidity. Dust, steam, oily smoke, direct sunlight etc.
3. Do not use thinners or other chemical cleaners. Wipe the TV off with a soft cloth if it gets dirty.
4. Do not leave the TV in excess hot or cold place. Premissible storage temperatures are within the range of -20°C to +60°C, Premissible operation temperatures are within the range of 0°C to 40°C.
5. Only use specified adapters and power sources and battery pack.
6. For your safety, turn power off when not in use and unplug the adapter.
7. Avoid dropping and strong impact.

2) APPEARANCE

—. I/O function

1. Input power (DC 12V JACK)
2. Input Computer(VGA JACK)
3. AV choice(AV JACK)
4. Headphones socket(EAR JACK)
5. TV choice(TV JACK)
6. USB JACK

—. Five key function sign

AUTO MENU POWER UP

1. switcher mode
2. menu
3. POWER
4. —
5. +

3) OPTIONAL POWER SOURCES

AC household current: The optional AC adaptor allows the TV to be powered by standard household current (Please look over the AC adapter)

In general, it is required to use power adapters enclosed with the TV set. If you will use other AC/DC adapter, you must pay special attention to its voltage and power.

4). BASIC OPERATION

1. Connect the power and switch on the TV. Then the red<stand-by > indicator become green <working>.

2. Press button  , or AUTO to switch to PC/AV/TV mode.

Plug in the catv cable or telescopic antenna and adjust it to a good position.

3. Press button "MENU" to adjust Brightness, contrast ratio and saturation of color.


4. Picture adjustment as follows: auto, horizontal, vertical, phase, clock.

5. Language mode: English, simplified chinese, Francais, Italiano, Deutsch,

Espanol, complex form of chinese, PYCC

Espanol, complex form of chinese, PYCC

6. press volume button to adjust TV sound system.

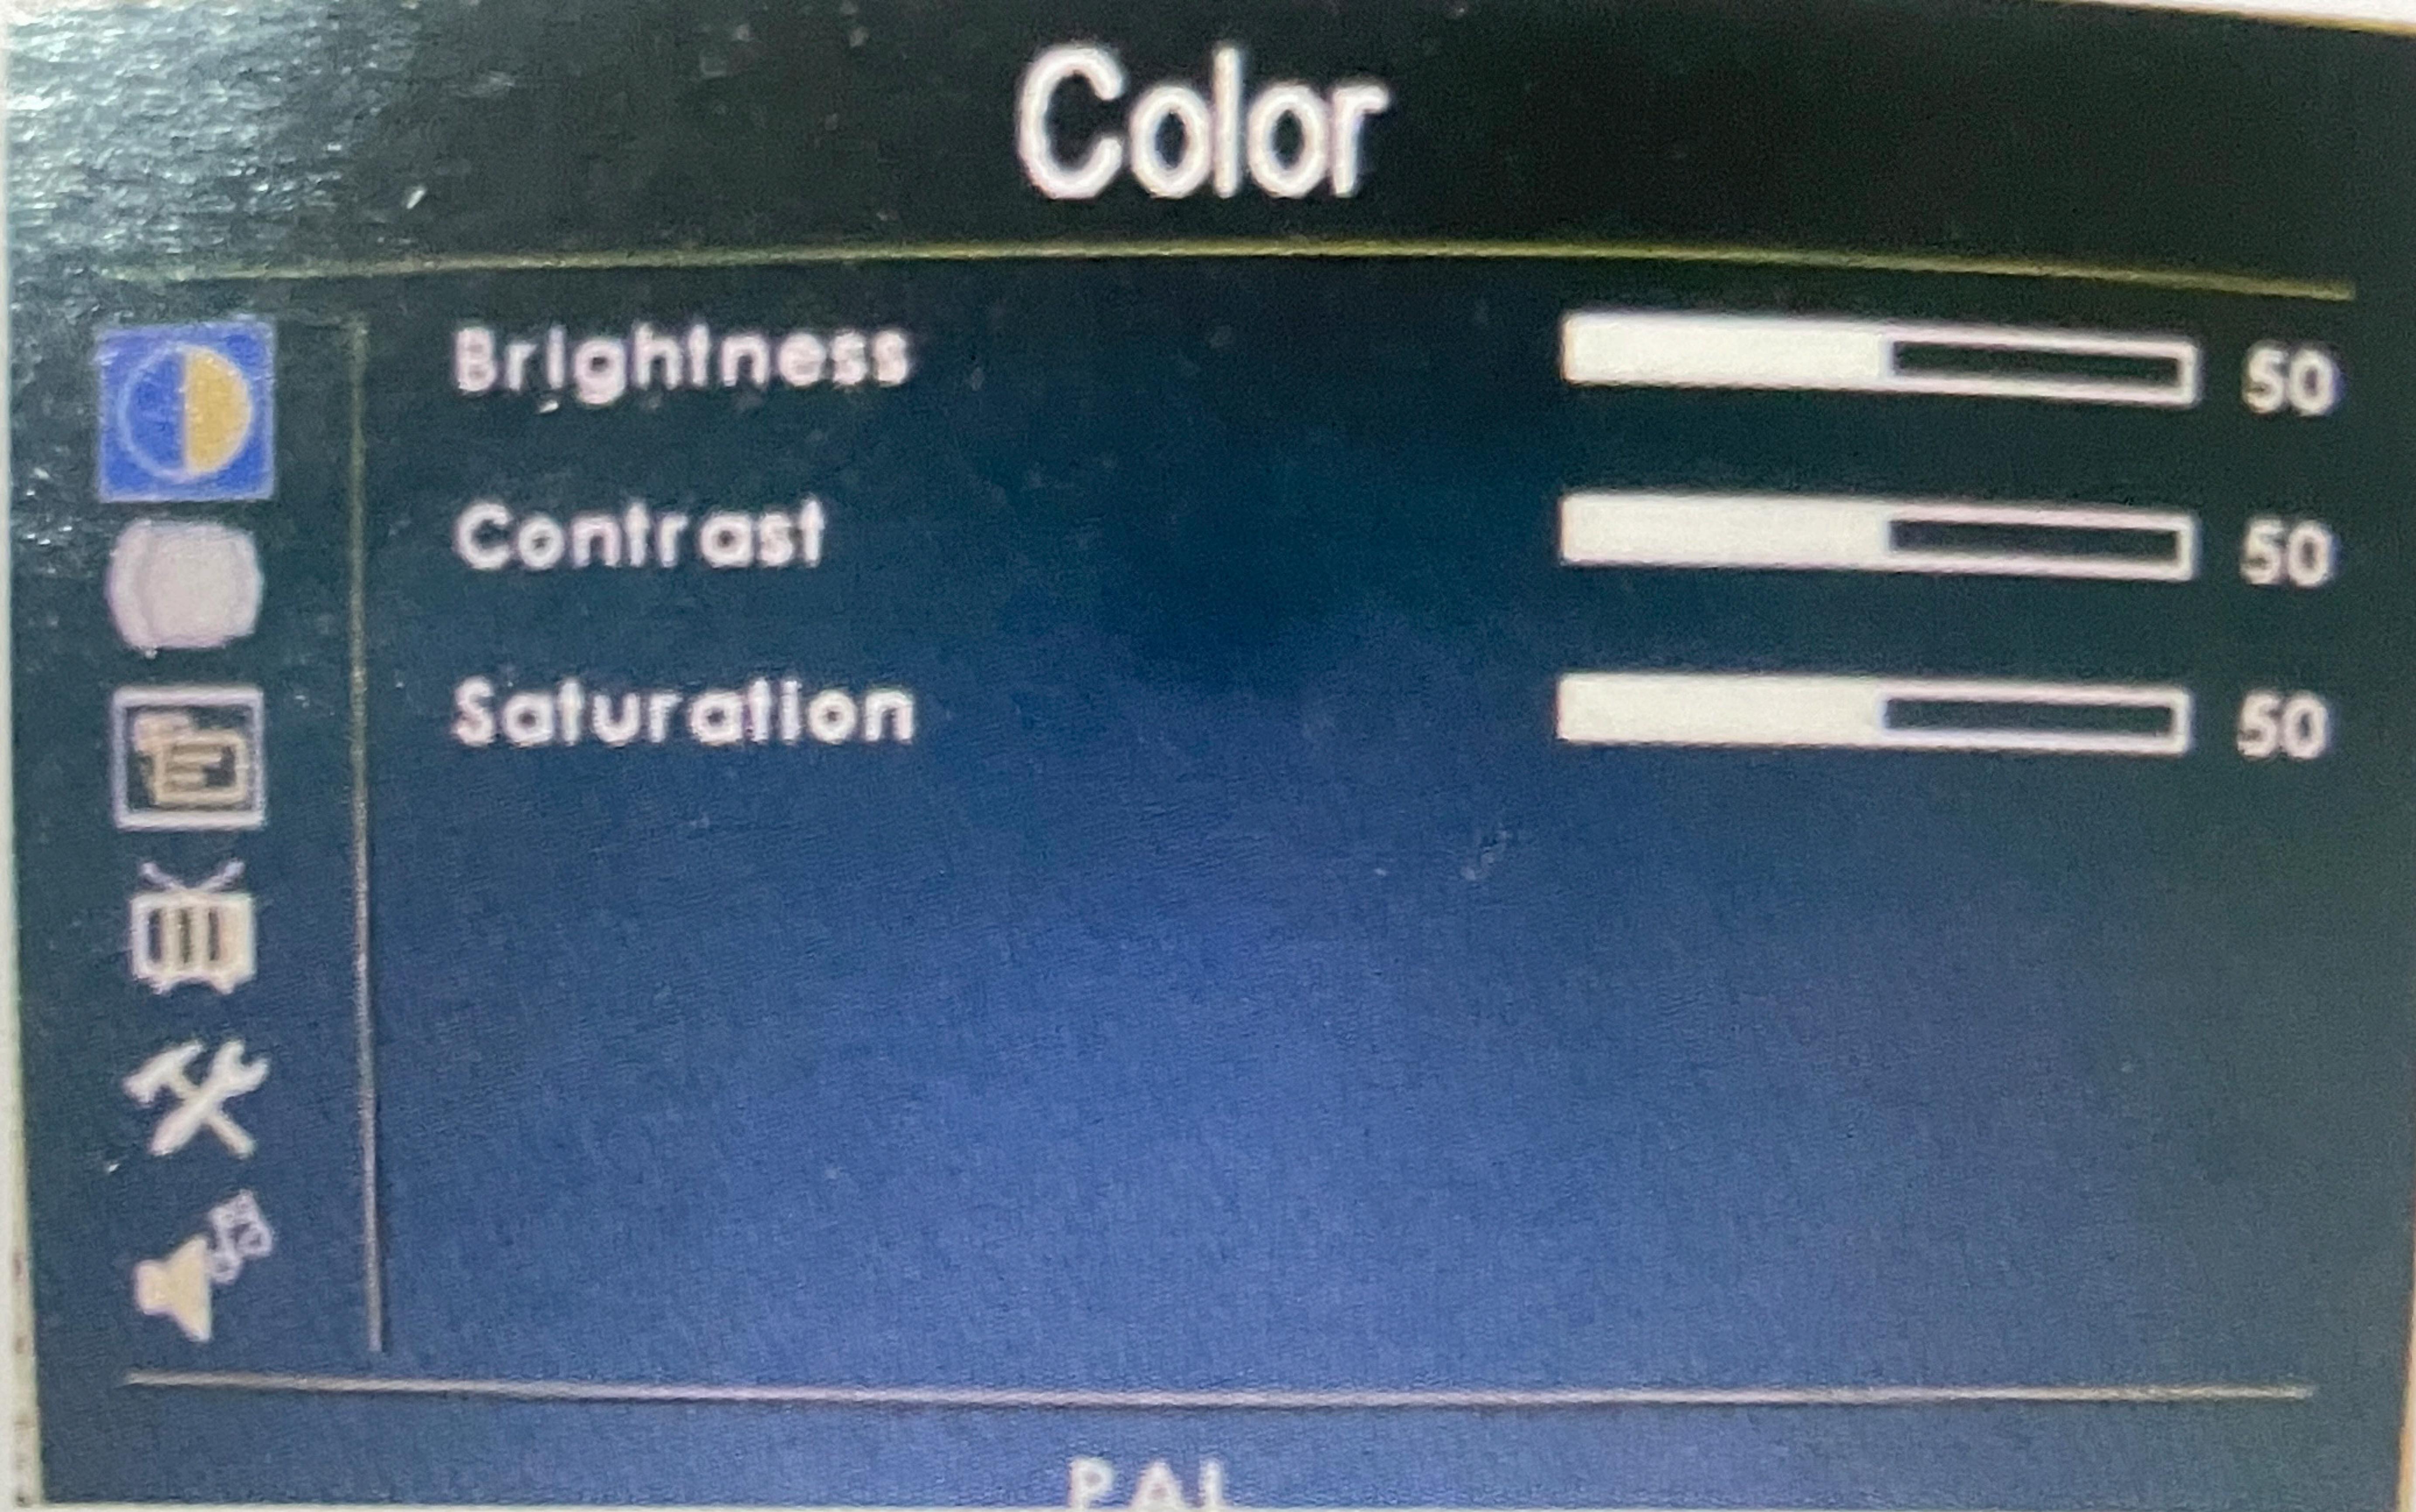

Brightness: 50
Contrast: 50
Sharpness 50
Saturation 50

Note:

In the course of manual search, "v+" or "V-" can be used to change searching direction , but you may stop it by pressing "MENU". When you search multisystem TV programs. It needs to set the sound system atone through which most programs can be received.

Probably, some TV programs can not be identified, you have to adjust the sound system manually.

OPERATION FOR OTHER FUNCTION BY OSD BY MENU IN TV MODE

1. There are two OSD menu pages in the mode of PC monitoring. The first page is picture menu . through which you can adjust the VGA signal transmitted from PC in respect of brightness, contract ratio. And picture "H-POSITION" and "V-POSITION" center as well to locate the pictures to a suitable position.
 - * In mode of PC, the unit can support VGA only. I.E. You must set the computer VGA output resolution at 640*480 before connecting VGA cable, and the refresh frequency set at 60 Hz.
 - *When PC signal is received, the display may be normal , it need to reset. Please enter the page 1 of the OSD menu, press AUTO and press "V+ or V" and enter, the screen will carry out image geometric adjustment automatically, and border center will be determined.
 - *Please and clock adjustment when the inputs signal frequency shift is too large, you may adjustment if to join accurate. The other items adjustment is the same as that in TV mode.
2. Menu on these condpgcis other function and white balance, including Lanaguage. Reset and display mode, the adjusting method is the same as TV menu. White balance saturation, the factory set value is 5.0 it can be adjusted as

user likes.

3. OSD menu in AV mode.

*There are two OSD menu pages. The adjustment is as TV OSD menu AV.

5) EAR PHONE

Plug the earphone into the TV port. If you use earphone of other model, Please make sure this quality is ok.

6) EXTER NALA NTENNA

If the image quantity is good enough, please meets the antenna or the closed circuit television coaxial cable in antenna, operation schematic drawing as follow:

7) TROUBLE AMENDMENT

Please check the causes as indicated below before requesting the repaid service.

Problems	Possible reasons
No sound and picture	Battery pack needs recharge or is not picture properly connected, AC or car adaptor is not properly connected.
No picture	The channel selection is not done properly Resetting the broadcast channels in other area.
Poor reception	The antenna is not adjusted properly. The channels are not turned in properly.
Dark picture	The antenna is not adjusted properly. The temperature of the using environment is too cold.
Punch-drunk or Unstable picture	The antenna is not adjusted properly. In areas where TV signal too weak.
Jitters	The antenna direction is incorrect. The TV may be receiving reflecting signals from buildings or mountains in the area.
Disturb such as snowflake	The TV may be receiving electronics or electro-magnetic Interference. From car engineers trains high voltage wires or neon signs.
Poor color	The color is not properly adjusted. The signal is too weak.
No images or the Abnormal coloring when connecting to PC	Check if it is set at VGA mode. VGA cable is connected. Properly and if the VGA refresh frequency is correct.

12 inch Monitor Operation Instruction:

1. Connect the VGA cable or HDMI cable to PC, press the button Mode, and choosing the mode VGA or HDMI or other signal resource, press MENU button to confirm.
2. In the course of manual search, “V+or V-” can be used to chance, searching direction, but you may confirm it by pressing Turn ON/OFF button.
3. Press the Menu button for a while and then you will see the menu is shown, then press the Menu to choose the setting you want to change, the “V+or V-” can be used to increase or reduce, finally press Turn ON/OFF button to confirm the setting, the Mode button is also used to up and down during choosing.
4. Note: We have prepared the Monitor Remote Control for 12 inch monitor to you to use it conveniently, and only 12 inch monitor is coming with remote control. On the Remote Control, the MENU Button is used to confirm.

9) ACCESSORIES

1. 1、These products are widely applied in household TV, industrial monitors, touch LCD display, desktop.

Vehicle-mounted, POS machines display. Industrial control displayed. Medical instrument. Automation etc

2、Screen resolution, fittings configuration each specification is different. Customers according to need to choose

3、If we improve our product , we can not inform it. so you should observe the practicality carefully after you buy the product

4、Thank you for choosing the product of our company. We will try our best to satisfy your meet with our perfect design and quality.