

SSD_burning instructions

1. Tool burning

- The board that can be booted to Uboot normally, it is recommended to directly use Tftp32 to burn;
 - The board that cannot boot to Uboot can only be burned with Flash_Tool.
-

1.1. Flash_Tool (ISP_Tool) programming

This method is suitable for the case where the blank chip is burned or the board cannot enter the Uboot console and use other methods to burn.

1. Boot into the Uboot console, enter debug (if it can enter normally), the uboot serial port is disabled at this time
2. Close the serial port debugging tool
3. Booting to Uboot requires the necessary partitions and the starting address of the partition

The difference between Nand/Nor is as follows:


- a. Nand Flash

partition file	Partition start address
GCIS.bin	0x000000
IPL.bin	0x140000
IPL_CUST.bin	0x200000
u-boot_spinand.xz.img.bin	0x2C0000

b. Nor Flash

partition file	Partition start address
IPL.bin	0x00000
IPL_CUST.bin	0x10000
MXP_SF.bin	0x20000
u-boot.xz.img.bin	0x30000

4. Open Flash_Tool, according to the above partition and partition start address, follow the following methods to burn the partitions in sequence
 - a. Click Connect to establish the connection status (Connect must ensure that the serial port tool is closed, otherwise there will be a problem of competing for serial port resources)
 - b. Select Flash Type (Nand Flash/Nor Flash)
 - c. Select the img corresponding to the partition to be burned, take u-boot_spinand.xz.img.bin as an example
 - d. Check **Base shift at** , select start from base address 0
 - e. Fill in the starting address of the corresponding img partition (u-boot_spinand.xz.img.bin corresponds to 0x2C0000)
 - f. Click Run and wait for the end of the run until the Pass status is prompted.

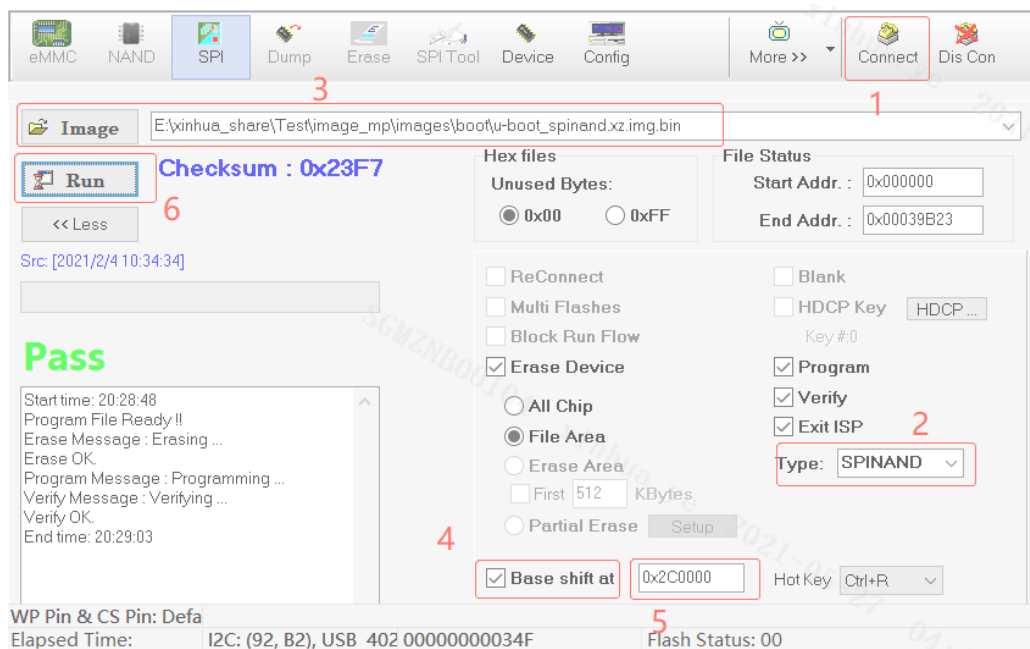


5. 根据Flash Type将步骤3中对应的分区，按照步骤重复烧录即可，烧录完之后重启即可以正常启动到Uboot

1.2. Tftp烧录

本烧录方式仅针对可以进入到Uboot控制台的情况，空片或者无法启动到控制台的不支持此烧录方式。

1. 打开tftpd32工具，选择需要烧录的image目录

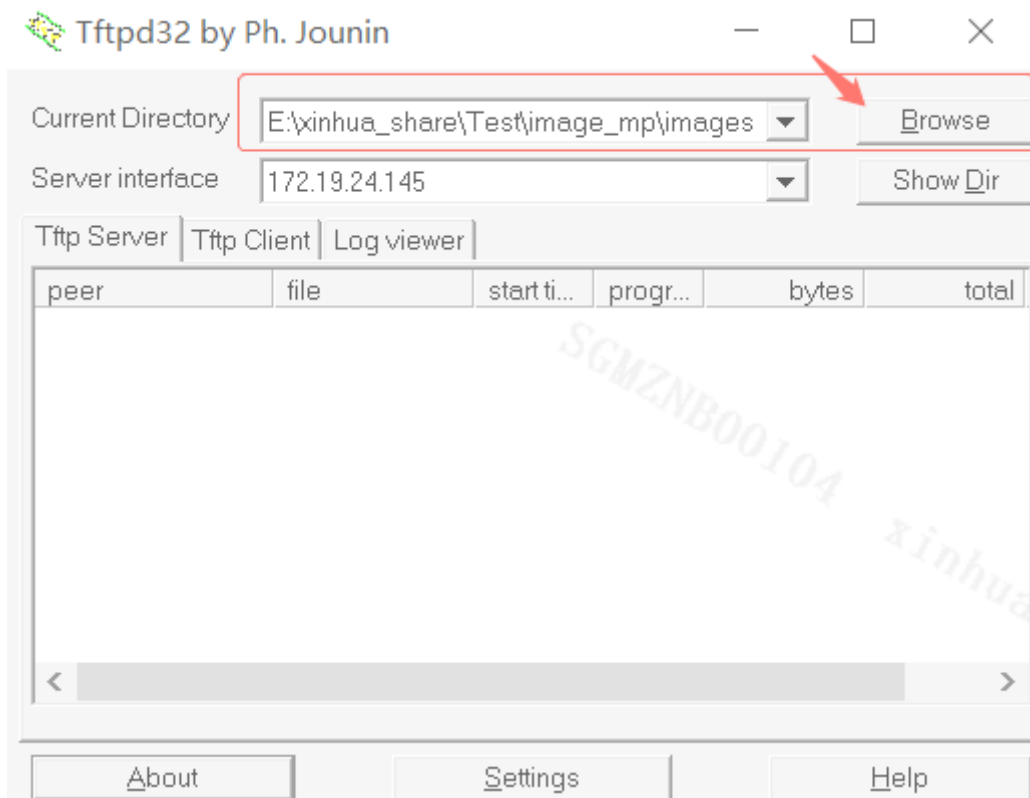

2. 开机进入到Uboot控制台，设置IP

```
setenv serverip 172.19.24.145; //ip为Tftp工具所在环境的IP

setenv ipaddr 172.19.24.X; //设置板子的ip，要保证网段跟Tftp同网段，网络胡同

saveenv;
```

3. 输入estart（打开网卡，该步骤针对在Uboot阶段默认关闭了网卡的情况）

4. 输入estar（与全烧录的区别是此方式可以 `estar auto_update.txt` 中的脚本，烧录任意单独分区）