


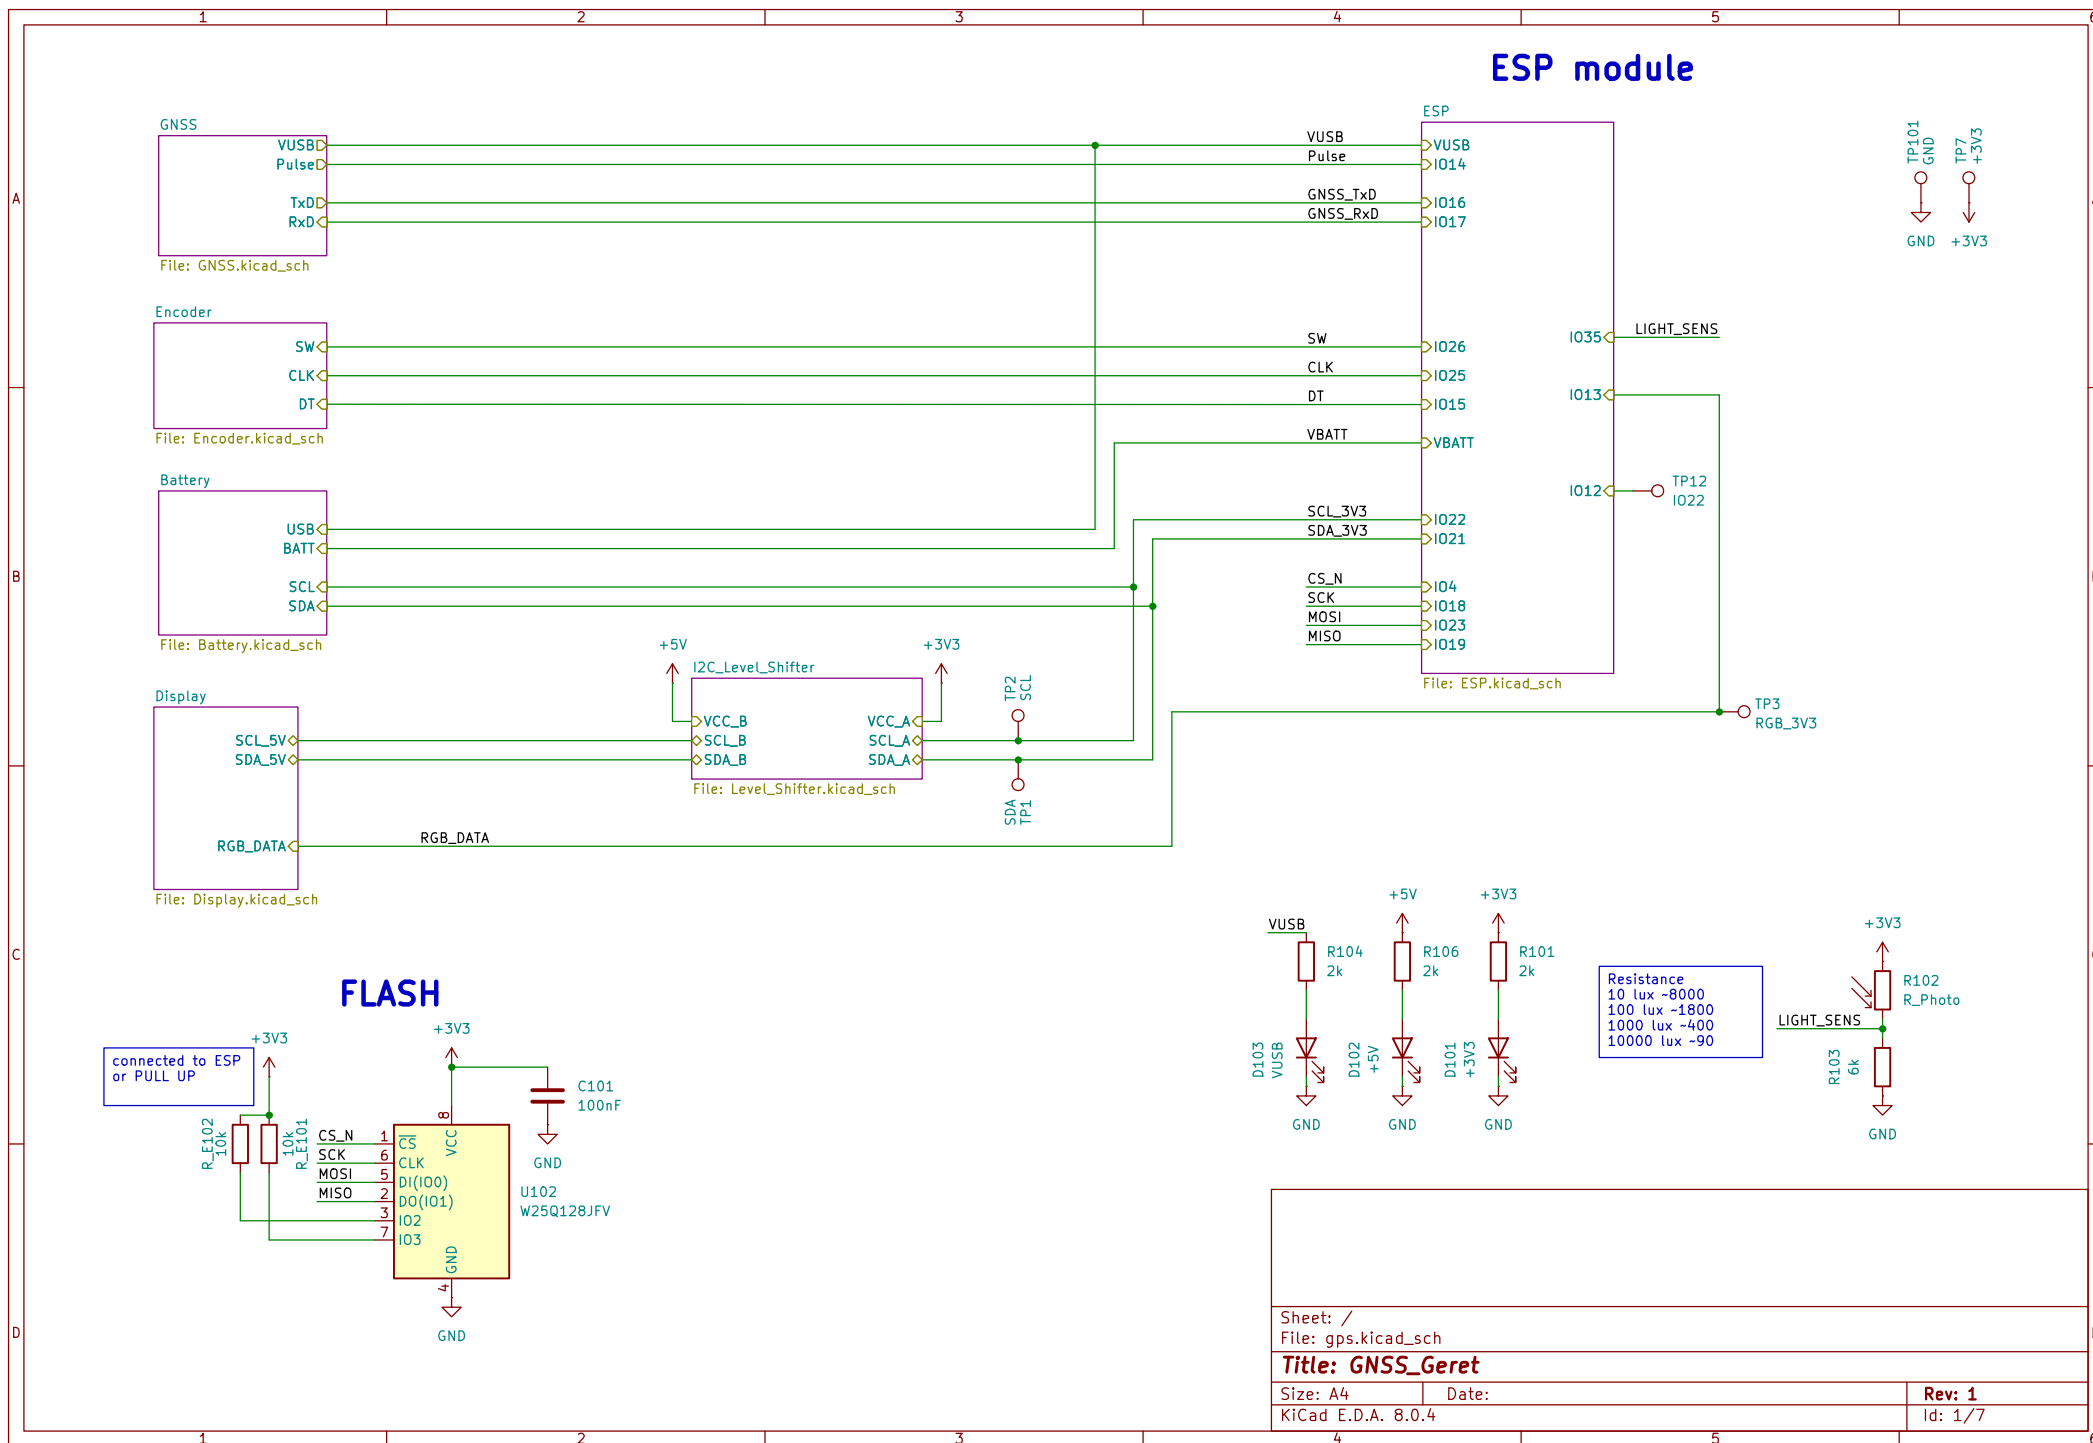
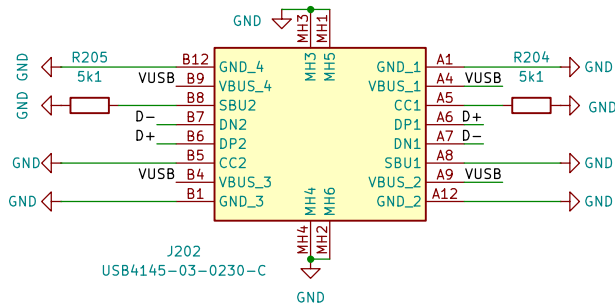
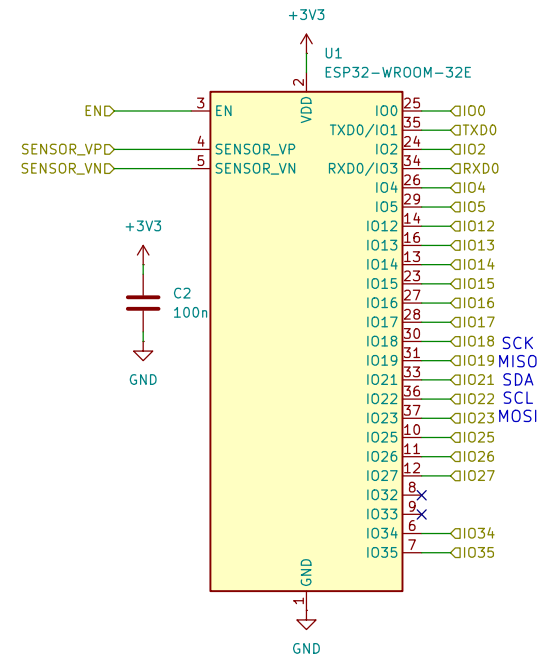
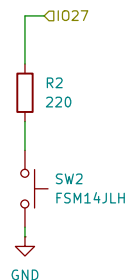
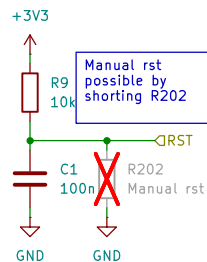



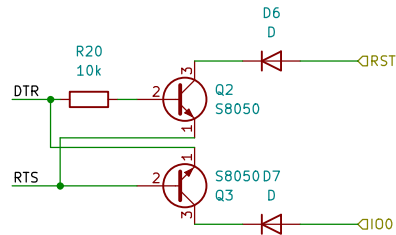

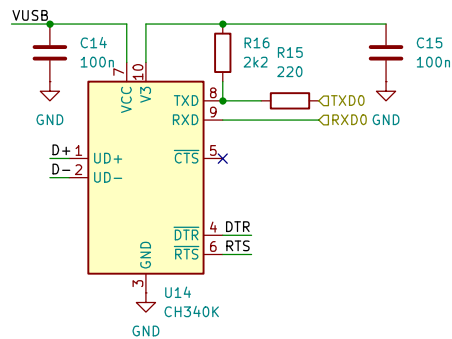

<https://www.tme.eu/cz/details/usb4145-03-0230-c/konektory-usb-a-ieee1394/gct/>

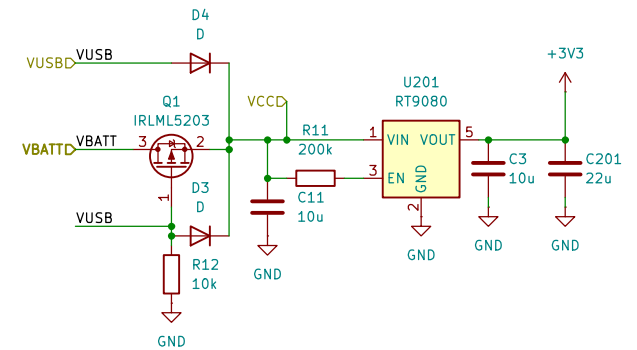


Sheet: /ESP/
File: ESP.kicad_sch

Title:

Size: A4
KiCad E.D.A. 8.0.4

Date:

Rev:
Id: 2/7

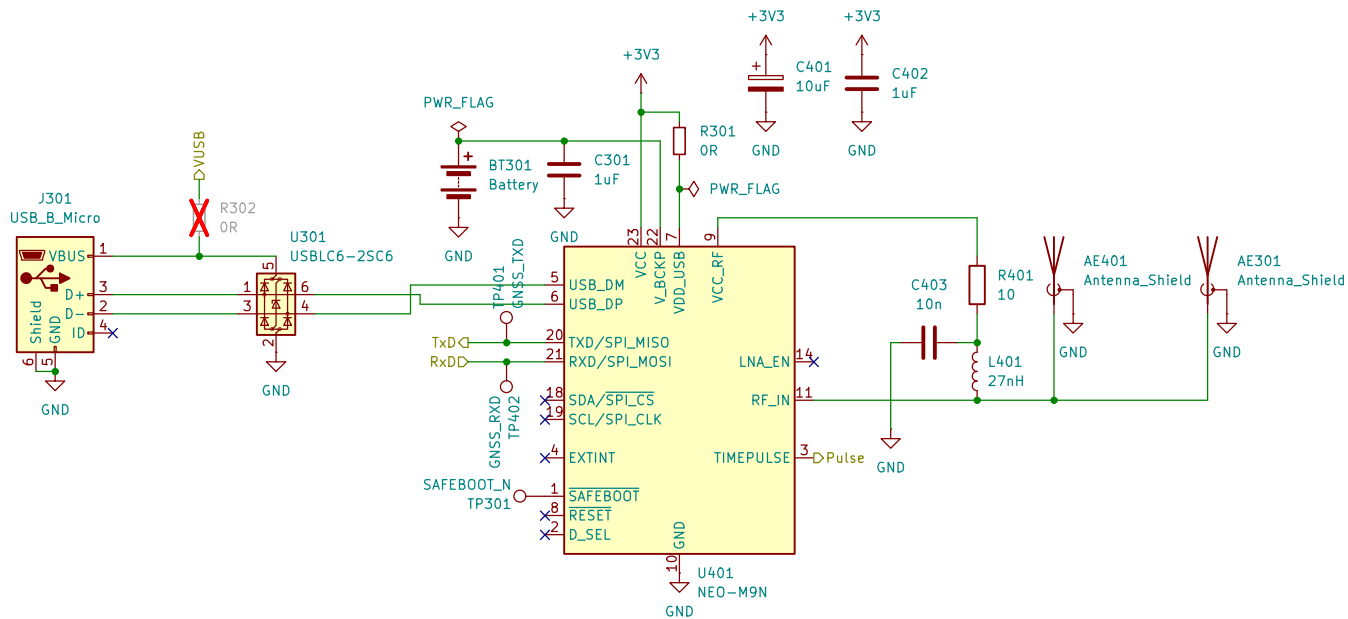

Sheet: /GNSS/
File: GNSS.kicad_sch

Title:


Size: A4 Date:

KiCad E.D.A. 8.0.4


Rev:

Id: 3/7

7seg displays and 7seg driver

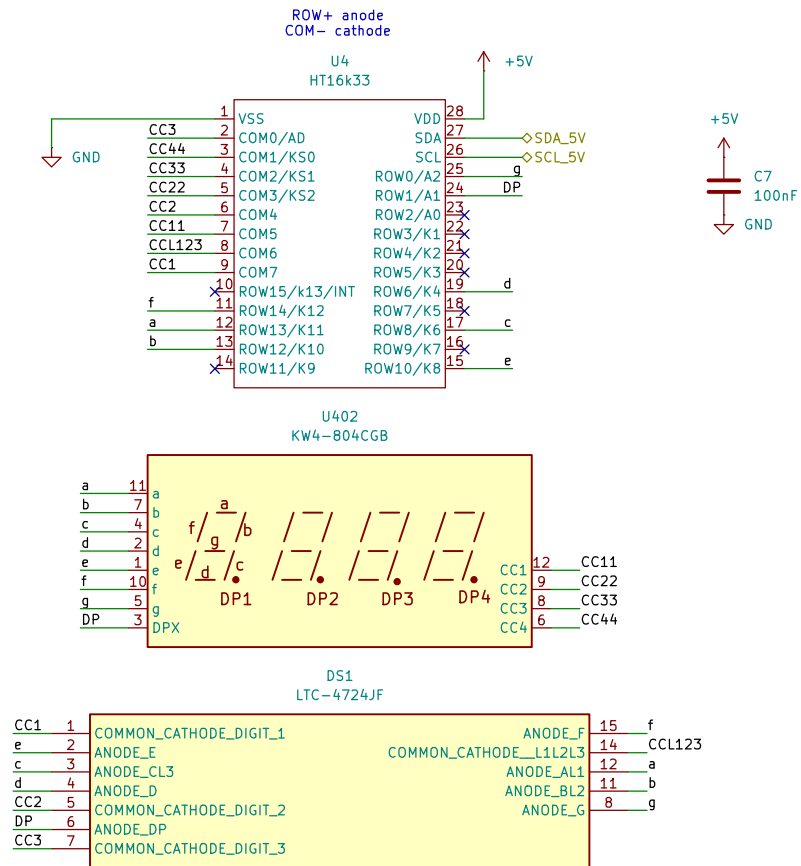

RGB 7seg displays

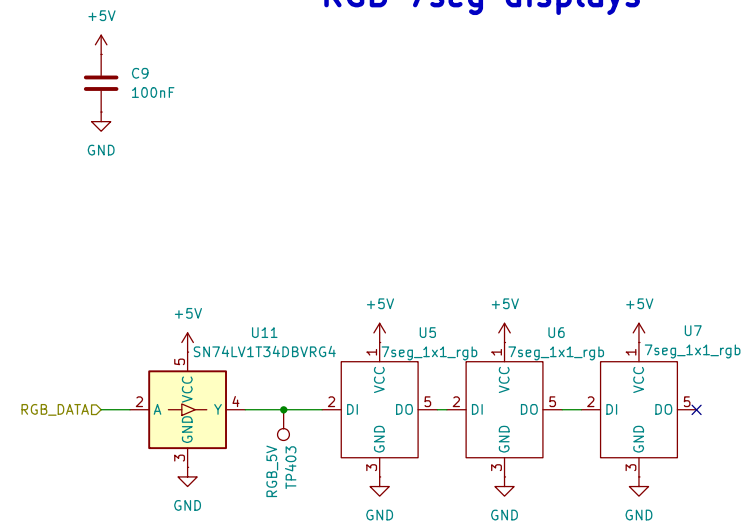



Sheet: /Display/
File: Display.kicad_sch

Title: GNSS_Geret


Size: A4
KiCad E.D.A. 8.0.4

Date:
Rev: 1
Id: 4/7

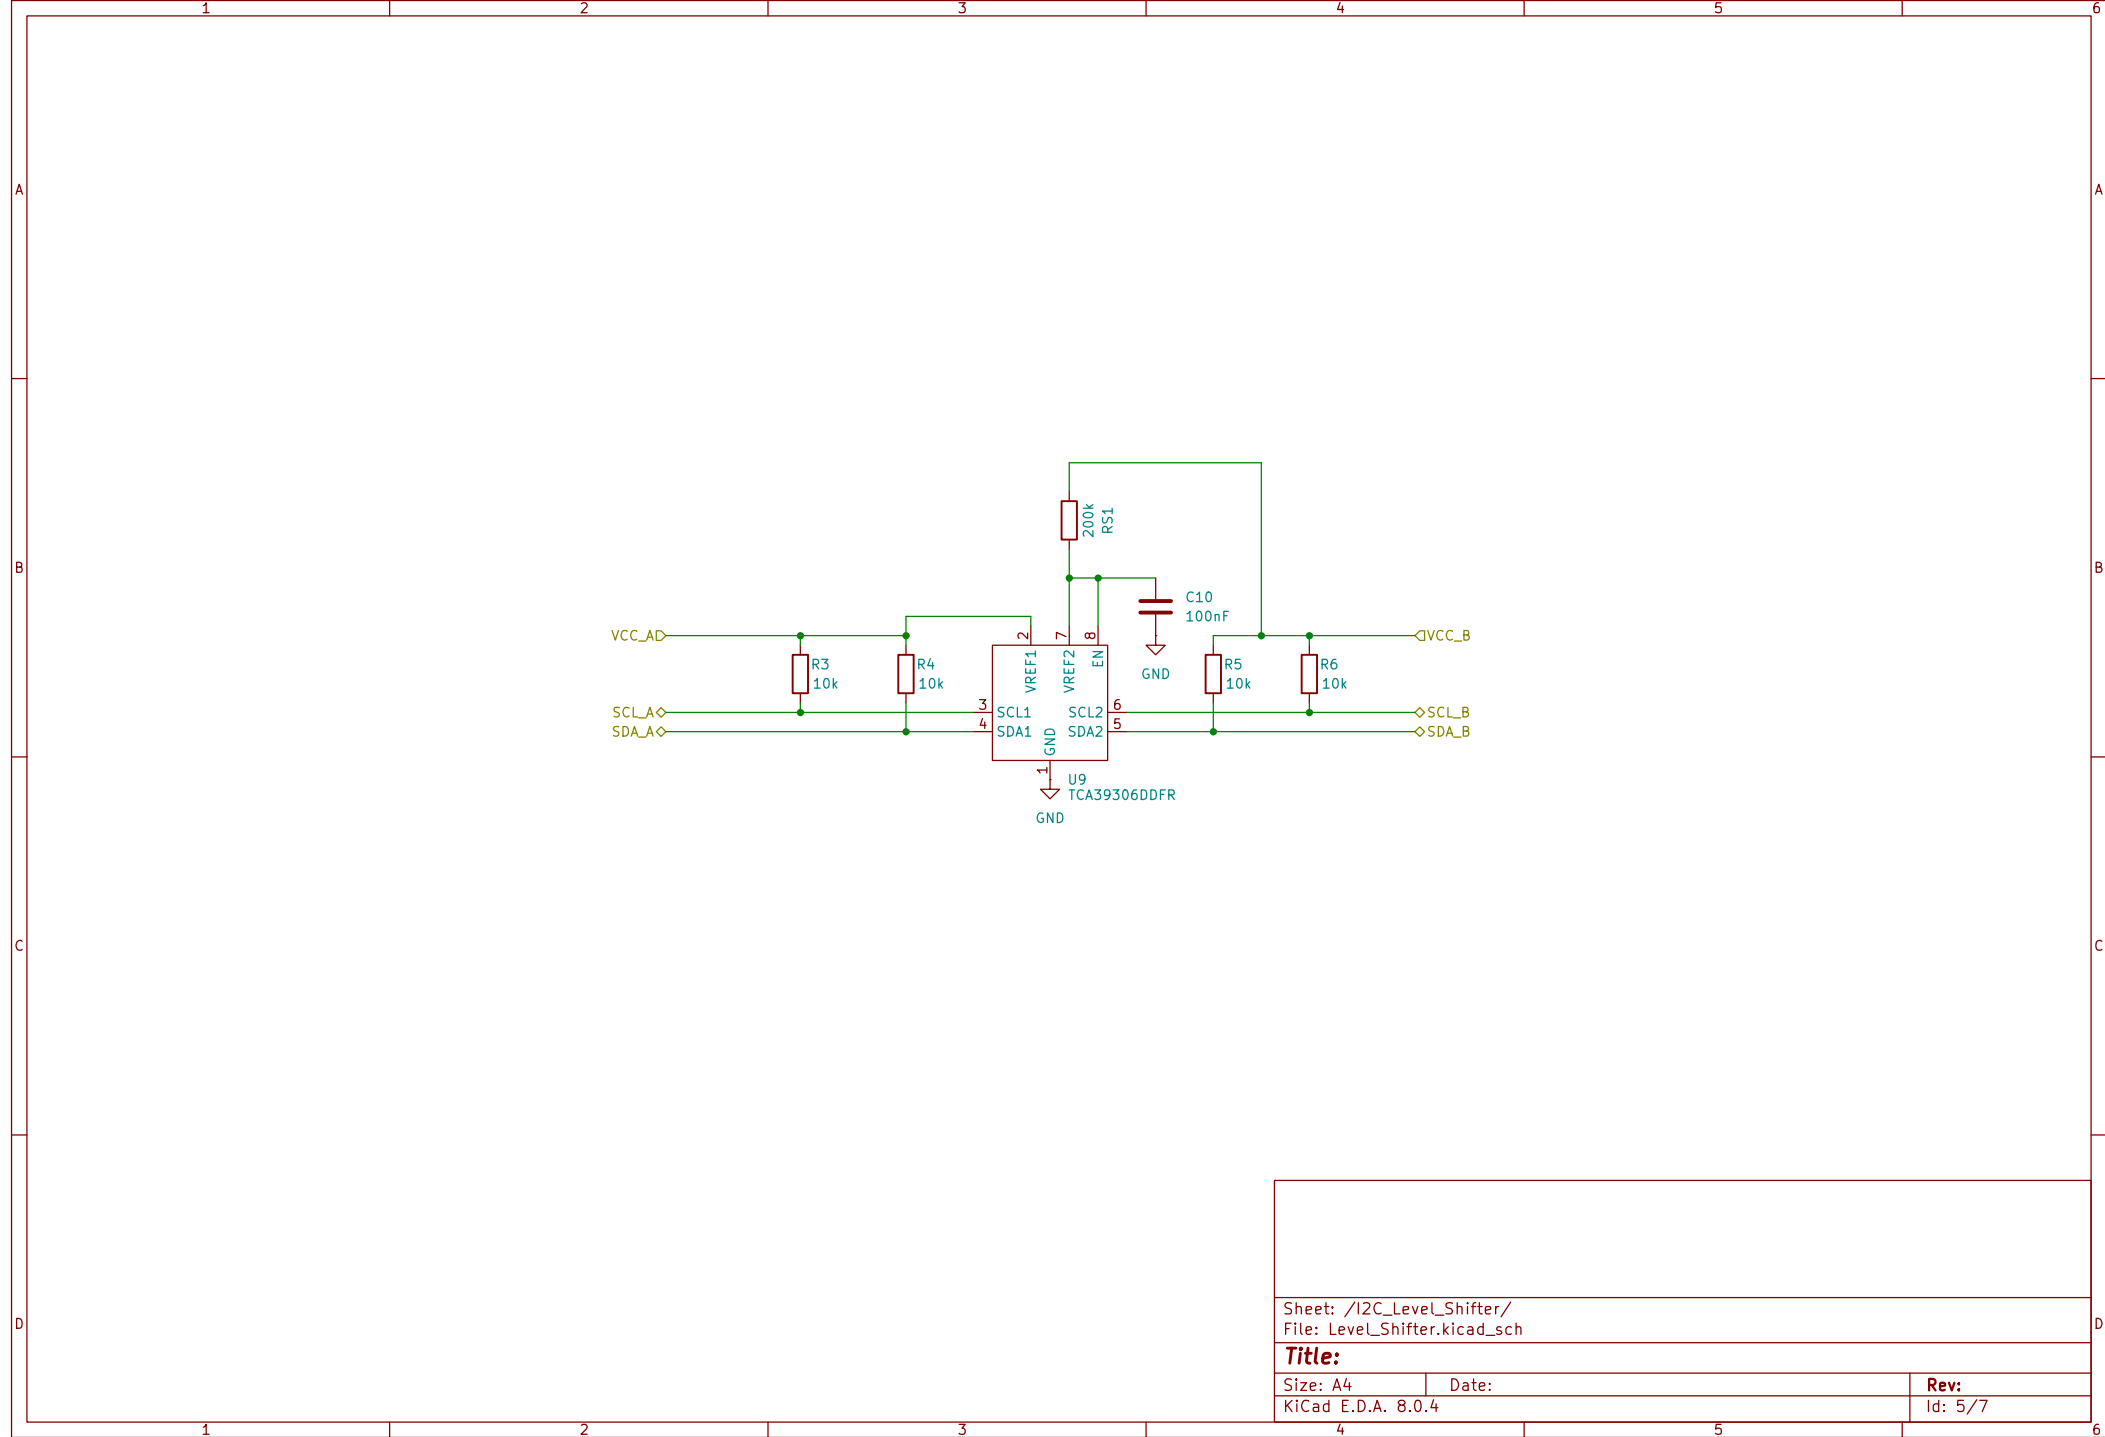

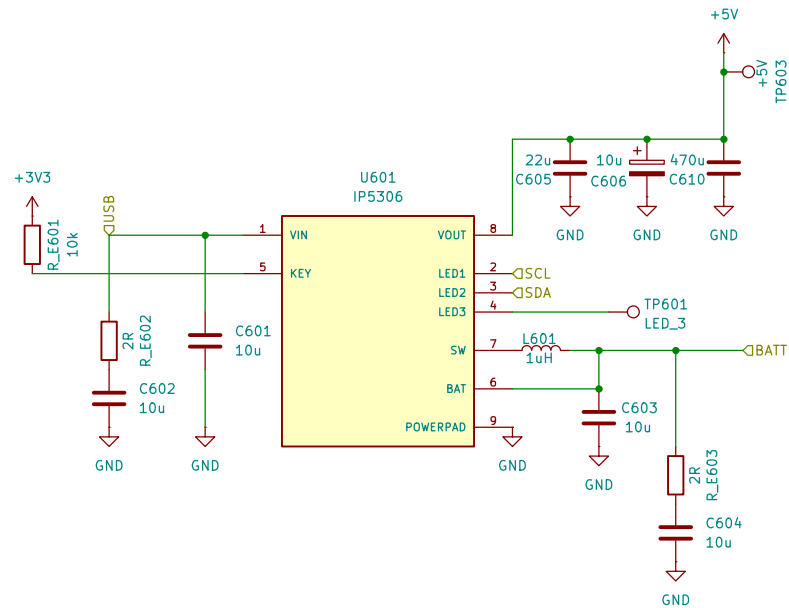

Battery connection

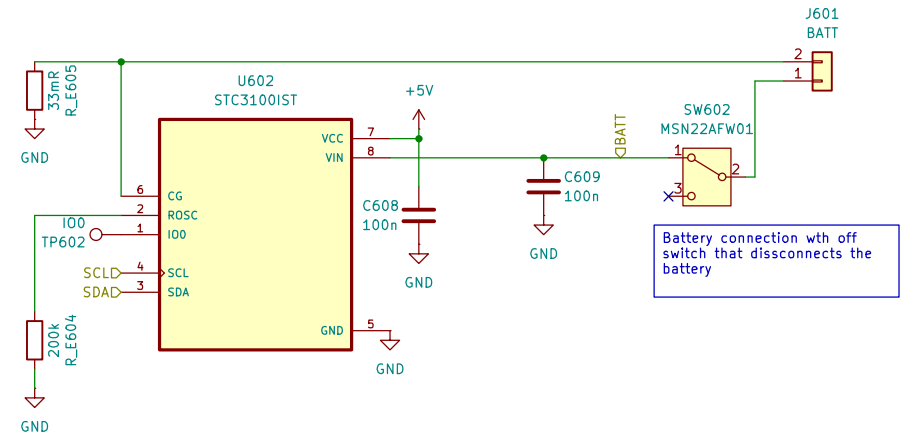

Battery connection with off switch that disconnects the battery

Sheet: /Battery/
File: Battery.kicad_sch

Title:

Size: A4
KiCad E.D.A. 8.0.4

Date:

Rev:
Id: 6/7

