



SECUROS®
DISPATCHER

Version 2026

Administration Guide

SecurOS Dispatcher Administration Guide (AG - EN; Version 2026 , build 1 on 4/2/2026).

© Copyright Intelligent Security Systems, 2026.

SecurOS® ("SecurOS") and all respective logos are trademarks of ISS Corp, in the U.S. and/or other countries.

Intelligent Security Systems reserves the right to make changes to both this Manual and to the products it describes. System specifications are subject to change without notice. Nothing contained within this Manual is intended as any offer, warranty, promise or contractual condition, and must not be taken as such.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any human or computer language in any form by any means without the express written permission of the copyright holder. Unauthorized copying of this publication may not only infringe copyright but also reduce the ability of Intelligent Security Systems to provide accurate and up-to-date information to both users and operators.

Contents

1 Preface	5
1.1 Scope	5
1.2 Target Audience	5
1.3 Using This Manual	5
1.4 Getting Technical Support	5
1.5 Design Convention	6
1.6 Design Elements	7
2 General Description	8
3 Installing Software	9
4 SecurOS Preconfiguration	10
4.1 Server-side Configuration	10
4.1.1 Database	10
4.1.2 REST API	11
4.1.3 WebConnect	11
4.1.4 Map	11
4.1.5 Image Processor	11
4.1.6 Dispatcher: Server	12
4.1.7 Configuring User Rights	13
4.2 Client-side Configuration	14
4.2.1 Media Client	14
4.2.2 Map: GUI	14
4.2.3 Dispatcher: GUI	15
5 Administration of the Module	17
5.1 Connecting to the Administration Panel	18
5.2 Configuring the Module	19
5.2.1 Sites	20
5.2.2 Command Centers	21
5.2.3 Buildings	22
5.2.4 Scheduled Maintenance Types	23
5.2.5 Operator Actions	24
5.2.6 Causes of Event Rejection	25
5.2.7 Users	26
5.2.8 Devices	28
5.2.8.1 Device Editing	31
5.2.8.2 Bulk Device Editing	31
5.2.8.3 Manual Device Addition	32
5.2.9 Device Types	33
5.2.10 Event Types	35
5.2.11 Incident Types	36
5.2.11.1 Creating Incident Type	37
5.2.11.2 Creating Operator Actions Chain	38
5.2.12 Integration Settings	40
5.2.13 Common Settings	42
5.3 Working with Incident History	45

5.4 Working with Administration History	48
6 Technical Support Information	50

1 Preface

This section contains general information about this document, the means of its design and use, as well as how to get additional technical support for the product.

1.1 Scope

This document is an administrator's guide that describes the procedure of configuring the server side of the SecurOS Dispatcher Module.

1.2 Target Audience

The manual is intended for system administrators who are experienced users of SecurOS and have knowledge of CCTV, computer hardware, LAN connection setup, networking based on TCP/IP protocol.

1.3 Using This Manual

This document is organized in such a way that the user can use both its printed and electronic versions. In the latter case, Adobe Reader features such as bookmarks and hyperlinks are available to navigate through the document. This manual refers to other SecurOS documents, which can be found on the SecurOS installation media or on the ISS company website (www.issivs.com).

This document can be called directly from SecurOS by pressing the **F1** key. In the administration mode, it is possible to open a context help for a given object or utility description by pressing the **F1** key when its settings window or utility window is open. In the operator mode, the **F1** key can be used to open a description of the active window of the current operator interface or utility.

Some SecurOS Modules can be implemented as web applications. It is not possible to call the online help with the **F1** key from the web pages of such applications.

1.4 Getting Technical Support

If you have any questions after reading this manual, please address them to your system administrator or supervisor.

For any further information, please contact the Intelligent Security Systems Technical Support Team:

Note. For all technical support requests, please open a ticket from the ISS Partner Portal: <https://support.issivs.com>. You will need to create an account if you don't already have one.

Table 1. Technical support phone numbers

Region	Phone
North America	
United States (HQ) – Florida & New Jersey offices	+1 732 855 1111
Canada	+1 778 929 8565
Mexico	+52 1 55 2501 6369
Mexico, Central America & the Caribbean (MCA)	
Aruba, Barbados, Belize, Costa Rica, Curacao, Dominican Republic, El Salvador, Guatemala, Guyana, Haiti, Honduras, Jamaica, Mexico, Nicaragua, Panama, Puerto Rico, Saint Lucia, Saint Martin, Suriname, Trinidad and Tobago	+52 1 55 2501 6369 (Mexico-based)
Spanish Speaking South America (SSA)	
Argentina, Bolivia, Chile, Colombia, Ecuador, Paraguay, Peru, Uruguay	+57 300 442 2808 (Colombia-based)
Portuguese Speaking Countries	
Brazil, Portugal	+55 11 2262 2894
Middle East	
Dubai	+971 4 874 7100
Qatar	+974 6 677 8309
Saudi Arabia	+966 54 109 9699
Europe	
Serbia	+381 62 891 0042
Ukraine	+380 44 299 0810
Africa	
Egypt	+20 10 0202 5200

For a faster problem solving, we recommend preparing the service information described in the **Technical Support Information** section before contacting the Technical Support Team.

1.5 Design Convention

The following fonts and formatting tools are used to represent various terms and titles in this document.

Font	Description
bold type	Used in workstation names, utilities and screen forms, windows and dialog boxes, as well as the names of their elements (GUI elements).
<i>italic type</i>	Used to mark out the SecurOS objects.
<i>bold italic type</i>	Used to mark out the elements of homogeneous lists.
monospace	Used to mark out macro text and programming code, file names and their paths. It is also used to specify the necessary options and to mark out values specified by the user from the keyboard.
green	Used to mark out the cross-references within the document and links to the available external documents.

1.6 Design Elements

Warning! Serves to draw the user's attention to the information that is necessary for the correct perception of the following text. As a rule, this information has a warning character.

Note. Note text in the topic body.

Additional Information

Used to display additional information. These types of elements contain, for example, a description of options for executing a task or a reference to additional literature.

2 General Description

SecurOS Dispatcher is a software platform for operational centralized control and automated management of incidents: alarm events and security-related processes at large infrastructure facilities.

SecurOS Dispatcher collects and processes data from multiple unrelated subsystems and devices, provides users with the ability to manage them, and work with incidents whose sources are events received from integrated subsystems and devices.

The platform provides efficient operation of hierarchically organized dispatch services, as well as their operational interaction with dependent structures and autonomous departments through an unified interface.

SecurOS Dispatcher provides:

- round-the-clock centralized monitoring of the state of the entire complex of engineering and technical means of security;
- continuous registration of incidents based on events generated from SecurOS video analytical detectors, as well as from any SecurOS integrated executive devices;
- working with incidents via a user-friendly interface, including automation tools and a decision support system;
- long-term storage of incident information;
- logging of operators' actions when they perform regulatory procedures for incidents processing;
- generation of reports on incidents and operator actions for further analysis and management decision making.

3 Installing Software

The SecurOS Dispatcher Module must be installed on the computer with *Video Server* role, where the *Dispatcher: Server* object will be created.

To install the SecurOS Dispatcher Module software, follow these steps:

1. Stop the Video Management System Server service with **Server Control Agent** utility (see [SecurOS Administration Guide](#)). Its icon can be found in system tray.

Note. Video Management System Server service can also be stopped with Windows tools: **Computer** → **Manage** → **Services and Applications** → **Services**.

2. Run the product installation file and wait for the installation to complete.
3. Start the Video Management System Server service with **Server Control Agent** utility. Its icon can be found in system tray.

Note. Video Management System Server service can also be started with Windows tools: **Computer** → **Manage** → **Services and Applications** → **Services**.

4 SecurOS Preconfiguration

Warning! Open the TCP ports specified in the **Database**, **REST API** and **WebConnect** objects configuration in the firewall settings for proper Module operation.

Module operation requires configuration of both **Server-side** and **Client-side** components.

4.1 Server-side Configuration

For the Module's *Server side* to operate, the following objects must be created and configured in the configuration:

- **Database.**
- **REST API.**
- **WebConnect.**
- **Map.**
- **Image Processor.**
- **Dispatcher: Server.**

It is also necessary to configure user rights (see **Configuring User Rights**).

4.1.1 Database

The object is used to store Module data (see **SecurOS Administration Guide**).

Notes: If the *Dispatcher* Module is operating in the *Cluster*, it is recommended to provide database accessibility to all *Hosts* in one of the following ways:

- Use a database established on a dedicated server.
 - Use a database established on the *iSCSI drive* (see **SecurOS Administration Guide**). This method is the most reliable.
-

To create and configure the *Database* object, follow these steps:

1. In the *SecurOS Object Tree*, select the *Security Zone* object.
2. In the *Databases* group, create the child object *Database*.
3. Open the settings window of the created *Database* object and select the **Create new** option.
4. Set the following parameters:
 - **Type** – select the `PostgreSQL` value.

Note. The Module supports PostgreSQL type of DBMS only.

- **Host** – specify the DNS name or IP address of the server where the database will be created.
- **Port** – the network port number for connecting to the database. The default value is 5432.
- **Database name** – specify the name of the database.

- **User** — specify the user name for connecting to the database.
 - **Password** — specify the user password for connecting to the database.
5. Click the **Create DB and User** button.
 6. Click the **OK** button.

4.1.2 REST API

The object is used to exchange data with the *Dispatcher* Module (see [SecurOS Administration Guide](#)).

To create the *REST API* object:

1. In the SecurOS *Object Tree*, select the *Computer* with the *Video Server* role.
2. In the *Integration & Automation* group, create the child object *REST API*.
3. Set the object parameters if necessary and save the changes.

4.1.3 WebConnect

The object is used to view video from linked *Cameras* (see [Devices](#)) and *Maps* (see [Map](#)) when processing incidents in the SecurOS Dispatcher web client. The use of the *WebConnect* is necessary when it is not possible to work with the SecurOS *Client* directly (for example, when working via tablet devices used by *Emergency Team operators*). For more information about the object, see [SecurOS WebConnect Quick Start Guide](#).

To create the *WebConnect* object:

1. In the SecurOS *Object Tree*, select the *Computer* with the *Video Server* role.
2. In the *Mobile & Web Servers* group, create the child object *WebConnect*.
3. Set the object parameters if necessary and save the changes.

4.1.4 Map

The object is used to place devices (see [Devices](#)) on the map. For more information about the object, see [SecurOS Administration Guide](#).

To create the *Map* object:

1. In the SecurOS *Object Tree*, select the *Security Zone* object.
2. In the *Maps* group, create the child object *Map*.
3. Set the object parameters if necessary and save the changes.

4.1.5 Image Processor

The object is used to receive frames from the *Cameras*. For more information about the object, see [SecurOS Administration Guide](#).

To create the *Image Processor* object:

1. In the SecurOS *Object Tree*, select the *Computer* with the *Video Server* role.

2. Create the *Image Processor* object.


Note. For *Cameras* from which it is planned to receive frames, it is necessary to enable recording.

4.1.6 Dispatcher: Server

The object is used to configure the server side of Module SecurOS Dispatcher.

To create and configure the *Dispatcher: Server* object, follow these steps:

1. In the SecurOS *Object Tree*, select the *Computer* with the *Video Server* role.
2. In the *Mobile & Web Servers* group, create the child object *Dispatcher: Server*.
3. In the *Dispatcher: Server* object settings (see Figure 1), set the parameters given in the Table 2.

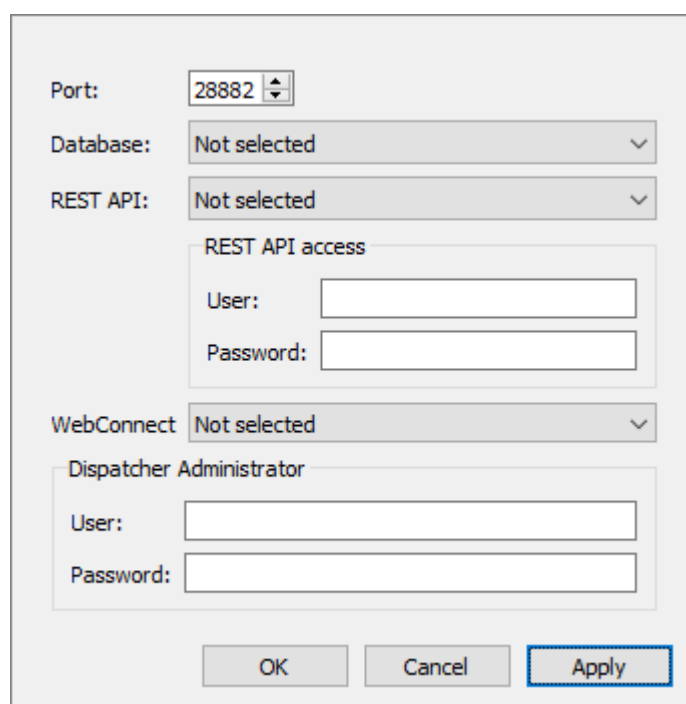

The screenshot shows a configuration window for the 'Dispatcher: Server' object. It includes the following elements:

- Port:** A numeric input field with the value '28882' and a small up/down arrow icon.
- Database:** A dropdown menu currently showing 'Not selected'.
- REST API:** A dropdown menu currently showing 'Not selected'.
- REST API access:** A sub-section containing two text input fields labeled 'User:' and 'Password:'.
- WebConnect:** A dropdown menu currently showing 'Not selected'.
- Dispatcher Administrator:** A sub-section containing two text input fields labeled 'User:' and 'Password:'.
- Buttons:** At the bottom, there are three buttons: 'OK', 'Cancel', and 'Apply' (which is highlighted with a blue border).

Figure 1. Dispatcher: Server object settings window

Table 2. Object settings of the *Dispatcher: Server*

Parameter	Description
Port	Specify the network port to connect to the client. The default value is 28882.
Database	In the drop-down list, select the <i>Database</i> intended for the Module data storage (see Database).
REST API	In the drop-down list, select the <i>REST API</i> object intended for interaction with the Module (see REST API).

Parameter	Description
REST API access	Specify in the User and Password fields the credentials of the <i>User</i> who has access to the selected <i>REST API</i> object. Note. The specified <i>User</i> must have access to SecurOS objects, the data about which needs to be imported into the Module database.
WebConnect	In the drop-down list, select the <i>WebConnect</i> object intended for interaction with the Module (see WebConnect).
Dispatcher Administrator	In the User and Password fields, specify arbitrary credentials, which will be used to log in to the <i>Dispatcher</i> administration panel (see Connecting to the Administration Panel). Warning! Do not share <i>Dispatcher Administrator</i> account information with third parties.

4.1.7 Configuring User Rights

In SecurOS, user access rights are configured using the *User Rights* object (see **SecurOS Administration Guide**). Each SecurOS object displays an icon reflecting the access level granted to a user or user group. The icon can be changed by clicking it. The Module operation is affected by *User Rights* settings for the following objects:

- **Camera.**
- **Archiver.**
- **Map.**
- **WebConnect.**

Camera

Configuring *User Rights* for the *Camera* object determines the ability to view video.

The following options are available:

-  **No access** — the *Camera* is not displayed in the user interface.
-  **View** — the *Camera* is displayed in the user interface. Only live video viewing is available.
-  **Control and higher** — the *Camera* is displayed in the user interface. Live and archived video viewing is available.

Archiver

Configuring *User Rights* for the *Archiver* object regulates the ability to view video from the *Long-term archive*.

The following options are available:

-  **No access** — viewing the *Long-term archive* is prohibited.
-  **View and higher** — viewing the *Long-term archive* is allowed.

Note. Viewing the *Long-term archive* is possible only if the access level to the *Camera* object is  **Configure** and higher.

Map

Configuring *User Rights* for the *Map* object determines the ability to view the map.

The following options are available:

-  **No access** — the *Camera* is not displayed in the user interface.
-  **View and higher** — the *Camera* is displayed in the user interface.

WebConnect

Configuring *User Rights* for the *WebConnect* object determines the ability to work with *Maps* and *Cameras* in the web client.

The following options are available:

-  **No access** — displaying any *Maps* and *Cameras* in the web client is unavailable, even if the required access level to the corresponding objects is granted (see above).
-  **View and higher** — *Maps* and *Cameras* are displayed in the web client according to the configured access level for the corresponding objects (see above).

4.2 Client-side Configuration

For the Module's *Client side* to operate, the following objects must be created and configured in the configuration:

- **Media Client.**
- **Map: GUI.**
- **Dispatcher: GUI.**

4.2.1 Media Client

The object is used to view the live and archived video from *Cameras*. For more information about the object, see [SecurOS Administration Guide](#).

To create the *Media Client* object:

1. In the SecurOS *Object Tree*, select the *Computer* object on which it is planned to work with the Module.
2. Create the *Media Client* object that is a child of the *Desktop* object.
3. Set the object parameters if necessary and save the changes.

4.2.2 Map: GUI

The object is used for displaying maps, the location of objects (*Cameras*, *Devices*, etc.) on them, and searching for those objects. For more information about the object, see [SecurOS Administration Guide](#).

To create the *Map: GUI* object:

1. In the SecurOS *Object Tree*, select the *Computer* object on which it is planned to work with the Module.

2. Create the *Map: GUI* object that is a child of the *Desktop* object.
3. Set the object parameters if necessary and save the changes.

4.2.3 Dispatcher: GUI

The object is designed to display the SecurOS Dispatcher operator interface.

To create and configure the *Dispatcher: GUI* object, follow these steps:

1. In the SecurOS *Object Tree*, select the *Computer* object on which it is planned to work with the Module.
2. Create the *Dispatcher: GUI* object that is a child of the *Desktop* object.
3. In the object settings window (see Figure 2), set the parameters given in the Table 3.

Figure 2. Dispatcher: GUI object settings window

Table 3. Object settings of the *Dispatcher: GUI*

Parameter	Description
Window position	
X, Y, W, H	Specify the top left corner coordinates relative to the top left corner of the display (X , Y), as well as width and height (W , H) of the <i>Dispatcher: GUI</i> window (as a percentage of the screen size).
Display	Select the ID of the physical monitor on which the object will be displayed.
Dispatcher: Server	In the drop-down list select the <i>Dispatcher: Server</i> object intended for interaction with the Module (see Dispatcher: Server).

Parameter	Description
Work with Media Client	In the drop-down list, select the <i>Media Client</i> object intended for interaction with the Module (see Media Client). Note. Media Clients with the "Active" and "Alarming" working modes are not in the list.
Work with Map: GUI	In the drop-down list select the <i>Map: GUI</i> object intended for interaction with the Module (see Map: GUI).

5 Administration of the Module

The *Dispatcher* Module provides aggregation of various events of video analytics and ACS systems integrated into SecurOS. Based on these events, incidents are generated, which are reviewed and processed by operators according to predefined scenarios.

Control areas are defined by using different levels of logical entities linked to each other:

- **Device** – a source of events that generate incidents.
- **Site** – a logical entity that groups *Devices*.
- **Building** – a logical entity that groups *Sites*.
- **Command Center** – a logical entity that groups *Buildings*.

The responsibility and workload among operators is distributed by assigning them to several *Command Centers* (see **Users**). Any operator may be assigned to one or more *Command Centers*. The authority and capabilities of operators may differ depending on their role (see **SecurOS Dispatcher User Guide**).

Figure 3 shows a schematic example of the distribution of *Devices* into intermediate logic groups as part of two *Command Centers*.

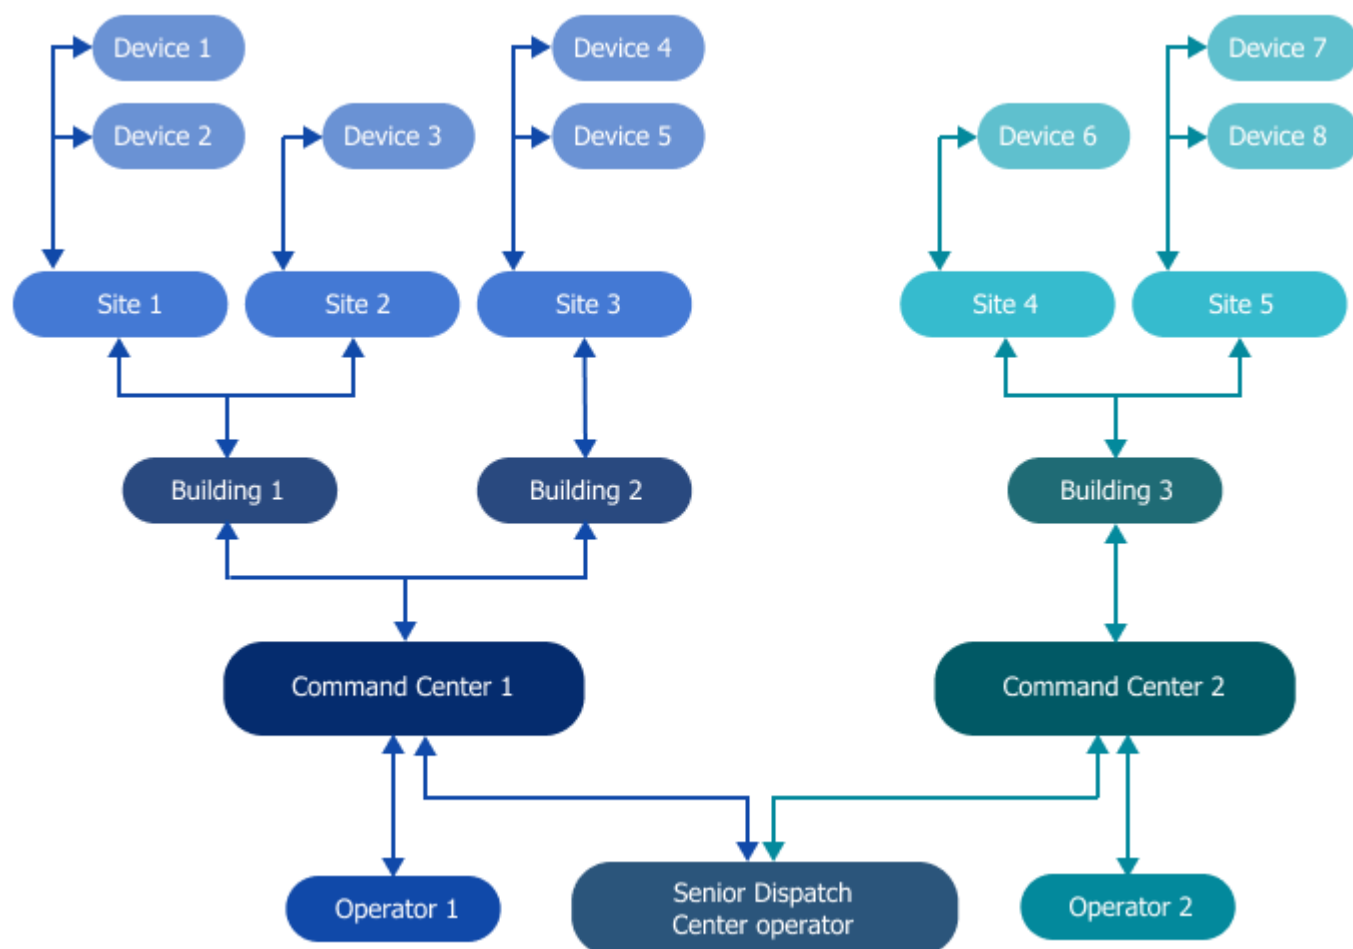


Figure 3. Example of logical entity distribution

According to this example, incidents from Devices 1-5 will be forwarded to Operator 1 and incidents from Devices 6-8 will be forwarded to Operator 2. In this case, the Senior Dispatch Center operator can work with incidents from any Devices. So the Module provides the ability to organize complex schemes for distributing incidents between operators.

The section describes the following operations:

- **Connecting to the Administration Panel.**
- **Configuring the Module.**
- **Working with Incident History.**

5.1 Connecting to the Administration Panel

To configure the SecurOS Dispatcher Module, use the administration panel, which can be accessed from any computer on the network using a web browser.

To connect to the administration panel, follow the steps below:

1. In the browser address bar, enter the connection parameters in the following format:

```
http://<IP_address>:<port_number>/admin
```

Where:

- <IP_address> — IP address of the server configured with the *Dispatcher: Server* object (see **Dispatcher: Server**).
- <port_number> — network port specified in the *Dispatcher: Server* object settings.

For example, `http://127.0.0.1:28882/admin`.

2. In the window that appears (see Figure 4), specify the login and password of the *User* or *Dispatcher Administrator*.

Warning!

1. Do not share *Dispatcher Administrator* account information with third parties.
2. *User* access to the administration panel is configured by the *Dispatcher Administrator* (see **Users**).
3. The **Username** and **Password** fields are case sensitive.
4. The interface language depends on the SecurOS installation language.

Figure 4. SecurOS Dispatcher administration panel login page

5.2 Configuring the Module

If the connection to the administration panel is successful, the **Events** section will be opened (see [Working with Incident History](#)). To access the Module settings, select the **Settings** menu located on the right side of the upper panel (see Figure 5).

Figure 5. "Settings" menu

An example procedure for configuring the Module is given below:

- Importing event sources and creating incident types:
 - Create one or more *Command Centers* (see [Command Centers](#)).
 - Create *Buildings* and link them to *Command Centers* (see [Buildings](#)).
 - Create *Sites* and link them to *Buildings* (see [Sites](#)).
 - Import data about event sources — devices that exist in the SecurOS configuration as objects (see [Devices](#)). Edit the settings of the *Devices* that are required to send events to the Module and link them to *Sites*.
 - Import data on supported SecurOS event codes (see [Event Types](#)).

- Create the required incident types (see [Incident Types](#)).
- If necessary, create reasons that operators can select when dismissing incidents (see [Causes of Event Rejection](#)).
- Check and edit the settings that define the incident reaction timeout, time frame for generating the compound incident etc. (see [Common Settings](#)).
- Adding operators:
 - Import data of *SecurOS Users* and configure their profiles to operate with the Module (see [Users](#)).
 - Check and edit the settings that define the availability to operators of functions such as exporting a standard report, viewing the operator action history of all *Command Centers*, etc. (see [Common Settings](#)).

5.2.1 Sites

Site is a logical entity that groups *Devices* (see [Devices](#)) by territorial or other attributes. Each *Site* must be linked to a *Building* (see [Buildings](#)).

To access the *Sites* management, open the **Sites** section (see Figure 6). In this section it is possible to create *Sites*, as well as edit or delete existing ones.

Number	Site	Building		
1	Perimeter-North	1		
2	Perimeter-West	1		

Figure 6. "Sites" section

Each row of the table contains the following fields and controls:

- **Number** – identifier of the *Site*.
- **Site** – name of the *Site* to be displayed in the client.
- **Building** – identifier of the *Building* to which the *Site* is linked.
- (**Update**) – button to proceed to edit the *Site*.
- (**Delete**) – button to delete the *Site*.

To create a new *Site*, click the **Create Site** button. In the opened **Create Site** section (see Figure 7) the following fields are required to be filled in:

- **Number** – specify the unique identifier of the *Building*.

Note. The *Site* identifier is set during its creation and cannot be changed during editing.

- **Site** – name of the *Site* to be displayed in the administration panel and in the client.

- **Building** — select a previously created *Building* from the drop-down list, in which this *Site* will be logically included.

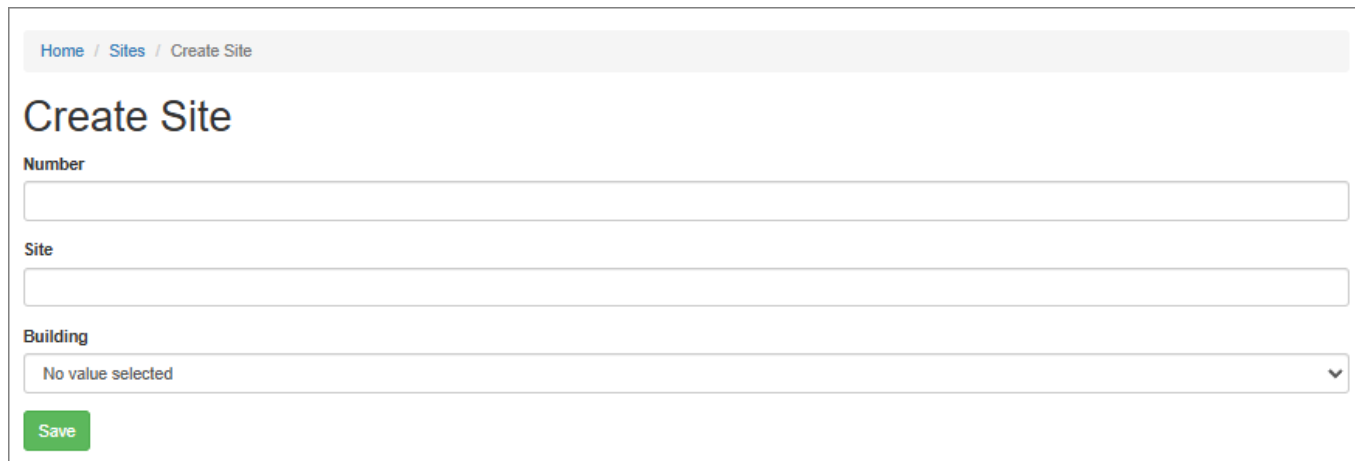



Figure 7. "Create Site" section

Click the **Save** button to complete the *Site* creation.

5.2.2 Command Centers

Command Center is a logical entity that groups *Buildings* (see **Buildings**). Operators are assigned to one or more *Command Centers* to receive incidents from all associated *Devices*.

Open the **Command Centers** section to access the *Command Centers* management (see Figure 8). In this section it is possible to create *Command Centers*, as well as edit or delete existing ones.

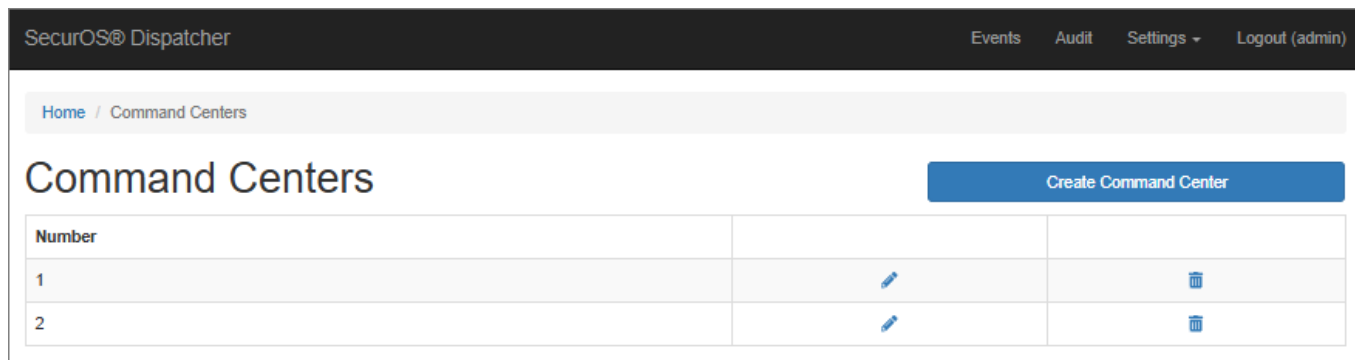

Number		
1		
2		

Figure 8. "Command Centers" section

Each row of the table contains the following fields and controls:

- **Number** — identifier of the *Command Center*.
- (**Update**) — button to proceed to edit the *Command Center*.
- (**Delete**) — button to delete the *Command Center*.

To create a new *Command Center*, click the **Create Command Center** button. In the opened **Create Command Center** section (see Figure 9), specify a unique identifier in the **Number** field.




Figure 9. "Create Command Center" section

Click the **Save** button to complete the *Command Center* creation.

5.2.3 Buildings

Building is a logical entity that groups *Sites* (see [Sites](#)) by territorial or other attributes. Each *Building* must be linked to a *Command Center* (see [Command Centers](#)).

To access the *Buildings* management, open the **Buildings** section (see Figure 10). In this section it is possible to create *Buildings*, as well as edit or delete existing ones.

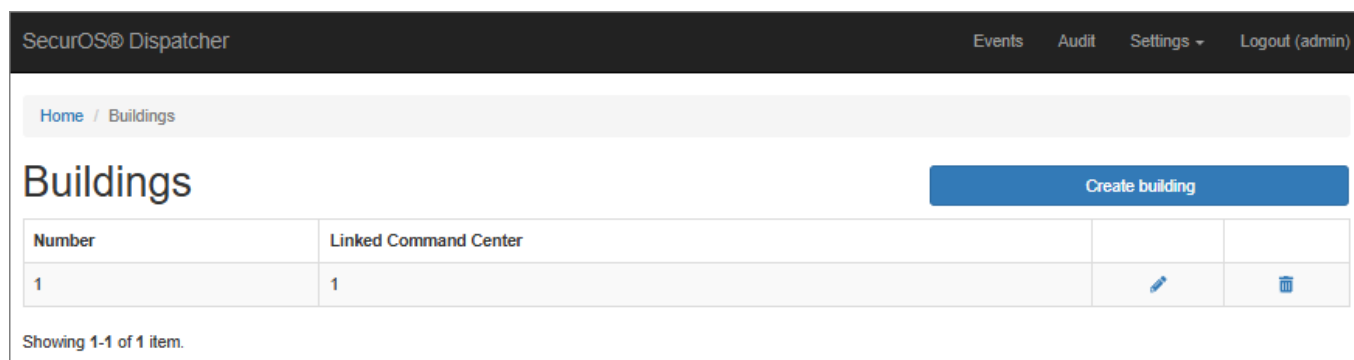

Number	Linked Command Center		
1	1		

Figure 10. "Buildings" section

Each row of the table contains the following fields and controls:

- **Number** – identifier of the *Building*.
- **Linked Command Center** – identifier of the *Command Center* to which the *Building* is linked.
-  (**Update**) – button to proceed to edit the *Building*.
-  (**Delete**) – button for deleting the *Building*.

To create a new *Building*, click the **Create building** button. In the opened **Create building** section (see Figure 11) the following fields are required to be filled in:

- **Number** – specify the unique identifier of the *Building*.
- **Linked Command Center** – select from the drop-down list a pre-created *Command Center* to which this *Building* will be logically included.

Figure 11. "Create building" section

Click the **Save** button to complete the *Building* creation.

5.2.4 Scheduled Maintenance Types

The **Scheduled maintenance types** section (see Figure 12) is used to manage the *Scheduled maintenance types* available to the *Senior Dispatch Center operator* when creating an information request for scheduled maintenance, repair actions, etc. at the monitored *Sites* using the client (see [SecurOS Dispatcher User Guide](#)).

	Description	
✓	Subgrade stabilization	
✓	Rail grinding	
✓	Tunnel lining inspection	

Figure 12. "Scheduled maintenance types" section

Each row of the table contains the following fields and controls:

- ✓/✗ (**Active / Inactive**) — indicator button that can be used to enable or disable the display of this maintenance type in the client.
- **Description** — brief description of the maintenance type that will be displayed in the client.
- (**Edit**) — button to edit the maintenance type.

To create a new *Scheduled maintenance type*, click the **Create scheduled maintenance type** button. In the opened **Create scheduled maintenance type** section (see Figure 13), specify the name of the *Scheduled maintenance type* in the **Description** field. The **Status** field is used to change the display status of this type in the client. If it is necessary to temporarily disable the display of this *Scheduled maintenance type* in the list, select the OFF value.

Figure 13. "Create scheduled maintenance type" section

Click the **Save** button to complete the *Scheduled maintenance type* creation.

5.2.5 Operator Actions

The **Operator actions** section (see Figure 14) is used when creating individual simple steps and conditions that are used to create incident processing scenarios (see [Creating Operator Actions Chain](#)).

ID	Description	Type	
40	Performing actions according to regulations	Process	
80	Visual identification of the user	Process	
110	Disabling intrusion detectors and analytical detectors	Process	
120	Tracking visitor activity	Process	

Figure 14. "Operator actions" section

Each row of the table contains the following fields and controls:

- **ID** — identifier of the action.
- **Description** — name of the action.
- **Type** — type of the action (simple step or condition).
- (**Update**) — button to proceed to edit the previously created action.

To create a new step or condition, click the **Create operator action** button. The **Create operator action** section is shown in Figure 15.

Figure 15. "Create operator action" section

Fill in the following fields:

- **Description** – name that the action will be displayed with in the list of available actions.
- **Type** – type of action. Possible values:
 - **Process** – simple step that requires the operator to confirm its execution.
 - **Decision** – branching condition that allows different actions to be used depending on the choice of operator (Yes or No).

5.2.6 Causes of Event Rejection

The **Causes of event rejection** section (see Figure 16) is used to manage the list of causes available to operators when closing incidents due to a false alarm.

Notes:

1. A different set of causes can be specified for different incident types (see [Creating Incident Type](#)).
2. Specifying the cause is mandatory for operators when dismissing incidents. At the same time, operators may not leave an explanation if the **Mandatory comment on event rejection** option is disabled (see [Common Settings](#)).

	Name	Category	
☒	Animal movement	False positive	
☒	Weather conditions	False positive	

Figure 16. "Causes of event rejection" section

Each row of the table contains the following fields and controls:

- ☒ / ☐ (**Active / Inactive**) – indicator button that can be used to enable or disable the display of this cause in the client.
- **Name** – name of the cause displayed in the client.
- **Category** – category of the cause displayed in the client:

- False positive – if an incident has been generated in error, for example, as a result of incorrect operation of software and hardware.
- Nominal – if an incident has been generated validly, but it is not required to be processed according to the established procedure.
-  (**Update**) – button to proceed to edit the previously created cause.

To add a new cause, click the **Create cause** button. In the opened **Create cause** section (see Figure 17), specify a name for the cause in the **Name** field, select a cause category in the **Category** field, and click the **Save** button.


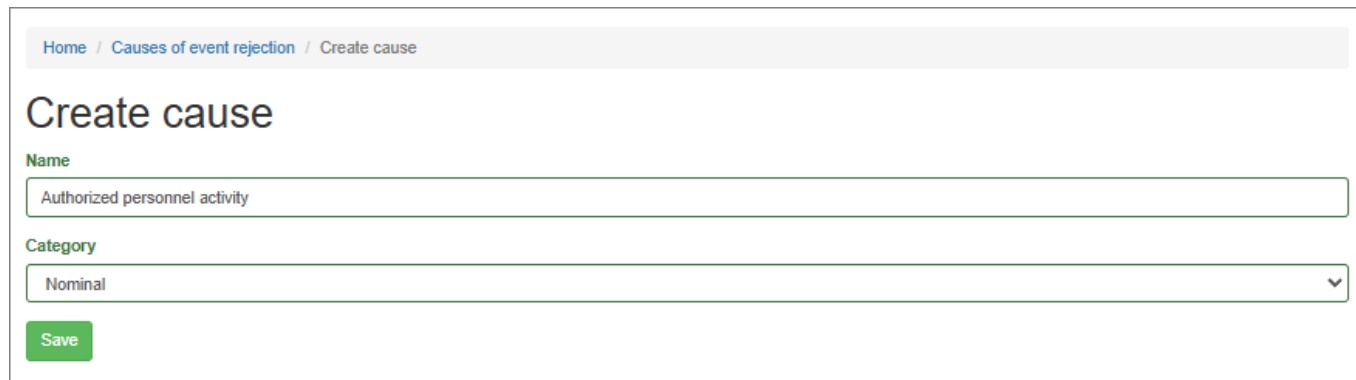


Figure 17. "Create cause" section

5.2.7 Users

The **Users** section is used for managing operators (see Figure 18). To add new operators, they must have *User* accounts previously created in the SecurOS configuration. Click the **Import from SecurOS** button to load the information of all SecurOS *Users*.

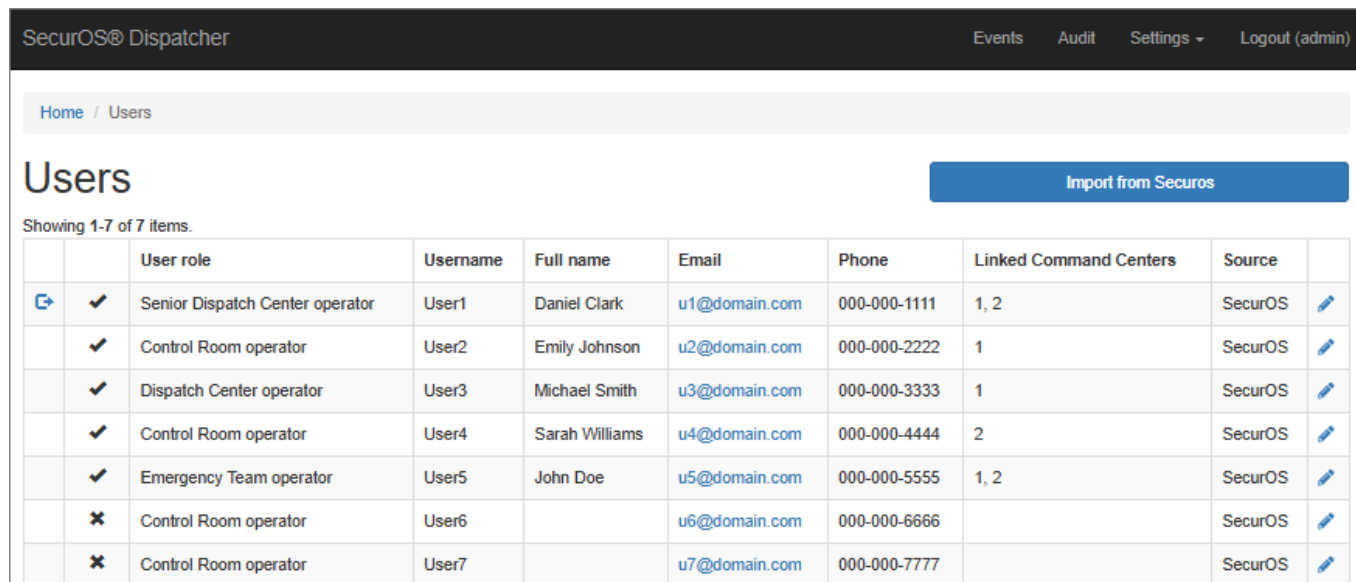

		User role	Username	Full name	Email	Phone	Linked Command Centers	Source	
		Senior Dispatch Center operator	User1	Daniel Clark	u1@domain.com	000-000-1111	1, 2	SecurOS	
		Control Room operator	User2	Emily Johnson	u2@domain.com	000-000-2222	1	SecurOS	
		Dispatch Center operator	User3	Michael Smith	u3@domain.com	000-000-3333	1	SecurOS	
		Control Room operator	User4	Sarah Williams	u4@domain.com	000-000-4444	2	SecurOS	
		Emergency Team operator	User5	John Doe	u5@domain.com	000-000-5555	1, 2	SecurOS	
		Control Room operator	User6		u6@domain.com	000-000-6666		SecurOS	
		Control Room operator	User7		u7@domain.com	000-000-7777		SecurOS	


Figure 18. "Users" section

Each row of the table contains the following fields and controls:

-  (**Disconnect user**) – button to force termination of the *User* session in the SecurOS Dispatcher client.
-  (On) /  (Off) – account status indicator.
- **User role** – role of the *User*.

- **Username** — name of the *User* object in the SecurOS *Object Tree*.
- **Full name** — name of the operator that is displayed in the client.
- **Email** — email address specified in the *User* object settings.
- **Phone** — phone number specified in the *User* object settings.
- **Linked Command Centers** — *Command Centers* assigned to this *User* (see [Command Centers](#)).
- **Source** — account type.
-  (**Update**) — button to proceed to edit the *User*.

After importing the data from SecurOS, it is necessary to edit the profiles of those *Users* who will work with the client part of the Module as operators. To edit the *User* profile, click the  (**Update**) button on the right side of the corresponding row of the table. After that, the **Update user** section will be opened (see Figure 19).

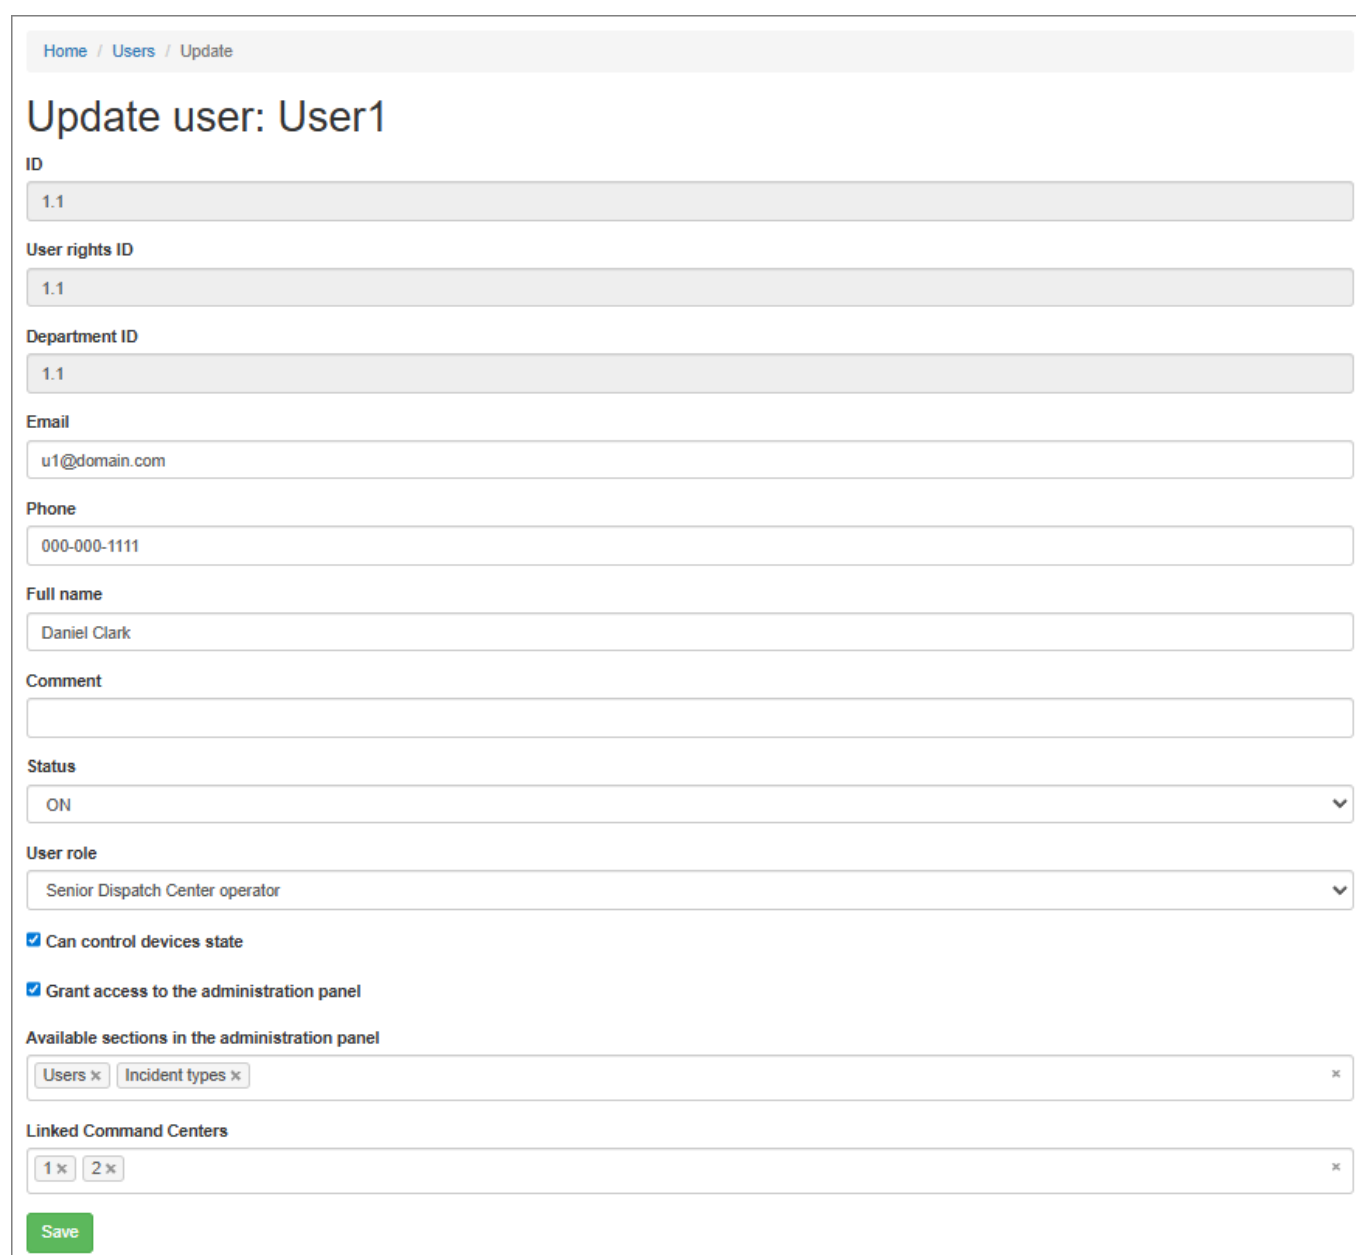

Home / Users / Update

Update user: User1

ID
1.1

User rights ID
1.1

Department ID
1.1

Email
u1@domain.com

Phone
000-000-1111

Full name
Daniel Clark

Comment

Status
ON

User role
Senior Dispatch Center operator

☒ Can control devices state

☒ Grant access to the administration panel

Available sections in the administration panel
Users × Incident types ×

Linked Command Centers
1 × 2 ×

Save

Figure 19. "Update user" section

Fields such as **ID**, **User rights ID** and **Department ID** cannot be edited.

Verify and specify the values of the following parameters:

- **Email** – specify email address of the *User*.
- **Phone** – specify phone number of the *User*.

Note. The **Email** and **Phone** fields will be filled in automatically if the corresponding values are specified in the *User* object settings.

- **Full name** – specify real name of the user if necessary. The specified name will be displayed instead of the login in the SecurOS Dispatcher client interface.
- **Comment** – provide any potentially useful information.
- **Status** – change the account status if required:
 - ON – account is enabled (default value).
 - OFF – account is disabled. Authorization and work with the Module are unavailable.
- **User role** – select the operator type from the drop-down list:
 - Control Room operator;
 - Senior Dispatch Center operator;
 - Operator info;
 - Administrator;
 - Dispatch Center operator;
 - Emergency Team operator.

Note. Detailed descriptions of the purpose and capabilities of each type are provided in the [SecurOS Dispatcher User Guide](#).

- **Can control devices state** – select the checkbox to allow the *User* with the *Senior Dispatch Center operator* or *Administrator* role to enable and disable receiving events from the available *Devices*.
- **Grant access to the administration panel** – select the option to allow the *User* to connect to the administration panel (see [Connecting to the Administration Panel](#)). In the **Available sections in the administration panel** field that appears below, specify all sections (see [Configuring the Module](#)) whose settings will be available for editing.

Warning! Administration panel access configuration can only be performed by the *Dispatcher Administrator*.

- **Linked Command Centers** – select from the drop-down list the *Command Centers* (see [Command Centers](#)) that need to be included in this *User's* responsibility area.

Warning! If no *Command Center* is selected, authorization in the client will not be available for that *User*.

5.2.8 Devices

The **Devices** section is used to work with SecurOS objects that are sources of events required to generate incidents (see Figure 20).

Warning! The device type data and supported event types must be previously imported from SecurOS (see [Device Types](#)).

Figure 20. "Devices" section

To retrieve the list of objects from the SecurOS configuration, click the **Import devices** button.

Note. The device type data and supported event types must be previously imported from SecurOS (see [Device Types](#)). The addition of objects not supported by automatic import is described in the [Manual Device Addition](#) section.

Upon completion of the operation, the table will display all imported devices (see [Figure 21](#)). To filter the table entries, fill in the following fields and click the **Search** button:

- **Name** — enter the name (or partial name) of the SecurOS object corresponding to the *Device*.
- **Site** — select a *Site* from the drop-down list to display in the table the *Devices* linked to this *Site* only.
- **Type** — select a type from the drop-down list to display in the table *Devices* with this type only.
- **Show Inactive** — select the checkbox to display in the table *Devices* with the **Inactive** status.

Home / Devices

Devices

Device add (manual) Import devices

Name

Site Type

☐ Show Inactive

Search

Set Site Set priority

Showing 1-5 of 5 items.

☐		Type	Name	Site	Sector ID	Integrations	Linked cameras	Zone	Priority	
☐	✓	CAM	Camera 3	Perimeter-North	(not set)	FaceX	Camera 3	3 (Shared)	1 (High)	
☐	✓	CAM	Camera 1	Perimeter-North	(not set)	FaceX	Camera 1	3 (Shared)	3 (Low)	
☐	✓	CAM	Camera 2	Perimeter-West	(not set)			3 (Shared)	3 (Low)	
☐	✓	CAM	Camera 4	(not set)	(not set)			3 (Shared)	3 (Low)	
☐	✓	CAM	Camera 5	(not set)	(not set)			3 (Shared)	3 (Low)	


Figure 21. "Devices" section

Each row of the table contains the following fields and controls:

- **Checkbox** — an element for selecting multiple *Devices* to modify their priority or *Site* (see [Bulk Device Editing](#)).
- / (**Active / Inactive**) — indicator of the current status of this *Device*.
- **Type** — identifier of the SecurOS object type corresponding to this *Device*.
- **Name** — name of the SecurOS object corresponding to this *Device*.
- **Site** — name of the *Site* that the *Device* is linked to (see [Sites](#)).
- **Sector ID** — name of the sector where the *Device* is located.
- **Integrations** — a list of SecurOS Modules that utilize this *Device* (see [Integration Settings](#)).
- **Linked cameras** — *Cameras* that are linked to the *Device*. Viewing video from these *Cameras* is available to the operator when working with the corresponding incident card in the client.
- **Zone** — functional purpose of the zone where the *Device* is physically located.
- **Priority** — priority of the incidents that will be generated based on the events received from the *Device*.
- (**Update**) — button to proceed to *Device* editing (see [Device Editing](#)).

5.2.8.1 Device Editing

To link a *Device* to a *Site* and configure it, click the  **Update** button. The **Update device** section is shown in Figure 22.

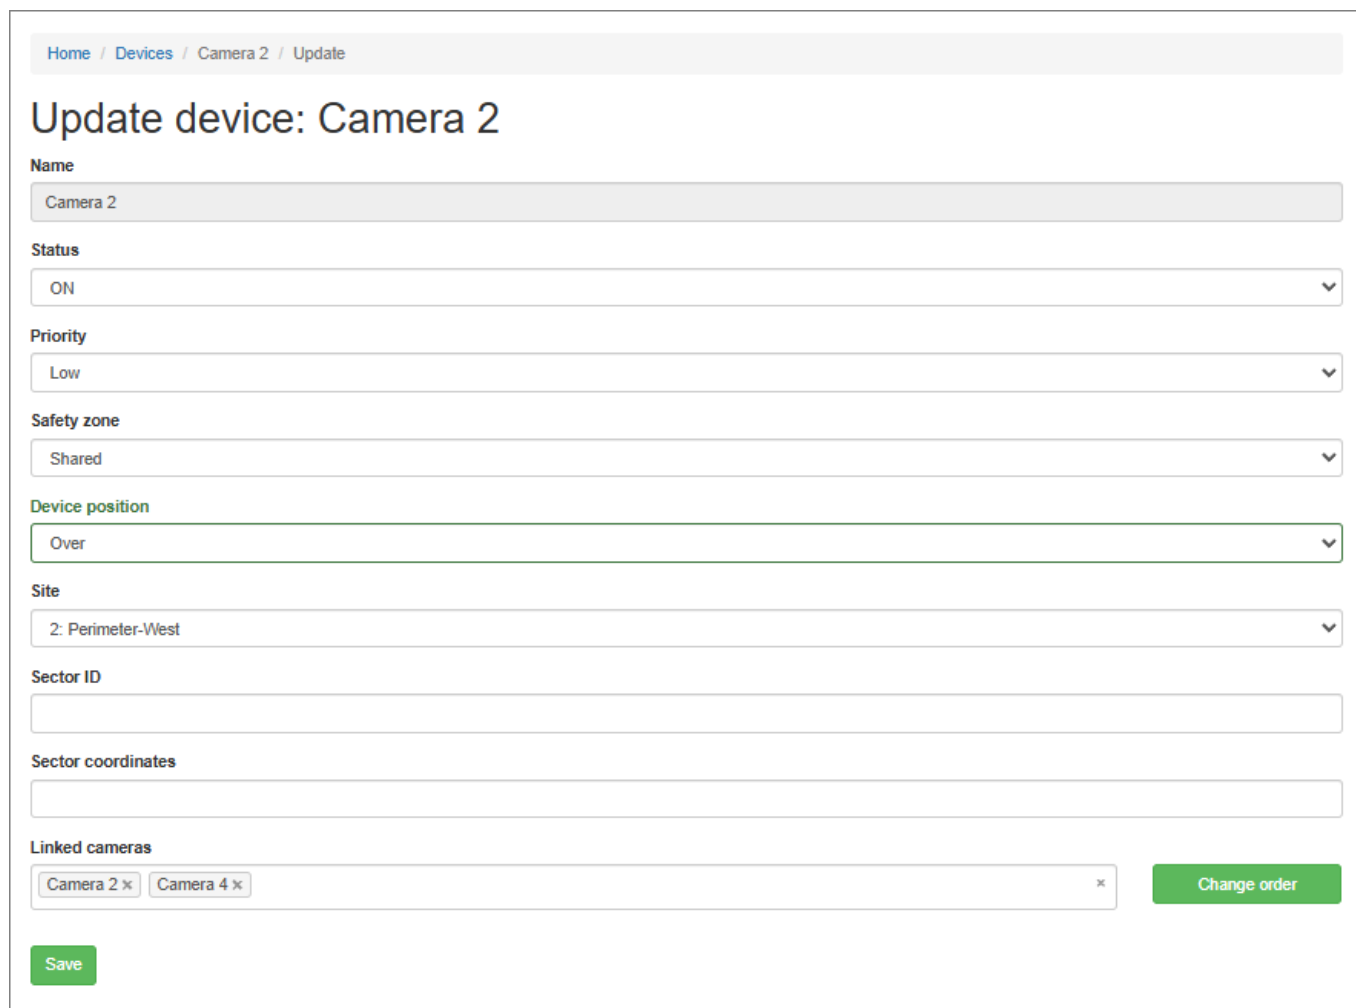

Home / Devices / Camera 2 / Update

Update device: Camera 2

Name
Camera 2

Status
ON

Priority
Low

Safety zone
Shared

Device position
Over

Site
2: Perimeter-West

Sector ID

Sector coordinates


Linked cameras
Camera 2 x Camera 4 x

Save **Change order**

Figure 22. "Update device" section

5.2.8.2 Bulk Device Editing

To perform bulk editing, select all required *Devices* in the table (see Figure 23).

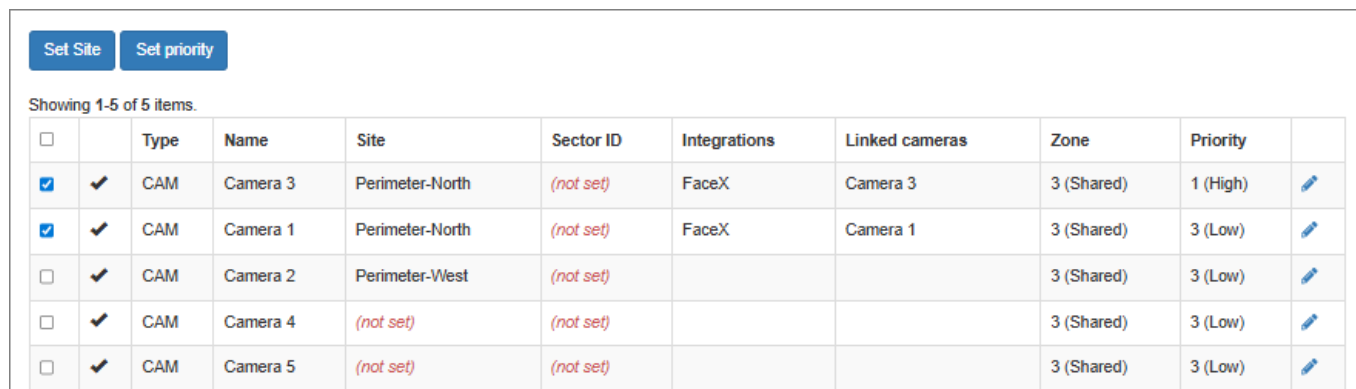

Set Site Set priority

Showing 1-5 of 5 items.


☐	☒	Type	Name	Site	Sector ID	Integrations	Linked cameras	Zone	Priority	
☒	☒	CAM	Camera 3	Perimeter-North	(not set)	FaceX	Camera 3	3 (Shared)	1 (High)	
☒	☒	CAM	Camera 1	Perimeter-North	(not set)	FaceX	Camera 1	3 (Shared)	3 (Low)	
☐	☒	CAM	Camera 2	Perimeter-West	(not set)			3 (Shared)	3 (Low)	
☐	☒	CAM	Camera 4	(not set)	(not set)			3 (Shared)	3 (Low)	
☐	☒	CAM	Camera 5	(not set)	(not set)			3 (Shared)	3 (Low)	

Figure 23. Device selection for bulk editing

Depending on the required changes, click one of the buttons above the table:


- **Set Site** — to set the *Site* for all selected *Devices* (see Figure 24).

- **Set priority** — to set the priority for all selected *Devices* (see Figure 24).

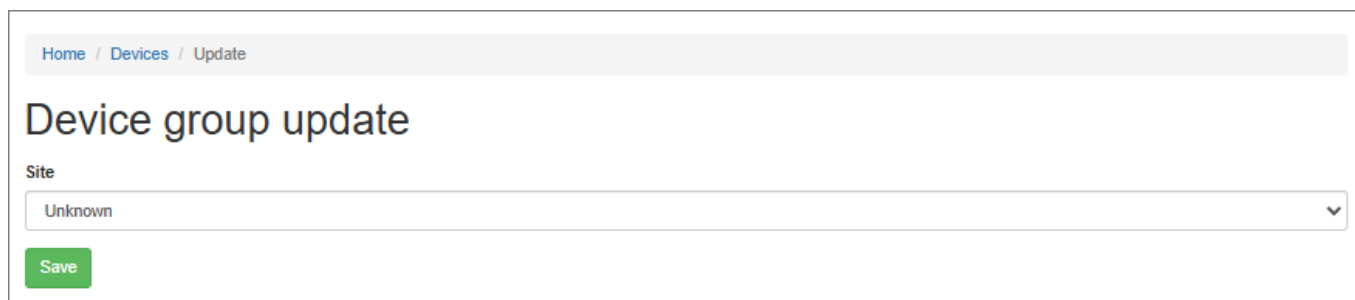

The screenshot shows a web interface for 'Device group update'. At the top is a breadcrumb trail: 'Home / Devices / Update'. Below the title, there is a label 'Site' followed by a dropdown menu currently showing 'Unknown'. A green 'Save' button is located at the bottom left of the form.

Figure 24. Bulk Site editing

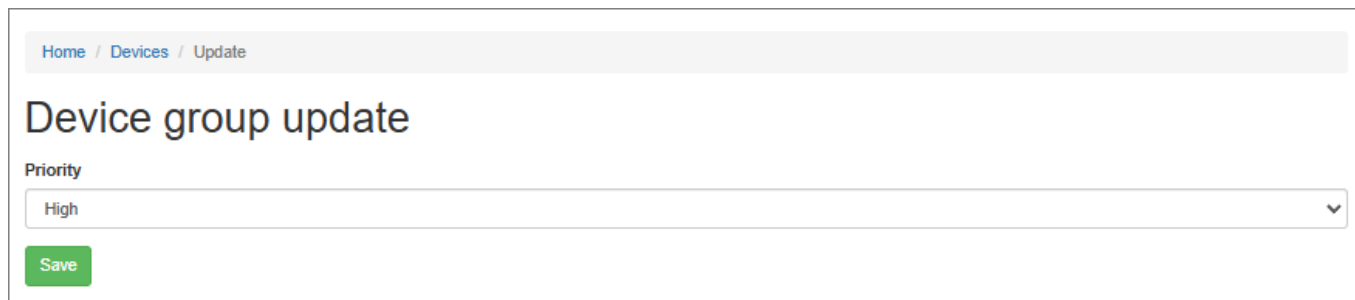

The screenshot shows the same 'Device group update' web interface. In this view, the dropdown menu under the 'Priority' label is set to 'High'. The green 'Save' button remains at the bottom left.

Figure 25. Bulk Device editing

After clicking the **Save** button, the specified changes will be applied to the selected group of *Devices*.

5.2.8.3 Manual Device Addition

To add an object whose information cannot be retrieved through automatic import, click the **Add device (manually)** button. In the section that appears (see Figure 26), specify:

- **Device ID** — the object's identifier from the SecurOS configuration.
- **Device type** — the object type identifier.
- **Name** — the object's name (cannot be modified later).

Other parameters can be specified at this stage or later during editing. Click the **Save** button to create the *Device* with the specified parameters.

Home / Devices / Device settings

Device settings

Device ID

Device type

Unknown ▼

Name

Status

ON ▼

Priority

High ▼

Safety zone

Critical ▼

Device position

Unknown ▼

Site

Unknown ▼

Sector ID

Sector coordinates

Linked cameras

Select cameras... Change order


Save

Figure 26. "Device settings" section

5.2.9 Device Types

To access device management, open the **Device types** section (see Figure 27). To allow the Module to collect information about devices and their corresponding events supported by the SecurOS configuration, click the **Import device type info** button.

Note. Data is imported from `ddi` files according to the SecurOS installation language.

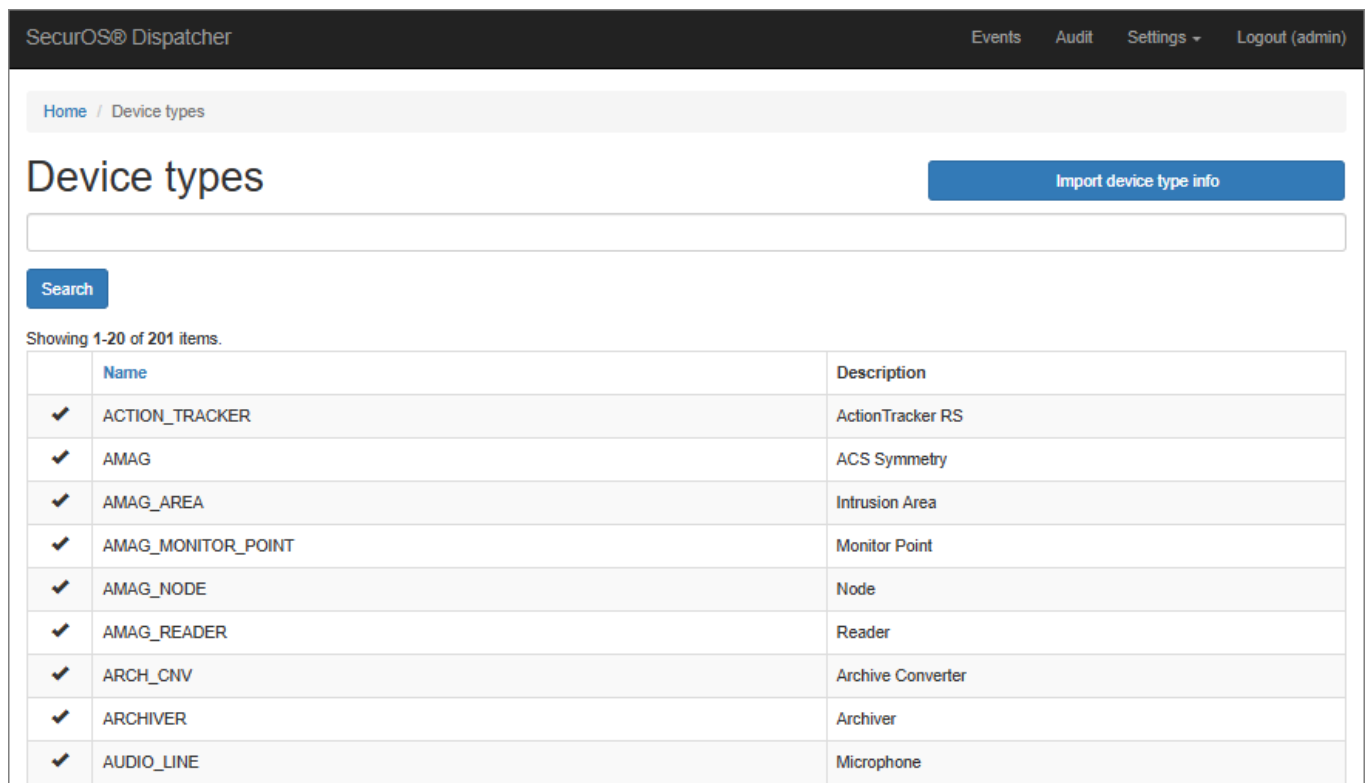

	Name	Description
✓	ACTION_TRACKER	ActionTracker RS
✓	AMAG	ACS Symmetry
✓	AMAG_AREA	Intrusion Area
✓	AMAG_MONITOR_POINT	Monitor Point
✓	AMAG_NODE	Node
✓	AMAG_READER	Reader
✓	ARCH_CNV	Archive Converter
✓	ARCHIVER	Archiver
✓	AUDIO_LINE	Microphone

Figure 27. "Device types" section

To filter table entries by *Device* type name, enter the name or its part in the **Name** field and click the **Search** button.

Each row of the table contains the following fields and controls:

- ✓/✗ (**Active** / **Inactive**) — indicator of the current status of this *Device* type.
- **Name** — name of the *Device* type.
- **Description** — description of the *Device* type.

5.2.10 Event Types

The **Event types** section (see Figure 28) is used to work with event descriptions, which are used as incident names.

SecurOS® Dispatcher

Events Audit Settings + Logout (admin)

Home / Event types

Event types

Showing 1-20 of 5,755 items.

Device type	Event type code	Description	Incident display name	
CAM	MD_START	Detecting motion	(not set)	
CAM	VCA_EVENT	Video analytics event	(not set)	
CAM	DETACH	Detached	(not set)	
CAM	EMERGENCY		(not set)	
CAM	MATCH	Match	(not set)	
CAM	NO_MATCH	No matches with Watchlists and ACS list	(not set)	
CAM	ACS_MATCHES	Match with the ACS list	(not set)	
CAM	ALARM_STARTED	Alarm	(not set)	

Figure 28. "Event types" section

Each row of the table contains the following fields and controls:

- **Device type** — identifier of the SecurOS object type corresponding to this *Device*.
- **Event type code** — identifier of the SecurOS object event. Multiple different event identifiers can be provided for the same type of the *Device*.
- **Description** — default description of the event.
- **Incident display name** — name that is used to display the incident in the client. If not specified, the default event description is used as the name.
- (**Update**) — button to edit the event type. When editing, only the **Incident display name** can be changed (see Figure 29).

Home / Event types / MD_START / Update

Update event type: MD_START

Device type

CAM

Event type code

MD_START

Description

Alarm = Building intrusion detected

Incident display name

Save

Figure 29. "Update event type" section

5.2.11 Incident Types

The **Incident types** section (see Figure 30) is used to view the supported SecurOS event codes, on the basis of which incidents are generated. Also this section provides customization of the scenarios for processing the incidents.

The following buttons are located at the top of the table:

- **Create type** — proceed to create a new incident type (see [Creating Incident Type](#)).
- **Create scenario** — proceed to create a new incident processing scenario (see [Creating Operator Actions Chain](#)).

SecurOS® Dispatcher

Events Audit Settings + Logout (admin)

Home / Incident types

Incident types

Create type Create scenario

	Event type title	Source	Conditions	
✓	Alarm = Building intrusion detected	Sensor	CAM: MD_START	
✓	Analytics Alarm	Sensor	CAM: VCA_EVENT	
✓	The configuration was corrupted during update process	Sensor	BOLID: CONFIG_CORRUPTED	
✓	Intrusion Alarm = Perimeter breach	Sensor	BOLID_LOOP: ACCESS_ALARM	
✓	Fire alarm = Fire detector triggered	Sensor	BOLID_LOOP: FIRE_ALARM	
✓	Fire extinguishing system initiation = Gas extinguisher started	Sensor	BOLID_LOOP: AFSS_LAUNCH	
✓	Breach of the security loop = I/O Alarm	Sensor	BOLID_LOOP: QUIET_ALARM	
✓	Entrance zone alarm = Approaching a restricted area	Sensor	BOLID_LOOP: ZONE_ALARM	
✓	Changed the status of the output = Pressed the alarm button	Sensor	BOLID_RELAY: RELAY_STATE_CHANGE	
✓	Connection output (relay) = Call from the fire extinguishing panel	Sensor	BOLID_RELAY: RELAY_ON	


Figure 30. "Incident types" section

Each row of the table contains the following fields and controls:

-  /  (**Active / Inactive**) — indicator button that can be used to enable or disable the generation of incidents based on this event.
- **Event type title** — the incident's display name in the operator interface.
- **Source** — the type of source generating the incident.
- **Conditions** — incident generation conditions in `<device type>: <action code>` format.
-  (**Update**) — button to proceed to edit this incident type.

5.2.11.1 Creating Incident Type

The **Create incident type** section is shown in Figure 31.

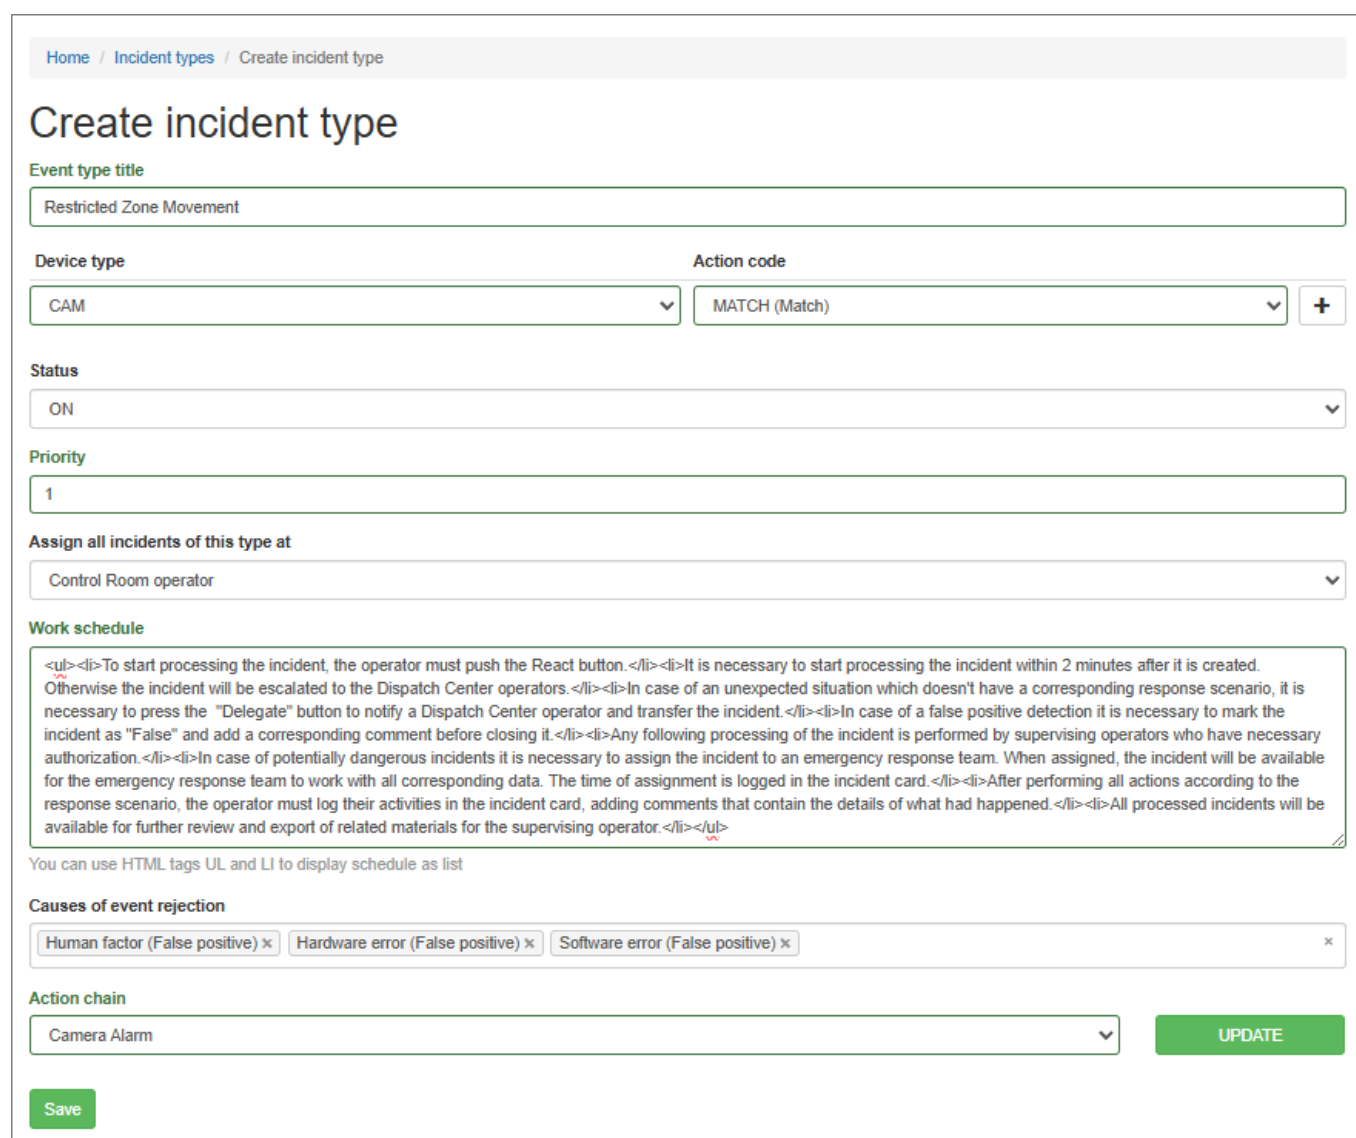

Home / Incident types / Create incident type

Create incident type

Event type title

Restricted Zone Movement

Device type **Action code**

CAM MATCH (Match) +

Status

ON

Priority

1

Assign all incidents of this type at

Control Room operator

Work schedule

</i>To start processing the incident, the operator must push the React button.It is necessary to start processing the incident within 2 minutes after it is created. Otherwise the incident will be escalated to the Dispatch Center operators.In case of an unexpected situation which doesn't have a corresponding response scenario, it is necessary to press the "Delegate" button to notify a Dispatch Center operator and transfer the incident.In case of a false positive detection it is necessary to mark the incident as "False" and add a corresponding comment before closing it.Any following processing of the incident is performed by supervising operators who have necessary authorization.In case of potentially dangerous incidents it is necessary to assign the incident to an emergency response team. When assigned, the incident will be available for the emergency response team to work with all corresponding data. The time of assignment is logged in the incident card.After performing all actions according to the response scenario, the operator must log their activities in the incident card, adding comments that contain the details of what had happened.All processed incidents will be available for further review and export of related materials for the supervising operator.

You can use HTML tags `UL` and `LI` to display schedule as list

Causes of event rejection

Human factor (False positive) × Hardware error (False positive) × Software error (False positive) ×

Action chain

Camera Alarm

UPDATE

Save

Figure 31. "Creating incident type" section

To create a new incident type, the following parameters must be specified:

- **Event type title** — the incident's display name in the operator interface.
- **Device type** — select *Device* type from the drop-down list (see [Device Types](#)).
- **Action code** — select from the drop-down list the event code that will be used to generate incidents of this type.

-  (**Add condition**) — click the button to create an additional condition for generating a compound incident. For each additional condition, the **Device type** and **Action code** (see above) must be specified. To generate a compound incident, all of the specified conditions must be met within a certain amount of time (see **Time span length for compound incident (in seconds)** parameter in the **Common Settings** section). To delete an additional condition, click the  (**Delete Condition**) button.

Note. It is possible to add up to and including four additional conditions.

- **Status** — select the required parameter value:
 - ON — generation of incidents of this type is enabled.
 - OFF — generation of incidents of this type is disabled.
- **Priority** — specify a numeric value corresponding to the processing priority for this incident type.
- **Assign all incidents of this type at** — select from the drop-down list the role / specific operator to whom incidents of this type will be assigned.
- **Work schedule** — specify the regulations or any other information that will be useful to the operator in processing this type of incident. The corresponding text will be displayed in the client as a tooltip in the **Actions** block if the incident has received a reaction from the operator.

Note. HTML tags can be used to design the text: `UL` (to create a bulleted list) and `LI` (to label an individual list item).

- **Causes of event rejection** — select the reasons (see **Causes of Event Rejection**) from the drop-down list that will be available to the operators when closing incidents of this type due to a false alarm.

Note. If no false occurrence causes are selected, only the standard causes will be available to the operator: Hardware factor, Software factor, Human factor. If one or more causes are selected, only the selected causes will be available.

- **Action chain** — in the drop-down list, select a previously created scenario that will be used by the operators when processing this type of incident (see **Creating Operator Actions Chain**). Click the **Update** button to make changes to the selected scenario. To create a new scenario, click the **Create** button (this button appears if no scenario is selected).

5.2.11.2 Creating Operator Actions Chain

The **Create operator actions chain** section (see Figure 32) is used to create incident processing scenarios (see **SecurOS Dispatcher User Guide**). The processing scenario can be either a linear algorithm or a branching one. The algorithm is visualized as a flowchart consisting of interconnected pre-created blocks of simple steps and conditions (see **Operator Actions**).

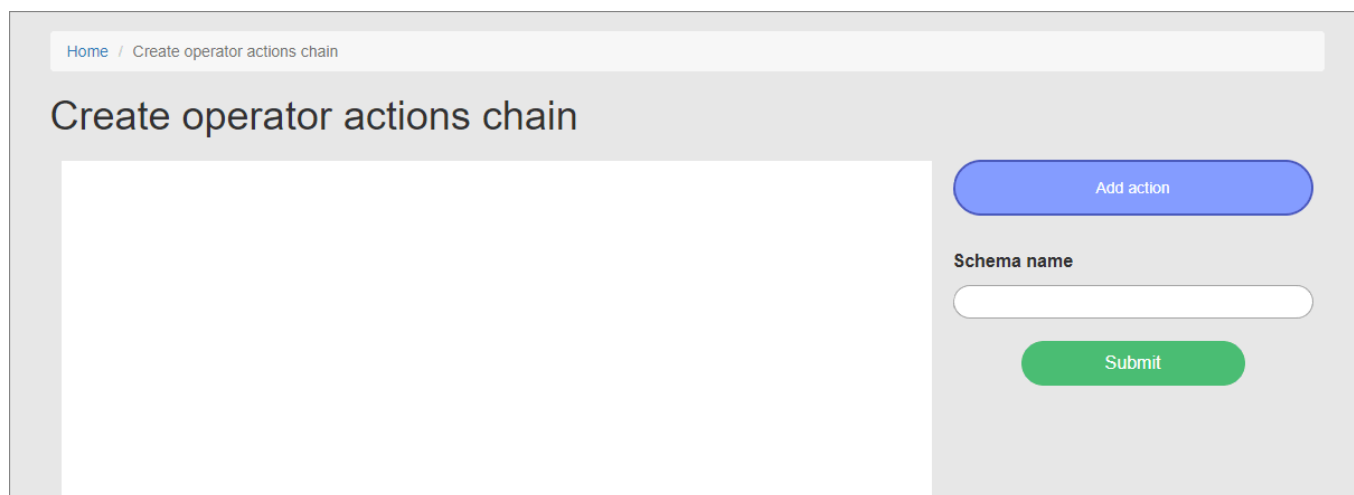


Figure 32. "Create operator actions chain" section

To add new simple step or condition blocks to the schema, click the **Add action** button and select them using the drop-down list (see Figure 33). The list of available actions can also be called up by right-clicking on an empty area of the scheme.

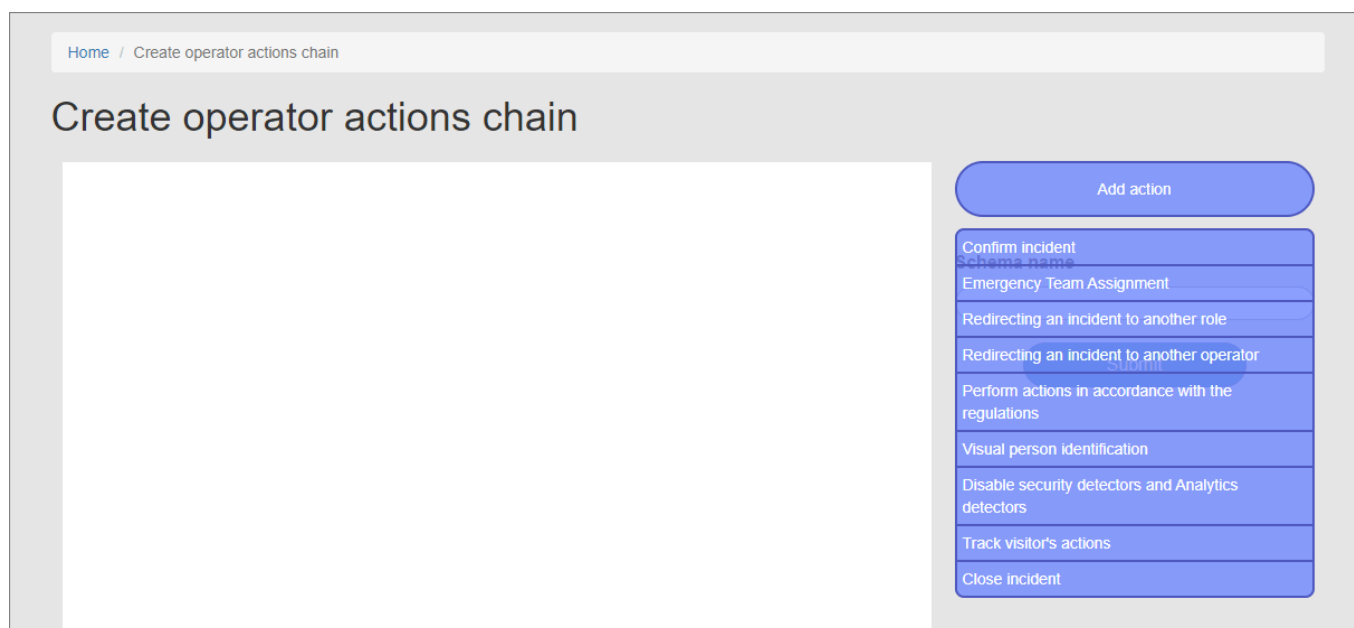


Figure 33. Action list

The selected action will be displayed as a corresponding block in the scheme area. The block position can be changed by holding down the left mouse button. After positioning blocks of actions, it is necessary to logically link them to each other, thus specifying the order in which these actions will be displayed when processing the incident. To add a link between blocks, click on the  icon, and holding down the left mouse button, drag the appeared line to the icon of another block, and then release the mouse button (see Figure 34). To delete an action block, click on it with the right mouse button and select **Delete**.

Warning! The chain of actions must begin with the `Confirm incident` block and end with the `Close incident` block.

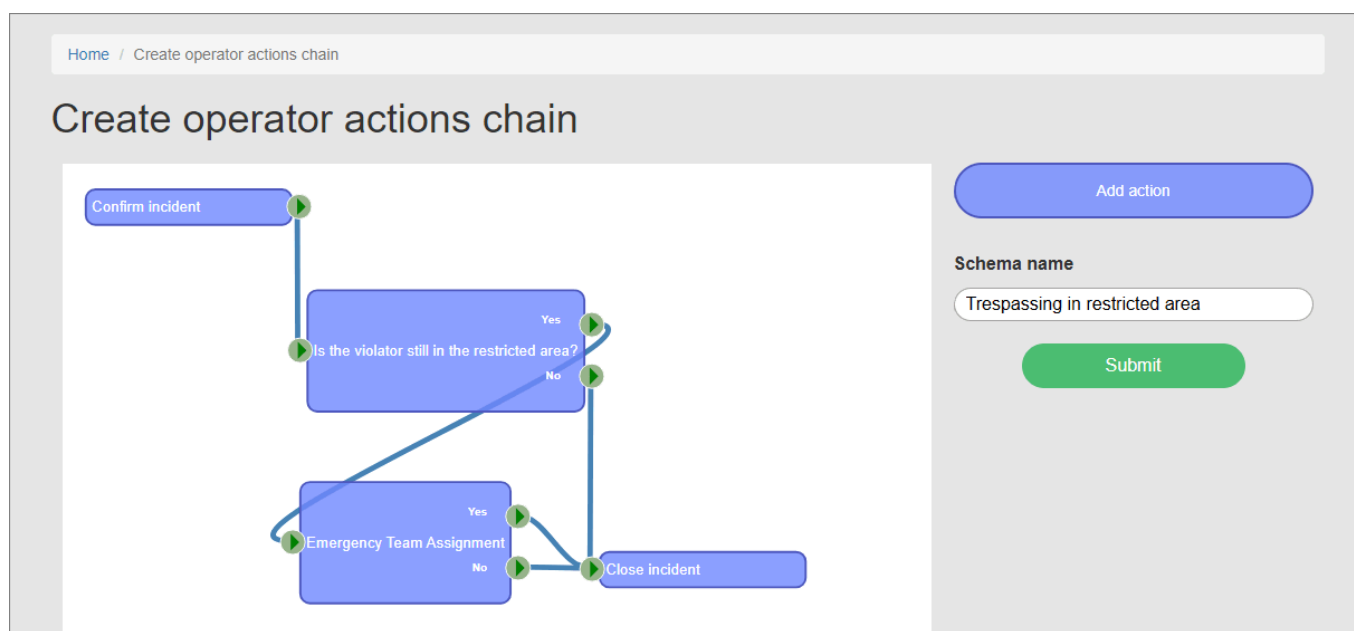


Figure 34. Example of a processing scenario

Specify the scenario name to be displayed in the administration panel in the **Schema name** field.

Click the **Submit** button to complete the processing scenario.

5.2.12 Integration Settings

SecurOS Dispatcher supports processing events from the SecurOS FaceX Module (see [SecurOS FaceX User Guide](#)). This provides incident generation for events such as a match with the Watchlist, a non-match, etc. When the match is detected, the operator will have access to data such as the full name and photos of the recognized person directly in the SecurOS Dispatcher client. The integration guide for the SecurOS FaceX is provided below.

1. Proceed to the **Integration settings** section and select the **FaceX** item (see Figure 35).



Figure 35. "Integration settings" section

2. In the section that appears, click the **Import FaceX servers** button (see Figure 36).

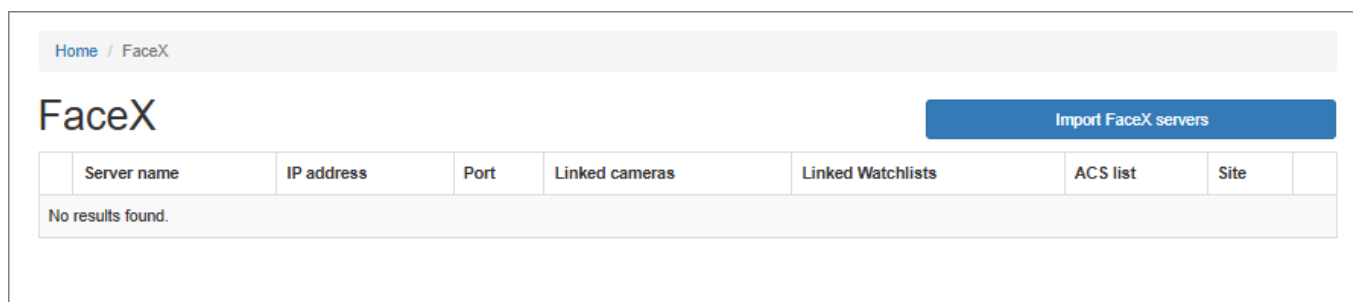


Figure 36. "FaceX" section

3. After completing the operation, the table will display data about the imported FaceX servers (see Figure 37). Click the  (**Edit**) button.

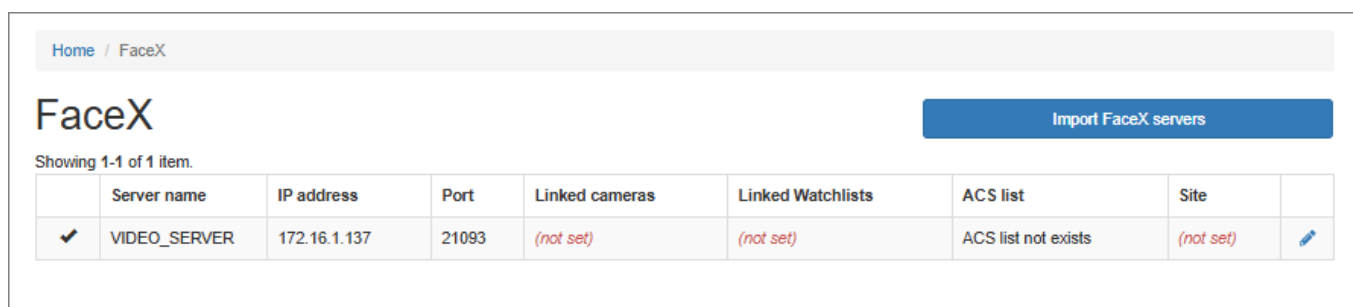


Figure 37. "FaceX" section

4. In the **FaceX server settings** section that appears (see Figure 38), do the following:
- Click the **Import Watchlists and ACS** button to retrieve information about the FaceX and ACS Watchlists.
 - Specify the **Site** to which the FaceX server events will be linked.
 - Select all cameras from which events need to be received for incident generation.

Warning! The **Linked cameras** list only displays cameras whose information was previously imported into the SecurOS Dispatcher Module (see [Devices](#)).

Home / FaceX / FaceX server settings

FaceX server settings

[Import Watchlists and ACS](#)

Server name
VIDEO_SERVER

IP address
172.16.1.137

Port
21093

ACS list
ACS list not exists

Site
Unknown

No Watchlists found

Linked cameras

☐ 3: Camera 3

☐ 1: Camera 1

[Save](#)

Figure 38. Section "FaceX server settings"

- Click the **Save** button. After this, the SecurOS FaceX Module data will be available for incident generation according to the SecurOS Dispatcher Module settings.

To generate incidents based on SecurOS FaceX Module events, follow these steps:

- Proceed to the **Devices** section and ensure SecurOS FaceX cameras are linked to a *Site*.
- Proceed to the **Create incident type** section:
 - In the **Device type** field, select the CAM (Camera) value.
 - In the **Action Code** field, select one of the following values:
 - ACS_MATCHES — match with ACS Watchlist during single-factor authentication.
 - MATCH — match with FaceX Watchlist.
 - NO_MATCH — no matches with FaceX and ACS Watchlists.
 - Configure other required incident settings and save changes.

Warning! NO_MATCH events can be generated if, in the *FaceX: Server* object settings, the **Notify when face not recognized** option is selected.

5.2.13 Common Settings

The **Common settings** section (see Figure 39) is used to configure parameters that determine the possibility of using some functions by operators, as well as the maximum pending time for processing incidents.

SecurOS® Dispatcher			Events	Audit	Settings ▾	Logout (admin)
Home / Common settings						
Common settings						
Showing 1-13 of 13 items.						
Parameter	Value					
Time span length for compound incident (in seconds)	600					
Incident response timeout (in minutes)	72					
Incident response timeout for supervisor (in minutes)	60					
Mandatory comment on event rejection	ON					
Export reports in incident archive	ON					
Tab "Audit" (operator actions logging)	ON					
Time after which operators can re-request a break after decline (in minutes)	30					
Time allotted for making a decision on a request for a break (in minutes)	2					
Automatically approve a break after the allotted time has elapsed	ON					
Sound signal when receiving an incident	ON					
Sound signal when receiving a notification	ON					
Mandatory password entry at the end of a break	ON					
Incident database retention period (in days)	OFF					

Figure 39. "Common settings" section

Table 4. Common Settings

Parameter	Description
Time span length for compound incident (in seconds)	The time period during which all conditions required to generate a compound incident must be met (see Creating Incident Type).
Incident response timeout (in minutes)	The time period that defines how long the incident will wait to be processed. If not accepted by an operator within this time, it will be forwarded to a higher-level operator. Note. If the processing time expires, incidents will be forwarded in the following order: from the <i>Control Room operator</i> to the <i>Dispatch Center operator</i>, from the <i>Dispatch Center operator</i> to the <i>Senior Dispatch Center operator</i>.
Incident response timeout for supervisor (in minutes)	The time interval for waiting for processing incidents in case of their forwarding to the <i>Senior Dispatch Center operator</i>. Note. If incidents are not accepted for processing within this time, they will be placed in the <i>Incident Archive</i>.

Parameter	Description
Mandatory comment on event rejection	The parameter defines whether it is mandatory to have a comment from the operator when an incident is dismissed (see Causes of Event Rejection). Possible values: • ON — the comment is mandatory. • OFF — the comment is optional.
Export reports in incident archive	The parameter defines the availability of the export function of standard PDF reports for all operators. Possible values: • ON — export of standard reports is available. • OFF — export of standard reports is not available. If standard report export is disabled, when the operator creates a report, the data will be sent to SecurOS. They can be further processed using Node.JS scripts, which allows one to create reports according to custom settings and save them in a network folder, if necessary.
Tab "Audit" (operator actions logging)	The parameter defines the availability of the Audit tab, which is used to view the history of actions performed by operators. For example, incident processing history, scheduled maintenance management, changing the alarm level of <i>Sites</i>, changing the status of <i>Devices</i>, etc. Note. The Audit tab can be accessed by users with the roles of <i>Senior Dispatch Center operator</i> and <i>Administrator</i>.
Time after which operators can re-request a break after decline (in minutes)	The time interval after which operators may re-request a break if they were declined the previous time. Note. Regardless of the time set, if a break request is automatically declined, the creation of a new request is available immediately.
Time allotted for making a decision on a request for a break (in minutes)	The time interval during which a <i>Senior Dispatch Center operator</i> must review a request to provide a break to an operator. Note. If a decision has not been made in the allotted time, the request will be approved / declined automatically depending on the value of the Automatically approve a break after the allotted time has elapsed parameter (see below).
Automatically approve a break after the allotted time has elapsed	The parameter defines what decision regarding the interruption request will be automatically made by the system if the <i>Senior Dispatch Center operator</i> has not reviewed the request in time. Possible values: • ON — requests are approved automatically. • OFF — requests are declined automatically.

Parameter	Description
Sound signal when receiving an incident	The parameter enables / disables the sound signal when an incident is received by the operator.
Sound signal when receiving a notification	The parameter enables / disables the sound signal when a notification is received by the operator.
Mandatory password entry at the end of a break	The parameter enables and disables password request when resuming work after a break.
Incident database retention period (in days)	The parameter defines how long incidents are stored. All incidents older than the specified number of days are automatically purged.

Click the  (**Update**) button to the right of the parameter to edit its value (see Figure 40). Specify the required value in the corresponding field and click the **Save** button.

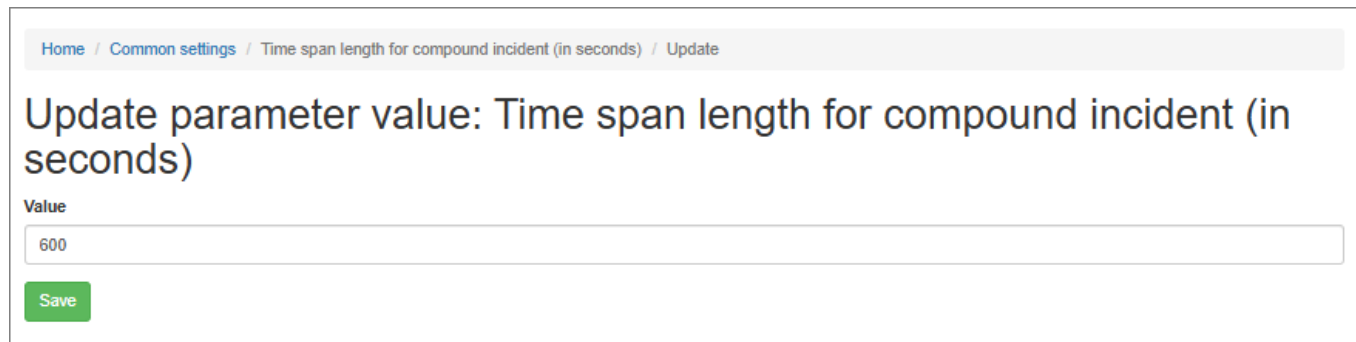


Figure 40. "Common settings. Update parameter value" section

5.3 Working with Incident History

If the connection to the administration panel is successful, the **Events** section will open (see Figure 41). This section allows one to view incidents and partially or completely delete their history, if necessary. For example, clearing the incident history may be required after the commissioning work is complete.

SecurOS® Dispatcher

Events Audit Settings Logout (admin)

Home / Events

Events

Clear events

Event type Status User

Search

Clear

Showing 1-4 of 4 items.

☐	ID	Device name	Device type	User	Status	Type
☐	493210	102km:Service entry	CAM	(not specified)	70: Archived	Alarm = Building intrusion detected
☐	493209	56km:Under bridge PTZ	CAM	(not specified)	70: Archived	Alarm = Building intrusion detected
☐	493208	32km:Crossroad	CAM	Operator	40: In work	Alarm = Building intrusion detected
☐	493207	56km:Under bridge	CAM	(not specified)	70: Archived	Alarm = Building intrusion detected

Figure 41. "Events" section

The following filters can be used to filter table entries:

- **Event type** — select a specific incident type from the drop-down list (see [Event Types](#)).
- **Status** — select a specific incident status from the drop-down list:
 - New.
 - Restored.
 - Redirected.
 - In work.
 - Archived - Confirmed.
 - Archived - False positive.
 - Archived - Nominal.
 - Archived - Overdue.
- **User** — select a specific operator from the drop-down list to display only incidents that have been or are being processed by that operator.

Note. Incidents with an Archived - Overdue status have no responsible operator.

Click the **Search** button to apply filters to the table.

Each row of the table contains the following fields and controls:

- **Checkbox** — element that allows one to select multiple incidents. Clicking the **Clear** button will delete all selected incidents.
- **ID** — unique sequential number assigned to the incident when it is generated.
- **Device name** — name of the SecurOS object that is the source of the event from which the incident was generated (see [Devices](#)).
- **Device type** — identifier of the SecurOS object type.

- **User** – name of the SecurOS *User* processing the incident.
- **Status** – identifier of the current status of the incident. It can take the following values:
 - **New** – incident is awaiting processing.
 - **Restored** – incident has been moved to the archive but then restored.
 - **Redirected** – incident has been forwarded to the operator for review.
 - **In work** – incident has received an operator response and is currently being processed.
 - **Archived** – incident has been closed and moved to the archive.
- **Type** – name of the processing scenario.

Click the **Clear events** button to proceed to clearing the incident history. After that, the corresponding section will be opened (see Figure 42).

Warning! Deleted incidents cannot be recovered.

Home / Clear events

Clear events

Select interval for date and time of the cleanup period (inclusive):

Start of period

09/01/2024 00:00:00

End of period

09/17/2024 23:59:59

☐ New

☐ Restored

☐ Redirected

☐ In work

☐ Archived - Confirmed

☐ Archived - False positive

☐ Archived - Nominal

☐ Archived - Overdue

Clear

Figure 42. "Clear events" section

Specify the parameters for deletion:

- **Start of period** – click on the field to set the date and time of the beginning of the interval for deleting incidents generated during this period.
- **End of period** – click on the field to set the date and time of the end of the interval for deleting incidents.
- **New** – select the checkbox to delete all incidents pending processing.
- **Restored** – select the checkbox to delete all incidents restored from the archive.
- **Redirected** – select the checkbox to delete all incidents forwarded to operators.

- **In work** — select the checkbox to delete all incidents in processing.
- **Archived - Confirmed** — select the checkbox to delete all confirmed incidents moved to the archive.
- **Archived - False positive** — select the checkbox to delete all incidents moved to the archive due to a false alarm.
- **Archived - Nominal** — select the checkbox to delete all incidents moved to the archive due to unnecessary processing according to the regulations.
- **Archived - Overdue** — select the checkbox to delete all incidents moved to the archive due to expired processing timeout.

Click the **Clear** button after specifying the deletion parameters. After that, a notification will appear. It will contain information about the number of incidents to be deleted for the specified time interval (see Figure 43).

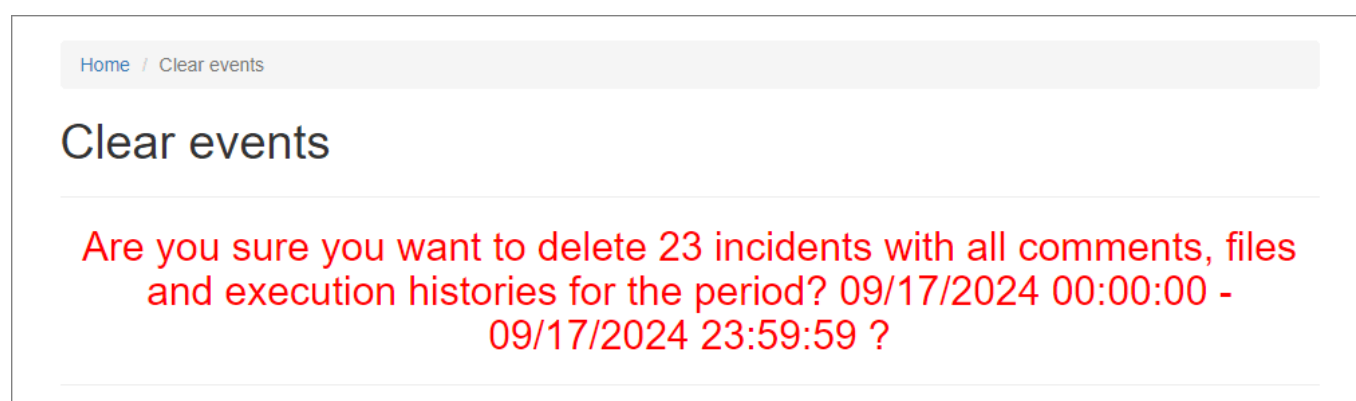


Figure 43. Confirming deletion of incidents

Confirm the deletion by clicking the **Clear** button again.

5.4 Working with Administration History

The **Audit** section is designed to review user actions in the SecurOS Dispatcher administration panel (see Figure 44). For example, login and logout events in the administration panel, Module configuration edits, etc.

To search for specific actions, fill in the following filters and click the **Search** button:

- **Start of period** and **End of period** — fill these fields to display actions only within a specific time range.
- **User** — select one or multiple users to display actions performed exclusively by them.
- **Category** — choose one or several categories to display actions only from these categories.

SecurOS® Dispatcher
Events
Audit
Settings ▾
Logout (admin)

Home / Audit

Audit

Start of period

08/14/2025 00:00:00

End of period

08/14/2025 23:59:59

User

Category

Search

Showing 1-14 of 14 items.

Date and time	User	Category	Details
08/14/2025 20:28:33	admin	Devices	Modification: Camera 3 Previous data: Priority: Low Device position: Unknown Linked cameras: New data: Priority: High Device position: Over Linked cameras: Camera 3
08/14/2025 20:27:46	admin	Admin panel session	Authorization
08/14/2025 20:27:44	User1	Admin panel session	Deauthorization
08/14/2025 20:27:40	User1	Admin panel session	Authorization
08/14/2025 20:27:33	admin	Admin panel session	Deauthorization
08/14/2025 20:27:16	admin	Users	Modification: User1

Figure 44. "Audit" section

Each action log entry contains the following information:

- **Date and time** — date and time of the action.
- **User** — account under which the action was performed.
- **Category** — action type or administration panel section where the action was performed.
- **Details** — detailed information about the executed action. For example, which data was modified or what operations were carried out.

6 Technical Support Information

This section contains requirements for the service information necessary when contacting Intelligent Security Systems Technical Support.

Note. Collected data have to be send to the Intelligent Security Systems Technical Support Team (see [Getting Technical Support](#)).

To ensure quick technical support, prepare the following technical information:

Warning! Data in items marked by "*" are necessary to report.

1. (*) User (customer) name to address to.
2. (*) Organization name.
3. (*) User (or organization) contacts: phone, e-mail.
4. Name of a personal Intelligent Security Systems manager (in Intelligent Security Systems authorized partner case). Otherwise, give the following data:
 - Company where the hardware and software components were purchased.
 - Actions to correct the problem suggested when contacting the partner from whom the product was purchased.
5. (*) Problem description.
6. (*) Description of the actions that cause the problem.
7. Description of the changes in system settings / configuration that caused the problem.
8. System and diagnostic information about the computer and SecurOS system configuration obtained from the **SystemInfo** utility (see [SecurOS Administration Guide](#) for details on using the utility).

If it is not possible to run the utility, provide the following information:

- (*) Guardant keys identifiers and Dallas code;

Note. Equipment Dallas code can be viewed using the **Hardware Report Utility** (see [SecurOS Administration Guide](#) for details on using the utility).

- (*) name and version of the installed Intelligent Security Systems company software;
 - total number of video servers and monitoring (operator) workstations in the system;
 - operating system (name and service pack version).
9. If possible, provide any other relevant information such as:
 - computer equipment configuration;
 - central processors load;
 - main and virtual memory used volumes;
 - network load;

- network and network neighborhood configuration.