

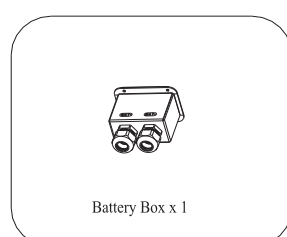
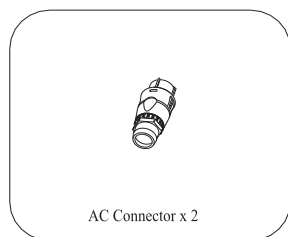
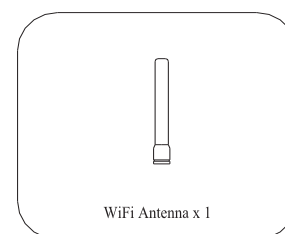
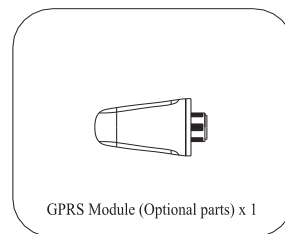
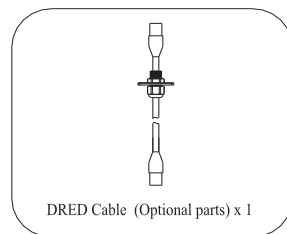
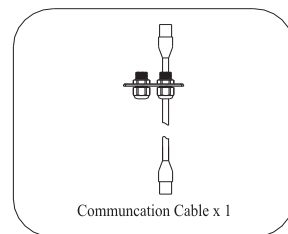
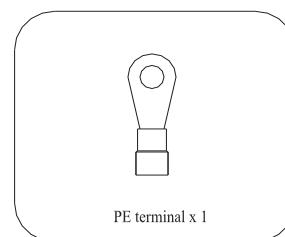
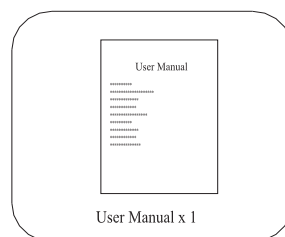
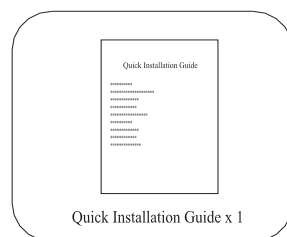
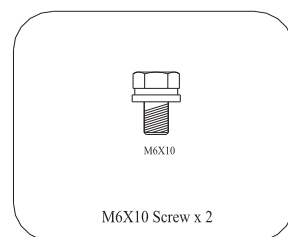
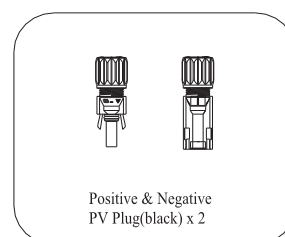
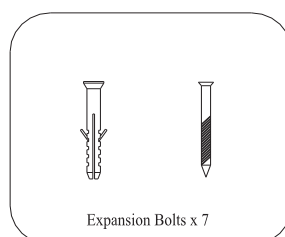


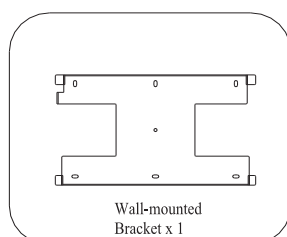

# Quick Installation Guide


SMT-5K-TL-UN

## 1 Packing List

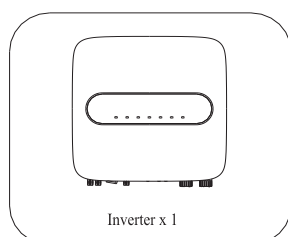


## 2 Mounting Steps

Mounting distance:

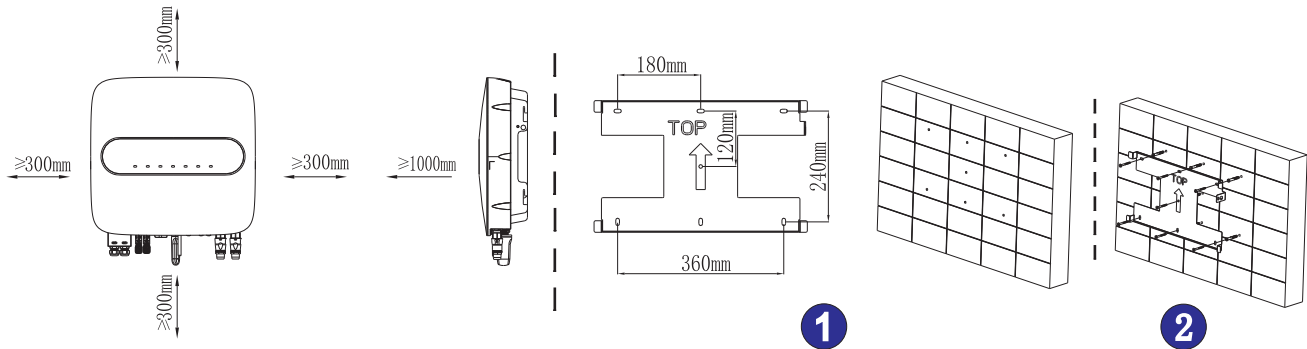

1. Mark mounting hole on the wall Drill hole with 8mm diameter of bit. Ensure a depth of 80mm.

2. Hammer expansion tube into the wall Mount bracket on the wall , keep aligned with the holes.

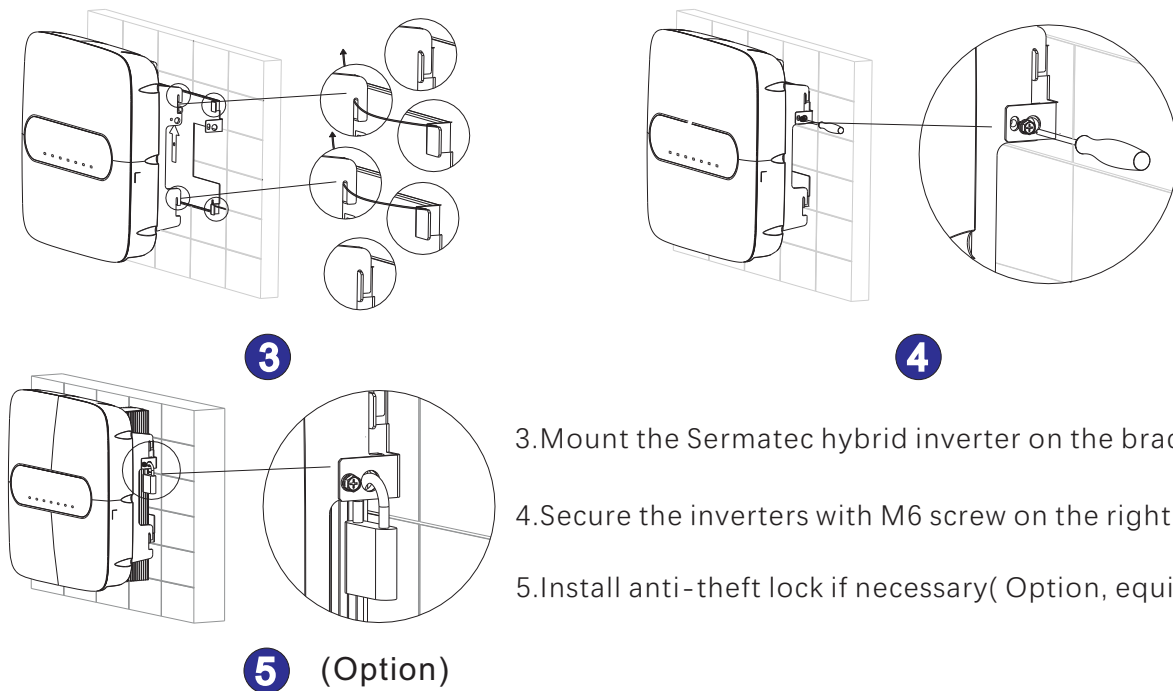


3. Mount the Sermatec hybrid inverter on the bracket.

4. Secure the inverters with M6 screw on the right side.

5. Install anti-theft lock if necessary( Option, equipped by user).

## 3 Hybrid Inverter System connection Diagram

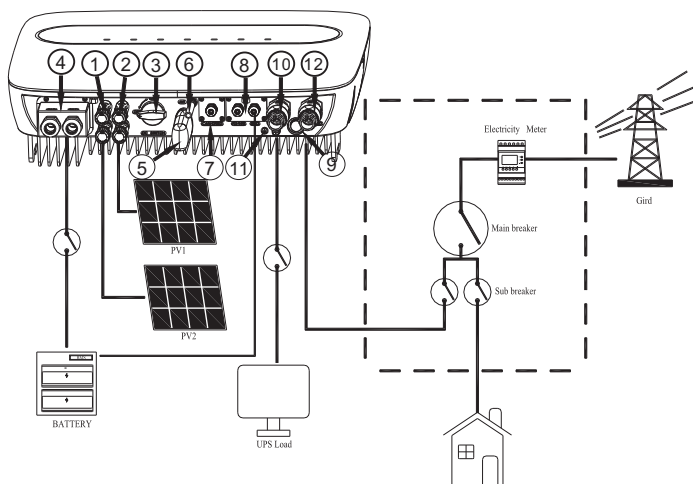

1. PV1 Connector

2. PV2 Connector

3. PV Switch

4. Battery Connector

5. GPRS Module

6. Wi-Fi Antenna

7. DRED Interface

8. Communication Interface

9. Waterproof vent valve


10. AC Load Connector

11. PE Connection Point

12. AC Grid Connector


### PV Connectionsteps:

PV cable size: 4~6mm<sup>2</sup>

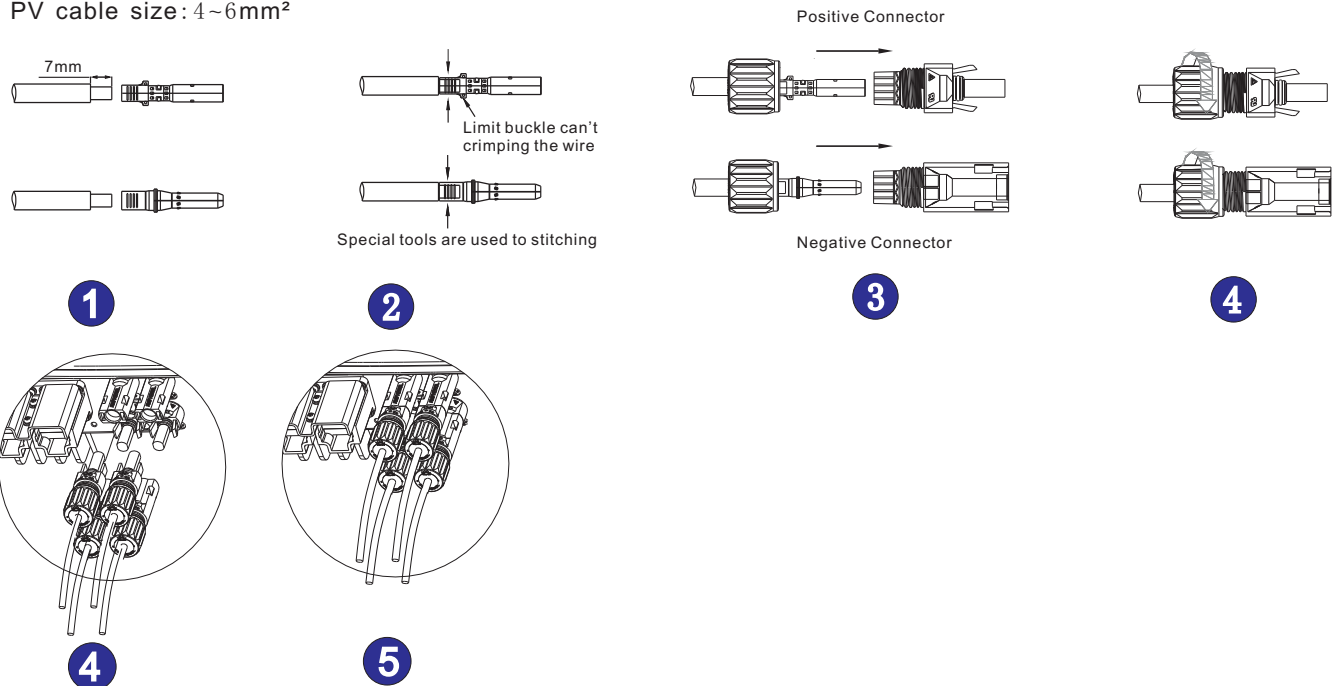


### Battery Connectionsteps:

Battery cable size: 16-25mm<sup>2</sup>

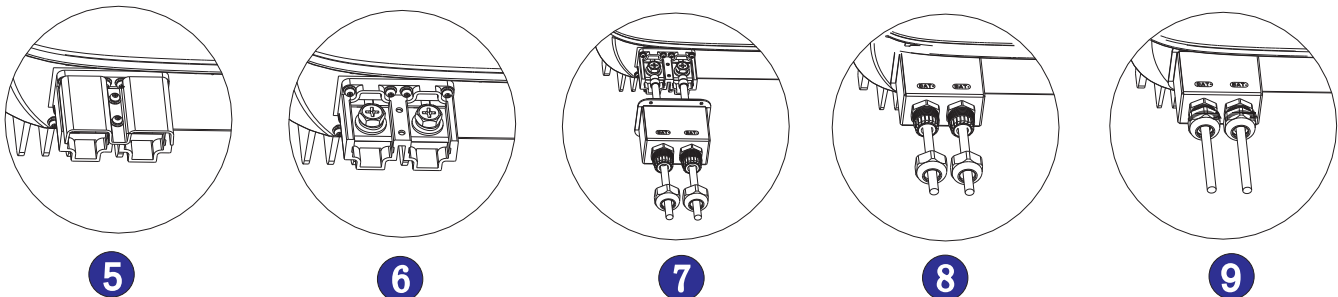




### AC Connection steps:

AC cable size: 6mm<sup>2</sup>

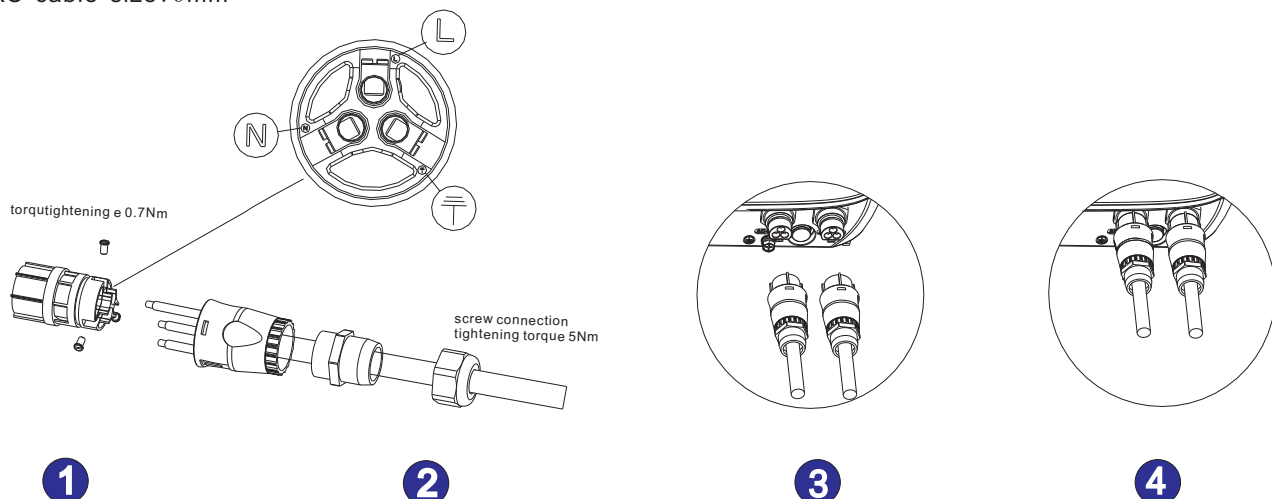


## Earth connection steps:

PE cable size: 4~6mm<sup>2</sup>

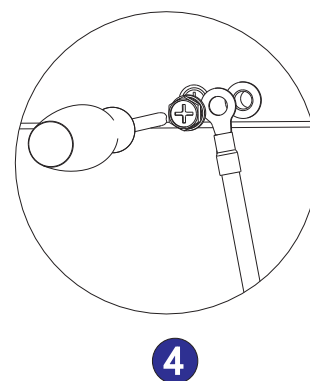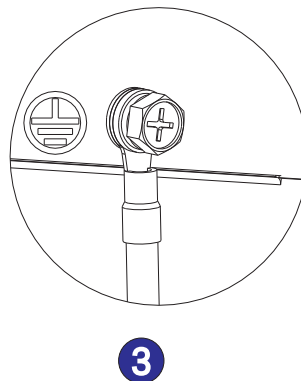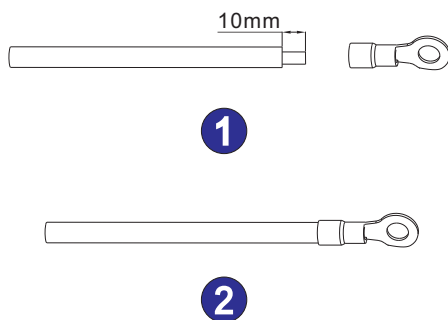


## 6 Communication Connection


### Communication connection steps:

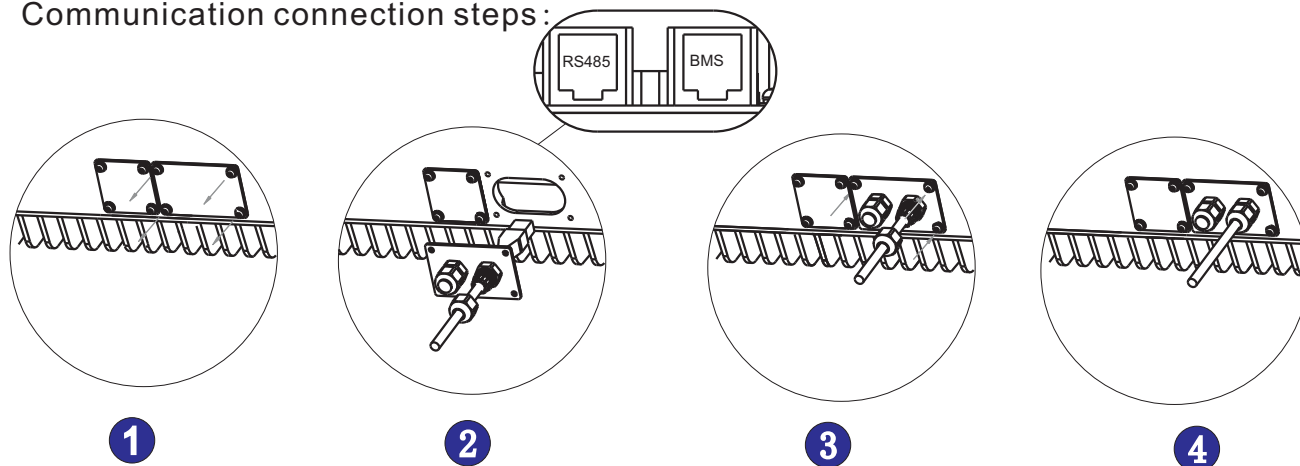

### Communication cable connection diagram

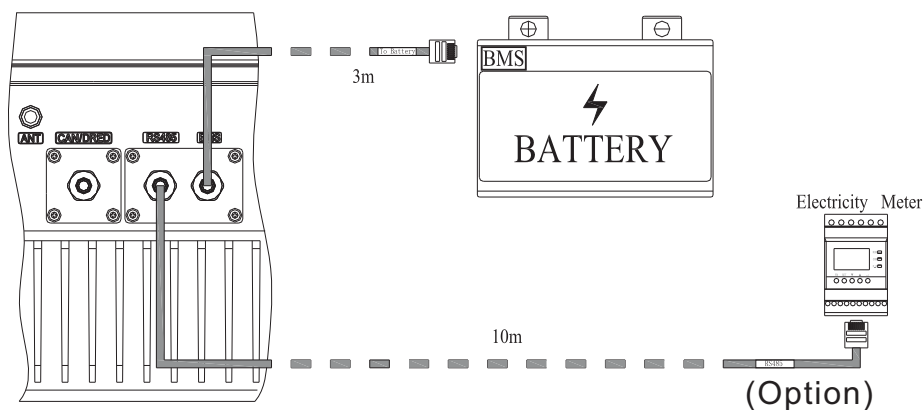

The RJ45 socket pin assignments for BMS and RS485 as follows:

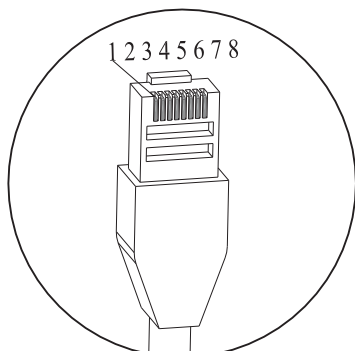


| BMS |             |              |
|-----|-------------|--------------|
| PIN | Signal Name | Cable Color  |
| 1   | 485A_B      | Orange-white |
| 2   | 485A_A      | Orange       |
| 3   | COM         | Green-white  |
| 4   | CAN_H       | Blue         |
| 5   | CAN_L       | Blue-white   |
| 6   | COM         | Green        |
| 7   | 485A_A      | Brown-white  |
| 8   | 485A_B      | Brown        |


| RS485 |             |              |
|-------|-------------|--------------|
| PIN   | Signal Name | Cable Color  |
| 1     | NC          | Orange-white |
| 2     | NC          | Orange       |
| 3     | COM         | Green-white  |
| 4     | CAN_H       | Blue         |
| 5     | CAN_L       | Blue-white   |
| 6     | COM         | Green        |
| 7     | 485A_B      | Brown-white  |
| 8     | 485A_A      | Brown        |

## 7 DRED cable assembly (Optional)

DRED cable assembly steps (Optional):

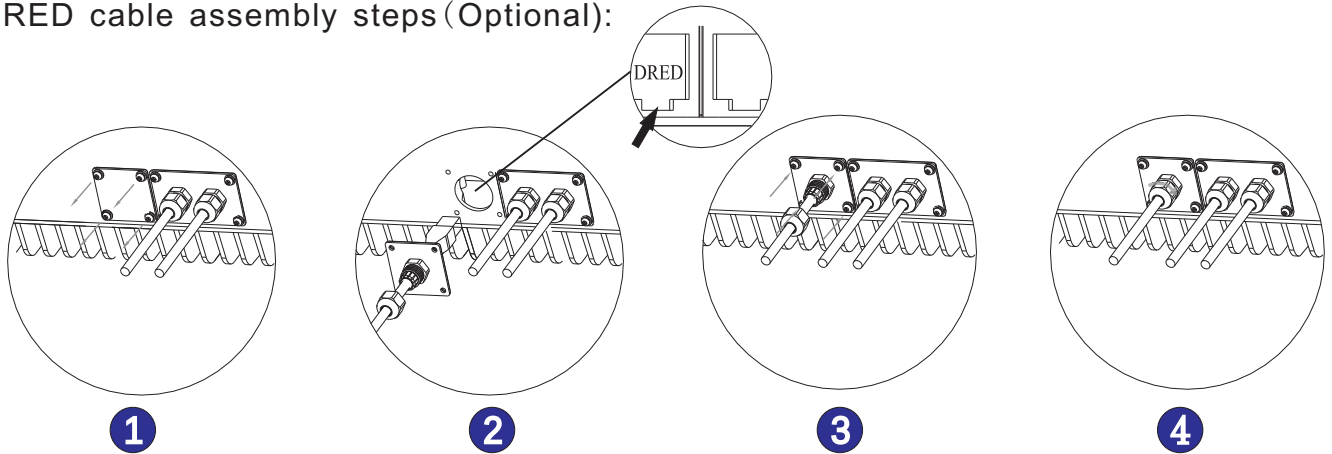


DRED cable connection diagram:

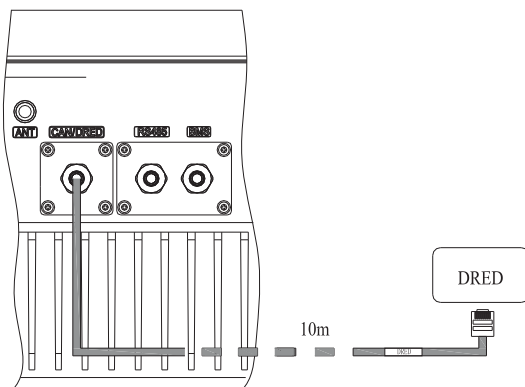


The RJ45 socket pin assignments for demand response modes as follows:

| DRED |             |              |
|------|-------------|--------------|
| PIN  | Signal Name | Cable Color  |
| 1    | DRM 1/5     | Orange-white |
| 2    | DRM 2/6     | Orange       |
| 3    | DRM 3/7     | Green-white  |
| 4    | DRM 4/8     | Blue         |
| 5    | RefGen      | Blue-white   |
| 6    | Com/DRM0    | Green        |
| 7    | N/A         | Brown-white  |
| 8    | N/A         | Brown        |

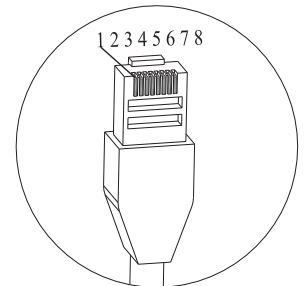


## 8 GPRS Module(Optional) and Wi-Fi Antenna Connection


GPRS Module Connection steps(Optional):

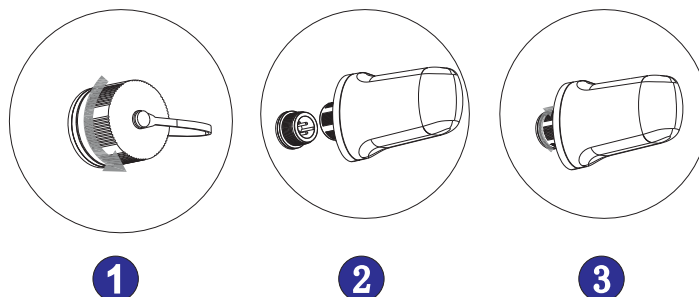


Wi-Fi Antenna Connection steps:

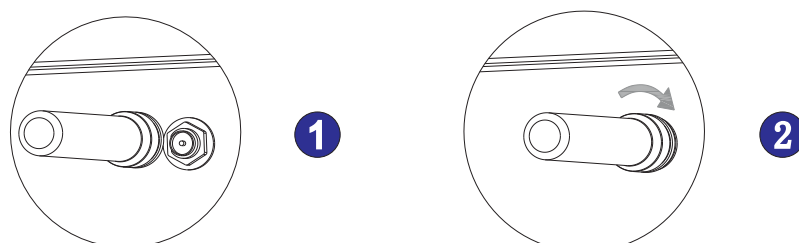

## Connect to internal Wi-Fi:

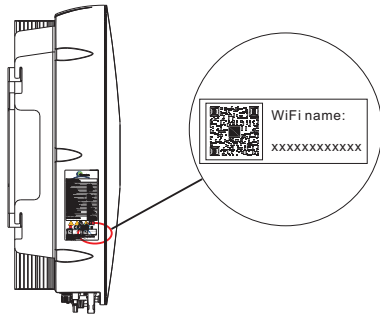

1. Find Wi-Fi name from the label on the inverters, and connect to Wi-Fi by initial password "gsstes123456".

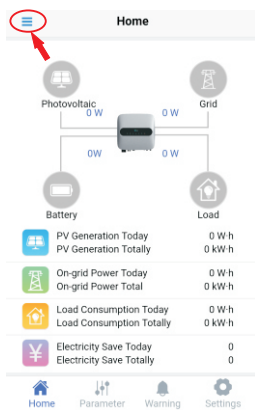

2. Enter APP main page




3. Language Setting




4. Connect to Device

## Setup system running parameters:

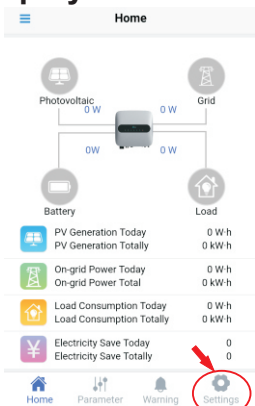


1. Enter the setting page


2. Setting "Grid Standard" and "Battery Protocol"

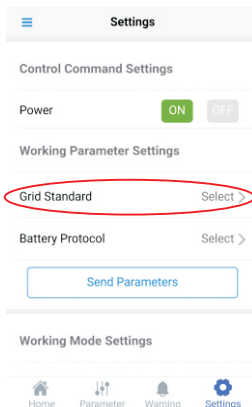

a. Setting "Grid Standard"

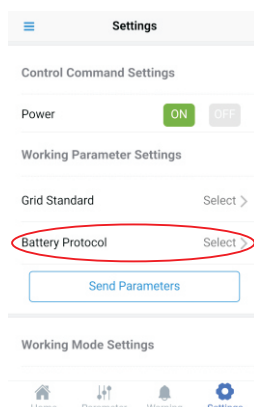


b. Setting "Battery Protocol"

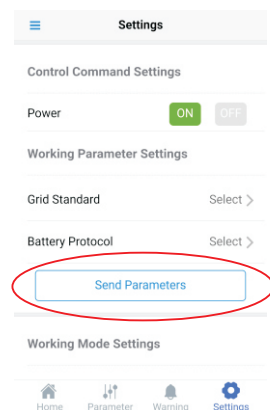


c. tap "Send Parameters" to set


### 3.Setting “Working Mode”

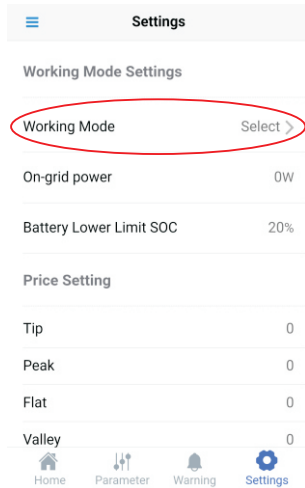


a. select “Working Mode”

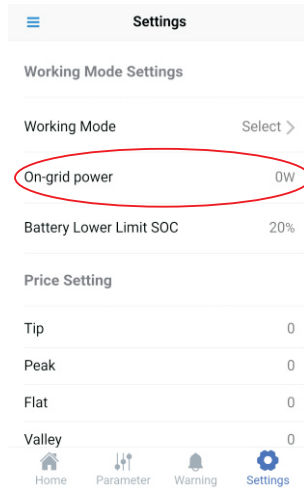


b. select “On-grid power”

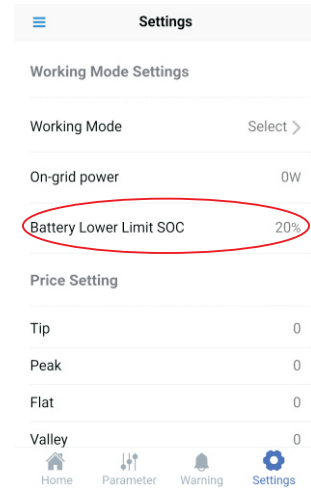


c. “Battery Lower Limit SOC” setting

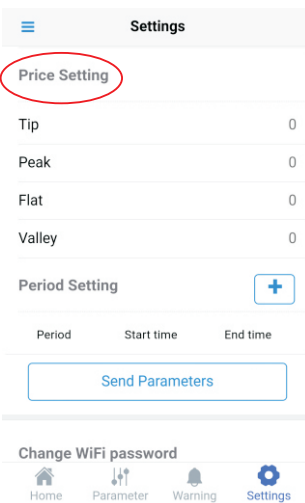

d. Price setting

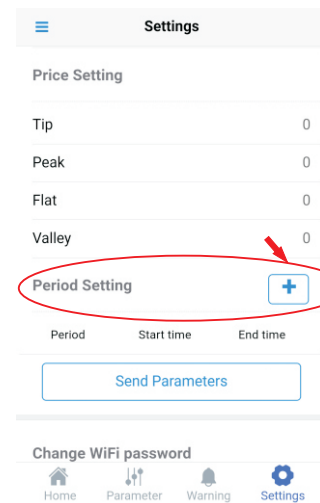


e. Period setting

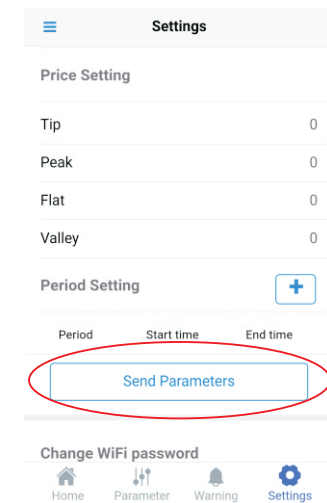

f. tap “Send Parameters” to finish setting

| Parameter                | Comment                                                                    |                                                                                                                                                               |
|--------------------------|----------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Working Mode             | PV Mode                                                                    | Feeding into grid is priority, then charge battery with surplus power.                                                                                        |
|                          | Storage mode                                                               | Charging battery is priority, then feed surplus power into grid.                                                                                              |
|                          | Custom Mode                                                                | Can be set up for charging battery or not when SOC is less than set value.<br>Can be set up for battery discharging or not when SOC is bigger than set value. |
| On-grid power            | Set maximum grid-connected power.                                          |                                                                                                                                                               |
| Period and Price setting | Set period of tip、peak、flat、valley hours and corresponding on-grid tariff. |                                                                                                                                                               |

### Send command of starting up:

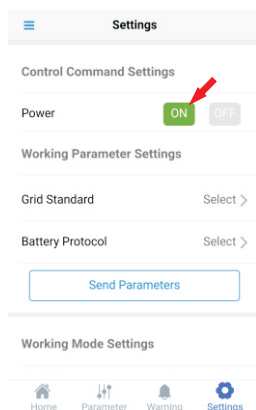

Tap “ON” to send command



## SHANGHAI SERMATEC ENERGY TECHNOLOGY CO., LTD

Tel:021-69986891

Fax:021-69986096

Web:[www.sermatec.com.cn](http://www.sermatec.com.cn)

Mail:[sales@sermatec.com.cn](mailto:sales@sermatec.com.cn)

Add:No.3939, Jiasong North Road, Jiading District, Shanghai, China.