How to use BaseSystem 101 ^_^

Connection Page

Check for connection status

Problem

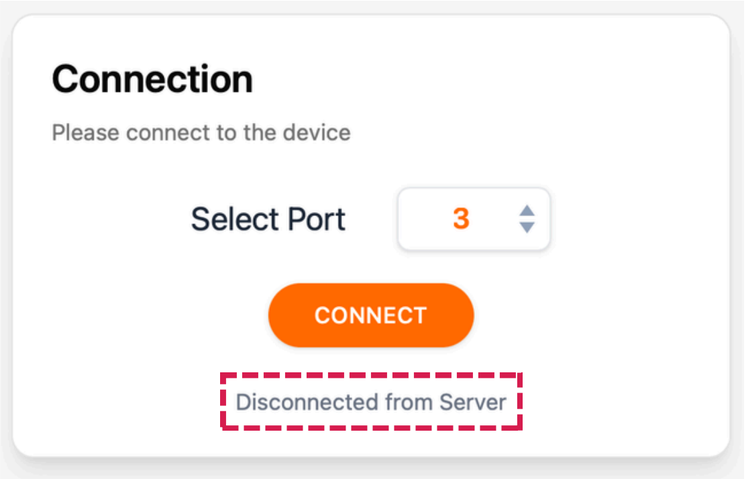

Problem connecting to backend

- Reload the interface
- Check if Python is running?
- Check for local port is free?

Success

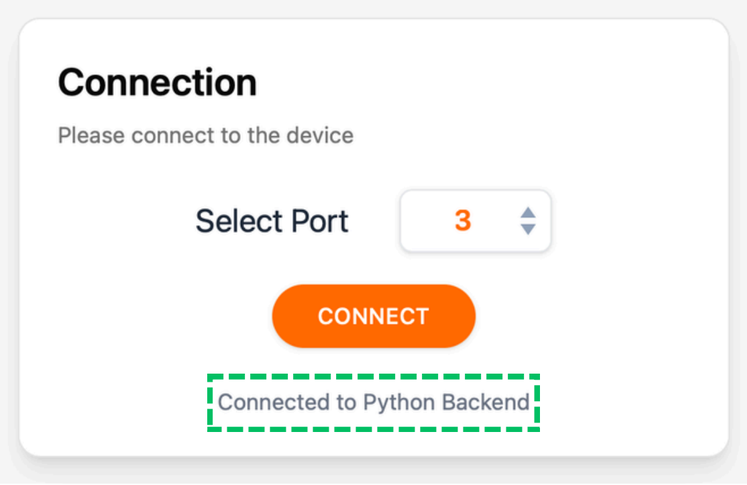

Connected successfully

Check the port number in Device manager
and select the desire port in this box

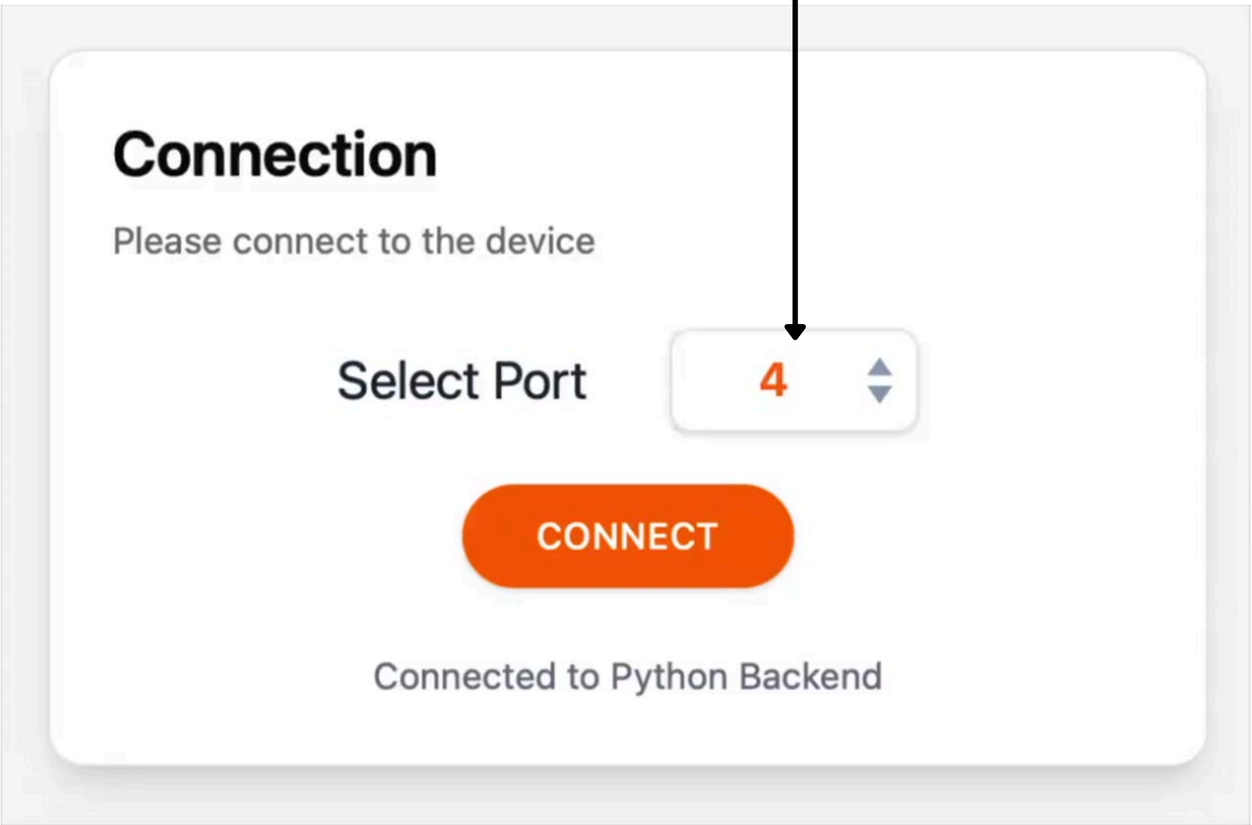

*You can select the number by click
the side arrow or by manual type

Dashboard

LOG

Position

[19:31:14] Returning to Home Position

STATS

Position	00	Deg	Gripper	Up / Close
Speed	00	m/s	Mode	Manual
Accel	00	m/s2	Emergency	Normal

WORKSPACE

Select a hole to set home

SET HOME

HOME

FIBO

STOP

Heartbeat: Normal

AUTO | MANUAL | TEST MODE

Gripper

UP

DOWN

OPEN

CLOSE

PICK

PLACE

Jog

CCW

10

Degree

CW

Homing

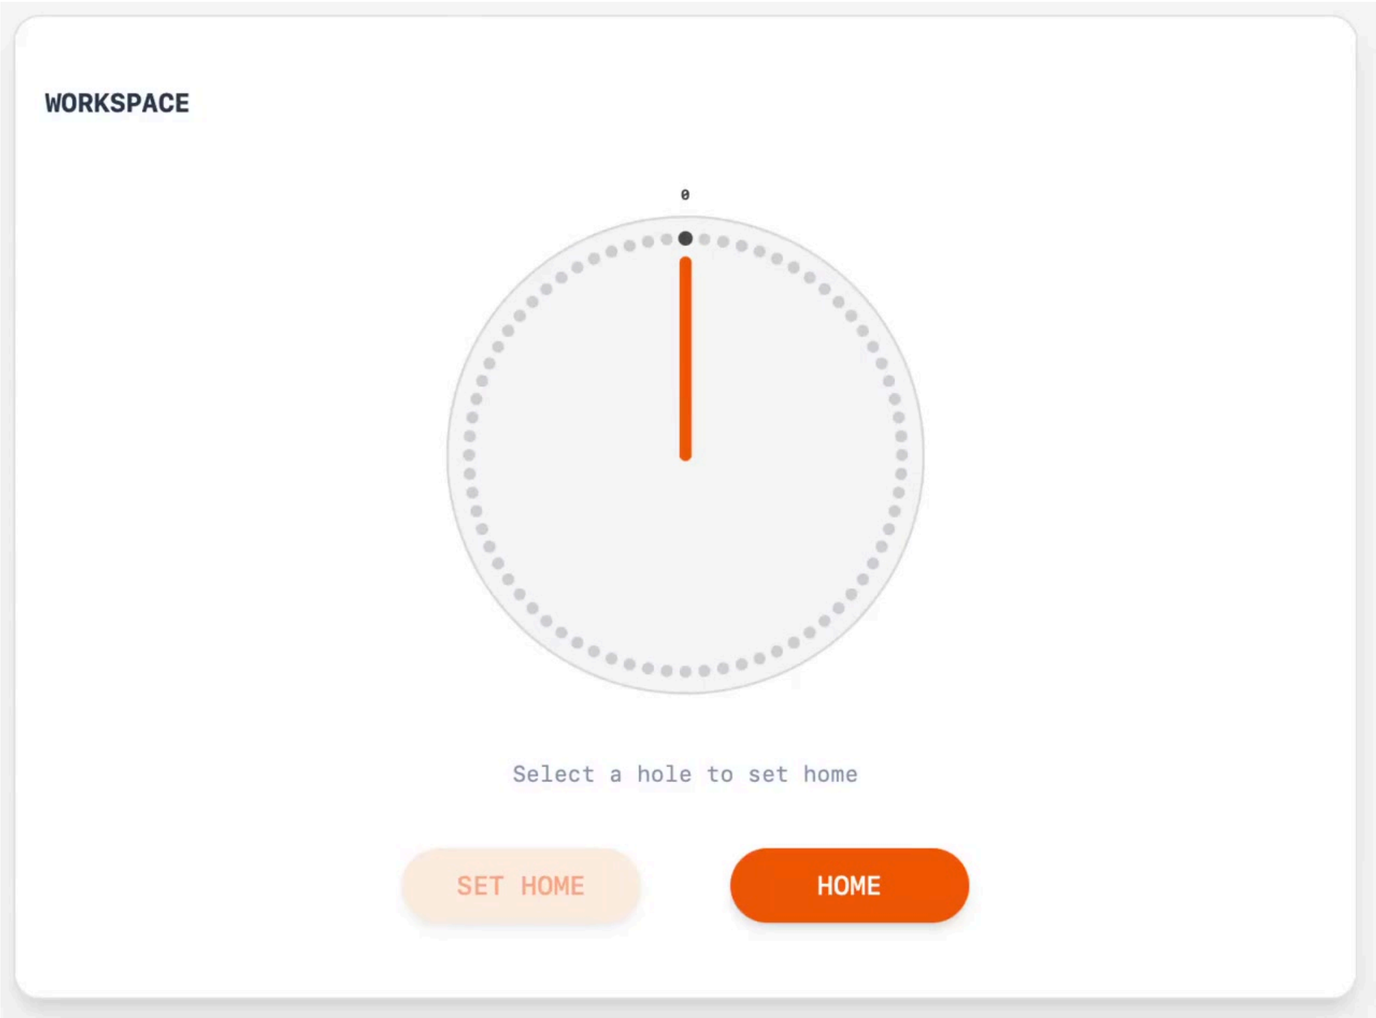

You can change the home position in the visualizer by selecting the point in the interface and clicking SET HOME

*You must manually set the robot to the desired position first. The visualizer is for reference only and does not send the position to the MCU.

Mode

You can select the mode from this section

Auto Mode

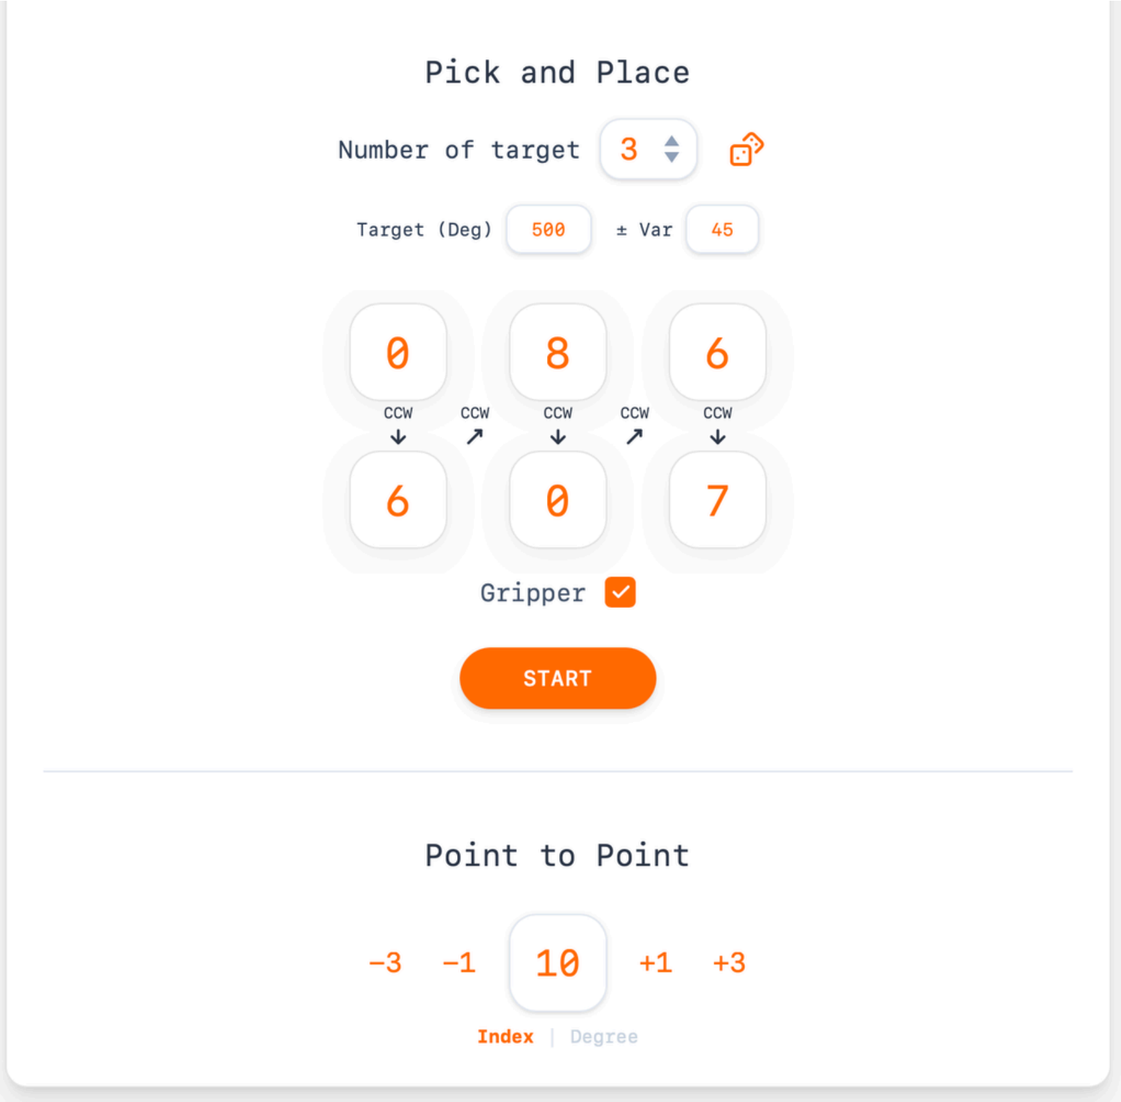

Pick and Place is used for command the robot to pick and place the object by go to pick and place in sequence of index as shown

Point to Point is use to command the robot to go to the goal point

*Goal point is reference from the home position

Pick and Place

This controls the total distance the robot will move (in degrees), variance will helps the generation function calculate and generate more easily

*The target (Deg) shouldn't go beyond (Number of target * 360)

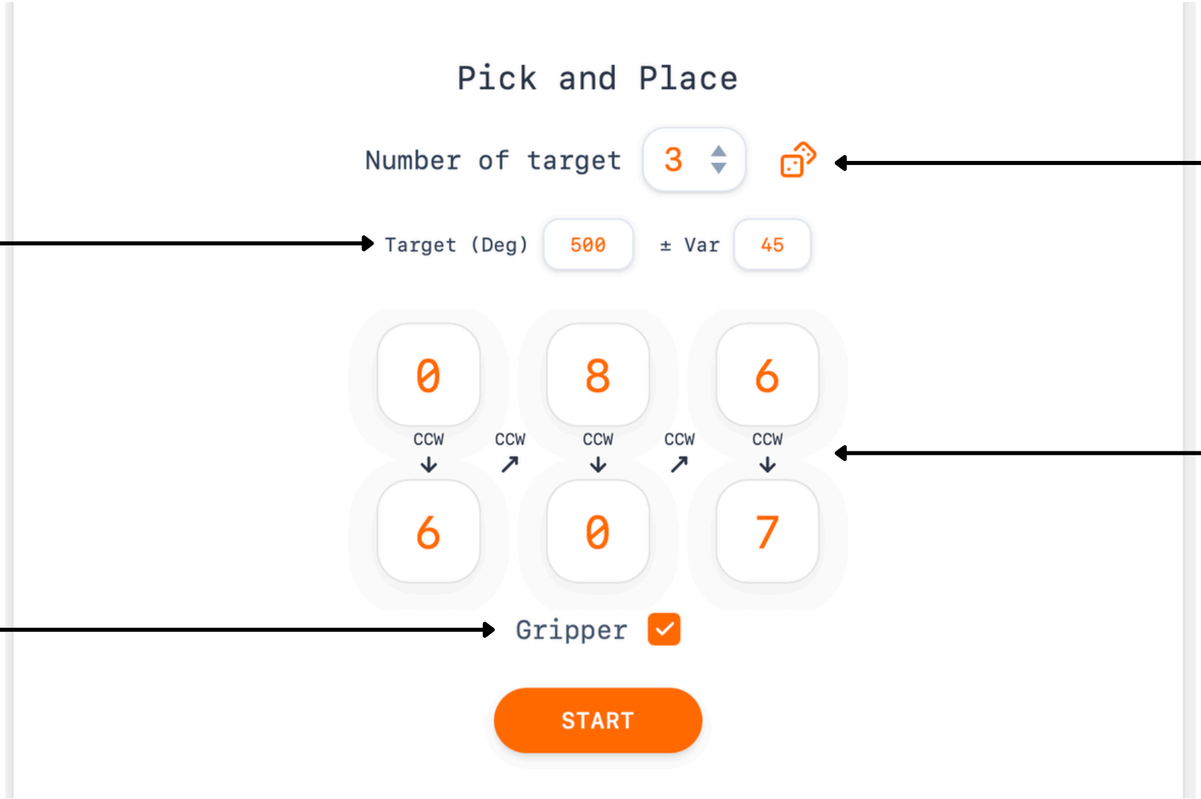

Random button : will generate the random sequence of pick and place.

Sequence

Check if you want to use gripper for the test sequence

Pick and Place

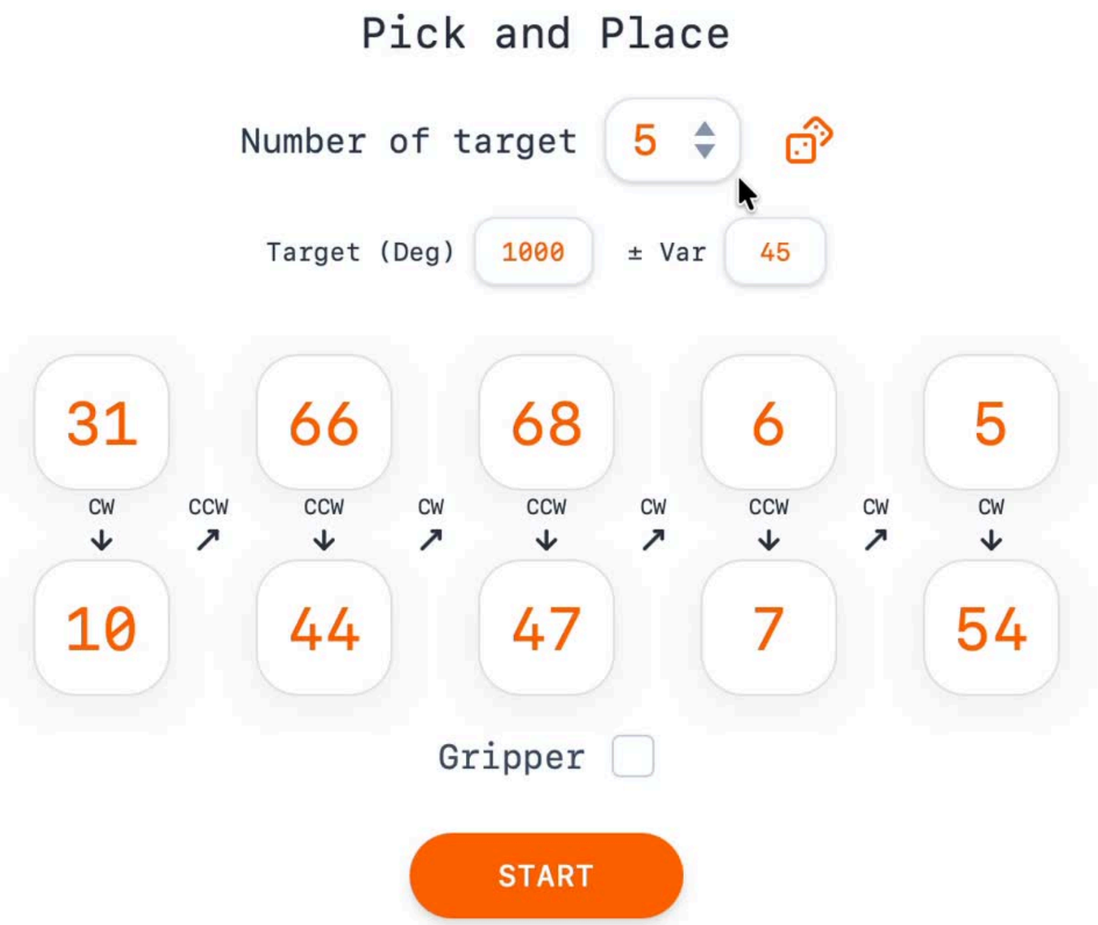

Point to Point

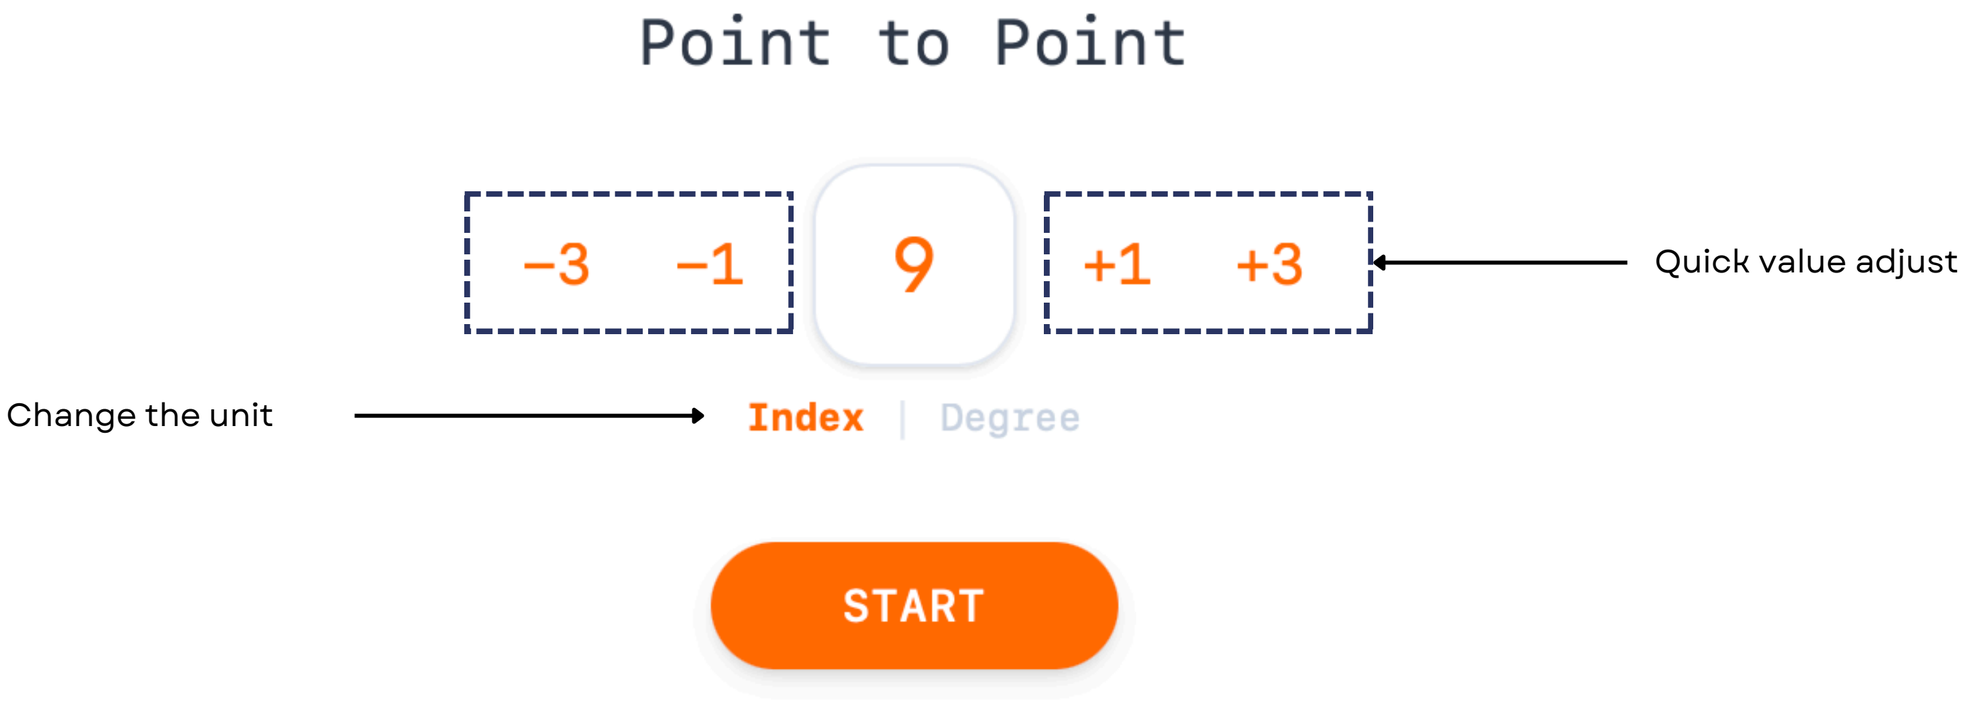

Point to Point

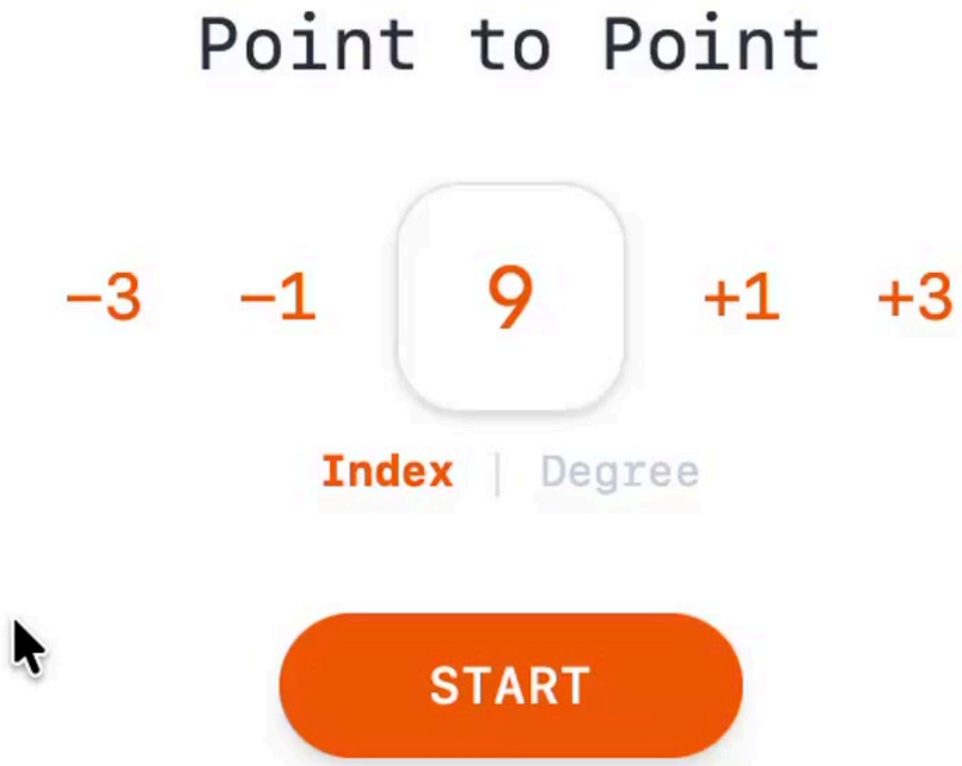

Manual Mode

Use to control the gripper

Jog is a quick command to move the robot CW or CCW in N-degree steps.

Gripper

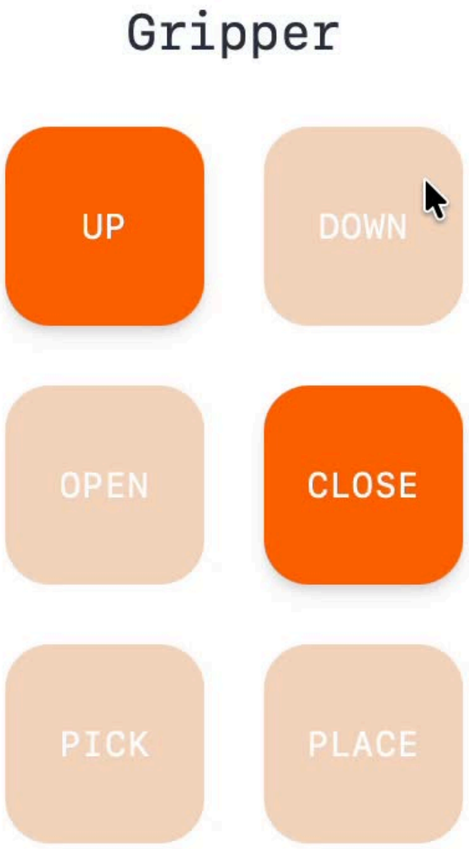

*Gripper status that shown here is read from status from the MCU

Jog

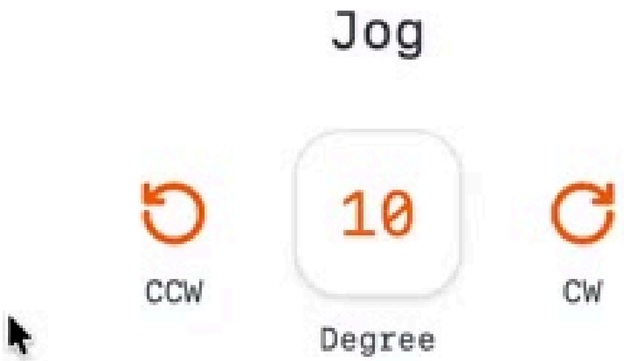

Test Mode

Performance | Precision

Speed 10

Accel 10

START