

Athena 1800

1- Firmware & Key Remapping

Firmware download

<https://drive.google.com/file/d/1rxqwLFhzdKEeCW1qkDvXaQUpA1iHp29P/view?usp=sharing>

Json download

<https://drive.google.com/file/d/1ACZIoS6cb5aMZiN1qriZ1rRqsPyfUfFq/view?usp=sharing>

The link to VIA

<https://usevia.app/#/>

Download Json

- 1.Click Show Design Tab on the Setting page
- 2.Upload Json on the Design page (Turn off Use V2 Definition)
- 3.Click Authorize Device and connect the keyboard, then you can remap the keyboard in VIA


Flash manual

- 1- Download the firmware file below
- 2- Put your board into bootloader mode (hold ESC and plug in the cable).
- 3- A new USB flash drive should pop up on your computer
- 4- Please add the new firmware you just download in the disk
- 5- Unplug your board and plug it back in again (Important)

Adjust RGB

- 1.Set Fn key on layer 0. Fn is named M0(1) in VIA
2. Set other keys on layer 1.

Then you could adjust the RGB according to the guide(see screen cut)

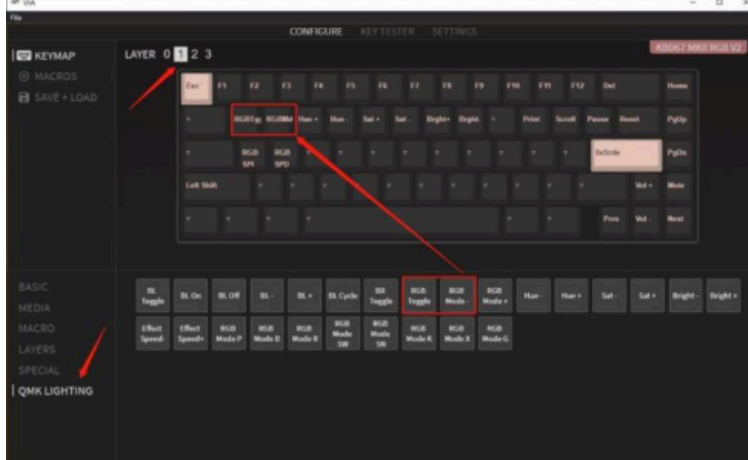

FN+Q RGB-ON/OFF

FN+W RGB-MODE

FN+E RGB- Hue -

FN+R RGB- Hue +

FN+T RGB-saturation -

FN+Y RGB-saturation +

FN+U RGB-brightness -

FN+I RGB_brightness +

Fn+c led -

Fn+v led on/off

Fn+b led up

Fn+n led Step