



QK Alice Duo Firmware Upgrade Guide

! DO NOT connect your keyboard using any custom aviator cable when upgrading the firmware. Many coiled aviator cables have non-standard specifications, which can cause data corruption when flashing firmware. This may lead to serious issues, such as getting stuck in the flashing initialization process. We strongly recommend users use QK original data cables for flashing firmware.


Additionally, it's best to connect the keyboard directly to your computer rather than through a USB hub.

- For firmware versions above 1.0.5, Mac users can update directly.
- Any updates prior to this version will need to be done on a Windows system.


1. Download the latest firmware (.uf2 file) from [here](#). The QK Alice Duo firmware consists of four files.

 qk_alice_master_v1.0.0_20250317.uf2		2025/3/17 14:10	UF2 文件
 qk_alice_plc_host_v1.0.0_20250317.uf2		2025/3/17 14:11	UF2 文件
 qk_alice_plc_left_v1.0.0_20250317.uf2		2025/3/17 14:12	UF2 文件
 qk_alice_plc_right_v1.0.0_20250317.uf2		2025/3/17 14:12	UF2 文件

2. **Connect the wireless pod to your computer, and attach both keyboard halves to the wireless pod using the magnetic cables.** Ensure all connections are stable before proceeding to the next step.
3. Navigate to the web configurator [here](#) using Google Chrome or Microsoft Edge.
Note: The page may take longer to load in Edge. Please be patient. Firefox is not supported.
4. Navigate to the "CONFIGURE" tab on the website, then select "Firmware" from the left sidebar menu.

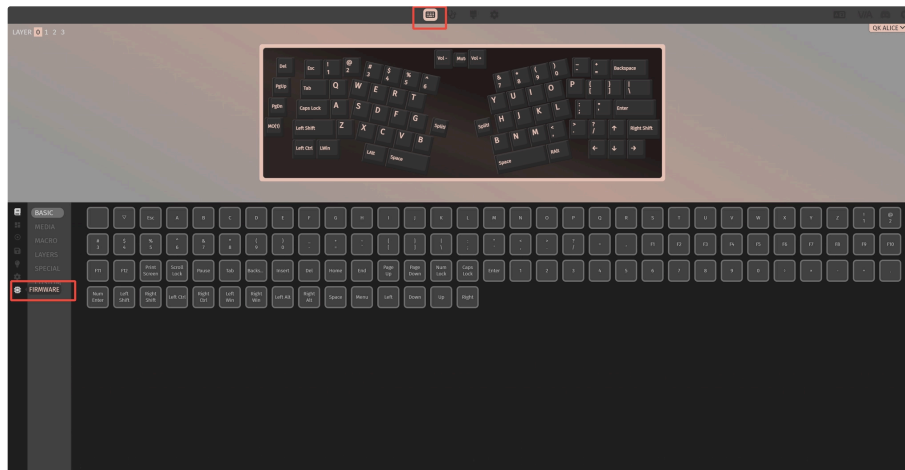


5. Click "Open" and select your downloaded firmware files to begin the flashing process.

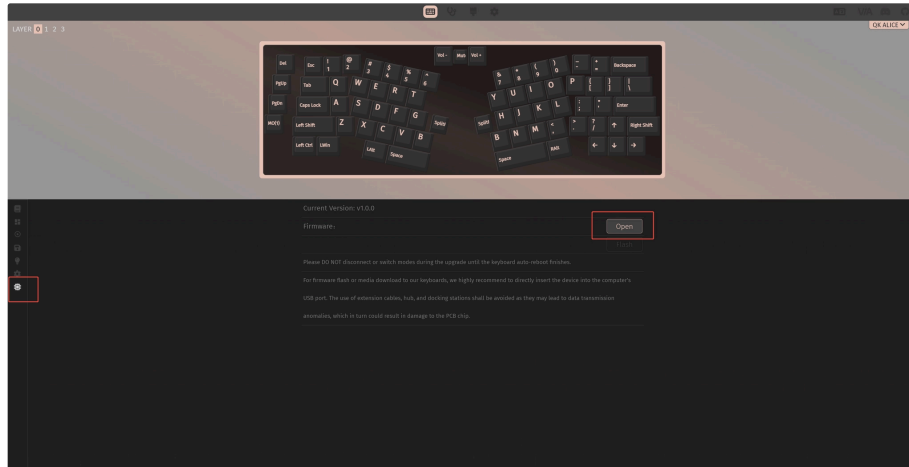

- Select the firmware you downloaded.

Note: All four files need to be flashed and please follow this order:

- Right, and unplug the magnetic cable after flashed
- Left, and unplug the magnetic cable after flashed
- Master
- Host

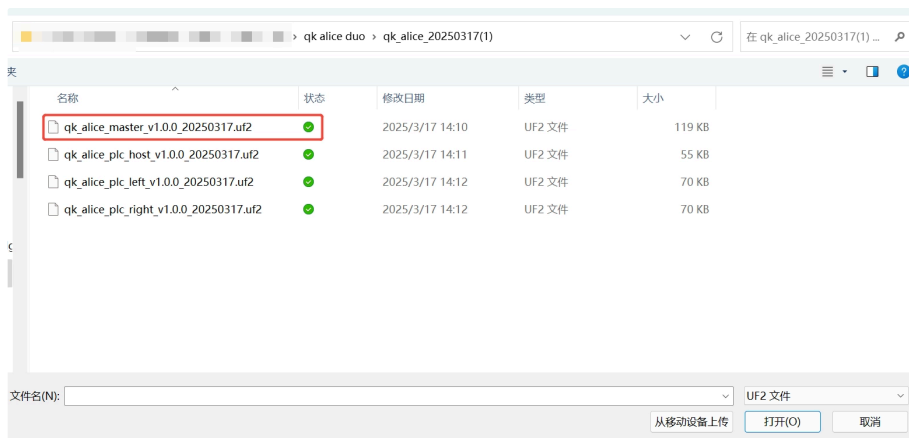

- Click "Open"

