Manualslib.com - The Global Manuals Library

VORTEX CORE USER MANUAL

Table of Contents

main features
package content
Key code Programming Instruction
Restore to factory default
Default layer descript
Fn function layer descript
Fn1 function layer descript
Fn1 + Shift function layer descript
Switching layers
Others
Other ManualsLib Projects

CORE User manual

Main Features:

1. Tiny size w/ 47 keys
2. Cherry MX switches inside
3. Arbitrary programming key code and LED colors (Backlit only)
4. PBT DSA profile keycaps
5. Dye-Sublimated technology
6. Anodized CNC Aluminum Case
7. Build in 4 layers.

Package Content

1. Keyboard x 1
2. Micro USB Cable x 1
3. User manual x 1

Enjoy now for this fantastic tool and your typing feeling

Downloaded from www.Manualslib.com manuals search engine

Key code Programming Instruction

The default layer (L0) can't be programmed. Only layer 1(L1) ~ layer 3(L3) can be.

Step 1. Choose the layer (L1~L3) ***note** which you want to programmed.

Step 2. Press Fn + R_Ctrl to enter the programming mode (R_Spacebar LED steadily lit in Blue color)

Step 3. Select a key you want to program (R_Spacebar LED flashing in Red Color)

Step 4. Key in the contents and then press Pn (R_Spacebar LED steadily lit in Blue color again)

Step 5. Repeat step 2 ~ step 4 to program other keys.

Step 6. Press Fn + R_Ctrl to exit programming mode (Spacebar right LED off)

Note:

R_ctrl, M, < , > and L_ Shift keys are fixed can't be programmed.

More:

- Support Fn layer (e.g., Fn + A) to program.
- Support time delay, press 15ms key (Fn + T) each time to delay 15ms, press 0.1s key (Fn + G) each time to delay 0.1s, press 0.5s key (Fn + B) each time to delay 0.5s.
- Consecutive delay will add up but will only be counted as 1 key stroke.
- Every key can program up to 32 key strokes.
- If there is no key pressed for 15 sec. in programming mode, it will back to normal mode.

Restore to factory default

1. Press and hold Fn + R, L_spacebar LED is flashing in white color for 5 seconds, then the layer will restore to default.
2. Press and hold both Alt, L_spacebar LED is flashing in white color for 5 seconds it will clean all layers' key codes if you had programmed. (return to default layer.)

Downloaded from www.Manualslib.com manuals search engine

Default layer descript

Fn function layer descript

Fn1 function layer descript

Downloaded from www.Manualslib.com manuals search engine

Fn1 + Shift function layer descript

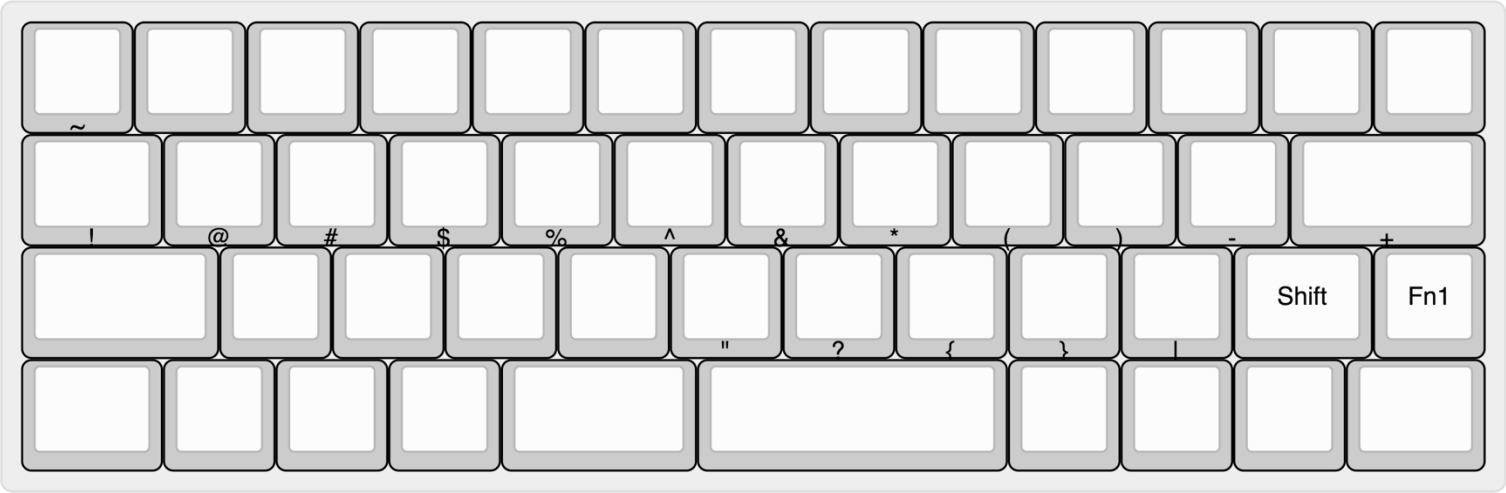

Switching layers

Switching Layer					Remark
Fn	+	M	=	Default	Spacebar left LED off
		<,		Layer 2	Spacebar left LED showing RED color.
		>.		Layer 3	Spacebar left LED showing Green color
		Shift		Layer 4	Spacebar left LED showing Blue color

Others:

1. L_Win + L_Alt + R_Spacebar = R_Shift, R_Alt, Menu and R_Ctrl as arrow keys.

2. Change Fn or Pn position*note

- Press and hold Fn or Pn + L_Shift for 3 seconds, then select the new Fn or Pn key.

Note:

Fn or Pn key only can swap to **L_Ctrl**, **L_Win**, **L_Alt**, **Pn** and **L_Spacebar**.

Downloaded from www.Manualslib.com manuals search engine

Other ManualsLib Projects

www.manualslib.com

www.manualslib.de

www.manualslib.es

www.manualslib.fr

www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ Languages