
35548

2500A JUMP STARTER POWER BANK

User Manual

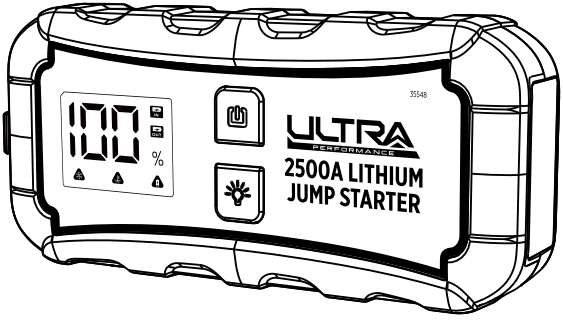

WARNING

Read this material before using this product. Failure to do so can result in serious injury. SAVE THIS MANUAL.

TABLE OF CONTENTS

Friendly Tips.....Page 3

Included.....Page 3

Specifications.....Page 3

Product Diagrams.....Page 4

How To Charge The Jump Starter Battery.....Page 5

How To Know Remaining Battery Power.....Page 5

How To Jump Start Your Vehicle.....Page 6

How To Charge A Mobile Phone Or Digital Products.....Page 9

How To Use Battery Led Flashlight .....Page 10

Warranty.....Page 12

FRIENDLY TIPS

Please read carefully the instruction manual so that you can be familiar with the product more conveniently and quickly! Please use product correctly based on the instruction manual.

Perhaps there is small difference between the picture and the actual product, so please turn to the actual product for detail information.

INCLUDED

(1) Jump starter

(1) Battery clamps with starter cable

(1) USB-A to USB-C charging cable


(1) User manual

SPECIFICATIONS

Capacity	44.4Wh
EC5 output	12V/2500A starting power (max.)
USB 1 & 2 output	5V/3A
Type-C input	5V/3A
Charging time	4 - 5 Hours
LED light Lumen	175 Lumen
Working temperature	32˚F-122˚F

PRODUCT DIAGRAMS

1. USB1 Output: 5V/3A
2. USB2 Output: 5V/3A
3. Type-C Input: 5V/3A
4. EC5 Output / DUST Cover
5. Power Button
6. Light Button
7. LED Light

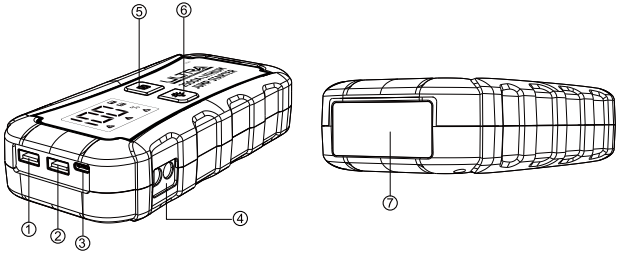

Accessories



Battery clamps with starter cable




Type-C
charging cable

HOW TO CHARGE THE JUMP STARTER BATTERY

Charging with an AC adapter (AC adapter sold separately in store).

1. Connect the battery input with USB cable
2. Connect the USB cable to AC adapter
3. Plug the AC adapter into a power source

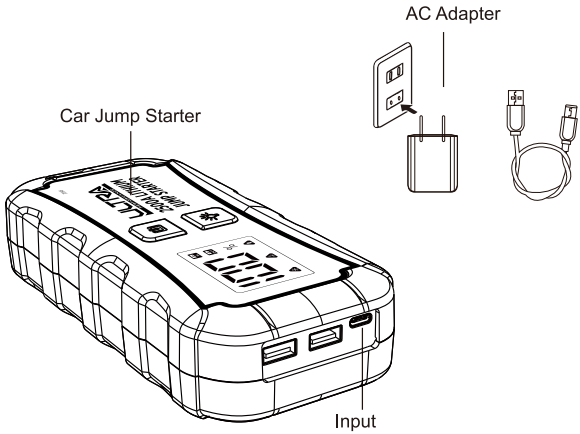

HOW TO KNOW REMAINING BATTERY POWER

Press the power button, the LED display will show as follows:



Show available battery

HOW TO JUMP START YOUR VEHICLE









This unit is designed for jump starting 12V car batteries. Do not attempt to jump start vehicles with a higher battery rating, or different voltage.
If the vehicle does not start immediately, please wait for 1 minute to allow device to cool down. Do not try to restart the vehicle after three consecutive attempts as this may damage the unit. Check your vehicle for other possible reasons why it will not restart.

Operating Instructions:

Please ensure the device is at least 50% charged before use

Start the Car

First step:	Second step:	Third step:	Fourth step:
Plug jumper cable into EC5 port, the red and green lights flash alternately, then press the power button to turn it on.	Connect the red clamp cable to the positive and the black clamp cable to the negative. Please avoid reverse connection.	When the green light is always on, turn on the car engine to start car.	After jump-starting the engine, remove the battery clamps from the car battery, then remove the clamp plug from the jump starter.

JUMPER CLAMP INDICATOR INSTRUCTION

Item	Technical parameters	Instruction
Standby indication	support	When the clamp is in standby state, the red and green lights flash alternately.
Work instructions	support	When the clamp is in the conduction working state, the green light is always on.
Input high voltage protection	≥17.5V	When the clamp is in standby mode, and the voltage at the EC5 terminal is higher than this value, the protection will be triggered, and the red light will always be on. The protection is automatically reset after the fault is cleared.
Input low voltage protection	≤13.5V	When the clamp is in standby mode, and the voltage of the EC5 terminal is lower than this value, the protection will be triggered, and the red light will always be on. The protection is automatically reset after the fault is cleared.
High temperature protection	support	When the detection temperature of the clamp is ≥ 80°C±10°C, the output is automatically disconnected, and the red light is always on, and the buzzer keeps beeping quickly; when the temperature of the clamp is lower than the protection value, the protection is automatically reset.
Reverse polarity protection	≥2V	When the wire clip is reversely connected to the car battery that is higher than 2.0V, the protection will be triggered, the red light will always be on, and the buzzer will continue to beep, beep, beep for a short time.The protection is automatically reset after the fault is cleared.

Item	Technical parameters	Instruction
Anti charge protection	support	When the protection is triggered, the output is automatically disconnected, and the red and green lights flash alternately; The protection is automatically reset after the fault is cleared.
Start overrun protection	support	If port voltage drops below 7.0V for 0.5s during jump start, output cuts off. Red light stays ON; buzzer is silent. Re-plug to reset.
Boot timeout protection	support	If no start attempt is made within 30s of proper connection, output cuts off. Red light stays ON. Remove clamps to reset.
Short circuit protection	support	No damage if clamps touch in standby. Red light stays ON and buzzer sounds a continuous beep to indicate protection.
Relay sticking alarm	support	After the relay of the wire clip is stuck, when the power is turned on again, an alarm will be triggered, the red indicator flashes, and the buzzer emits continuous rapid short beeps. The protection is automatically reset after the fault is cleared.
Manual Override/Button Start	support	1. Press and hold for about 3S, the green light stays on. After releasing the button, the buzzer will beep once to enter the conduction state. 2. After conduction (during the 30S period), short press to stop the output. At the same time, the green light flashes for 2S before returning to the standby state. Note: In this state, the clamp detachment function is disabled. It is strictly forbidden to short-circuit the red and black clamps by touching them together.

HOW TO CHARGE A MOBILE PHONE OR DİGİTAL PRODUCTS



With high capacity and Two USB Output Ports (5V/3A USB Quick Charge), it can fully charge your smartphones and tablets on the go up to 75% faster than a standard charger. And you can charge two devices at the same time.



First step:

Press the Power button.

Second step:


Plug the USB port of the charging cable into the product USB interface, and insert the other side into the input port of the a mobile phone or digital products.


HOW TO USE BATTERY LED FLASHLIGHT



1. Press the Power button “ ⏻ ”. The BATTERY CAPACITY indicator will be lighted up. If no device is connected to the unit it will be turned off automatically.
2. Press the Light button for 3 seconds to turn on the LED light, press again and hold for 3 seconds to fully turn off the unit.

In the light mode, namely when LED flashlight is on, press Power button shortly again to cycle through Lighting, SOS, strobe light mode.

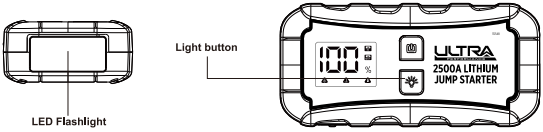

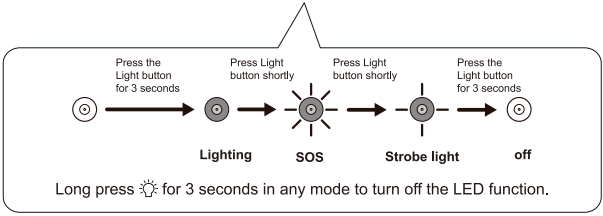

Safety Warning

1. Read the entire manual before using this product. Failure to do so could result in serious injury or death.
2. Keep out of reach of children.
3. Do not put fingers or hands into any of the unit's outlets.
4. Do not expose the unit to rain or snow. Please use this starter at room temperature and keep away from humid, hot and fire places.
5. Use only recommended attachments.
6. Never short circuit the jump starter by connecting the Red and Black clamps.
7. If you find swelling, leakage or odor, please stop using the jump starter immediately.
8. Do not start the vehicle continuously. There should be at least 30 seconds to 1 minute between two starts.
9. When the battery power is less than 50%, do not use the jump starter otherwise the device will be damaged.
10. Before first use please charge it for 3 hours or more.
11. If the positive clamp of the starting power is incorrectly connected to the negative poles of the car battery, the product comes with relevant protective measures to avoid personal injury and property damage.
12. To reduce the risk of damage to the electric plug or cord, pull by the adaptor rather than the cord when disconnecting the unit.
13. Do not operate the unit with damaged cables or clamps.
14. Do not operate the unit if it has received a sharp blow, been dropped or otherwise damaged in any way; take it to a qualified service person.
15. Do not disassemble the unit; take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or electric shock.
16. To reduce the risk of a battery explosion, follow these instructions and those published by the battery manufacturer and the manufacturer of any equipment you intend to use in the vicinity of the battery. Review the cautionary markings on these products and on the engine.
17. Do not set the unit on flammable materials, such as carpeting, upholstery, paper, cardboard, etc.
18. Never place the unit directly above battery being jumped.
19. Do not use the unit to jump start a vehicle while charging the internal battery.

Note:

- For the first use, please make sure to fully charge before using.
- In normal use, please confirm that the unit has at least 50% power before using.