


Modbus poll 软件修改设备地址，指定地址通信


利用 modbus poll 软件，修改模块设备地址，并设置软件和指定的设备地址通信

首先直接解压我们的压缩包(确保文件没有做修改)，
再阅读我们提供的“ModbusPoll 软件-使用说明 Vx.x.docx”，
成功连接表头


1、成功连接并读取，此处无红色报错

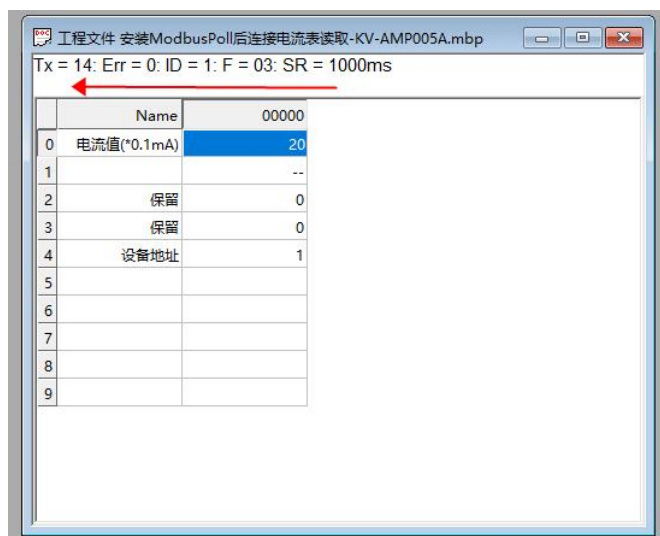

2、双击设备地址后的数据栏

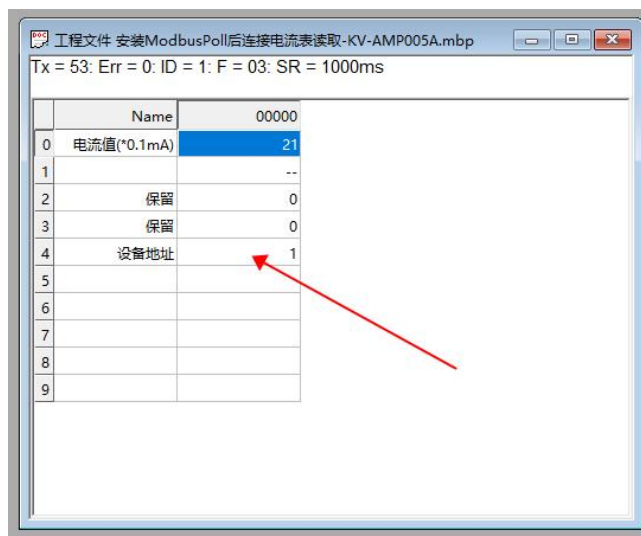

3、将箭头所指的 value 值改成需要设置的新设备地址，填好值后点击 send(如改成 5)

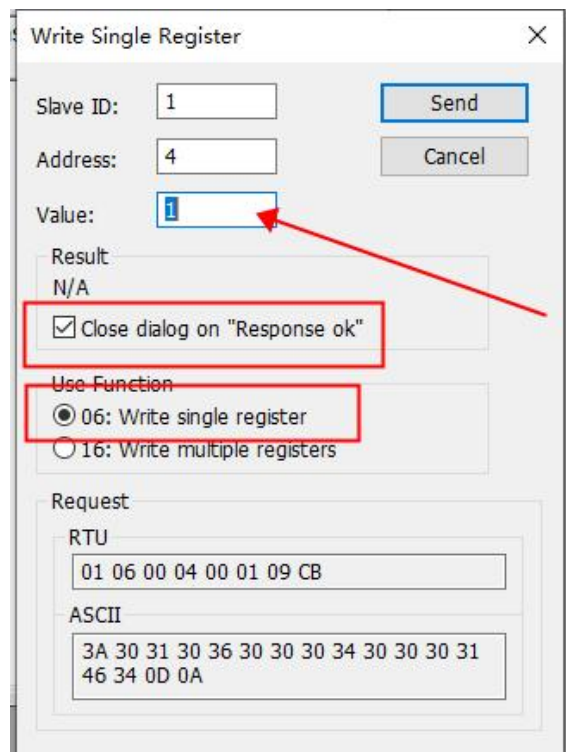

The image shows a 'Write Single Register' dialog box. It has fields for 'Slave ID' (1), 'Address' (4), and 'Value' (1). A red arrow points to the 'Value' field. There are 'Send' and 'Cancel' buttons. Below the fields, there is a 'Result' field showing 'N/A'. A checkbox 'Close dialog on "Response ok"' is checked. Under 'Use Function', '06: Write single register' is selected. At the bottom, there are sections for 'Request' in 'RTU' and 'ASCII' formats, showing hexadecimal and ASCII representations of the request data.

Field	Value
Slave ID	1
Address	4
Value	1

Result: N/A

☒ Close dialog on "Response ok"

Use Function

☒ 06: Write single register

☐ 16: Write multiple registers

Request


RTU

01 06 00 04 00 01 09 CB

ASCII

3A 30 31 30 36 30 30 30 34 30 30 31 46 34 0D 0A


4、修改成功，在修改成功后，回到之前界面就通讯不上了，因为之前的设置还是和设备地址为 1 的模块通讯，

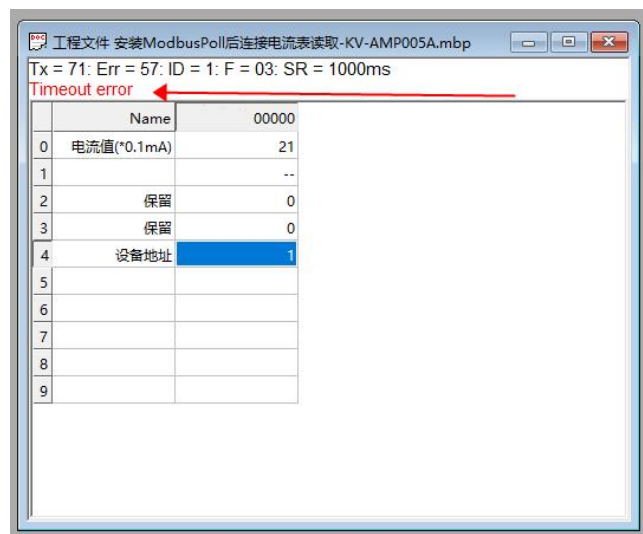


The image shows the Modbus Poll interface. At the top, it displays connection parameters: 'Tx = 71: Err = 57: ID = 1: F = 03: SR = 1000ms'. Below this, a red arrow points to the text 'Timeout error'. The main part of the interface is a table with columns 'Name' and 'Value'. The table contains several rows, with the row '设备地址' (Device Address) highlighted in blue and showing the value '1'.

Name	Value
00000	
0 电流值(*0.1mA)	21
1	--
2 保留	0
3 保留	0
4 设备地址	1
5	
6	
7	
8	
9	

5、将软件设置到和新的设备地址通讯(如本例在以上设置中，模块地址已被改成 5)
先点 setup，再点击 read/write definition

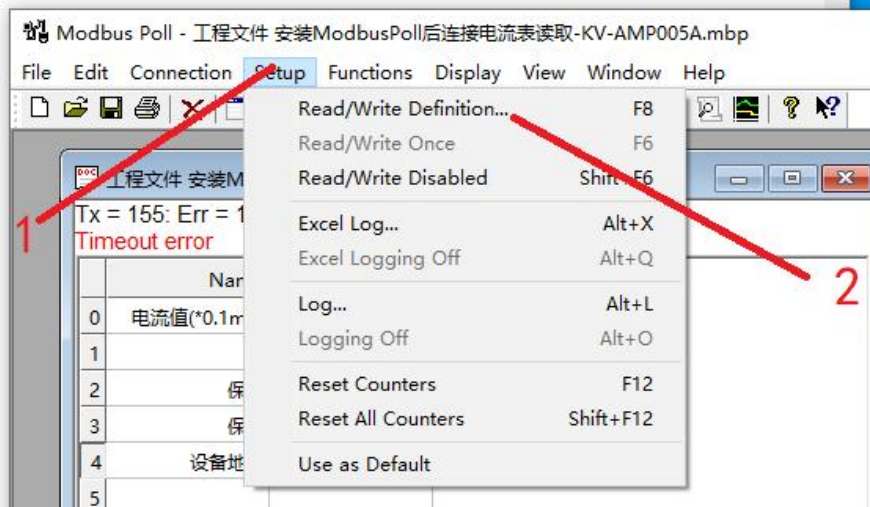

6、将弹出的对话框中的 slave ID 值改成设备地址(如本例要改成 5)，点击 OK，修改完成

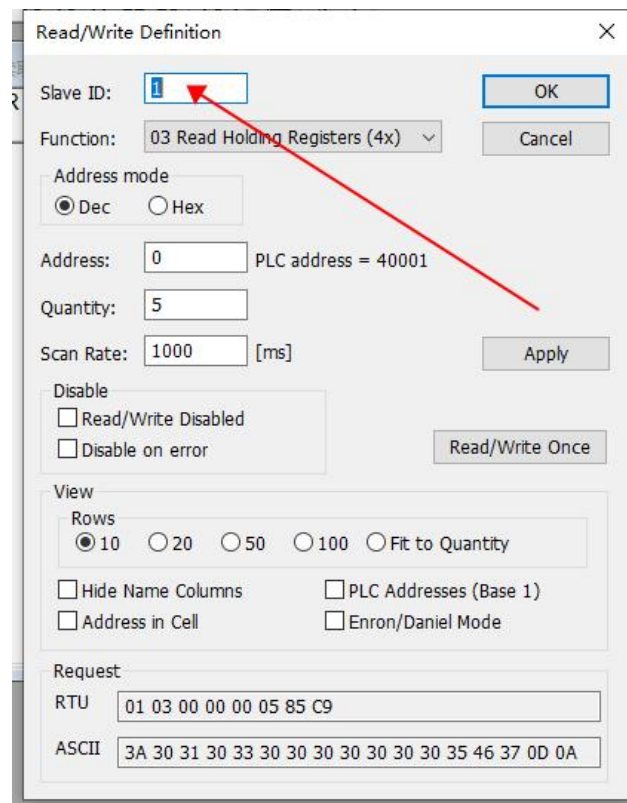

Read/Write Definition

Slave ID:

Function: 03 Read Holding Registers (4x) v

Address mode
☒ Dec ☐ Hex

Address: PLC address 1 40001

Quantity:

Scan Rate: [ms]

Disable
☐ Read/Write Disabled
☐ Disable on error

View
Rows
☒ 10 ☐ 20 ☐ 50 ☐ 100 ☐ Fit to Quantity
☐ Hide Name Columns ☐ PLC Addresses (Base 1)
☐ Address in Cell ☐ Enron/Daniel Mode

Request
RTU
ASCII

OK Cancel Apply Read/Write Once

2