Z8 Wi-Fi Photo Transfer

Each photo you take in the garage appears on your PC upstairs about 2 seconds later. No cable. One-time setup: about 20 minutes.

Nikon Z8 → Wi-Fi → **your PC** → **C:\QDAM\Listings\Incoming** → **ROLEX-116610_01.jpg ...**

> **You need:** the Windows PC, the Z8 with a charged battery, your home Wi-Fi name and password, and about 20 minutes. Do Part A at the PC first, then Part B at the camera.

Part A: Set up the PC (about 10 minutes)

1. ☐ Install **Python 3** from **python.org/downloads**. On the first install screen, tick **"Add python.exe to PATH"**.
2. ☐ Go to **github.com/xtresno/z8-wifi-drop**. Click the green **Code** button, then **Download ZIP**.
3. ☐ Unzip it to `C:\z8-wifi-drop`. Do not run it from the Downloads folder; it must stay where it is.
4. ☐ Double-click **Install.bat**. Click **Yes** when Windows asks for admin rights.
5. ☐ If it asks "Set the network to Private?", type **y** and press Enter.
6. ☐ When it finishes, open **"Z8 camera settings.txt"** on the desktop. Copy the values here:

Setting	Write it here
Address (this PC)	
Port	**2121** (always)
User ID	**z8** (always)
Password (8 letters/numbers)	
Home Wi-Fi name	

> **Tip:** the PC address can change when the router restarts. Ask whoever runs the router to give this PC a **fixed address** (called a "DHCP reservation"). Then you never need to change the camera again.


Part B: Set up the camera (about 10 minutes)

To **save** typed text, press the **zoom-in (+) button**, above MENU. To **go back**, tap the ↺ arrow at the top right.

1 **MENU** › **Network menu** (the globe icon). Check **Airplane mode** is **OFF**.

2 **Connect to FTP server** › **Network settings** › **Create profile**.

3 Pick **Configure manually**, not the wizard. The wizard uses port 21, which is wrong here.

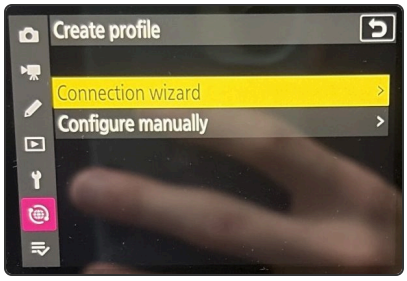

Step 3: pick Configure manually.

4 Pick **Wireless LAN**.


You now see the list **General / Wireless / TCP/IP / FTP**. Leave General as it is.



Step 4: Wireless LAN.

5 **Wireless** › **SSID**: type the home Wi-Fi name **exactly**. Capitals count. Tap the letters on the screen. **Aa&** switches between capitals, small letters and symbols. The trash-can button deletes a letter.

6 Leave **Authentication/encryption** as it is. Scroll down to **Password**: type the Wi-Fi password.

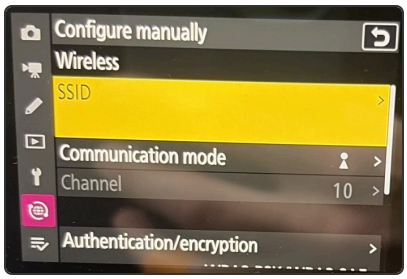


Step 5: SSID is the Wi-Fi name.



The keyboard. (+) button = save.


7 Go back. **TCP/IP** › **Obtain automatically**: **ON**. Type nothing else here.

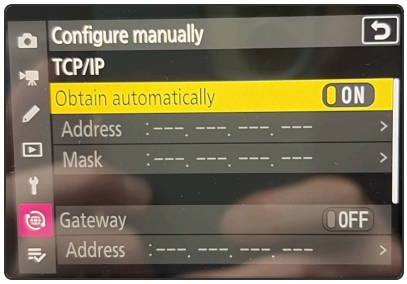

Step 7: Obtain automatically ON.

8 Go back. **FTP**:


- **Server type**: FTP
- **Address**: the PC address from Part A. The dot (.) is on the symbols page (Aa&).
- **Folder**: leave blank
- **Port**: change **21** to **2121**. Left/right = move, up/down = change digit.
- **PASV mode**: ON

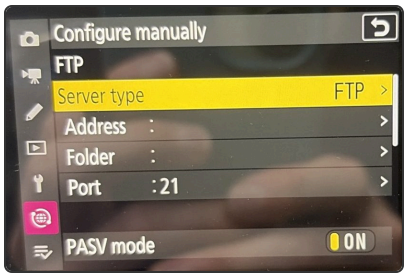

Before: Port says 21. Change it to 2121.

9 Scroll down in FTP:

- **Anonymous login**: switch to **OFF**. It starts ON, and ON does **not** work.
- **User ID**: `z8` (small letters)
- **Password**: the 8-letter password from Part A (small letters)

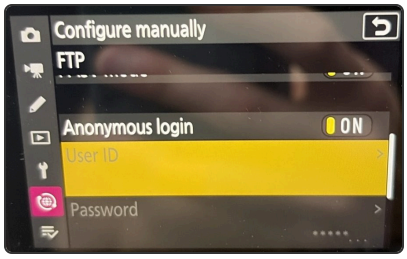


Wrong: Anonymous login ON. Switch it OFF, then fill in User ID and Password.

10 Back out to **Network settings**. Highlight your profile (WLAN1, WLAN2 ...) and press **OK** to connect.

"FTP" in green on the shooting screen = connected. Red = error (see Part E).

To **edit** a profile later: highlight it and press **RIGHT**, not OK.

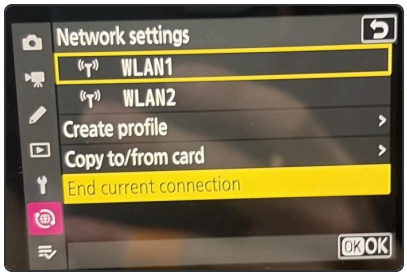

The yellow outline marks the profile in use.

Part C: Upload options (one time, about 1 minute)

MENU › **Network menu** › **Connect to FTP server** › **Options**:

Option	Set to	Why
Auto upload	**ON**	Every shot is sent by itself.
Upload RAW + JPEG as	**JPEG only**	A RAW file is 50 MB and takes 4.5 s; a JPEG takes 1.6 s.
Keep connection	**ON**	The camera reconnects after a Wi-Fi drop (uses more battery).
Overwrite if same name	**OFF**	A photo already sent is never replaced.
Delete after upload	**OFF**	The memory card stays as a backup.

Also set the camera clock: **Setup menu** › **Time zone and date**. Match the PC clock, including daylight saving time.

Part D: Every shoot

1. Turn on the camera. Wait for **"FTP" in green**.
2. On the PC, double-click **Z8 Photo Sorter** on the desktop.
3. Type the item ID (for example `ROLEX-116610`) and press Enter.
4. Shoot. Each photo becomes `ROLEX-116610_01.jpg`, `_02` ... in `C:\QDAM\Listings\ROLEX-116610\`.
5. Next item: wait until the last photo shows up, then type the next ID.

> **Two PCs, one camera?** Make one profile per PC (for example WLAN1 = upstairs PC, WLAN2 = other PC). The camera sends to one PC at a time: in **Network settings**, highlight the PC's profile and press **OK**.

Part E: If something is wrong

What you see	Do this
"FTP" is red on the camera	Check the Address, Port **2121**, User ID **z8**, and the password. Check that **Anonymous login is OFF**.
The camera cannot find the Wi-Fi	Retype the Wi-Fi name and password. Capitals count. Move the router or the camera closer.
It worked yesterday, not today	The PC address may have changed. Open "Z8 camera settings.txt", or run Install.bat again, and compare with the camera's Address.
No photos arrive, "FTP" is green	Options › **Auto upload ON**. Is the PC on and awake?
Photos are slow	Options › Upload RAW + JPEG as › **JPEG only**. Weak Wi-Fi in the garage: add a mesh node or access point there.
Anything else	Ask Claude Code (below).

> **Ask Claude Code for help.** Open a terminal in `C:\z8-wifi-drop`, run `claude`, and say what you see, for example: *"the camera says FTP in red, help me fix it"*. It reads the logs on this PC and walks you through the camera menus one step at a time. Take photos of the camera screen and give them to it.

Measured on 2026-10-25: Z8 in the garage, router indoors. 0% packet loss; JPEG Fine (17 MB) in 1.6 s; RAW (50 MB) in 4.5 s. · github.com/xtresno/z8-wifi-drop