
*With a grain of salt

The Badger


The cheapest *fully featured* synth ever.*

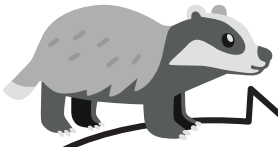

Your journey starts here!
Connect USB-C cable with power,
plug in the headphones and
flick the power switch to the right!



For synt-heads:
TRS MIDI Type A

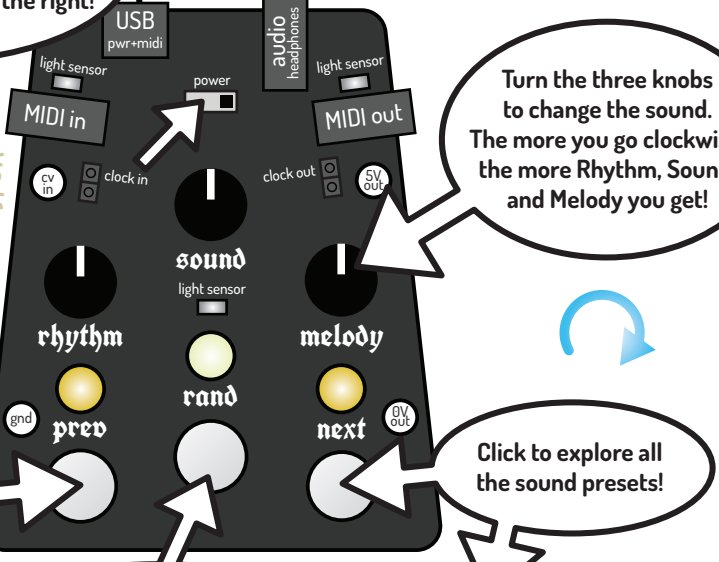

Turn the three knobs
to change the sound.
The more you go clockwise,
the more Rhythm, Sound,
and Melody you get!

Click to return
to the previous
sound preset.

Click to explore all
the sound presets!

Click the randomizer,
to achieve Rhythms and Melodies
beyond the knobs.

There are 18 presets to choose from.
The Badger has a limited color range, some presets
re-use the same color - you'll hear it.



Something doesn't work? Turn it off and on again.
Hold RAND button while turning on The Badger to load defaults.





In-depth User Manual + Firmware Updates
github.com/xx0x/badger

white group melodies
- Synth
- Witch Saw
- Organ
- Electric Piano
- Kitchen Pot
- Flute
- Chiptune
- Bass Guitar

blue group drums
- Classic Drums
- 8-Bit Drums
- Tambourine
- Woodblock
- Clap
- Laser Drums


green group drones
- Rain and Thunder
- Digital Hive
- Underwater
- Bird Song

*

flip




The Badger supports “Layers”. Holding a button and turning a knob or pressing the other buttons allow deeper functionalities.

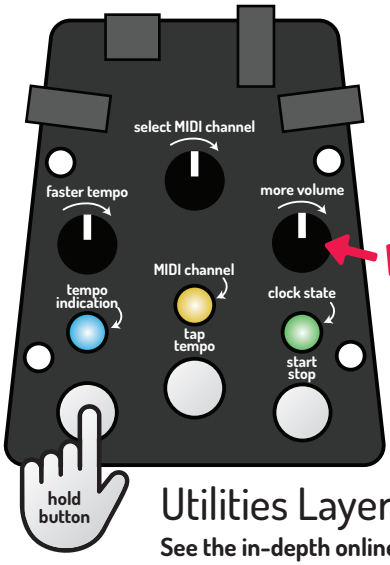

Volume


Utilities Layer

See the in-depth online manual for details about MIDI etc.

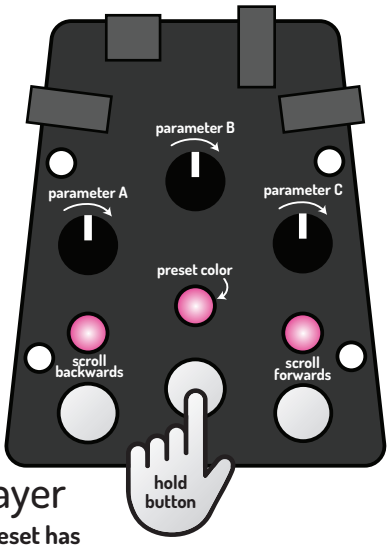

Sound Layer

Each sound preset has three individual autosaved parameters. You’ll find the exact functionalities in the in-depth online manual.

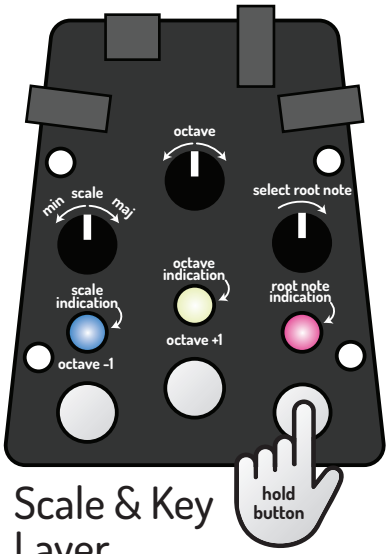

Scale & Key Layer

This modifies the melodies.

Scale

“sad”
- Minor Chord
- Minor Pentatonic
- Minor Diatonic
- Chromatic; default

“happy”
- Major Diatonic
- Major Pentatonic
- Major Chord

Octave
- -3
- -2
- -1
- 0; default
- +1
- +2
- +3

Root note
- C; default
- C#
- D
- D#
- E
- F
- F#
- G
- G#
- A
- A#
- B

*

Drone modes react to light! This is Normal Layer, without buttons holding.

