
AV Controller Malfunction Recovery Procedure for Customer

Step 1: Prepare the recovery firmware and copy "UPG" folder to USB flash drive.



C0110_be_2.bin : BD-A1010, BD-A1000, BD-S1067

C0113_be_2.bin : BD-S671

Step 2: Insert the USB flash drive into BD player and open setup menu to select "USB Storage".

Select - System > Upgrade > USB Storage



Step 3: After selecting, player will automatically search the firmware and guide to start update.



Step 4: After finishing the update, player will automatically reboot and display as shown below.



"This player requires the firmware update to the latest version."

Step 5: Prepare the latest firmware officially released and copy "UPG" folder to USB flash drive. Before the copy, be sure to delete the recovery firmware file.

(Current Official Firmware)


BD-S1067, BD-A1000, BD-A1010: Ver. 1.4912 BD-S671: Ver. 1.2505 (as of June 27, 2012)

Step 6: Insert the USB flash drive into BD player and open setup menu to select "USB Storage".

Select - System > Upgrade > USB Storage



Step 7: After selecting, player will automatically search the firmware and guide to start update.

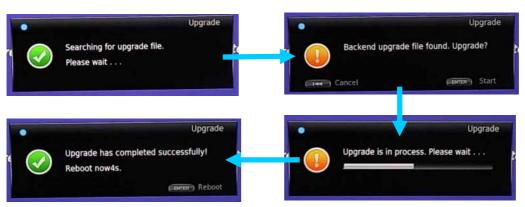

Step 8: Unit will be restored after the reboot under the latest firmware version.

