

Blues Brkr


Controls Layout

volume : This knob adjusts the output volume of the effect.

drive : This knob adjusts the amount of gain in the circuit.

tone : This knob adjusts the cut-off frequency. Turning this knob clockwise will filter more higher frequencies out.

mode : This knob allows you to choose the clipping mode. Boost being no diodes engaged, OD sets 4 diodes in soft clipping and Dist puts 2 diodes in hard clipping configuration.

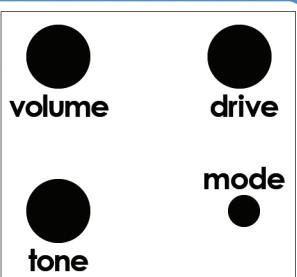

Internal controls

voice : This switch allows you to choose between two voicings. The top position is the default setting and will sound darker while the bottom position will be brighter and a bit gainier.

mid : This switch allows you to let more bass pass thru the first gain stage. The center position is the default setting, the top position will let more bass in and the bottom position even more

high: This switch allows you to filter out some highs at the second gain stage. The center position is the default settings, the top position being the lowest cut and the bottom the highest.

Specifications

Power supply : 9V DC center negative only.

Current draw : 40mA at full led brightness.



Blues Brkr

Controls Layout

volume : This knob adjusts the output volume of the effect.

drive : This knob adjusts the amount of gain in the circuit.

tone : This knob adjusts the cut-off frequency. Turning this knob clockwise will filter more higher frequencies out.

mode : This knob allows you to choose the clipping mode. Boost being no diodes engaged, OD sets 4 diodes in soft clipping and Dist puts 2 diodes in hard clipping configuration.



Internal controls

voice : This switch allows you to choose between two voicings. The top position is the default setting and will sound darker while the bottom position will be brighter and a bit gainier.

mid : This switch allows you to let more bass pass thru the first gain stage. The center position is the default setting, the top position will let more bass in and the bottom position even more

high: This switch allows you to filter out some highs at the second gain stage. The center position is the default settings, the top position being the lowest cut and the bottom the highest.

Specifications

Power supply : 9V DC center negative only.

Current draw : 40mA at full led brightness.



Blues Brkr


Controls Layout

volume : This knob adjusts the output volume of the effect.

drive : This knob adjusts the amount of gain in the circuit.

tone : This knob adjusts the cut-off frequency. Turning this knob clockwise will filter more higher frequencies out.

mode : This knob allows you to choose the clipping mode. Boost being no diodes engaged, OD sets 4 diodes in soft clipping and Dist puts 2 diodes in hard clipping configuration.

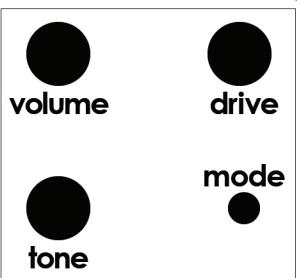

Internal controls

voice : This switch allows you to choose between two voicings. The top position is the default setting and will sound darker while the bottom position will be brighter and a bit gainier.

mid : This switch allows you to let more bass pass thru the first gain stage. The center position is the default setting, the top position will let more bass in and the bottom position even more

high: This switch allows you to filter out some highs at the second gain stage. The center position is the default settings, the top position being the lowest cut and the bottom the highest.

Specifications

Power supply : 9V DC center negative only.

Current draw : 40mA at full led brightness.



Blues Brkr

Controls Layout

volume : This knob adjusts the output volume of the effect.

drive : This knob adjusts the amount of gain in the circuit.

tone : This knob adjusts the cut-off frequency. Turning this knob clockwise will filter more higher frequencies out.

mode : This knob allows you to choose the clipping mode. Boost being no diodes engaged, OD sets 4 diodes in soft clipping and Dist puts 2 diodes in hard clipping configuration.



Internal controls

voice : This switch allows you to choose between two voicings. The top position is the default setting and will sound darker while the bottom position will be brighter and a bit gainier.

mid : This switch allows you to let more bass pass thru the first gain stage. The center position is the default setting, the top position will let more bass in and the bottom position even more

high: This switch allows you to filter out some highs at the second gain stage. The center position is the default settings, the top position being the lowest cut and the bottom the highest.

Specifications

Power supply : 9V DC center negative only.

Current draw : 40mA at full led brightness.

