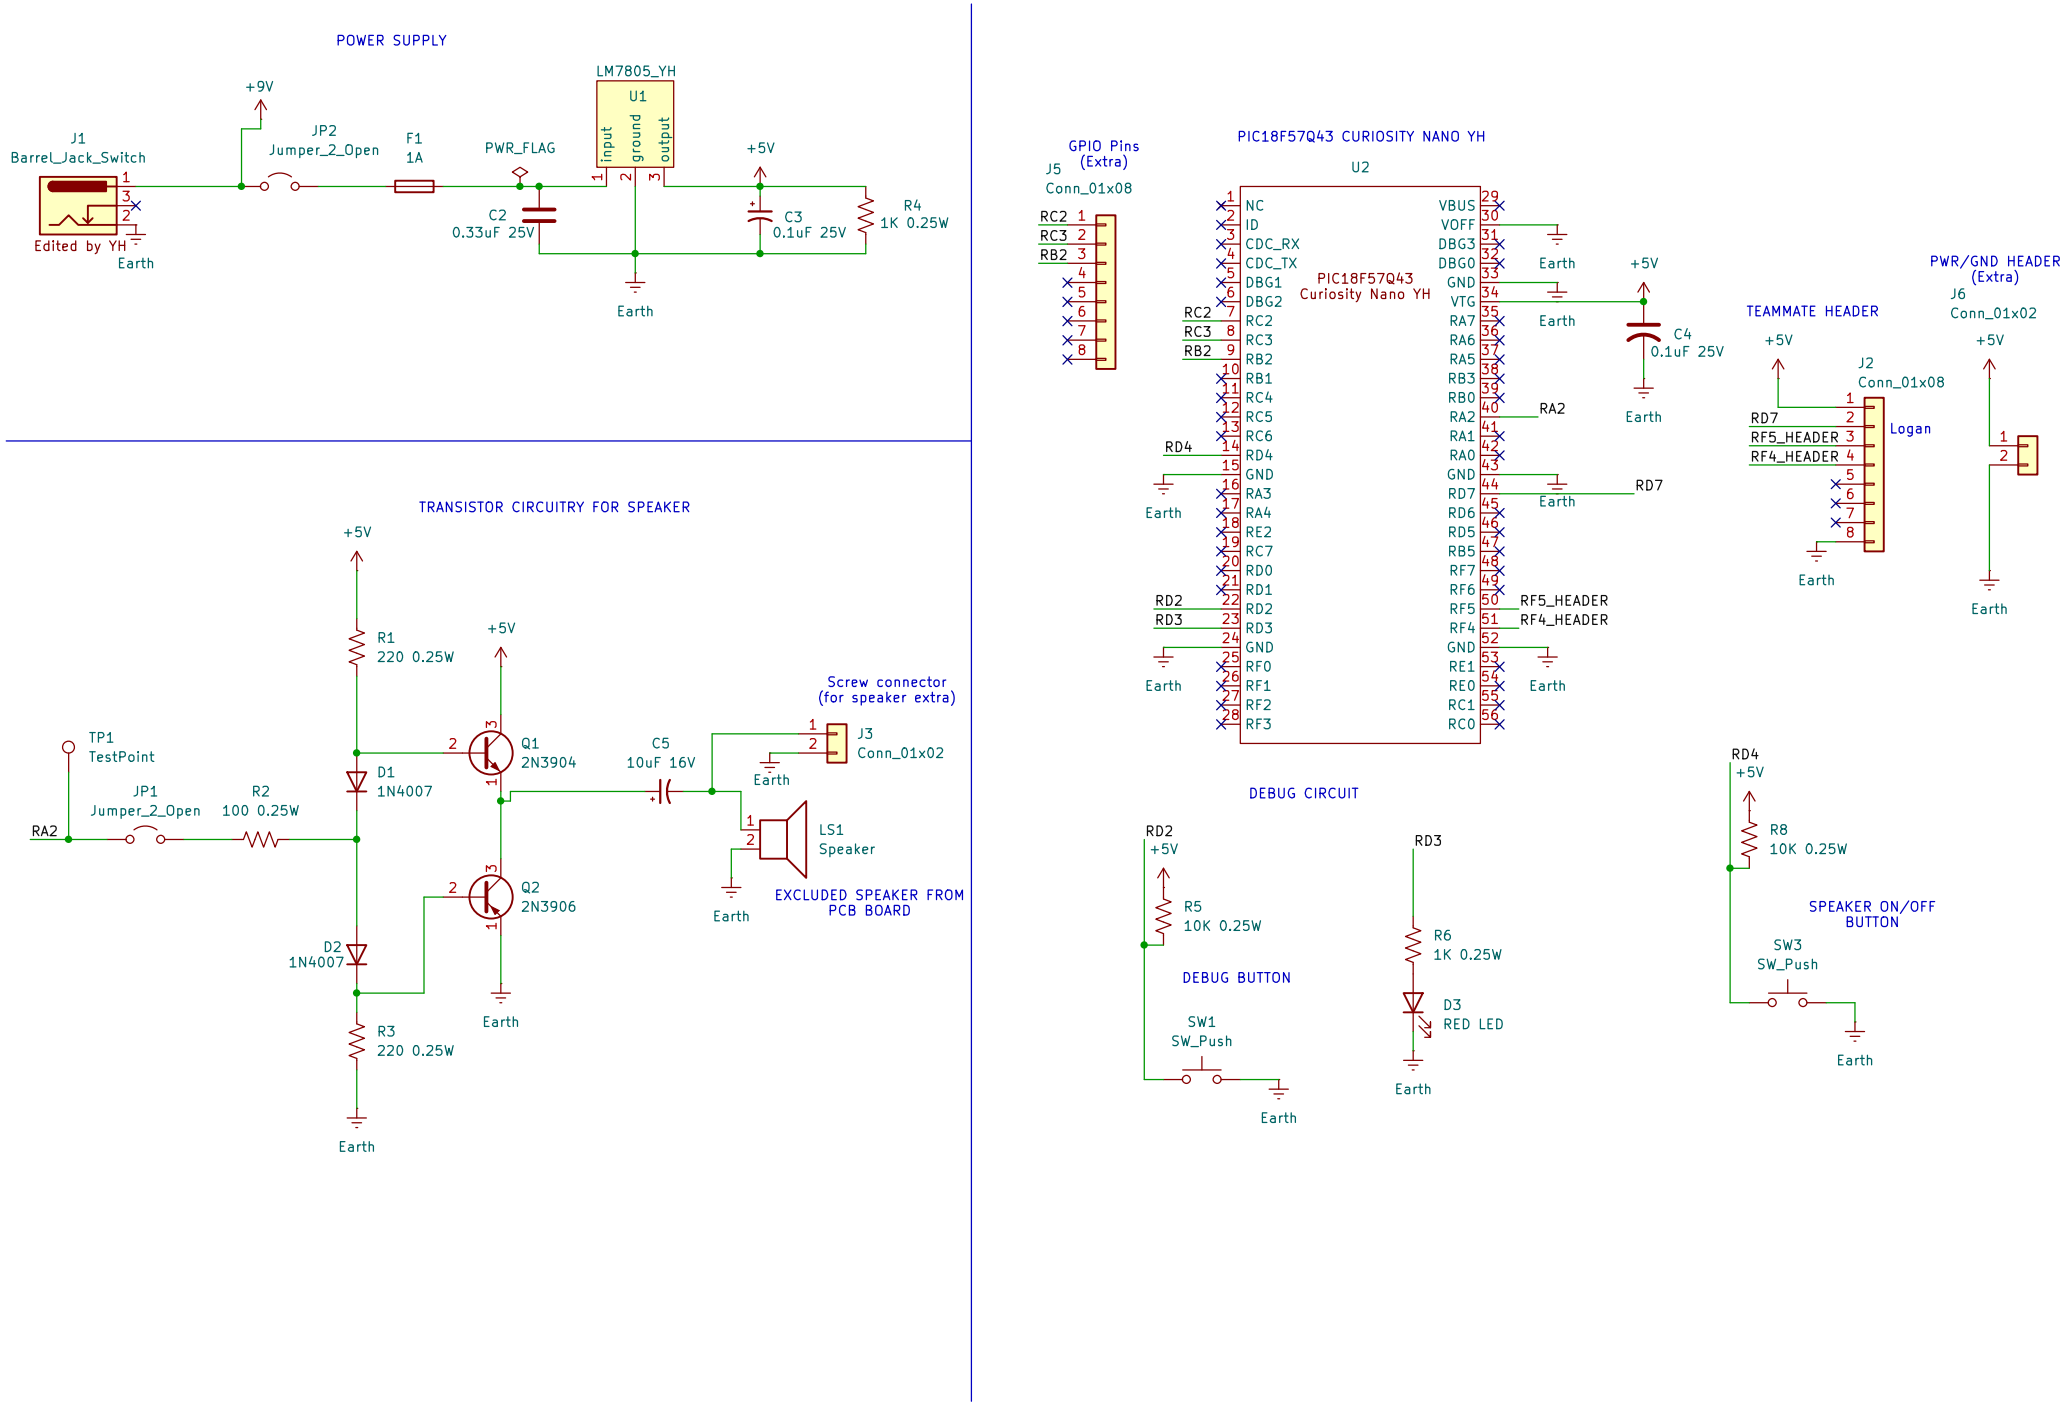
POWER SUPPLY
J1
Barrel_Jack_Switch
Edited by YH
Earth
+9V
JP2
Jumper_2_Open
F1
1A
PWR_FLAG
LM7805_YH
U1
input
ground
output
C2
0.33uF 25V
+5V
C3
0.1uF 25V
R4
1K 0.25W
Earth
TRANSISTOR CIRCUITRY FOR SPEAKER
+5V
R1
220 0.25W
TP1
TestPoint
JP1
Jumper_2_Open
R2
100 0.25W
RA2
D1
1N4007
Q1
2N3904
C5
10uF 16V
Screw connector
(for speaker extra)
J3
Conn_01x02
LS1
Speaker
EXCLUDED SPEAKER FROM
PCB BOARD
Q2
2N3906
D2
1N4007
R3
220 0.25W
Earth
GPIO Pins
(Extra)
J5
Conn_01x08
RC2
RC3
RB2
PIC18F57Q43 CURIOSITY NANO YH
U2
PIC18F57Q43
Curiosity Nano YH
NC
ID
CDC_RX
CDC_TX
DBG1
DBG2
RC2
RC3
RB2
RB1
RC4
RC5
RC6
RD4
GND
RA3
RA4
RE2
RC7
RD0
RD1
RD2
RD3
GND
RF0
RF1
RF2
RF3
VBUS
VOFF
DBG3
DBG0
GND
VTG
RA7
RA6
RA5
RB3
RB0
RA2
RA1
RA0
GND
RD7
RD6
RD5
RB5
RF7
RF6
RF5
RF4
GND
RE1
RE0
RC1
RC0
RA2
RD7
RF5_HEADER
RF4_HEADER
C4
0.1uF 25V
TEAMMATE HEADER
J2
Conn_01x08
Logan
RD7
RF5_HEADER
RF4_HEADER
PWR/GND HEADER
(Extra)
J6
Conn_01x02
DEBUG CIRCUIT
RD2
R5
10K 0.25W
DEBUG BUTTON
SW1
SW_Push
RD3
R6
1K 0.25W
D3
RED LED
RD4
R8
10K 0.25W
SPEAKER ON/OFF
BUTTON
SW3
SW_Push