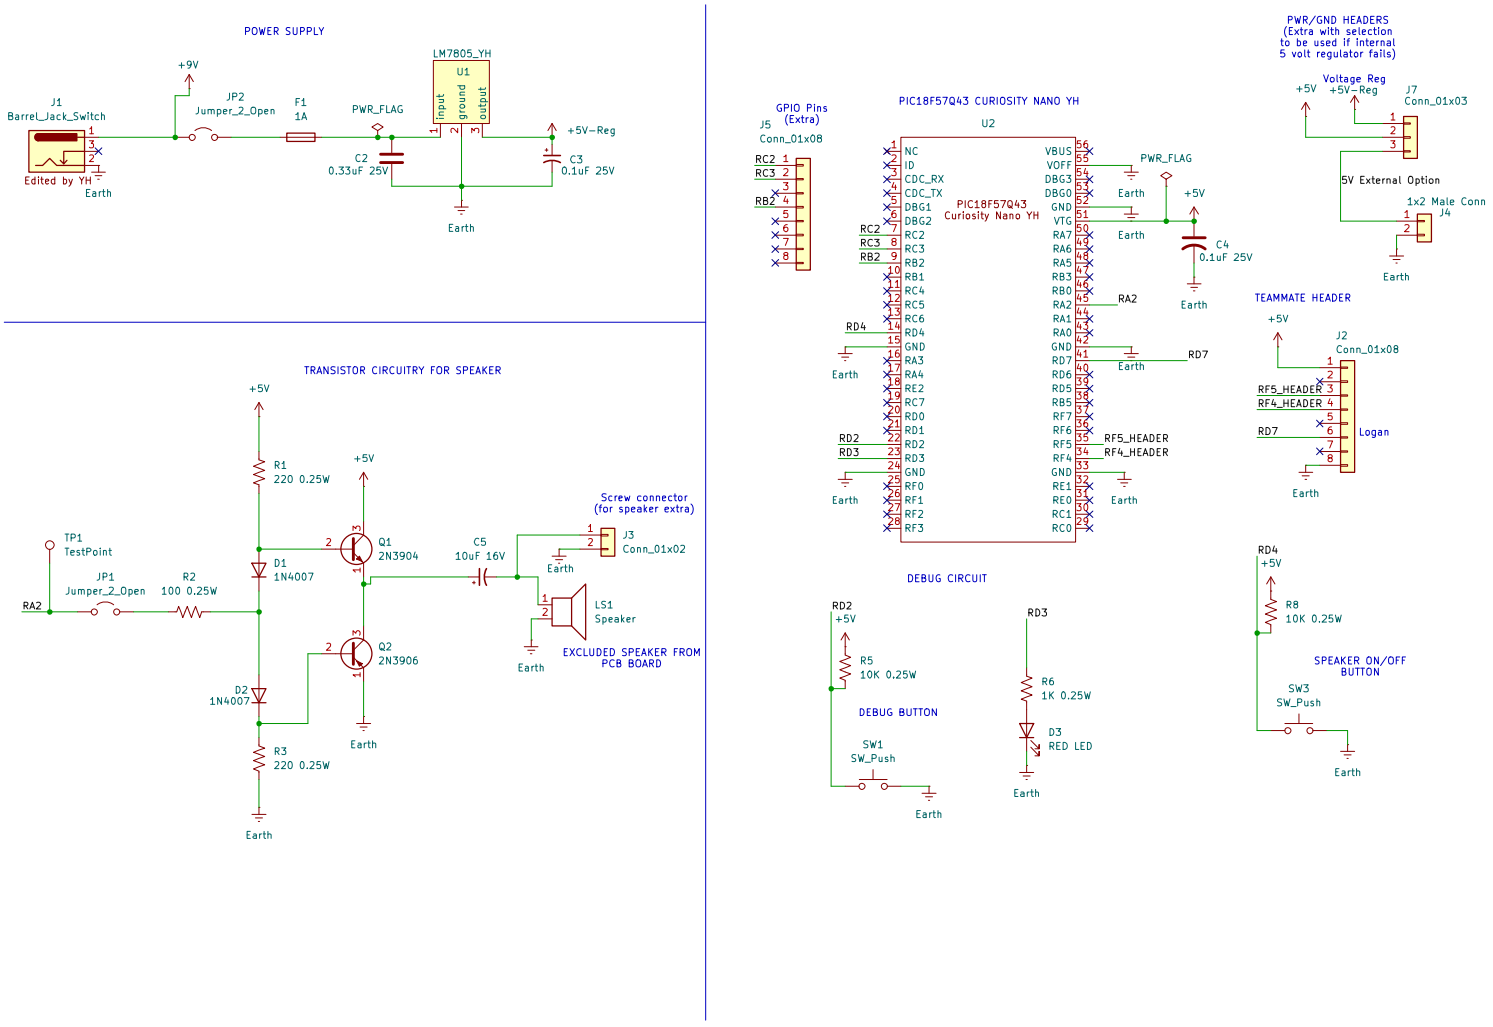
POWER SUPPLY
J1
Barrel_Jack_Switch
Edited by YH
Earth
+9V
JP2
Jumper_2_Open
F1
1A
PWR_FLAG
LM7805_YH
U1
input
ground
output
C2
0.33uF 25V
Earth
+5V-Reg
C3
0.1uF 25V
Earth
TRANSISTOR CIRCUITRY FOR SPEAKER
+5V
R1
220 0.25W
+5V
TP1
TestPoint
JP1
Jumper_2_Open
R2
100 0.25W
RA2
D1
1N4007
Q1
2N3904
C5
10uF 16V
Screw connector
(for speaker extra)
J3
Conn_01x02
Earth
LS1
Speaker
EXCLUDED SPEAKER FROM
PCB BOARD
Earth
Q2
2N3906
D2
1N4007
Earth
R3
220 0.25W
Earth
PIC18F57Q43 CURIOSITY NANO YH
U2
PIC18F57Q43
Curiosity Nano YH
GPIO Pins
(Extra)
J5
Conn_01x08
RC2
RC3
RB2
RD4
RD2
RD3
NC
ID
CDC_RX
CDC_TX
DBG1
DBG2
RC2
RC3
RB2
RB1
RC4
RC5
RC6
RD4
GND
RA3
RA4
RE2
RC7
RD0
RD1
RD2
RD3
GND
RF0
RF1
RF2
RF3
VBUS
VOFF
DBG3
DBG0
GND
VTG
RA7
RA6
RA5
RB3
RB0
RA2
RA1
RA0
GND
RD7
RD6
RD5
RB5
RF7
RF6
RF5
RF4
GND
RE1
RE0
RC1
RC0
PWR_FLAG
Earth
+5V
C4
0.1uF 25V
Earth
RA2
RD7
RF5_HEADER
RF4_HEADER
Earth
Earth
PWR/GND HEADERS
(Extra with selection
to be used if internal
5 volt regulator fails)
Voltage Reg
+5V
+5V-Reg
J7
Conn_01x03
5V External Option
1x2 Male Conn
J4
Earth
TEAMMATE HEADER
+5V
J2
Conn_01x08
RF5_HEADER
RF4_HEADER
RD7
Logan
Earth
DEBUG CIRCUIT
RD2
+5V
R5
10K 0.25W
DEBUG BUTTON
SW1
SW_Push
Earth
RD3
R6
1K 0.25W
D3
RED LED
Earth
RD4
+5V
R8
10K 0.25W
SPEAKER ON/OFF
BUTTON
SW3
SW_Push
Earth