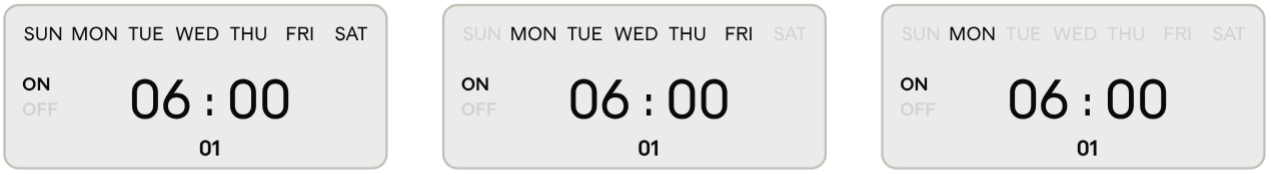
# Landlord notes

This tab is for the landlord only and is not part of the tenant guide. Everything in Hot water timer: how to use it applies; this tab adds how to confirm and change the program, and the checks to make before handing the guide over.

## Confirm the program

Press SET (short presses) until **01 ON** shows, compare the day names with the pictures below, then press and hold SET to exit without changing anything. The tenant guide has the same check in "Which program is it on?".

**At 01 ON, the lit day names show the program**




**Program 1: same every day**
All seven day names lit

**Program 2: weekdays, weekend**
MON to FRI lit, weekend later

**Program 3: each day**
One day lit, such as MON

Which day names are lit for each program

Tick the one it is on, so you can tell the tenant:

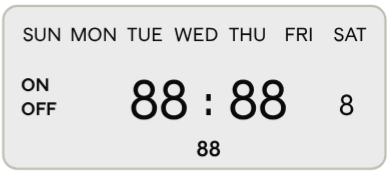
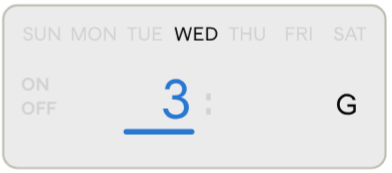
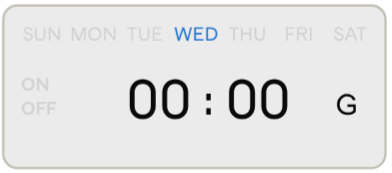
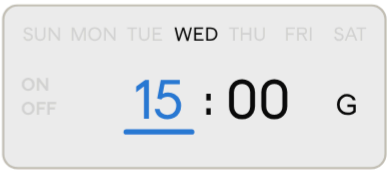
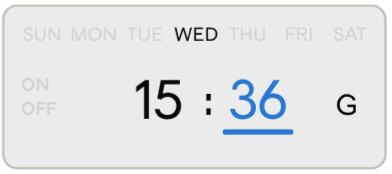
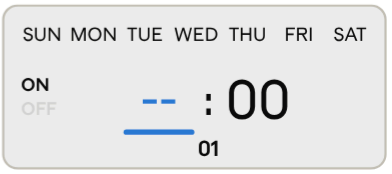
- [ ] Program 1, same times every day
- [ ] Program 2, weekdays and weekend
- [ ] Program 3, each day separately

## Change the program

The program can only be changed by resetting the timer, which wipes every setting, including the clock and all the on and off times. Use this to change the program, or when short presses of SET will not reach **01 ON**. Turn the power off and on at the fused switch; do not open the unit itself.

## Reset the timer and choose a program

Highlighted parts of the display are the ones flashing

| What to do | What the display should show |
|---|---|
| 1. Switch off the fused switch. Hold BOOST and switch it back on, still holding BOOST. Every part of the display flashes. |   |
| 2. Press SET. E or G shows on the right. Press − or + for E (summer time, BST) or G (winter time, GMT), then press SET. |   |
| 3. The program number shows. Press − or + until the one you want shows, then press SET.<br>1 = same times every day: all the day names flash together. |   |
| 2 = weekdays and weekend: MON to FRI, then SAT and SUN, flash in turn. |   |
| 3 = each day separately: the day names light one after another. |   |
| 4. The day flashes. Press − or + until today shows, then press SET. |   |
| 5. The hours flash. Set the current hour, then press SET. |   |
| 6. The minutes flash. Set them, then press SET. |   |
| 7. The display shows --:00 and 01 ON. Set the on and off times from step 2 of "I want to change the times" in the tenant guide. |   |

Resetting the timer and choosing a program

With program 2, set the weekday times first, then keep pressing SET past the unused weekday periods until SAT and SUN light up, and set the weekend times before holding SET to save. With program 3, each day is set in turn. The manual says OFF/ON skips to the next day and BOOST copies the previous day's times into the current one, which saves entering the same times seven times.

The manual also describes a button test straight after a reset, in which each button shows a number from 1 to 4. If a number appears after step 1 instead of **E** or **G**, press SET once more to start setting up.

## Check before handing over

- [ ] Short presses of SET from the normal display reach **01 ON** without a reset.
- [ ] Holding BOOST from the normal display moves the clock by one hour (summer/winter time).
- [ ] Confirm the program (above), tick it, and tell the tenant which one it is.