# Landlord notes

Sangamo PSS2 · Version 2026-10-14.04

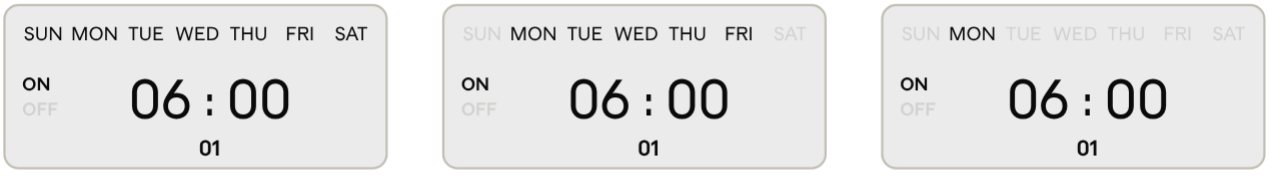
This tab is for the landlord only and is not part of the tenant guide. Everything in Hot water timer: how to use it applies; this tab adds how to confirm and change the program, and the checks to make before handing the guide over.

> Unofficial guide, put together from the manufacturer's manual and a demonstration video, with help from an AI tool. Check the manual if anything here does not match the unit.

## Confirm the program

Press SET (short presses) until **01 ON** shows, compare the day names with the pictures below, then press and hold SET to exit without changing anything. The tenant guide has the same check in "Which program is it on? Same every day, weekday/weekend or each day separately".

**At 01 ON, the lit day names show the program**




**Program 1: same every day**
All seven day names lit

**Program 2: weekdays, weekend**
MON to FRI lit, weekend later

**Program 3: each day**
One day lit, such as MON

Which day names are lit for each program

Tick the one it is on, so you can tell the tenant:

- [ ] Program 1, same times every day
- [ ] Program 2, weekdays and weekend
- [ ] Program 3, each day separately

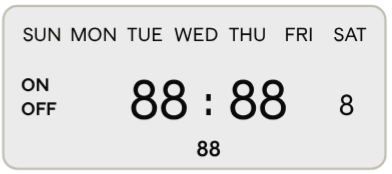
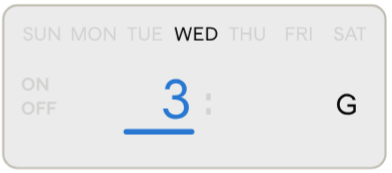
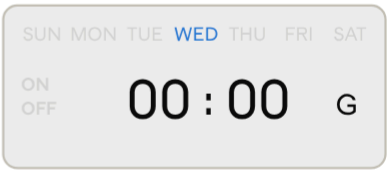
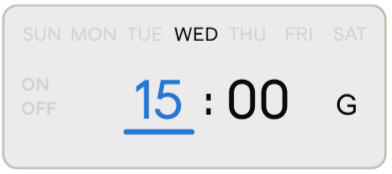
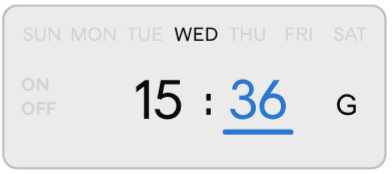
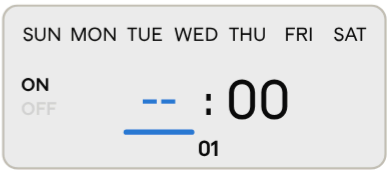
## Change the program

The program can only be changed by resetting the timer, which wipes every setting, including the clock and all the on and off times. Use this to change the program, or when short presses of SET will not reach **01 ON**. Turn the power off and on at the fused switch; do not open the unit itself.

The fused switch is out of the tenant's reach, so a tenant cannot reset the timer. Changing the program, or recovering a unit that will not reach **01 ON**, always needs a visit.

## Reset the timer and choose a program

Highlighted parts of the display are the ones flashing

| What to do | What the display should show |
|---|---|
| 1. Switch off the fused switch. Hold BOOST and switch it back on, still holding BOOST. Every part of the display flashes. |   |
| 2. Press SET. E or G shows on the right. Press − or + for E (summer time, BST) or G (winter time, GMT), then press SET. |   |
| 3. The program number shows. Press − or + until the one you want shows, then press SET.<br>1 = same times every day: all the day names flash together. |   |
| 2 = weekdays and weekend: MON to FRI, then SAT and SUN, flash in turn. |   |
| 3 = each day separately: the day names light one after another. |   |
| 4. The day flashes. Press − or + until today shows, then press SET. |   |
| 5. The hours flash. Set the current hour, then press SET. |   |
| 6. The minutes flash. Set them, then press SET. |   |
| 7. The display shows --:00 and 01 ON. Set the on and off times from step 2 of "I want to change the on/off times" in the tenant guide. |   |

Resetting the timer and choosing a program

With program 2, set the weekday times first, then keep pressing SET past the unused weekday periods until SAT and SUN light up, and set the weekend times before holding SET to save. With program 3, each day is set in turn. The manual says OFF/ON skips to the next day and BOOST copies the previous day's times into the current one, which saves entering the same times seven times.

The manual also describes a button test straight after a reset, in which each button shows a number from 1 to 4. If a number appears after step 1 instead of **E** or **G**, press SET once more to start setting up.

## No hot water, but the timer looks normal

The immersion heater's thermostat (TS220) has a manual reset button. It is a safety cut-out that trips if the water overheats, and once tripped the element stays off until the button is pressed, so the timer and BOOST appear to work but the water stays cold. With the power isolated, remove the immersion cover, press RESET, and refit the cover before restoring power. If it trips again, have the thermostat and element checked. The thermostat dial is usually best at around 60°C.

## Check before handing over

- [ ] Short presses of SET from the normal display reach **01 ON** without a reset.
- [ ] Holding BOOST from the normal display moves the clock by one hour (summer/winter time).
- [ ] Confirm the program (above), tick it, and tell the tenant which one it is.