Visual Fish Feeder-Frequently asked questions

questions	Issues description	Reason analysis and answer
There is no beep sound during network reset	 Long press the network reset button for 8 seconds, no beep sound heard, network reset failed	**cause:** Due to the 10 second startup time required for the device, pressing the reset button directly without starting the device will cause the reset to fail. **Solution:** After connecting to the power supply, please wait for about 10 seconds and then press and hold the network reset button for 8 seconds until you hear a "beep" sound, which is considered a successful network reset.
WiFi/APP cannot connect	 1. The "Found Device" dialog box did not pop up	**cause:** **1.** The power input is plugged in incorrectly. (Please plug in the left type C io according to the user manual) **2.** The Bluetooth signal is not turned on. **3.** Network not reset or network reset failed. **Solution:** **1.** Please plug in the left type C io according to the user manual. **2.** Ensure that the phone has enabled WIFI and Bluetooth signals. **3.**Before connecting to the app, please reset the network by long pressing the network reset button for 8 seconds until you hear a "beep" sound. (After connecting to the power supply, please wait for 10 seconds before pressing the "reset" button)
	 2. The interface is always in a loop state	**cause:** **1.** The phone or device is not connected to the 2.4G WiFi signal. **2.** The internet speed is too slow. **Solution:** **1.** Place the device within 2 meters of the router. **2.** Connect your phone and device to a 2.4G WiFi signal.
	 3. The interface is always in the loading state	**cause:** The network speed is too slow or the device is too far from the router. **Solution:** Place the device within 2 meters of the router and reconnect it.
WiFi/APP network disconnection	 APP disconnected and unable to reconnect	**cause:** **1.** The device requires a 5V2A power supply. If you use 5V1A power supply, the 1A current will not be able to drive the chip to work properly, resulting in network disconnection. **2.** A slow internet speed can also lead to network disconnection. **Solution:** **1.** Please use a 5V2A adapter for power supply. **2.** Please check if the network speed is too slow. If the network speed is below 80KB/S, it may cause network disconnection and inability to reconnect.
Fish food blockage	 No food comes out after feeding	**cause:** **1.**Incorrect installation of the fish food container. **2.** If fish food is prohibited on the user manual, it may also cause blockage. **3.** Feeding fish food with a diameter > 2mm when using the small dispense impeller may also cause blockage. **Solution:** **1.** Please check if the fish food container is installed correctly (The aiming arrow label needs to be aligned). **2.** Please carefully read the instructions and strictly follow the instructions to use the suitable fish food for feeding. **3.**When using small dispense impeller, be sure to use fish feed with a diameter < 2mm.
Food shortage false alarm	 There is fish food in the fish food container, but the APP continues to issue notifications of "Starved Feeding"	**cause:** **1.**Some fish food may splash and block the food monitoring sensor, causing a decrease in sensor efficiency and false alarms. **2.** When fish food is stuck in the dispense impeller and cannot be dispensed, it can also cause false alarms. **Solution:** **1.** Check if the small hole of the food monitoring sensor is blocked by fish food, and clean it with a small brush. **2.** Please carefully read the instructions and feed the fish food strictly according to the instructions.
The fish food container cannot be installed	 The fish food container cannot be installed with the host	**cause:** 1.If the red(white) dot on the shaft is not aligned with the straight line of the fish food outlet, it may cause the motor shaft to not be aligned and unable to be inserted. 2.If the aiming arrow label is not aligned, the fish food container will not fit in. 3.If the motor shaft is not in its initial position, it may also cause the shaft to be unable to be inserted. **Solution:** Ensure that the red(white) dot on the shaft is aligned with the straight line of the fish food outlet. Press and hold the 2 locking buttons to install it. If the locking buttons do not rebound, gently move them with your hand to make them rebound.
APP-Video lag	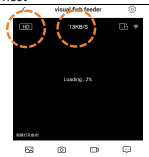 The video image does not move or often lags	**cause:** Slow network speed or devices too far from the router, with network speeds below 80KB/S, may cause video lag. **Solution:** **1.** Ensure that the device is close to the router. **2.** Ensure that the network speed is above 80KB/S. If the network speed is low, please adjust the video clarity from "HD" to "SD".
How to change the position of the camera	 Use a gift pry to pry the camera	This product uses nano glue, which can be reused 10-20 times or washed with water and dried for use. If the adhesion is too strong, please use the pry to help remove it
How to remove the small dispense impeller	 Use gift rivets to hook out the small dispense impeller	Insert the gift rivet into the hole of the small dispense impeller and hook it out.
How to use the standby power io	 The left type C io is connected to a 5V2A power supply, and the right type C io is connected to a power bank	The standby power io is used for those who need to be away from home for a long time and are worried about sudden power outages at home that may prevent normal feeding. **Usage:** The left type C io is connected to a 5V2A power supply, and the right type C io is connected to a power bank (with self starting function). If there is a sudden power outage at home, the device system will automatically switch to the power bank power supply mode.