INSTRUCTION MANUAL
FOR
MOTORISED CABLE REEL TYPE
T5.1.NCC(2X5kW).4 VM922-38G
KV26/4S/FC/R + BD5000N

ZERTIFIKAT ◆ CERTIFICATE ◆ 認証書 ◆ СЕРТИФИКАТ ◆ CERTIFICADO ◆ CERTIFICAT

TÜV SÜD
Italia

CERTIFICATO

Nr 50 100 1352 - Rev. 04

Si attesta che / *This is to certify that*

IL SISTEMA QUALITÀ DI
THE QUALITY SYSTEM OF

CAVOTEC
Connecting mobile equipment

CAVOTEC SPECIMAS S.p.A.

SEDE LEGALE E OPERATIVA PRINCIPALE:
VIA GALVANI 1
I-20054 NOVA MILANESE (MI)

SEDI OPERATIVE SECONDARIE:
VIA GALVANI 6/8/10
I-20054 NOVA MILANESE (MI)

VIA E. FERMI 13
I-20054 NOVA MILANESE (MI)

È CONFORME AI REQUISITI DELLA NORMA
HAS BEEN FOUND TO COMPLY WITH THE REQUIREMENTS OF

UNI EN ISO 9001:2008

Riferirsi al manuale della qualità per eventuali dettagli delle esclusioni ai requisiti della norma ISO 9001:2008
Refer to quality manual for possible details of exclusions of requirements of the norm ISO 9001:2008

Questo certificato è valido per il seguente campo di applicazione
This certificate is valid for the following product or service range

Progettazione fabbricazione ed assistenza di avvolgicavi e avvolgitubi, panzerbelt, collettori rotanti, giunti idraulici. Fabbricazione di sistemi automatici di ancoraggio navi. Commercializzazione di accessori per impianti di movimentazione (EA 18, 14, 29a)

Design, manufacture and service of cable reels and hose reels, panzer belt, electrical sliprings and hydraulic swivels. Manufacturing of automated mooring systems. Trade of accessories for moving systems (EA 18, 14, 29a)

ACCREDIA
L'ENTE ITALIANO DI ACCREDITAMENTO

SGQ N° 049A SSI N° 005G PRD N° 081B
SGA N° 018D ITX N° 001L ISP N° 057E
SCR N° 009F

Membro degli Accordi di Mutuo Riconoscimento EA, IAF e ILAC
Signatory of EA, IAF and ILAC Mutual Recognition Agreements

Per l'Organismo di Certificazione
For the Certification Body
TÜV Italia S.r.l.

Andrea Vivi
Amministratore Delegato - *CEO*

Data di emissione / *Issue date*
2010-09-03

Data di scadenza / *Expiry date*
2013-08-05

Rinnovo del certificato emesso per la prima volta in data 2001-10-25

"La validità del presente certificato è subordinata a sorveglianza periodica a 12 mesi e al riesame completo del sistema di gestione aziendale con periodicità triennale"

"The validity of the present certificate depends on the annual surveillance every 12 months and on the complete review of company's management system after three-years"

DISCLAIMER

This Instruction Manual is intended as a guide to the installation, usage and maintenance of the specified Cavotec equipment.

Cavotec Specimas SpA does not accept liability for any loss or damage suffered as a result of using this manual.

Prior to installing, operating or maintaining the equipment, read the GENERAL WARNINGS AND SAFETY GUIDELINES located on the following page.

If in doubt, always refer to the original equipment manufacturer.

The equipment warranty will be voided if the technical guidelines for the installation, usage and maintenance have not been correctly followed.

Only suitably qualified maintenance personnel who have read and understood every part of this document are authorised to maintain the specified equipment.

The information contained within this document is subject to change at any time without notice.

VERSION HISTORY

Rev.	Revised by:	Approved by:	Revision Date	Comments
A	E. Rossetto	P. Rosenwald	29.10.12	Primary issue

GENERAL WARNINGS AND SAFETY GUIDELINES





Reel operation is remotely controlled by the machine on which it is installed. Drum rotation can therefore occur at any time, so it is important to keep well clear during machine operation.

If it is necessary to be near the reel during operation (eg. while commissioning), be aware of the location of the nearest emergency stop button and exercise caution.

Prior to performing maintenance on the reel, ensure that the machine long travel and reel motor are isolated by an authorised person.

If work is to be done inside the collector enclosure, the drive centre or the motor terminal blocks, ensure that all relevant circuits are isolated by an authorised person prior to removing any covers.

Warning labels on the collector enclosure are there to remind personnel of the danger.

Prior to touching any electrical connection, confirm with an appropriate meter that there is no power. Failure to do so may lead to serious injury or death.

Note that any heaters or travel limit switches in the collector enclosure may still have tension on the terminals even if the main power is switched off.

Only suitably qualified maintenance personnel who have read and understood every part of this document are authorised to maintain the specified equipment.

STORAGE INSTRUCTIONS

For correct storage of Cavotec cable reels, maintain the goods in the original packing in a closed warehouse, protected from the rain and in an ambient that prevents the formation of condensation.

CONTENTS

SECTION 1 – SPECIFICATIONS 1
SECTION 2 – CABLE REELING SYSTEM OVERVIEW 4
2.1 DRUM 4
2.2 TORQUE UNIT 5
2.3 MOTOR 5
2.4 BRAKE 5
2.5 ENCODER 5
2.6 COLLECTOR 5
2.7 ROTARY LIMIT SWITCH 6
2.8 BOLLARD DAMPER 6
2.9 DRIVE NCC 6
SECTION 3 - DRIVE MODULE 7
3.1 DELIVERY 7
3.2 INSTALLATION 7
3.3 ELECTRICAL INSTALLATION 7
SECTION 4 – DRUM 8
4.1 DELIVERY 8
4.2 REQUIRED TOOLS & ACCESSORIES 8
4.3 DRUM INSTALLATION 8
4.4 SPACING ADJUSTMENT 9
4.5 PERIODIC MAINTENANCE 10
SECTION 5 - CABLE 11
5.1 CABLE PREPARATION 11
5.2 CABLE INSTALLATION 12
5.3 PERIODIC MAINTENANCE 13
SECTION 6 – COLLECTOR 14
6.1 REELING CABLE CONNECTION 14
6.2 FIXED CABLE CONNECTION 14
6.3 ANTI-CONDENSATION HEATER 14
6.4 FINAL CHECKS 14
6.5 PERIODIC MAINTENANCE 14
SECTION 7 - STROMAG ROTARY LIMIT SWITCH 16
7.1 GENERAL 16
7.2 ELECTRICAL CONNECTION 16
7.3 SETTING 17
7.4 PERIODIC MAINTENANCE 18
SECTION 8 - TORQUE UNIT 19
8.1 GENERAL 19
8.2 PERIODIC MAINTENANCE 19
SECTION 9 - MOTOR 20
9.1 ELECTRICAL CONNECTION 20
9.2 PERIODIC MAINTENANCE 20
SECTION 10 - BRAKE 21
10.1 GENERAL 21
10.2 MANUAL RELEASE 21
10.3 BRAKE ADJUSTMENT 21
SECTION 11 – BOLLARD DAMPER 23
11.1 DESCRIPTION 23

11.2 INSTALLATION 23
11.3 PERIODIC MAINTENANCE 23
SECTION 12 – DRIVE 24
12.1 DELIVERY 24
12.2 INSTALLATION 24
12.3 INTERFACE AND SIGNALS 24
SECTION 13 - RECOMMENDED SPARES 25
SECTION 14 - MECHANICAL DOCUMENTATION 26
SECTION 15 - ELECTRICAL DOCUMENTATION 27

SECTION 1 – SPECIFICATIONS

Client	ZPMC	
Project	Sri Lanka	
Works Order	121216	
Reel Type	T5.1.NCC.(2X5kW).4 VM922-38G KV26/4S/FC/R BD5000N	
Delivery	Drive module	Type T5.1.NCC.(2X5kW).4 ..... KV26/4S/FC/R Fixing with 4 off M20 Weight 236kg
	Drum	Type VM922-38G Vertical Monospiral Weight 244kg
	Damper	Type 2 springs 5000N Weight 150kg
	Drive Panel	Type: Electrical panel for Vacon drive Weight 65kg
	Braking resistor	Type: 20 Ohm, 2kW, + Rain cover in AISI 316 Weight 22kg
Drawings	Installation	SC-121216-IS2
	Installation J.box	SC-120121-JB2
	Installation damper	STD-AD-009
	Local control box	STD-BE-004
	Braking resistor	STD-BE-001
	Schematic reel	SC-121216-SE2
Cable	Manufacturer	Tratos
	Type	Tratosmart
	Voltage rating	0.6/1 kV
	Composition	30x2.5
	Dimensions	ϕ34.2mm, 1.60kg/m
	Allowable tension	1125N
Duty	Reeling length	63m
	Dead turns	3
	Speed	180m/min
	Acceleration	0.50m/s^2
	Duty cycle	100% ED
	Ambient temp.	0°C to + 50°C
Drum	Manufacturer	Cavotec Specimas SpA
	Type	Vertical Monospiral
	Model	VM922-38G with front box
	Inner diameter	900mm
	Outer diameter	2200mm
	Width	38mm
	Construction	Full-wheel
	Main spokes	12 off 60x40x3 per side
	Material	Mild steel
	Treatment	Stainless steel
	Fasteners	AISI 304
	Weight	244kg
Torque Unit	Manufacturer	Cavotec Specimas SpA
	Type	3-stage bevel-planetary spur gearbox
	Model	T5.0
	Ratio	1:21,2
	Main shaft ID	63.5mm
	Overhung load	1500kg

	Lubricant	Shell Spirax ASX 75W 90	
	Quantity	5 litres	
	Finish	Painted RAL 1004 (Yellow)	
	Weight	195kg	
Pre-reducer	Manufacturer	Cavotec Specimas SpA	
	Type	1-stage spur	
	Model	T5.1	
	Ratio	1:1.5	
	Lubricant	Roloil Tixoplex-MS synthetic grease	
	Quantity	0.5kg	
	Finish	Painted RAL 1004 (Yellow)	
	Weight	14.5kg	
Motor 1	Manufacturer	Cavotec Specimas SpA	
	Type	Totally enclosed, fan cooled (TEFC) 4 pole motor with heater, Klixon, brake & encoder	
	Model	V112ML4	
	Power	5.5kW, 380V, 50Hz	
	Insulation	Class F	
	Nominal speed	1400 rpm	
	Nominal current	11.7A @ 380V	
	Protection rating	IP65	
	Encoder	Type	Heidenhain ERN 430
		Resolution	1024 ppr
		Output	HTL half-wave
		Protection	IP67
		Supply	10-30VDC, 150mA
	Brake	Type	Intorq type BFK.458.14
		Coil voltage	205VDC
		Rectifier	4-pole full-wave type BEG-142-270
		Supply voltage	230VAC
		Torque range	25-80Nm
		Setting torque	32.7Nm
		Options	Release lever
	Over-temperature	Klixon 140°C trip, Thermik S01	
	Heater	220V, 25W	
	Weight	43kg	
Motor 2	Manufacturer	Cavotec Specimas SpA	
	Type	Totally enclosed, fan cooled (TEFC) 4 pole motor with heater and Klixon	
	Model	V112ML4	
	Power	5.5kW, 380V, 50Hz	
	Insulation	Class F, tropicalised	
	Nominal speed	1400 rpm	
	Nominal current	11.7A @ 380V	
	Protection rating	IP65	
	Heater	220V, 25W	
	Over-temperature	Klixon 140°C trip, Thermik S01	
	Finish	Painted RAL 5009 (Azure blue)	
	Weight	38kg	
Drive	Manufacturer	Vacon	
	Type	NXP 15.0 kW +filter 380-500 VAC, IP21	
	Model	NXP0031 5 A2 H1SSV A1A2	
	Accessories	Encoder board for type HTL encoder code NCOPTA5-V + Profibus DP board with DSUB connector code NXOPTC5	
	Note	Refer to document in SECTION 14	

Drive Panel	Manufacturer	Cavotec Specimas SpA
	Type	600x800x300, AISI 304, door RH
	Model	AS-518
	Protection rating	IP54
	Finish	Painted RAL 7035 (Light grey)
	Weight	50kg
Braking resistor	Manufacturer	Cavotec Specimas SpA
	Model	AS-521
	Type:	20 Ohm, 2kW + Rain cover in AISI 316
	Weight	22kg
Collector	Manufacturer	Cavotec Specimas SpA
	Type	Copper-graphite brushes on brass rings
	Model	KV26/4S/R with cable tails
	Power	26 off 30A nominal Ø130 standard rings with 1 off KP2 brush per ring, 15A current rating @ 100% ED
	Control	4 off 30A nominal Ø130 silvered rings with 2 off KP2 brush per ring, 15A current rating @ 100% ED
	Fixtures 30A	Ring side – Pre-terminated to 2.5mm^2 screw terminal Brush side - Push-on terminal 6.35x0.8
	30A silvered	Ring side – Pre-terminated to 1.5mm^2 screw terminal Brush side - Push-on terminal 6.35x0.8
	Insulator type	Makralon disk
	Insulation distance	20mm
	Highest voltage U_m	500V
	Housing material	AISI 304
	Protection	IP55
	Heater	Watlow 25W, 220-240V, self-regulating
	Weight	23.5kg
Junction box	Manufacturer	Cavotec Specimas SpA
	Type	Junction box mounted on collector housing With Pilot light red for heater on Pre-wired: motors, limit switch, heaters
Limit Switch	Manufacturer	Stromag AG
	Type	29 turn geared rotary limit switch with 1+4 switches
	Model	29MB 192/492
	Contacts	4 x silver, changeover
	AC-15 contact rating	1.5A, 230VAC in accordance with IEC 60947-5-1
	DC-13 contact rating	0.5A, 60VDC in accordance with IEC 60947-5-1
	Thermal current	10A
	Insulation voltage	250V
	Switch life	1x10^7 operations
	Connections	Screw-type terminals with self-lifting pads
	Gear ratio	1:30.35
	Protection rating	IP20
	Driven by	Toothed belt from slipring assembly
	Other	Pre-wired to junction bo
Damper	Manufacturer	Cavotec Specimas SpA
	Type	Double springs
	Model	Bollard Damper 5000N
	Part number	AS-615
	Material	Mild steel
	Treatment	Hot-dip galvanised
	Weight	150kg

SECTION 2 – CABLE REELING SYSTEM OVERVIEW

Large mobile machines such as cranes, stackers and ship loaders rely on an external electrical power source to operate. In many cases, these machines also require analogue and/or digital data conduits for control and feedback. This power and data is typically transmitted through a composite flexible cable comprising of copper conductors for power and hard wire control circuits, and optical fibres for digital data. Since these machines can travel over relatively long distances, this cable needs to be quite long, and a means of handling the cable in a controlled manner is required. A Cable Reeling System typically carries out this function.

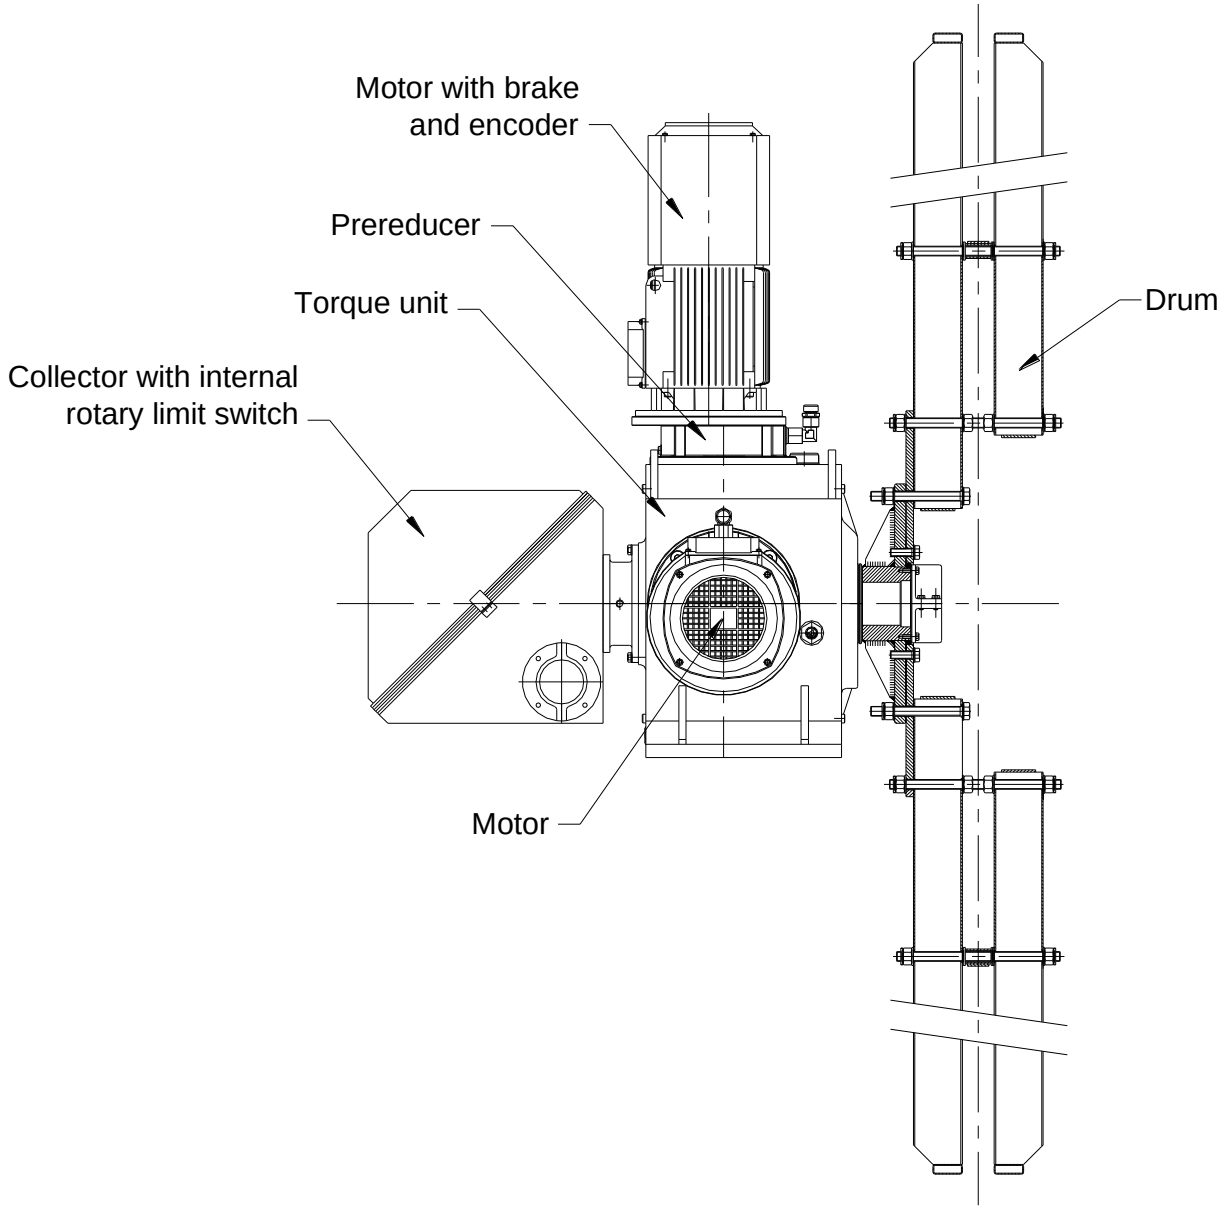


Figure 1 – Typical cable reeling system

2.1 DRUM

2.1.1 A drum stores cable by rotating in the appropriate direction as the machine travels towards the feedpoint. The internal diameter of the drum is selected to meet the minimum bend radius requirements of the cable and to ensure an optimal relationship between reeling torque and cable tension. The external diameter of the drum is selected to ensure that the full cable length can be accommodated. The compartment width of the drum depends on the cable diameter and the type of lay selected (eg. monospiral, 3-2-3, random).

2.1.2 Drums are typically fabricated from mild steel RHS, and can be painted or hot-dip galvanised. The drum sides can be either fully welded (for smaller drums) or composite designs. All fasteners are stainless steel.

2.2 TORQUE UNIT

2.2.1 A torque unit is typically a specially designed reduction gearbox with a large bore main shaft through which the cable can be fed, and a high overhung load capacity. The torque output of this unit is regulated by mechanical or electrical means. An example of a mechanical torque regulator is the Hydrodynamic oil immersed friction drive. Electrical torque regulators include torque motors, permanent magnet clutches and flux vector controlled AC motors.

2.2.2 The optimum torque output of a torque unit is just sufficient to recover and pay out cable in all modes of operation without placing undesirable stress into the typically fragile conductors. The speed output of the torque unit can vary greatly in relation to the machine speed because of the changing winding diameter, and the differences are generally taken up by mechanical or electrical slippage.

2.3 MOTOR

2.3.1 Motors are typically Totally Enclosed Fan Cooled (TEFC) type, are fitted with sealed for life bearings, and have IP65 protection ratings. When used with flux vector drives, the motors are oversized to preclude the need for forced cooling.

2.3.2 Cavotec motors are supplied with class F insulation. Optional Klixon switches or thermistors are embedded in the windings to provide a means of protecting the motor from over-temperature conditions.

2.4 BRAKE

2.4.1 The brake prevents the reeler from unwinding cable when the power supply to the reeler motor is turned off.

2.4.2 Cavotec brake motors are equipped with failsafe electromagnetic brakes utilising asbestos free brake pads. These brake pads have a high resistance to wear and operate reliably at high temperatures.

2.4.3 The electromagnet is driven by direct current, and is characterised by a very simply design, low hum level and no vibrations. Due to direct current use, the current intensity is very low.

2.4.4 The electromagnetic coil is designed to be continuously activated. A special compound surrounds the coil in the electromagnetic housing and makes the coil humidity and vibration proof.

2.4.5 The rectifier is housed in the motor terminal box, and it is specifically designed for electromagnetic brakes. It is compact, high temperature resistant and unaffected by voltage variations.

2.5 ENCODER

2.5.1 Flux vector controlled AC drives require speed and rotation direction feedback from the motor in order to accurately control the motor's torque output. A dual phase incremental encoder attached to the end of the motor shaft carries out this function.

2.6 COLLECTOR

2.6.1 The collector facilitates the transmission of power and data between the rotating reeling cable and the fixed machine cables.

2.6.2 The collector consists of a number of rotating brass sliprings (typically 4 for power applications) against which a number of fixed copper-graphite brush tips rub. Insulators and air separate each phase.

2.6.3 The collector may also include a fibre optic rotary joint used to transmit optical data across the rotating interface.

2.6.4 Collectors are typically housed in stainless steel enclosures with anti-condensation heaters.

2.7 ROTARY LIMIT SWITCH

2.7.1 A geared rotary limit switch for reel full and reel empty detection is typically supplied with the collector, mounted either internally or externally of the collector enclosure.

2.7.2 The rotary limit switch can be fitted with a potentiometer or rotary transducer to give a precise indication of the amount of cable on the drum at any time.

2.8 BOLLARD DAMPER

2.8.1 The damper function is to absorb small variations in cable tension experienced during operation.

2.9 DRIVE NCC

2.9.1 The reeler control centre houses the flux vector controlled AC drive and the various other electrical components required to control the reeler motors.

2.9.2 During normal operation, the flux vector drive operates in torque control mode. Torque output is adjustable via potentiometers.

2.9.3 It is possible to operate the reeler manually in speed control mode in order to perform maintenance tasks. A selector switch and two push buttons mounted on the enclosure door facilitate this.

SECTION 3 - DRIVE MODULE

3.1 DELIVERY

3.1.1 The torque unit, base frame (if supplied), collector, prereducer/s (if supplied) and motor/s are supplied pre-assembled as a completed drive module. Check that this module has arrived in good condition.

3.1.2 Note any special instructions in the *Delivery* subsection of SECTION 1.

3.2 INSTALLATION

3.2.1 Check that the structure onto which the drive module is to be mounted is flat and free from distortion.

3.2.2 Lift the drive module using the lifting points provided. The total weight of the module is indicated in the *Delivery* subsection of SECTION 1.

3.2.3 Bolt the drive module to the mounting structure using high tensile bolts of appropriate length with the dimensions indicated in the *Delivery* subsection of SECTION 1, ensuring that it is level by using a spirit level. Ensure that the face of the drum mounting flange is parallel to the direction of machine travel. Use shims or packing pieces as necessary and bolt down securely.

3.3 ELECTRICAL INSTALLATION

3.3.1 Referring to the electrical schematics located in SECTION 15, run, gland and terminate appropriate cables between the reeler control centre and the various components supplied.

3.3.2 Run, gland and terminate an appropriate cable/s between the collector brushgear and the machine's power/control inlet.

SECTION 4 – DRUM

4.1 DELIVERY

4.1.1 Check that the following separate items have arrived and are in good condition:

- 1 off pre-assembled drum

4.1.2 Note any special instructions in the *Delivery* subsection of SECTION 1.

4.2 REQUIRED TOOLS & ACCESSORIES

4.2.1 The following tools and accessories will be required to carry out the drum assembly:

- 2 off 19mm open ended spanners
- 2 off 22mm open ended spanners
- 500kg lifting sling, 5m long

4.3 DRUM INSTALLATION

4.3.1 Carefully lift the drum using a crane and sling as shown in Figure 2.

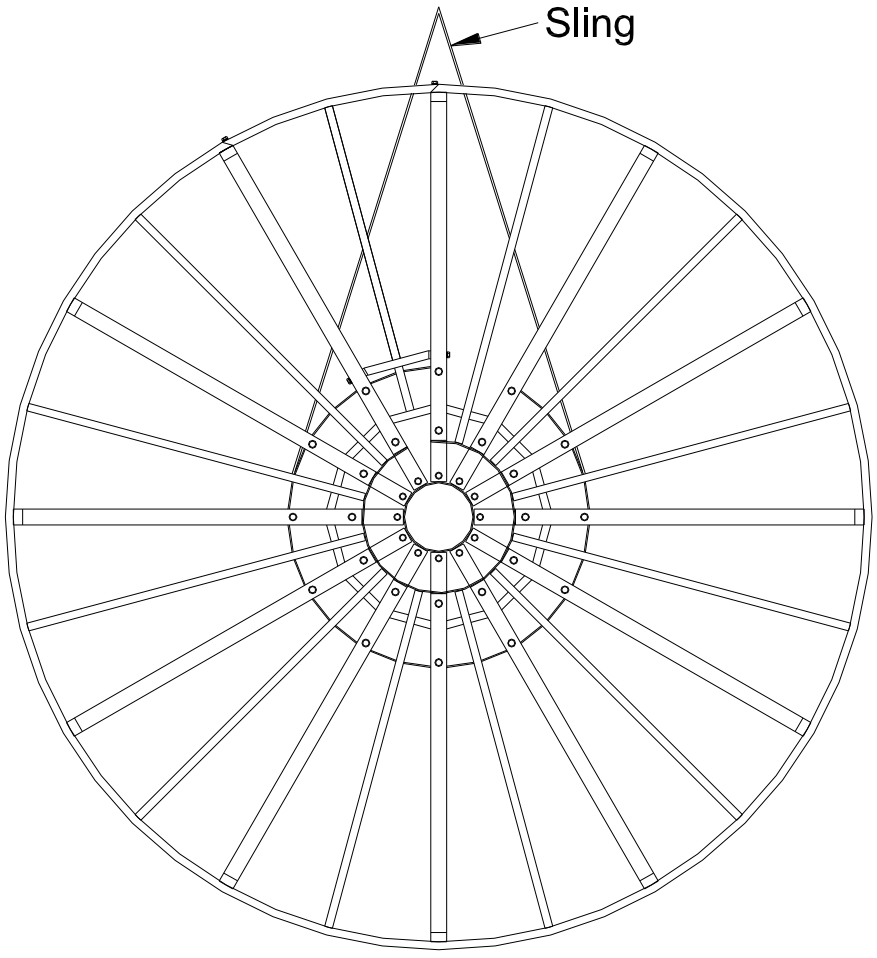


Figure 2 – Lifting drum

4.3.2 Position the drum so that the flange is centred onto the drive flange as shown in Figure 3.

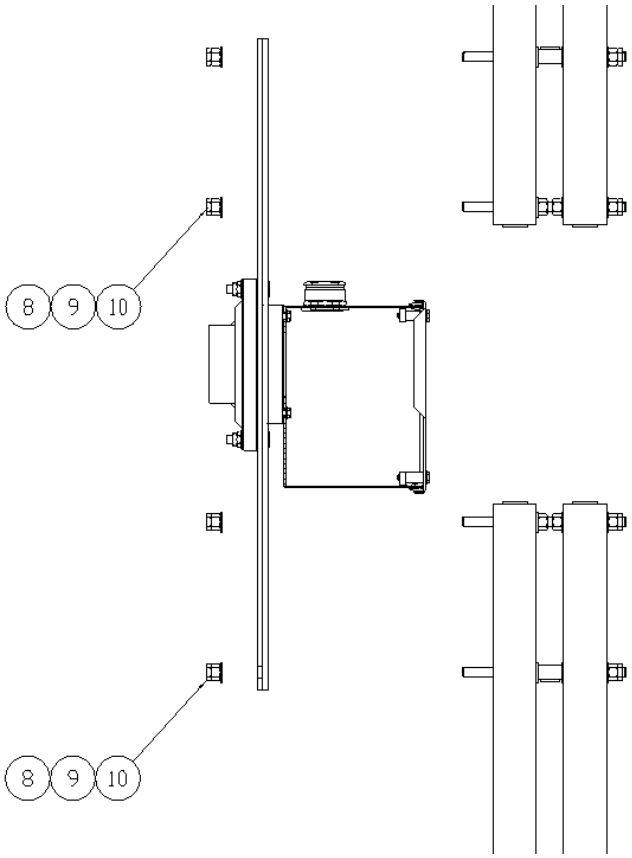


Figure 3 – Drum fixing to drive flange

4.3.3 Fit the 12 washers (10) + 12 nuts (8) + 12 half nuts (9) M14 on diameter ø886 and torque the nuts to 50Nm.

4.3.4 Position the 12 washers (10) + 12 nuts (8) + 12 half nuts (9) M14 on diameter ø440, and torque the nuts to 50Nm.

4.3.5 Verify tightening of all nuts prior to winding on the cable.

4.3.6 Prepare the cable as describe in **Errore. L'origine riferimento non è stata trovata.** and after pass it through the cable gland on front box and connect to through terminals into front box as describe in schema *"Cable connection collector-front drum box"* in **Errore. L'origine riferimento non è stata trovata.**.

4.4 SPACING ADJUSTMENT

4.4.1 In order to ensure reliable performance of the reel, it is very important that the spacing between the spokes is accurately set.

4.4.2 Measure the exact diameter of the cable at a minimum of 3 points along its length and calculate the average value D.

4.4.3 Referring to Figure 4, remove all half-nuts from (b) then loosen all nuts (a) and (b) on the external main spokes.

4.4.4 If the drum width S1 is greater than D+4mm, or less than D+1mm, partially remove each tie-rod (c) one at a time, and remove or insert washers (w) to bring the width to within the correct range.

4.4.5 Re-insert each tie-rod, refit each washer and loosely refit each full-nut.

4.4.6 Once the adjustment has been completed, tighten all the full-nuts to 27Nm. Refit the half-nuts and tighten.

4.4.7 Adjust the parallelism of every main spoke pair (internal and external) so that S2 is between D+2mm and D+3 mm.

4.4.8 To increase S2, loosen nut (a) and tighten nut (b). To decrease S2, loosen nut (b) and tighten nut (a).

4.4.9 Tighten all the full-nuts to 27Nm, and check the spacing again. If no changes need to be made, refit the half-nuts and tighten.

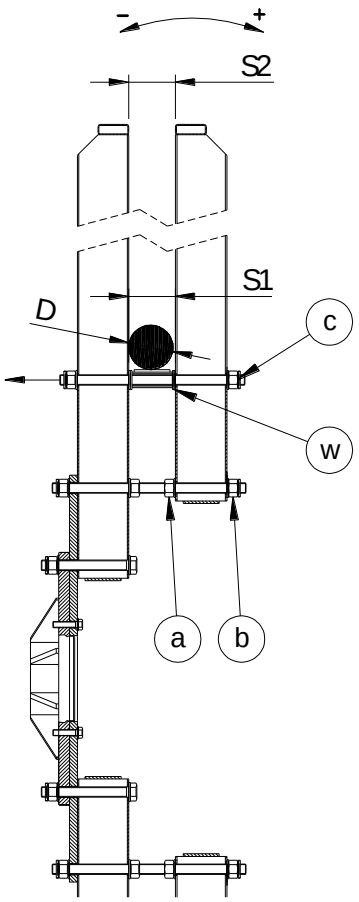


Figure 4 – Spacing adjustment

4.5 PERIODIC MAINTENANCE

4.5.1 Verify the tightness of all fasteners.

4.5.2 Check the drum width, and adjust as necessary following the procedures described in section 4.4.

4.5.3 Verify the fixing of the first turn of cable on the drum.

SECTION 5 - CABLE

5.1 CABLE PREPARATION

5.1.1 Check that the cable diameter and weight are as originally specified (see *Cable* subsection of SECTION 1 for cable details) and ensure that the cable length does not exceed that for which the reel was designed.

5.1.2 Generally, reputable manufactures will supply their cables free of induced twist on storage drums. If, however, the cable on the storage drum is second hand, or the supplier cannot guarantee the cable to be free of induced twist, the cable should be prepared in accordance with the following.

5.1.3 The transport drum should be supported on stands or rollers to allow free rotation. The cable must always be pulled from the top of the drum. Refer to Figure 5.

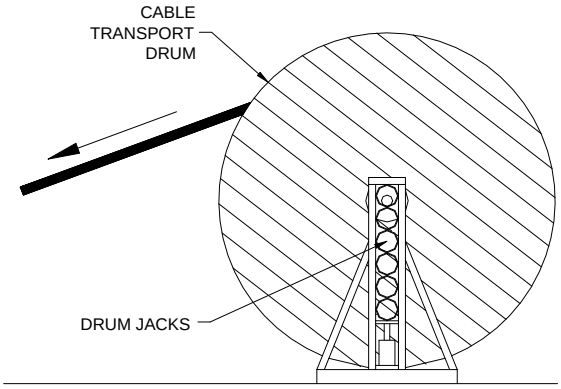


Figure 5 – Cable Transport Drum

5.1.4 Lay out the full length of the cable as it is pulled off the drum, either by manhandling with one person every 5m approximately or by pulling over cable rollers. ***On no account should the full length of the cable be dragged over the ground, nor should a dozer, tractor or any other powered machine be used to pull or drag the cable***.

5.1.5 There may be some twist evident in the cable, which is due to the manufacturing process, and this should now be removed. Leave one end of the cable fixed (eg. still attached to the transport drum) and working from this end, run the twist out of the cable by either (a) placing a suitable bar under the cable and walking towards the free end while gently moving the bar up and down (Figure 6), or (b) forming a coil of cable as near as possible to the fixed end and rolling it along to the free end (Figure 7). If there is a lot of twist in the cable, the process described above may need to be repeated several times.

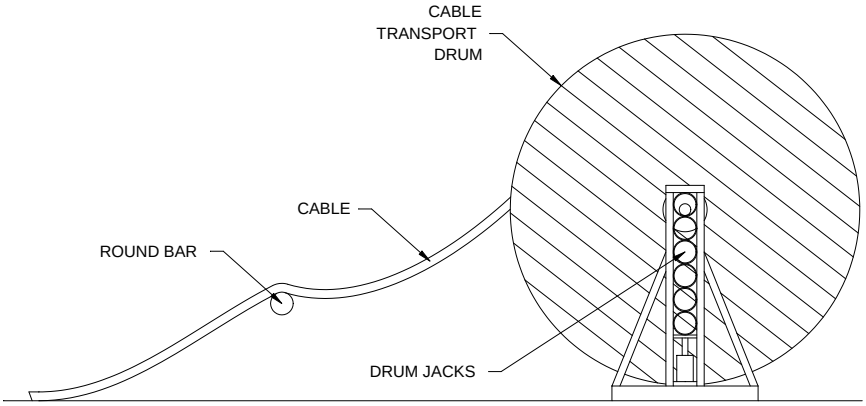


Figure 6 – Removal of Cable Twist Using Round Bar

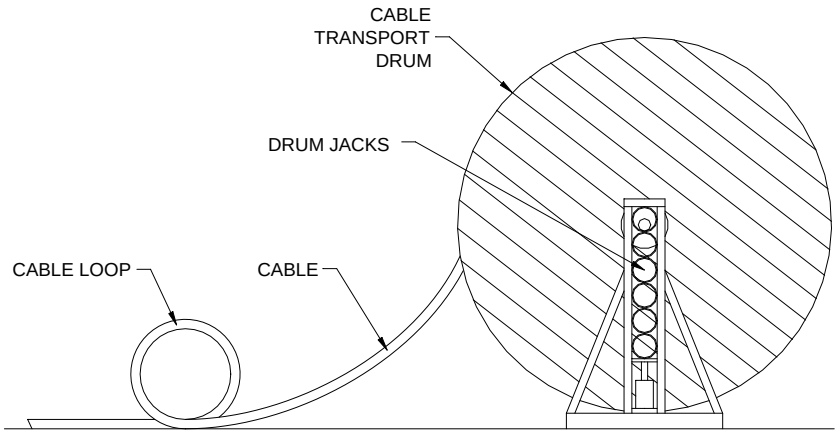


Figure 7 – Removal of Cable Twist Using Cable Coil Method

5.2 CABLE INSTALLATION

5.2.1 In order to ensure satisfactory performance of a reeling cable, the following installation procedure should be adopted. If the cable has been layed out according to the instructions in Section 5.1, then it should be rewound onto the storage drum before being transferred to the reeler using the method described below.

5.2.2 Manually rotate the reeler drum so that the opening in the inner ring is pointing vertically upwards.

5.2.3 With the machine located as close to the feed point as possible, feed the cable from the **top** of the cable transport drums directly onto the **top** of the reeler drum (refer to Figure 8).

5.2.4 Continue feeding it through the opening of the inner ring of the drum, down through the cable gland on the front-entry box and into the collector and connect to through terminals into front box as describe in schema *"Cable connection collector-front drum box"* in **Errore. L'origine riferimento non è stata trovata.**.

5.2.5 Once the cable has been terminated to the sliprings in the collector, tighten the cable gland to exclude moisture and dirt.

5.2.6 Secure the cable onto the drum inner band with a number of heavy duty cable ties.

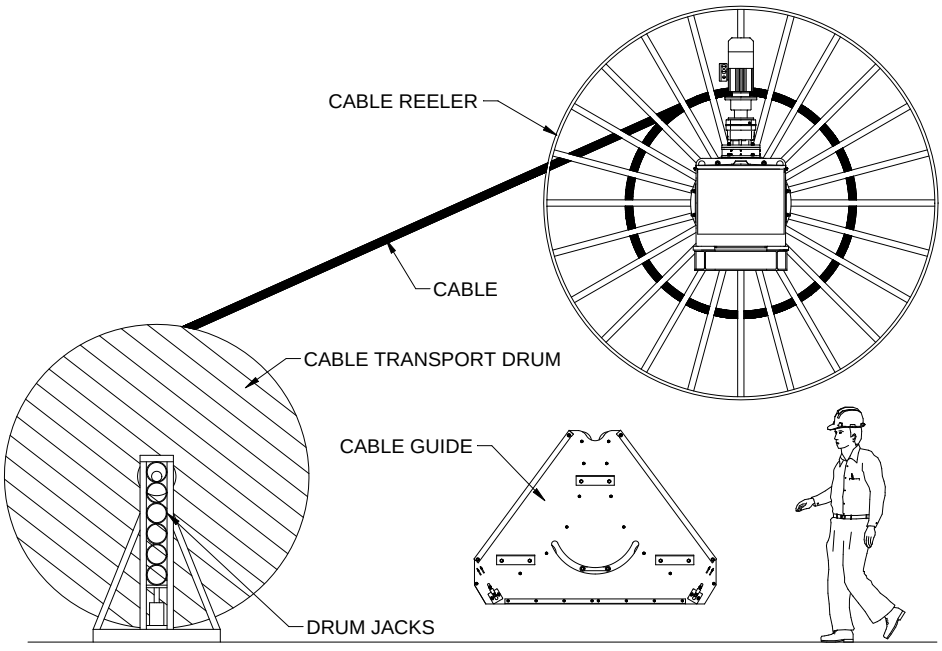


Figure 8 – Correct Method of Cable Installation

5.2.7 The drive unit needs to be energised to rotate the reel for cable fitting.



Ensure that an operator is available to immediately switch off the motor in the event of a problem.

5.2.8 The cable can now be wound onto the reel, and it is essential that this be done with the cable under some tension to ensure uniform tight layering on the reel. It is most important that the cable be wound onto the reel drum without any induced twist. Figure 8 shows the correct method of cable transfer from the storage drum. The use of any other method will induce twist in the cable.

5.2.9 The ends of the cable can now be passed down through the cable guide (if fitted) and manually pulled along the ground or cable tray to the nearby feedpoint.

5.2.10 Lay out the cable as it is pulled off the reel, either by manhandling with one person approximately every 5 m or by pulling over cable rollers. ***On no account should the cable be dragged over the ground, nor should a dozer, tractor or any other powered machine be used to pull or drag the cable***.

5.3 PERIODIC MAINTENANCE

5.3.1 The cables should be inspected after a short time in operation. Twisting may occur as the cable runs in due to the lay of the cable relaxing slightly under operation. This twisting will tend to move towards the feed point over time, and can eventually cause damage to the cable. If twisting is apparent at any time, the cable should be freed at the feed point with the reel at the furthest point of travel (ie. with all the cable paid out), and the twist should be removed by following the instructions in Section 5.1. Due to variations in operating conditions, it is impossible to state an exact number of cycles which need to be carried out, or period of time after which twisting will cease, and in some cases it may be several weeks. Periodic inspections are advisable after the machine has begun operation.

SECTION 6 – COLLECTOR



Ensure that all circuits are isolated by an authorised person prior to removing the cover of the collector housing. Electrical connections should only be carried out by qualified persons.

6.1 REELING CABLE CONNECTION

6.1.1 Pass cables through the three (3) cable glands on front box.

6.1.2 Strip the outer sheath and connect to through terminals into front box as describe in schema *"Cable connection collector-front drum box"* in **Errore. L'origine riferimento non è stata trovata.**.

6.1.3 After the cables connection, tighten the three (3) cable glands to exclude moisture and dirt.

6.2 FIXED CABLE CONNECTION

6.2.1 Feed the fixed cable through the gland mounted on the side of the collector housing, ensuring that it is well supported so as not to put any bending force on the gland.

6.2.2 Strip the outer sheath in order to expose sufficient core length to neatly arrive at the brushgear connection points, and shorten individual cores as necessary.

6.2.3 Terminate each core with an appropriately sized fitting to suit the brush side fixtures specified in the *Collector* subsection of SECTION 1.

6.2.4 Ensure that the cores are neatly arranged and properly supported inside the collector housing, and ensure that the cores are not in contact with live metal parts.

6.2.5 Tighten the cable gland.

6.3 ANTI-CONDENSATION HEATER

6.3.1 Fit a suitably sized cable gland to the removable blanking plate located on the side of the collector housing for the heater cable.

6.3.2 Pass the heater connection cable through this gland up to the heater terminal block. Fix the cable well along the path selected, and ensure that it does not come any closer than 50mm to live metal parts.

6.3.3 Strip the cable cores to the correct length, and terminate using appropriately sized blade terminals.

6.3.4 Connect the cable cores to the appropriate terminals as indicated by the schematic referenced in the *Drawings* subsection of SECTION 1. Tighten the screws to 0.8Nm.

6.4 FINAL CHECKS

6.4.1 Before closing the housing and applying current to the collector for the first time, ensure that:

- all the carbon brushes are correctly aligned in the slipring grooves.
- all the brush arms are correctly aligned with the sliprings.
- all the electrical connections are correctly tightened.
- all cores are sufficiently clear of each other and rotating and live metal parts.

6.5 PERIODIC MAINTENANCE

6.5.1 The sliprings and brushgear should be inspected to ensure good contact and alignment is maintained between the sliprings and brushes. Worn brushes should be replaced.

6.5.2 Verify tightness of all electrical connections.

6.5.3 If necessary, the sliprings can be lightly cleaned with glass paper, and then wiped clean with a cloth dampened with methylated spirit.

SECTION 7 - STROMAG ROTARY LIMIT SWITCH

The limit switch is located inside the collector enclosure. Ensure that all circuits are isolated by an authorised person prior to removing any covers. Electrical connections should only be carried out by qualified persons.

7.1 GENERAL

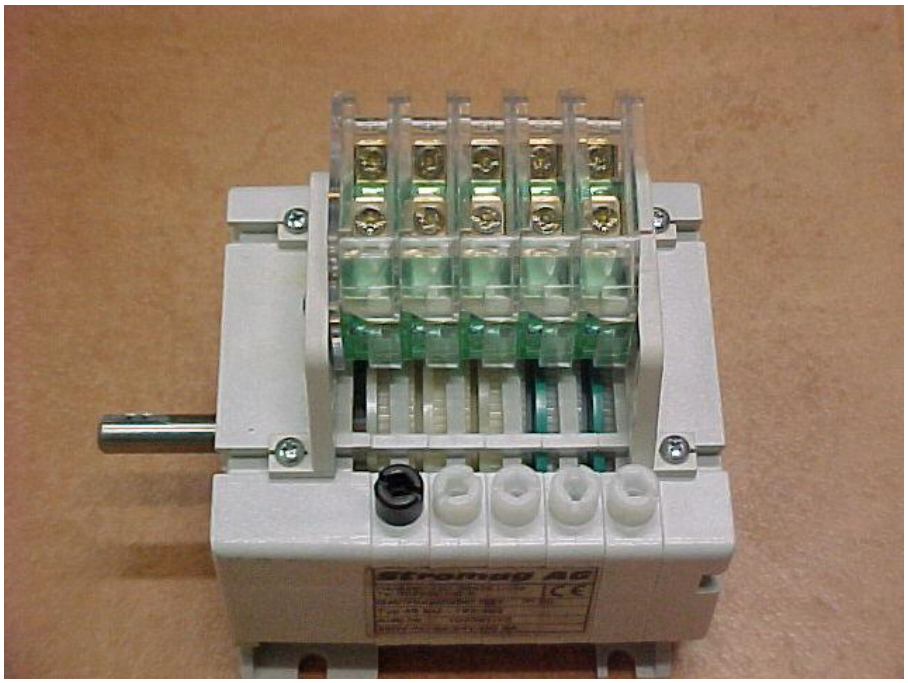


Figure 9 – Stromag rotary limit switch

7.1.1 The geared rotary limit switch (GRLS) consists of a number of cam activated switches used for drum full/drum empty detection. These cams rotate via a gear reduction connected to the input shaft, with one turn of the input shaft resulting in a partial rotation of the cams that is proportional to this gear reduction.

7.1.2 Additional cam operated switches are available for other functions if required.

7.1.3 The technical specification of this limit switch can be found in the *Limit Switch* subsection of SECTION 1.

7.2 ELECTRICAL CONNECTION

7.2.1 Already connected to the Junction box.

7.3 SETTING

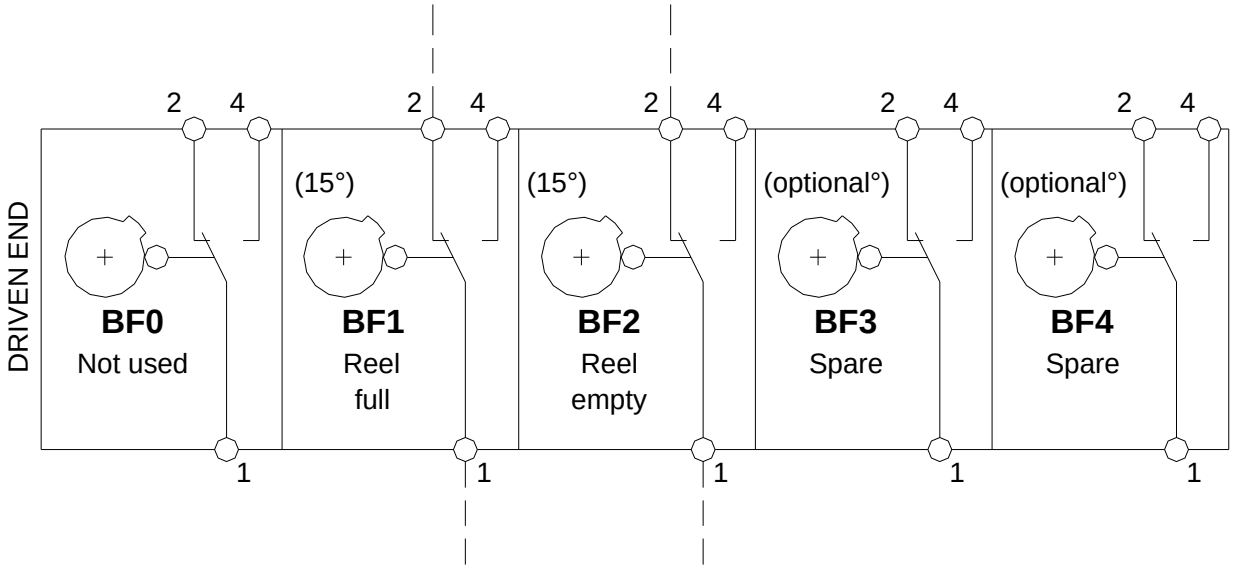


Figure 10 – Rotary limit switch contacts

7.3.1 Travel the machine upwards and note the rotation direction of the limit switch shaft when viewed from the rear.

7.3.2 Position the machine at its upper limit, and set the drum full BF1 switches as follows:

- If the GRLS shaft was turning clockwise during recovery, turn the first white adjustment screw (BF1) in the clockwise direction until the second cam just activates the switch (there will be an audible click).
- If the GRLS shaft was turning anti-clockwise during recovery, turn the first white adjustment screw (BF1) in the anti-clockwise direction until the second cam just activates the switch (there will be an audible click).
- Ensure that the incoming wires on switch BF1 are connected to the normally closed terminals marked 1 and 2.

7.3.3 Travel the machine downwards and then back upwards. Ensure that the drum full switch does not trip within the normal travel limits.

7.3.4 Position the machine at its lower limit, and set the drum empty switch BF2 as follows:

- If the GRLS shaft was turning clockwise during recovery, turn the second white adjustment screw (BF2) in the anti-clockwise direction until the third cam just activates the switch (there will be an audible click).
- If the GRLS shaft was turning anti-clockwise during recovery, turn the second white adjustment screw (BF2) in the clockwise direction until the third cam just activates the switch (there will be an audible click).
- Ensure that the incoming wires on switch BF2 are connected to the normally closed terminals marked 1 and 2.

7.3.5 Travel the machine upwards and then back downwards. Ensure that the drum empty switch does not trip within the normal travel limits.

7.3.6 Note that if the anti-hysteresis adjustment screw (black) is turned after the switches have been set, it will be necessary to re-set the switches.

7.3.7 The spare switches BF3 and BF4, if used, should be set using the procedures described above.

7.4 PERIODIC MAINTENANCE



Ensure that all live electrical circuits have been isolated before performing any maintenance inside the collector housing.

7.4.1 Check that the wires are properly connected to the terminals, and that the terminal screws are correctly tightened.

SECTION 8 - TORQUE UNIT

8.1 GENERAL

8.1.1 The torque unit is the primary support for all the components of the cable-reel. It reduces the motor speed to the value that is required for the cable reel, at the same time multiplying the torque output of the motor.

8.1.2 The T5.1 torque unit has one primary conical gear driving second and third stage spur gears.

8.1.3 An additional pre-reducer can be fitted to provide additional speed reduction/torque multiplication.

8.1.4 Up to two motors can be installed.

8.1.5 All gears are immersed in oil and the gearboxes require very little maintenance.

8.2 PERIODIC MAINTENANCE

8.2.1 After the first 500 hours of operation, and every 10,000 hours thereafter, drain the oil from the torque unit and replace it with the type specified (or approved equivalent) in the *Torque Unit* subsection of SECTION 1.

8.2.2 Between oil change intervals, perform occasional checks on the oil level using the level gauge and top up as necessary with the oil specified.

8.2.3 After every 10,000 hours of operation, replace the grease in the pre-reducer/s with the type specified (or approved equivalent having Brookfield viscosity of 4000) in the *Pre-reducer* subsection of SECTION 1.

8.2.4 Check for oil leakage or unusual noises, and rectify as necessary.

8.2.5 Check for water ingress and replace oil if necessary.

8.2.6 Ensure that the breather is clean and not blocked.

SECTION 9 - MOTOR



Ensure that all circuits are isolated by an authorised person prior to removing any covers. Electrical connections and motor maintenance should only be carried out by qualified persons.

9.1 ELECTRICAL CONNECTION

9.1.1 Ensure nameplate data matches the available power supply.

9.1.2 Remove the cover of the motor terminal box, ensuring beforehand that all live electrical circuits have been isolated.

9.1.3 Measure the winding resistances between each phase and earth, and between individual phases, and ensure that they are greater than 5 MΩ.

9.1.4 Motor is supplied pre-cabled to junction box.

9.1.5 Prior to closing the terminal boxes, ensure that all connections have been properly tightened.

9.2 PERIODIC MAINTENANCE

9.2.1 Clean cooling air passages using low-pressure water spray.

9.2.2 Ensure that all electrical connections are properly tightened.

9.2.3 Ensure that all glands are correctly tightened and sealing correctly.

9.2.4 Ensure that the encoder (if fitted) is properly fixed to the motor shaft.

9.2.5 Ensure that the brake (if fitted) is functioning correctly.

9.2.6 The ball bearings are sealed for life, and therefore maintenance free.

SECTION 10 - BRAKE

Ensure that all circuits are isolated by an authorised person prior to removing any covers. Electrical connections and brake maintenance should only be carried out by qualified persons.

Operation of the manual brake release (if supplied) can result in uncontrolled unwinding of the cable/hose on the reel. Ensure that this does not put personnel at risk.

10.1 GENERAL

10.1.1 The fail-safe brake is mounted on the motor shaft and prevents unwinding of the reel when the motor is not energized. Its DC coil is powered from the AC supply via a rectifier mounted in the motor terminal box. The torque setting of the brake is set such that if the cable were to be pulled off the reel with the motors de-energised, the resulting tension would not damage the cable.

10.2 MANUAL RELEASE

10.2.1 The optional manual brake release is activated by a lever which protrudes from the fan cowling. This lever can be removed if required by unscrewing it.

10.3 BRAKE ADJUSTMENT

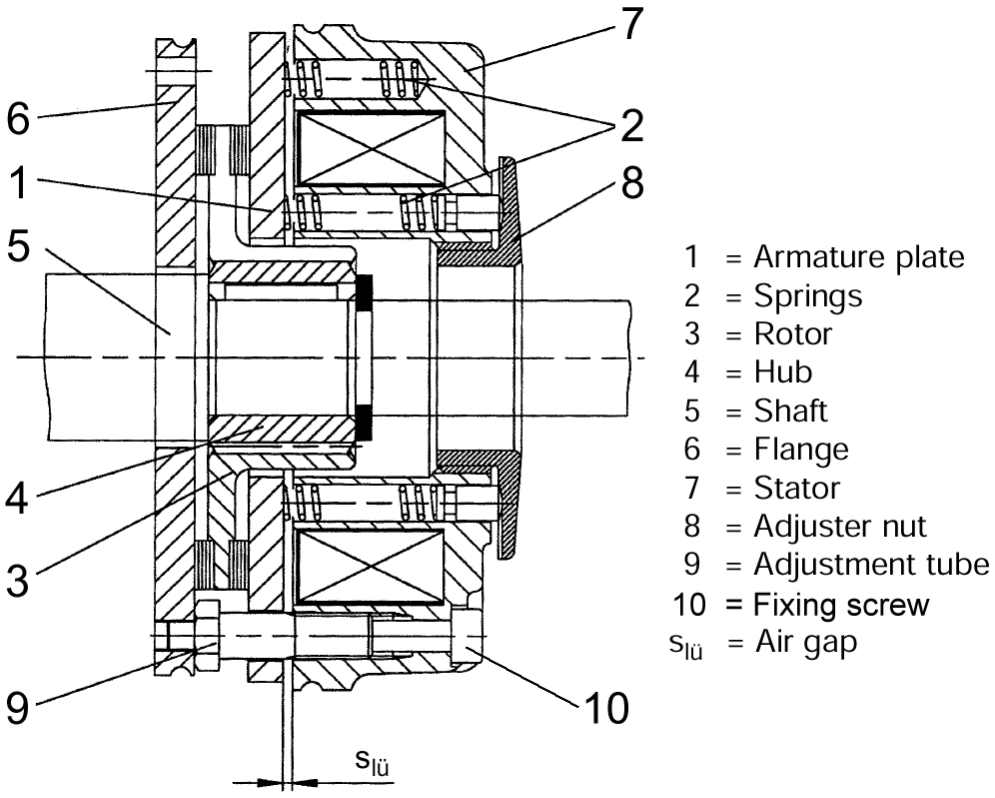


Figure 11 – Brake

10.3.1 In order to ensure that the correct braking torque is maintained, it is important to occasionally adjust the air gap $s_{lü}$ so that it remains in the range 0.2 to 0.5 mm. This can be done as follows:

- Isolate the motor and brake from the supply.
- Clean the motor with a low pressure water spray.

- Remove the cowlings, encoder (if fitted) and fan.
- Loosen the 3 fixing screws (10).
- Turn the adjustment tubes (9) in the anti-clockwise direction until the air gap $s_{lü}$ is 0.2 mm all around.
- Re-tighten the fixing screws.
- Refit the fan, encoder (if fitted) and cowlings.

10.3.2 Measure the thickness of the rotor, and replace it if the dimension is less than 7.5 mm.

SECTION 11 – BOLLARD DAMPER

11.1 DESCRIPTION

11.1.1 Bollard Damper is to be mounted on spreader head block vertically straight below the cable reel.

11.1.2 The bollard damper MUST be mounted exactly vertical under the position when the reel is full. When the reel is full (spreader in top position) the cable must be hanging perfectly vertically.

11.1.3 For the function of the bollard damper approx. 3 meter of extra cable is needed on the spreader.

11.2 INSTALLATION

11.2.1 Mount bollard damper on spreader. Fix with high tensile screws.

11.2.2 The inner ring of the damper is removable as show in Figure 12. The cable can then be wrapped two and half times around the drum and then placed onto roller 1 through a slot in the support structure, roller 2 is then fixed above the cable to restrain it in all directions.

NOTE: that a short length or heat shrink material (supplied by Cavotec) must be fitted to the mouth of the damper.

11.2.3 Behind the damper (after the guide roller) there must be enough spare and loose cable to allow the damper to move without stretching the cable. (approx. 0,5 m).

11.2.4 Fix the cable clamp on the damper. The cable clamp should be fixed hard around the cable so it holds the cable on the bollard. The strain on the cable will be taken up along the full turn on the bollard.

11.2.5 Tighten up the cable on the cable reel using manual mode.

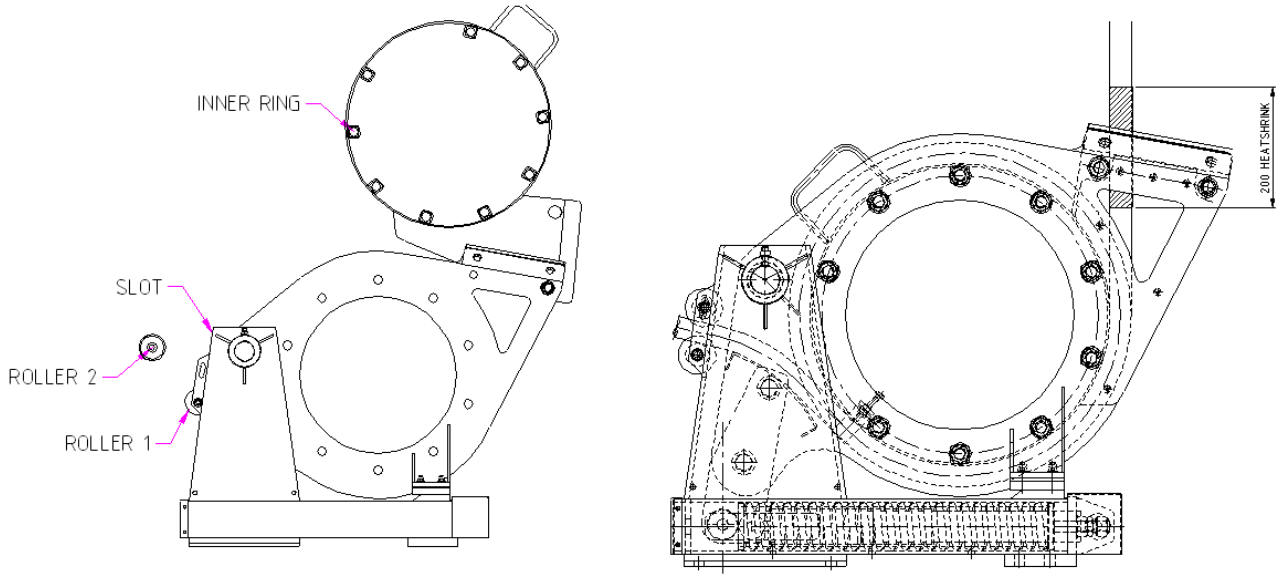


Figure 12 - Damper

11.3 PERIODIC MAINTENANCE

11.3.1 Check grease in the slot and if is necessary to grease.

11.3.2 Check the protection of cable (heat shrink) and if damaged to replace it.

SECTION 12 – DRIVE

12.1 DELIVERY

12.1.1 The NCC cable reel drive can either be delivered as a complete mounted panel with all drive and auxiliary logic components mounted and pre-wired, IP22 to be mounted in the clients cabin or optionally delivery can be made in a housing IP54 for indoor mounting or in special housings for outdoor mounting. The braking resistor is delivered separately and to be mounted and cabled by the client.

See the *Drive* subsection of SECTION 1.

12.2 INSTALLATION

12.2.1 The drive and it's components are to be installed in a ventilated ambient suitable for electric equipment. The braking resistor can be mounted in the same area next to the drive housing or elsewhere. If drive cannot be mounted in a controlled ambient a housing with appropriate heating and ventilation is needed.

12.2.2 Standard drive is specified for 0 deg C to 40.

12.3 INTERFACE AND SIGNALS

12.3.1 Refer to documents in SECTION 15.

SECTION 13 - RECOMMENDED SPARES

Drive System Spares


Part Number	Part Description	Qty	
		Inst'd	Spares
S01-10T50-211	T5 torque unit new type	1	1
SC-121216-MC3	4 pole, 5.5kW 112 frame flange mount motor complete with Klixon, heater, encoder and brake	1	1
SC-121216-MC4	4 pole, 5.5kW 112 frame flange mount motor complete with Klixon and heater	1	1
S64-20075-001	Oil synthetic Shell Spirax ASX 75W-90	5ℓ	10ℓ


Collector Assembly Spares

Part Number	Part Description	Qty	
		Inst'd	Spares
SC-121216-AF2	Ring pack FV 26/4S/R prepared L.S.I. "STROMAG"	1	1
SR2-00593-000	Slipring 30 A dia. 130	26	26
SR2-00593-00A	Slipring 30 A dia. 130 silvered	4	4
SR2-S0116-000	Brushgear KP2/130, (30A)	30	30
SR2-00594-000	Ring insulator	32	32
SR2-00598-000	Brushgear insulator	30	30
SR2-01083-000	End insulator	6	6
S99-SG025-400	Limit switch Stromag 1:29/4 IP20	1	1

SECTION 14 - MECHANICAL DOCUMENTATION

Drawing No.	Description
SC-121216-IS2	Reel assembly
SC-121216-JB2	Junction box
STD-AD-009	Damper assembly
STD-BE-004	Box + Drive
STD-BE-001	Braking resistor + Rain cover

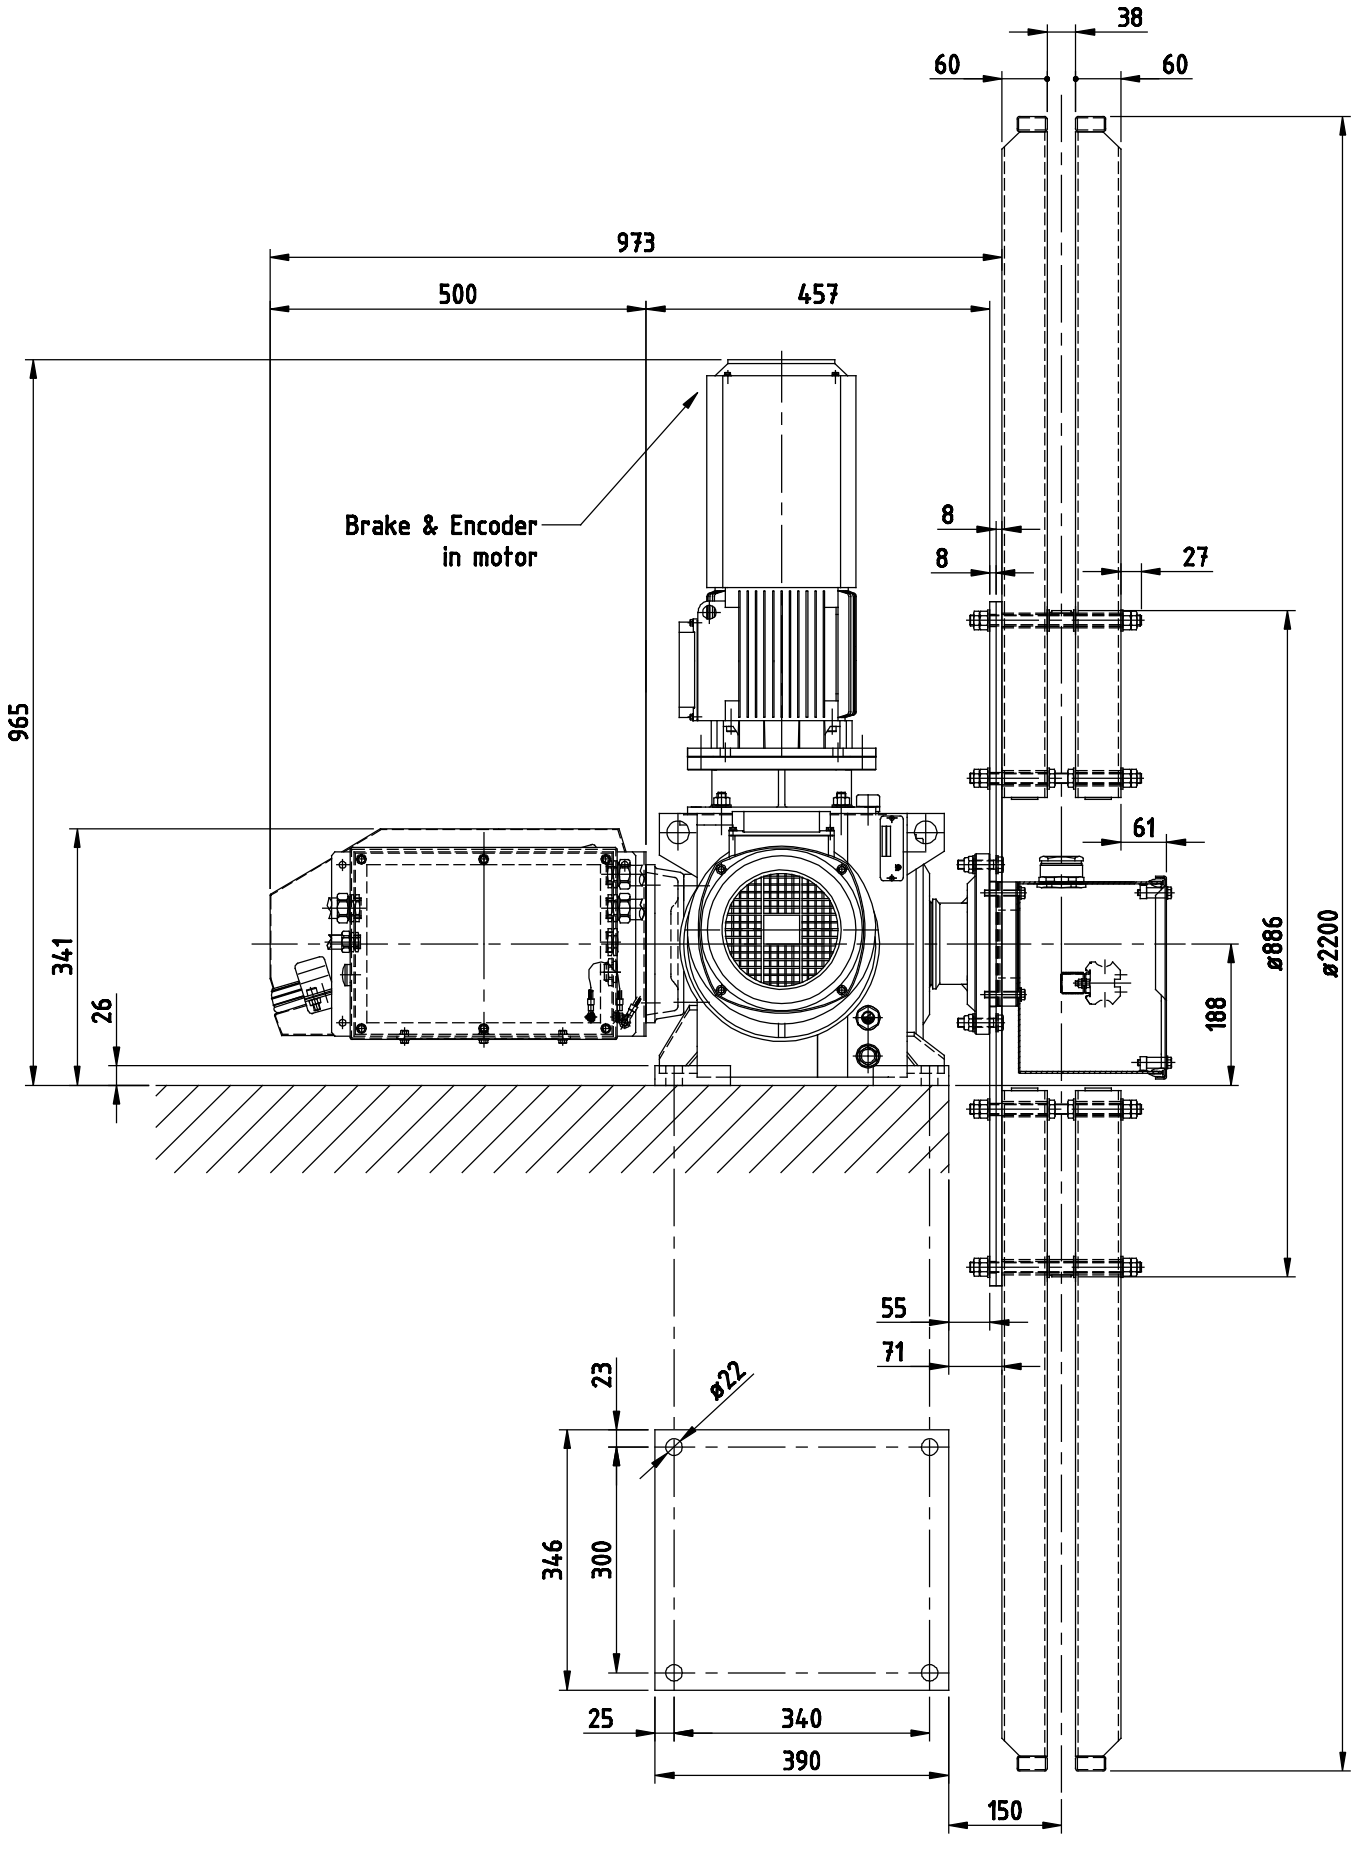

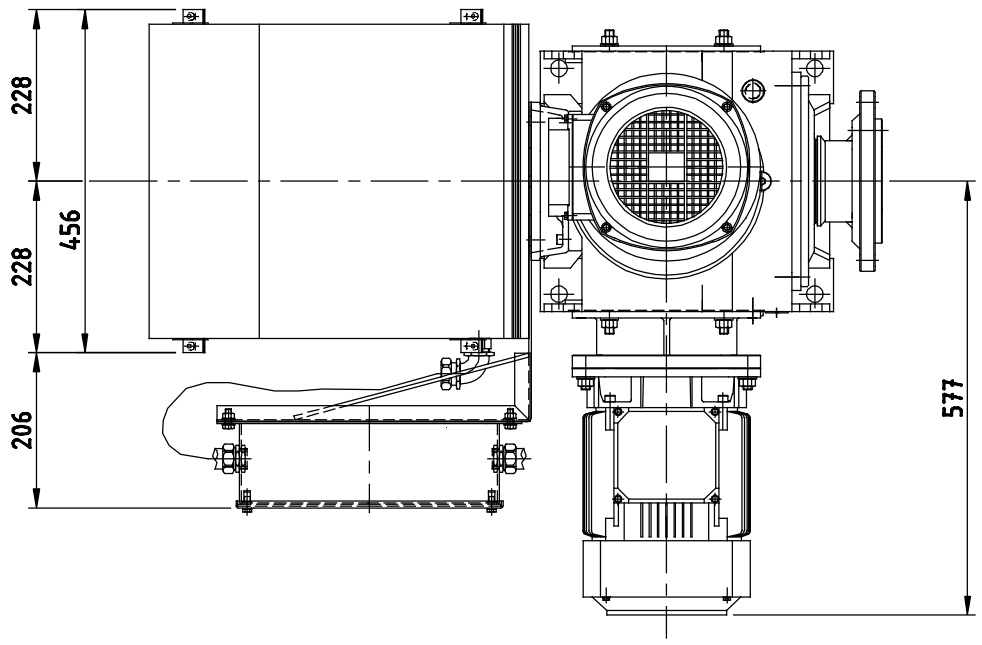

TITLE

CTC Cable Reel
T5.1.NCC.(2x5kW).4 VM922-38G KV26/4S/FC/R

CLIENT: ZPMC

PROJECT: Srilanka

No.	REVISION	BY	DATE
D	MODIFIED DIMENSION COLLECTOR HOUSING	AR	26.07.12
C	DELETE CABLE GLAND FROM COLLECTOR	AR	05.07.12
B	ADDED INTERMEDIE FLANGE FOR TRANSPORT	AR	04.07.12
A	ISSUED FOR APPROVAL	AR	02.07.12

THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION FROM CAVOTEC SPECIMAS SPA


DRWN AR
DATE 02.07.12
CHKD
APPD


SCALE 1:10 ON A3
MAT'L
WGHT 480 kg


CAVOTEC
Connecting mobile equipment

DWG No SC-121216-IS2 D

ALL DIMENSIONS IN MM UNLESS OTHERWISE NOTED

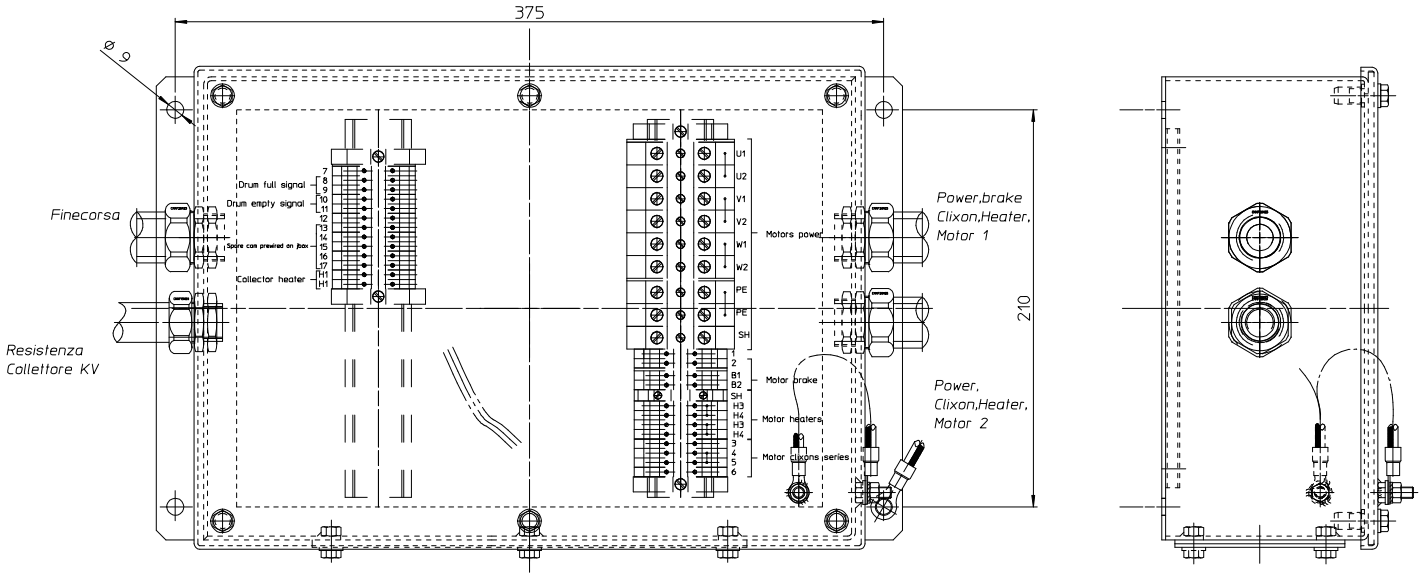

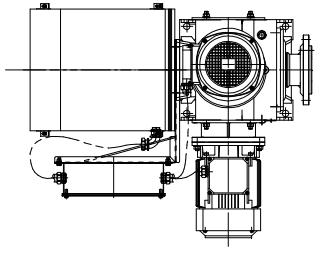

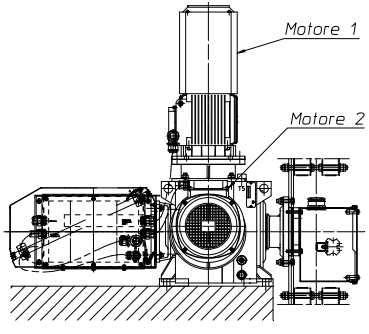

POS.	N° pezzi Pieces nr	DENOMINAZIONE - DENOMINATION	N° DISEGNO DRAWING Nr	Peso Kg Weight Kg	NOTE

Materiale - Material

Stato - Forn

Protezione superficiale - Finish

Quantita' - Quantity | Peso - Weight Kg 10,5 ~

Cliente - Customer

Gruppo - Assembly: Cassette di giunzione

Grandezza - Unit

Particolare - Item: Terminal box KV

Ind.	Modifiche	Data	Sigla
A	Emesso per fabbricazione	25-07-12	SP

CAVOTEC


CAVOTEC SPECIMAS S.p.A.
A MANUFACTURING COMPANY OF THE CAVOTEC GROUP
I - 20054 NOVA MILANESE (MI) - VIA GALVANI, 1
TEL. (0362) 451111 - FAX. (0362) 41233


Disegnato S.P. | Data - Date 25-07-2012
Controllato | Scala - Scale 1 : 2
Approvata | Codice - Code


A termini di legge ci riserviamo la proprieta' di questo disegno con divieto di riproduzio e di renderlo noto a terzi senza nostra autorizzazione scritta. This drawing is our property and it shall not be reproduced copied lent or disposed of without our written consent.


Sostituita dal N° | Sostituisce il N°

N° Disegno - Drawing Nr: SC-121216-JB2

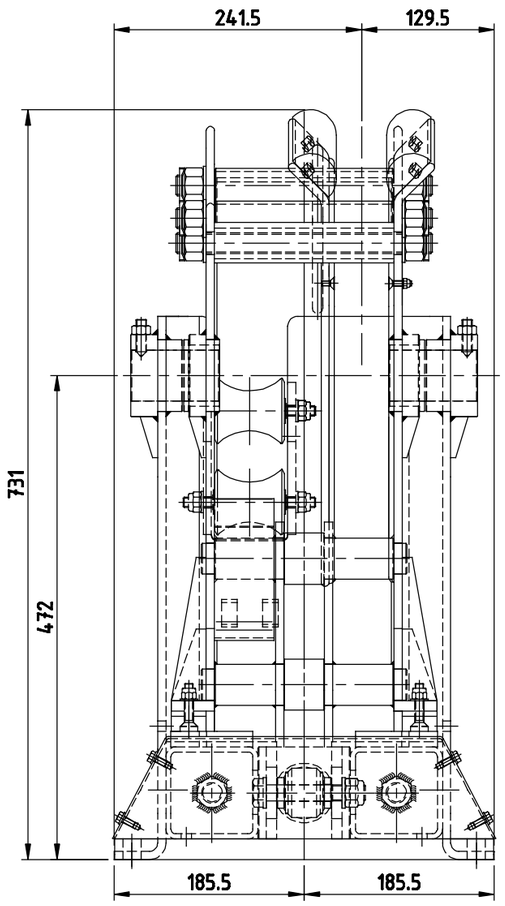

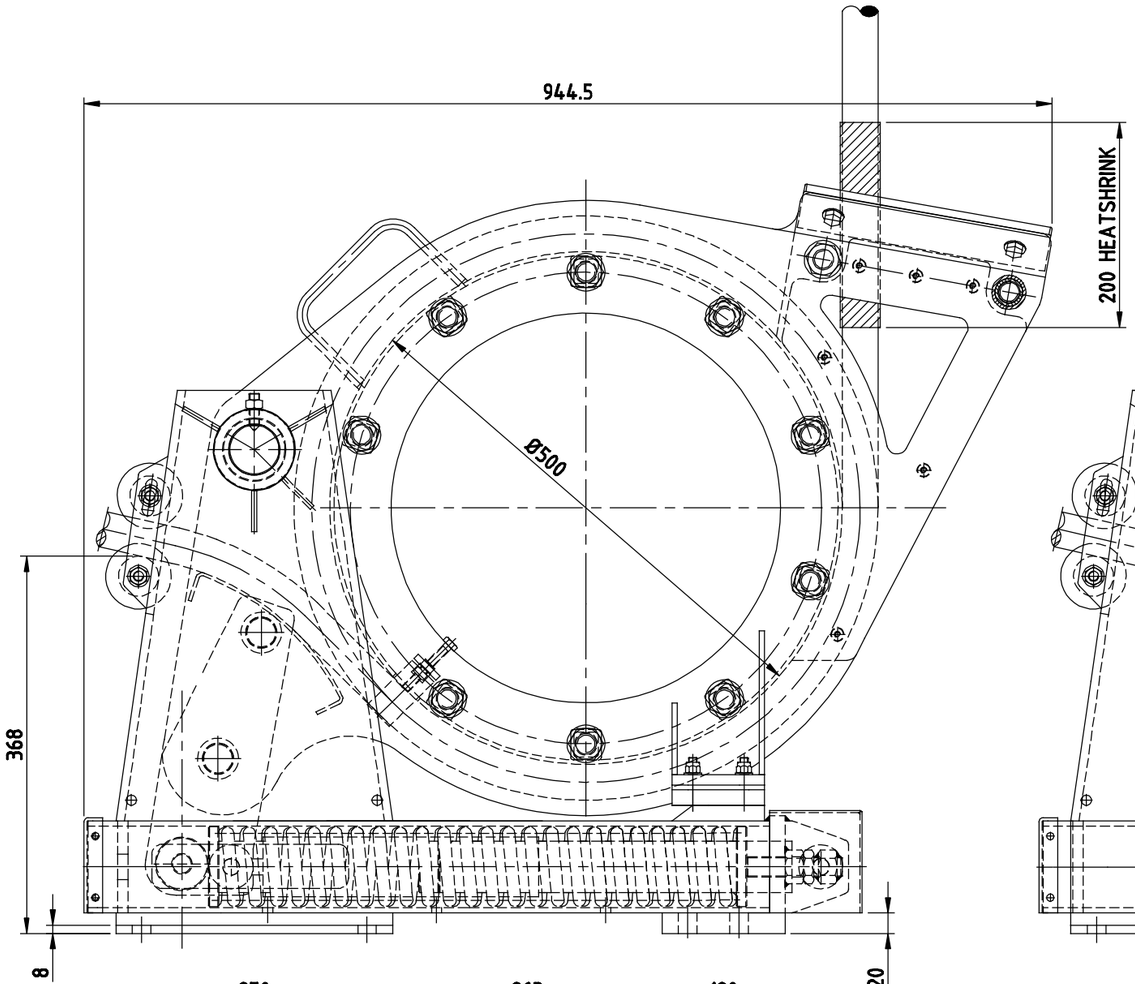

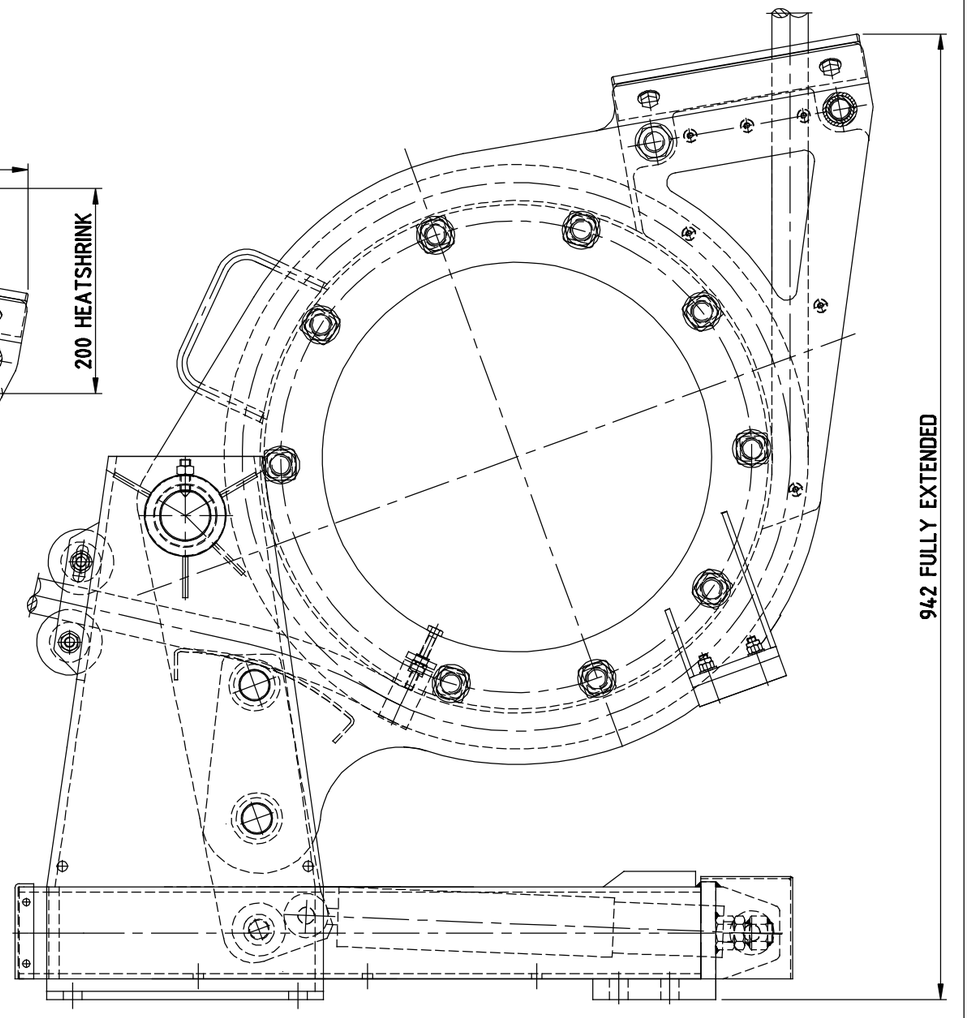

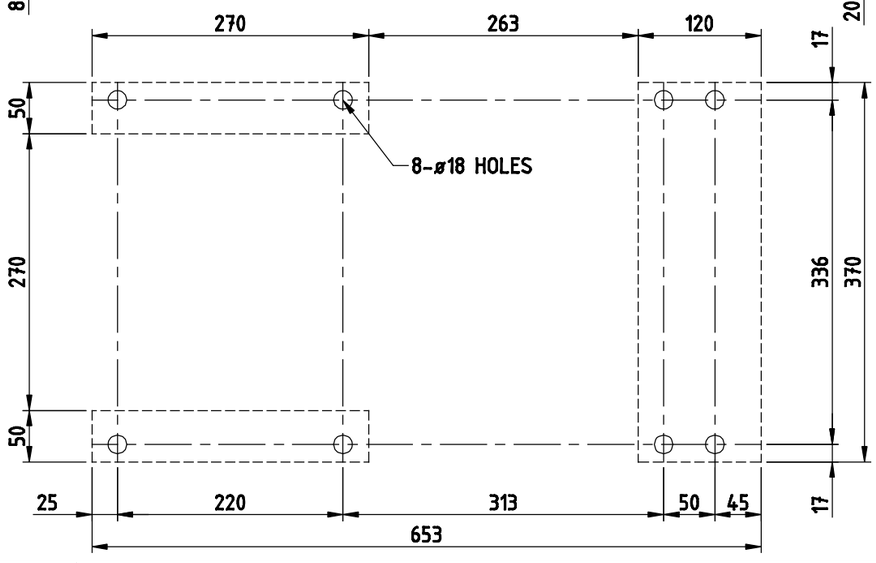

DAMPER PART NO. - S06-S0615-xxx
ASSEMBLY DRAWING - AS-615, REV A


CLAMP KIT PART NO. - SK6-S0680-0xx

FINISH - HOT-DIP GALVANISED

MAXIMUM CABLE DIAMETER (OD) - 45 mm
EFFECTIVE STROKE - 180 mm

AVAILABLE DAMPING FORCE RANGES

200 TO 2900 N (PART NO. S06-S0615-250)
200 TO 5600 N (PART NO. S06-S0615-500)

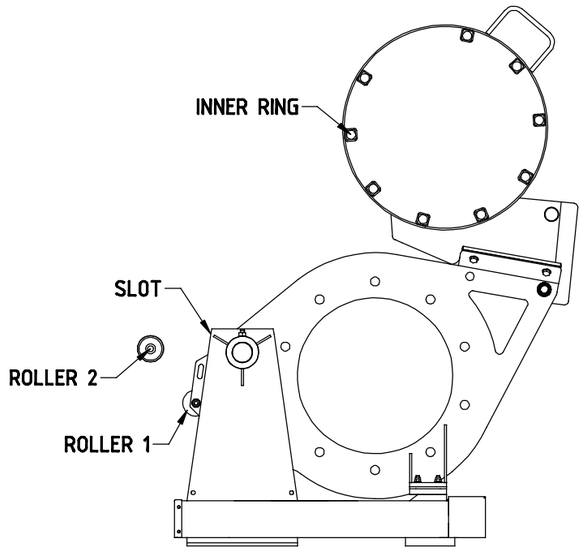

CABLE FITTING

THE INNER RING OF THE DAMPER IS REMOVABLE AS SHOWN IN THE ADJACENT FIGURE. THE CABLE CAN THEN BE WRAPPED TWO AND A HALF TIMES AROUND THE DRUM AND THEN PLACED ONTO ROLLER 1 THROUGH A SLOT IN THE SUPPORT STRUCTURE. ROLLER 2 IS THEN FIXED ABOVE THE CABLE TO RESTRAIN IT IN ALL DIRECTIONS. NOTE THAT A SHORT LENGTH OF HEAT SHRINK MATERIAL (SUPPLIED BY CAVOTEC) MUST BE FITTED TO THE CABLE AT THE MOUTH OF THE DAMPER.

DAMPER MOUNTING ON HEAD BLOCK

POSITION THE DAMPER SO CABLE IS HANGING ABSOLUTELY VERTICALLY UNDER THE DRUM WHEN HEAD BLOCK IS IN IT'S TOP POSITION. CABLE'S LONGITUDINAL AXIS MUST BE PARALLEL TO THE TROLLEY DIRECTION MOVEMENT.

No.	REVISION	BY	DATE
E	CHANGED EFFECTIVE STROKE TO 180mm	GJM	28.05.12
D	ADDED DAMPER MOUNTING INSTRUCTIONS	AS	28-05-07
C	OVERALL LENGTH INCREASED BY 10 mm	PR	27/9/05
B	ADDED NOTES IN FRENCH LANGUAGE - LAYER FRENCH	AR	8/6/05
A	ISSUED FOR INFORMATION	PR	29/1/04

TITLE
CABLE DAMPING FOR VERTICAL APPLICATIONS
BOLLARD DAMPER WITH PLUG ENTRY FACILITY

CLIENT

PROJECT


THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION AND LICENCE FROM CAVOTEC SPECIMAS SPA


ALL DIMENSIONS IN MM UNLESS OTHERWISE NOTED


DRWN PR
DATE 29/1/04
MAT'L HDG MS
WGHT 150 kg
SCALE 1:6 ON A3


CAVOTEC
Power supply and crane technology

DWG No STD-AD-009 E

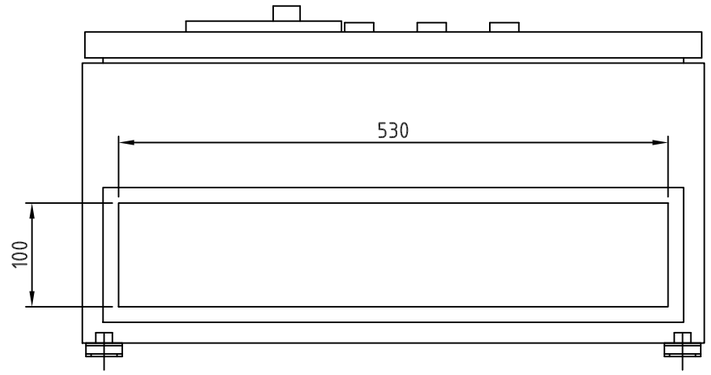

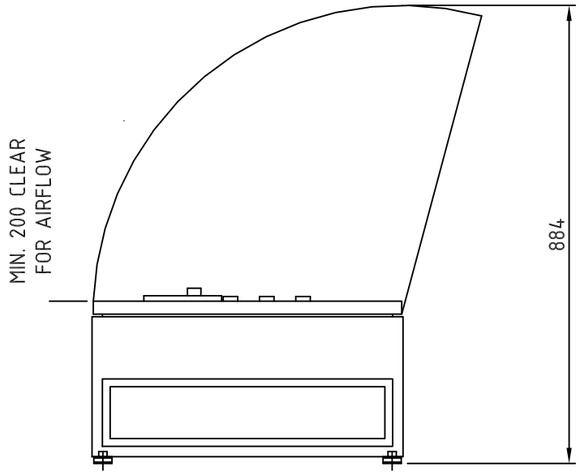

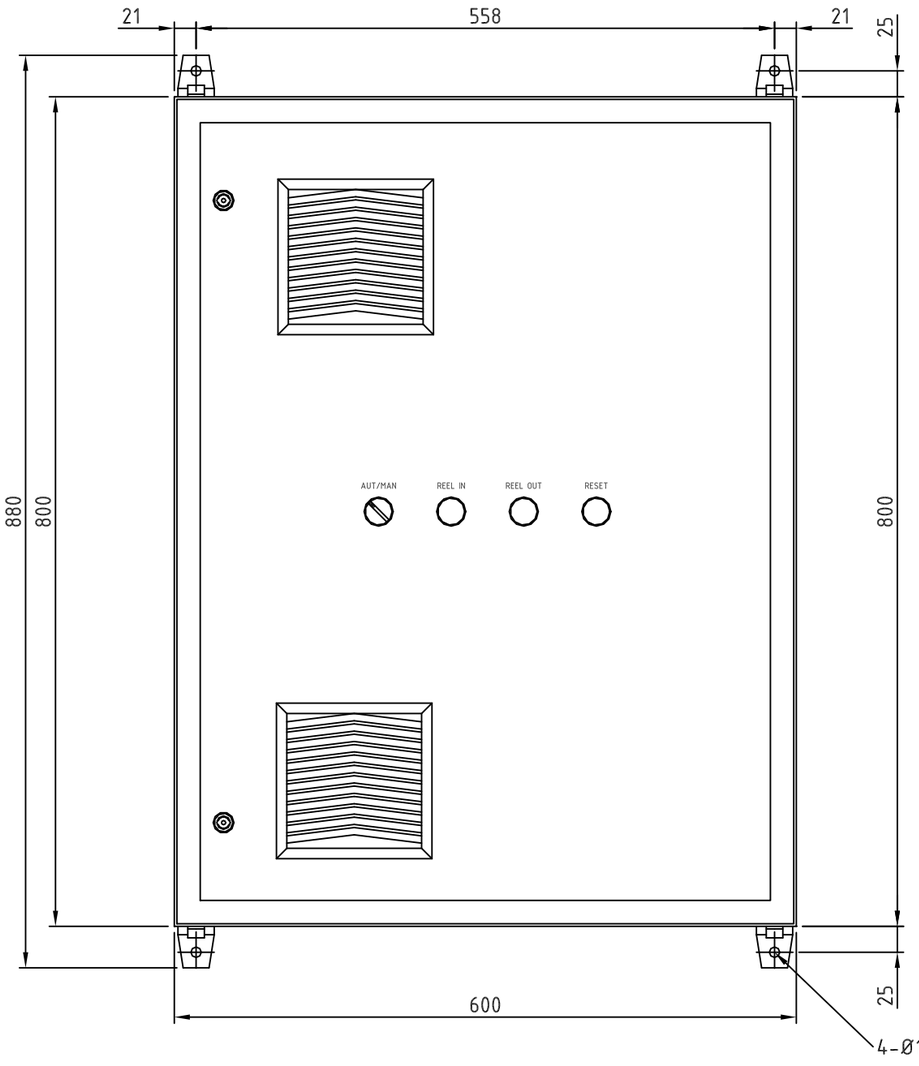

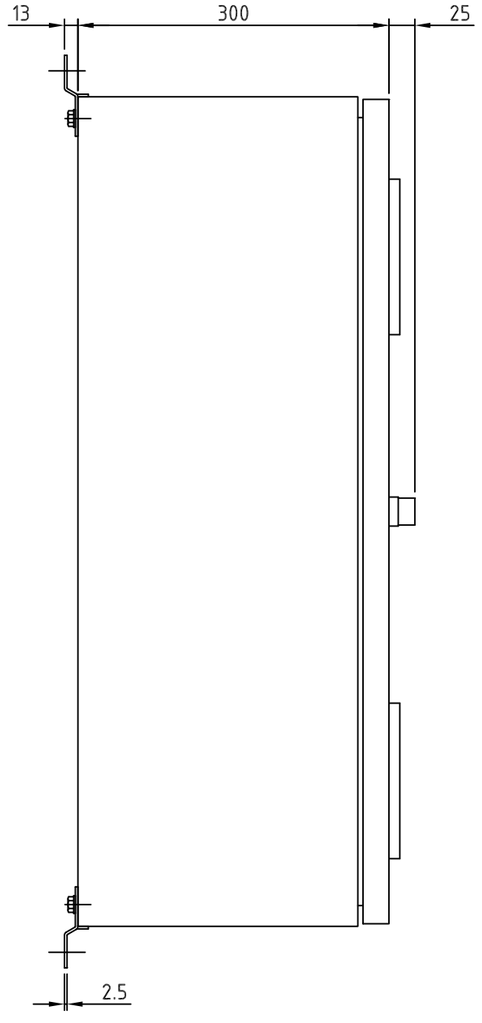

Notes

Protection rating - IP54

To be installed in a climate controlled environment eg. drive cabin or electrical house.

Colour - RAL 7035

Box part nos.

S01-S0518-000 (door hinged on right as drawn)
S01-S0523-000 (door hinged on left)

No.	REVISION	BY	DATE
D	COLOUR WAS 7032	DR	24/09/10
C	VENTS MOVED TO FRONT	PR	1/11/04
B	REVISED CLEARANCE NOTE - WAS 100 mm	PR	16/6/04
A	ISSUED FOR INFORMATION	PR	26/4/04

TITLE: CTC REEL CONTROL CENTRE
BOX PAINTED 600x800x300

CLIENT

PROJECT


THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION AND LICENCE FROM CAVOTEC SPECIMAS SPA


ALL DIMENSIONS IN MM UNLESS OTHERWISE NOTED


DRWN PR
DATE 26/3/04
MAT'L MS
WGHT 50 kg
SCALE 1:6 ON A3


CAVOTEC
Power supply and crane technology

DWG No STD-BE-004 D

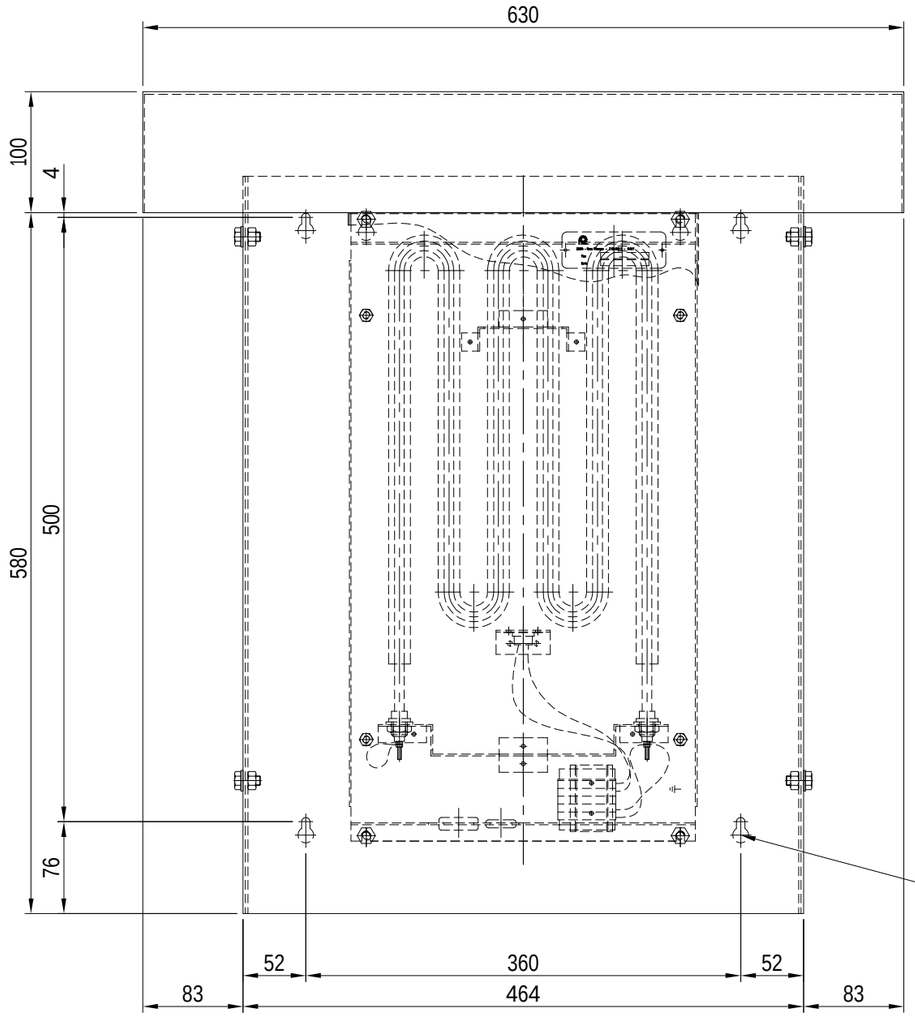

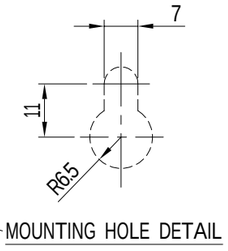

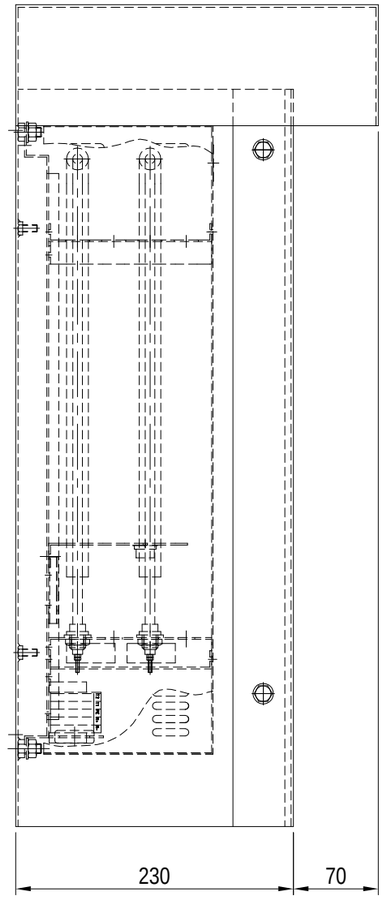

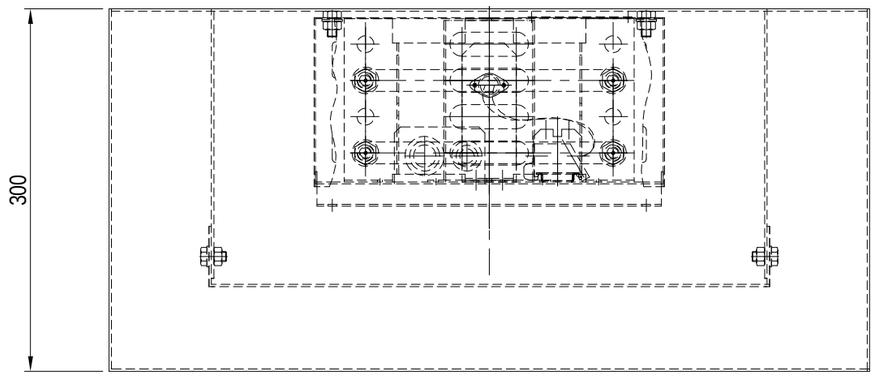

PART NUMBERS

AISI 304 CONSTRUCTION - S01-S0603-000
AISI 316 CONSTRUCTION - S01-S0603-T00

NOTE

COVER SUITS BOTH CAVOTEC STANDARD RESISTOR AND ABB SACE RESISTOR.
CAVOTEC RESISTOR SHOWN.

No.	REVISION	BY	DATE
B	MODIFIED NOTES, CHANGED TO FIRST ANGLE PROJECTION	PR	25/1/05
A	CERTIFIED ISSUE	PR	22/3/03

TITLE: CTC REELING SYSTEM
RAIN COVER FOR BRAKE RESISTOR

CLIENT:

PROJECT:

THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION AND LICENCE FROM CAVOTEC SPECIMAS SPA

ALL DIMENSIONS IN MM UNLESS OTHERWISE NOTED

DRWN PR
DATE 22/3/03
MAT'L AISI 304/316
WGHT 15 kg
SCALE 1:5 ON A3

CAVOTEC
Power supply and crane technology

DWG No STD-BE-001 B

SECTION 15 - ELECTRICAL DOCUMENTATION

Drawing No.	Description
SC-121216-SE2	Power & control schematic
121216 – rev.A	Cable connection collector-front drum box 32 poles.
SC-121216-FD2	Functional description
STD-TD-002	Operating Description of Bollard Damping System
SC-121216-PAR2	Parameters
Commissioning procedure	Control Keypad
ASITQ224_v320	Vacon NXP frequency converters, application Cavotec

CAVOTEC SPECIMAS S.P.A.

PROJECT: SC-121216-SE2 CAVOTEC NCC SYSTEM - 2 MOTORS, STEP CONTROL

INDEX REVISION:

Rev	A	B	C	D	E	F			
Pag.1	X								
Pag.2			X				POWER DISTRIBUTION		
Pag.3	X						VACON NXP DRIVE 15 kW		
Pag.4		X					REEL MOTOR - BRAKE RESISTOR		
Pag.5		X					CONTROL 230 VAC		
Pag.6		X					CONTROL 230 VAC		
Pag.7	X						CLIENT FEEDBACK		
Pag.8	X						NC0PTA1 OPTION BOARD		
Pag.9	X						DRIVE BOARD, ENCODER, ROTARY LIMIT SWITCH, PROFIBUS CARD		
Pag.10	X						PANEL LAYOUT		
Pag.11			X				POWER TERMINAL		
Pag.12		X					CONTROL TERMINAL		
Pag.13	X						MOTOR TERMINAL		
Pag.14	X						ENCODER TERMINAL		
Pag.15	X						MOTOR TERMINAL		
Pag.16		X					JUNCTION BOX RIGHT SIDE		
Pag.17	X						JUNCTION BOX LEFT SIDE		
Pag.18									
Pag.19									
Pag.20									
Pag.21									
Pag.22									
Pag.23									
Pag.24									
Pag.25									
Pag.26									
Pag.27									
Pag.28									
Pag.29									
Pag.30									
Pag.31									
Pag.32									
Pag.33									
Pag.34									
Pag.35									
Pag.36									
Pag.37									

NOTES

- Standard wire numbers have the form xxyy where xx is the sheet number on which it first appears and yy is a progressive number for that sheet, eg. 0514 = sheet number 05, wire number 14.
- Component identifiers have numbers xy where x is page number and y column number, eg. M34 - motor page 3 column 4.
- Position references are indicated by sheet number followed by coordinate, eg. /4.E2 = sheet number 4, position E2.
- All dashed interconnecting wiring to be done by others.
- Wire colours are indicate in parentheses (BK=Black, BU=Blue, BN=Brown, RD=Red, WH=White, YE=Yellow, GN=Green, GY=Grey, PK=Pink).
- Standard cable are indicate with -Wxx.

NOTES

Colour Code for internal wiring CEI EN 60204-1 (13.2.3-13.2.4) :

AC and DC power circuits - BLACK (BK)
Neutral - LIGHT BLUE (BU)
AC control circuits - RED (RD)
DC control circuits - DARK BLUE (BU)

Screened and component specialized cable can be coloured differently.

No.	REVISION	BY	DATE
A	MODIFIED TITLE OF PAGES 5 & 6	DD	05/07/2012

TITLE: CAVOTEC NCC SYSTEM - 2 MOTORS, STEP CONTROL

CLIENT:


PROJECT: ZPMC SRILANKA

THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION AND LICENCE FROM CAVOTEC SPECIMAS SPA

DRWN DD
DATE 02/07/2012
CHKD
APPD

CAVOTEC
Connecting mobile equipment

SHEET No 1 OF 17
DWG No SC-121216-SE2
A

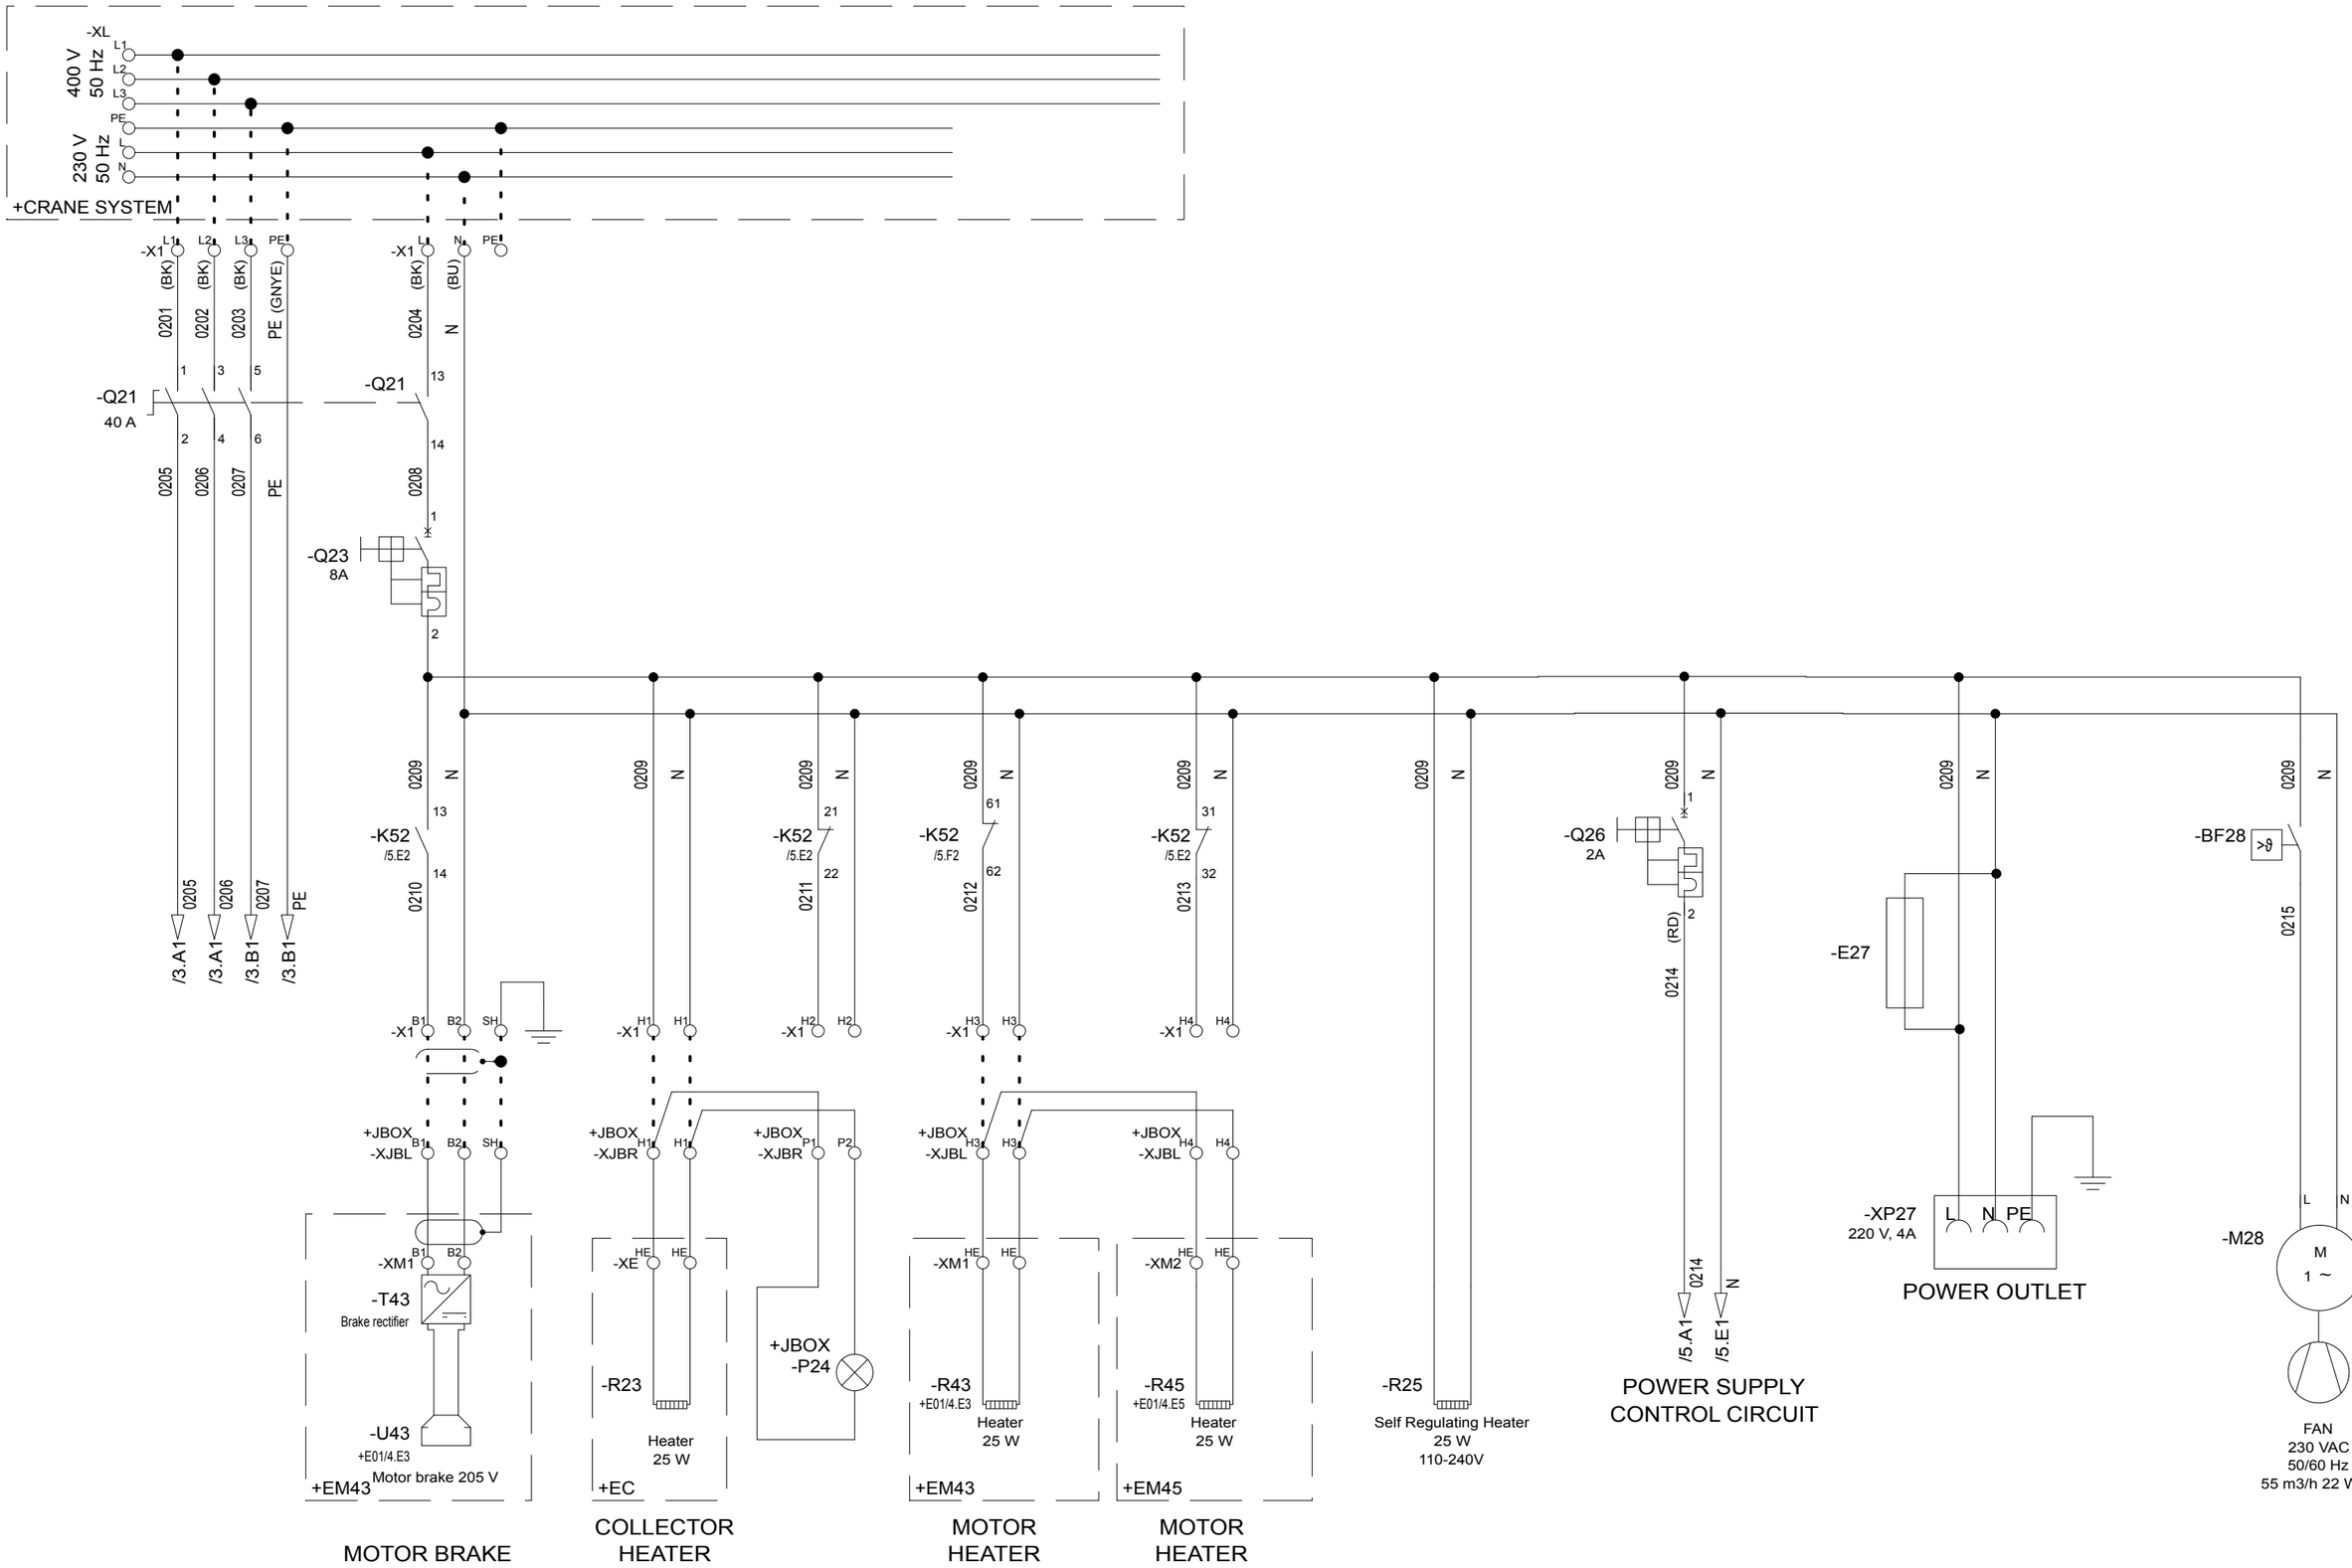

Refer to sheet 1 for notes

No.	REVISION	BY	DATE
C	ADDED LAMP FOR JUNCTION BOX	DD	09/10/2012
B	MODIFIED TENSION LEVELS	DD	05/07/2012
A	ISSUED FOR APPROVAL	DD	02/07/2012

TITLE
CAVOTEC NCC SYSTEM - 2 MOTORS, STEP CONTROL POWER DISTRIBUTION

CLIENT


PROJECT
ZPMC SRILANKA

THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION AND LICENCE FROM CAVOTEC SPECIMAS SPA

DRWN	DD
DATE	02/07/2012
CHKD	APPD
SHEET No	2 OF 17
DWG No	SC-121216-SE2
	C

CAVOTEC
Connecting mobile equipment

+E01

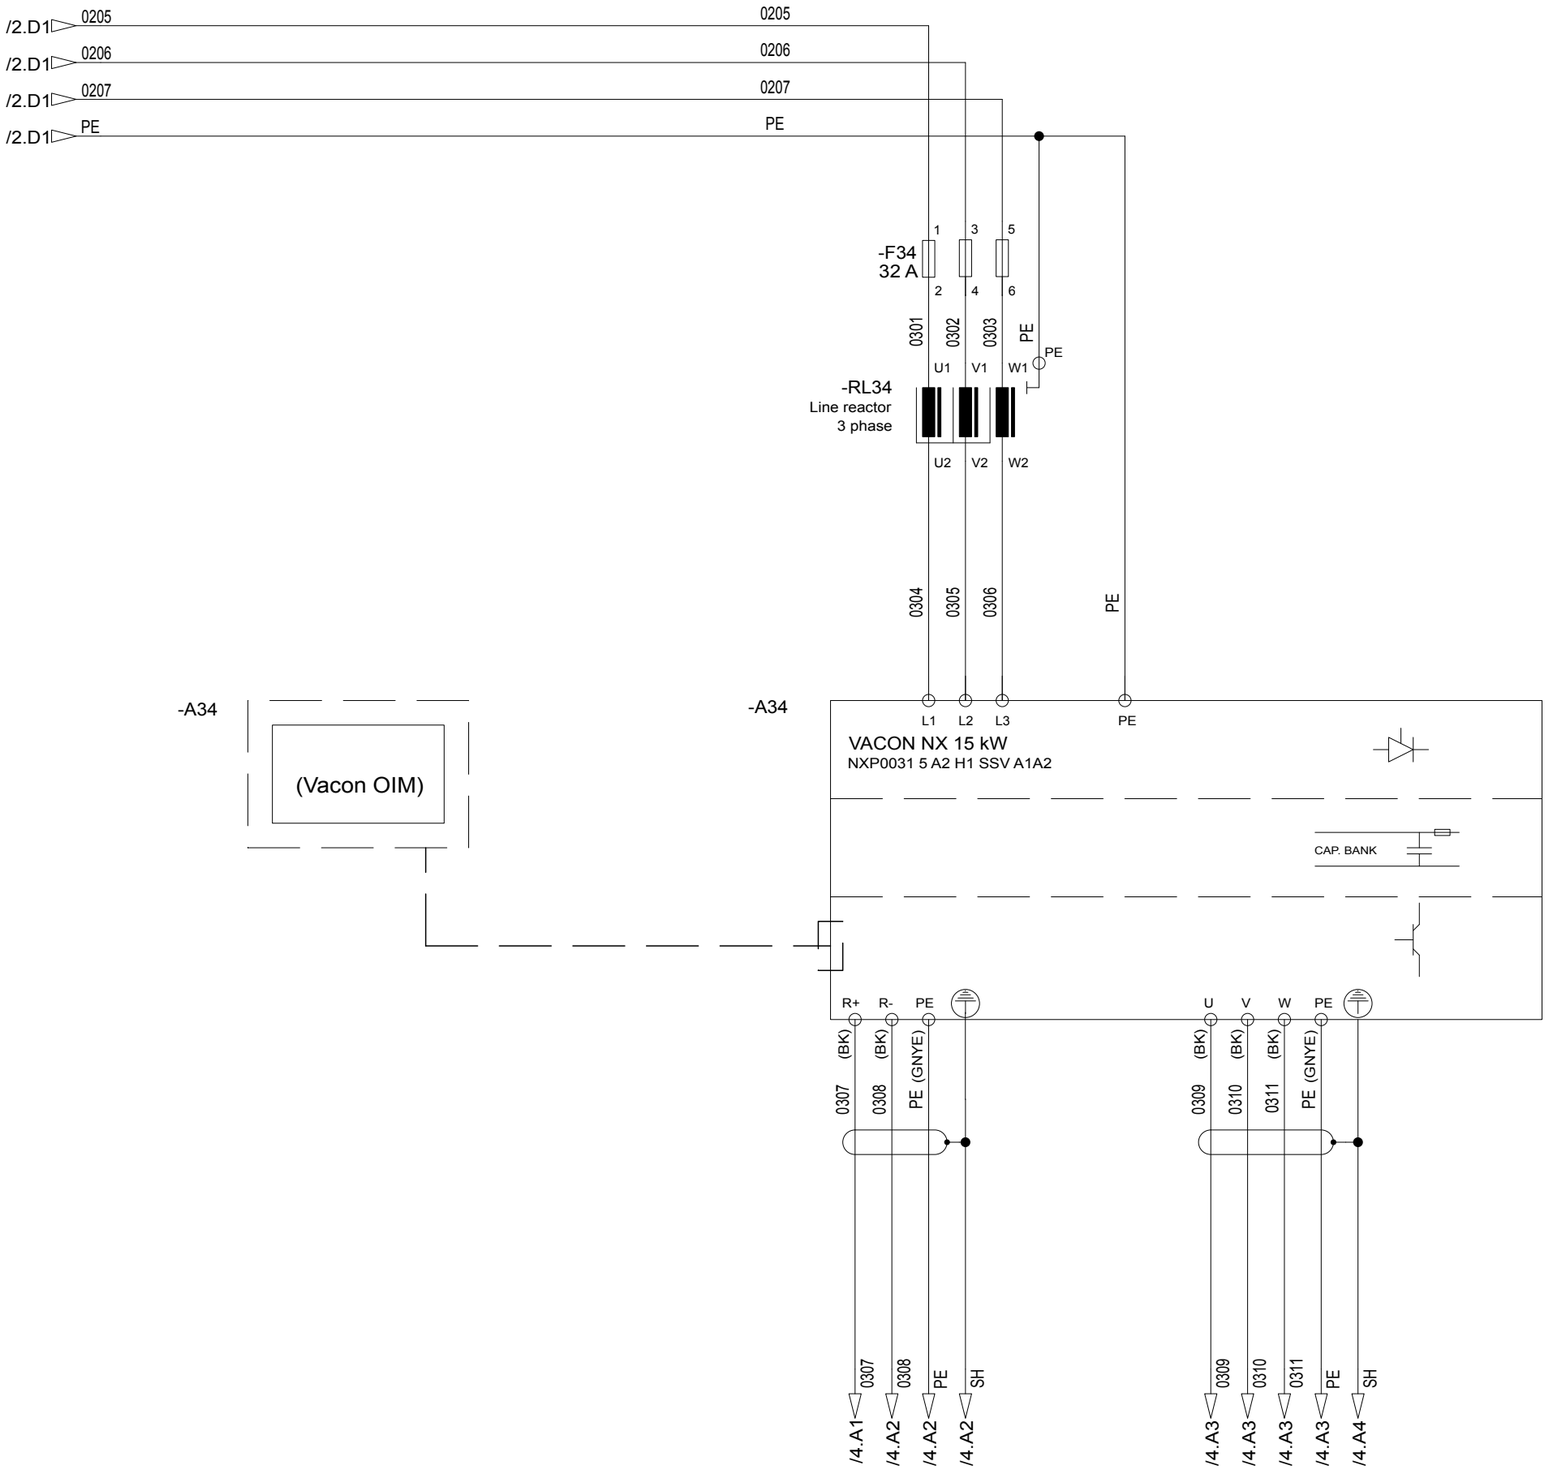

MAXIMUM ALLOWABLE CABLE LENGHT BETWEEN MOTORS AND PANEL 300 m

WARNING: IF THE POWER SUPPLY TO THE DRIVE IS DISCONNECTED, WAIT AT LEAST 1 MINUTE PRIOR TO RECONNECTING. NOT DOING SO MAY RESULT IN DAMAGE TO THE DRIVE.

Refer to sheet 1 for notes

No.	REVISION	BY	DATE
A	ISSUED FOR APPROVAL	DD	02/07/2012

TITLE: CAVOTEC NCC SYSTEM - 2 MOTORS, STEP CONTROL
VACON NXP DRIVE 15 kW

CLIENT

PROJECT: ZPMC SRILANKA

THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION AND LICENCE FROM CAVOTEC SPECIMAS SPA

DRWN DD
DATE 02/07/2012
CHKD
APPD


CAVOTEC
Connecting mobile equipment

+E01

SHEET No 3 OF 17

DWG No SC-121216-SE2

A

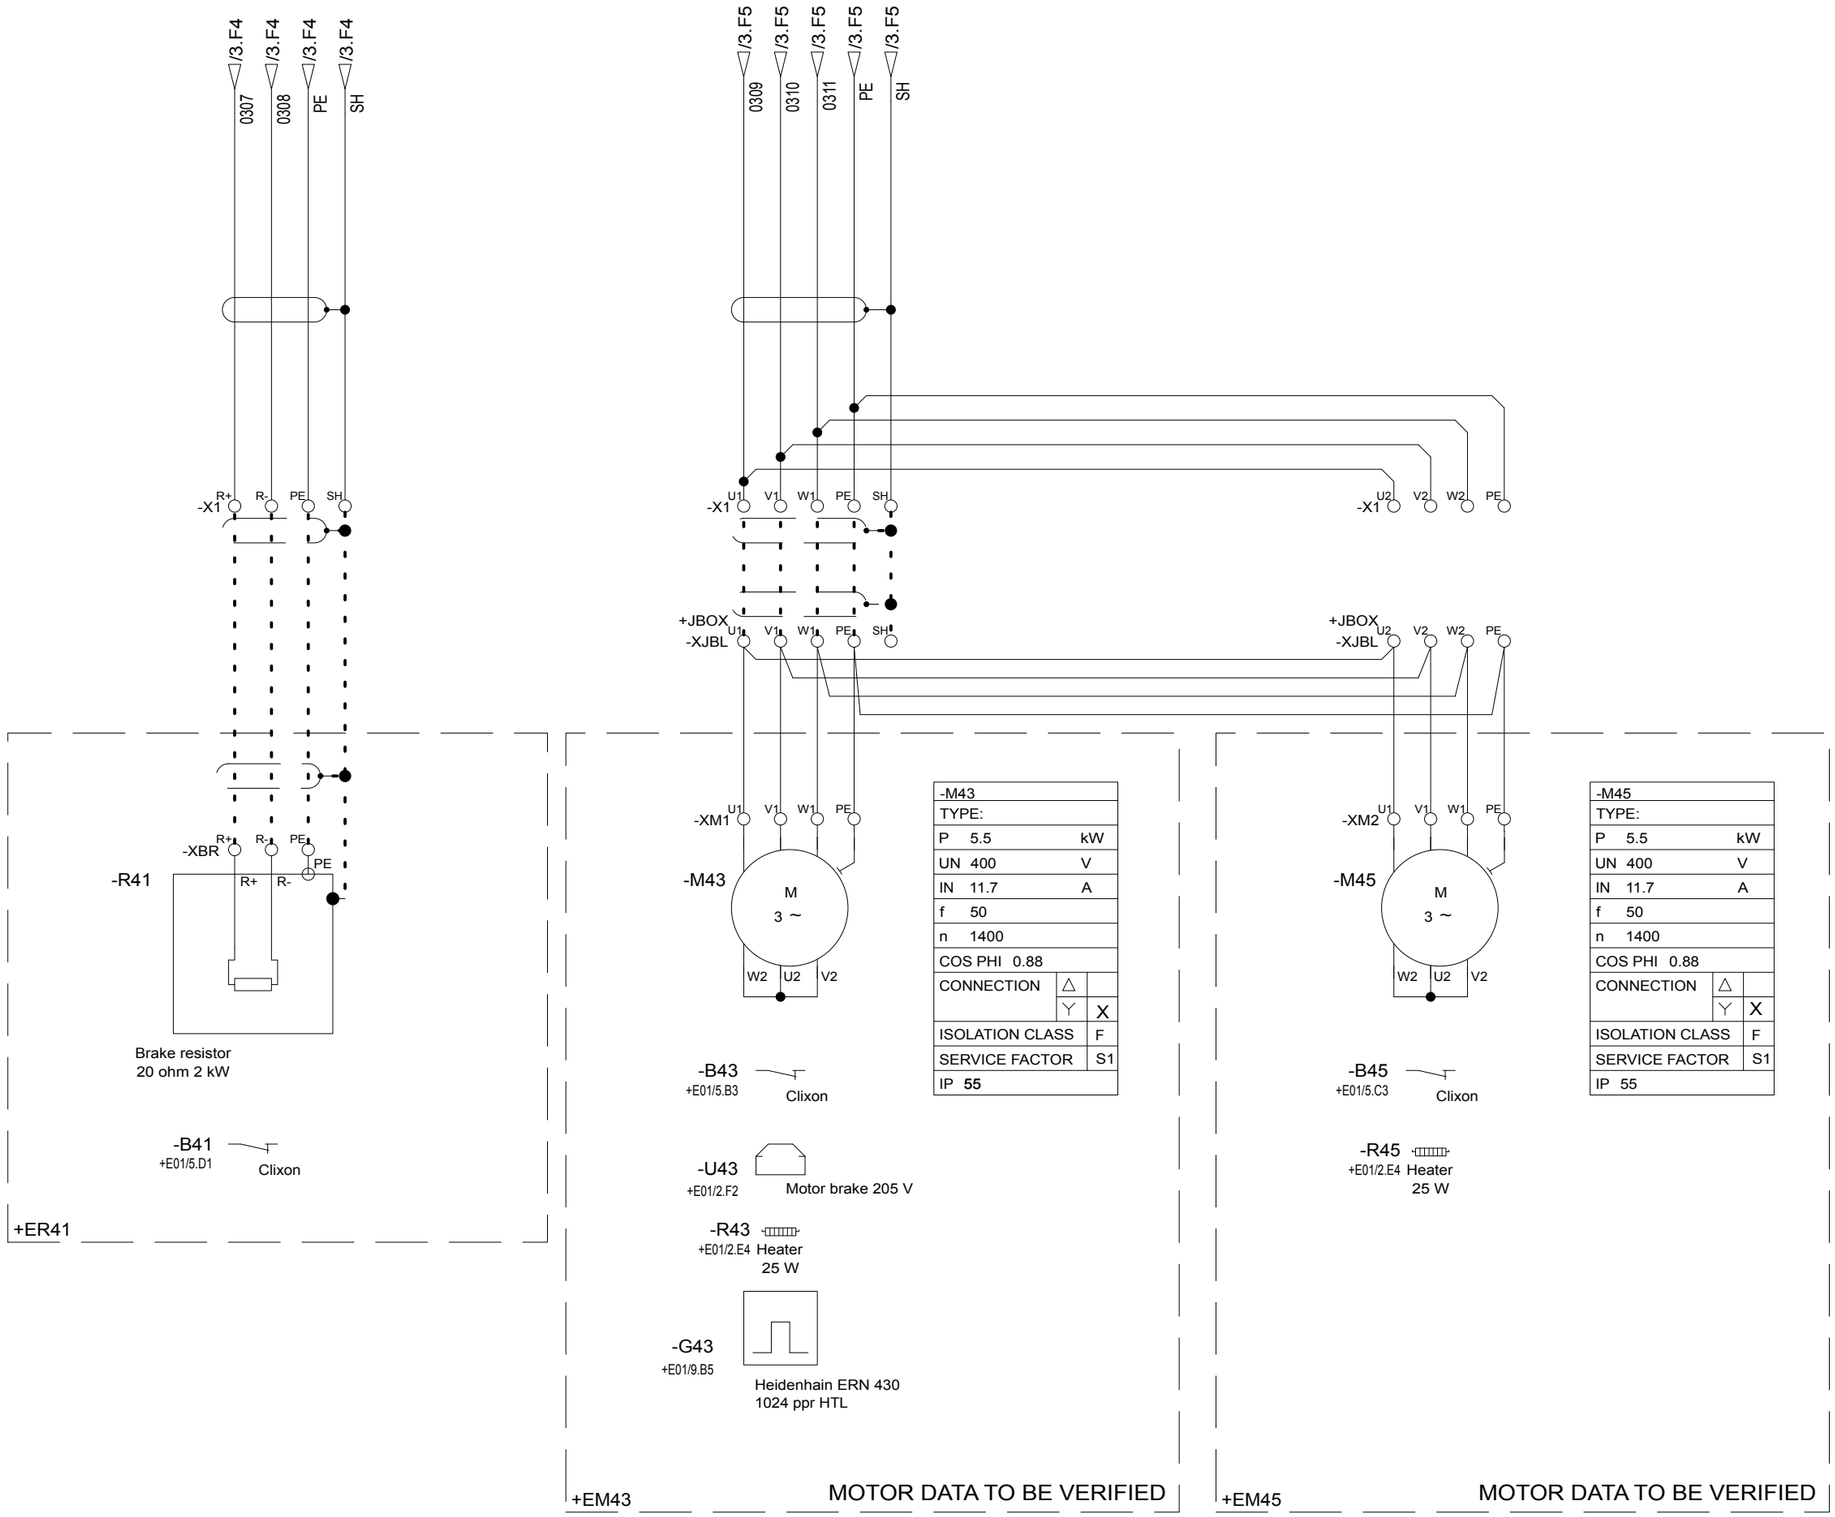

Refer to sheet 1 for notes

No.	REVISION	BY	DATE
B	MODIFIED MOTOR DATA	DD	17/10/2012
A	ISSUED FOR APPROVAL	DD	02/07/2012

TITLE: CAVOTEC NCC SYSTEM - 2 MOTORS, STEP CONTROL
REEL MOTOR - BRAKE RESISTOR

CLIENT

PROJECT: ZPMC SRILANKA

THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION AND LICENCE FROM CAVOTEC SPECIMAS SPA

DRWN	DD
DATE	02/07/2012
CHKD	
APPD	
SHEET No	4 OF 17
DWG No	SC-121216-SE2
	B

CAVOTEC
Connecting mobile equipment
+E01

DRIVE READY | DRIVE RUNNING | OVERHEATING MOTOR | DRUM FULL | DRUM EMPTY

230 V
/2.E6 0214 (RD)
50 Hz

0214 /6.A1

-A34 /9.E1 — 23 / 22 — 0501
-A34 /9.E2 — 26 / 25 — 0504
-K53 /5.E3 — 11 / 14 — 0502

-X2 3
-XBR T1
0502
-B41 +E01/4.E1 Clixon T1 / T2
Brake resistor clixon
0503
-XBR T2
+ER41
-X2 4
0503

-X2 5
+JBOX -XJBL 3
-XM1 C / T1
-B43 +E01/4.D3 Clixon
+EM43 -XM1 C / T2
Motor M43 clixon
+JBOX -XJBL 4
0505
+JBOX -XJBL 5
-XM2 C / T1
-B45 +E01/4.D5 Clixon
+EM45 -XM2 C / T2
Motor M45 clixon
+JBOX -XJBL 6
-X2 8
0506

-X2 11
+JBOX -XJBR 9
0214
+EFO -BF91 /9.B2 Cam 1 — 22 / 21
+JBOX -XJBR 10
-X2 14
0507

-X2 15
+JBOX -XJBR 11
0214
+EFO -BF91 /9.B2 Cam 2 — 32 / 31
+JBOX -XJBR 12
-X2 16
0508

-K51 /5.E1 — A1 / A2 — 0503
-K52 /5.E2 — A1 / A2 — 0504
-K53 /5.E3 — A1 / A2 — 0506
-K54 /5.E4 — A1 / A2 — 0507
-K55 /5.E5 — A1 / A2 — 0508

NEUTRAL
/2.E6 N (BU)
N /6.E1

-K51 /5.E1
12 14 11 / 22 / 24 21 / 32 / 34 31 / 42 / 44 41
/6.D5
/6.C2
/7.C1
/6.C3

-K52 /5.E2
14 13 / 22 21 / 32 31 / 44 43 / 54 53 / 62 61 / 72 71 / 84 83
/2.D2
/2.D3
/2.D4
/7.C2
/2.D4
/6.C1

-K53 /5.E3
12 14 11 / 22 / 24 21 / 32 / 34 31 / 42 / 44 41
/5.B1
/7.C6

-K54 /5.E4
12 14 11 / 22 / 24 21 / 32 / 34 31 / 42 / 44 41
/6.B2
/7.C8

-K55 /5.E5
12 14 11 / 22 / 24 21 / 32 / 34 31 / 42 / 44 41
/6.B3
/7.C7

Refer to sheet 1 for notes

No.	REVISION	BY	DATE
B	MODIFIED PAGE TITLE	DD	05/07/2012
A	ISSUED FOR APPROVAL	DD	02/07/2012

TITLE: CAVOTEC NCC SYSTEM - 2 MOTORS, STEP CONTROL
CONTROL 230 VAC

CLIENT

PROJECT: ZPMC SRILANKA

THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION AND LICENCE FROM CAVOTEC SPECIMAS SPA


DRWN DD
DATE 02/07/2012
CHKD
APPD

CAVOTEC Connecting mobile equipment

+E01

SHEET No 5 OF 17

DWG No SC-121216-SE2 B

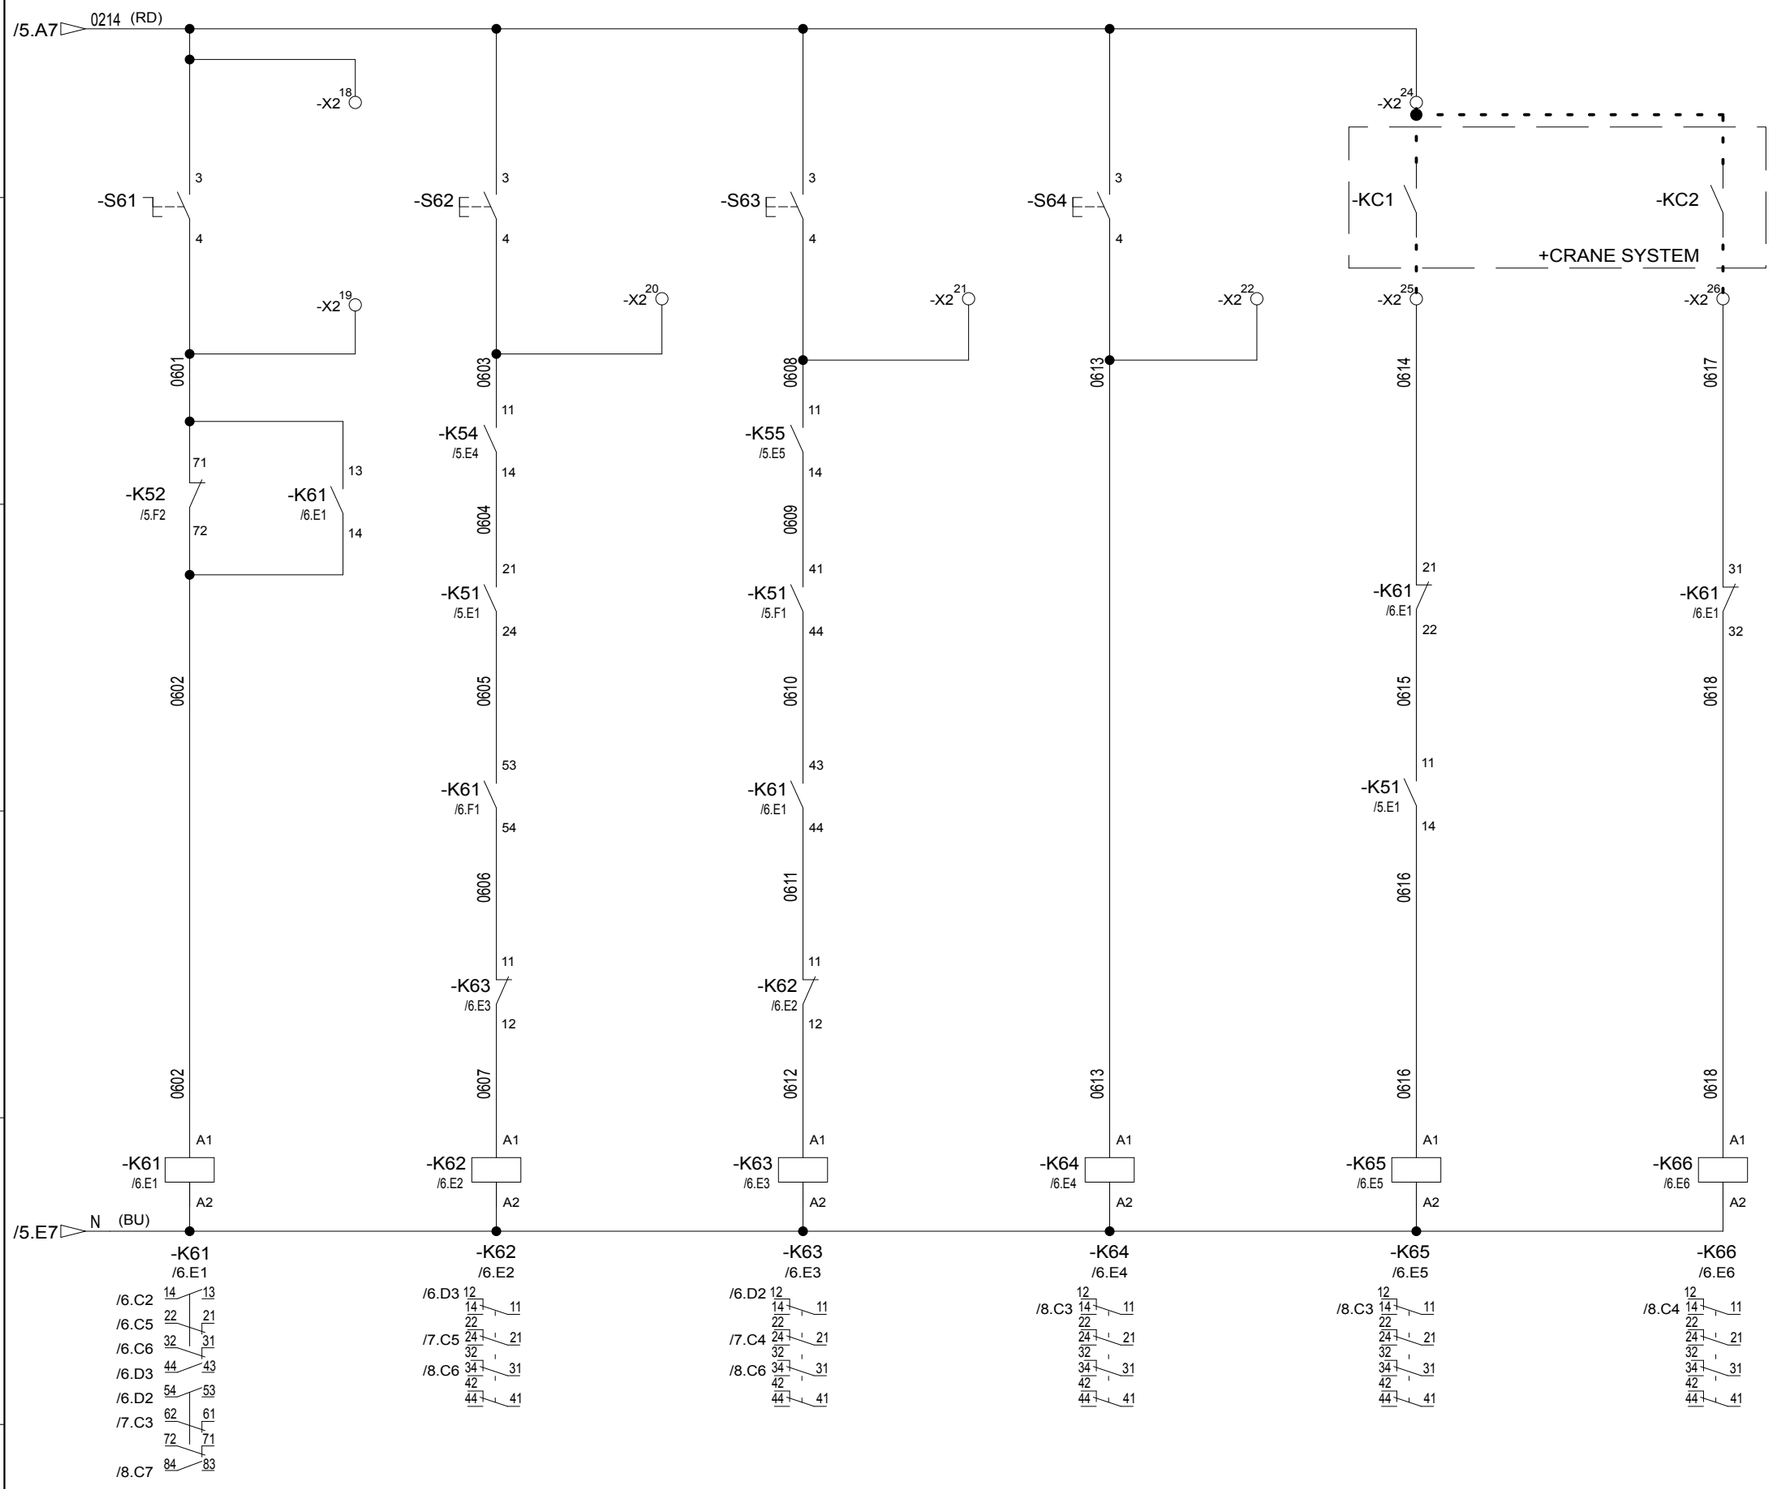

NOTES

The following control signals are to be provided by others:

- KC1 machine moving, to be active whenever the machine is moving. 6 second delay off except in case of emergency.
- KC2 reeling out signal. Note that this signal must be deactivated as soon as the machine stops.

-S61 is auto/manual selector on control panel
-S62 is manual reel in push button on control panel
-S63 is manual reel out push button on control panel
-S64 is fault reset push button on control panel

-SL1 is remote manual/auto selector on remote control station
-SL2 is remote manual reel in push button on remote control station
-SL3 is remote manual reel out push button on remote control station
-SL4 is remote fault reset push button on remote control station

Refer to sheet 1 for additional notes.

No.	REVISION	BY	DATE
B	MODIFIED PAGE TITLE	DD	05/07/2012
A	ISSUED FOR APPROVAL	DD	02/07/2012

TITLE: CAVOTEC NCC SYSTEM - 2 MOTORS, STEP CONTROL
CONTROL 230 VAC

CLIENT

PROJECT: ZPMC SRILANKA

THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION AND LICENCE FROM CAVOTEC SPECIMAS SPA

DRWN DD
DATE 02/07/2012
CHKD
APPD

CAVOTEC Connecting mobile equipment

+E01


SHEET No 6 OF 17

DWG No SC-121216-SE2

B

NOTES

24VDC/3A, 250VAC/3A maximum allowable switching load for each contact.
Total maximum allowable load at the common terminal is 10A.

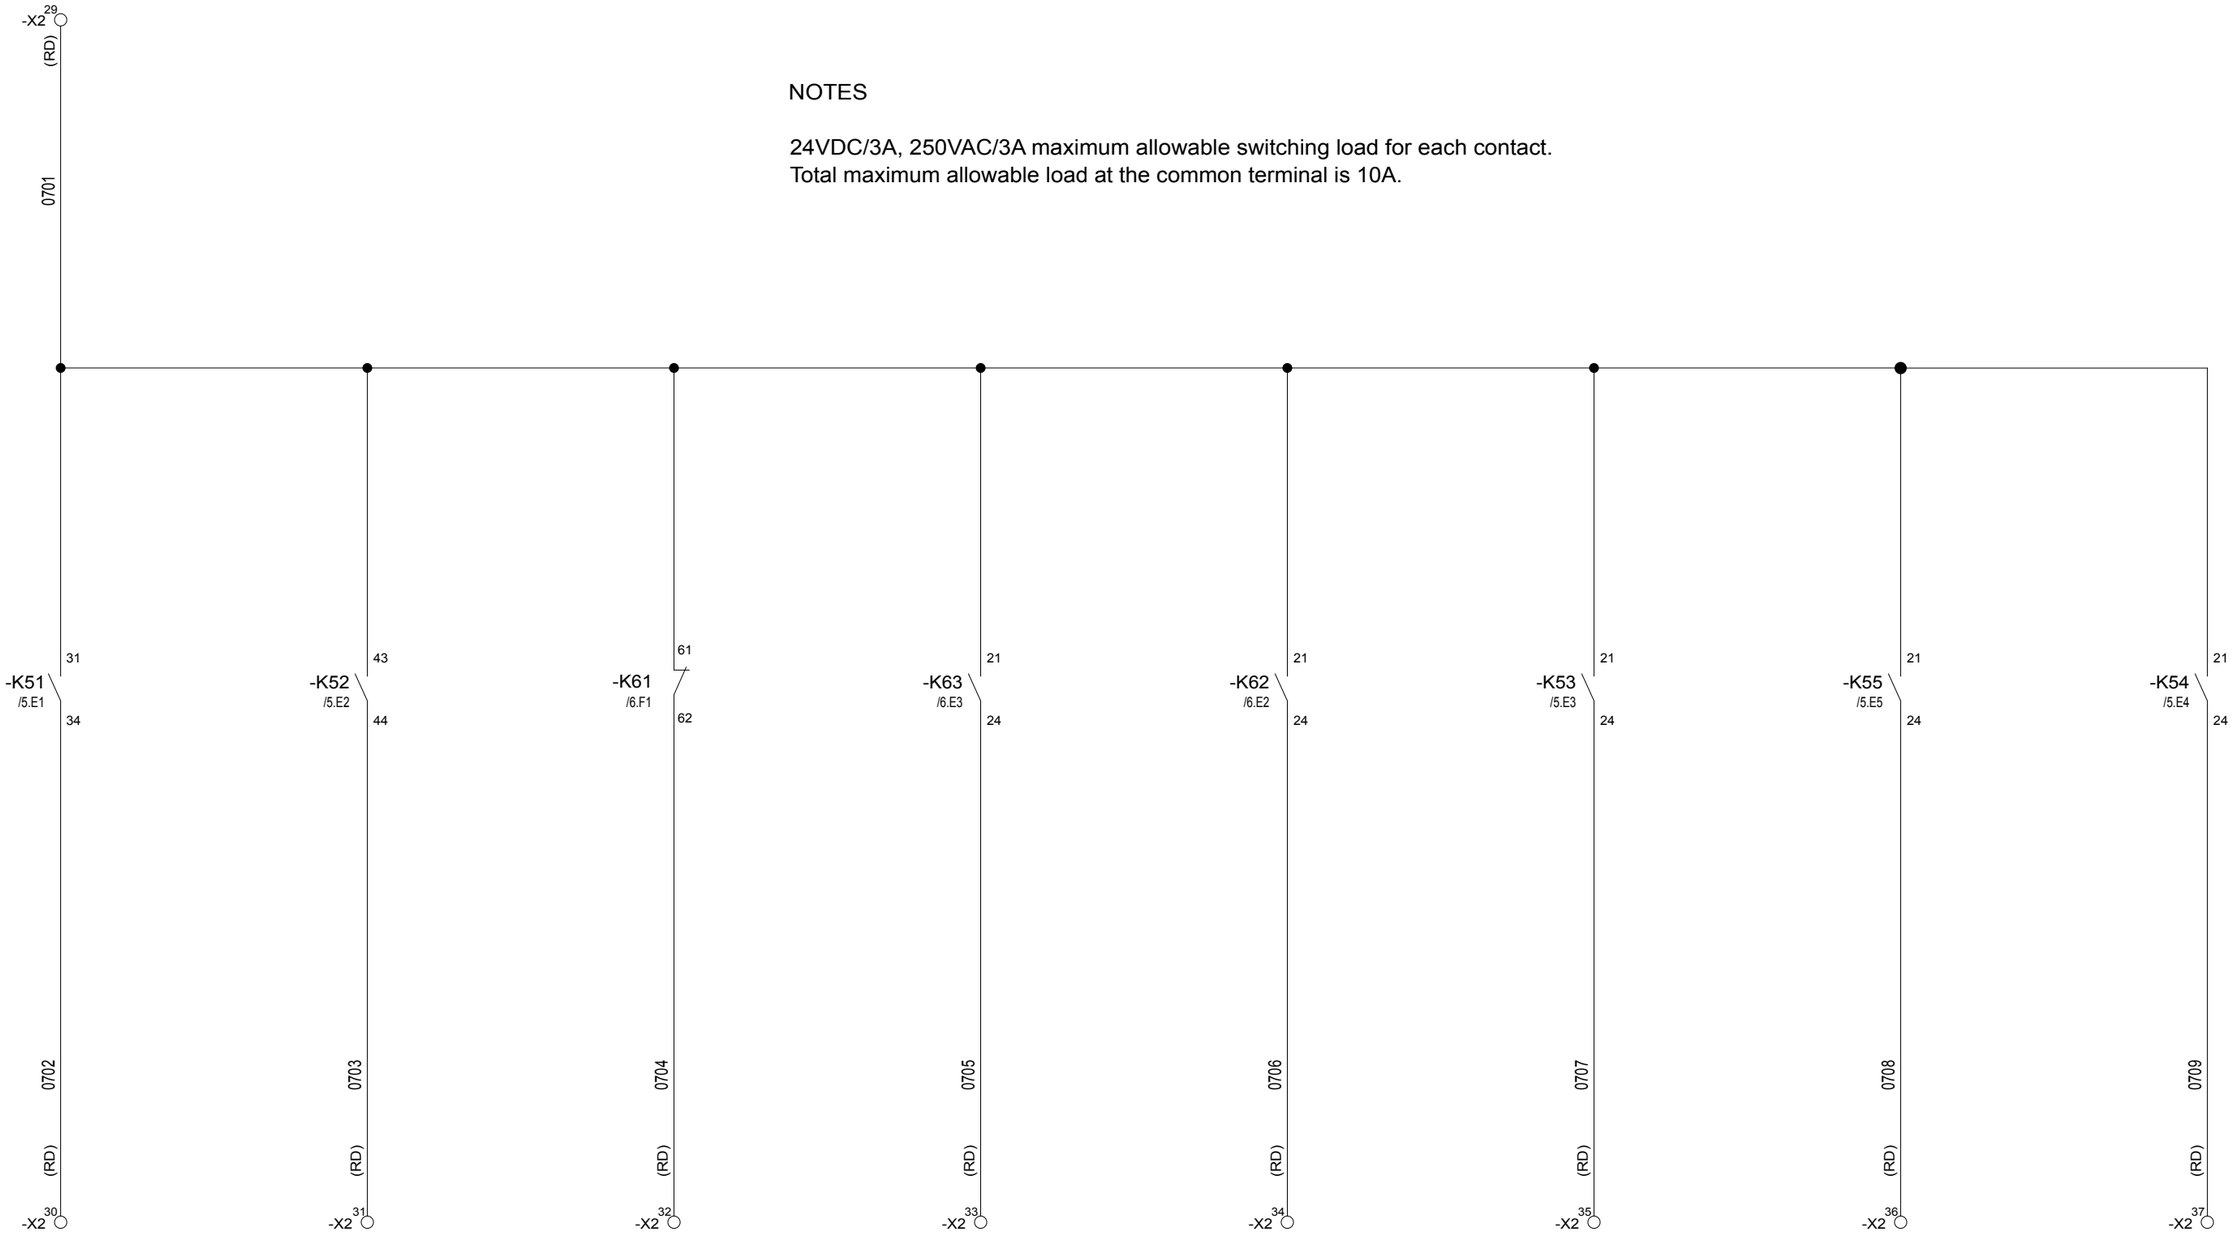

DRIVE READY

DRIVE RUNNING

AUTOMATIC MODE SELECTED

MANUAL REELING OUT

MANUAL REELING IN

MOTORS OVER-TEMPERATURE FAULT

DRUM EMPTY FAULT

DRUM FULL

Refer to sheet 1 for notes

No.	REVISION	BY	DATE
A	ISSUED FOR APPROVAL	DD	02/07/2012

TITLE: CAVOTEC NCC SYSTEM - 2 MOTORS, STEP CONTROL
CLIENT FEEDBACK

CLIENT:

PROJECT: ZPMC SRILANKA

THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION AND LICENCE FROM CAVOTEC SPECIMAS SPA

DRWN DD
DATE 02/07/2012
CHKD
APPD


CAVOTEC
Connecting mobile equipment

+E01

SHEET No 7 OF 17

DWG No SC-121216-SE2

A

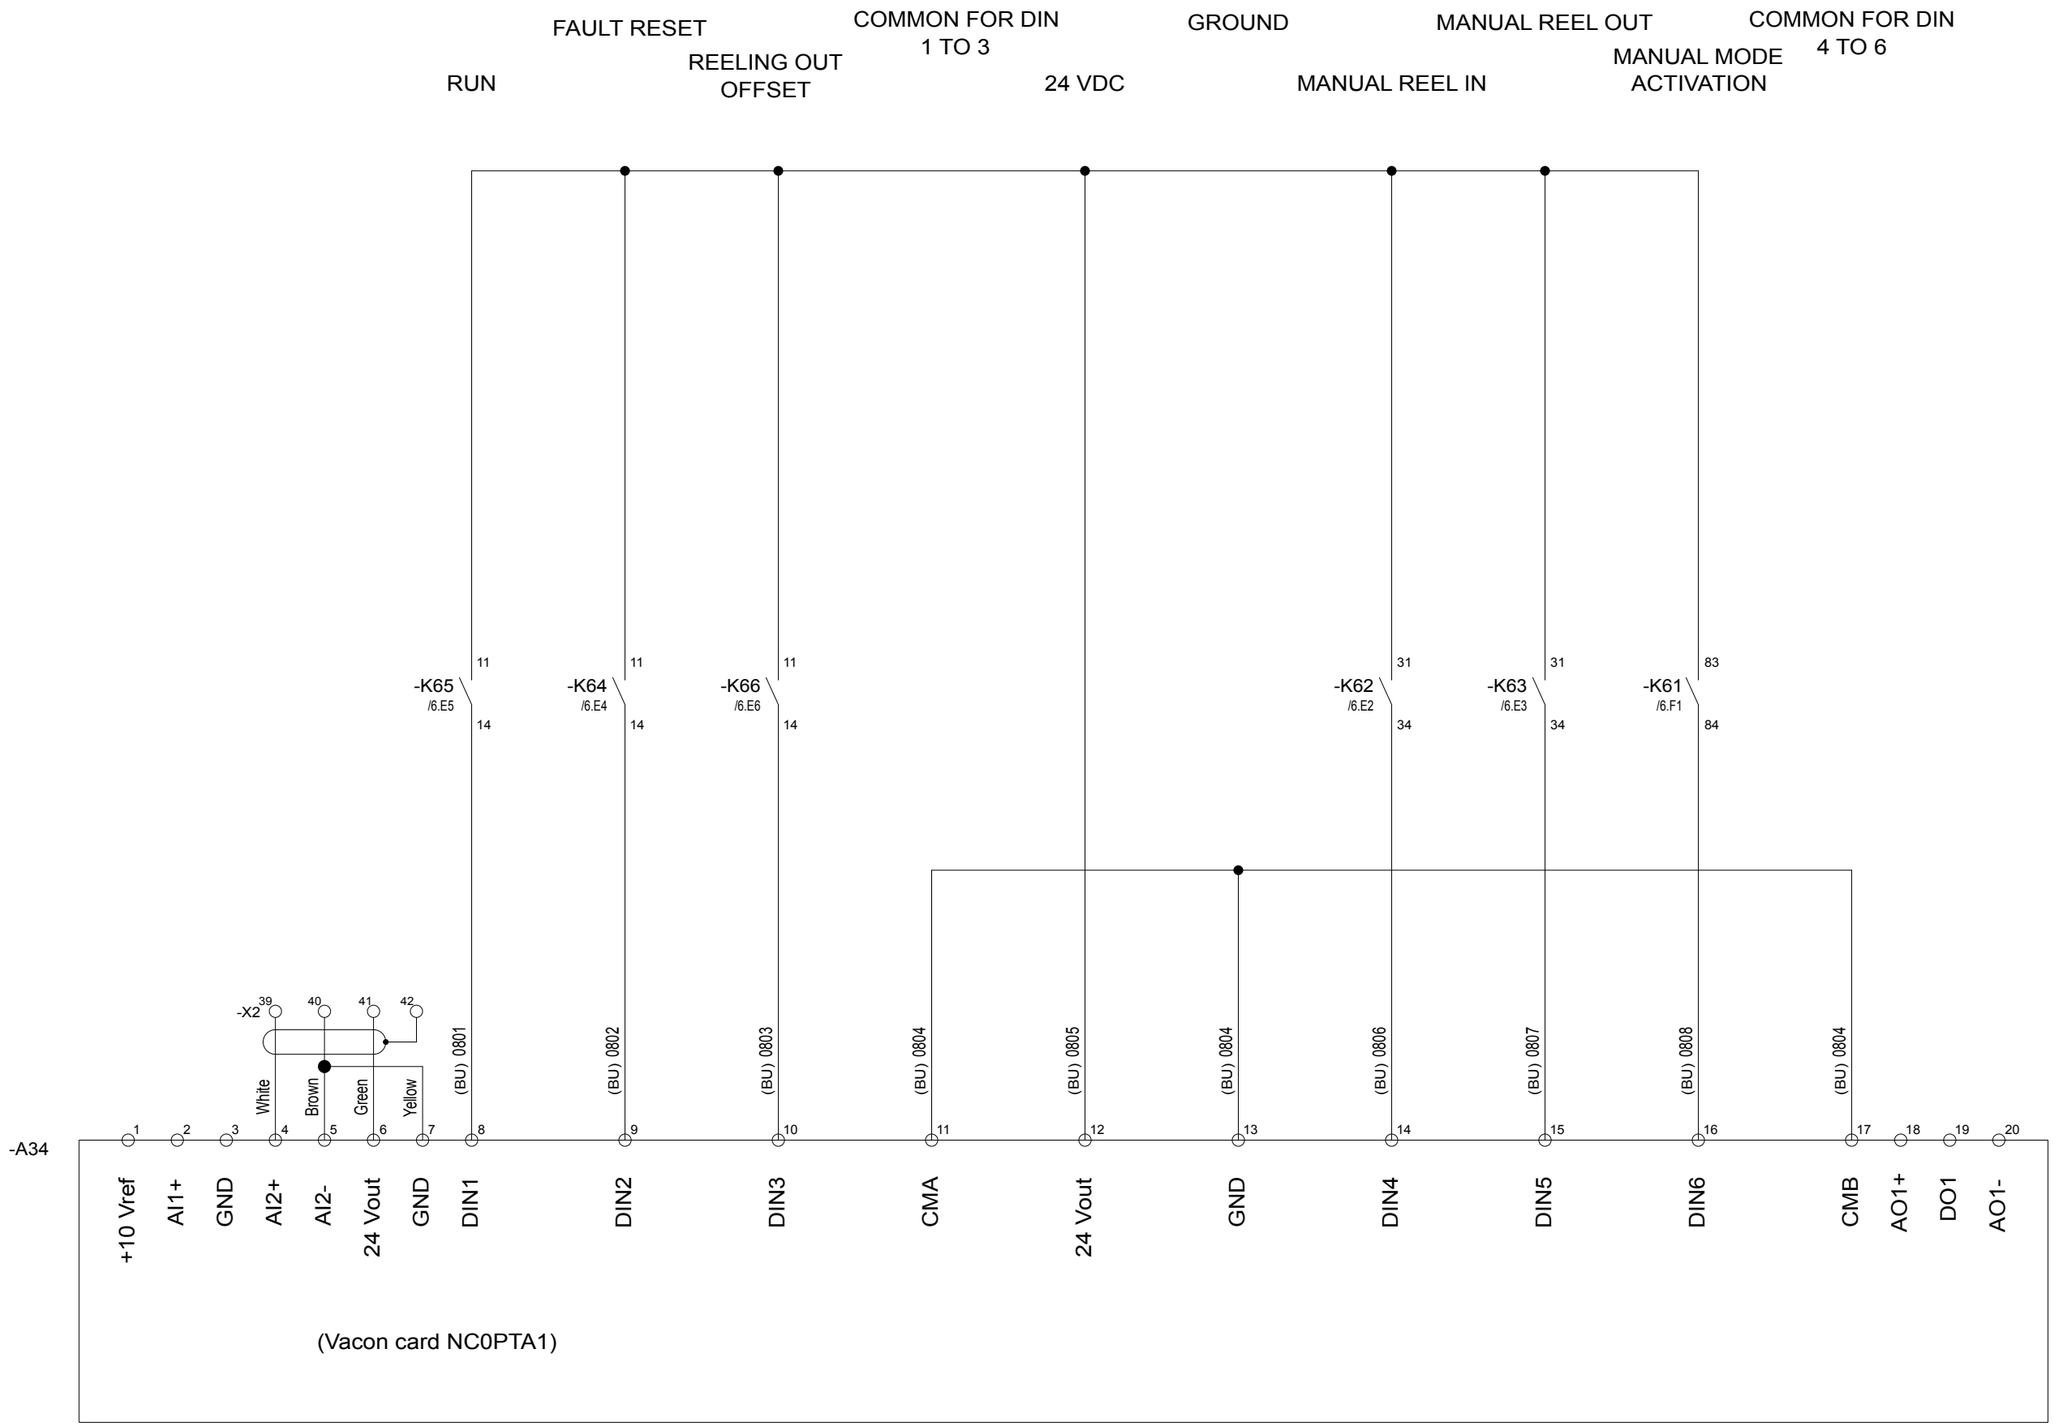

Refer to sheet 1 for notes

No.	REVISION	BY	DATE
A	ISSUED FOR APPROVAL	DD	02/07/2012

TITLE
CAVOTEC NCC SYSTEM - 2 MOTORS, STEP CONTROL
NC0PTA1 OPTION BOARD

CLIENT

PROJECT
ZPMC SRILANKA


THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION AND LICENCE FROM CAVOTEC SPECIMAS SPA


DRWN	DD		
DATE	02/07/2012		
CHKD		APPD	
SHEET No	8 OF 17	DWG No	SC-121216-SE2


CAVOTEC
Connecting mobile equipment


+E01


A

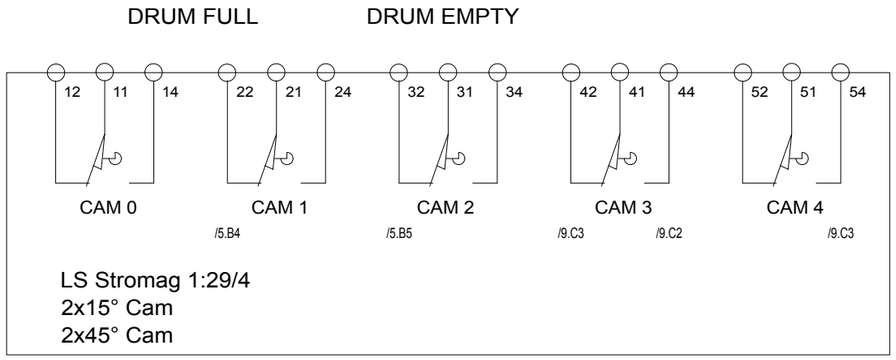

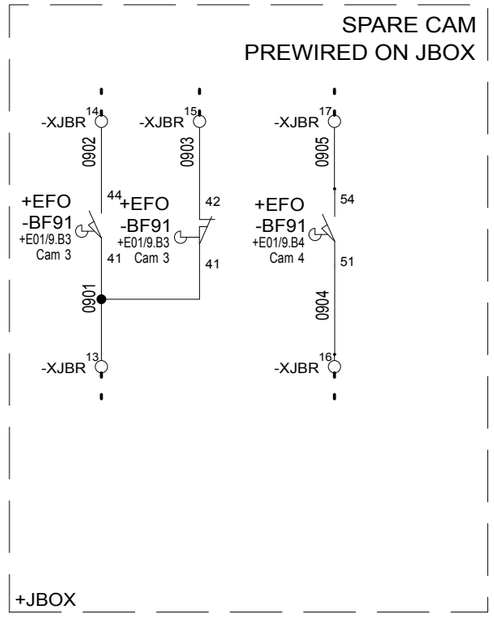

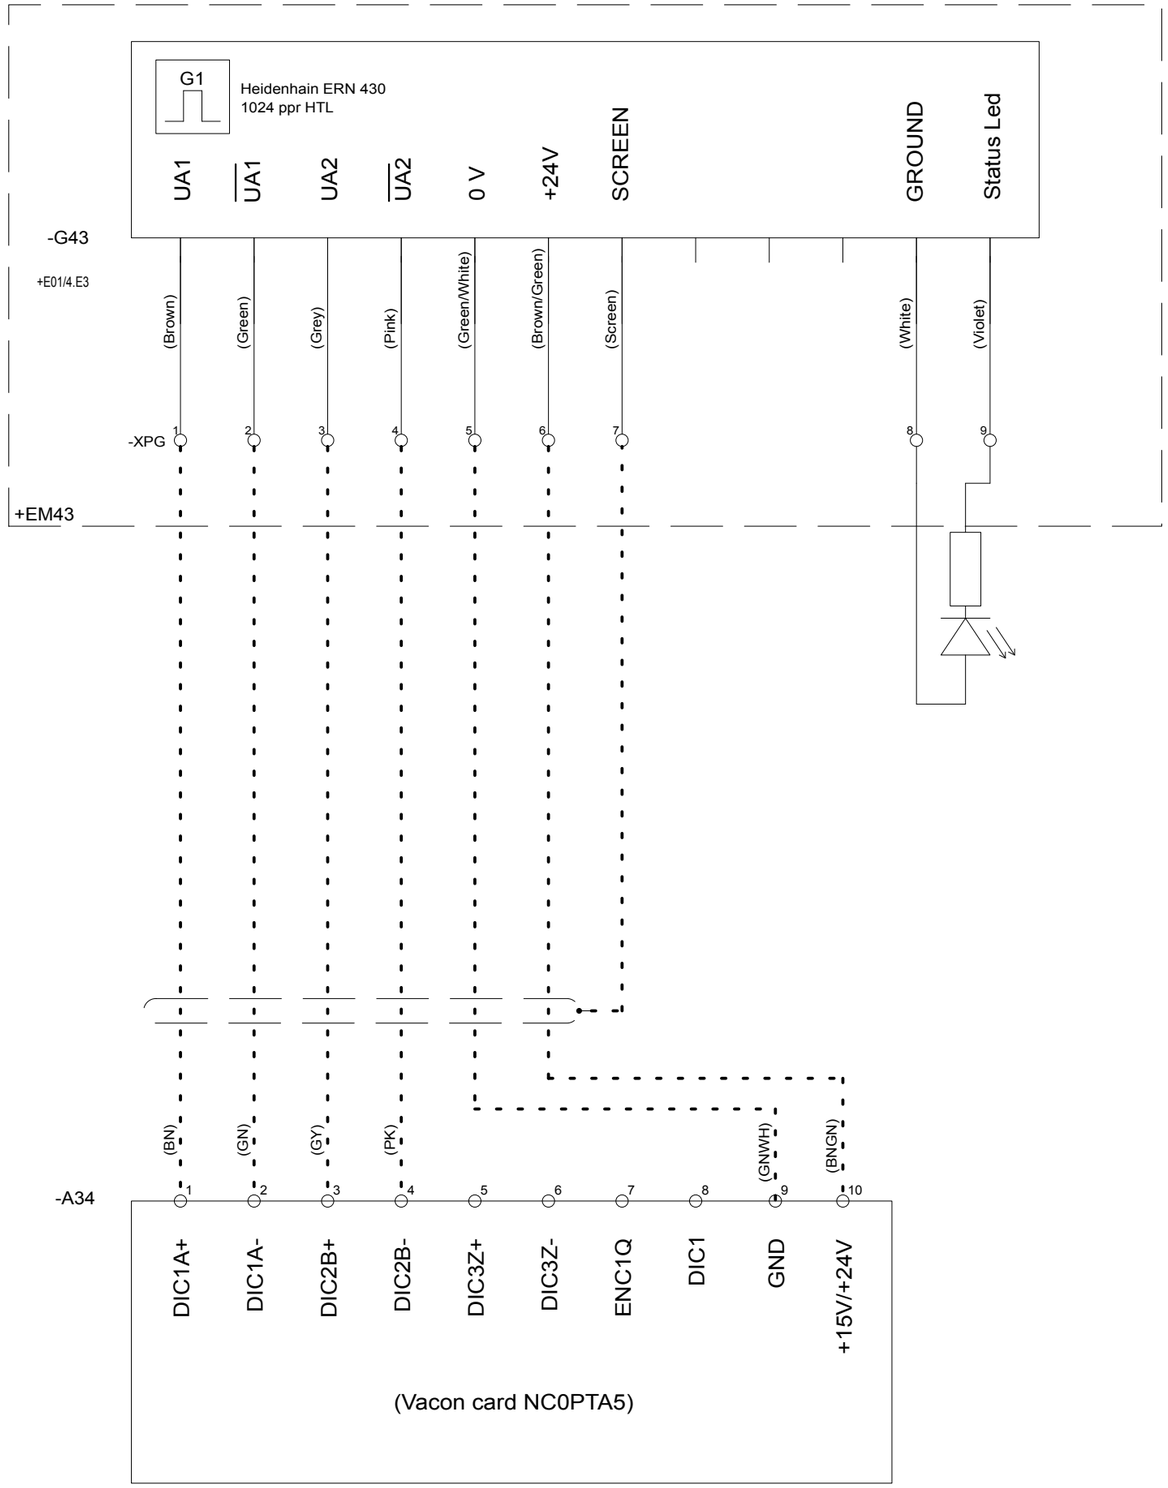

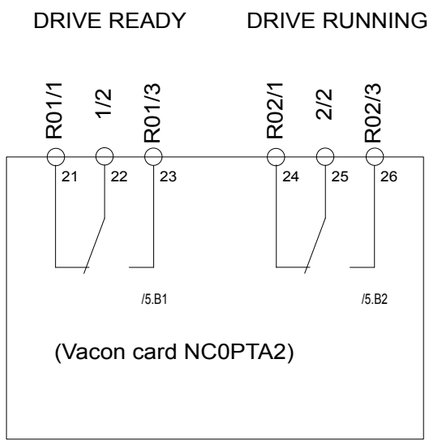

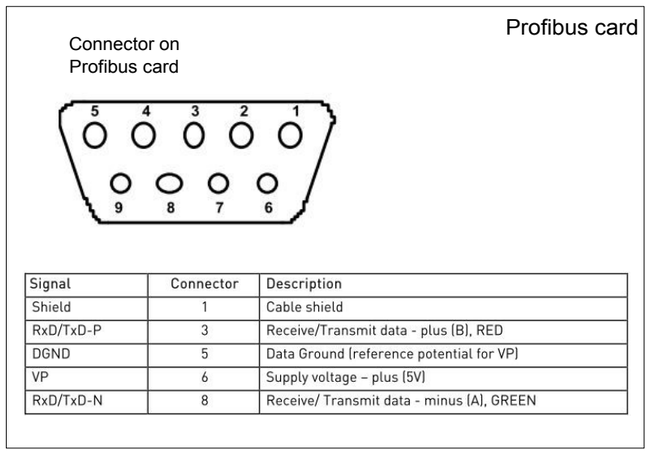

Signal	Connector	Description
Shield	1	Cable shield
RxD/TxD-P	3	Receive/Transmit data - plus (B), RED
DGND	5	Data Ground (reference potential for VP)
VP	6	Supply voltage – plus (5V)
RxD/TxD-N	8	Receive/ Transmit data - minus (A), GREEN

Refer to sheet 1 for notes

No.	REVISION	BY	DATE
A	ISSUED FOR APPROVAL	DD	02/07/2012

TITLE: CAVOTEC NCC SYSTEM - 2 MOTORS, STEP CONTROL
DRIVE BOARD, ENCODER, ROTARY LIMIT SWITCH

CLIENT

PROJECT: ZPMC SRILANKA


THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION AND LICENCE FROM CAVOTEC SPECIMAS SPA

DRWN DD
DATE 02/07/2012
CHKD
APPD

CAVOTEC
Connecting mobile equipment

+E01

SHEET No 9 OF 17
DWG No SC-121216-SE2
A

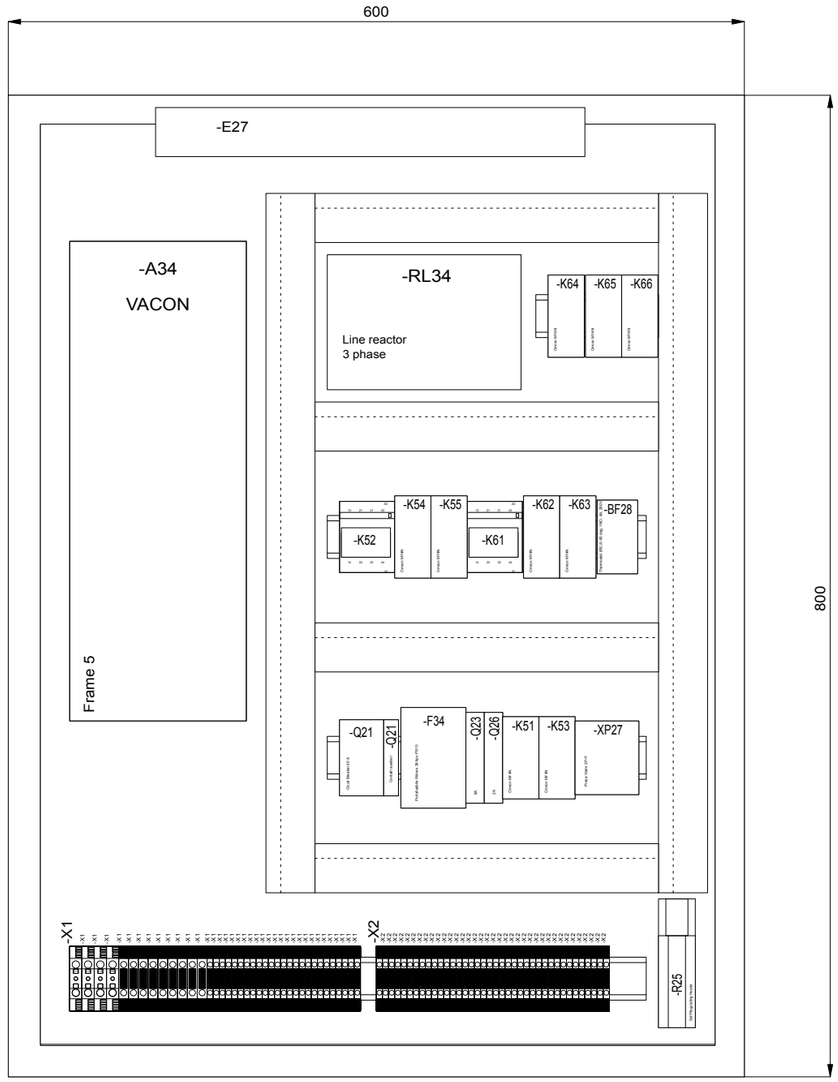

INSTALLATION DRAWING
STD-BE-004 - Box CTC painted 600x800x300

Refer to sheet 1 for notes

No.	REVISION	BY	DATE
A	ISSUED FOR APPROVAL	DD	02/07/2012

TITLE: CAVOTEC NCC SYSTEM - 2 MOTORS, STEP CONTROL PANEL LAYOUT

CLIENT

PROJECT: ZPMC SRILANKA

THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION AND LICENCE FROM CAVOTEC SPECIMAS SPA

DRWN DD
DATE 02/07/2012
CHKD APPD

CAVOTEC Connecting mobile equipment


+E01

SHEET No 10 OF 17

DWG No SC-121216-SE2 A

terminal strip

-X1

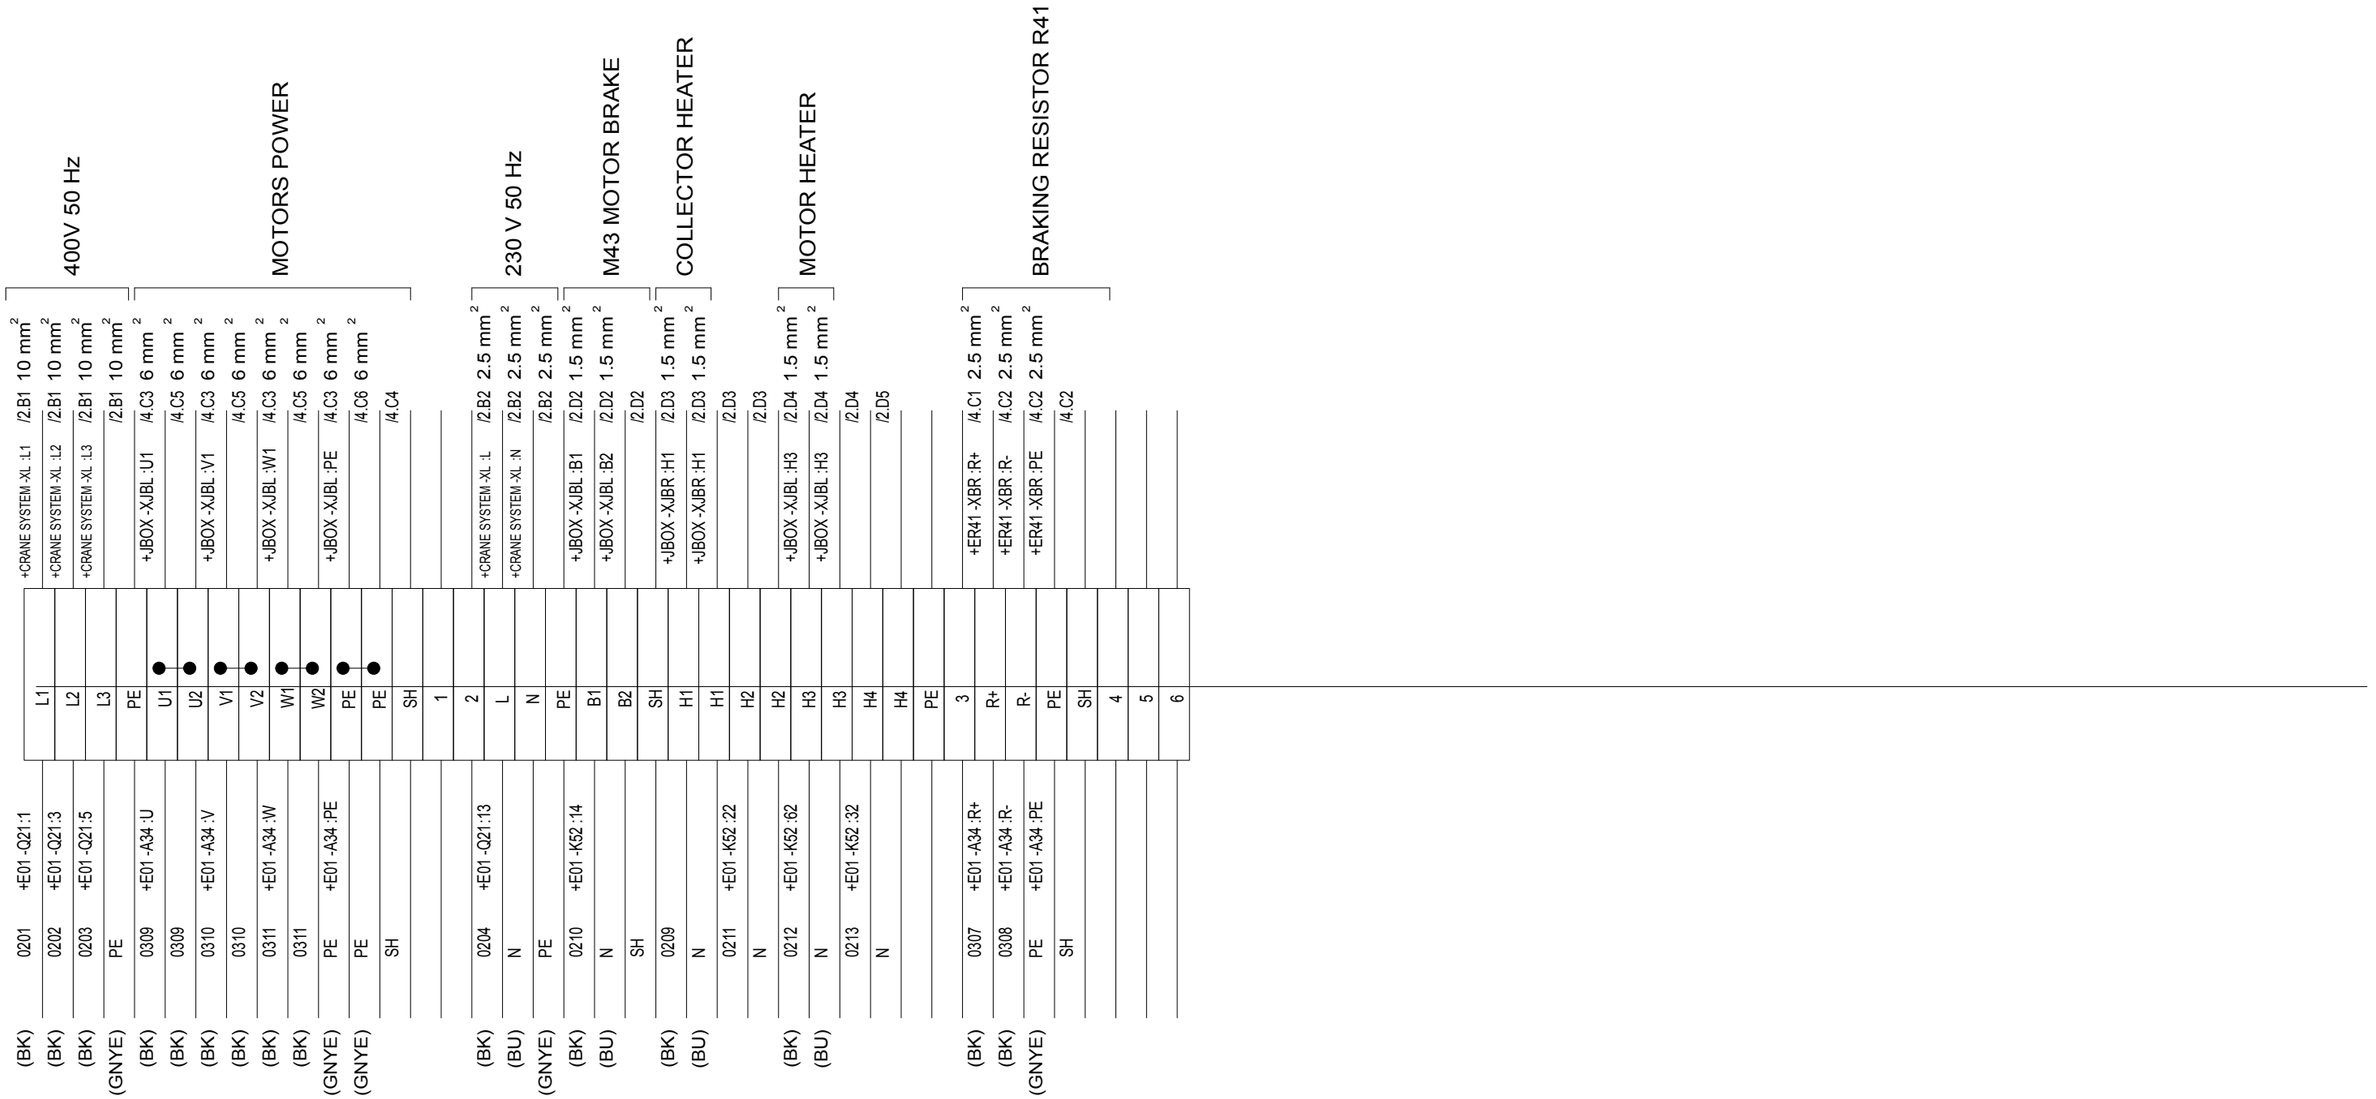

terminal

terminal

terminal 1020200000 [U1 - PE , PE , SH]

terminal

No.	REVISION	BY	DATE
C	MODIFIED SUGGESTED MOTOR CABLE SIZE	DD	20/07/2012
B	MODIFIED DESCRIPTION FOR TENSION LEVEL	DD	05/07/2012
A	ISSUED FOR APPROVAL	DD	02/07/2012

TITLE: CAVOTEC NCC SYSTEM - 2 MOTORS, STEP CONTROL
POWER TERMINAL

CLIENT

PROJECT: ZPMC SRILANKA

THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION AND LICENCE FROM CAVOTEC SPECIMAS SPA

DRWN DD
DATE 02/07/2012
CHKD
APPD

CAVOTEC
Connecting mobile equipment

+E01

SHEET No 11 OF 17

DWG No SC-121216-SE2

C


terminal strip

-X2

| | | |

terminal strip

-XM1

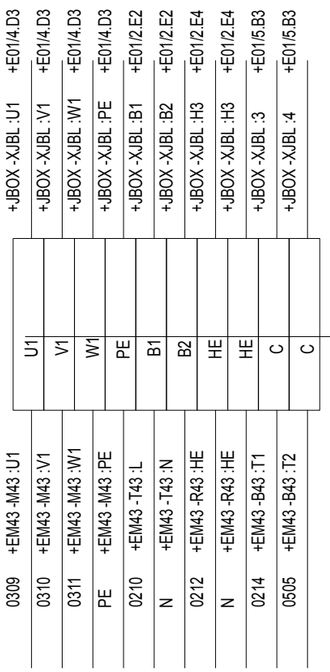

terminal _____

terminal _____

terminal _____


terminal _____

A	ISSUED FOR APPROVAL	DD	02/07/2012	TITLE: CAVOTEC NCC SYSTEM - 2 MOTORS, STEP CONTROL MOTOR TERMINAL	THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION AND LICENCE FROM CAVOTEC SPECIMAS SPA	DRWN DD DATE 02/07/2012 CHKD APPD	+EM43
No.	REVISION	BY	DATE	CLIENT / PROJECT: ZPMC SRILANKA		SHEET No 13 OF 17	DWG No SC-121216-SE2 A

CAVOTEC
Connecting mobile equipment

terminal strip

-XPG

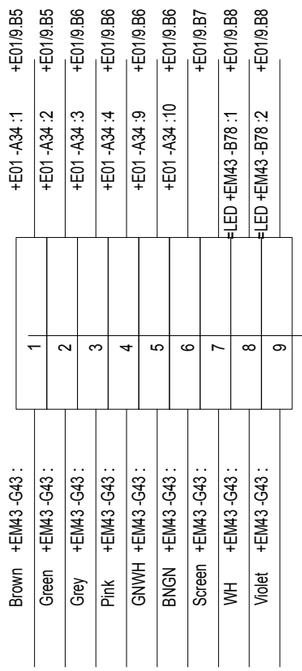

terminal _____

terminal _____


terminal _____

terminal _____

A	ISSUED FOR APPROVAL	DD	02/07/2012	TITLE: CAVOTEC NCC SYSTEM - 2 MOTORS, STEP CONTROL ENCODER TERMINAL	THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION AND LICENCE FROM CAVOTEC SPECIMAS SPA	DRWN DD DATE 02/07/2012 CHKD APPD	CAVOTEC Connecting mobile equipment +EM43
No.	REVISION	BY	DATE	CLIENT / PROJECT: ZPMC SRILANKA		SHEET No 14 OF 17	DWG No SC-121216-SE2 A

terminal strip

-XM2

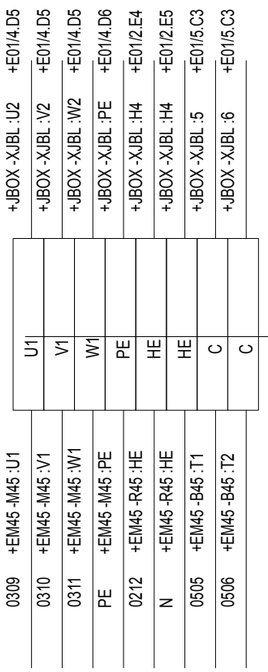

terminal _____

terminal _____

terminal _____


terminal _____

A	ISSUED FOR APPROVAL	DD	02/07/2012	TITLE: CAVOTEC NCC SYSTEM - 2 MOTORS, STEP CONTROL MOTOR TERMINAL	THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION AND LICENCE FROM CAVOTEC SPECIMAS SPA	DRWN DD DATE 02/07/2012 CHKD APPD	+EM45
No.	REVISION	BY	DATE	CLIENT / PROJECT: ZPMC SRILANKA		SHEET No 15 OF 17 DWG No SC-121216-SE2	A

CAVOTEC
Connecting mobile equipment

terminal strip

-XJBR

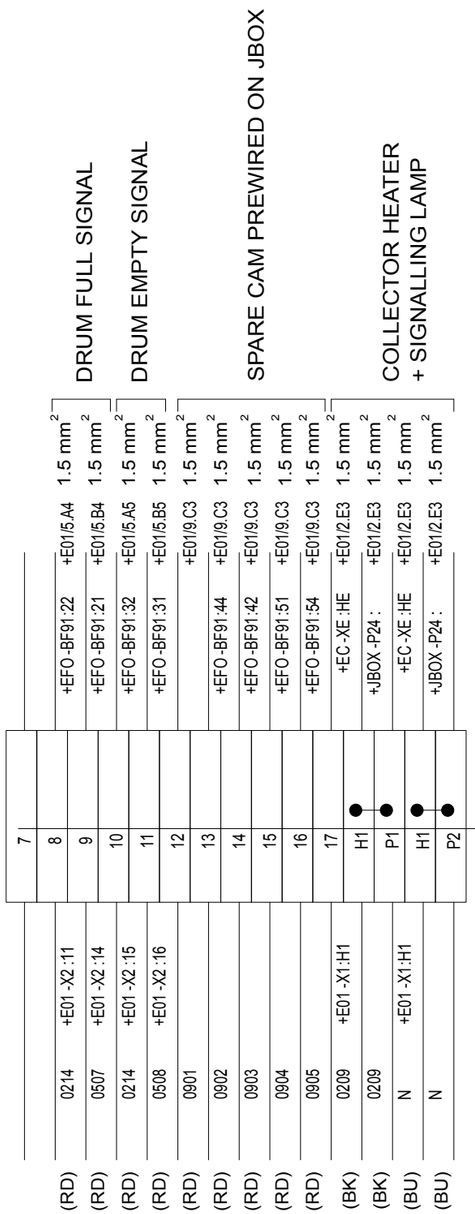

terminal _____

terminal _____

terminal _____

terminal _____

B	ADDED TERMINALS FOR SIGNALLING LAMP	DD	08/10/2012
A	ISSUED FOR APPROVAL	DD	02/07/2012
No.	REVISION	BY	DATE

TITLE: CAVOTEC NCC SYSTEM - 2 MOTORS, STEP CONTROL
JUNCTION BOX RIGHT SIDE

CLIENT

PROJECT: ZPMC SRILANKA

THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION AND LICENCE FROM CAVOTEC SPECIMAS SPA

DRWN DD
DATE 02/07/2012
CHKD
APPD

CAVOTEC
Connecting mobile equipment

+JBOX


SHEET No 16 OF 17

DWG No SC-121216-SE2

B

terminal strip

-XJBL

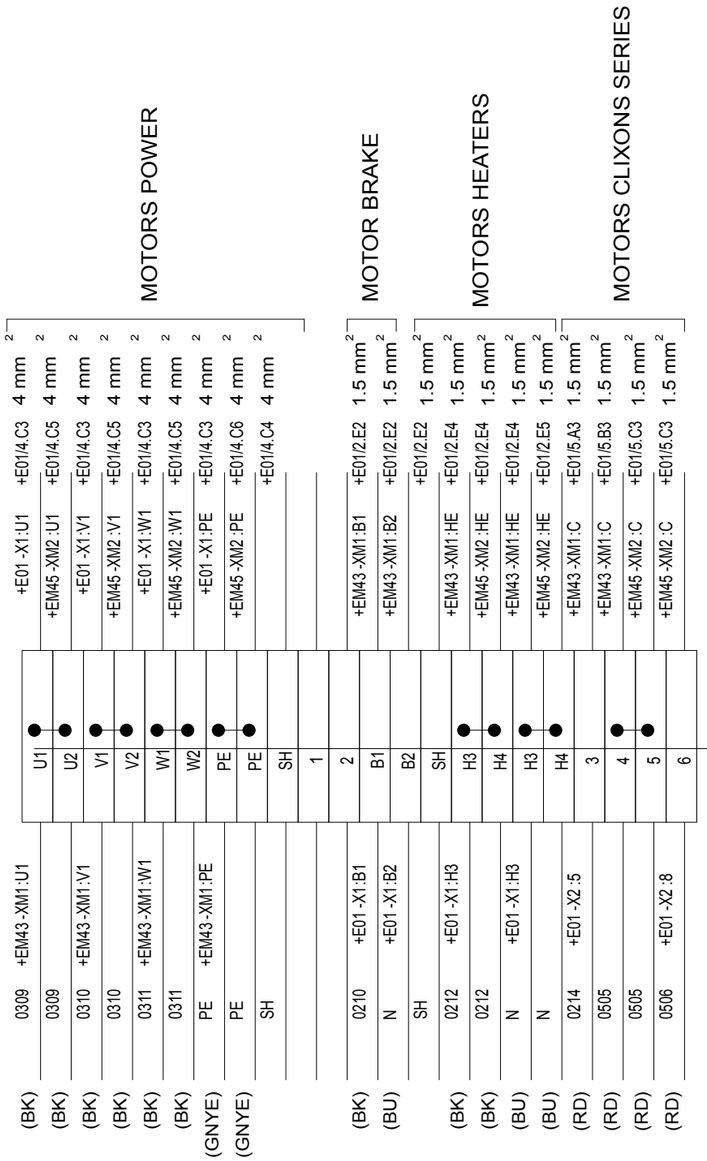

terminal _____

terminal _____

terminal _____

terminal _____

A	ISSUED FOR APPROVAL	DD	02/07/2012	TITLE: CAVOTEC NCC SYSTEM - 2 MOTORS, STEP CONTROL JUNCTION BOX LEFT SIDE		DRWN DD DATE 02/07/2012 CHKD APPD	+JBOX
No.	REVISION	BY	DATE	CLIENT	PROJECT: ZPMC SRILANKA	SHEET No 17 OF 17	DWG No SC-121216-SE2 A

THIS DESIGN IS THE PROPERTY OF CAVOTEC SPECIMAS SPA AND IS ONLY TO BE USED WITH EXPRESS PERMISSION AND LICENCE FROM CAVOTEC SPECIMAS SPA

CAVOTEC Connecting mobile equipment

Item: 121216	Cable reel	T5.1.NCC.(2x5kW).4 VM922-38G KV26-4S-FC-R		Client	ZPMC	Project		SRI LANKA
Client Cable								
	Cable section mm^2	*Cable Number*	*Current/ voltage*	*Core color*	*Ring number*	*Brushgear number*	*Terminal board Socket drum box*	*Note*
Cable Type : 30x2,5				**Collector power ring : KV26/4S/FC/R**				
Wiring cable 1x2,5 mmq Y/G	2,5	1	500 V	Yellow/ Green	PE	PE	1	Earth slipring
Wiring cable 1x2,5 mmq Black	2,5	2	500 V	Black	2	2	2	
Wiring cable 1x2,5 mmq Black	2,5	3	500 V	Black	3	3	3	
Wiring cable 1x2,5 mmq Black	2,5	4	500 V	Black	4	4	4	
Wiring cable 1x2,5 mmq Black	2,5	5	500 V	Black	5	5	5	
Wiring cable 1x2,5 mmq Black	2,5	6	500 V	Black	6	6	6	
Wiring cable 1x2,5 mmq Black	2,5	7	500 V	Black	7	7	7	
Wiring cable 1x2,5 mmq Black	2,5	8	500 V	Black	8	8	8	
Wiring cable 1x2,5 mmq Black	2,5	9	500 V	Black	9	9	9	
Wiring cable 1x2,5 mmq Black	2,5	10	500 V	Black	10	10	10	
Wiring cable 1x2,5 mmq Black	2,5	11	500 V	Black	11	11	11	
Wiring cable 1x2,5 mmq Black	2,5	12	500 V	Black	12	12	12	
Wiring cable 1x2,5 mmq Black	2,5	13	500 V	Black	13	13	13	
Wiring cable 1x2,5 mmq Black	2,5	14	500 V	Black	14	14	14	
Wiring cable 1x2,5 mmq Black	2,5	15	500 V	Black	15	15	15	
Wiring cable 1x2,5 mmq Black	2,5	16	500 V	Black	16	16	16	
Wiring cable 1x2,5 mmq Black	2,5	17	500 V	Black	17	17	17	
Wiring cable 1x2,5 mmq Black	2,5	18	500 V	Black	18	18	18	
Wiring cable 1x2,5 mmq Black	2,5	19	500 V	Black	19	19	19	
Wiring cable 1x2,5 mmq Black	2,5	20	500 V	Black	20	20	20	
Wiring cable 1x2,5 mmq Black	2,5	21	500 V	Black	21	21	21	
Wiring cable 1x2,5 mmq Black	2,5	22	500 V	Black	22	22	22	
Wiring cable 1x2,5 mmq Black	2,5	23	500 V	Black	23	23	23	
Wiring cable 1x2,5 mmq Black	2,5	24	500 V	Black	24	24	24	
Wiring cable 1x2,5 mmq Black	2,5	25	500 V	Black	25	25	25	
Wiring cable 1x2,5 mmq Black	2,5	26	500 V	Black	26	26	26	
Wiring cable 1x2,5 mmq Black	2,5	27	500 V	Black	27	27	27	Silvered Ring
Wiring cable 1x2,5 mmq Black	2,5	28	500 V	Black	28	28	28	Silvered Ring
Wiring cable 1x2,5 mmq Black	2,5	29	500 V	Black	29	29	29	Silvered Ring
Wiring cable 1x2,5 mmq Black	2,5	30	500 V	Black	30	30	30	Silvered Ring
							31	Screen Cables 27+28
							32	Screen Cables 29+30

Drum box 32 poles

Functional Description – Step control

Project:	ZPMC SRILANKA	Document No:	SC-121216-FD2
Client:		Revision:	B
Job No:	121216	Date:	30 October 2012

Reference is to be made to drawing SC-121216-SE2

NOTATION

Q21	Circuit breaker
F34	Fuse
RL34	Line reactor
A34	Frequency converter
M43, M45	Motor
R41	Braking resistor
Q23, Q26	Circuit breakers with thermal overloads
U43	Brake
E27	Enclosure light
XP27	Auxiliary power supply
R23	Collector heater
R25	Control panel heater
R43, R45	Motors heaters
BF28	Thermostat
M28	Enclosure Fan
B41	Brake Resistor Clixon
B43, B45	Motors Clixons
G43	Encoder
Kxxx	Relays and contactors
S61	Manual/Auto selector switch
S62	Manual reel in push button
S63	Manual reel out push button
S64	Fault reset push button
KC1	Machine moving signal (client supply)
KC2	Reeling out signal (client supply)
BF91 cam0	Anti-hysteresis rotary limit switch
BF91 cam1	Drum full rotary limit switch
BF91 cam2	Drum empty rotary limit switch
BF91 cam3-4	Spare (prewired on jbox)

Functional Description – Step control

Project:	ZPMC SRILANKA	Document No:	SC-121216-FD2
Client:		Revision:	B
Job No:	121216	Date:	30 October 2012

FUNCTIONAL SUMMARY

The reeling system is designed to recover and payout cable using 2 torque levels. This is achieved using a Vacon NXP flux vector drive together with some relay. The payout torque value is lower than the recovery torque value in order to compensate for mechanical inefficiencies within the drive system.

CLIENT SUPPLY

- Stable 400 VAC & 230 VAC 50Hz fused power supplies , free from harmonic disturbance.
- All interconnecting cabling between:
    1. Reel motors/brake rectifier supply, signal of motor clixons to reel control center (RCC). Motors and brake cables should be screened
    2. Braking resistor/Braking resistor clixon and RCC
    3. Collector enclosure heater, motor heaters to RCC
    4. Encoder terminal box to RCC, encoder cable must be screened
    5. Geared rotary limit switches to RCC
    6. Limit switches on cable guide and the crane control system (MCC)
    7. Voltage free output signal from the reel control panel to the crane control system
- Voltage free signals to the reel control panel as follows:
    - Machine moving signal **KC1**, which is to be activated whenever the machine is moving. This signal is to remain active for at least 6 seconds after completion of any machine movement except in the case of an emergency stop.
    - Reeling out' signal **KC2**, Reeling out signal which is to be activated whenever the spreader moves downwards. Note that this signal must be deactivated as soon as the spreader stops.

DETAILED FUNCTIONAL DESCRIPTION

The Vacon NXP drive acts to control the torque output of the motors using flux vector technology. An encoder mounted on one of the motors provides feedback to the drive, enabling accurate torque control even at zero motor speed. A brake mounted on one of the motors acts to prevent the cable unwinding when the drive isn't operating. Clixon switches mounted inside the motors act to prevent operation of the reeling system if any over-heating is detected. A braking resistor mounted near the control panel acts to dissipate the energy generated by the motors when the cable is pulled off the reel; also this device is protected from over-heating by a clixon switch. The drive is always powered on, if the supply voltage has not been disconnected by Q21 disconnecting switch.

The reel acts to maintain adequate cable tension between itself and the spreader during all modes of operation. The reeling out signal is used to maintain a step decrease of motor torque in order to compensate for mechanical inefficiencies when the cable is pulled off the drum. When the spreader stops, the motors continue operating at the normal torque level (ie. no offsets applied) until the spreader-moving signal is lost.

For installation, commissioning and maintenance purposes, it is possible to operate the reeling system in manual mode. This can be activated by means of the relevant pushbuttons on reel control panel door. When the manual selector switch is set in 'manual mode', Manual Reel In or Manual Reel Out pushbuttons will cause the reel to wind or unwind cable in speed control mode at a pre-set speed. The relay control logic enables the manual mode selection only if the cable reel is not moving.

A geared rotary limit switch acts to indicate reel full and reel empty condition. Both condition should initiate an emergency stop of the Spreader. Two other switches (45° cams) are for Client's use.

The heaters supply need to be energised at all times; motor heaters supply will be disconnected by the control panel relais circuit, when the motor are energized. The anti-condensation heaters mounted in the collector housing need to be energised at all times.

FEEDBACK

The following feedback signals are provided:

Reeler drive ready
Reeler drive running
Automatic mode selected (to be interlocked with machine movement to prevent movement while in manual mode)
Manual reeling out active
Manual reeling in active
Motor over-temperature fault
Drum empty fault
Drum full


NOTE

If the Vacon drive is switched off, please wait 1 minute before re-energising it. Not doing so may result in damage to the drive.

CAVOTEC SPECIMAS SPA
A MANUFACTURING COMPANY OF THE CAVOTEC GROUP

Operating Description of Bollard Damping System


Document No:	STD-TD-002	Revision:	A	Date:	16 October 2002

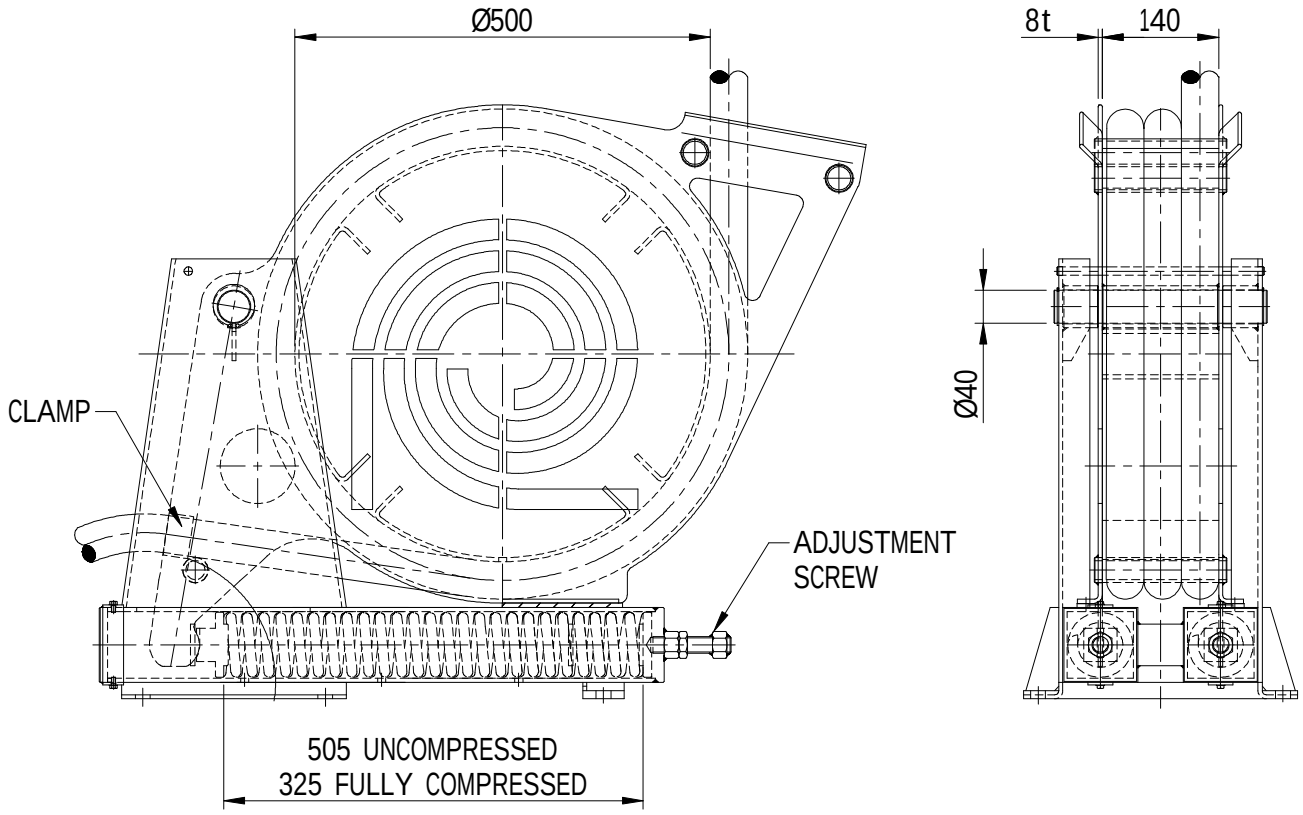

Referring to the figure above, the cable is wrapped 2.25 times around a ϕ500 drum and clamped at the position indicated. The drum pivots on plain bearings around a ϕ50 stainless steel shaft. Lever arms form an integral part of the drum side plates, and these act to depress two springs as the cable pulls upwards on the drum. The springs each have a stiffness of 29 N/mm, and have been designed for a minimum fatigue life of 2 million cycles, confirmed by testing. An adjustment screw allows the spring to be pre-compressed by up to 30 mm. The cable tension / deflection relationship for various pre-compressions is shown on the following chart:

Operating Description of Bollard Damping System

Document No: TD02 Revision: A Date: 16 October 2002

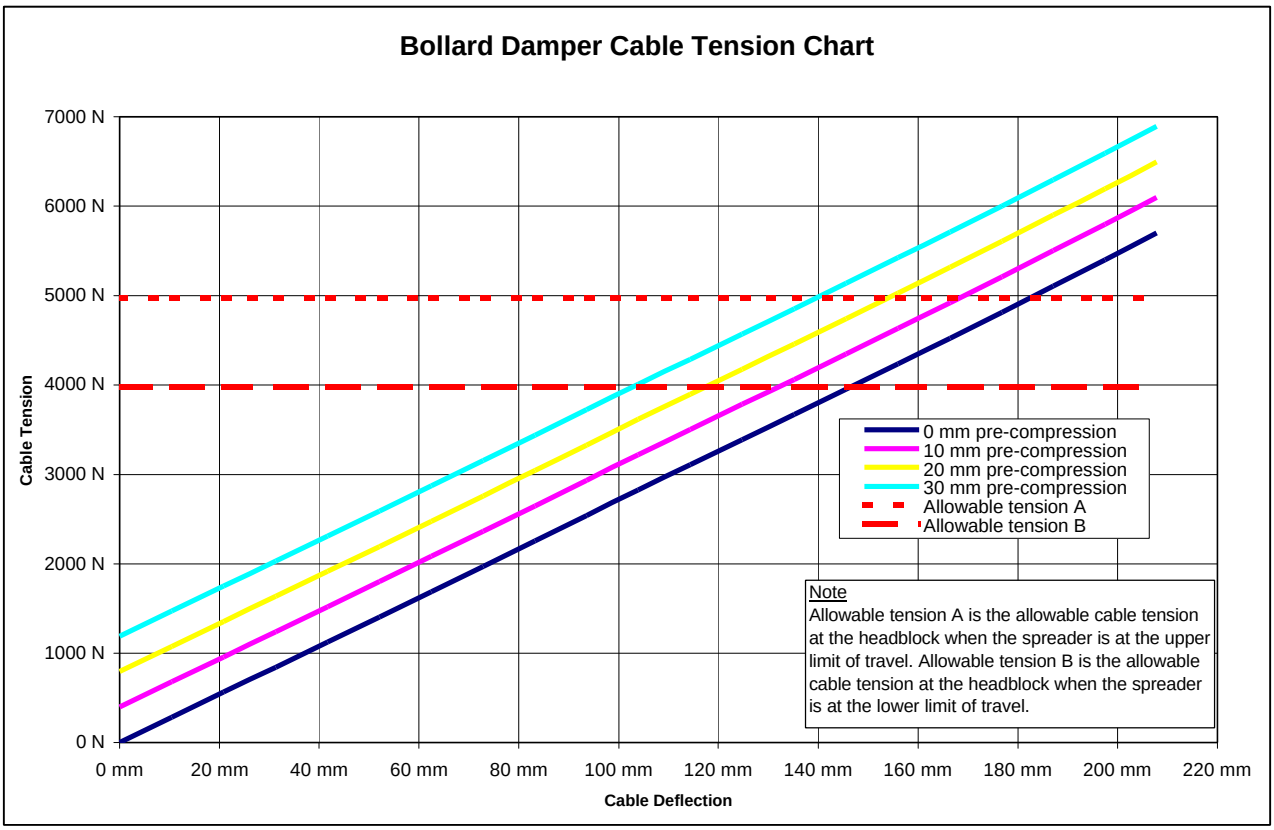

Printed: 30/10/2012 08:51:18
Serialnumber: 13007057
Device: NXP
Saved: 16/10/2012 11:41:04
Firmware: 4.53
Application: Cavotec (C.121216_ZPMC_Spreader.par, APITQ224 3.20)
Parameter file: T:\Commesse\Corrente\121216 - CavChi ZPMC Sri Lanka\Disegni\Electrica

Index	Text	Value	Unit	Min	Max	ID
P 2.1.1	Max Frequency	60,00	Hz	n/a	n/a	102
P 2.1.2	Current Limit	25,0	A	n/a	n/a	107
P 2.1.3	Motor Nom Voltg	400	V	n/a	n/a	110
P 2.1.4	Motor Nom Freq	50,00	Hz	n/a	n/a	111
P 2.1.5	Motor Nom Speed	1400	rpm	n/a	n/a	112
P 2.1.6	Motor Nom Currnt	23,4	A	n/a	n/a	113
P 2.1.7	Motor Cos Phi	0,88		n/a	n/a	120
P 2.1.8	MagnCurrent	10,0	A	n/a	n/a	612
P 2.2.1.1	Control Mode	1 / DI Logic		n/a	n/a	1551
P 2.2.1.2	Default Torque	0,0	%	n/a	n/a	1512
P 2.2.1.3	CONSTReel INMinT	56,0	%	n/a	n/a	1513
P 2.2.1.4	CONSTReel INMaxT	56,0	%	n/a	n/a	1514
P 2.2.1.5	DEC Reel IN MinT	0,0	%	n/a	n/a	1515
P 2.2.1.6	DEC Reel IN MaxT	0,0	%	n/a	n/a	1516
P 2.2.1.7	ACC Reel IN MinT	0,0	%	n/a	n/a	1517
P 2.2.1.8	ACC Reel IN MaxT	0,0	%	n/a	n/a	1518
P 2.2.1.9	CONSTReelOUTMinT	48,0	%	n/a	n/a	1519
P 2.2.1.10	CONSTReelOUTMaxT	48,0	%	n/a	n/a	1520
P 2.2.1.11	DECReel OUT MinT	0,0	%	n/a	n/a	1521
P 2.2.1.12	DECReel OUT MaxT	0,0	%	n/a	n/a	1522
P 2.2.1.13	ACCReel OUT MinT	0,0	%	n/a	n/a	1523
P 2.2.1.14	ACCReel OUT MaxT	0,0	%	n/a	n/a	1524
P 2.2.1.15	Min Torque Limit	0,0	%	n/a	n/a	1525
P 2.2.1.16	Max Torque Limit	100,0	%	n/a	n/a	1526
P 2.2.1.17	InertiaC IN ACC	0,00	%	n/a	n/a	1556
P 2.2.1.18	InertiaC IN DEC	0,00	%	n/a	n/a	1630
P 2.2.1.19	InertiaC OUT ACC	0,00	%	n/a	n/a	1554
P 2.2.1.20	InertiaC OUT DEC	0,00	%	n/a	n/a	1631
P 2.2.1.21	InertiaC Filter	0,10	s	n/a	n/a	1565
P 2.2.1.22	InertiaC Source	0 / MotorEncoder		n/a	n/a	1586
P 2.2.1.23	InertiaC@MaxDiam	100,0	%	n/a	n/a	1632
P 2.2.1.24	TorqueLevelsMode	1 / Absolute		n/a	n/a	1615
P 2.2.1.25	T Const-Linear	0 / Constant		n/a	n/a	1618
P 2.2.1.26	Torque Ramp Time	0,00	s	n/a	n/a	1616
P 2.2.1.27	PulseInAccTorque	0,0	%	n/a	n/a	1638
P 2.2.1.28	PulseIn Acc Time	2,00	s	n/a	n/a	1634
P 2.2.1.29	PulseInDecTorque	0,0	%	n/a	n/a	1639
P 2.2.1.30	PulseIn Dec Time	2,00	s	n/a	n/a	1635
P 2.2.1.31	PulsOutAccTorque	0,0	%	n/a	n/a	1640
P 2.2.1.32	PulseOut AccTime	2,00	s	n/a	n/a	1636
P 2.2.1.33	PulsOutDecTorque	0,0	%	n/a	n/a	1641
P 2.2.1.34	PulseOut DecTime	2,00	s	n/a	n/a	1637
P 2.2.1.35	Pulse@MaxDiamet	100,0	%	n/a	n/a	1642
P 2.2.2.1	Speed Window	0 / No Active		n/a	n/a	1527
P 2.2.2.2	Upper Limit	10	%	n/a	n/a	1558
P 2.2.2.3	Lower Limit	5	%	n/a	n/a	1560
P 2.2.2.4	Minim UpperLimit	5,00	Hz	n/a	n/a	1559
P 2.2.2.5	Minim LowerLimit	5,00	Hz	n/a	n/a	1629
P 2.2.2.6	UpperLim Action	1 / Limit+NoAct		n/a	n/a	1561
P 2.2.2.7	LowerLim Action	1 / Alarm+Alarm		n/a	n/a	1562
P 2.2.2.8	Alarm Delay	1,00	s	n/a	n/a	1563
P 2.2.2.9	Reference Select	0 / AIN2		n/a	n/a	1582
P 2.2.2.10	Enc Freq Mul	1		n/a	n/a	1583
P 2.2.2.11	Enc Ref Div	1		n/a	n/a	1584
P 2.2.2.12	Max Freq@MinDiam	50,00	Hz	n/a	n/a	1628
P 2.2.2.13	SpLimitMaxTorque	100,0	%	n/a	n/a	1643
P 2.2.2.14	Open WindowLogic	0 / Never		n/a	n/a	1644
P 2.2.2.15	OpenWindowLimit	0,00	%	n/a	n/a	1645
P 2.2.2.16	CloseWindowLimit	0,00	%	n/a	n/a	1646
P 2.2.2.17	Acc/Dec If Open	1 / Masked		n/a	n/a	1647
P 2.2.2.18	Speed Fault	1 / Yes		n/a	n/a	1648
P 2.2.2.19	Max Speed Error	5,00	Hz	n/a	n/a	1649
P 2.2.2.20	Check Delay	1,00	s	n/a	n/a	1650
P 2.2.3.1	Speed selection	0 / Jog Speed		n/a	n/a	1528
P 2.2.3.2	Jog speed	10,00	Hz	n/a	n/a	1529
P 2.2.3.3	AIN Min Speed	0,00	Hz	n/a	n/a	1530
P 2.2.3.4	AIN Max Speed	50,00	Hz	n/a	n/a	1531
P 2.2.3.5	Accel Time	3,0	s	n/a	n/a	502
P 2.2.3.6	Decel Time	3,0	s	n/a	n/a	503
P 2.2.3.7	Torque Limit	100,0	%	n/a	n/a	1533
P 2.2.3.8	Diameter Scaling	0 / No		n/a	n/a	1621
P 2.3.1.1	AI1 Signal Sel	AnIN:0.1		n/a	n/a	377
P 2.3.1.2	AI1 Signal Range	1 / 4mA/20%-100%		n/a	n/a	1501
P 2.3.1.3	AI1 Custom Min	0,00	%	n/a	n/a	1503
P 2.3.1.4	AI1 Custom Max	0,00	%	n/a	n/a	1504
P 2.3.1.5	AI1 Filter Time	0,10	s	n/a	n/a	1505
P 2.3.1.6	AI1 Signal Inv	0 / No Inversion		n/a	n/a	1506
P 2.3.2.1	AI2 Signal Sel	AnIN:0.1		n/a	n/a	388
P 2.3.2.2	AI2 Signal Range	0 / 0mA/0%-100%		n/a	n/a	1507
P 2.3.2.3	AI2 Custom Min	0,00	%	n/a	n/a	1508
P 2.3.2.4	AI2 Custom Max	0,00	%	n/a	n/a	1509

Index	Text	Value	Unit	Min	Max	ID
P 2.3.2.5	AI2 Filter Time	0,10	%	n/a	n/a	1510
P 2.3.2.6	AI2 Signal Inv	0 / No Inversion		n/a	n/a	1511
P 2.3.2.7	Speed Range	1 / Bidirect		n/a	n/a	1557
P 2.3.3.1	DI1 Moving	DigIN:A.1		n/a	n/a	1536
P 2.3.3.2	DI2 Reset	DigIN:A.2		n/a	n/a	1537
P 2.3.3.3	DI3 Reel OUT	DigIN:A.3		n/a	n/a	1538
P 2.3.3.4	DI4 Accel	DigIN:A.4		n/a	n/a	1539
P 2.3.3.5	DI5 Decel	DigIN:A.5		n/a	n/a	1540
P 2.3.3.6	DI6 Manual	DigIN:A.6		n/a	n/a	1541
P 2.3.3.7	Manual FWD	DigIN:A.4		n/a	n/a	1542
P 2.3.3.8	Manual REV	DigIN:A.5		n/a	n/a	1543
P 2.3.3.9	Ext Fault Close	DigIN:0.1		n/a	n/a	1544
P 2.3.3.10	Ext Fault Open	DigIN:0.2		n/a	n/a	1545
P 2.3.3.11	SpWindow Reverse	DigIN:0.1		n/a	n/a	1600
P 2.3.4.1	Minimum Diameter	2400	mm	n/a	n/a	1624
P 2.3.4.2	Maximum Diameter	6000	mm	n/a	n/a	1625
P 2.3.4.3	Signal@ Min Diam	20,00	%	n/a	n/a	1627
P 2.3.4.4	Signal@ Max Diam	100,00	%	n/a	n/a	1626
P 2.4.1	Iout 1 signal	AnOUT:A.1		n/a	n/a	464
P 2.4.2	Iout Content	1 / O/P Freq		n/a	n/a	307
P 2.4.3	Iout Filter Time	0,00	s	n/a	n/a	308
P 2.4.4	Iout Invert	0 / No Inversion		n/a	n/a	309
P 2.4.5	Iout Minimum	0 / 0 mA		n/a	n/a	310
P 2.4.6	Iout Scale	100	%	n/a	n/a	311
P 2.4.7	DO1 Content	0 / None		n/a	n/a	312
P 2.4.8	RO1 Content	1 / Ready		n/a	n/a	313
P 2.4.9	RO2 Content	16 / Brake		n/a	n/a	314
P 2.4.10	Freq Supv Lim 1	0 / No		n/a	n/a	315
P 2.4.11	Freq Supv Val 1	0,00	Hz	n/a	n/a	316
P 2.4.12	AIN1 Supv Lim 1	0 / No		n/a	n/a	1567
P 2.4.13	AIN1 Supv Val1	70,00	%	n/a	n/a	1568
P 2.4.14	AIN1 Supv Lim 2	0 / No		n/a	n/a	1569
P 2.4.15	AIN1 Supv Val 2	20,00	%	n/a	n/a	1570
P 2.4.16	Brake Open Delay	0,00	s	n/a	n/a	1579
P 2.4.17	Brake Close Freq	0,50	Hz	n/a	n/a	1580
P 2.4.18	Brk Steady Time	0,50	s	n/a	n/a	1597
P 2.4.19	Brk CloseTimeOut	0,50	s	n/a	n/a	1581
P 2.4.20	Hold Torque Time	0,50	s	n/a	n/a	1587
P 2.4.21	Opt RO3 Signal	DigOUT:D.1		n/a	n/a	1571
P 2.4.22	Opt RO3 Content	14 / AIN1 Superv1		n/a	n/a	1572
P 2.4.23	Opt RO4 Signal	DigOUT:D.2		n/a	n/a	1573
P 2.4.24	Opt RO4 Content	15 / AIN1 Superv2		n/a	n/a	1574
P 2.4.25	Opt RO5 Signal	DigOUT:D.3		n/a	n/a	1575
P 2.4.26	Opt RO5 Content	0 / None		n/a	n/a	1576
P 2.5.1	Brake Chopper	4 / On, No test		n/a	n/a	504
P 2.5.2	Stop Function	1 / Ramping		n/a	n/a	506
P 2.6.1	Motor Ctrl Mode	1 / Closed Loop		n/a	n/a	1500
P 2.6.2	Field WeakngPnt	50,00	Hz	n/a	n/a	602
P 2.6.3	Voltage at FWP	100,00	%	n/a	n/a	603
P 2.6.4	Switching Freq	10,0	kHz	n/a	n/a	601
P 2.6.5	Overvolt Contr	1 / On:NoRamping		n/a	n/a	607
P 2.6.6	Undervolt Contr	1 / Yes		n/a	n/a	608
P 2.6.7.1	U/f Optimization	0 / None		n/a	n/a	109
P 2.6.7.2	U/f Ratio Select	0 / Linear		n/a	n/a	108
P 2.6.7.3	U/f Mid Freq	50,00	Hz	n/a	n/a	604
P 2.6.7.4	U/f Mid Voltg	100,00	%	n/a	n/a	605
P 2.6.7.5	Zero Freq Voltg	1,37	%	n/a	n/a	606
P 2.6.8.1	Speed Control Kp	30		n/a	n/a	613
P 2.6.8.2	Speed Control Ti	30,0	ms	n/a	n/a	614
P 2.6.8.3	Slip Adjust	100	%	n/a	n/a	619
P 2.6.8.4	Encoder1FiltTime	0	ms	n/a	n/a	618
P 2.6.8.5	CurrentControlKp	40,00	%	n/a	n/a	617
P 2.6.9.1	TorqueControl Kp	150		n/a	n/a	1535
P 2.6.9.2	TorqueControl Ki	10		n/a	n/a	1534
P 2.6.9.3	SpeedLimAccTime	0,1	s	n/a	n/a	103
P 2.6.9.4	SpeedLimDecTime	0,2	s	n/a	n/a	104
P 2.7.1	Encoder Superv	0 / Active		n/a	n/a	1546
P 2.7.2	AI1 4mAFaultResp	2 / Fault		n/a	n/a	1547
P 2.7.3	AI1 4mAF Preset	4	mA	n/a	n/a	1549
P 2.7.4	AI2 4mAFaultResp	2 / Fault		n/a	n/a	1548
P 2.7.5	AI2 4mAF Preset	4	mA	n/a	n/a	1550
P 2.7.6	External Fault	2 / Fault		n/a	n/a	701
P 2.7.7	Input Phase Supv	2 / Fault		n/a	n/a	730
P 2.7.8	UVolt Fault Resp	2 / Fault		n/a	n/a	727
P 2.7.9	OutputPh. Superv	2 / Fault		n/a	n/a	702
P 2.7.10	Earth Fault	2 / Fault		n/a	n/a	703
P 2.7.11	Motor Therm Prot	2 / Fault		n/a	n/a	704
P 2.7.12	MotAmbTempFactor	0,0	%	n/a	n/a	705
P 2.7.13	MTP f0 Current	40,0	%	n/a	n/a	706
P 2.7.14	MTP Motor T	45	min	n/a	n/a	707
P 2.7.15	Motor Duty Cycle	100	%	n/a	n/a	708
P 2.7.16	Stall Protection	0 / No Action		n/a	n/a	709
P 2.7.17	Stall Current	30,4	A	n/a	n/a	710
P 2.7.18	Stall Time Lim	15,00	s	n/a	n/a	711
P 2.7.19	Stall Freq Lim	25,00	Hz	n/a	n/a	712
P 2.7.20	Underload Protec	0 / No Action		n/a	n/a	713
P 2.7.21	UP fnom Torque	50,0	%	n/a	n/a	714
P 2.7.22	UP f0 Torque	10,0	%	n/a	n/a	715
P 2.7.23	UP Time Limit	20,00	s	n/a	n/a	716
P 2.7.24	ThermistorF.Resp	2 / Fault		n/a	n/a	732
P 2.7.25	FBComm.FaultResp	2 / Fault		n/a	n/a	733
P 2.7.26	SlotComFaultResp	2 / Fault		n/a	n/a	734

Index	Text	Value	Unit	Min	Max	ID
P 2.7.27	PwrUnitTempSense	0 / Read		n/a	n/a	1577
P 2.7.28	Overspeed Protec	0 / No Action		n/a	n/a	1598
P 2.7.29	Overspeed Thresh	55,00	Hz	n/a	n/a	1599
P 2.8.1	Wait Time	0,50	s	n/a	n/a	717
P 2.8.2	Trial Time	30,00	s	n/a	n/a	718
P 2.8.3	Start Function	0 / Ramping		n/a	n/a	719
P 2.8.4	Undervolt. Tries	0	x	n/a	n/a	720
P 2.8.5	Overvolt. Tries	0	x	n/a	n/a	721
P 2.8.6	Overcurr. Tries	0	x	n/a	n/a	722
P 2.8.7	4mA Fault Tries	0	x	n/a	n/a	723
P 2.8.8	MotTempF Tries	0	x	n/a	n/a	726
P 2.8.9	Ext.Fault Tries	0	x	n/a	n/a	725
P 2.9.1	Commands Word	0 / Bus CW		n/a	n/a	1588
P 2.9.2	SpeedRef Word	0 / Bus Ref Word		n/a	n/a	1589
P 2.9.3	DigInputs Active	0 / No		n/a	n/a	1590
P 2.9.4	FB Data Out1 Sel	1		n/a	n/a	1593
P 2.9.5	FB Data Out2 Sel	3		n/a	n/a	1594
P 2.9.6	FB Data Out3 Sel	4		n/a	n/a	1595
P 2.9.7	FB Data Out4 Sel	37		n/a	n/a	1596
P 2.9.8	FB Data Out5 Sel	0		n/a	n/a	1610
P 2.9.9	FB Data Out6 Sel	0		n/a	n/a	1611
P 2.9.10	FB Data Out7 Sel	0		n/a	n/a	1612
P 2.9.11	FB Data Out8 Sel	0		n/a	n/a	1613
P 2.9.12	TorqueRef Word	1 / Bus PDI1		n/a	n/a	1614
P 2.10.1	License Key	0		n/a	n/a	1566
P 2.10.2	SerialNumberKey	52682		n/a	n/a	
P 3.1	Control Place	1 / I/O Terminal		n/a	n/a	125
P 3.3	Keypad Direction	0 / Forward		n/a	n/a	123
P 3.4	StopButtonActive	1 / Yes		n/a	n/a	114
P 3.5	String	1		n/a	n/a	1617
P 3.6	Auto Multimon	1 / Yes		n/a	n/a	1619
P 6.3.4	Autom. BackUp	0 / Yes		n/a	n/a	820
P 6.5.2	Parameter Lock	0 / ChangeEnable		n/a	n/a	819
P 6.5.3	Startup wizard	0 / No		n/a	n/a	826
P 6.5.4	Multimon. items	0 / ChangeEnable		n/a	n/a	822
P 6.5.5	OPTAF Remove	0		n/a	n/a	832
P 6.6.1	Default page	0.		n/a	n/a	
P 6.6.2	Default page/OM	1		n/a	n/a	
P 6.6.3	Timeout time	60	s	n/a	n/a	804
P 6.6.4	Contrast	18		n/a	n/a	805
P 6.6.5	Backlight time	10	min	n/a	n/a	818
P 6.7.1	InternBrakeRes	0 / Not conn.		n/a	n/a	821
P 6.7.2	Fan control	0 / Continuous		n/a	n/a	825
P 6.7.3	HMI ACK timeout	200	ms	n/a	n/a	823
P 6.7.4	HMI retry	5		n/a	n/a	824
P 6.7.5	Sine Filter	0 / Not conn.		n/a	n/a	
P 7.1.1.1	AI1 mode	2 / 4...20mA		n/a	n/a	
P 7.1.1.2	AI2 mode	2 / 4...20mA		n/a	n/a	
P 7.1.1.3	AO1 mode	1 / 0...20mA		n/a	n/a	
P 7.3.1.1	Pulse revolution	1024		n/a	n/a	
P 7.3.1.2	Invert direction	1 / Yes		n/a	n/a	
P 7.3.1.3	Reading rate	1 / 1 ms		n/a	n/a	
P 7.3.1.4	Encoder type	1 / A,B=Speed		n/a	n/a	
P 7.5.1.1	Slave Address	126		n/a	n/a	
P 7.5.1.2	Baud Rate	10 / Auto		n/a	n/a	
P 7.5.1.3	PPO Type	1 / PPO1		n/a	n/a	
P 7.5.1.4	Operate Mode	2 / ByPass		n/a	n/a	

7. CONTROL KEYPAD

The control keypad is the link between the Vacon frequency converter and the user. The Vacon NX control keypad features an alphanumeric display with seven indicators for the Run status (RUN, , READY, STOP, ALARM, FAULT) and three indicators for the control place (I/O term/ Keypad/BusComm). There are also three Status Indicator LEDs (green - green - red), see Status LEDs (green – green – red) below. The control information, i.e. the number of menu, description of menu or the displayed value and the numeric information are presented on three text lines.

The frequency converter is operable through the nine push-buttons of the control keypad. Furthermore, the buttons serve the purposes of parameter setting and value monitoring.

The keypad is detachable and isolated from the input line potential.

7.1 Indications on the Keypad display

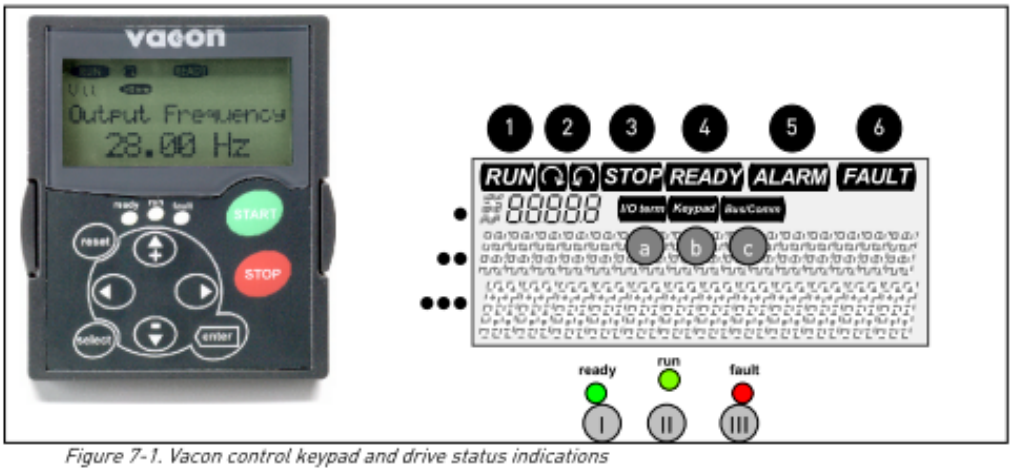


Figure 7-1. Vacon control keypad and drive status indications

7.1.1 Drive status indications (See control keypad)

The drive status indications tell the user what the status of the motor and the drive is and whether the motor control software has detected irregularities in motor or frequency converter functions.

1. RUN = Motor is running; Blinks when the stop command has been given but the frequency is still ramping down.
2. = Indicates the direction of motor rotation.
3. STOP = Indicates that the drive is not running.
4. READY = Lights when AC power is on. In case of a trip, the symbol will not light up.
5. ALARM = Indicates that the drive is running outside a certain limit and a warning is given.
6. FAULT = Indicates that unsafe operating conditions were encountered due to which the drive was stopped.

7.1.2 *Control place indications* (See control keypad)

The symbols *I/O term*, *Keypad* and *Bus/Comm* (see Figure 7-1) indicate the choice of control place made in the Keypad control menu (M3) (see chapter 7.3.3).

a *I/O term* = I/O terminals are the selected control place; i.e. START/STOP commands or reference values etc. are given through the I/O terminals.

b *Keypad* = Control keypad is the selected control place; i.e. the motor can be started or stopped, or its reference values etc. altered from the keypad.

c *Bus/Comm* = The frequency converter is controlled through a fieldbus.

7.1.3 *Status LEDs (green – green – red)* (See control keypad)

The status LEDs light up in connection with the READY, RUN and FAULT drive status indicators.

I ● = Illuminates with the AC power connected to the drive and no faults are active. Simultaneously, the drive status indicator READY is lit up.

II ● = Illuminates when the drive is running. Blinks when the STOP button has been pushed and the drive is ramping down.

III ● = Blinks when unsafe operating conditions were encountered due to which the drive was stopped (Fault Trip). Simultaneously, the drive status indicator FAULT blinks on the display and the fault description can be seen, see chapter 7.3.4, Active Faults.

7.1.4 *Text lines* (See control keypad)

The three text lines (•, ••, •••) provide the user with information on his present location in the keypad menu structure as well as with information related to the operation of the drive.

• = Location indication; displays the symbol and number of menu, parameter etc. Example: M2 = Menu 2 (Parameters); P2.1.3 = Acceleration time

•• = Description line; Displays the description of menu, value or fault.

••• = Value line; Displays the numerical and textual values of references, parameters etc. and the number of submenus available in each menu.

Tel. +358 (0)201 2121 • Fax +358 (0)201 212 205

7.2 Keypad push-buttons

The Vacon alphanumeric control keypad features 9 push-buttons that are used for the control of the frequency converter (and motor), parameter setting and value monitoring.

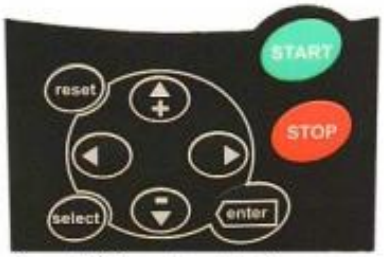


Figure 7-2. Keypad push-buttons

7.2.1 Button descriptions

reset = This button is used to reset active faults (see Chapter 7.3.4).

select = This button is used to switch between two latest displays. May be useful when you want to see how the changed new value influences some other value.

enter = The Enter button serves for:
1) confirmation of selections
2) fault history reset (2...3 seconds)

▲ + = Browser button up
Browse the main menu and the pages of different submenus.
Edit values.

- ▼ = Browser button down
Browse the main menu and the pages of different submenus.
Edit values.

◄ = Menu button left
Move backward in menu.
Move cursor left (in parameter menu).
Exit edit mode.
Hold down for 3 seconds to return to main menu.


► = Menu button right
Move forward in menu.
Move cursor right (in parameter menu).
Enter edit mode.

start = Start button.
Pressing this button starts the motor if the keypad is the active control place. See Chapter 7.3.3.

stop = Stop button.
Pressing this button stops the motor (unless disabled by parameter R3.4/R3.6).
See Chapter 7.3.3.

7.3 Navigation on the control keypad

The data on the control keypad are arranged in menus and submenus. The menus are used for example for the display and editing of measurement and control signals, parameter settings (chapter 7.3.2), reference values and fault displays (chapter 7.3.4). Through the menus, you can also adjust the contrast of the display (page 100).

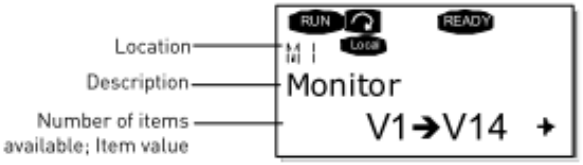

The first menu level consists of menus M1 to M7 and is called the *Main menu*. The user can navigate in the main menu using the *Browser buttons* up and down. The desired submenu can be entered from the main menu using the *Menu buttons*. When there still are pages to enter under the currently displayed menu or page, you can see an arrow [→] in the lower right corner of the display and by pressing the *Menu button right*, you can reach the next menu level.

The control keypad navigation chart is shown on the next page. Please note that the menu ***M1*** is located in the lower left corner. From there you will be able to navigate your way up to the desired menu using the menu and browser buttons.

More detailed descriptions of the menus you will find later in this Chapter.

Tel. +358 (0)201 2121 • Fax +358 (0)201 212 205

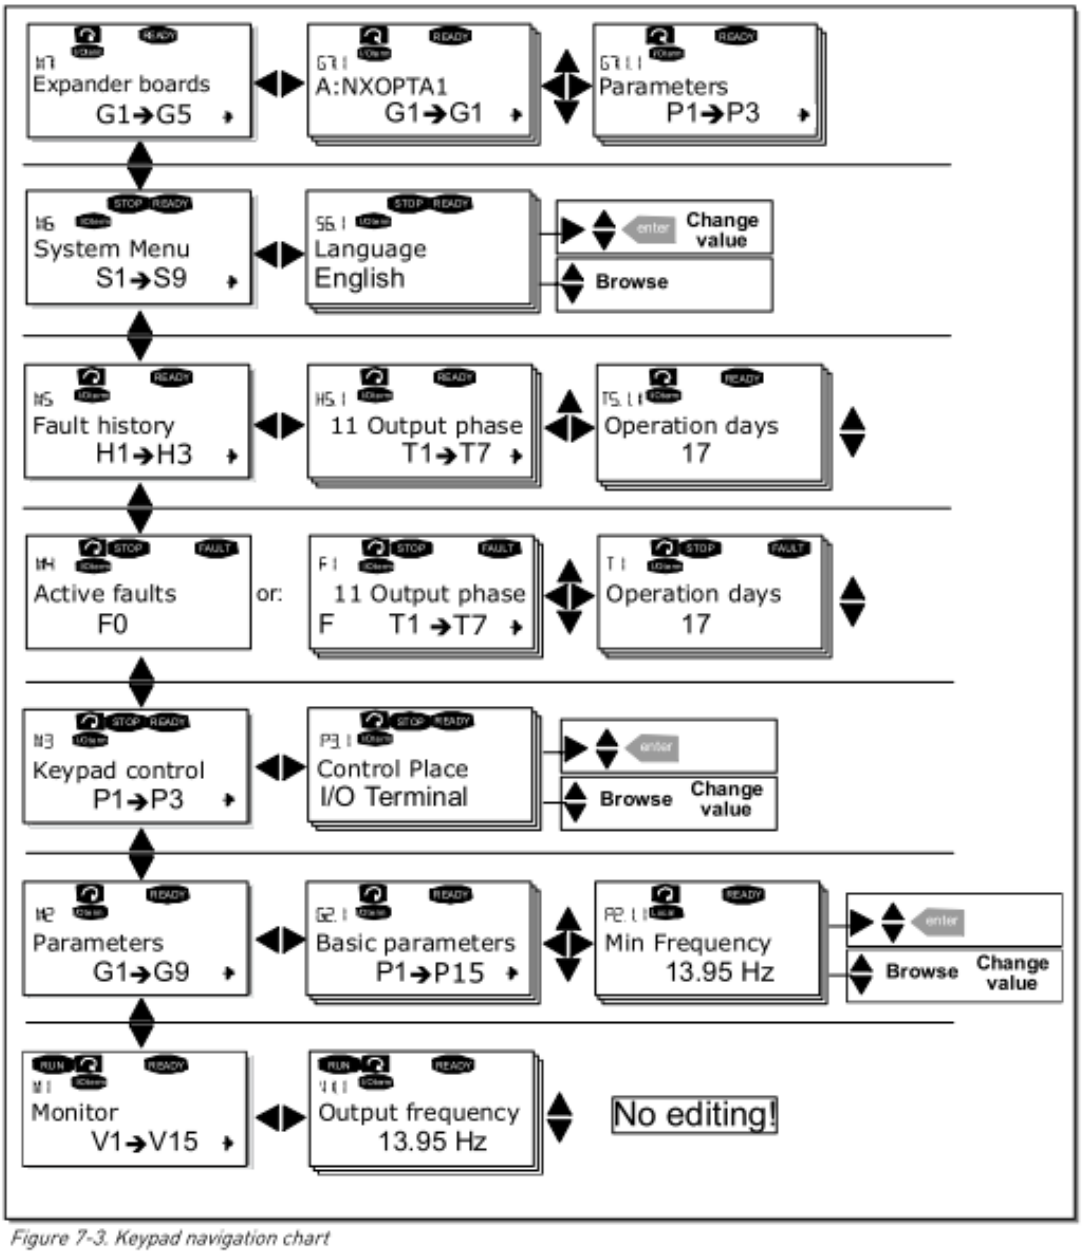


Figure 7-3. Keypad navigation chart

7.3.1 Monitoring menu (M1)

You can enter the Monitoring menu from the Main menu by pushing the *Menu button right* when the location indication **M1** is visible on the first line of the display. How to browse through the monitored values is presented in Figure 7-4.
The monitored signals carry the indication **V#.#** and they are listed in Table 7-1. The values are updated once every 0.3 seconds.

This menu is meant only for signal checking. The values cannot be altered here. For changing values of parameters see Chapter 7.3.2.

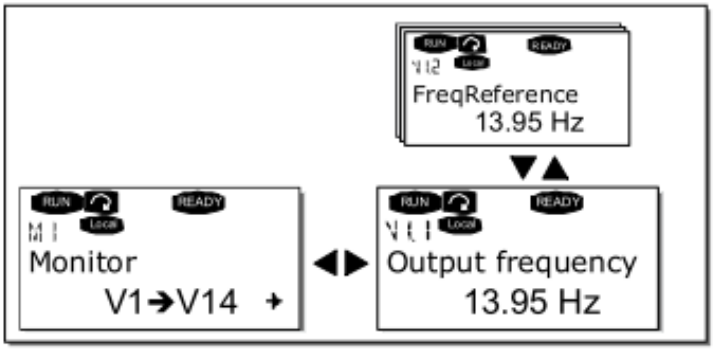


Figure 7-4. Monitoring menu

Code	Signal name	Unit	Description
V1.1	Output frequency	Hz	Frequency to the motor
V1.2	Frequency reference	Hz	
V1.3	Motor speed	rpm	Calculated motor speed
V1.4	Motor current	A	Measured motor current
V1.5	Motor torque	%	Calculated motor shaft torque
V1.6	Motor power	%	Calculated motor shaft power
V1.7	Motor voltage	V	Calculated motor voltage
V1.8	DC-link voltage	V	Measured DC-link voltage
V1.9	Unit temperature	°C	Heat sink temperature
V1.10	Motor temperature	%	Calculated motor temperature. See All in One application manual.
V1.11	Voltage input	V	AI1*
V1.12	Current input	mA	AI2*
V1.13	DIN1, DIN2, DIN3		Digital input statuses
V1.14	DIN4, DIN5, DIN6		Digital input statuses
V1.15	DO1, RO1, RO2		Digital and relay output statuses
V1.16	Analogue output	mA	AO1
M1.17	Multimonitoring items		Displays three selectable monitoring values. See chapter 7.3.6.5.

Table 7-1. Monitored signals

* If the unit is supplied with +24V only (for control board power-up) this value is not reliable.

The All in One applications embody more monitoring values.

Tel. +358 (0)201 2121 • Fax +358 (0)201 212 205

7.3.2 Parameter menu (M2)

Parameters are the way of conveying the commands of the user to the frequency converter. The parameter values can be edited by entering the *Parameter Menu* from the *Main Menu* when the location indication **M2** is visible on the first line of the display. The value editing procedure is presented in Figure 7-5.

Push the *Menu button right* once to move into the *Parameter Group Menu (G#)*. Locate the parameter group desired by using the *Browser buttons* and push the *Menu button right* again to enter the group and its parameters. Use again the *Browser buttons* to find the parameter *(P#)* you want to edit. From here you can proceed in two different ways: Pushing the *Menu button right* takes you to the edit mode. As a sign of this, the parameter value starts to blink. You can now change the value in two different manners:

1. Just set the new desired value with the *Browser buttons* and confirm the change with the *Enter button*. Consequently, the blinking stops and the new value is visible in the value field.
2. Push the *Menu button right* once again. Now you will be able to edit the value digit by digit. This editing manner may come in handy, when a relatively greater or smaller value than that on the display is desired. Confirm the change with the *Enter button*.

The value will not change unless the Enter button is pushed. Pressing the *Menu button left* takes you back to the previous menu.

Several parameters are locked, i.e. uneditable, when the drive is in RUN status. If you try to change the value of such a parameter the text **Locked** will appear on the display. The frequency converter must be stopped in order to edit these parameters.
The parameters values can also be locked using the function in menu **M6** (see Chapter Parameter lock (P6.5.2)).

You can return to the *Main menu* anytime by pressing the *Menu button left* for 3 seconds.

The basic application package "All in One+" includes seven applications with different sets of parameters. You will find the parameter lists in the Application Section of this manual.

Once in the last parameter of a parameter group, you can move directly to the first parameter of that group by pushing the *Browser button up*.

See the diagram for parameter value change procedure on page 80.

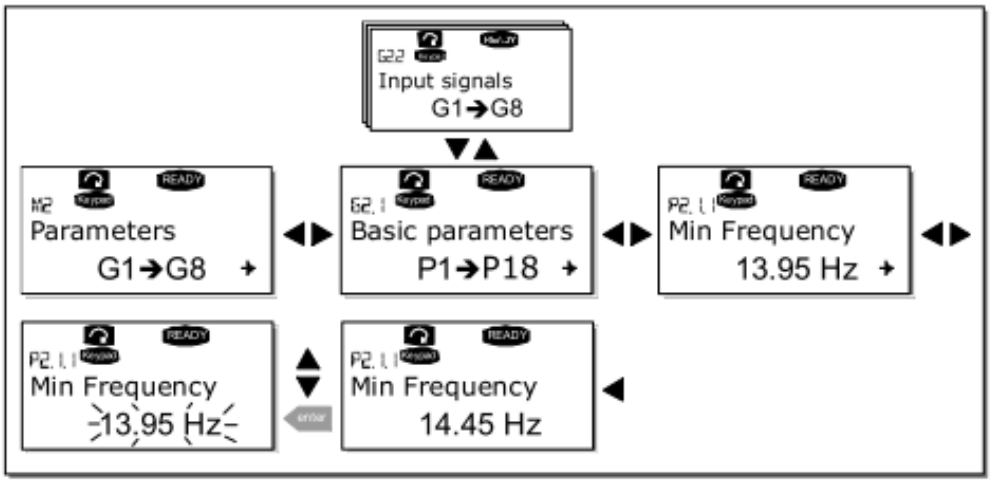


Figure 7-5. Parameter value change procedure

Tel. +358 (0)201 2121 • Fax +358 (0)201 212 205

7.3.4 Active faults menu (M4)

The *Active faults menu* can be entered from the *Main menu* by pushing the *Menu button right* when the location indication **M4** is visible on the first line of the keypad display.

When a fault brings the frequency converter to a stop, the location indication F1, the fault code, a short description of the fault and the **fault type symbol** (see Chapter 7.3.4.1) will appear on the display. In addition, the indication FAULT or ALARM (see Figure 7-1 or Chapter 7.1.1) is displayed and, in case of a FAULT, the red led on the keypad starts to blink. If several faults occur simultaneously, the list of active faults can be browsed with the *Browser buttons*.

The memory of active faults can store the maximum of 10 faults in the order of appearance. The display can be cleared with the *Reset button* and the read-out will return to the same state it was before the fault trip. The fault remains active until it is cleared with the *Reset button* or with a reset signal from the I/O terminal or fieldbus.

Note! Remove external Start signal before resetting the fault to prevent unintentional restart of the drive.

Normal state, no faults:



7.3.4.1 Fault types

In the NX_ frequency converter, there are four different types of faults. These types differ from each other on the basis of the subsequent behaviour of the drive. See Table 7-3.

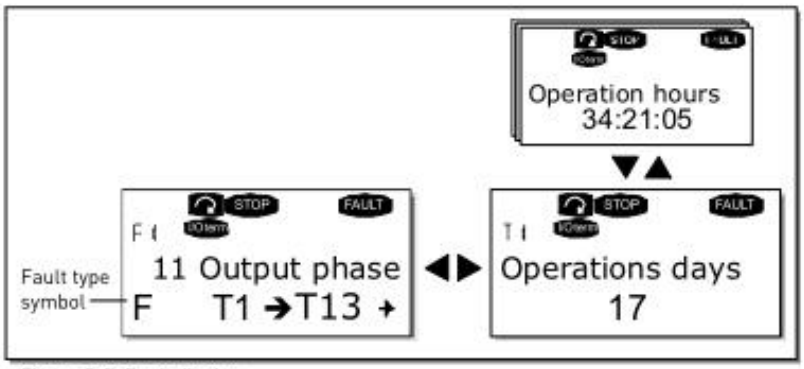


Figure 7-7. Fault display

Fault type symbol	Meaning
A (Alarm)	This type of fault is a sign of an unusual operating condition. It does not cause the drive to stop, nor does it require any special actions. The 'A fault' remains in the display for about 30 seconds.
F (Fault)	An 'F fault' is a kind of fault that makes the drive stop. Actions need to be taken in order to restart the drive.
AR (Fault Autoreset)	If an 'AR fault' occurs the drive will also stop immediately. The fault is reset automatically and the drive tries to restart the motor. Finally, if the restart is not successful, a fault trip (FT, see below) occurs.
FT (Fault Trip)	If the drive is unable to restart the motor after an AR fault an FT fault occurs. The effect of the 'FT fault' is basically the same as that of the F fault: the drive is stopped.

Table 7-3. Fault types

Tel. +358 (0)201 2121 • Fax +358 (0)201 212 205

7.3.4.2 Fault codes

The fault codes, their causes and correcting actions are presented in the table below. The shadowed faults are A faults only. The items written in white on black background present faults for which you can program different responses in the application. See parameter group Protections.
Note: When contacting distributor or factory because of a fault condition, always write down all texts and codes on the keypad display.

Fault code	Fault	Possible cause	Correcting measures
1	Overcurrent	Frequency converter has detected too high a current (>4*I_H) in the motor cable: – sudden heavy load increase – short circuit in motor cables – unsuitable motor	Check loading. Check motor. Check cables.
2	Overvoltage	The DC-link voltage has exceeded the limits defined in Table 4-7. – too short a deceleration time – high overvoltage spikes in supply	Make the deceleration time longer. Use brake chopper or brake resistor (available as options)
3	Earth fault	Current measurement has detected that the sum of motor phase current is not zero. – insulation failure in cables or motor	Check motor cables and motor.
5	Charging switch	The charging switch is open, when the START command has been given. – faulty operation – component failure	Reset the fault and restart. Should the fault re-occur, contact the distributor near to you. Please see Vacon contact info on the Web
6	Emergency stop	Stop signal has been given from the option board.	
7	Saturation trip	Various causes: – defective component – brake resistor short-circuit or overload	Cannot be reset from the keypad. Switch off power. DO NOT RE-CONNECT POWER! Contact factory. If this fault appears simultaneously with Fault 1, check motor cables and motor
8	System fault	- component failure - faulty operation Note exceptional fault data record, see 7.3.4.3. S1 = Feedback of motor voltage S2 = Reserved S3 = Reserved S4 = ASIC trip S5 = Disturbance in VaconBus S6 = Feedback of charging switch S7 = Charging switch S8 = No power to driver card S9 = Power unit communication (TX) S10 = Power unit communication (Trip) S11 = Power unit comm. (Measurement)	Reset the fault and restart. Should the fault re-occur, contact the distributor near to you. Please see Vacon contact info on the Web

Fault code	Fault	Possible cause	Correcting measures
9	Undervoltage	DC-link voltage is under the voltage limits defined in Table 4-7. – most probable cause: too low a supply voltage – frequency converter internal fault	In case of temporary supply voltage break reset the fault and restart the frequency converter. Check the supply voltage. If it is adequate, an internal failure has occurred. Contact the distributor near to you. Please see Vacon contact info on the Web
10	Input line supervision	Input line phase is missing.	Check supply voltage and cable.
11	Output phase supervision	Current measurement has detected that there is no current in one motor phase.	Check motor cable and motor.
12	Brake chopper supervision	– no brake resistor installed – brake resistor is broken – brake chopper failure	Check brake resistor. If the resistor is ok, the chopper is faulty. Contact the distributor near to you. Please see Vacon contact info on the Web
13	Frequency converter under-temperature	Heatsink temperature is under –10°C	
14	Frequency converter overtemperature	Heatsink temperature is over 90°C (or 77°C, NX_6, FR6). Overtemperature warning is issued when the heatsink temperature exceeds 85°C (72°C).	Check the correct amount and flow of cooling air. Check the heatsink for dust. Check the ambient temperature. Make sure that the switching frequency is not too high in relation to ambient temperature and motor load.
15	Motor stalled	Motor stall protection has tripped.	Check motor.
16	Motor over-temperature	Motor overheating has been detected by frequency converter motor temperature model. Motor is overloaded.	Decrease the motor load. If no motor overload exists, check the temperature model parameters.
17	Motor underload	Motor underload protection has tripped.	
22	EEPROM checksum fault	Parameter save fault – faulty operation – component failure	
24	Counter fault	Values displayed on counters are incorrect	
25	Microprocessor watchdog fault	– faulty operation – component failure	Reset the fault and restart. Should the fault re-occur, contact the distributor near to you. Please see Vacon contact info on the Web
26	Start-up prevented	Start-up of the drive has been prevented.	Cancel prevention of start-up.
29	Thermistor fault	The thermistor input of option board has detected increase of the motor temperature	Check motor cooling and loading Check thermistor connection (If thermistor input of the option board is not in use it has to be short circuited)
31	IGBT temperature (hardware)	IGBT Inverter Bridge overtemperature protection has detected too high a short term overload current	Check loading. Check motor size.

Tel. +358 (0)201 2121 • Fax +358 (0)201 212 205

Fault code	Fault	Possible cause	Correcting measures
32	Fan cooling	Cooling fan of the frequency converter does not start, when ON command is given	Contact the distributor near to you. Please see Vacon contact info on the Web
34	CAN bus communication	Sent message not acknowledged.	Ensure that there is another device on the bus with the same configuration.
35	Application	Problem in application software	Contact your distributor. If you are application programmer check the application program.
36	Control unit	NXS Control Unit can not control NXP Power Unit and vice versa	Change control unit
37	Device changed (same type)	Option board or control unit changed. Same type of board or same power rating of drive.	Reset **Note:** No fault time data record!
38	Device added (same type)	Option board or drive added. Drive of same power rating or same type of board added.	Reset **Note:** No fault time data record!
39	Device removed	Option board removed. Drive removed.	Reset **Note:** No fault time data record!
40	Device unknown	Unknown option board or drive.	Contact the distributor near to you. Please see Vacon contact info on the Web
41	IGBT temperature	IGBT Inverter Bridge overtemperature protection has detected too high a short term overload current	Check loading. Check motor size.
42	Brake resistor overtemperature	Brake resistor overtemperature protection has detected too heavy braking	Set the deceleration time longer. Use external brake resistor.
43	Encoder fault	Note the exceptional Fault data record. See 7.3.4.3. Additional codes: 1 = Encoder 1 channel A is missing 2 = Encoder 1 channel B is missing 3 = Both encoder 1 channels are missing 4 = Encoder reversed	Check encoder channel connections. Check the encoder board.
44	Device changed (different type)	Option board or control unit changed. Option board of different type or different power rating of drive.	Reset **Note:** No fault time data record! **Note:** Application parameter values restored to default.
45	Device added (different type)	Option board or drive added. Option board of different type or drive of different power rating added.	Reset **Note:** No fault time data record! **Note:** Application parameter values restored to default.
50	Analogue input I_{in} < 4mA (sel. signal range 4 to 20 mA)	Current at the analogue input is < 4mA. – control cable is broken or loose – signal source has failed	Check the current loop circuitry.
51	External fault	Digital input fault.	
52	Keypad communication fault	The connection between the control keypad and the frequency converter is broken.	Check keypad connection and possible keypad cable.
53	Fieldbus fault	The data connection between the fieldbus Master and the fieldbus board is broken	Check installation. If installation is correct contact the nearest Vacon distributor. Please see Vacon contact info on the Web

Fault code	Fault	Possible cause	Correcting measures
54	Slot fault	Defective option board or slot	Check board and slot. Contact the nearest Vacon distributor. Please see Vacon contact info on the Web
56	PT100 board temp. fault	Temperature limit values set for the PT100 board parameters have been exceeded	Find the cause of temperature rise

Table 7-4. Fault codes

Tel. +358 (0)201 2121 • Fax +358 (0)201 212 205

7.3.4.3 Fault time data record

When a fault occurs the information described above in 7.3.4 is displayed. By pushing the *Menu button right* here you will enter the *Fault time data record menu* indicated by **T.1→T.13**. In this menu, some selected important data valid at the time of the fault are recorded. This feature is intended to help the user or the service person to determine the cause of fault.

The data available are:

T.1	Counted operation days *(Fault 43: Additional code)*	d
T.2	Counted operation hours *(Fault 43: Counted operation days)*	hh:mm:ss *(d)*
T.3	Output frequency *(Fault 43: Counted operation hours)*	Hz *(hh:mm:ss)*
T.4	Motor current	A
T.5	Motor voltage	V
T.6	Motor power	%
T.7	Motor torque	%
T.8	DC voltage	V
T.9	Unit temperature	°C
T.10	Run status	
T.11	Direction	
T.12	Warnings	
T.13	0-speed*	

Table 7-5. Fault time recorded data

* Tells the user if the drive was at zero speed (< 0.01 Hz) when the fault occurred

Real time record

If real time is set to run on the frequency converter the data items **T1** and **T2** will appear as follows:

T.1	Counted operation days	yyyy-mm-dd
T.2	Counted operation hours	hh:mm:ss,sss

7.3.5 Fault history menu (M5)

The *Fault history menu* can be entered from the *Main menu* by pushing the *Menu button right* when the location indication **M5** is visible on the first line of the keypad display. Find the fault codes in Table 7-4.

All faults are stored in the *Fault history menu* in which you can browse through them using the *Browser buttons*. Additionally, the *Fault time data record* pages (see Chapter 7.3.4.3) are accessible at each fault. You can return to the previous menu anytime by pushing the *Menu button left*.

The memory of the frequency converter can store a maximum of 30 faults in the order of appearance. The number of faults currently in the fault history is shown on the value line of the main page (**H1→H#**). The order of the faults is indicated by the location indication in the upper left corner of the display. The latest fault carries the indication F5.1, the second latest F5.2 etc. If there are 30 uncleared faults in the memory the next occurring fault will erase the oldest from the memory.

Pressing the *Enter button* for about 2 to 3 seconds resets the whole fault history. Then, the symbol **H#** will change to **0**.

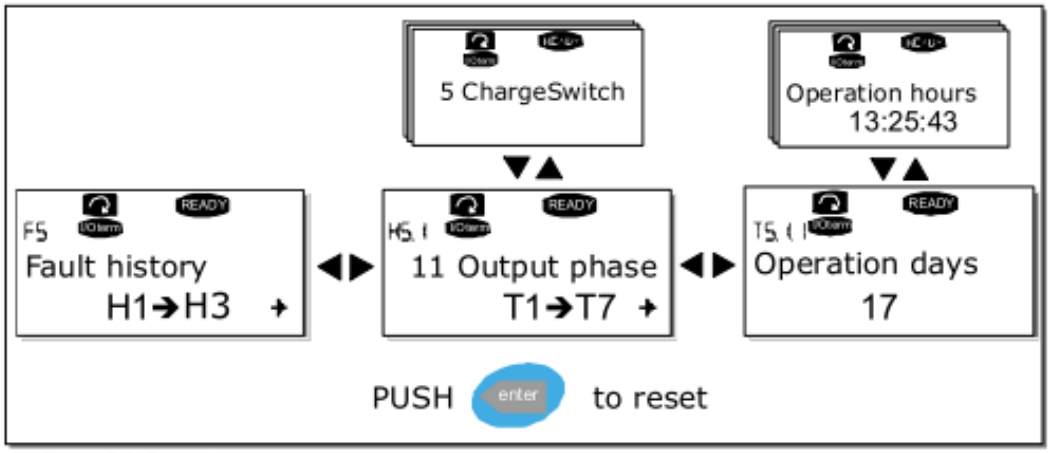


Figure 7-8. Fault history menu

Tel. +358 (0)201 2121 • Fax +358 (0)201 212 205

7.3.6.1 Language selection

The Vacon control keypad offers you the possibility to control the frequency converter through the keypad in the language of your choice.

Locate the language selection page under the *System menu*. Its location indication is **S6.1**. Press the *Menu button right* once to enter the edit mode. As the name of the language starts to blink you are able to choose another language for the keypad texts. Confirm the selection by pushing the *Enter button* The blinking stops and all textual information on the keypad is presented in the language you chose.

You can return to the previous menu anytime by pushing the *Menu button left*.

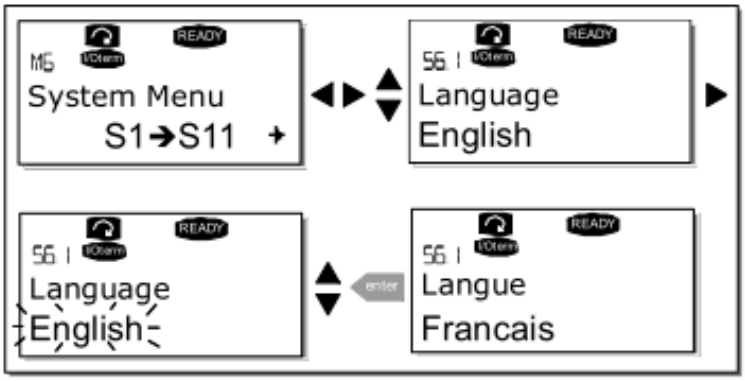


Figure 7-9. Selection of language

7.3.6.2 Application selection

The user can select the application desired by entering the *Application selection page (S6.2)*. This is done by pushing the *Menu button right* when on the first page of the *System menu*. Change then the application by pushing the *Menu button right* once again. The name of the application starts to blink. Now you can browse through the applications with the *Browser buttons* and select another application with the *Enter button*.

Changing application will reset all parameters. After application change, you will be asked if you want the parameters of the **new** application to be uploaded to the keypad. If you wish this to happen push the *Enter button* Pushing any other button leaves the parameters of the **previously used** application saved in the keypad. For more information, see Chapter 7.3.6.3.

For more information about the Application Package, see Vacon NX Application Manual.

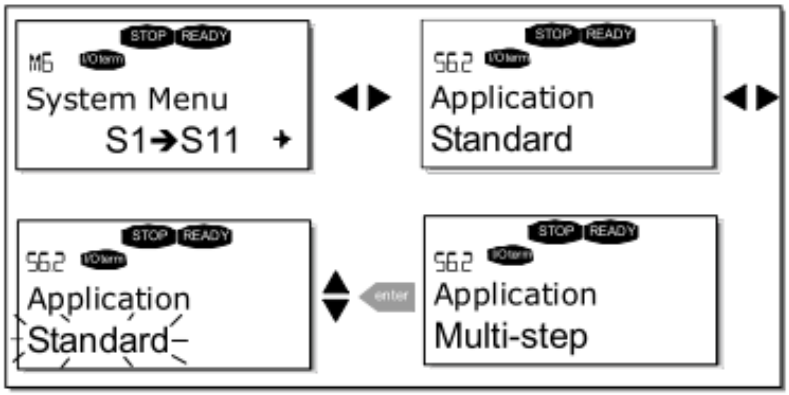


Figure 7-10. Change of application

7.3.6.3 Copy parameters

The parameter copy function is used when the operator wants to copy one or all parameter groups from one drive to another or to store parameter sets in the internal memory of the converter. All the parameter groups are first *uploaded* to the keypad, then the keypad is connected to another drive and then the parameter groups are *downloaded* to it (or possibly back to the same drive).

Before any parameters can successfully be copied from one drive to another the **drive** has to be **stopped** when the parameters are downloaded to it:

The parameter copy menu **(S6.3)** embodies four functions:

Parameter sets (S6.3.1)

The Vacon NX_ frequency converter features a possibility for the user to load back the factory default parameter values and to store and load two customised parameter sets (all parameters included in the application).

On *Parameter sets* page **(S6.3.1)**, push the *Menu button right* to enter the *Edit menu*. The text *LoadFactDef* begins to blink and you can confirm the loading of factory defaults by pushing the *Enter button*. The drive resets automatically.
Alternatively you can choose any other of the storing or loading functions with the *Browser buttons*. Confirm with the *Enter button*. Wait until 'OK' appears on the display.

Tel. +358 (0)201 2121 • Fax +358 (0)201 212 205

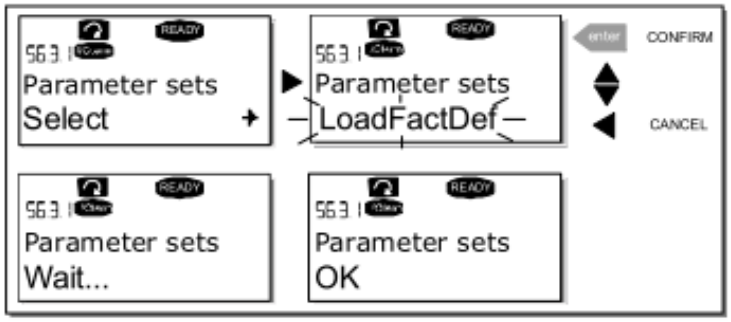


Figure 7-11. Storing and loading of parameter sets

Upload parameters to keypad (To keypad, S6.3.2)

This function uploads **all** existing parameter groups to the keypad provided that the drive is stopped.

Enter the *To keypad* page (S6.3.2) from the *Parameter copy menu*. Push the *Menu button right* to enter the edit mode. Use the *Browser buttons* to select the option *All parameters* and press the *Enter button*. Wait until 'OK' appears on the display.

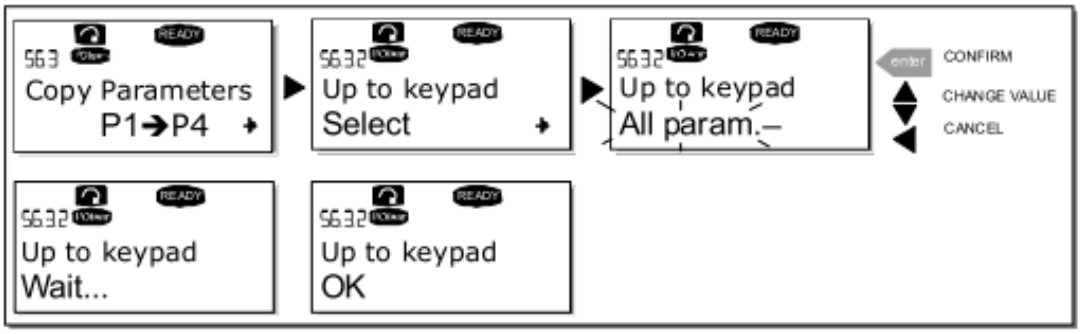


Figure 7-12. Parameter copy to keypad

Download parameters to drive (From keypad, S6.3.3)

This function downloads **one** or **all parameter** groups uploaded to the keypad to a drive provided that the drive is in STOP status.

Enter the *From keypad* page (S6.3.3) from the *Parameter copy menu*. Push the *Menu button right* to enter the edit mode. Use the *Browser buttons* to select either the option *All parameters* or *Application parameters* and press the *Enter button*. Wait until 'OK' appears on the display.

The procedure to download the parameters from keypad to drive is similar to that of from drive to keypad. See above.

Automatic parameter backup (P6.3.4)

On this page you can activate or inactivate the parameter backup function. Enter the edit mode by pressing the *Menu button right*. Choose *Yes* or *No* with the *Browser buttons*.

When the Parameter backup function is activated Vacon NX control keypad makes a copy of the parameters of the presently used application. Every time a parameter is changed the keypad backup is automatically updated.

When applications are changed, you will be asked if you wish the parameters of the **new** application to be uploaded to the keypad. For this to happen, push the *Enter button*. If you wish to keep the copy of the parameters of the **previously used** application saved in the keypad push any other button. Now you will be able to download these parameters to the drive following the instructions given in chapter 7.3.6.3.

If you want the parameters of the new application to be automatically uploaded to the keypad you have to do this for the parameters of the new application once on page 6.3.2 as instructed. **Otherwise the panel will always ask for the permission to upload the parameters.**

Note: Parameters saved in the parameter settings on page **S6.3.1** will be deleted when applications are changed. If you want to transfer the parameters from one application to another you have to upload them first to the keypad.

7.3.6.4 Parameter comparison

In the *Parameter comparison* submenu **(S6.4)**, you can compare the **actual parameter values** to the values of your customised parameter sets and those loaded to the control keypad.

The comparison is performed by pushing the *Menu button right* when in the *Compare parameters submenu*. The actual parameter values are first compared to those of the customised parameter Set1. If no differences are detected a '0' is displayed on the lowermost line. But if any of the parameter values differ from those of the Set1 the number of the deviations is displayed together with symbol **P** (e.g. P1→P5 = five deviating values). By pressing the *Menu button right* once again you can still enter the pages where you can see both the actual value and the value it was compared to. In this display, the value on the Description line (in the middle) is the default value and the one on the value line (lowermost) is the edited value. Furthermore, you can also edit the actual value with the *Browser buttons* in the *edit mode* that you can reach by pushing the *Menu button right* once again.
In the same way, you can perform the comparison of the actual values to *Set2*, *Factory Settings* and *Keypad Set*.

Tel. +358 (0)201 2121 • Fax +358 (0)201 212 205

VACON NXP
FREQUENCY CONVERTERS

Application

CAVOTEC SPECIMAS

Application CAVOTEC SPECIMAS (Software ASITQ224_v320)

Index

1. Description 2
2. Control I/O 5
3. Monitoring values (Menu M1) 7
4. Parameters (Menu M2) 8
4.1. Basic Parameters (Menu M2 → G2.1) 9
4.2. Reel Control Parameters 11
4.2.1. Automatic (Menu M2 → G2.2.1) 11
4.2.2. Speed Window (Menu M2 → G2.2.2) 16
4.2.3. Manual (Menu M2 → G2.2.3) 22
4.3. Input Signals Parameters 24
4.3.1. AIN1 Torque Control (Menu M2 → G2.3.1) 24
4.3.2. AIN2 Speed Reference (Menu M2 → G2.3.2) 25
4.3.3. Digital Inputs (Menu M2 → G2.3.3) 26
4.3.4. Drum Diameter (Menu M2 → G2.3.4) 27
4.4. Output Signals Parameters (Menu M2 → G2.4) 28
4.5. Drive Control Parameters (Menu M2 → G2.5) 33
4.6. Motor Control Parameters (Menu M2 → G2.6) 34
4.6.1. Open Loop (Menu M2 → G2.6.7) 36
4.6.2. Closed Loop (Menu M2 → G2.6.8) 37
4.6.3. Torque Control (Menu M2 → G2.6.9) 38
4.7. Protection (Menu M2 → G2.7) 39
4.8. Auto Restart (Menu M2 → G2.8) 46
4.9. Fieldbus (Menu M2 → G2.9) 48
5. Keypad control (Menu M3) 52
6. Expander Boards (Menu M7) 53
7. Faults 54

1. Description

The software for the frequency converter control provides two ways of working: automatic and manual.
Manual control is activated through the digital input named DI6.

Automatic
In automatic state, the motor is controlled by torque reference; torque level is selected through combination of four digital inputs (named DI1, DI3, DI4 e DI5) and one analog input (named AIN1).
At power on, without run command (DI1) active, torque value is constant and equal to parameter “Default” (P2.2.1.2); if that parameter is equal to zero, then frequency converters does not drive the motor.
When digital input DI1 get an high value, a “Reeling IN Const Speed” torque level, with programmable minimum (P2.2.1.3) and maximum (P2.2.1.4) values, is activated; actual torque value is linearly adjusted between those limits by the analog input AIN1.

Five more torque levels are available, activated by signals DI3,4,5. Usually these signals are related to Reel OUT, Acceleration and Deceleration conditions.
Depending on parameter P2.2.1.24, those levels are either used as absolute torque values or are added to Reel IN level (Offset logic). They are adjusted by means of analog input AIN1 (parameters from P2.2.1.5 to P2.2.1.14).

It is also possible to have constant torque values (= minimum), by programming parameter P2.2.1.25.

“Offset” correction can also assume negative values; absolute minimum (P2.2.1.15) and maximum (P2.2.1.16) torque limits are anyway present, which will not be exceed with any “Offset” combination.

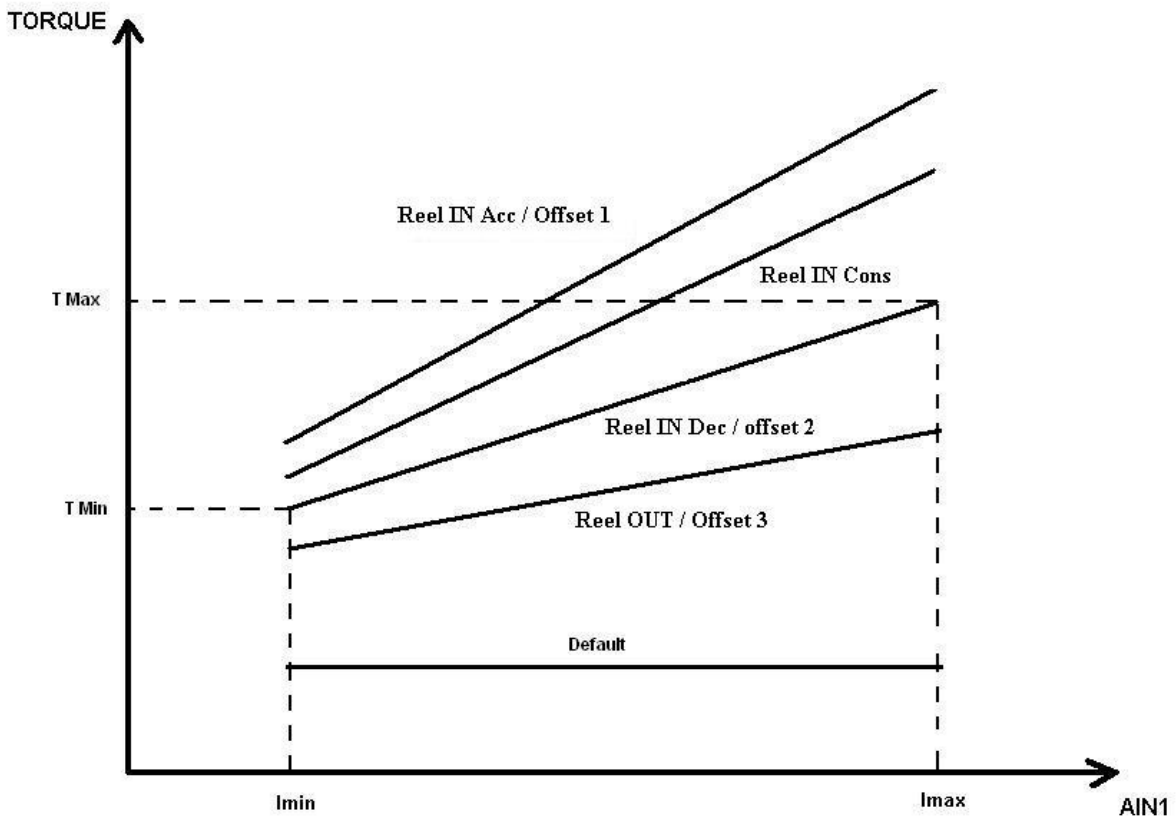


Figure 1-1. Example of torque levels.

The logic for torque level selection features three different ways of operating, selected by parameter (P2.2.1.1)

All the digital and analog control signals can be assigned to drive input/output channels in flexible way, through parameters (group G2.3).

Usually the maximum speed achievable by the motor under torque control is corresponding to maximum frequency (P2.1.1), in both directions.
A function called “Speed window” is available, which uses a second analog signal (named AIN2) as a theoretical speed reference and check if actual motor speed is inside a certain range as to the reference.
Through parameterization and depending on direction, it is possible to define if motor speed must be kept inside range limits (control mode will change automatically to speed control) or if it can exceed limits, with signaling on digital output.

A logic for automatic recognizing of the motor speed variation is available, which adds corrective terms (P2.2.1.17-20) to the torque reference for inertia compensation during acceleration and deceleration. This logic needs the speed reference.

Manual
Manual control mode is activated rising digital input DI6 at high level.
In this state, signals DI4 and DI5 act as commands for reeling in and reeling out operations.
Motor is under speed control; speed reference can be either a constant value (P2.2.2.2) or a value set on panel, or it can be adjusted by an analog input.
Motor torque can be anyway limited (P2.2.2.7).
Speed reference can also be internally scaled as function of actual diameter of the reel (measure from analogue input AI1), to have a coarsely constant cable speed.

NOTE: application software is conceived as that a positive torque reference causes the motor run in cable rewinding direction.
If at commissioning time the direction is wrong, it is necessary to exchange two motor power phases and to reverse encoder counting by parameter P7.3.1.2 (see also chapter 6 Expansion boards).

Fieldbuses support: command signals and analogue references can be replaced by fieldbus communication. An optional fieldbus board must be installed on the NXP drive for this purpose.
Fully supported buses are: Profibus, CANOpen, Modbus (both RTU and TCP/IP). Constraints exist for DeviceNet.

2. Control I/O

NXOPTA1			
Terminal		Signal	Description
1	$+10V_{ref}$	Reference output	Voltage for potentiometer, etc.
2	AI1+	Analogue input 1 Range: 0 - 10V / 0 –20 mA	Torque control reference
3	AI1-		
4	AI2+	Analogue input 2 Range: 0 –10V / 0 – 20 mA	Speed control reference
5	AI2-		
6	+24V	Control voltage output	Voltage for switches etc.; max 0.1A
7	GND	I/O ground	Ground for reference and controls
8	DIN1	Run	Contact closed = run
9	DIN2	Fault reset	Contact closed = reset
10	DIN3	Offset 3	Contact closed = offset 3 activation
11	CMA	Common for DIN 1—DIN 3	Connect to GND o +24V
12	+24V	Control voltage output	Voltage for switches etc.; max 0.1A
13	GND	I/O ground	Ground for reference and controls
14	DIN4	Offset 2	Contact closed = offset 2 / reel in manual
15	DIN5	Offset 1	Contact closed = offset 1 / reel out manual
16	DIN6	Manual	Contact closed = manual activation
17	CMB	Common for DIN 4—DIN 6	Connect to GND o +24V
18	AO1+	Analogue output	Output frequency Range 0—20 mA/R_L, max. 500Ω
19	AO1-		
20	DO1	Digital output	Run signaling Open collector, I≤50mA, U≤48 VDC
NXOPTA2			
21	RO1	 Relay output 1	Ready signaling
22	RO1		
23	RO1		
24	RO2	 Relay output 2	Fault signaling
25	RO2		
26	RO2		

Table 1- 2. Standard I/O configuration .

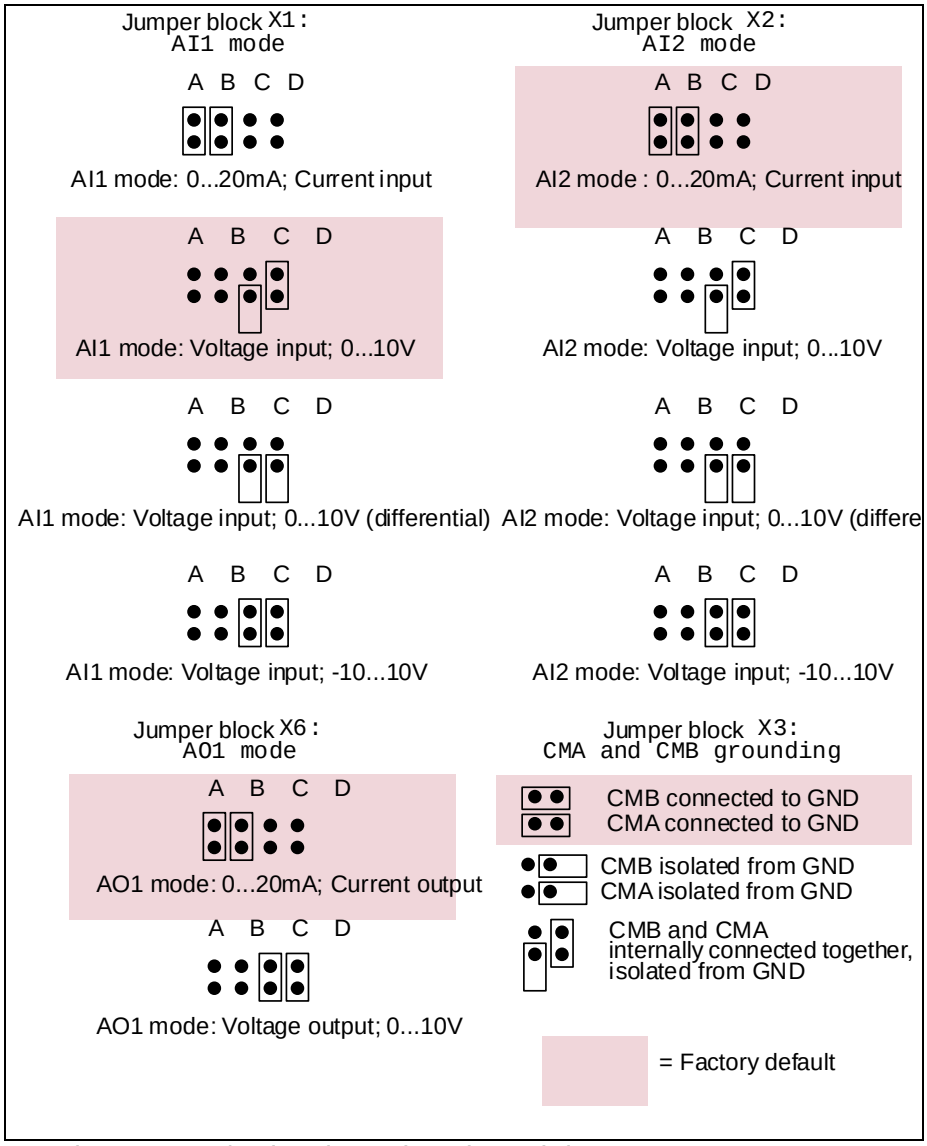


Figure 1-2. I/0 signals setting through jumpers.

3. Monitoring values (Menu M1)

The monitoring values are the actual values of parameters and signals, as well as statuses and measurements. Monitoring values cannot be edited.
See Vacon NX User's manual, Chapter 7 for more information.

.

Code	Parameter	Unit	Description
V1.1	Output frequency	Hz	Output frequency to motor
V1.2	Frequency reference	Hz	Frequency reference to motor control
V1.3	Torque reference	%	Torque reference to motor control
V1.4	Motor speed	rpm	Motor speed in rpm
V1.5	Motor current	A	Measured motor current
V1.6	Motor torque	%	In % of motor nominal torque
V1.7	Motor power	%	Motor shaft power
V1.8	Motor voltage	V	Motor voltage
V1.9	DC link voltage	V	DC link voltage
V1.10	Unit temperature	°C	Heatsink temperature
V1.11	Motor temperature	°C	Calculated motor temperature
V1.12	Analogue input 1	%	AIN1
V1.13	Analogue input 2	%	AIN2
V1.14	DIN1, DIN2, DIN3		Digital inputs status
V1.15	DIN4, DIN5, DIN6		Digital inputs status
V1.16	DO1,RO1,RO2		Digital output status
V1.17	Analogue output	mA	AO1
V1.18	Control mode		Active control mode
V1.19	Inertia compensation	%	Torque correction for acceleration/deceleration
V1.20	Reference for speed window	Hz	Theoretical speed reference (as Hz) used for the speed window
V1.21	SW Upper limit	Hz	Upper limit when speed window is active
V1.22	SW Lower limit	Hz	Lower limit when speed window is active
V1.23	Encoder frequency	Hz	Actual speed, as Hz, read from encoder
V1.24	Actual diameter	%	Actual reel diameter, read from AI1 input
V1.25	Mov Out Acc Dec		Status of most relevant digital inputs (it follows DigIn programming)
G1.27	Multimonitor items		Displays three selectable monitoring values.

Table 1-1. Monitoring values

Note: Multimonitor page is automatically shown at power on and after 1 minute of inactivity on the keypad (depends on P3.6). It is also immediately shown when pressing Reset button.

4. Parameters (Menu M2)

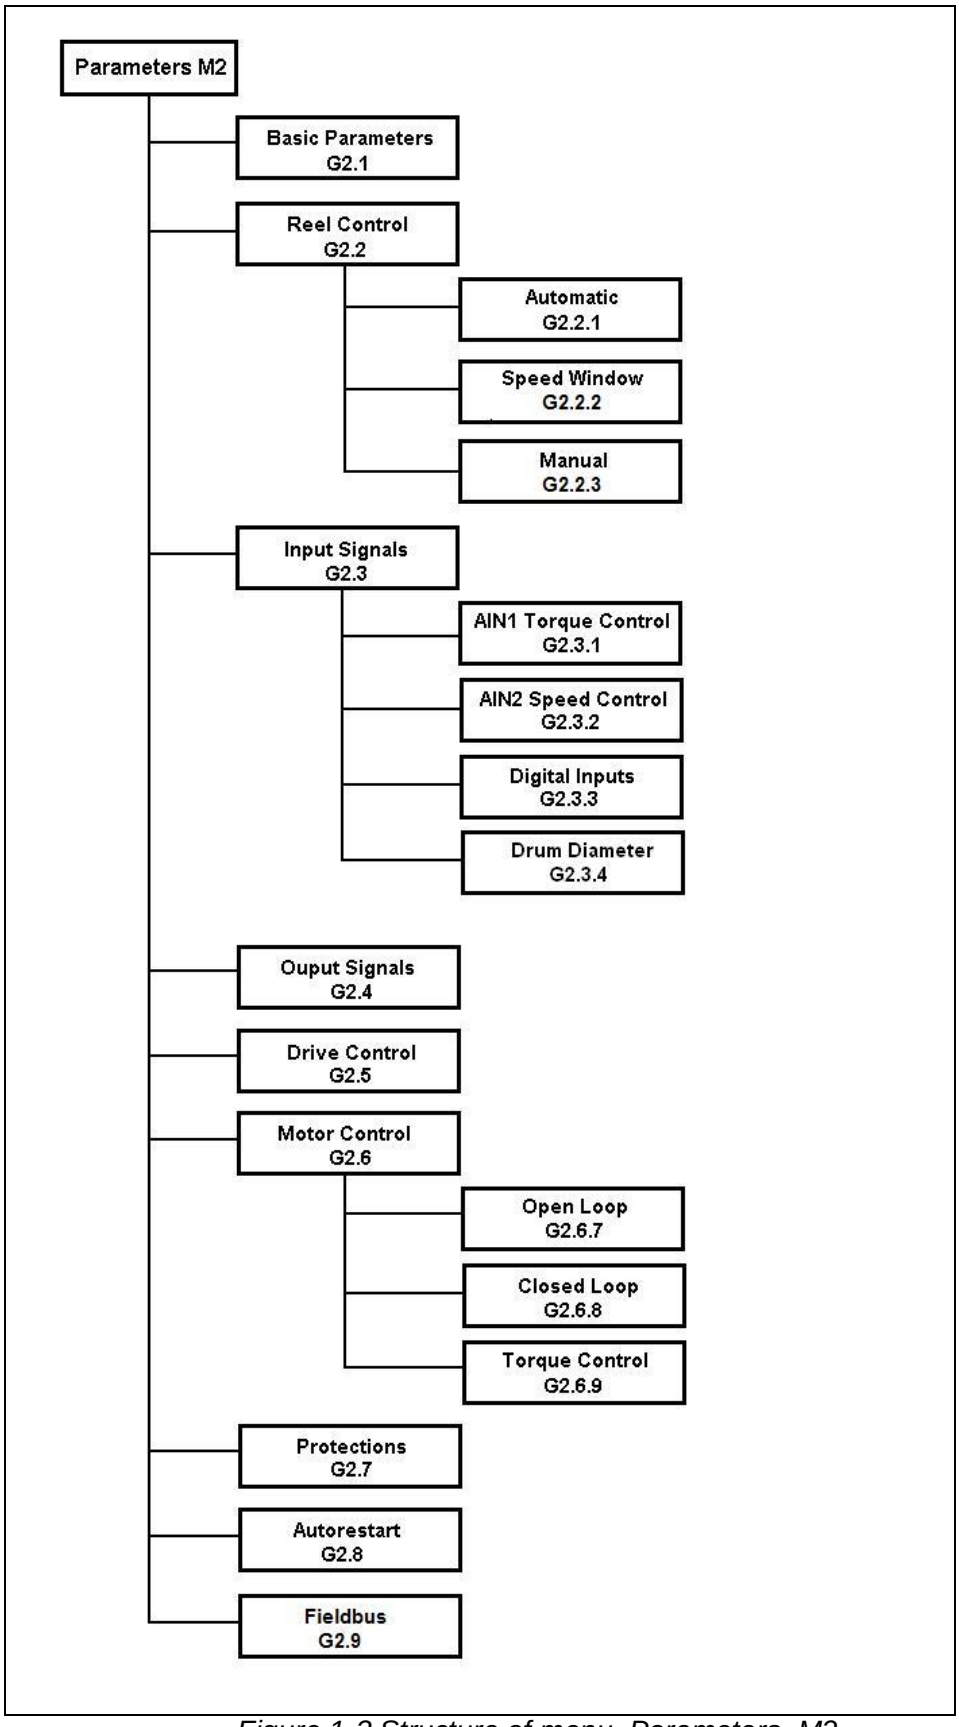


Figure 1-3.Structure of menu Parameters M2

4.1. Basic Parameters (Menu M2 → G2.1)

Code	Parameter	Min	Max	Unit	Default	Note
P2.1.1	Max Frequency	0	320,00	Hz	50,00	**NOTE**: If f_{max} > than motor synchronous speed, check suitability for motor and drive system.
P2.1.2	Current Limit	0,2 x I_H	2 x I_H	A	I_H	**NOTE**: This applies for frequency converters up to FR7. For greater sizes, consult the factory.
P2.1.3	Nominal Motor Voltage	180	690	V	NX2: 230 NX5:400 NX6:690	Check the rating plate of the motor.
P2.1.4	Nominal Motor Frequency	30,00	320,00	Hz	50,00	Check the rating plate of the motor.
P2.1.5	Nominal Motor Speed	30	20000	rpm	1440	The default applies for a 4 pole motor and a nominal size frequency converter.
P2.1.6	Nominal Motor Current	0,2 x I_H	2 x I_H	A	I_L	Check the rating plate of the motor.
P2.1.7	Motor cosφ	0,3	1,0		0,85	Check the rating plate of the motor.
P2.1.8	Magnetizing Current	0,2 x I_H	2 x I_H	A	0,5 x I_L	Check the rating plate of the motor.

Table 1-3. Basic Parameters, G2.1

2.1.1 Max frequency

Defines the higher operating frequency of the motor, corresponding to the maximum speed of the crane. It is very important not to set this parameter to a value lower than the actually requested: see also chapter 4.2.1.1 Speed Window.

2.1.2 Current limit

This parameter determines the maximum current from the frequency converter. The current limit is 1.5 times the rated current (I_L) by default.

2.1.3 Nominal motor voltage

Find this value on the rating plate of the motor. This parameter sets the voltage at the field weakening point (parameter 2.6.3) to 100% x U_{nmotor}

2.1.4 Nominal motor frequency

Find this value on the rating plate of the motor. This parameter sets the field weakening point (parameter 2.6.2) to the same value.

2.1.5 Nominal motor speed

Find this value n_n on the rating plate of the motor.

2.1.6 Nominal motor current

Find this value I_n on the rating plate of the motor.

2.1.7 Motor cosφ

Find this value cosφ on the rating plate of the motor.

2.1.8 Motor magnetizing current

Find this value on the rating plate of the motor (no-load current).

4.2. Reel Control Parameters

4.2.1. Automatic (Menu M2 → G2.2.1)

Code	Parameter	Min	Max	Unit	Default	Note
P2.2.1.1	Control mode	0	2		0	0= Basic 1= DI logic 2= Auto Reverse
P2.2.1.2	Default Torque	-300,0	300,0	%	20,0	Torque without run command
P2.2.1.3	Reel IN Const Speed TMin	0,0	300,0	%	40,0	Level standard minimum
P2.2.1.4	Reel IN Const Speed TMax	0,0	300,0	%	60,0	Level standard maximum
P2.2.1.5	Reel IN Decel TMin	-300,0	300,0	%	0,0	Level 1 minimum
P2.2.1.6	Reel IN Decel TMax	-300,0	300,0	%	0,0	Level 1 maximum
P2.2.1.7	Reel IN Accel TMin	-300,0	300,0	%	0,0	Level 2 minimum
P2.2.1.8	Reel IN Accel TMax	-300,0	300,0	%	0,0	Level 2 maximum
P2.2.1.9	Reel OUT Const Speed TMin	-300,0	300,0	%	0,0	Level 3 minimum
P2.2.1.10	Reel OUT Const Speed TMax	-300,0	300,0	%	0,0	Level 3 maximum
P2.2.1.11	Reel OUT Decel TMin	-300,0	300,0	%	0,0	Level 4 minimum
P2.2.1.12	Reel OUT Decel Tmax	-300,0	300,0	%	0,0	Level 4 maximum
P2.2.1.13	Reel OUT Accel TMin	-300,0	300,0	%	0,0	Level 5 minimum
P2.2.1.14	Reel OUT Accel TMax	-300,0	300,0	%	0,0	Level 5 maximum
P2.2.1.15	Min Torque Limit	-100.0	300,0	%	0,0	Resultant torque min limit
P2.2.1.16	Max Torque Limit	P2.2.1.15	300,0	%	100,0	Resultant torque max limit
P2.2.1.17	Inertia Comp. IN Acc	0	20,00	%	0,00	Torque for reeling in acc
P2.2.1.18	Inertia Comp. IN Dec	0	20,00	%	0,00	Torque for reeling in dec
P2.2.1.19	Inertia Comp. IN Acc	0	20,00	%	0,00	Torque for reeling out acc
P2.2.1.20	Inertia Comp. IN Dec	0	20,00	%	0,00	Torque for reeling out dec
P2.2.1.21	Inertia Comp. Filter	0,00	5,00	s	0,20	Filter on torque correction
P2.2.1.22	Signal source for Inertia Comp.	0	1		0	0= motor encoder 1= external speed reference
P2.2.1.23	Inertia Comp. Filter	0,00	5,00	s	0,20	Filter on torque correction
P2.2.1.24	Inertia Comp at Max Diameter	0	500,0	%	100,0	Diameter depending factor
P2.2.1.25	Torque Constant/Linear	0	1		1	0= constant 1= linear
P2.2.1.26	Torque Ramp Time	0,00	10,00	s	0,00	Time to reach 100% torque

Code	Parameter	Min	Max	Unit	Default	Note
P2.2.1.27	Pulse IN ACC Torque	0	100,0	%	0,0	Impulsive additional torque
P2.2.1.28	Pulse IN ACC Time	0	30,00	s	2,00	Pulse time
P2.2.1.29	Pulse IN DEC Torque	-100,0	0	%	0,0	Impulsive subtractive torque
P2.2.1.30	Pulse IN DEC Time	0	30,00	s	2,00	Pulse time
P2.2.1.31	Pulse OUT ACC Torque	-100,0	0	%	0,0	Impulsive subtractive torque
P2.2.1.32	Pulse OUT ACC Time	0	30,00	s	2,00	Pulse time
P2.2.1.33	Pulse OUT DEC Torque	0	100,0	%	0,0	Impulsive additional torque
P2.2.1.34	Pulse OUT DEC Time	0	30,00	s	2,00	Pulse time
P2.2.1.35	Pulse Torque at Max Diameter	0	500,0	%	100,0	Diameter depending factor

Table 1-4. Automatic parameters , G2.2.1

2.2.1.1 Control Mode

Defines the modality for the selection of the torque level, as function of digital inputs state:
0: Basic
1: DI Logic
2: Auto Reverse

The following tables represent the logics for selection; digital signals DI_ can be associated in flexible manner to the digital inputs of the drive.
Torque levels can linearly vary as function of analogue signal AIN1.
Auto Reverse mode works with automatic recognizing of the motor direction.

BASIC CONTROL

DI 1	DI 5	DI 4	DI 3	TORQUE LEVEL
-	-	-	-	Default
-	X	-	-	Default
-	-	X	-	Default
-	-	-	X	Default
X	-	-	-	Reel IN Const
X	X	-	-	Reel IN Dec
X	-	X	-	Reel IN Acc
X	-	-	X	Reel OUT Const
X	-	X	X	Reel IN Acc or Reel OUT Const (the first activated)

DI LOGIC CONTROL

DI 1	DI 5	DI 4	DI 3	TORQUE LEVEL
-	-	-	-	Default
-	X	-	-	Default
-	-	X	-	Default
-	-	-	X	Default
X	-	-	-	Reel IN Const
X	X	-	-	Reel IN Dec
X	-	X	-	Reel IN Acc
X	-	-	X	Reel OUT Const
X	X	-	X	Reel OUT Dec
X	-	X	X	Reel OUT Acc
X	X	X	-	NOT ALLOWED
X	X	X	X	NOT ALLOWED

AUTO REVERSE CONTROL

DI 1	DI 5	DI 4	DI 3	REV	TORQUE LEVEL
-	-	-	-	-	Default
-	X	-	-	-	Default
-	-	X	-	-	Default
-	-	-	X	-	Default
X	-	-	-	-	Reel IN Const
X	X	-	-	-	Reel IN Dec
X	-	X	-	-	Reel IN Acc
X	-	-	X	-	Reel OUT Const
X	-	-	-	X	Reel OUT Dec
X	X	-	-	X	Reel IN Dec + Reel OUT Dec
X	-	X	-	X	Reel IN Acc + Reel OUT Dec
X	-	-	X	X	Reel OUT Const + Reel OUT Dec

REV : motor on reverse direction

2.2.1.2 Default Torque

Defines DEFAULT torque level.

2.2.1.3 Reel IN Const Speed Torque Min

Defines STANDARD torque level, corresponding to minimum of analogue signal AIN1.

2.2.1.4 Reel IN Const Speed Torque Max

Defines STANDARD torque level, corresponding to maximum of analogue signal AIN1.

2.2.1.5 Reel IN Dec / Offset 1 TMin

Defines torque level 1, corresponding to minimum of analogue signal AIN1.

2.2.1.6 Reel IN Dec / Offset 1 TMax

Defines torque level 1, corresponding to maximum of analogue signal AIN1.

2.2.1.7 Reel IN Acc / Offset 2 TMin

Defines torque level 2, corresponding to minimum of analogue signal AIN1.

2.2.1.8 Reel IN Acc / Offset 2 TMax

Defines torque level 2, corresponding to maximum of analogue signal AIN1.

.

2.2.1.9 Reel OUT Const Speed / Offset 3 TMin

Defines torque level 3, corresponding to minimum of analogue signal AIN1.

2.2.1.10 Reel OUT Const Speed / Offset 3 TMax

Defines torque level 3, corresponding to maximum of analogue signal AIN1.

2.2.1.11 Reel OUT Dec / Offset 4 TMin

Defines torque level 4, corresponding to minimum of analogue signal AIN1.

2.2.1.12 Reel OUT Dec / Offset 4 TMax

Defines torque level 4, corresponding to maximum of analogue signal AIN1.

2.2.1.13 Reel OUT Acc / Offset 5 TMin

Defines torque level 5, corresponding to minimum of analogue signal AIN1.

2.2.1.14 Reel OUT Acc / Offset 5 TMax

Defines torque level 5, corresponding to maximum of analogue signal AIN1.

2.2.1.15 Min Torque Limit

Defines minimum limit for the resultant torque, when DI1 (run) is active.

2.2.1.16 Max Torque Limit

Defines maximum limit for the resultant torque, when DI1 (run) is active.

2.2.1.17 Inertia Compensation for reeling IN Accel

Defines a corrective term for torque level during acceleration on reeling in, proportional to theoretical motor speed derivative.
Software recognizes acceleration sign, so this term is added to torque reference.
The parameter represents torque variation for a 1rad/ s^2 acceleration.
NOTE: the function needs the crane speed signal (P2.2.1.22= 1).

2.2.1.18 Inertia Compensation for reeling IN Decel
2.2.1.19 Inertia Compensation for reeling OUT Accel
2.2.1.20 Inertia Compensation for reeling OUT Decel

Similar to P2.2.1.18, but activated in different conditions. Software recognizes acceleration sign, so these positive terms are then automatically added or subtracted to torque reference.

2.2.1.21 Inertia Compensation Filter

Defines the time constant of the low-pass filter acting on inertia compensation; an higher value provides a more progressive torque correction, but it also introduces a delay on system response.

2.2.1.22 Signal Source for Inertia Compensation

Defines the source of the speed signal used for computation of inertia compensation.
0: motor encoder (not suggested)
1: theoretical speed reference, from P2.2.8

2.2.1.23 Inertia Compensation at Max Diameter

Values in P2.2.1.17-20 are applied with motor speed derivative calculated at minimum drum diameter. The inertia compensation can then vary linearly with actual diameter. This parameter is the multiplying factor at maximum diameter (100,0% means compensation not influenced by diameter value).
It is suggested to tune parameters P2.2.1.17-20 with the reel at minimum diameter and then to adjust P2.2.1.23 at maximum.

2.2.1.24 Torque Levels Mode

Defines how torque levels 1-5 are managed.
0: offsets (added to standard Reel IN Const)
1: absolute

2.2.1.25 Torque Constant / Linear

Defines if torque level is adjusted through analogue signal
0: constant (= T minimum)
1: linearly scaled

2.2.1.26 Torque Ramp Time

If greater then 0, changes in torque reference are smoothened with linear ramp. The parameter is the time to change from 0 to 100%.

2.2.1.27 Pulse reeling IN Accel Torque (only DI Logic)
2.2.1.28 Pulse reeling IN Accel Time

When DI Logic is used, an additional torque term can be automatically and temporary added when the crane changes its speed, to help the initial speed change of the drum. This pulse lasts the time programmed in P2.2.1.28, unless the activating DI falls before.

2.2.1.29 Pulse reeling IN Decel Torque (only DI Logic)
2.2.1.30 Pulse reeling IN Decel Time
2.2.1.31 Pulse reeling OUT Accel Torque (only DI Logic)
2.2.1.32 Pulse reeling OUT Accel Time
2.2.1.33 Pulse reeling OUT Decel Torque (only DI Logic)
2.2.1.34 Pulse reeling OUT Decel Time

Similar to P2.2.1.27, but activated in different conditions.
Values in P2.2.1.29 and P2.2.1.31 must be negative, because the pulling torque has to be lower to facilitate the speed change in these conditions.

2.2.1.35 Pulse torque at Max Diameter

Values in P2.2.1.27-29-31-33 are applied at minimum drum diameter. They can then vary linearly with actual diameter. This parameter is the multiplying factor at maximum diameter (100,0% means pulse torque not influenced by diameter value).
It is suggested to tune parameters P2.2.1.27-34 with the reel at minimum diameter and then to adjust P2.2.1.35 at maximum.

4.2.2. Speed Window (Menu M2 → G2.2.2)

Code	Parameter	Min	Max	Unit	Default	Note
P2.2.2.1	Speed Window	0	1		0	0= Not active 1= Active
P2.2.2.2	Upper Limit	0	100	%	10	Upper limit %
P2.2.2.3	Lower Limit	0	100	%	5	Lower limit %
P2.2.2.4	Min Upper Limit	0	50,00	Hz	5,00	Minimum value of upper limit
P2.2.2.5	Min Lower Limit	0	50,00	Hz	5,00	Minimum value of lower limit
P2.2.2.6	Upper Lim Action	0	3		1	0: no action 1: limit (rewind and unwind) 2: limit (rewind) + alarm (unwind) 3: limit (rewind) + limit (unwind)
P2.2.2.7	Lower Lim Action	0	3		1	0: no action 1: alarm (rewind and unwind) 2: limit (rewind) + alarm (unwind) 3: limit (rewind) + limit (unwind)
P2.2.2.8	Alarm Delay		10,00	s	1,00	Filter time for alarm
P2.2.2.9	Speed Reference Selection	0	2		0	0= analog input AIN2 1= encoder 2 2= fieldbus
P2.2.2.10	Encoder Multiplier	1	32000		1	Multiplication factor for encoder frequency
P2.2.2.11	Encoder Divider	1	32000		1	Division factor for encoder frequency
P2.2.2.12	Max Frequency at Minimum Diameter	0	P2.1.1		50,00	Motor speed at max crane speed and minimum drum diameter
P2.2.2.13	Max Torque for speed limit	50,0	300,0	%	100,00	Maximum produced torque
P2.2.2.14	Open window logic	0	2		0	0: never 1: resolver above threshold (and reel IN) 2: resolver below threshold (and Reel IN)
P2.2.2.15	Open window limit	0,0	100,0	%	0	Threshold in resolver signal, to open the window limit in Reel In condition
P2.2.2.16	Close window limit	0,0	100,0	%	0	Threshold in resolver signal, to close the window limit in Reel OUT condition
P2.2.2.17	Acc/Dec if open window	0	1		1	0: Acc/Dec signals are active 1:Acc/Dec signals are masked if window is open
P2.2.2.18	Speed fault	0	1		1	0: actual speed is not checked 1: speed error is checked
P2.2.2.19	Max speed error	1,00	100,00	Hz	5,00	Max speed error allowed (out of window condition)
P2.2.2.20	Speed check delay	0,00	10,00	s	1,00	Delay in speed error check, after window control activation

Table 1-5. Speed Window parameters, G2.2.2

If function “Speed window” is not active, the torque controlled motor can reach a maximum positive (rewinding direction) speed corresponding to maximum frequency P2.1.1, and a maximum negative (unwinding) speed corresponding to the frequency: - (P2.1.1 +5Hz).

IMPORTANT: when motor speed reaches those limits, control mode changes to speed control and the frequency converter can drive the motor with up to the maximum current to avoid limits overtaking. It is thus necessary to set correctly P2.1.1 so that it is not lower than the actual operating frequency, requested when the crane moves at its maximum speed.
During unwinding operation there is a 5Hz extension for the limit, to assure that an excessive tension on the cable will not take place because of the speed limit.

When Speed window is active (P2.2.2.1 =1) analogue signal AIN2 is considered to represent the speed of the crane. This value is then internally scaled accordingly to the drum diameter, to determine a theoretical speed reference for the motor.
AIN2 can be configured as “bi-directional” (P2.3.2.7 =1) when the analogue signal range is divided between positive and negative speed (recommended solution), or “unidirectional” (P2.3.2.7 =0) when it indicates the speed absolute value.

In the latter case the sense of movement is discriminated by the rotation direction of the motor.
It is also possible to get the actual direction from a digital input (defined in P2.3.3.11) if P2.3.2.7=2.

As alternative to AIN2, the speed reference can be acquired from a second encoder (OPTA7 board required) or from a fieldbus. In these cases the signal is always bi-directional.

It is then considered a “window” around the theoretical speed, based on upper and lower limits, expressed as percentage; there is also a minimum limit, expressed as Hz, which allows to have a significant window also at very low speed.
Parameters P2.2.2.6 and P2.2.2.7 allow to define if drive must avoid overtaking of the speed limits or simply to give an alarm signaling overtaking by digital output.

The implemented logic is:

Rewinding: the motor never exceeds upper limit (P2.2.2.6 = 1,2 or 3); it is possible either to avoid lower limit overtaking (P2.2.2.7 = 2 or 3) or to signal whenever it happens (P2.2.2.7 = 1).

Unwinding: if P2.2.2.6= 1 or 2 the motor can always reach a positive speed equal to minimum limit; when P2.2.2.6 = 2, there is also alarm if speed exceeds upper limit.
If P2.2.2.6= 3, motor speed is not allowed to be under upper limit.
There is always alarm if speed overtakes lower limit (P2.2.2.7 = 1 o 2); maximum negative speed is given by the sum of P2.1.1, the corresponding lower limit and a 5Hz margin.
With P2.2.2.7 = 3, motor speed is not allowed to exceed lower limit.
The following figures shows graphically how Speed window works, under some different configurations.

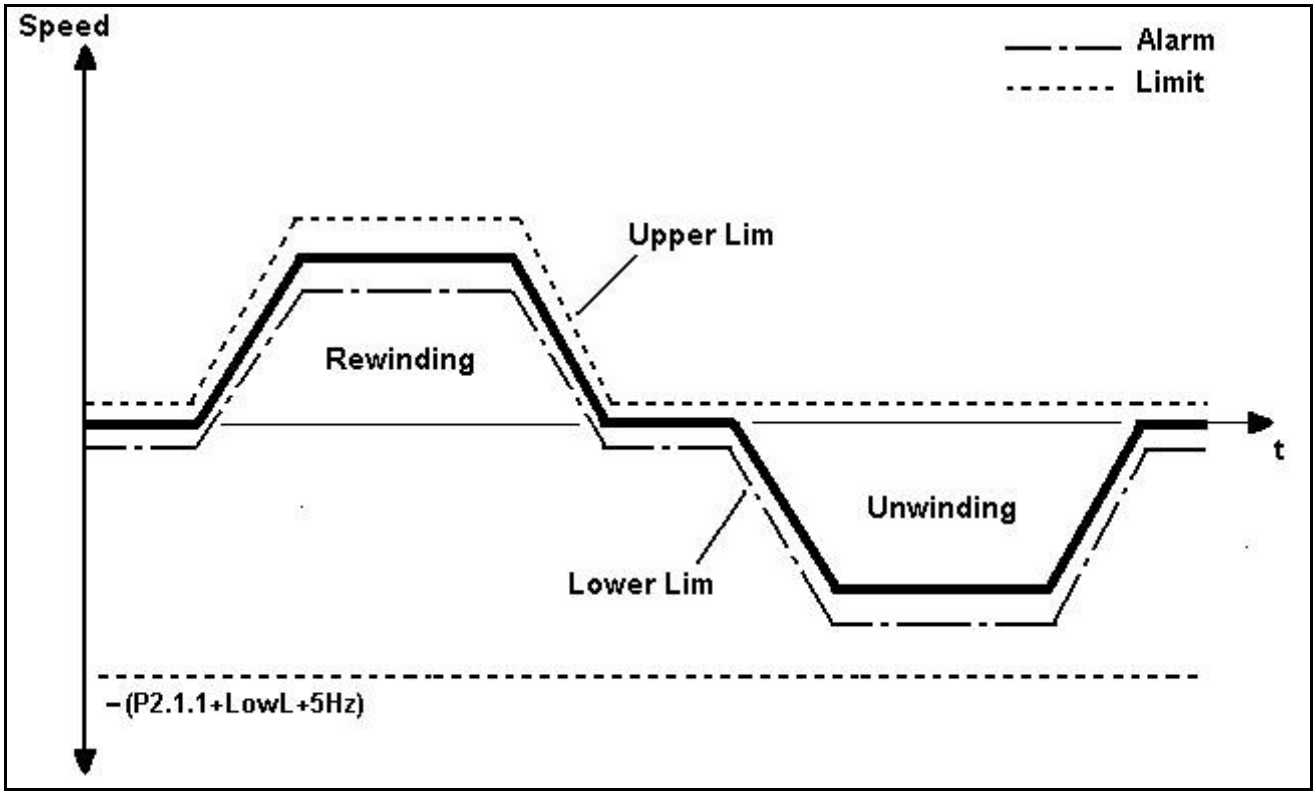


Figure 1-4. Speed window with P2.2.2.6=1 (limit) and P2.2.2.7=1 (alarm).

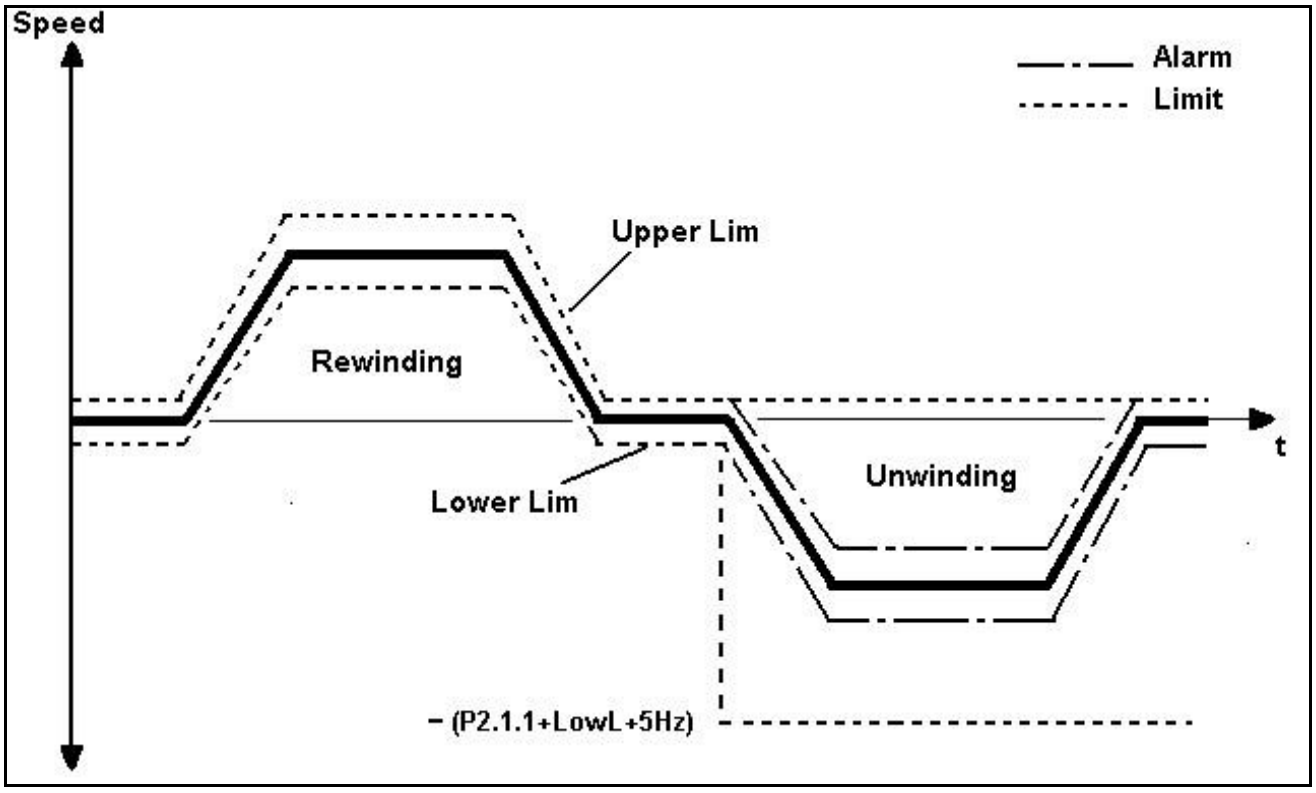


Figure 1-5. Speed window with P2.2.2.6 and P2.2.2.7=2 (limit + alarm).

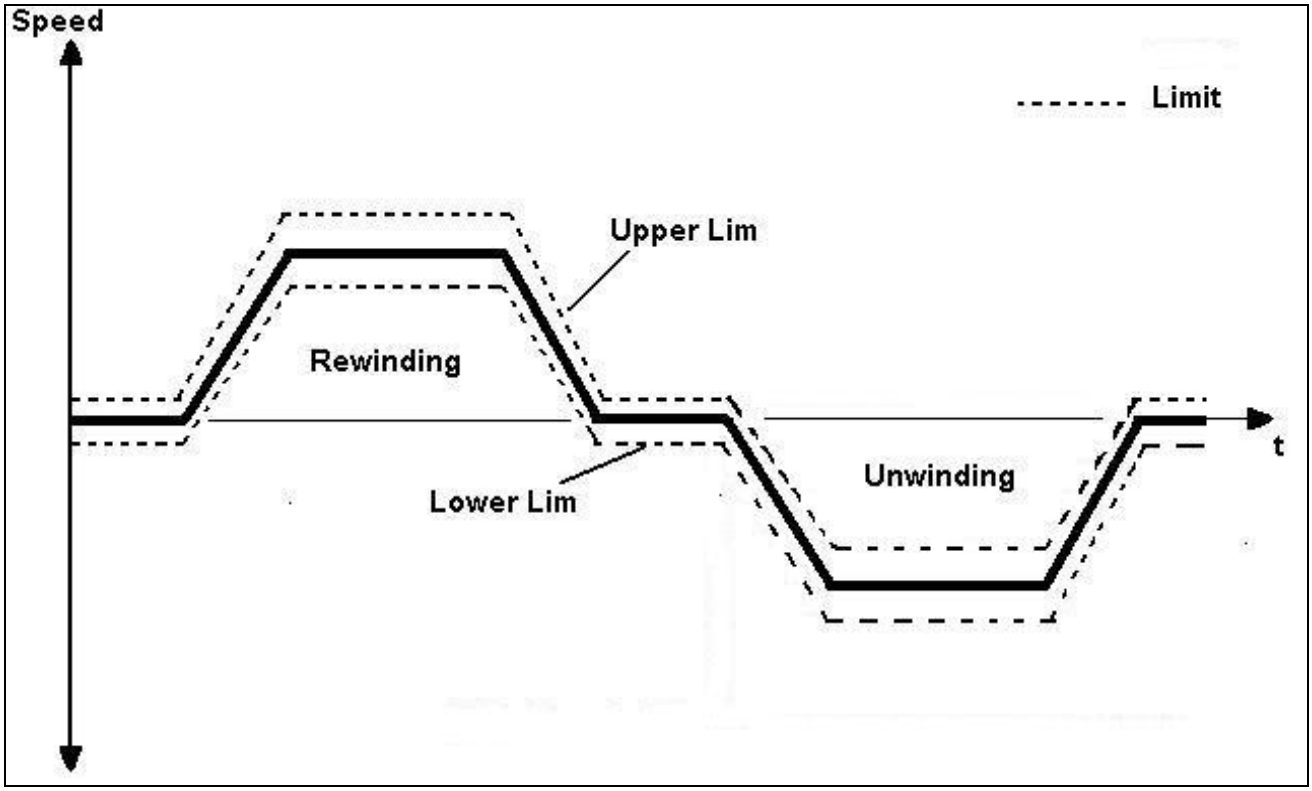


Figure 1-6. Speed window with P2.2.2.6 and P2.2.2.7=3 (limit + limit).

2.2.2.1 Speed Window

Activates speed control function.
0: Not active
1: Active

2.2.2.2 Upper Limit

This parameter represents upper limit of speed window; it is expressed as % of theoretical speed (signal AIN2).

2.2.2.3 Lower Limit

This parameter represents lower limit of speed window; it is expressed as % of theoretical speed (signal AIN2).

2.2.2.4 Minimum Upper Limit

This parameter represents the minimum value for upper limit of the window, to assure a suitable width also at very low speed; it is expressed as Hz.

2.2.2.5 Minimum Lower Limit

This parameter represents the minimum value for lower limit of the window, to assure a suitable width also at very low speed; it is expressed as Hz.

2.2.2.6 Upper Limit Action

Defines how frequency converter must work at reaching of upper limit.
0: No action (as P2.2.1.20.1=0)
1: Limit (rewinding) + No Action (unwinding) *
2: Limit (rewinding) + Alarm (unwinding) *
3: Limit (rewinding and unwinding)

***** Positive speed of the motor in unwinding is anyway limited to minimum positive limit.

2.2.2.7 Lower limit Action

Defines how frequency converter must work at reaching of lower limit.
0: No action (as P2.2.1.20.1=0)
1: Alarm (rewinding and unwinding)
2: Limit (rewinding) + Alarm (unwinding)
3: Limit (rewinding and unwinding)

2.2.2.8 Alarm Delay

This parameter allows to set a temporal filter on speed alarm.
Alarm will be activated only if overtaking of speed limit persists more than the programmed time.

Digital outputs can be set for signaling of speed error. An alarm text will be also showed on display, with code 61 when upper limit is overtaken (unwinding only) and code 62 when lower limit is overtaken (both unwinding and rewinding).

2.2.2.9 Speed Reference Source

Defines the signal for theoretical speed reference.
0: analog input AIN2
1: encoder 2, read by board OPTA7
2: fieldbus channel, configured by P2.9.2

Note: the low-pass filter programmed in P2.3.2.5 is active also on speed reference from encoder.

2.2.2.10 Encoder Multiplier
2.2.2.11 Encoder Divider

These parameters allow to define the kinematic ratio between the external encoder and the motor shaft.
Example: if the external encoder rotates at 1000rpm when the motor rotates at 1500rpm, parameters should be programmed as P2.2.2.10= 3 and P2.2.2.11=2.

2.2.2.12 Max Frequency at Minimum Diameter

This parameter sets the theoretical frequency of the motor when the crane is moving at its maximum speed and the diameter of the reeling drum is at minimum value.
It depends on mechanical ratio and polarity of the motor.

2.2.2.13 Max Torque for Speed Limit

This parameter sets the maximum torque that the motor will develop to respect the speed limits.
It is active when P2.2.2.1= 1 and (P2.2.2.6 >0 or P2.2.2.7>1).

This value is considered also when the motor is running within the speed window, so it must be higher than the maximum torque reference.
Speed limits can be overtaken if the torque limit is low.

2.2.2.14 Open window logic

The window limits can be automatically opened to maximum value, when in Reel IN condition, depending on the resolver signal level (analogue input set in P2.3.1.1).
The limits will be restored to normal value when in Reel OUT condition, still considering the resolver signal value.
IN or OUT condition is determined by motor encoder speed.
The window limits are also restored at any start of the machine, if the resolver has the proper signal.

0: never
1: resolver above threshold
2: resolver below threshold

2.2.2.15 Open window limit (in Reel IN)

Threshold in resolver signal, to open the speed window limits as from P2.2.2.14.

2.2.2.16 Close window limit (in Reel OUT and start of operations)

Threshold in resolver signal, to close the speed window limits as from P2.2.2.14.

2.2.2.17 Acc/Dec signals if window is open

0: Acc/Dec signals are considered when the window is open (specific torque levels are applied)
1: Acc/Dec signals are masked when the window is open (torque levels for constant speed are applied).

2.2.2.18 Speed fault

2.2.2.19 Max Speed Error

2.2.2.20 Speed check delay

Fault F64 can be activated with P2.2.2.18, in case the actual speed (motor encoder) does not respect the window (this can happen in case of fault on transducers or signals).
The maximum speed error (from window limits) is set in P2.2.2.19.
Checking of actual speed starts when the time in P2.2.2.20 has elapsed, after the drive has entered Run state and the window has been set to normal limits (not open).

4.2.3. Manual (Menu M2 → G2.2.3)

Code	Parameter	Min	Max	Unit	Default	Note
P2.2.3.1	Speed Selection	0	3		0	0 = jog speed 1= AIN2 2= AIN1 3= Panel
P2.2.3.2	Jog Speed	0,00	P2.1.1	Hz	10,00	Preset speed
P2.2.3.3	AIN Min Speed	0,0	P2.1.1	Hz	0,00	Minimum speed from AIN
P2.2.3.4	AIN Max Speed	P2.2.2.3	P2.1.1	Hz	50,00	Maximum speed from da AIN
P2.2.3.5	Acceleration Time	0,1	3000,0	s	3,0	Time from 0 to P2.1.1
P2.2.3.6	Deceleration Time	0,1	3000,0	s	3,0	Time from 0 to P2.1.1
P2.2.3.7	Torque Limit	0	400,0	%	100,0	Torque limit for manual commands
P2.2.3.8	Diameter Scaling	0	1		0	0= no scaling 1= scaling with reel diameter

Table 1-6 Manual parameters, G2.2.3

2.2.3.1 Speed Selection

Defines speed reference source for manual command.
0: preset speed P2.2.3.2
1: reference from AIN2
2: reference from AIN1
3: reference from panel

2.2.3.2 Jog Speed

It is preset speed reference.

2.2.3.3 AIN Min Speed

Defines speed reference corresponding to the minimum of analogue input.

2.2.3.4 AIN Max Speed

Defines speed reference corresponding to the maximum of analogue input.

2.2.3.5 Acceleration Time

Defines the time required for accelerate from zero frequency to value P2.1.1 .

2.2.3.6 Deceleration Time

Defines the time required for decelerate to zero frequency from value P2.1.1 .

2.2.3.7 Torque Limit

Defines torque limit, active when manual commands are on.

2.2.3.8 Diameter Scaling

0= reel speed does not depend on actual diameter
1= reel speed is scaled depending on actual diameter.

This function allows to keep the cable speed coarsely constant, also when the reel diameter varies.
Diameter measure is taken from AIN1 analogue signal (resolver used also for torque modulation).

4.3. Input Signals Parameters

4.3.1. AIN1 Torque Control (Menu M2 → G2.3.1)

Code	Parameter	Min	Max	Unit	Default	Note
P2.3.1.1	Signal AIN1Selection	0.1	E.9		A.1	Selection of analogue channel
P2.3.1.2	Signal AIN1 Range	0	2		1	0: 0-20mA/ 0-10V 1: 4-20mA/ 2-10V 2: custom values
P2.3.1.3	AIN1 Custom Min	-300,00	300,00	%	0,00	Signal minimum value
P2.3.1.4	AIN1 Custom Max	-300,00	300,00	%	0,00	Signal maximum value
P2.3.1.5	AIN1 Filter Time	0	10,0	s	0,1	Filter time constant
P2.3.1.6	AIN1 Signal Inversion	0	1		0	0: no inversion 1: inverted signal

Table 1-7. AIN1 Torque Control parameters, G2.3.1

2.3.1.1 Signal AIN1 Selection

Defines analogue input channel connected to signal AIN1, for torque control.
The same signal is also used for drum diameter measurement.
Parameter carries a letter corresponding to slot into which I/O board is inserted, and a number which describes the ordinal position of that input on the board.
NOTE: D.1 or E.1 selection means that the torque reference is read by fieldbus communication (see parameter P2.9.12).
In this case, A.1 input is still used for diameter measurement.
Fieldbus board can be placed either in slot D or E.

2.3.1.2 Signal AIN1 Range

Defines range of the analogue signal
0: range 0…10V / 0… 20mA
1: range 2…10V / 4… 20mA
2: custom range defined by parameters P2.3.1.3 e P2.3.1.4
NOTE: parameter should be set to 0 when torque reference from fieldbus is active and resolver is not connected to AI1.

2.3.1.3 AIN1 Custom Min
2.3.1.4 AIN1 Custom Max

Define minimum and maximum levels of signal; active only when P2.3.1.2 = 2.

2.3.1.5 AIN1 Filter Time

When this parameter is given a value greater than zero, it activates the function that filters out disturbances from the incoming analogue signal.

2.3.1.6 AIN1 Signal Inversion

Signal inversion allows to have maximum value of controlled quantity when signal is at minimum and vice versa.
0: No inversion
1: Inverted signal

4.3.2. AIN2 Speed Reference (Menu M2 → G2.3.2)

Code	Parameter	Min	Max	Unit	Default	Note
P2.3.2.1	Signal AIN2Selection	0.1	E.9		A.2	Selection of analogue channel
P2.3.2.2	Signal AIN2 Range	0	2		1	0: 0-20mA/ 0-10V 1: 4-20mA/ 2-10V 2: custom values
P2.3.2.3	AIN2 Custom Min	-300,00	300,00	%	0,00	Signal minimum value
P2.3.2.4	AIN2 Custom Max	-300,00	300,00	%	0,00	Signal maximum value
P2.3.2.5	AIN2 Filter Time	0	10,0	s	0,1	Filter time constant
P2.3.2.6	AIN2 Signal Inversion	0	1		0	0: no inversion 1: inverted signal
P2.3.2.7	Speed Range	0	1		1	0: unidirectional 1: bidirectional 2: direction from digital input

Table 1-8. AIN2 Speed Reference, G2.3.2

2.3.2.1 Signal AIN2 Selection

Defines analogue input channel connected to signal AIN2, for speed reference.
Parameter carries a letter corresponding to slot into which I/O board is inserted, and a number which describes the ordinal position of that input on the board.

2.3.2.2 Signal AIN2 Range

Defines range of the analogue signal
0: range 0…10V / 0… 20mA
1: range 2…10V / 4… 20mA
2: custom range defined by parameters P2.3.2.3 e P2.3.2.4

2.3.2.3 AIN2 Custom Min
2.3.2.4 AIN2 Custom Max

Define minimum and maximum levels of signal; active only when P2.3.2.2 = 2.

2.3.2.5 AIN2 Filter Time

When this parameter is given a value greater than zero, it activates the function that filters out disturbances from the incoming analogue signal.

2.3.2.6 AIN2 Signal Inversion

Signal inversion allows to have maximum value of controlled quantity when signal is at minimum and vice versa.
0: No inversion
1: Inverted signal

2.3.2.7 Speed range (for window)

Defines if analogue signal indicates also direction of movement.
0: Unidirectional: signal represents absolute value of speed. Direction is from motor encoder
1: Bi-directional: signal is divided between positive and negative speed. As default, upper semi-interval indicates positive speed (rewinding direction).
2: Analogue signal represents absolute value of speed. Direction is got from digital input (defined in P2.3.3.11).

4.3.3. Digital Inputs (Menu M2 → G2.3.3)

Code	Parameter	Min	Max	Default	Note
P2.3.3.1	DI1 Moving	0.1	E.9	A.1	
P2.3.3.2	DI2 Fault Reset	0.1	E.9	A.2	
P2.3.3.3	DI3 Reel OUT	0.1	E.9	A.3	
P2.3.3.4	DI4 Accel	0.1	E.9	A.4	
P2.3.3.5	DI5 Decel	0.1	E.9	A.5	
P2.3.3.6	DI6 Manual	0.1	E.9	A.6	
P2.3.3.7	Manual Reel In	0.1	E.9	A.4	
P2.3.3.8	Manual Reel Out	0.1	E.9	A.5	
P2.3.3.9	External Fault Closed	0.1	E.9	0.1	
P2.3.3.10	External Fault Open	0.1	E.9	0.2	
P2.3.3.11	Speed Window Reverse	0.1	E.9	0.1	

Table 1- 9. Digital Inputs parameter , G2.3.3

Parameter carries a letter corresponding to slot into which I/O board is inserted, and a number which describes the ordinal position of that input on the board
Setting 0.2 forces at high level the corresponding logic signal.

2.3.3.1 DI1 Moving

Defines digital input connected to “run” signal DI1.

2.3.3.2 DI2 Fault Reset

Defines digital input connected to reset signal DI2.

2.3.3.3 DI3 Reel OUT / Offset 3

2.3.3.4 DI4 Accel / Offset 2

2.3.3.5 DI5 Decel / Offset 1

Define digital inputs connected to signals for torque selection DI3, DI4, DI5.

2.3.3.6 DI6 Manual

Defines digital input which enables manual commands.

2.3.3.7 Manual Reel In

2.3.3.8 Manual Reel Out

Define digital inputs connected to forward and reverse commands, active only when DI6=1.

2.3.3.9 External Fault Closed

Defines digital input connected to signal for external activation of fault state; fault is activated with high signal.

2.3.3.10 External Fault Open

Defines digital input connected to signal for external activation of fault state; fault is activated with low signal (default value 0.2).

2.3.3.11 Speed Window Reverse

Reverse for speed reference, active only if P2.3.2.7=2.

4.3.4. Drum Diameter (Menu M2 → G2.3.4)

Code	Parameter	Min	Max	Unit	Default	Note
P2.3.4.1	Minimum Diameter	100	10000	mm	2400	Value of drum minimum diameter
P2.3.4.2	Maximum Diameter	100	10000	mm	6000	Value of drum maximum diameter
P2.3.4.3	Signal at Min Diameter	0	100,00	%	0	Analogue signal AI1 at minimum diameter
P2.3.4.4	Signal at Max Diameter	0	100,00	%	0	Analogue signal AI1 at maximum diameter

Table 1-8.1. Drum Diameter, G2.3.4

Actual diameter of the drum is measured through analogue signal AIN1 (P2.3.1.1).

The measure is used to calculate the theoretical speed reference for speed window function and speed reference for manual control. Takes also part in additive torque terms (inertia compensation and DI Logic pulses).

In case the torque reference is controlled by Fieldbus, the first analogue input AI1 is anyway considered for diameter measure.

2.3.4.1 Minimum Diameter

Value of drum minimum diameter.

2.3.4.2 Maximum Diameter

Value of drum maximum diameter.

2.3.4.3 Signal at Minimum Diameter

Value of analogue signal AI1 corresponding to minimum diameter (can be read on monitor V1.12).

2.3.4.4 Signal at Maximum Diameter

Value of analogue signal AI1 corresponding to maximum diameter (can be read on monitor V1.12).

4.4. Output Signals Parameters (Menu M2 → G2.4)

Code	Parameter	Min	Max	Unit	Default	Note
P2.4.1	Analogue Output Selection	0.1	E.10		A.1	Selection of the analogue output on I/O boards
P2.4.2	Analogue Output Function	0	10		1	**0**=Not used **1**=Output frequency (0—f_{max}) **2**=Frequency reference (0—f_{max}) **3**=Motor speed (0—Nominal motor speed) **4**=Motor current (0—I_{nMotor}) **5**=Motor torque (0—T_{nMotor}) **6**=Motor power (0—P_{nMotor}) **7**=Motor voltage (0--U_{nMotor}) **8**=DC link voltage (0—1000V) **9**=Input AI1 (0-100%) **10**= Input AI2 (0-100%)
P2.4.3	Analogue Output Filter Time	0,00	10,00	s	1,00	
P2.4.4	Analogue Output Inversion	0	1		0	0 = No inversion 1 = Inverted signal
P2.4.5	Analogue Output Minimum	0	1		0	**0** = 0 mA **1** = 4 mA
P2.4.6	Analogue Output Scale	10	1000	%	100	
P2.4.7	Digital Output Function	0	17		2	**0**=Not used **1**=Ready **2**=Run **3**=Fault **4**=Fault Inverted **5**=Drive over-temperature **6**=External fault **7**=Fault/Warning 4mA **8**=Warning **9=** Reverse **10**=At speed **11**=Frequency limit supervision **12=**Motor over-temperature **13=**Speed window overtaking **14=**Superv. limit 1 AIN1 **15=**Superv. limit 2 AIN1 **16**= Brake control **17=** Overspeed
P2.4.8	Relay 1 Output Function	0	17		1	As parameter 2.4.6
P2.4.9	Relay 2 Output Function	0	17		3	As parameter 2.4.6
P2.4.10	Frequency Limit Supervision Function	0	2		0	**0** = No limit **1** = Low limit superv. **2** = High limit superv.
P2.4.11	Frequency Limit Supervision Value	0,00	320,00	Hz	0,00	Threshold for P2.4.9
P2.4.12	Input AIN1 Limit 1 Supervision	0	2		0	**0** = No limit **1** = Low limit superv. **2** = High limit superv.
P2.4.13	Input AIN1 Supervision Value 1	0,00	100,00	%	70,00	Threshold for P2.4.12
P2.4.14	Input AIN1 Limit 2 Supervision	0	2		0	**0** = No limit **1** = Low limit superv. **2** = High limit superv.

P2.4.15	Input AIN1 Supervision Value 2	0,00	100,00	Hz	20,00	Threshold for P2.4.14
P2.4.16	Brake open delay	0,00	10,00	s	0,00	Delay on open brake command
P2.4.17	Min freq for brake closing	0,00	320,00	Hz	0,50	Minimum frequency for brake closing
P2.4.18	Stabilization Time	0,00	100,00	s	1,00	Time for speed stabilization, beore brake closing
P2.4.19	Brake Closing Time Out	0,00	100,00	s	5,00	Brake closing time outt. If = 0, the function is not active
P2.4.20	Hold Torque Time	0,00	100,00	s	1,00	Time for torque hold after brake closing, in automatic mode
P2.4.21	Channel for opt. relay RO3	0.1	E.10		D.1	Selection of the channel on expander board
P2.4.22	Opt. Relay RO3 Function	0	16		14	As parameter P2.4.7
P2.4.23	Channel for opt. relay RO4	0.1	E.10		D.2	Selection of the channel on expander board
P2.4.24	Opt. Relay RO4 Function	0	16		15	As parameter P2.4.7
P2.4.25	Channel for opt. relay RO5	0.1	E.10		D.3	Selection of the channel on expander board
P2.4.26	Opt. Relay RO5 Function	0	16		0	As parameter P2.4.7

Table 1- 10. Output Signals parameters, G2.4

2.4.1 Analog output channel

Position of the analog output on boards, normally A.1.

2.4.2 Analogue Output Function

Defines the variable to be connected to analogue output signal.

2.4.3 Analogue Output Filter Time

Defines the filtering time of the analogue output signal.

2.4.4 Analogue Output Inversion

If active, inverts the analogue output signal: max output when variable is at minimum.

2.4.5 Analogue Output Minimum

Defines the minimum signal to either 0 mA or 4 mA (living zero).
0: set minimum to 0 mA
1: set minimum to 4 mA

2.4.6 Analogue Output Scale

Scaling factor for analogue output.

2.4.7 Digital Output Function

2.4.8 Relay 1 Output Function

2.4.9 Relay 2 Output Function

Setting Value	Signal Content
0 = Not used	Not used
	Digital output DO1 sinks the current and relay (RO1,RO2) is activated when:
1 = Ready	The frequency converter is ready to operate
2 = Run	The frequency converter operates (motor is running)
3 = Fault	A fault trip has occurred
4 = Fault Inverted	A fault trip has not occurred
5 = Drive over-temperature	Heat-sink temperature exceeds +70°C
6 = External fault/warning	Fault or warning depending on P2.7.6
7 = Reference fault/warning	Fault or warning if analogue reference is 4—20 mA and signal is <4mA
8 = Warning	Always if an alarm exists
9 = Reverse	The reverse command has been selected
10 = At speed	The output frequency has reached the set reference
11 = Frequency limit supervision	The output frequency goes outside the set supervision low/high limit (see parameters 2.4.9 and 2.4.10)
12 = Motor over-temperature	The thermistor input of option board indicates over-temperature.
13 = Speed window overtaking	See chapter 4.2.1.1
14 = Analog input AIN1 supervision 1	Analog input AIN1 (torque reference) exceeds the first supervision threshold
15 = Analog input AIN1 supervision 2	Analog input AIN1 (torque reference) exceeds the second supervision threshold
16 = Brake control	All the conditions for brake opening are verified
17 = Overspeed	Motor speed exceeds the value programmed in P2.7.29. The signal is kept active for 2 seconds at least.

Table 1- 11. Output signal by DO1 and output relays RO1 and RO2.

2.4.10 Frequency Limit Supervision Function

0: No supervision
1: Low limit supervision
2: High limit supervision

If the output frequency goes under/over the set limit (P 2.4.11), this function generates a warning message via digital output

2.4.11 Frequency Limit Supervision Value

Select the frequency value supervised by parameter 2.4.10.

2.4.12 Supervision function 1 of analog input AIN1

0: No supervision
1: Low limit supervision
2: High limit supervision

When the analog torque reference is under/over the limit fixed in P 2.4.13, this function activates the digital output DO1 or a realy output.

2.4.13 Threshold 1 of AIN1 supervision

Threshold 1 value.

2.4.14 Supervision function 2 of analog input AIN1

0: Nessuna supervisione
1: Supervisione limite inferiore
2: Supervisione limite superiore

When the analog torque reference is under/over the limit fixed in P 2.4.15, this function activates the digital output DO1 or a realy output.

2.4.15 Threshold 2 of AIN1 supervision

Threshold 2 value.

2.4.16 Delay on opening of mechanical brake

2.4.17 Minimum frequency for brake closing

2.4.18 Stabilization time before brake closing

2.4.19 Brake closing time out

2.4.20 Holding torque time after closing

The brake control logic is activated when one of the output is configured for this function.

When the drive works on automatic mode, brake is opened when signal DI1 is active and the drive enters Run status, possibly with a small delay programmed in P2.4.16.
The brake is closed when, with DI1 fallen, the motor rotates at a speed below the threshold programmed in P2.4.17, for the stabilization time defined in P2.4.18.
During this phase the motor is still controlled by torque (as DI1 was still active), and it is released when the time in P2.4.20 ha elapsed after brake closing.
If different than zero, parameter P2.4.19 sets a time-out, after that the brake is closed independently by the actual speed.
When a Default torque value is set, this is indefinitely kept after brake closing.

When the drive works on manual mode, brake is opened when entering Run status and is closed when, with run commands fallen, the minimum frequency is reached.
Time out logic is not active.

2.4.21 Channel optional relay RO3

2.4.22 Function relay RO3

2.4.23 Channel optional relay RO4

2.4.24 Function relay RO4

2.4.25 Channel optional relay RO5

2.4.26 Function relay RO5

These parameters define the position on expander boards and the function (see table 1-11) of three optional relays.

4.5. Drive Control Parameters (Menu M2 → G2.5)

Code	Parameter	Min	Max	Unit	Default	Note
P2.5.1	Brake Chopper	0	4		4	0: not used 1: used and tested when running 2: used external 3: used and tested when stopped/running 4: used, no testing
P2.5.2	Stop Function	0	1		1	0: coasting 1: ramp

Table 1- 12. Drive Control parameters, G2.5

2.5.1 Brake Chopper

0 = No brake chopper used
1 = Brake chopper used and tested when running
2 = External brake chopper (no testing)
3 = Brake chopper used and tested in READY state and when running
4 = Brake chopper used when running, no testing

2.5.2 Stop Function

0: The motor coasts to a halt without control from the frequency converter after the Stop command.

1: After the stop command, the speed of the motor is decelerated according to the set deceleration parameters.

4.6. Motor Control Parameters (Menu M2 → G2.6)

Code	Parameter	Min	Max	Unit	Default	Note
P2.6.1	Motor Control Mode	0	1		1	0: open loop 1: closed loop
P2.6.2	Field Weakening Point	8,00	320,00	Hz	50,00	
P2.6.3	Voltage at field weakening point	10,00	200,00	%	100,00	
P2.6.4	Switching Frequency	1,0	16,0	kHz	10,0	
P2.6.5	Overvoltage Controller	0	1		1	0: not active 1: active
P2.6.6	Undervoltage Controller	0	1		1	0: not active 1: active

Table 1- 13. Motor Control parameters, G2.6

2.6.1 Motor Control Mode

0: "sensorless" vector regulation.
1: closed loop vector regulation, with encoder.

2.6.2 Field Weakening Point

The field weakening point is the output frequency at which the output voltage reaches the set maximum value.

2.6.3 Voltage at field weakening point

Above the frequency at the field weakening point, the output voltage remains at the set maximum value.
When parameters 2.1.3 e 2.1.4 (nominal voltage and frequency of the motor) are set, the parameters 2.6.2 e 2.6.3 are automatically given the corresponding values. If you need different values for the field weakening point and the maximum output voltage, change these parameters **after** setting parameters.

2.6.9 Switching Frequency

Motor noise can be minimized using a high switching frequency. Increasing the switching frequency reduces the capacity of the frequency converter unit.
The range of this parameter depends on of the size of the converter:
up to NX 0061: 1…16 kHz
> NX 0072: 1…10 kHz

2.6.10 Overvoltage Controller

2.6.11 Undervoltage Controller

These parameters allow the under/over-voltage controllers to be switched out of operation. This may useful, for example, if the mains supply voltage varies more than 15% to 10% and the application will not tolerate this variation.
These regulator control the output frequency taking the supply fluctuations into account.

Note: Over/under-voltage trips may occur when controllers are switched out of operation.

0: Controller switched off
1: Controller switched on

4.6.1. Open Loop (Menu M2 → G2.6.7)

Code	Parameter	Min	Max	Unit	Default	Note
P2.6.7.1	U/f Optimization	0	1		0	0: not used 1: automatic torque boost
P2.6.7.2	U/f Ratio Selection	0	3		0	0: linear 1: squared 2: programmable
P2.6.7.3	U/f curve Middle Point Frequency	0,00	par. P2.6.2	Hz	50,00	
P2.6.7.4	U/f curve Middle Point Voltage	0,00	100,00	%	100,00	n% x U_{nmot}
P2.6.7.5	Output Voltage at Zero Frequency	0,00	40,00	%	0,00	n% x U_{nmot}

Table 1- 14. Open Loop parameters, G2.6.7

2.6.7.1 U/f Optimization

0: not used
1: automatic torque "boost": the voltage to the motor changes automatically, which makes the motor produce sufficient torque to start and run at low frequency. The voltage increase depends on the motor type and power.

2.6.7.2 U/f Ratio Selection

0: Linear: motor voltage changes linearly with the frequency in the constant flux area from 0 Hz to the field weakening point where the nominal voltage is supplied to the motor.

1: Squared: motor voltage changes following a squared curve from 0 Hz to the field weakening point where the nominal voltage is supplied to the motor.

2: Programmable U/f curve: the U/f curve can be programmed with three different points, corresponding to frequencies 0, P2.6.7.3 and P2.6.2.

2.6.7.3 U/f curve, Mid Point Frequency

If the programmable U/f curve has been selected, this parameter defines the middle point frequency of the curve.

2.6.7.4 U/f curve, Mid Point Voltage

If the programmable U/f curve has been selected, this parameter defines the middle point voltage of the curve.

2.6.7.5 Output Voltage at Zero Frequency

If the programmable U/f curve has been selected, this parameter defines the zero frequency voltage of the curve.

4.6.2. Closed Loop (Menu M2 → G2.6.8)

Code	Parameter	Min	Max	Unit	Default	Note
P2.6.8.1	Speed Control Kp	0	1000		30	Proportional gain for speed control
P2.6.8.2	Speed Control Ti	0,0	500,0	ms	30,0	Integral time constant for speed control
P2.6.8.3	Slip Adjust	0	500	%	100	Nominal slip adjust
P2.6.8.4	Encoder Filter Time	0	1000	ms	0	Constant time for filtering encoder signal
P2.6.8.5	Current Control Kp	0,00	100,00	%	40,00	Proportional gain for current control

Table 1- 15. Closed Loop parameters, G2.6.8

2.6.8.1 Speed Control Kp

2.6.8.2 Speed Control Ti

Gains for PI speed regulator; they allow to optimize dynamic response of the motor.

2.6.8.3 Slip Adjust

This value is used to adjust the voltage of the motor when loaded. The name plate speed is sometimes a little inaccurate and this parameter can therefore be used to trim the slip.

2.6.8.4 Encoder Filter Time

Sets the filter time constant for speed measurement. This parameter can be used to eliminate encoder signal noise.

2.6.8.5 Current Control Kp

Proportional gain for current regulator.

4.6.3. Torque Control (Menu M2 → G2.6.9)

Code	Parameter	Min	Max	Unit	Default	Note
P2.6.9.1	Torque Control Kp	0	1000		150	Proportional gain for torque control (open loop only)
P2.6.9.2	Torque Control Ti	0	1000		10	Integral time constant for speed control (open loop only)
P2.6.9.3	Speed Limit Acc Time	0,1	3000,0	s	1,0	Accel ramp time on speed limit
P2.6.9.4	Speed Limit Dec Time	0,1	3000,0	s	1,0	Decel ramp time on speed limit

Tabella 1- 16. Torque Control parameters, G2.6.9

2.6.9.1 Torque Control Kp (only open loop)

2.6.9.2 Torque Control Ti (only open loop)

Gains for PI speed regulator; they allow to optimize dynamic response of the motor when torque reference varies. Parameters are not active in closed loop motor control mode.

2.6.9.3 Speed Limit Acc Time

Defines rising time for speed limit. Value must be lower than crane acceleration time.

2.6.9.4 Speed Limit Dec Time

Defines falling time for speed limit. Value must be lower than crane deceleration time.

4.7. Protection (Menu M2 → G2.7)

Code	Parameter	Min	Max	Unit	Default	Note
P2.7.1	Encoder Supervision	0	1		1	**0=** Active **1**= Not active
P2.7.2	Response to Reference AIN1 Fault 4mA	0	2		0	**0**= No response **1**= Warning + preset P2.7.3 **2**= Fault
P2.7.3	Preset Reference for AIN1 fault 4mA	4	20	mA	4	Value set if 4mA fault on AIN1 reference
P2.7.4	Response to Reference AIN2 Fault 4mA	0	2		0	**0**= No response **1**= Warning + preset P2.7.5 **2**= Fault
P2.7.5	Preset Reference for AIN2 fault 4mA	4	20	mA	4	Value set if 4mA fault on AIN2 reference
P2.7.6	Response to External Fault	0	3		2	**0**=No response **1**=Warning **2**=fault, stop according to P2.5.2 **3**=fault, stop by coasting
P2.7.7	Input Phase Supervision	0	3		0	
P2.7.8	Response to Undervoltage Fault	1	3		2	
P2.7.9	Output Phase Supevision	0	3		2	
P2.7.10	Earth Fault Protection	0	3		2	
P2.7.11	Thermal Protection of the Motor	0	3		2	
P2.7.12	Motor Ambient Temperature Factor	–100,0	100,0	%	0,0	
P2.7.13	Motor Cooling Factor at Zero Speed	0,0	150,0	%	40,0	
P2.7.14	Motor Thermal Time Constant	1	200	min	10	
P2.7.15	Motor Duty Cycle	0	100	%	100	
P2.7.16	Stall Protection	0	3		0	**0**=No response **1**=Warning **2**=fault, stop according to P2.5.2 **3**=fault, stop by coasting
P2.7.17	Stall Current	0,1	6000,0	A	10,0	
P2.7.18	Stall Time Limit	1,00	120,00	s	15,00	
P2.7.19	Stall Frequency Limit	1,0	Par. 2.1.2	Hz	25,0	

Table 1-17/1. Protection parameters, G2.7

Code	Parameter	Min	Max	Unit	Default	Note
P2.7.20	Underload Protection	0	3		0	**0**=No response **1**=Warning **2**=fault, stop according to P2.5.2 **3**=fault, stop by coasting
P2.7.21	Underload Curve at Nominal Frequency	10	150	%	50	
P2.7.22	Underload Curve at Zero Frequency	5,0	150,0	%	10,0	
P2.7.23	Underload Protection Time Limit	2	600	s	20	
P2.7.24	Response to Thermistor Fault	0	3		2	See P 2.7.20
P2.7.25	Response to Fieldbus Fault	0	3		2	See P 2.7.20
P2.7.26	Response to Slot Fault	0	3		2	See P 2.7.20
P2.7.27	Temperature sensor on power unit	0	1		1	**0**= Read **1**= Ignore
P2.7.28	Overspeed Protection	0	3			See P 2.7.20
P2.7.29	Overspeed threshold	1,00	320,00	Hz	60,00	Threshold for alarm or signaling

Table 1-17/2. Protection parameters, G2.7

2.7.1 Encoder Supervision

This parameter allows to disable some encoder supervision functions; it can be useful in case of unsuitable trips under particular conditions.
0 = Supervision active
1 = Supervision not active

2.7.2 Response to Reference AIN1 Fault 4mA

2.7.4 Response to Reference AIN2 Fault 4mA

0 = No response
1 = Warning, preset value P2.7.3 (or P2.7.5) is set as reference
2 = Fault, stop mode according to parameters P2.5.2

A warning or a fault action and message is generated if the 4…20 mA reference signal is used and the signal falls below 3.5 mA for 5 seconds or below 0.5 mA for 0.5 seconds. Fault information can also be programmed into digital output DO1 or the relay outputs RO1 and RO2.

2.7.3 Preset Reference for AIN1 fault 4mA

2.7.5 Preset Reference for AIN2 fault 4 mA

If the value of parameter P2.7.2 (or P2.7.4) is set to 1 and the 4mA fault occurs, then a signal is internally imposed as reference equal to this parameter.

2.7.6 Response to External Fault

0 = No response
1 = Warning
2 = Fault, stop mode according to parameter P2.5.2
3 = Fault, stop mode always by coasting

A warning or a fault action is generated from the external fault signal on the digital input selected.

2.7.7 Input Phase Supervision

0 = No response
1 = Warning
2 = Fault, stop mode according to parameter P2.5.2
3 = Fault, stop mode always by coasting

The input phase supervision ensures that the input phases of the frequency converter have an approximately equal current.

2.7.8 Response to Undervoltage Fault

1 = Warning
2 = Fault, stop mode according to parameter P2.5.2
3 = Fault, stop mode always by coasting

2.7.9 Output Phase Supervision

0 = No response
1 = Warning
2 = Fault, stop mode according to parameter P2.5.2
3 = Fault, stop mode always by coasting

The output phase supervision ensures that the motor phases have an approximately equal current.
.

2.7.10 Earth Fault Protection

0 = No response
1 = Warning
2 = Fault, stop mode according to parameter P2.5.2
3 = Fault, stop mode always by coasting

Earth fault protection ensures that the sum of the motor phase currents is zero. The overcurrent protection is always working and protects the frequency converter from earth faults with high currents.

Parameters 2.7.11—2.7.15, Motor Thermal Protections: General

The motor thermal protection is to protect the motor from overheating. If the load requires a current higher than nominal, there is a risk that the motor will be thermally overloaded. At low frequencies the cooling effect of the motor is reduced as well as its capacity. If the motor is equipped with an external fan the load reduction at low speed is small.

The motor thermal protection is based on a calculated model and it uses the output current of the drive to determine the load on the motor.

The motor thermal protection can be adjusted with parameters.

Estimated thermal state of the motor can be monitored on panel display.



CAUTION! *The calculated model does not protect the motor if the airflow to the motor is reduced by blocked air intake grill.*

2.7.11 Motor Thermal Protection

0 = No response
1 = Warning
2 = Fault, stop mode according to parameter P2.5.2
3 = Fault, stop mode always by coasting
If tripping is selected, the drive will stop and activate the fault stage.
Deactivating the protection, i.e. setting parameter to 0, will reset the thermal stage of the motor to 0%.

2.7.12 MTP: Motor Ambient Temperature Factor

The value of the factor can be set between -100.0% and +100.0%. To set positive values if the ambient in which motor is working is hot, or negative values if ambient is cooled.

2.7.13 MTP: Zero Frequency Cooling Power

The current can be set between 0 and 150.0% x $I_{n\ Motor}$. This parameter defines the value of sustainable thermal current at zero frequency. The default value is set assuming that there is no external fan cooling the motor. If such fan is used, this parameter can be set to 90% or even higher.

2.7.14 MTP: Time Constant

This time can be set between 1 and 200 minutes.
This is the thermal time constant of the motor. The bigger the motor, the bigger the time constant. The time constant is the time within the calculated thermal stage has reached 63% of its final value.
The motor thermal time is specific to the motor design; to keep default value if exact data are not available.

2.7.15 MTP: Duty Cycle

Defines how much of the nominal motor is applied.
The value can be set to 0%…100%.

Parameters 2.7.16—2.7.19, Stall Protection:
General

The motor stall protection protects the motor from short time overload situations. The reaction time of the stall protection can be set shorter than that of the motor thermal protection.
The stall state is defined with two parameters P2.7.16 (Stall current) and P2.7.19 (Stall Frequency). If the current is higher than the set limit and output frequency is lower than the set limit, the stall state is true. Stall protection is a type of overcurrent protection.

2.7.16 Stall Protection

0 = No response
1 = Warning
2 = Fault, stop mode according to parameter P2.5.2
3 = Fault, stop mode always by coasting
Setting the parameter to 0 will deactivate the protection and reset the stall time counter.

2.7.17 Stall Current Limit

For a stall stage to occur, the current must have exceeded this limit.
The value is set as percent of motor nominal current.

2.7.18 Stall Time

This time can be set between 1.0 and 120.0s.
This is the maximum time allowed for a stall stage. The stall time is counted by an internal up/down counter. If the stall time counter goes above this limit, the protection will cause a trip.

2.7.19 Maximum Stall Frequency

The frequency can be set between 1-f_{max} (par. P2.1.1).
For a stall state to occur, the output frequency must have remained below this limit.

Parameters 2.7.20—2.7.23, Underload Protection:
General

The purpose of the motor underload protection is to censure that there is load on the motor when the drive is running. If the motor loses its load, there might be a problem in the process, e.g. a broken belt.
Motor underload protection can be adjusted by setting the underload curve with parameters P2.7.21 (field weakening area load) and P2.7.22 (zero frequency load). The underload curve is a squared curve set between the zero frequency and the field weakening point. The protection is not active below 5Hz (the underload time counter is stopped).

2.7.20 Underload Protection

0 = No response
1 = Warning
2 = Fault, stop mode according to parameter P2.5.2
3 = Fault, stop mode always by coasting

If tripping is selected, the drive will stop and activate the fault stage.
Deactivating the protection, i.e. setting parameter to 0, will reset the underload time counter.

2.7.21 Field Weakening Area Load

The torque limit can be set between 0 and 150.0 % x $T_{n\ Motor}$.
This parameter gives the value for the minimum torque allowed when the output frequency is above the field weakening point.

2.7.22 Zero Frequency Load

The torque limit can be set between 0 and 150.0 % x $T_{n\ Motor}$.
This parameter gives the value for the minimum torque allowed with zero frequency.

2.7.23 Underload Time

This time can be set between 2.0 and 600.0 s.
This is the maximum time allowed for an underload state to exist. An internal up/down counter counts the accumulated underload time. If the counter value goes above this limit, the protection will cause a trip.
If the drive is stopped the underload counter is reset to zero.

2.7.24 Response to Thermistor Fault

0 = No response
1 = Warning
2 = Fault, stop mode according to parameter P2.5.2
3 = Fault, stop mode always by coasting

Set here the response mode for motor overheating by thermistor (option)

2.7.25 Response to Fieldbus Fault

0 = No response
1 = Warning
2 = Fault, stop mode according to parameter P2.5.2
3 = Fault, stop mode always by coasting

Set here the response mode for fieldbus bus if a fieldbus board is used.
.

2.7.26 Response to slot fault

0 = No response
1 = Warning
2 = Fault, stop mode according to parameter P2.5.2
3 = Fault, stop mode always by coasting

Set here the response for a board slot fault due to missing or broken board.

2.7.27 Temperature sensor on power unit

This parameter can by-pass the temperature sensor on power unit, allowing the drive to operate in case of malfunction of the sensor.
0 = read
1 = ignore

Note: by-pass can also be activated by pressing pushbuttons Select and Enter together for at least 5 seconds, regardless the page that is shown on panel.

2.7.28 Overspeed protection

0 = No response
1 = Warning
2 = Fault, stop mode according to parameter P2.5.2
3 = Fault, stop mode always by coasting

The protection diagnoses if the motor exceeds, also when drive is not in run status, the threshold in P2.7.29.

2.7.29 Overspeed threshold

Threshold for fault and also for signaling on digital output.

4.8. Auto Restart (Menu M2 → G2.8)

Code	Parameter	Min	Max	Unit	Default	Note
P2.8.1	Wait Time	0,10	10,00	s	0,50	
P2.8.2	Trial Time	0,00	60,00	s	30,00	
P2.8.3	Start Function	0	1		0	0=Ramp 1=Flying start
P2.8.4	Number of Tries after Undervoltage Trip	0	10		0	
P2.8.5	Number of Tries after Overvoltage Trip	0	10		0	
P2.8.6	Number of Tries after Overcurrent Trip	0	3		0	
P2.8.7	Number of Tries after Reference Trip	0	10		0	
P2.8.8	Number of Tries after Motor Temperature Trip	0	10		0	
P2.8.9	Number of Tries after External Fault Trip	0	10		0	

Table 1- 18. Auto Restart parameters, G2.8

2.8.1 Wait Time

Defines the time after which the frequency converter tries to automatically restart after the fault has disappeared.

2.8.2 Trial Time

The automatic restart function restarts the frequency converter when the faults selected with parameters P2.8.4 to P2.8.10 have disappeared and the waiting time has elapsed. Parameters P2.8.4 to P2.8.10 determine the maximum number of automatic restarts during the trial time set by parameter P2.8.2. The time count starts from the first autorestart. If the number of faults occurring during the trial time exceeds the values of parameters P2.8.4 to P2.8.10, the fault state becomes active. Otherwise the fault is cleared after the trial time has elapsed and the next fault starts the trial count again.

2.8.3 Start Function

The start function for automatic restart is selected with this parameter.

0 = Start with ramp
1 = Flying start

2.8.4 Number of Tries after Undervoltage Trip

This parameter determines how many automatic restarts can be made during the trial time after an undervoltage trip.

2.8.5 Number of Tries after Overvoltage Trip

This parameter determines how many automatic restarts can be made during the trial time after an overvoltage trip.
.

2.8.6 Number of Tries after Overcurrent Trip

This parameter determines how many automatic restarts can be made during the trial time after an overcurrent trip.
NOTE! IGBT temperature fault also included.

2.8.7 Number of Tries after Reference Fault Trip

This parameter determines how many automatic restarts can be made during the trial time after an reference fault (4mA) trip.

2.8.8 Number of Tries after Motor Temperature Trip

This parameter determines how many automatic restarts can be made during the trial time after motor overtemperature trip.

2.8.9 Number of Tries after External fault Trip

This parameter determines how many automatic restarts can be made during the trial time after external fault trip.

4.9. Fieldbus (Menu M2 → G2.9)

Code	Parameter	Min	Max	Unit	Default	Note
P2.9.1	Commands Word	0	1		0	Commands word mapping 0= CW 1= PDI1
P2.9.2	Speed reference word	0	2		0	Speed reference mapping 0= REF 1= PDI1 2= PDI2 3= PDI3
P2.9.3	Digital inputs active	0	1		0	0= inputs active with FB 1= inputs not active
P2.9.4	PDO1 Selection	0	2000		1	ID of the monitor variable mapped on PDO1
P2.9.5	PDO2 Selection	0	2000		3	ID of the monitor variable mapped on PDO2
P2.9.6	PDO3 Selection	0	2000		4	ID of the monitor variable mapped on PDO3
P2.9.7	PDO4 Selection	0	2000		37	ID of the monitor variable mapped on PDO4
P2.9.8	PDO5 Selection	0	2000		0	ID of the monitor variable mapped on PDO5
P2.9.9	PDO6 Selection	0	2000		0	ID of the monitor variable mapped on PDO6
P2.9.10	PDO7 Selection	0	2000		0	ID of the monitor variable mapped on PDO7
P2.9.11	PDO8 Selection	0	2000		0	ID of the monitor variable mapped on PDO8
P2.9.12	Torque reference word	0	2		0	Torque reference mapping 0= REF 1= PDI1 2= PDI2 3= PDI3

Table 1- 19. Fieldbus, G2.9

Drive control by fiedbus requires programming of parameter P3.1 Control Place as Fieldbus. Among parameters of the specific fieldbus board (menu M7), modality By-pass must be selected, when available.

Drive control is implemented by means of a Commands Word, whose bits reply the hard wired digital inputs.

.

bit	meaning
0	Crane moving DI1
1	Fault reset DI2
2	Offset 3 DI3
3	Offset 2 DI4
4	Offset 1 DI5
5	Manual DI6
6	Jog forward
7	Jog backward
8	Reverse speed reference

Commands word can be mapped into fields CW or PDI1 of the message structure

On the bus it is possible to transmit the speed reference, used for the speed window or for inertia compensation. This reference is bi-directional: direction of movement is controlled by the reference sign OR by means of bit8 of commands word.
Numerical value is expressed as percent of maximum speed
(-10000..+10000 : -100%..+100%).

Speed reference from bus is activated by programming P2.2.2.8= 2. It is recognized also when the drive is controlled by I/O terminals, and can be mapped into fields REF, PDI1, PDI2 or PDI3.

On the bus it is also possible to transmit the torque reference. The signal has the same meaning of the analogue input for torque scaling between minimum and maximum values.
Numerical range is 0..+10000 : 0%..+100%.

Torque reference from bus is activated by programming P2.3.1.1= D.1 or E.1. It is recognized also when the drive is controlled by I/O terminals, and can be mapped into fields REF, PDI1, PDI2 or PDI3.

Drive working condition can be diagnosed by means of a Status Word, with this coding:

bit	Significato
0	Ready
1	Run
2	Direction (1= unreel)
3	Fault
4	Alarm
5	AIN1 supervision 1
6	AIN2 supervision 2
7	Manual commands active
8	Brake control

Status word is always mapped into field SW of the message; can also be duplicated on one of the four PDO available.

The field ACT shows the motor actual speed, expressed as percent of maximum frequency
(-10000..+10000 : -100%..+100%).

Up to eight programmable PDO (process data output) are available, for reading of monitor variables.

2.9.1 Commands word mapping

0= field CW defined by fieldbus protocol
1= field PDO1 defined by fieldbus protocol

2.9.2 Speed reference mapping

0= field REF defined by fieldbus protocol
1= field PDI1 defined by fieldbus protocol
2= field PDI2 defined by fieldbus protocol
3= field PDI3 defined by fieldbus protocol

2.9.3 Digital inputs active

Defines if terminal digital inputs are active also when drive is controlled by bus.
In this case, all the functions are controlled by the logic sum (OR) of the signal and the correspondent bit.

2.9.4 Selection of variable on PDO1
2.9.5 Selection of variable on PDO2
2.9.6 Selection of variable on PDO3
2.9.7 Selection of variable on PDO4
2.9.8 Selection of variable on PDO5
2.9.9 Selection of variable on PDO6
2.9.10 Selection of variable on PDO7
2.9.11 Selection of variable on PDO8

Selection is done by writing into parameter the value ID (identifier) of the variable to monitor (see table below).

2.9.12 Torque reference mapping

0= field REF defined by fieldbus protocol
1= field PDI1 defined by fieldbus protocol
2= field PDI2 defined by fieldbus protocol
3= field PDI3 defined by fieldbus protocol

Monitoring variables

ID	Meaning	Format
1	Output frequency Hz	1 count= 0.01Hz
25	Frequency reference Hz	1 count= 0.01Hz
1552	Torque reference %	1 count= 0.1% of motor nominal torque
2	Motor speed rpm	1 count= 1 rpm
3	Motor current A	1 count= 0.1 A
4	Motor torque %	1 count= 0.1% of motor nominal torque
5	Motor power %	1 count= 0.1% of motor nominal power
6	Motor voltage V	1 count= 0.1 V
7	DC link voltage V	1 count= 1 V
8	Unit temperature °C	1 count= 1°C
9	Motor temperature	1 count= 0.1% of motor nominal temperature (estimated)
13	Analogue input 1	1 count= 0.01% of signal range
14	Analogue input 2	1 count= 0.01% of signal range
15	DIN1, DIN2, DIN3	binary coded b0= DIN3, b1= DIN2, b2= DIN1, b3-15 not used
16	DIN4, DIN5, DIN6	binary coded b0= DIN6, b1= DIN5, b2= DIN4, b3-15 not used
17	DO1,RO1,RO2	binary coded b0= RO2, b1= RO1, b2= DO, b3-15 not used
26	Analogue output	1 count= 0.01 mA
1553	Control mode	0= Basic 1= DI Logic 2= AutoReverse 3= Manual
1555	Inertia compensation %	1 count= 0.1% of motor nominal torque
1585	Reference for speed window Hz	1 count= 0.01Hz
1592	Status Word	See description at page 46
37	Active fault code	See fault codes list on Vacon User Manual
1603	Encoder frequency	1 count= 0.01Hz
1623	Drum diameter	1 count= 1mm

5. Keypad control (Menu M3)

Code	Parameter	Min	Max	Unit	Default	Note
P3.1	Control Place	1	3		1	**1** = I/O terminals **2** = Keypad **3** = Fieldbus
R3.2	Panel Reference	0,00	Par. 2.1.1	Hz	0,00	
P3.3	Direction	0	1		0	**0** = Forward **1** = Reverse
R3.4	Stop Button	0	1		1	**0**= Limited function for Stop button **1**= Stop button always active
P3.5	String	0	3		1	Power on string on display: **0**= None **1**= Cavotec Group Specimas **2**= VAHLE **3**= Konecranes
P3.6	Automatic Multimonitor	0	3		1	**0** = not active **1** = active

Table 1- 19. Keypad Control parameters, M3

3.1 Control Place

Active control place can be changed by this parameter. See also Vacon NX User's Manual chapter 7.3.3.1 for more information.
When keypad is the active control place, motor regulation is the same as in manual control mode, i.e. speed control with torque limit.

3.2 Keypad reference

Frequency reference can be set on panel with this parameter.

3.3 Keypad direction

0 Forward: motor runs forward when keypad is the active control place
1 Reverse: motor runs in reverse direction when keypad is the active control place.

3.4 Stop Button

If it is wished that Stop Button always stops the drive, regardless active control place, value 1 must be set on this parameter.

3.5 String

Selection of the company name that is shown on display at power on, for about 15 seconds. This parameter is normally locked. To unlock it, it is needed to push right arrow button for at least 10 seconds. Parameter is anyway unlocked when the drive is in serial communication with NCDrive tool.

3.6 Automatic Multimonitor

When active, Multimonitor page will be shown after 1 minute of drive keypad inactivity.

6. Expander Boards (Menu M7)

The Expander Boards menu makes it possible for the user :
1) to see what expander boards are connected to the control board
2) to reach and edit the parameters associated with the expander boards.

It is possibile to browse through slots from A to E to see what expander boards are connected.
On the lowermost line of the display you see the number of parameters associated with the board.
Some boards also display a Monitor menu, useful for diagnostic.

Code	Parameter	Min	Max	Default	Selection
P7.1.1.1	AI1 Mode	1	5	3	**1**=0…20 mA **2**=4…20 mA **3**=0…10 V **4**=2…10 V **5**=–10…+10 V
P7.1.1.2	AI2 Mode	1	5	1	See P7.1.1.1
P7.1.1.3	AO1 Mode	1	4	1	**1**=0…20 mA **2**=4…20 mA **3**=0…10 V **4**=2…10 V

Table 1-20. Parameters for basic I/O board NXOPTA1.

Code	Parameter	Min	Max	Default	Selection
P7.3.1.1	Pulses/revolution	1	65535	1024	
P7.3.1.2	Invert Direction	0	1	0	0: No 1: Yes
P7.3.1.3	Reading Rate	0	4	1	0: No 1: 1ms 2. 5ms 3: 10ms 4: 50ms

Table 1-21. Parameters for encoder board NXOPTA4.

7. Faults

Application specific fault codes

Code	Text	Action	Cause
61	Upper limit	Alarm	Motor speed is above higher window limit (when speed is not automatically limited)
62	Lower limit	Alarm	Motor speed is below lower window limit (when speed is not automatically limited)
63	Overspeed	From P2.7.28	Motor speed is over the threshold in P2.7.29
64	Speed error	Fault	Motor speed is out from window limits
70	License key	Fault	The right license key must be set in P2.10.1

Generic fault codes

Fault code	Fault	Possible cause	Correcting measures
1	Overcurrent	Frequency converter has detected too high a current (>4*I_H) in the motor cable: – sudden heavy load increase – short circuit in motor cables – unsuitable motor Subcode in T.14: S1 = Hardware trip S2 = Reserved S3 = Current controller supervision	Check loading. Check motor. Check cables. Make identification run.
2	Overvoltage	The DC-link voltage has exceeded the limits defined. – too short a deceleration time – high overvoltage spikes in supply Subcode in T.14: S1 = Hardware trip S2 = Overvoltage control supervision	Make deceleration time longer. Use brake chopper or brake resistor (available as options) Activate overvoltage controller. Check input voltage.
3	Earth fault	Current measurement has detected that the sum of motor phase current is not zero. – insulation failure in cables or motor	Check motor cables and motor.
5	Charging switch	The charging switch is open, when the START command has been given. – faulty operation – component failure	Reset the fault and restart. Should the fault re-occur, contact the distributor near to you.
6	Emergency stop	Stop signal has been given from the option board.	Check emergency stop circuit.
7	Saturation trip	Various causes: – defective component – brake resistor short-circuit or overload	Cannot be reset from the keypad. Switch off power. DO NOT RE-CONNECT POWER! Contact factory. If this fault appears simultaneously with Fault 1, check motor cables and motor

Fault code	Fault	Possible cause	Correcting measures
8	System fault	- component failure - faulty operation Note exceptional fault data record. S1 – Reserved S2 – Reserved S3 – Reserved S4 – Reserved S5 – Reserved S6 – Reserved S7 – Charging switch S8 – No power to driver card S9 – Power unit communication (TX) S10 – Power unit communication (Trip) S11 – Power unit comm. (Measurement)	Reset the fault and restart. Should the fault re-occur, contact the distributor near to you.
9	Undervoltage	DC-link voltage is under the voltage limits defined. – most probable cause: too low a supply voltage – frequency converter internal fault – defect input fuse – external charge switch not closed Subcode in T.14: S1 – DC-link too low during run S2 – No data from power unit S3 – Undervoltage control supervision	In case of temporary supply voltage break reset the fault and restart the frequency converter. Check the supply voltage. If it is adequate, an internal failure has occurred. Contact the distributor near to you.
10	Input line supervision	Input line phase is missing.	Check supply voltage, fuses and cable.
11	Output phase supervision	Current measurement has detected that there is no current in one motor phase.	Check motor cable and motor.
12	Brake chopper supervision	– no brake resistor installed – brake resistor is broken – brake chopper failure	Check brake resistor and cabling. If the these are ok, the chopper is faulty. Contact the distributor near to you.
13	Frequency converter under-temperature	Heatsink temperature is under –10°C	
14	Frequency converter over-temperature	Heatsink temperature is over 90°C (or 77°C, all FR6 690V drives). Overtemperature warning is issued when the heatsink temperature exceeds 85°C (72°C).	Check the correct amount and flow of cooling air. Check the heatsink for dust. Check the ambient temperature. Make sure that the switching frequency is not too high in relation to ambient temperature and motor load.
15	Motor stalled	Motor stall protection has tripped.	Check motor and load.
16	Motor over-temperature	Motor overheating has been detected by frequency converter motor temperature model. Motor is overloaded.	Decrease motor load. If no motor overload exists, check the temperature model parameters.
17	Motor underload	Motor underload protection has tripped.	Check load.
18	Unbalance	Unbalance between power modules in parallelled units. Subcode in T.14: S1 – Current unbalance S2 – DC voltage unbalance	Should the fault re-occur, contact the distributor near to you.

Fault code	Fault	Possible cause	Correcting measures
22	EEPROM checksum fault	Parameter save fault – faulty operation – component failure	Should the fault re-occur, contact the distributor near to you.
24	Counter fault	Values displayed on counters are incorrect	
25	Microprocessor watchdog fault	– faulty operation – component failure	Reset the fault and restart. Should the fault re-occur, contact the distributor near to you.
26	Start-up prevented	Start-up of the drive has been prevented. Run request in ON when new application is loaded to the drive	Cancel prevention of start-up if this can be done safely. Remove Run request
29	**Thermistor fault**	**The thermistor input of option board has detected increase of the motor temperature**	**Check motor cooling and loading Check thermistor connection (If thermistor input of the option board is not in use it has to be short circuited)**
30	Safe disable	The input on OPTAF board has opened	Cancel Safe Disable if this can be done safely.
31	IGBT temperature (hardware)	IGBT Inverter Bridge overtemperature protection has detected too high a short term overload current	Check loading. Check motor size. Make identification run.
32	Fan cooling	Cooling fan of the frequency converter does not start, when ON command is given	Contact the distributor near to you.
34	CAN bus communication	Sent message not acknowledged.	Ensure that there is another device on the bus with the same configuration.
35	Application	Problem in application software	Contact your distributor. If you are application programmer check the application program.
36	Control unit	NXS Control Unit can not control NXP Power Unit and vice versa	Change control unit
37	Device changed (same type)	Option board or control unit changed. Same type of board or same power rating of drive.	Reset. Device is ready for use. Old parameter settings will be used.
38	Device added (same type)	Option board or drive added.	Reset. Device is ready for use. Old board settings will be used.
39	Device removed	Option board removed.	Reset. Device no longer available.
40	Device unknown	Unknown option board or drive. Subcode in T.14: S1 – Unknown device S2 – Power1not same type as Power2	Contact the distributor near to you.
41	IGBT temperature	IGBT Inverter Bridge overtemperature protection has detected too high a short term overload current	Check loading. Check motor size. Make identification run.
42	**Brake resistor**	**Problems with brake resistor.**	**Set the deceleration time longer. Use external brake resistor.**
43	Encoder fault	Problem detected in encoder signals. Subcode in T.14: 1 – Encoder 1 channel A is missing 2 – Encoder 1 channel B is missing 3 – Both encoder 1 channels are missing 4 – Encoder reversed 5 – Encoder board missing	Check encoder channel connections. Check the encoder board. Check encoder frequency in open loop.

Fault code	Fault	Possible cause	Correcting measures
44	Device changed (different type)	Option board or power unit changed. New device of different type or different power rating.	Reset Set the option board parameters again if option board was changed. Set converter parameters again if power unit was changed.
45	Device added (different type)	Option board of different type added.	Reset Set the option board parameters again.
49	Division by zero in application	Division by zero has occurred in application program.	Contact your distributor if the fault re-occurs while the converter is in run state. If you are application programmer check the application program.
50	**Analogue input I_{in} < 4mA (sel. signal range 4 to 20 mA)**	**Current at the analogue input is < 4mA.** **– control cable is broken or loose** **– signal source has failed**	**Check the current loop circuitry.**
51	External fault	Digital input fault.	Remove fault situation on external device.
52	Keypad communication fault	The connection between the control keypad (or NCDrive) and the frequency converter is broken.	Check keypad connection and possible keypad cable.
53	Fieldbus fault	The data connection between the fieldbus Master and the fieldbus board is broken	Check installation. If installation is correct contact the nearest Vacon distributor.
54	Slot fault	Defective option board or slot	Check board and slot. Contact the nearest Vacon distributor.

APITQ224_v320



VACON SPA
Via F.lli Guerra, 35
42100 Reggio Emilia
ITALY
Phone: +39 0522 276811
Fax +39 0522 276890
E-mail: vacon.italy@vacon.com