

39933SH0

39948SH0

用户手册


CN

.....1

USER MANUAL

GB

..40

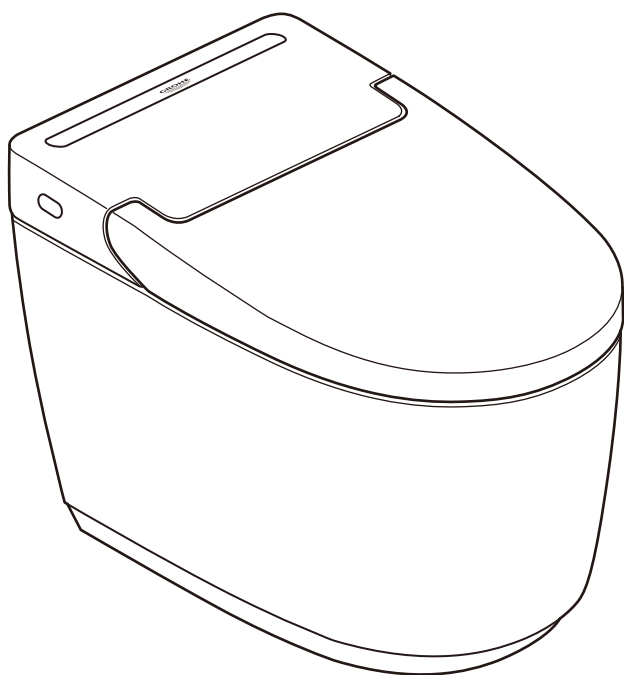

简介

关于本手册

操作前请阅读以下内容	4
------------------	---

控制装置和按钮

主件	5
遥控器	6

使用方法

常规使用

基本操作	8
喷水清洗	10
暖风烘干	11

设定

调节坐便器坐圈温度	11
节电	12
坐圈加热器自动关闭	13
自动冲水功能	13
除臭功能	14
按钮操作音	14
恢复默认设定	15
配对	15
检查电源插头	16
如果出现短路	17
出现停电或者供水故障时冲洗坐便器	18
防冻	20
如果打算长时间不使用本产品	21

故障排除

故障排除

所有功能	23
清洗	24
除臭	25
自动冲水	25
烘干	26
坐圈加热器	27
其他	27

清洁

清洁前

指导	28
----------	----

清洁

坐圈、便盖、后盖和遥控器（塑料件）	29
拆下便盖进行清洁	30
坐便器腔体（陶瓷件）	33
喷嘴.....	34

售后服务

售后服务	35
规格.....	37


关于本手册

■ 操作前请阅读以下内容

为确保正确使用本产品，请仔细阅读本手册和印刷版“快速入门指南”。
未遵守印刷版“快速入门指南”（随附）中所述的安全注意事项，会在某些情况下造成严重事故。
这些条目对安全极其重要，应严格遵守。
如果因不当使用而发生事故，GROHE对损坏概不负责。



控制装置和按钮

■ 主件

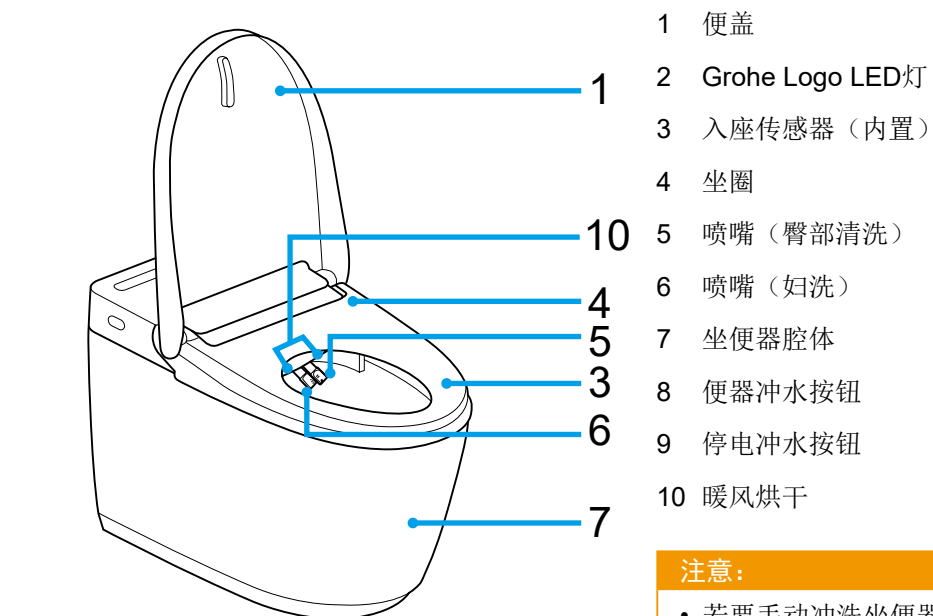


注意：

- 若要手动冲洗坐便器，请按冲水按键板上的冲水按钮。

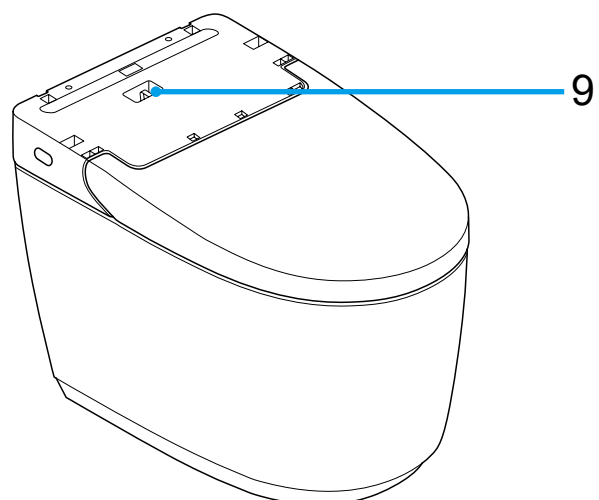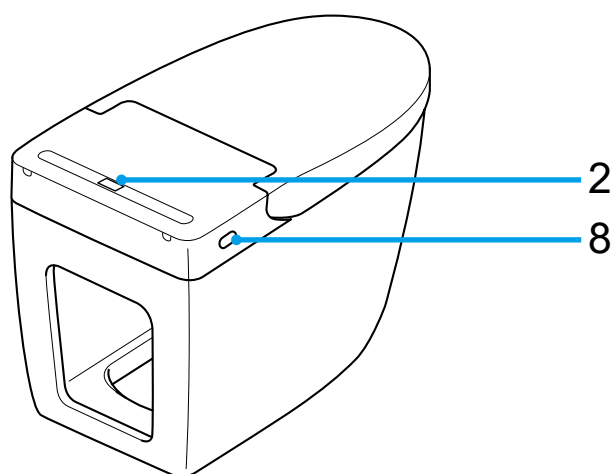

* LED灯：白灯表示通电，绿灯表示节电状态，红灯表示产品异常。

■ 遥控器

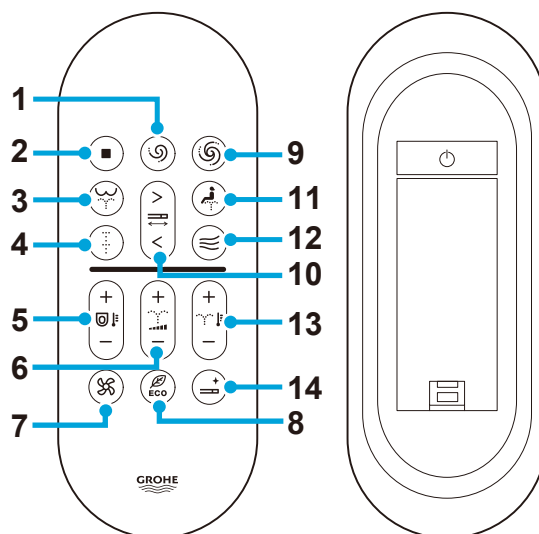

- | | |
|------------|-------------|
| 1 冲水（小冲）按钮 | 8 节电按钮 |
| 2 停止按钮 | 9 冲水（大冲）按钮 |
| 3 臀部清洗按钮 | 10 喷嘴位置调节按钮 |
| 4 臀部按摩清洗按钮 | 11 妇洗按钮 |
| 5 座温调节按钮 | 12 烘干按钮 |
| 6 喷水强度调节按钮 | 13 水温调节按钮 |
| 7 除臭按钮 | 14 喷嘴自洁按钮 |

注意：

- 按下 （臀部清洗）按钮2次，清洗模式设定为“广域清洗”。按下该按钮3次，清洗模式将设定为“精细清洗”。
广域清洗:喷嘴前后移动以大范围清洗。
精细清洗:喷嘴在小范围内前后移动。
- 按下 （妇洗）按钮2次，清洗模式切换为“广域清洗”。按下该按钮3次，清洗模式将设定为“超广域清洗”。
广域清洗:喷嘴前后移动以大范围清洗。
超广域清洗:喷嘴在更大范围内前后移动。


首次装入电池

1. 在遥控器中装入2节AAA电池（7号）。
2. 长按遥控器电源按键（）2秒以上，遥控器开机（LED朝外淡出）
3. 将遥控器靠近产品本体，长按stop键3S，以上，所有LED同时闪烁3回，表示配对成功。
* 确保产品已经开启


更换遥控器电池

电池电量不足时，遥控器中间红色LED闪烁，请更换新电池。所有按钮“功能”可能会不起作用。

1. 从托架中取出遥控器。

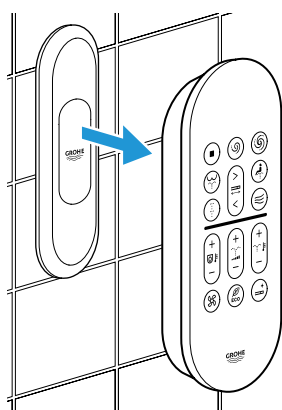

2. 拆下后盖并更换两节新的1.5V AAA碱性电池。

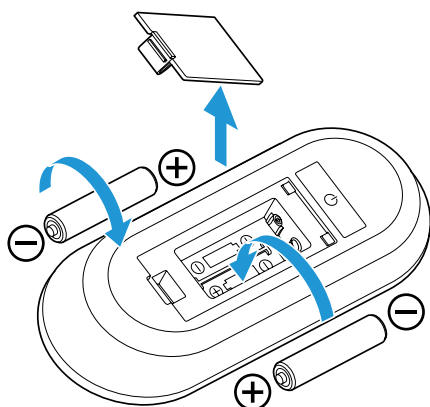

3. 装回后盖，并将遥控器放回托架。


常规使用

■ 基本操作


用户手册 (可了解更多详细信息)

<http://www.grohe.com>


打开坐便器座圈/便盖

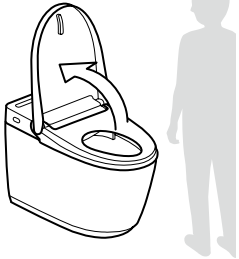	手动 站在坐便器前方，手动打开便盖。
---	---


1 清洗

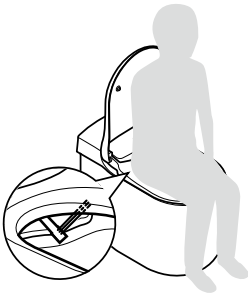	清洗 →	调节 →	停止
	3  臀部清洗 11  妇洗	6  喷水强度 10  清洗部位 13  水温	2  停止喷水


2 烘干

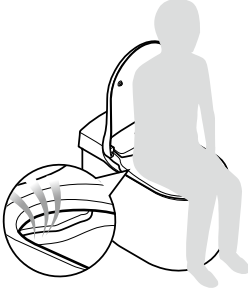	烘干 →	调节 →	停止
	12  烘干	12  烘干温度	2  停止烘干


3 冲水

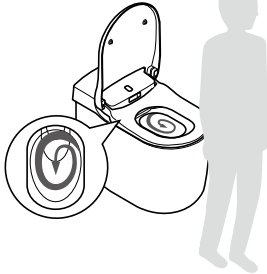	自动	遥控
	站起时, 自动开始冲水。	 冲水 (大冲)  冲水 (小冲)

关闭坐便器座圈/便盖

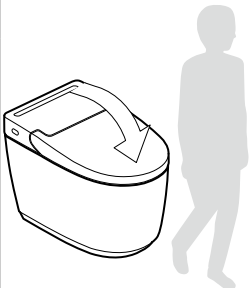	手动
	离开坐便器时, 手动关闭便盖。

■ 喷水清洗

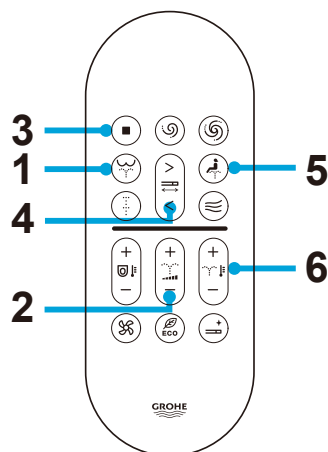

- 1 (臀部清洗) 按钮: 清洗臀部
- 2 (喷水强度调节) 按钮: 清洗时调节喷水压力 (5档)
- 3 (停止) 按钮: 停止清洗
- 4 (清洗部位调节) 按钮: 清洗时调节清洗部位 (5个部位: 默认/向前2个部位/向后2个部位)
- 5 (妇洗) 按钮: 清洗前部
- 6 (水温调节) 按钮: 调节水温 (6档: 关闭 (水温)、低 (约28° C) 到高 (约40° C))

喷水强度调节5档




喷水强度调节5档

- | | | | | | |
|----|--|--|--|--|--|
| 1. | | | | | |
| 2. | | | | | |
| 3. | | | | | |
| 4. | | | | | |
| 5. | | | | | |

注意:

- 未坐在坐圈上时, 清洗功能不会工作。
- 清洗功能持续运行2分钟后, 喷水自动停止。
- 坐在坐圈上时, 在清洗功能即将启动之前或清洗功能完成之后, 水将从喷嘴附近喷出。此为设计所需并非故障。
- 在冬季等情况下供水温度极低时, 喷水的水温可能会低于预期。
- 使用清洗功能时, 为了减少水花飞溅, 请靠后坐在坐圈上。
- 避免长时间使用喷水功能。请勿将此功能用于清洗直肠、阴道或尿道的内侧。
- 请勿将此功能用于刺激排便。此外, 使用此功能时, 请勿故意排便。
- 当私密部位疼痛或发炎时, 请勿使用此功能。
- 当用户正在接受私密部位医疗时, 使用此功能需遵医嘱。

■ 暖风烘干

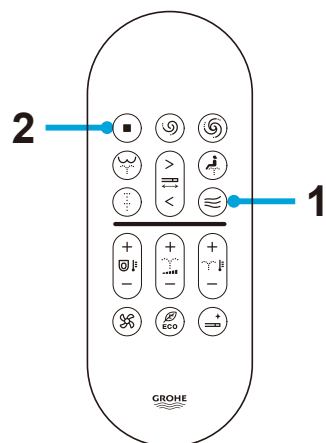

- 1 (烘干) 按钮：暖风烘干
- 2 (停止) 按钮：停止烘干功能
- 3 切换烘干温度时，再次按下[烘干] (烘干) 按钮
※：每按一次按键，将按“高”“低”“中”顺序切换。
[低]：室温
[中]：约40° C
[高]：约55° C

注意：

- 当烘干功能停止时，烘干温度将返回至初始设定。
- 约4分钟后，烘干功能自动停止。

设定


■ 调节坐便器坐圈温度

通过调节坐圈温度的“+”“-”设定适合的温度。



■ 节电

可以通过在不使用坐便器 (例如夜间)时将坐圈加热器关闭8小时来降低功耗。

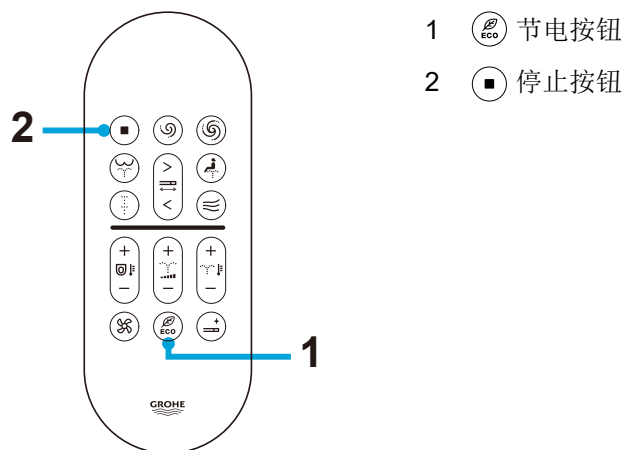



注意:

- 在出现电源故障以后或者当断开电源插头连接时，节电功能会复位。

ECO模式打开

绿灯闪烁0秒

(发生两次，持续0.9秒)ECO模式启动时

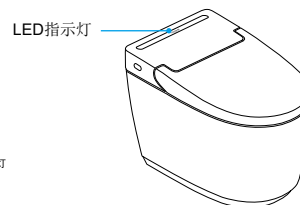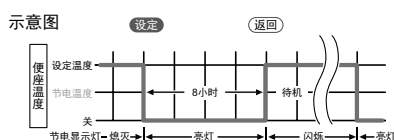

ECO模式激活 (8小时)


此模式下，坐圈加热功能关闭8小时，以降低能耗。

1. 绿灯一次闪烁3秒

ECO模式启动时

2. 两组照明之间有4秒的间隔

LED说明

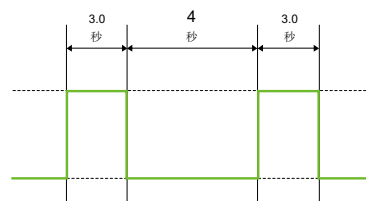

ECO模式待机16小时


此模式下，坐圈加热功能开启，坐圈温度恢复至设定温度。

1. 绿灯一次闪烁0.7秒

ECO模式启动时

2. 两组照明之间有4秒的间隔

LED说明

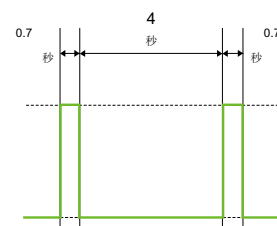


ECO模式关闭

绿灯闪烁0.3秒

(发生两次，持续0.9秒)ECO模式结束时


■ 坐圈加热器自动关闭

当您坐在坐便器坐圈上时，坐便器加热器会自动关闭，以免造成低温灼伤。
同时[按摩清洗]+[妇洗]2秒以上。

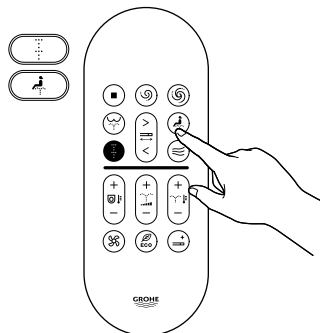

■ 自动冲水功能

在默认设定下，用户从座便器上站起约6秒后，坐便器将自动冲水。
您可以在设定中关闭此功能。
同时，[妇洗]+[喷水强度+]2秒以上

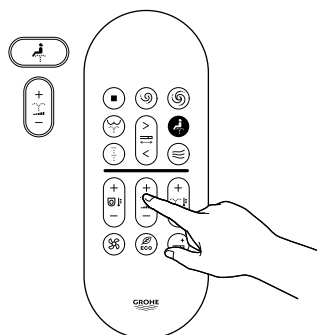

注意：


- 当用户坐在坐便器上少于10秒钟时，自动冲水功能不会启用。
- 如果用户坐在坐便器上大于50秒，则全自动清洗功能执行全冲；如果用户坐在坐便器上少于50秒，则执行半冲。请注意，如果使用后清洗或后清洗-柔和功能，则执行全冲，与就座时间无关。

■ 除臭功能

用户坐在坐圈上时，将启用除臭功能。用户从坐便器上站起约1分钟后该功能自动停止。

可在设定中启用或禁用用于去除坐便器腔体内异味的除臭功能。

按[除臭]按钮可关闭/开启自动除臭功能。

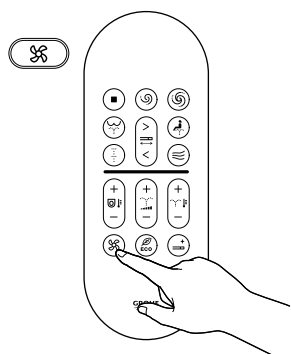


■ 按钮操作音

可在设定中启用或禁用坐便器操作音。

同时按住“节电”+“温水温度-”按键，并保持2秒以上可开启或关闭坐便器操作音。


※出厂时，该功能默认为开。

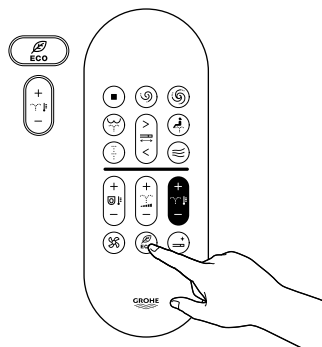

■ 恢复默认设定

所有功能均可恢复为出厂默认设定。

同时按住[节电]+[清洗位置前]按键并保持2秒以上。

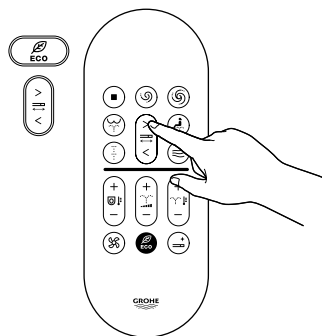

■ 配对

1. 长按[停止]键3秒,就发起广播30秒（发起广播同时清除以前匹配信息）；

2. 配对成功，遥控器的全LED同时闪烁3回


3. 配对失败，遥控器的中间LED闪烁3回

如果配对失败，请重复以上动作（并确认遥控器是否已经开机，产品是否已经给电）

■ 检查电源插头


电源插头拥有漏电保护功能。如果电源插头损坏，可能会出现事故。每月检查电源插头一次或两次。

1. 确认在按下测试按钮时LED指示灯熄灭。

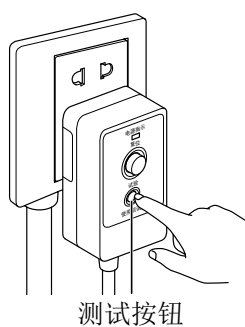

在坐便器电源打开时，执行此操作。

2. 确认在按下复位按钮时LED指示灯点亮。

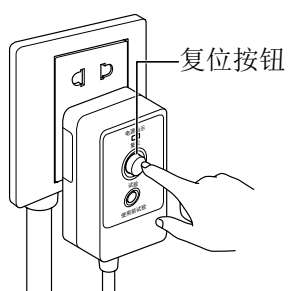

■ 如果出现短路

正常使用状态下，电源插头的LED灯常亮。


如果出现短路，LED指示灯会熄灭，并且电路中断。

如果坐便器内部出现短路，所有功能将停止工作，并且电源插头上的LED指示灯会熄灭。当电源插头被水溅湿时，LED指示灯可能也会熄灭。

电源插头拥有安全装置，如果坐便器发生短路，会使电路中断。如果电路中断，LED指示灯将熄灭。

当此LED指示灯熄灭时

1. 从插座中拔出电源插头，等待约10秒，然后将电源插头重新插入插座。
2. 按下复位按钮点亮LED。

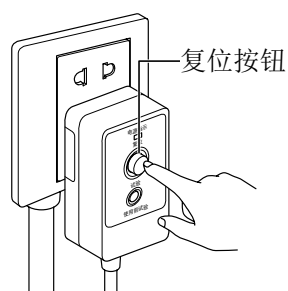


如果即使执行了上述操作，LED指示灯依然熄灭，请立即将电源插头从插座中拔出，并尽快联系您的经销商或GROHE的维修中心。

■ 出现停电或者供水故障时冲洗坐便器


出现停电时的手动冲水

如果出现停电，将无法使用遥控器冲洗坐便器。请按照以下步骤冲洗坐便器。

1. 拆下顶盖。

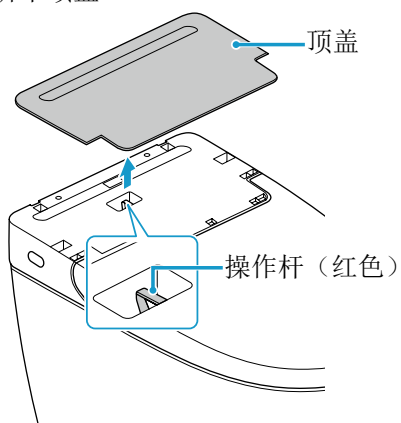


2. 按住解扣杆 (红色)约5秒。

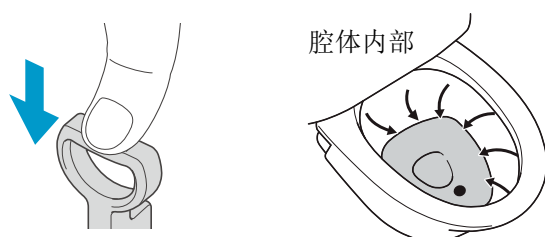


水从腔体四周流出，将污物冲到腔体底部。

3. 将污物冲到腔体底部以后，拉住解扣杆 (红色)约5秒。

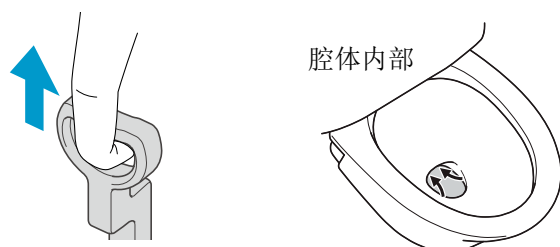

水从腔体底部流出将污物清除。


4. 完全清除污物以后，再次按住解扣杆 (红色)约5秒。

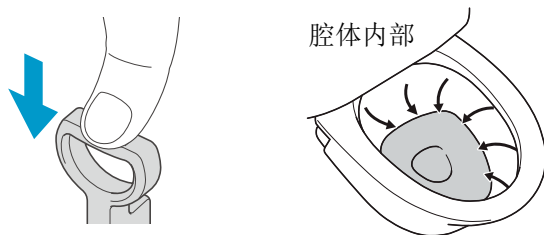

水从腔体四周流出，在腔体内部存水。

在腔体内部存水以后，松开解扣杆。解扣杆将回到原位，并且水停止流出。

5. 安装顶盖。

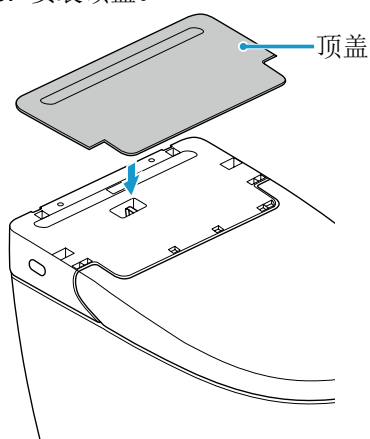

安装后，确保顶盖已正确安装。

暂停供水时的手动冲水

用桶装水，然后将水小心地倒入坐便器腔体，以手动方式冲洗坐便器。

将污物从腔体内清除以后，将水倒入腔体，让腔体内的水位恢复为正常水位。

* 当坐便器冲洗不理想时，请立即倒水。如有必要，请重复操作。

* 对于部分冲水，请执行相同的步骤。

注意：

- 搬动水桶或者将水倒入坐便器时，请非常小心，不要将水溅到地面上。
- 切勿让水溅到插座等电气部件上。

■ 防冻

为防止因水冻结而造成损坏，请遵循以下程序。

(请勿关闭电源或从插座上拔下电源插头，并且应关闭节电功能。)

注意

 有可能冻结时，请确保遵守其中一种防冻程序。
* 冻结造成的损坏可能会引起火灾或地面积水。

一般防冻措施

1. 将坐圈温度设定为“高”并关闭便盖。(Page 11)
2. 关闭节电功能。(Page 12)

如果因冰冻导致无法清洗

如果供水软管或者连接水源的部件中的水结冰并且无法进行清洗，请用浸过热水的布让供水软管或者连接水源的部件的温度升高，使结冰慢慢解冻，或者让卫生间温度升高并等到水自然解冻。

注意：

- 切勿将热水浇到供水软管上。否则供水软管可能会损坏。
- 根据结冰部件而定，水可能会在解冻时喷出。解冻时，请注意多观察。


■ 如果打算长时间不使用本产品

如何排水

在以下情况下，务必按照以下步骤排水。将电源插头从插座中拔出。


- 如果因旅行等原因而长时间不使用坐便器 (可能会因脏水而造成堵塞。)
- 如果坐便器安装在别墅等空房中，可能会因意料之外的降温而造成结冰。

1. 关闭止水阀，并停止供水。

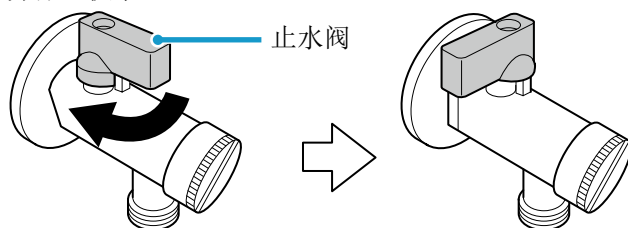

如果打开/关闭手柄难以转动，请用干毛巾包住进行转动。

2. 将水从装置中排出

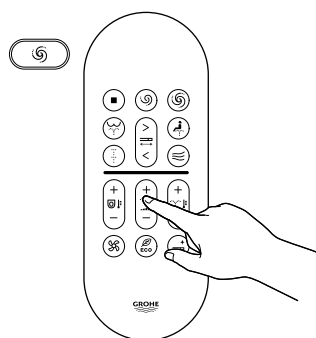

1. 按下遥控器上的冲水按键，或者按下坐便器侧面的冲水按键。

- 将产品冲洗装置水路中的余水排出。

2. 按下冲水按钮同时按住遥控器上强度“+”并保持2s。

- 将产品管路内的余水排出。



(温水温度“+”) 和




(喷水)


3. 将水从供水软管中排出。

1. 拆下止水阀侧的供水软管。

- 此时可能会溢出少量水，请在下方备好接水用容器装置。
- 用活动扳手沿顺时针方向拧松螺母后卸下进水软管。

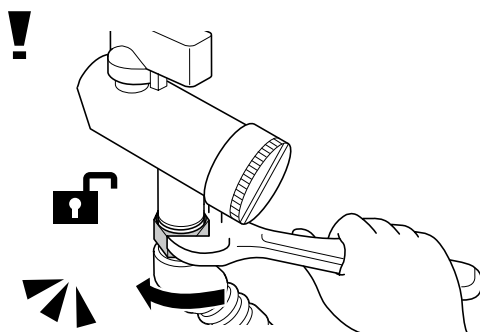

2. 排水以后，牢固安装供水软管，并用扳手逆时针拧紧螺母。

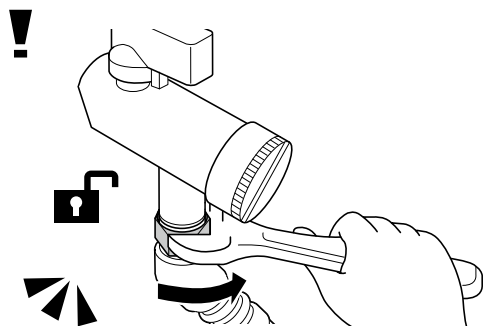

4. 将电源插头从插座中拔出。

5. 检查止水阀是否漏水。

注意：

- 再次使用坐便器时，请务必执行“使用前的准备” (第14页)。

如果有冰冻的风险

- 将水从坐便器排出，然后使用防冻剂或毛巾封住排水口。
 - 未经正确处理时，切勿冲洗防冻剂。请将防冻剂作为垃圾回收。否则会有污染环境的风险。
 - 牢固封住排水口，否则可能会造成异味或昆虫进入。
- 需要从管道排水。如果正在使用排水型装置，除了执行上述步骤以外，请对建筑物的排水阀进行处理并从管道中排水。

对排水阀进行处理以后，打开止水阀。

故障排除

所有功能

所有功能均不工作

未供电。

➤➤ 检查是否有电源故障、断路器跳闸或其他可能的情况。

坐便器电源关闭。

➤➤ 按下坐便器的电源按钮以打开电源。

出现短路。

➤➤ 关闭坐便器的电源并申请维修。或按下电源插头上的重置按钮。如果显示LED仍熄灭，请拔下电源插头并申请维修。

电压非220 V。

➤➤ 关闭坐便器的电源并申请维修。

电源插头未连接至插座。

➤➤ 连接电源插头时，将电源插头完全连接至插座。再次连接电源插头前，需等待约10秒钟。

遥控器不工作

遥控器关闭。

➤➤ 按 （电源）按钮2秒以上，以打开电源。

电池电量耗尽（电池电量不足时，正面中间红色LED闪烁）。

➤➤ 更换新电池。([Page 7](#))

未正确插入电池。

➤➤ 按照正确的方向装入电池。

坐圈装置或遥控器附近有金属物品。

➤➤ 移走金属物品。

使用的并非随附遥控器。

➤➤ 如果使用的并非随附遥控器，则需要配对到坐便器。有关配对步骤，请参阅以下“遥控器未正确配对”。

遥控器未正确配对。

➤➤ 按照以下步骤将遥控器配对到坐便器。

1. 从遥控器托架中取下遥控器，并将遥控器靠近坐便器。
2. 长按  按钮3S以上。
3. 所有LED同时闪烁3回，表示注册成功。

清洗

不喷水

止水阀关闭。

➤➤ 打开止水阀

过滤器堵塞。

➤➤ 过滤器位于坐便器腔体内。申请维修。

供水压力过低，或者水压设定设为其最低水平。

➤➤ 按喷水强度调节按钮的+。(Page 10)

传感器未检测到用户。

➤➤ 坐在坐圈上或者改变坐姿。例如，靠后坐在坐圈上。

用户的衣服难以检测。

➤➤ 让传感器检测用户的皮肤。

坐便器正在冲水。

➤➤ 这并非故障。冲水优先。坐便器冲水后，再次按 （臀部清洗）、或 （妇洗（女性专用））按钮。

喷水花费很长时间

供水的温度过低。

➤➤ 这并非故障。在冬季等情况下水温极低时，由于需要准备喷温水，可能需要比平常更长的时间才能喷水。

水不温暖

水温设在最低设定。

➤➤ 通过调节[水温]按键并将温度调节为适当的水平。(Page 10)

供水温度极低。

➤➤ 在冬季等情况下供水温度极低时，喷水的水温可能会低于预期。

水压过低

水压设定设在最低水平。

➤➤ 按喷水强度调节按钮的+。(Page 10)

喷水方向错误

喷嘴头未对准正确位置。

- 正确对准喷嘴头。

产品中发出机械操作声

停止喷水时，产品中发出机械操作声。

- 这并非故障。这是坐便器正常工作时电机产生的声音。只要能够正确调节水压和/或喷嘴位置，就没有问题。

除臭

除臭风扇连续运转

入座传感器脏污或弄湿。

- 用潮湿的软布擦拭传感器。

除臭风扇不工作

[除臭]关闭。

- 将[除臭]设定为[开]。(Page 19)

入座传感器脏污，或用户已经坐在坐圈上超过2小时。

- 传感器可能误检测。用潮湿的软布擦拭传感器。除臭风扇在连续工作2小时后将自动停止。

除臭效果微弱

过滤网脏污可能会导致除臭效果不够。

- 擦拭产品机能部底座的除臭吹风口部件。

坐圈已使用了很长时间。

- 智能坐便器单元中有除臭药盒。请申请更换。

自动冲水

坐便器不自动冲水

[全自动冲洗]设定为[关]。

- 将[全自动冲洗]设定为[关]以外的选项。(Page 13)

冲洗时水流不畅或坐便器不能完全冲净

使用过多厕纸。

- 如果使用过多厕纸，使用 （冲水/小冲）按钮时，可能无法完全冲净。在此情况下，请按 （冲水/大冲）按钮。[\(Page 9\)](#)

坐便器腔体堵塞

使用过多厕纸。

- 将[全自动冲洗]设定为[关]，然后清除坐便器中的堵塞。[\(Page 13\)](#)
- * 清除堵塞过程中坐便器可能会自动冲水，并且坐便器腔体内的水可能会溢流。

烘干

烘干不工作

入座传感器未检测到用户。

- 坐在坐圈上。或者改变坐姿。例如，靠后坐在坐圈上。

风不热

[\[烘干温度\]](#)设定过低。

- 按 （温度调节）按钮调节温度。[\(Page 11\)](#)

暖风突然停止

烘干功能已使用超过4分钟。

- 再次按 （烘干）按钮。[\(Page 11\)](#)

烘干噪音吵人

当[\[烘干温度\]](#)设为高时，由于风扇转速加快，烘干噪音变大。

- 将[\[烘干温度\]](#)设为中或低。[\(Page 11\)](#)

坐圈加热器

坐便器坐圈不暖

坐圈温度未调节到合适温度。

➤➤ 调节坐圈温度。(Page 11)

节电功能打开。

➤➤ 将节电功能设定为关闭。(Page 12)

长时间坐在坐便器坐圈上时坐圈温度不够暖

[便座加热器自动关闭]设定为[开]。(防低温烫伤功能开启中)

➤➤ 将[便座加热器自动关闭]设定为[关]。(Page 18)

用户坐在坐便器坐圈上超过1小时。

➤➤ 用户坐在坐便器坐圈上超过1小时时，坐圈加热功能自动关闭。

从坐便器坐圈上站起，然后重新坐下。

坐便器坐圈的侧面不暖

➤➤ 接触到坐便器坐圈侧面时，可能会觉得凉，因为坐圈加热功能加热的是坐便器坐圈的上部。这并非故障。

其他

坐便器的下侧有水滴

湿度高，形成冷凝。

➤➤ 经常擦去水滴。此外，使浴室充分通风。

入座模式被中断和重置

➤➤ 由于电磁环境的影响，入座模式可能会中断和重置。

清洁前

■ 指导

在本章节中，GROHE提供有关清洁本产品的基本指导。请注意，有些清洁工具和清洁剂不应使用。作为基本规则，GROHE建议对本产品使用液态通用清洁剂。

清洁工具

软布

➤➤ 用于坐圈、便盖、顶盖、后盖、坐便器

海绵：使用柔软的泡沫海绵。

➤➤ 用于喷嘴头

坐便器刷（非研磨性）

➤➤ 用于坐便器腔体

橡胶手套：用于防止双手皮肤粗糙。

➤➤ 翻折手套边缘以防进入水和清洁剂。

清洁剂

非研磨、中性坐便器清洁剂：去除坐便器腔体中发黄和/或发黑的污垢。

➤➤ 陶瓷件

注意：

- AQUA CERAMIC是一种高亲水性材料，可轻松清除附于马桶的污物。但仍需清洁。如是留在陶瓷表面的污物或者渣滓油腻，可能不易清除。请定期清洁坐便器。要充分发挥AQUA CERAMIC效力，请勿使用以下清洁剂和工具。
 - 强碱性/酸性清洁剂
 - 研磨性清洁剂
 - 脱水或防污清洁剂，或者表面涂覆剂
 - 损坏材料表面的清洁工具，例如金属刷或研磨刷




- 清洁坐便器时，将[全自动冲洗]和[便座自动开合]设定为[关]，以避免误检测。(Page 13)

清洁

■ 坐圈、便盖、后盖和遥控器（塑料件）

蘸湿软布并擦拭表面。

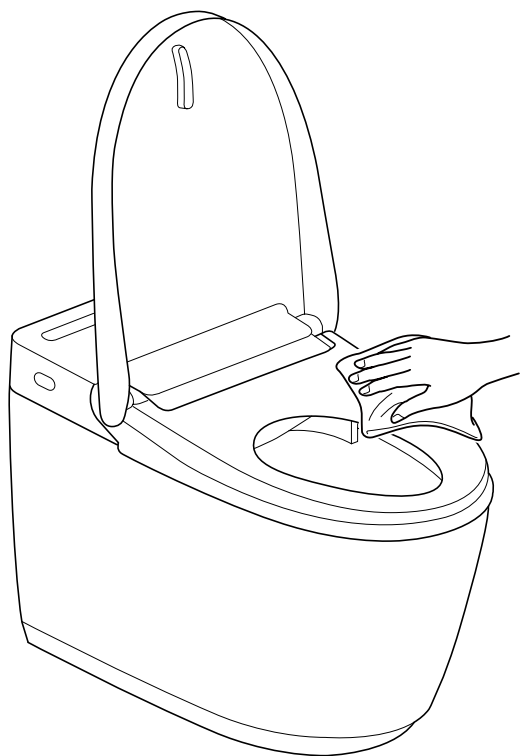

GROHE建议经常清洁坐便器，以防脏污积聚在坐便器表面。
用湿布擦拭还可防止静电，静电会吸附灰尘颗粒，从而产生发黑的污垢。

注意：

- 请勿使用干布或厕纸擦拭表面，否则可能会造成刮痕。
- 清洁遥控器时，请关闭坐便器的电源，以避免误检测。

SIAA (抗菌)

基于ISO22196的评价结果，在日本抗菌制品技术协议会（SIAA）的指导方针下进行品质管理和信息公开的产品上标注SIAA标识



■ 拆下便盖进行清洁

可轻松拆下便盖。当清洁被遮挡的铰链或清洁整个便盖时，此操作很有用。

注意：


- 拆卸便盖时，请关闭坐便器的电源。否则可能会对坐圈装置的内部零件造成损坏。

拆下便盖


注意：

- 请勿对便盖用力过大，否则可能会将其损坏。
- 请勿在便盖拆下的情况下打开坐圈，否则可能会导致坐圈刮伤或损坏。
- 请勿在便盖拆下的情况下使用坐便器。


1. 拆下便盖。

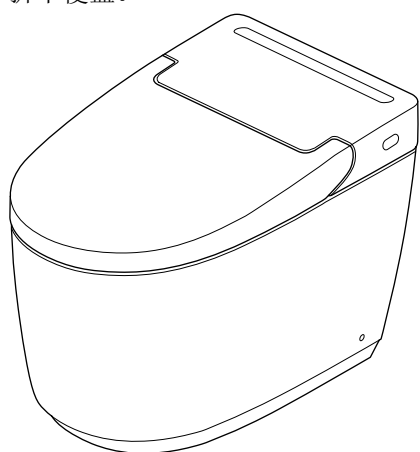


① 双手握持便盖

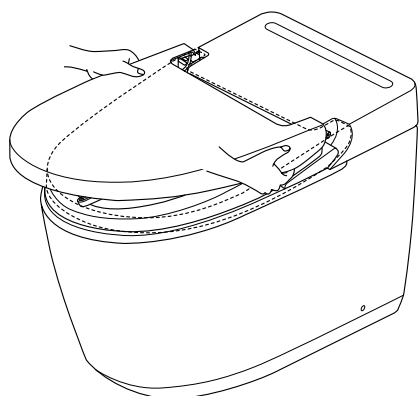


② 右侧向外打开便盖

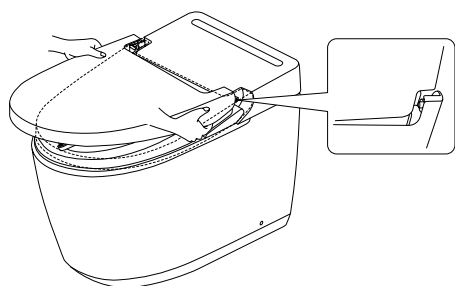


③向外打开便盖右侧的锁孔，使其与销分离并翘起。

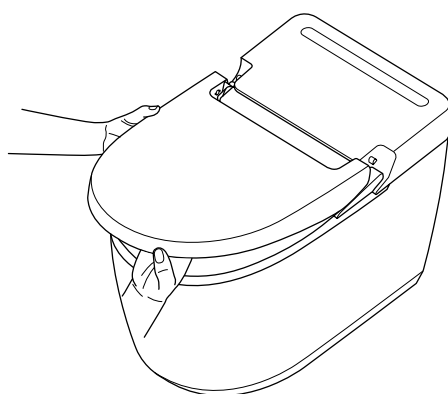


④将便盖抬起向左挪动，并将其拆下。

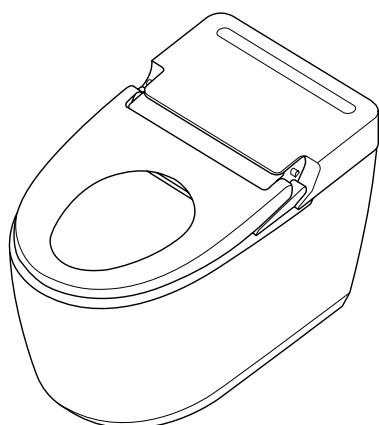




组装便盖

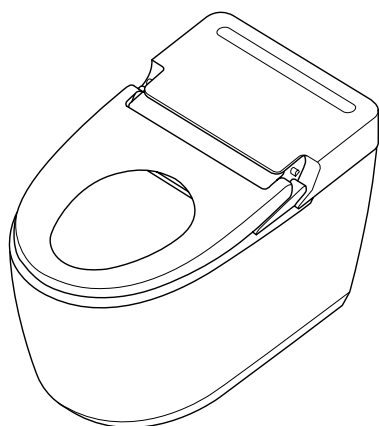

①将便盖左侧的销孔对准本体左侧的销后插入。

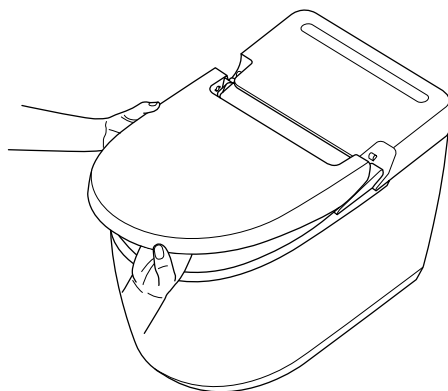


②向外打开便盖右侧的销孔，对准销后安装便盖。

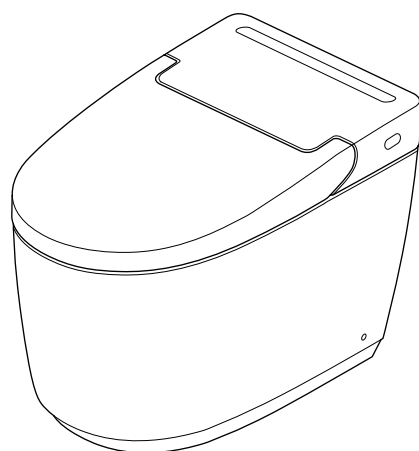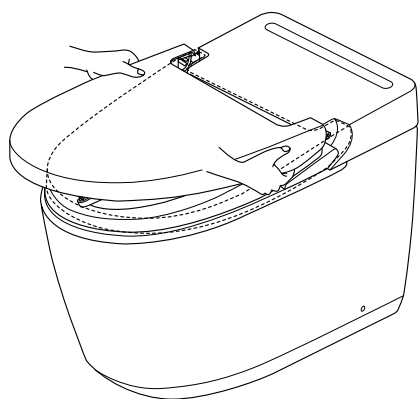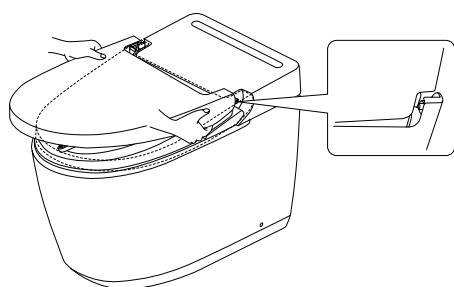

■ 坐便器腔体（陶瓷件）

坐便器腔体上部和内表面均经过AQUA CERAMIC的特殊涂层处理。

- 使用蘸有中性洗涤剂的软刷或海绵，用水或温水清洁腔体。

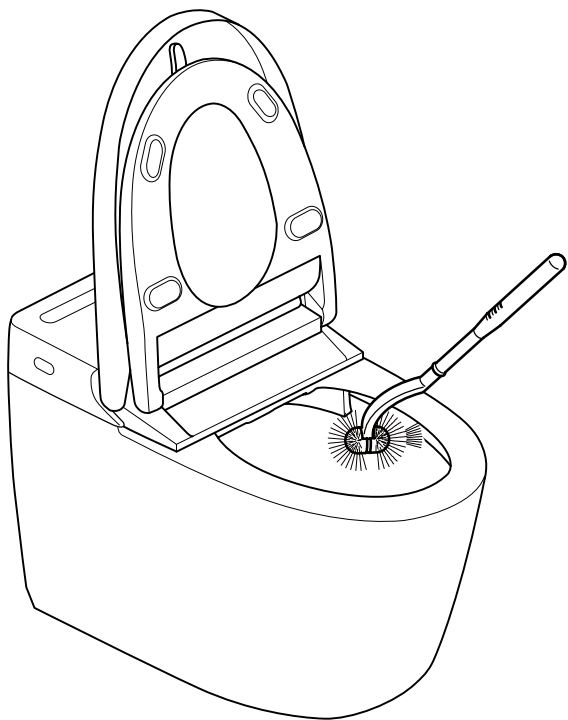

注意：

- 请勿使用含氯清洁剂、酸性清洁剂或消毒剂，否则蒸发气体可能会损坏本产品或导致故障。
- 请勿使用热水，否则可能会损坏坐便器。
- 请勿使用研磨性刷子或清洁剂，否则将降低超洁净表面的效果。

■ 喷嘴

通过遥控器清洁喷嘴

若要在使用坐便器（坐在坐圈上）的同时清洁喷嘴（喷嘴自洁），请使用遥控器按照以下步骤操作。

喷嘴自洁：

开机入座状态下，按遥控器正面的  按键，喷嘴将启动自洁功能；

手动清洁：

您可以手动清洁喷嘴（例如，使用海绵轻擦这些部件以清除污渍等）。按照以下步骤伸出喷嘴进行清洁。

1. 将[全自动冲洗]设定为[关]禁用这些功能。 ([Page 13](#))

2. 打开便盖和坐圈。

3. 按照以下步骤操作。

手动清洁喷嘴，开机离座状态下，按遥控器正面的自洁按键，喷嘴会自动伸出，如果喷孔有污垢，请用海绵等进行清洁。清洁完成后，按下[停止]按键，喷嘴自动缩回。

※不要过度用力拉伸、弯曲喷嘴。

※单独的喷嘴前端部品可以更换，详情请联络官方售后服务热线。

注意：

- 请勿对喷嘴用力过大，否则可能造成故障。
 - 请勿拉动或按压喷嘴。否则喷嘴将不会缩回，并且可能会发生故障。
- 如果不慎拉动或按压喷嘴，请按下坐便器的电源按钮关闭坐便器电源，然后在10秒钟后打开电源。

■ 售后服务

1. 申请专业维修之前

如果按照“故障排除”(Page 23)上的步骤无法解决问题，请联系GROHE，了解更多说明。在以下情况中，也请联系GROHE。

- 如果您遇到本手册中未说明的其他问题。
- 如果电源线损坏。
- 如果电源线过热。

如果对以上情况置之不理，可能会发生意外事故。务必咨询GROHE。

注意：

- 切勿拆解或改装本产品，否则可能会导致触电、火灾和/或人身伤害。此外，拆解本产品将不属于保修范围。
- 如果从坐圈装置或供水系统漏水，请关闭坐便器的电源，否则可能会导致触电、火灾或地面积水。
- 如果坐圈装置或电源线损坏(出现异响、异味、烟雾、高温、破裂或漏水)，请立即拔下坐便器的电源插头，并申请修理部件。切勿使用任何有缺陷的部件，否则可能会造成触电或火灾。

2. 请阅读保修卡

本产品随附保修卡。确保通读本产品随附保修卡中的保修说明。请将购买凭证存放在易于拿取的地方(特别是来自GROHE经销商的销售发票)。

保修期：自购买之日起3年

请阅读保修说明了解哪些项目属于保修范围，哪些项目不属于保修范围。

3. 申请维修

如果您有任何问题，或部件损坏或丢失，请勿联系商店或将本产品退回商店。请联系当地客户服务代表。我们会处理您遇到的任何问题或故障。

保修期内

申请保修服务时，请提供以下信息。

超过保修期

如果超过保修期申请服务，维修费用由产品所有者承担。维修费用包括技术维修费、交通费和零件费。

需要询问的详细信息

1. 联系信息 (例如：姓名、地址、电话)
2. 序列号
(参见产品侧面的标签。)
3. 安装日期
(参见保修卡。)
4. 申请维修的原因

4. 备件的最短保留期限

从本坐便器停产开始计算，备件的最短保留期限为6年。

修理或检查时，请联系我们。

如果坐便器备件的最短保留期限已过，我们可能会没有相关备件。

* 备件是指维持坐便器性能的必需部件。

规格

型号		39933SH0	39948SH0
坑距		305mm	400mm
额定电源		AC220V 50Hz	
额定功率		1000W (环境温度20℃，水温15℃)	
使用水压范围	最低水压	0.08MPa以上 (流动压，流量≥20L/min)	
	最高水压	0.75MPa (静水压)	
使用环境温度范围		0~40℃	
产品尺寸		D710×W384×H462mm	
冲洗水量		大5.0L 小3.5L	
冲洗方式		喷射虹吸	
产品净量		约43kg	
进水方式		自来水直接连接式	
清洗	温水供给方式	瞬间加热式	
	臀部清洗水量	0.43L/min(5档调节)	
	妇洗清洗水量	0.45L/min(5档调节)	
	温水温度	关闭 (水温)，低 (约32℃)，高 (约40℃) (6档调节)	
	安全装置	温度保险丝，高温感应开关，流量开关	
暖风烘干	风量	0.36m³/min	
	暖风温度	低 (室温)，中 (约40℃)，高 (约55℃)	
	暖风加热功率	230W±10	
	安全装置	温度保险丝，双金属片温控器	
加温便座	表面温度	使用时：室温 约28~36℃ (6档调节)， 一触式节电 (8h) 设定：室温	
	安全装置	温度保险丝	
除臭	除臭方式	活性炭除臭块化学 吸附除臭	
	除臭风量	0.11m³/min	
遥控器	尺寸	L155×W60×H30	
	电源	2节碱性AAA电池	
	通信方式	蓝牙通信方式	
其他	停电对应	●	
	便盖、便座自动开合	-	
	全自动冲洗	●	
	柔光灯	-	
	臀部按摩清洗	●	
	摇摆清洗	●	
	清洗位置调节	●	
	喷嘴自洁	●	
	喷嘴防护盖	●	
	便座加热自动关闭	●	
	抗菌材质	便座，喷嘴	

其他	缓降便盖及便座		●
	便盖快速拆卸		●
电源线			有效长度1.0m，电源插头带漏电保护
SIAA (抗菌) 	基于ISO22196 的评价结果， 在日本抗菌制 品技术协议会 （SIAA）的指 导方针 下进行品质管 理和信息公开 的产品上标注 SIAA标识	使用的抗菌剂类型	无机抗菌剂
		抗菌处理方法	捏炼 (坐圈单元，喷嘴单元)
		抗菌处理部分	坐便器坐圈上表面/下表面 (坐圈单元) 喷管 (喷嘴单元)
		注册编号	JP0122008A0039G (坐圈单元) JP0122008X0059I (喷嘴单元)

本产品规格适用于销售本产品的国家或地区。

本产品环境温度20° C, 进水水压0.2 Mpa, 进水温度15° C条件下, 水温和座温设置为高时, 臀部清洗或妇洗持续、稳定工作2分钟的平均功率。(坐圈和温水加热器需同时工作。开始时初期进水不纳入代表性周期。)

产品中有害物质的名称及其含量

根据中华人民共和国《电器电子产品有害物质限制使用管理办法》的相关规定和要求，提供如下包括电子产品部品名称及有害物质的样式。

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	铬 (Cd)	六价铬 (Cr ⁶⁺)	多溴联苯 (PBB)	多溴联苯醚 (PBDE)
主板	○	○	○	○	○	○
树脂类外壳	○	○	○	○	○	○
温度传感器	○	○	○	○	○	○
遥控器	○	○	○	○	○	○
风扇	○	○	○	○	○	○
分流阀、止水阀	○	○	○	○	○	○
水管铜三通	○	○	○	○	○	○
电动开合组件	○	○	○	○	○	○

本表格根据SJ/T11364的规定编制。

○: 表示该有害物质在该部件所有均质材料中的含量在GB/T26572标准规定限量要求以下。

×: 表示该有害物质至少在该部件某一均质材料中的含量超出GB/T26572标准规定的限量要求。

上述“×”标识的部品现阶段没有可替代的技术和部件，且符合国家《电器电子产品有害物质限制使用管理办法》的法规要求。

在当前技术水平下，所使用有害物质的含量控制到了最低限。本公司会继续努力通过改进技术来减少这些物质的使用。

本产品的“环保使用期限”为10年，其表示如右图所示。可更换部件的环保使用期限可能与产品的环保使用期限不同。

只能在本说明书所述正常情况下使用本产品时，“环保使用期限”才有效。



Introduction

About this Manual

Please Read Before Operating	42
------------------------------------	----

Control and Buttons

Main Unit.....	43
Remote Control.....	44

How to Use

General Use

Basic Operation	46
Washing with a Shower (Front button operation)	48
Drying with Warm Air	49

Settings

Adjusting the Toilet Seat Temperature	49
Power Save	50
Seat Heater Auto Off.....	51
Auto Flush Function.....	51
Deodorization Function.....	52
Button Operation Sound	52
Restoring the Default Settings	53
Pairing.....	53
Inspecting the Power Plug.....	54
If a Short-Circuit Occurs	55
Flushing the Toilet in the Case of Power Outage or Water Failure	56
Preventing Freezing.....	58
In case you will not be using this product for a long time	59

Troubleshooting

Troubleshooting

All Functions	61
Washing	62
Deodorization.....	63
Auto Flush.....	63
Dryer	64
Seat Heater.....	65
Miscellaneous	65

Cleaning

Before Cleaning

Guideline.....	66
----------------	----

Cleaning

Toilet Seat, Toilet Lid, Back Cover and Remote Control (Plastic Parts)	67
Removing the Toilet Lid for Cleaning	68
Toilet Bowl (Ceramic Parts)	71
Nozzle.....	72

After-sales Service

After-sales Service.....	73
Specifications.....	75

About this Manual

■ Please Read Before Operating


To ensure proper usage of this product, please read this manual and the printed "QUICK START GUIDE" carefully. Failure to follow the safety precautions described on the printed "QUICK START GUIDE" (supplied) can result in serious accidents in some circumstances.

Each of these items is extremely important for safety, and should be strictly observed.

In the event that an accident occurs as a result of improper usage, GROHE will assume no responsibility for damages.

Control and Buttons

■ Main Unit

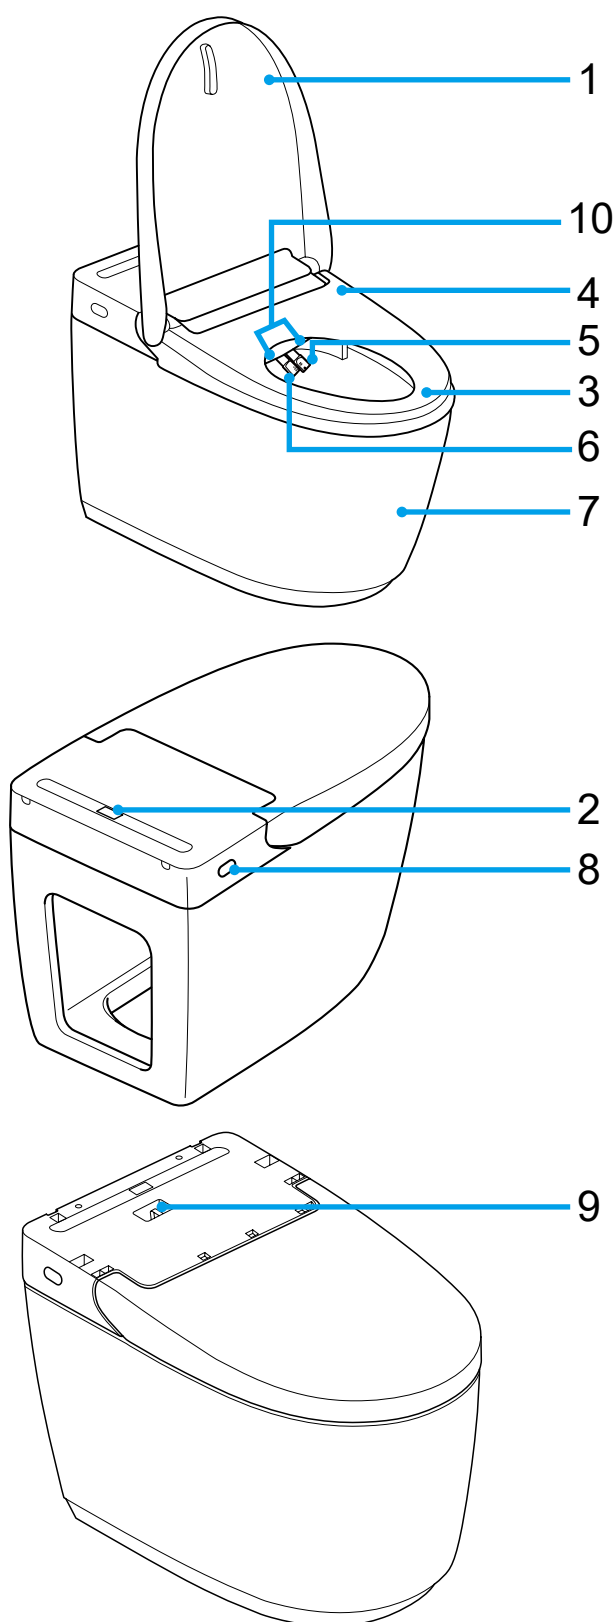


- 1 Toilet seat lid
- 2 Grohe Logo LED light
- 3 Seating sensor (Built-in)
- 4 Toilet seat
- 5 Nozzle (for rear washing)
- 6 Nozzle (for front washing)
- 7 Toilet bowl
- 8 Toilet flush button
- 9 Power cut flush button
- 10 Warm air dryer

NOTE:

- To flush the toilet manually, push the flush button on the actuation plate.

* LED light: white light indicates power on, green light indicates power saving status, and red light indicates product is abnormal.

Remote Control

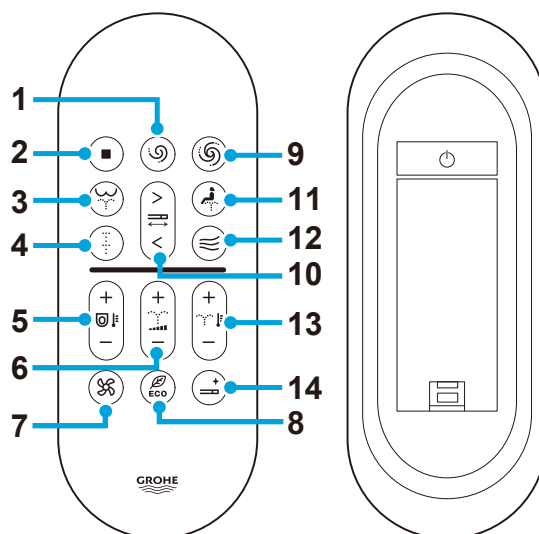

- | | |
|--------------------------------|----------------------------------|
| 1 Flush (light) button | 8 Power Save button |
| 2 Stop button | 9 Flush (full) button |
| 3 Rear Washing button | 10 Nozzle Position Adjust button |
| 4 Rear Massage Cleaning button | 11 Front Washing button |
| 5 Seat Temp. Adjust button | 12 Dryer button |
| 6 Spray Strength Adjust button | 13 Water Temp. Adjust button |
| 7 Deodorization button | 14 Nozzle Self-cleaning button |

NOTE:

- Pressing the  (rear washing) button 2 times sets the washing mode to "WIDE". When pressing it 3 times the washing mode will be set to "NARROW".
WIDE: The nozzle moves back and forth to wash a wide range.
NARROW: The nozzle moves back and forth within a narrower range.
- Pressing the  (front washing) button 2 times switches the washing mode to "WIDE". When pressing it 3 times the washing mode will be set to "SUPER WIDE".
WIDE: The nozzle moves back and forth to wash a wide range.
SUPER WIDE: The nozzle moves back and forth for a wider range.


Inserting the Battery for First Time

1. Insert 2-AAA batteries in the remote control.
2. Long press the power button (⏻) of the remote control for more than 2 seconds, the remote control is turned on (LED facing outward fade).
3. Bring the remote control close to the product body, long press stop button for more than 3s. All LEDs flash 3 times at the same time, indicating successful pairing.
*Make sure the product is turned on.


Replacing the remote control's batteries

When the battery is low, the red LED in the middle of remote control flashes, please replace the battery with a new one. All button "functions" may not work.

1. Detach the remote control from the holder.

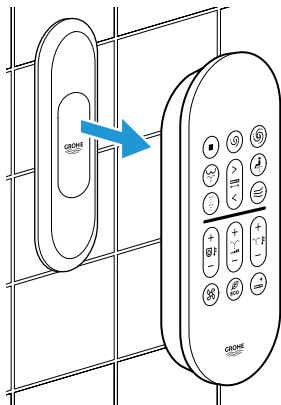

2. Remove the back cover and replace the old batteries with two new 1.5V AAA alkaline batteries.

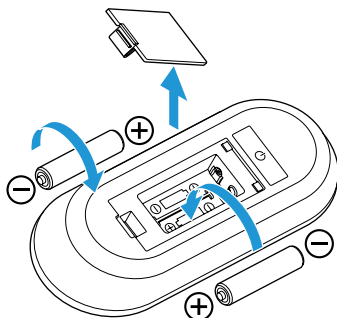

3. Reattach the back cover and replace the remote control in the holder.




General Use

Basic Operation


USER MANUAL (for more details, and operations using Smartphone)

<http://www.grohe.com>


OPENING THE TOILET SEAT / TOILET SEAT LID

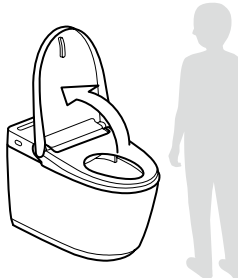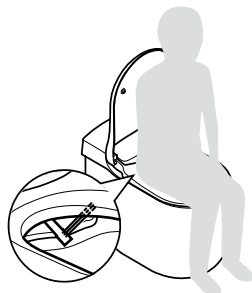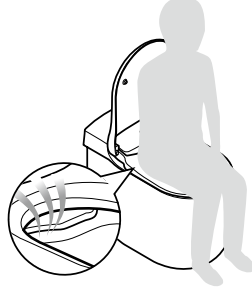	MANUAL Stand in front of the toilet and open the toilet lid manually.		
1 WASHING			
	WASH →	ADJUST →	STOP
	3  Rear Washing 11  Front Washing	6  Spray Strength 10  Nozzle Position 13  Water Temp.	2  Stop Spray
2 DRYING			
	DRY →	ADJUST →	STOP
	12  Dryer	12  Dryer Temp.	2  Stop Drying


3 FLUSHING

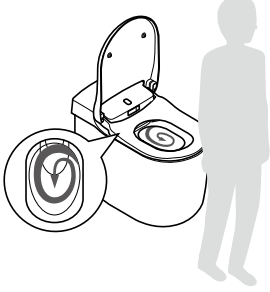	AUTO	REMOTE
	Flushing starts automatically when you stand up.	9  Flush (full) 1  Flush (light)

CLOSING THE TOILET SEAT / TOILET SEAT LID

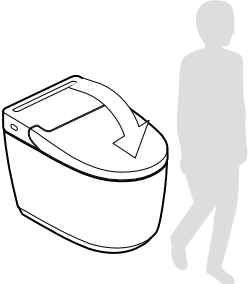	MANUAL
	When you leave the toilet, close the toilet lid manually.

■ Washing with a Shower (Front button operation)

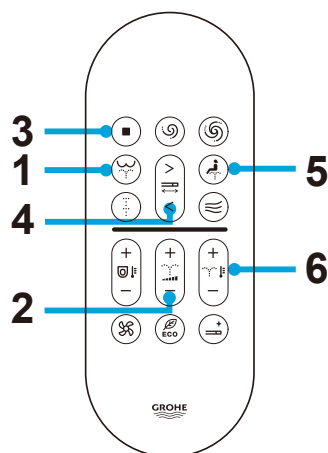

- 1 (rear washing) button: Washes rear part
- 2 (spray strength adjustment) button: Adjusts spray pressure (5 levels) while washing
- 3 (stop) button: Stops washing
- 4 (nozzle position adjustment) button: Adjusts nozzle position (5 positions: default/2 positions forward/2 positions backward) while washing
- 5 (front washing for women) button: Washes front part
- 6 (water temperature adjustment) button: Adjusts the water temperature (6 levels: Off (water temperature), Low (approximately 28°C) to High (approximately 40°C))

Spray Strength Adjustment Adjusting 5 Levels




SPRAY STRENGTH ADJUSTMENT ADJUSTING 5 LEVELS

- 1.
- 2.
- 3.
- 4.
- 5.

NOTE:

- Washing function cannot be operated without seating on the toilet seat.
- The Washing function runs continuously. Shower automatically stops after 2 minutes.
- Water will come out from a point near the nozzles upon sitting on the toilet seat, right before or after washing function. This is required by the design and is not a malfunction.
- The water temperature of the shower may become lower than expected when temperature of supplied water is extremely low during winter for example.
- For less water splashing while using washing function, sit further back on the toilet seat.
- Avoid using the shower for extended period of time. Do not use this function to wash inner sides of rectum, vagina, or urethra.
- Do not use this function to stimulate bowel movement. Also, do not defecate intentionally while using this function.
- Do not use this function when there is pain or inflammation on the private parts.
- When the user is accepting medical treatments on the private parts, follow the physician's instructions for using this function.

■ Drying with Warm Air

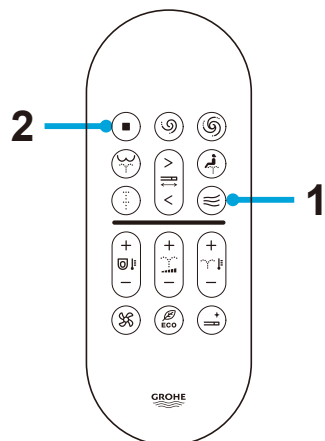

- 1 (dryer) button: Dry with warm air
- 2 (stop) button: Stops the dryer function
- 3 When switching the dryer temperature, press the [Dryer] button again
*: Each time the button is pressed, it will switch in the order of "HIGH", "LOW" and "MEDIUM".
[LOW]: Room temp.
[MEDIUM]: Approx. 40°C
[HIGH]: Approx. 55°C

NOTE:

- Dryer temperature will return to initial setting when the dryer function is stopped.
- Dryer function stops automatically after approximately 4 minutes.

Settings

■ Adjusting the Toilet Seat Temperature

Set the appropriate temperature by adjusting the "+", "- " of Seat Temp.




SEAT TEMPERATUR. ADJUSTING 6 LEVELS

OFF	☐	☐	☐	☐	☐
1.	☐	☐	☐	☐	☐
2.	☐	☐	☐	☐	☐
3.	☐	☐	☐	☐	☐
4.	☐	☐	☐	☐	☐
5.	☐	☐	☐	☐	☐

■ Power Save



You can reduce power consumption by turning the seat heater off for 8 hours during times when the toilet is not being used (e.g. during the night).

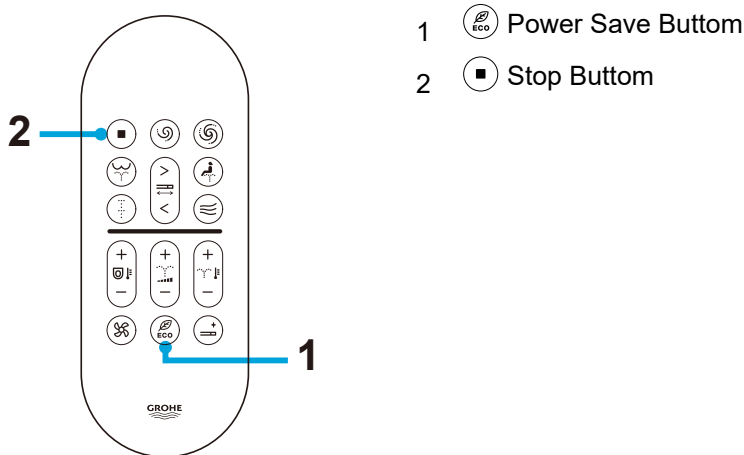

NOTE:

- The power save function is reset after a power failure or when the power plug is disconnected.


ECO MODE TURN ON
GREEN LIGHT BLINKS 0. SEC
(2 TIMES OCCUR FOR 0.9 SEC) WHEN THE ECO MODE STARTS

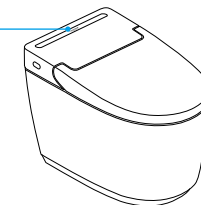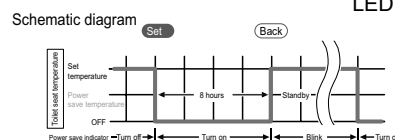

ECO MODE ACTIVE FOR 8 HOURS
IN THIS MODE, THE SEAT HEATER FUNCTION TURNS OFF FOR 8 HOURS, TO REDUCE POWER CONSUMPTION.

- GREEN LIGHT BLINKS 3 SEC ONE TIME WHEN THE ECO MODE STARTS
- HAVING 4 SEC INTERVAL BETWEEN SET OF LIGHTINGS


LED description

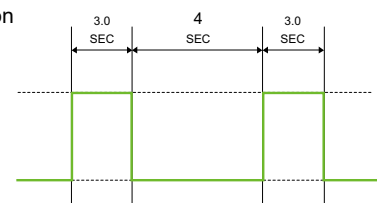

ECO MODE STANDBY FOR 16 HOURS
IN THIS MODE, THE SEAT HEATER FUNCTION TURNS ON, AND THE SEAT TEMPERATURE RETURNS TO THE SET TEMPERATURE.

- GREEN LIGHT BLINKS 0.7 ONE TIME WHEN THE ECO MODE STARTS
- HAVING 4 SEC INTERVAL BETWEEN SET OF LIGHTINGS

LED description

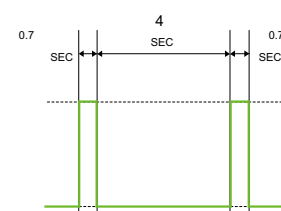


ECO MODE TURN OFF

GREEN LIGHT BLINKS 0.3 SEC
(2 TIMES OCCUR FOR 0.9 SEC) WHEN THE ECO MODE ENDS

■ Seat Heater Auto Off

When you sit on the toilet seat, the seat heater is turned off automatically to prevent a low-temperature burn.
[Massage Cleaning] + [Front Washing] for more than 2s at the same time.

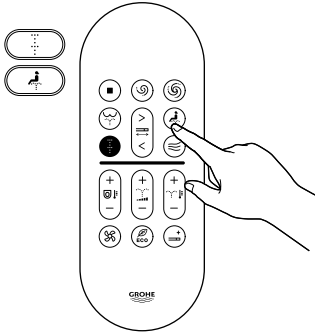


■ Auto Flush Function

On the default setting, the toilet automatically flushes approximately 6 seconds after the user stands up from the toilet.

You can turn this function off in the settings.

[Front Washing]+ [Spray Strength +] for more than 2s at the same time.

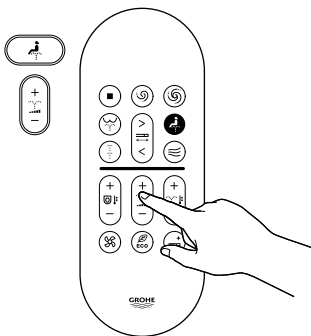


NOTE:

- Auto flush function will not activate when the user is seated on the toilet for less than 10 seconds.
- The full auto washing function performs a full flush if the user sat on the toilet for more than 50 seconds and performs a partial flush if the user sat on the toilet for less than 50 seconds. Note that if the rear washing or rear washing - mild function was used, a full flush will be performed regardless of the seated time.

■ Deodorization Function

The odor absorption function will be activated when the user sits on the toilet seat. It automatically stops approximately 1 minute after the user standing up from the toilet. You can activate or deactivate the odor absorption function, removing odors from the inside of the toilet bowl in the settings.

Press [Deodorization] button to turn off / on the automatic deodorization function.

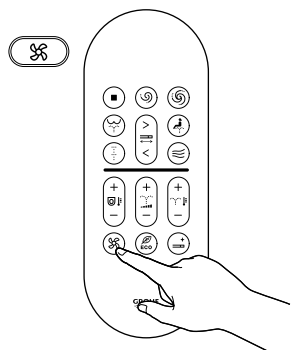


■ Button Operation Sound

You can activate or deactivate the toilet's operation sound in the settings.

Press and hold "Power Save" + "Warm Water Temp. -" buttons at the same time for more than 2 seconds to activate or deactivate the toilet's operation sound.


*This function is turned on by default when leaving the factory.

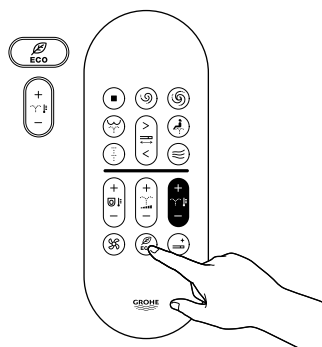

■ Restoring the Default Settings

All the functions, can be reset to the factory default settings.

Press and hold “Power Save” + “Front Washing” buttons at the same time for more than 2 seconds.

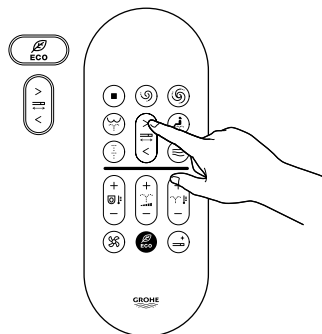

■ Pairing


1. Long press [Stop] button for 3 seconds to initiate a broadcast for 30 seconds (the broadcast will be initiated and the previous matching information will be cleared);
2. When the pairing is successful, all LEDs of remote control flash 3 times at the same time
3. When the pairing fails, the middle LED of remote control flashes 3 times

If the pairing fails, please repeat the above operations (and confirm whether the remote control has been turned on and the product has been powered on)

■ Inspecting the Power Plug


The power plug has an electric leak protecting function. Accidents may happen if the power plug is damaged. Inspect the power plug once or twice a month.

- 1 Check that the indicator LED turns off by pressing the test button.

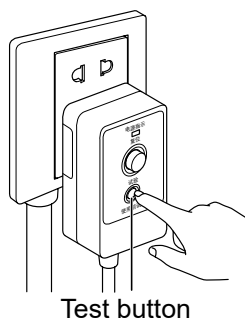

Perform this while the toilet is turned on.

- 2 Check that the indicator LED turns on by pressing the reset button.

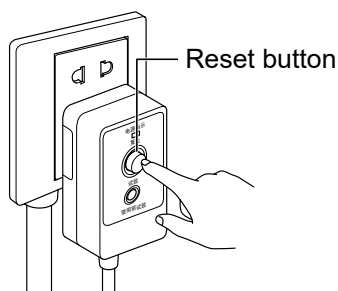

■ If a Short-Circuit Occurs

In normal use, the indicator LED of power plug is always on.


If a short-circuit occurs, the indicator LED turns off, and the electric circuit is broken.

If the short circuit occurs inside the toilet, all the functions are stopped, and the indicator LED on the power plug is turned off. The indicator LED may be also turned off when water splashes on the power plug.

The power plug has a safety mechanism, which brakes the electric circuit if the short circuit occurs inside the toilet. If the electric circuit is broken, the indicator LED is turned off.

When the indicator LED is turned off

1. Remove the power plug from the outlet, wait for about 10 seconds, then reconnect the power plug to the outlet.
2. Press the reset button to turn the LED on.

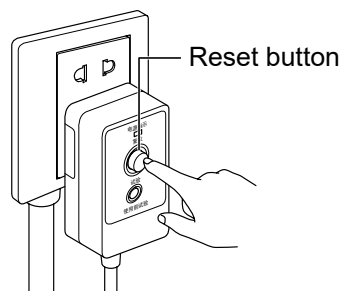


If the indicator LED is still turned off even after the operation above was performed, remove the power plug from the outlet immediately, and consult your dealer or a repair reception center of GROHE as soon as possible.

■ Flushing the Toilet in the Case of Power Outage or Water Failure


Manual flushing if a power outage has occurred

If a power outage has occurred, the toilet cannot be flushed by the remote control. Flush the toilet by following procedures below

1. Detach the top cover.

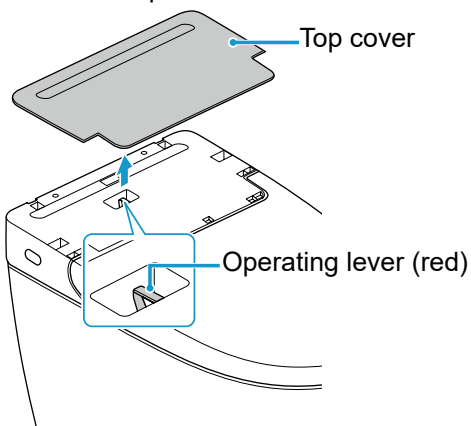


2. Press the trip lever (red) for about 5 seconds.

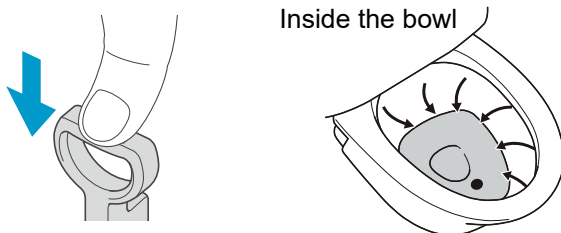


Water runs from around the bowl to wash and push filth to the bottom of the bowl.

3. Pull the trip lever (red) for about 5 seconds after pushing filth to the bottom of the bowl.

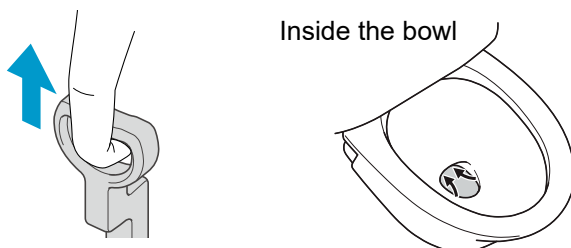

Water runs from the bottom of the bowl to dispose of filth.


4. Press the trip lever (red) for about 5 seconds again after disposing of filth completely.

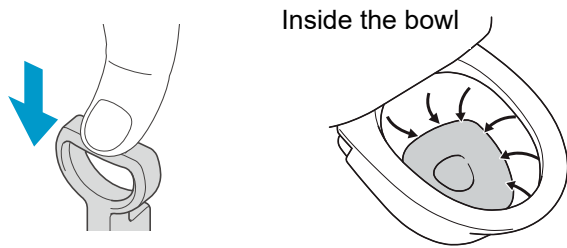

Water runs from around the bowl to store water in the bowl.

Release your hand from the trip lever after storing water in the bowl. The trip lever returns to the original position, and the water stops running.

5. Attach the top cover.

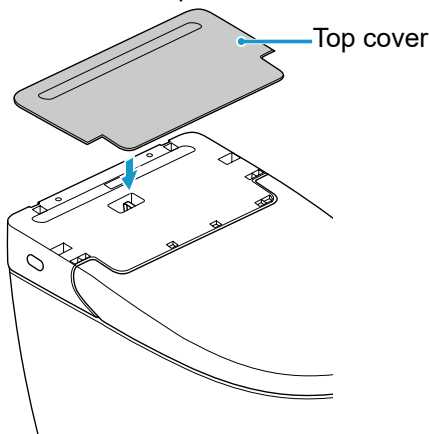

Make sure that the top cover is fitted completely after attaching.

Manual flushing if the water supply has been suspended

Fill a bucket with water and carefully pour the contents into the toilet bowl to manually flush the toilet.

When the waste is cleared from the bowl, pour water into the bowl to restore the bowl's water level to its normal height.

* When the toilet is not flushed well, pour water at once. Repeat if necessary.

* Perform same procedure for a partial flushing.

NOTE:

- Be very careful not to spill water onto the floor when carrying water in a bucket or pouring it into the toilet.
- Do not allow water to splash onto electrical components such as sockets.

■ Preventing Freezing

To prevent damage that may result from freezing water, follow the procedures described below.

(Do not turn off the power or remove the power plug from the outlet, and the power save feature should be turned off.)

CAUTION



Make sure to follow one of the freezing prevention procedures whenever there is a possibility of freezing.

* Damage from freezing may cause fire or flooding.

General anti-freeze measures

1. Set the seat temperature to “high” and close the seat lid. ([Page 49](#))
2. Turn off the power save function. ([Page 50](#))

If washing cannot be performed because of freezing

If the water of a water supply hose or a part connecting to the water supply is frozen and washing cannot be performed, thaw it gradually by warming the water supply hose or the part connecting to the water supply with a cloth soaked in hot water, or heat the toilet room and wait until water has thawed naturally.

NOTE:

- Do not throw hot water onto the water supply hose. The water supply hose may be damaged.
- Depending on the frozen part, water may spurt while thawing. Observe the state of things frequently during thawing.


■ In case you will not be using this product for a long time

How to drain the water

In the following cases be sure to drain the water according to the steps below. Remove the power plug from the outlet.


- If the toilet will not be used for a long time due to travelling etc. (It may cause clogging due to dirty water.)
- If the toilet is installed in an unoccupied house, such as a villa, there is a danger of freezing due to an unexpected temperature drop.

1. Close the water shutoff valve and stop the water feed.

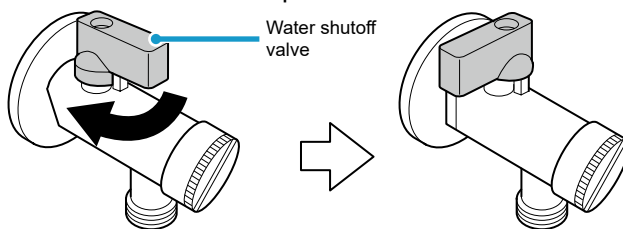

If the opening/closing handle is difficult to turn, wrap it with a dry towel and turn it.

2. Drain the water from the device.

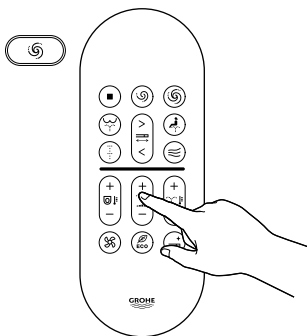

1. Press the flush button on the remote control, or press the flush button on the side of the toilet.

- Drain the remaining water in the water path of the product flushing device.

2. Press the flush button while holding down the  (Warm Water Temp.+)


and  (Spray Strength +) on the remote, and keep it for 2s.

- Drain the remaining water in the product pipeline.


3. Drain the water from the water supply hose.

1. Remove the water supply hose on the side of water shutoff valve.

- A small amount of water may spill at this time. Please prepare a container device for collecting water underside.
- Loosen the nut clockwise with an adjustable wrench, and then remove water inlet hose.

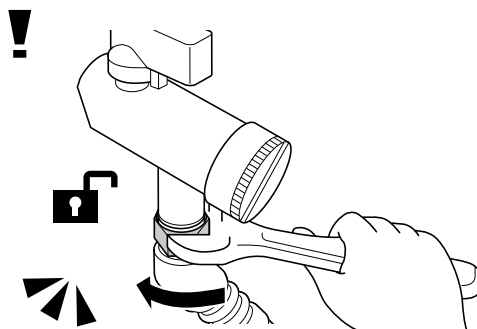

2. After draining water, attach water supply hose securely and tighten the nut counterclockwise with a wrench.

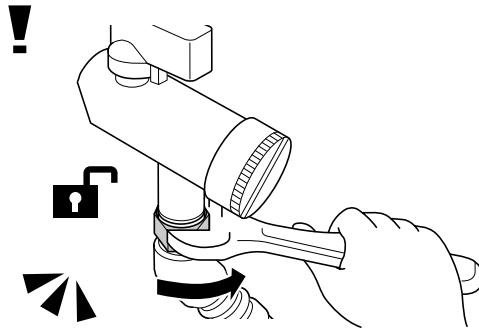

4. Remove the power plug from the outlet.

5. Check for the water leakage from the water shutoff valve.

NOTE:

- When using the toilet again, be sure to perform “Preparation Before Use” (page 85).

If there is a danger of freezing

- Drain the water from the toilet unit and clog the water drain outlet with antifreeze or a towel.
 - Never flush antifreeze without proper handling. Collect the antifreeze as waste. There is danger of environmental pollution.
 - Clog the outlet securely, otherwise it may cause odor or the intrusion of insects.
- Water drain from the pipe is required. If the water drain type unit is being used, handle the water drain valve of the building and drain the water from the pipe, in addition to performing the steps above. Open the water shutoff valve after handling the water drain valve.

Troubleshooting

All Functions

No functions operate

Electricity is not supplied.

- Check for a power failure, tripped breaker, or other probable cases.

Power of the toilet is turned off.

- Press the power button of the toilet to turn it on.

A short-circuit has occurred.

- Turn off the power of the toilet and request repairs. Or press the reset button on the power plug. If the display LED is still turned off, remove the power plug and request repairs.

A voltage other than AC 220 V is applied.

- Turn off the power of the toilet and request repairs.

The power plug is not connected to the outlet.

- If attaching the power plug, connect the power plug to the outlet completely. Wait for about 10 seconds before connecting the power plug again.

The remote control does not operate

The remote control is turned off.

- Press  (power) button for more than 2 seconds to turn on the power.

The batteries are dead (When the battery is low, the front center red LED flashes).

- Replace the batteries with new ones. ([Page 45](#))

The batteries are not inserted correctly.

- Insert the batteries in the correct orientation.

Metal items are placed near the seat unit or remote control.

- Move away the metal items.

Remote control other than the supplied one is used.

- When a remote control other than the supplied one is used, this needs to be paired to the toilet. For the pairing procedures, see the "The remote control is not paired correctly." below.

The remote control is not paired correctly.

- Follow the procedures below to pair the remote control to the toilet.

1. Detach the remote control from the holder and bring the remote control near to the toilet.
2. Long press the  button for more than 3S.
3. All LEDs flash 3 times at the same time, indicating successful registration.

Washing

Water does not spray

The water shutoff valve is closed.

- Open the water shutoff valve

The strainer is clogged.

- The strainer is located inside the toilet bowl. Request for repairs.

The water supply pressure is too low, or the water pressure setting is set to its lowest level.

- Press + of the spray strength adjustment button. ([Page 48](#))

The user is not detected by the sensor.

- Sit on the toilet seat or change your sitting posture. For example, sit further back on the seat.

Clothes of the user are difficult to detect.

- Allow the sensor to detect the skin of the user.

The toilet is being flushed.

- This is not a malfunction. Priority is given to flushing. Press the  (rear washing), or  (front washing for women) button again after the toilet has been flushed.

It takes time until water sprays

The temperature of the water supply is too low.

- This is not a malfunction. When water temperature is extremely low like in winter, it may take longer than usual until the water gets sprayed due to the preparation of warm water.

Water is not warm

The water temperature is set at its lowest setting.

- Adjust the temperature to an appropriate level by adjusting the [Water Temp.] button. ([Page 48](#))

The temperature of supplied water is extremely low.

- The water temperature of the shower may become lower than expected when temperature of supplied water is extremely low during winter for example.

The water pressure is too low

The water pressure setting is set to its lowest level.

- Press + of the spray strength adjustment button. ([Page 48](#))

The direction of the shower spray is inaccurate

The alignment of the nozzle tip is not in a right position.

- Align the nozzle tip correctly.

A mechanical sound is emitted from the product

A mechanical sound is emitted from the product when stopping the spray.

- This is not a malfunction. It is the sound generated by the motor when the toilet is operating properly. There is no problem as long as the water pressure and/or nozzle position can be adjusted correctly.

Deodorization

The odor absorption fan runs continuously

The seating sensor is dirty or wet.

- Wipe the sensor with a damp soft cloth.

The odor absorption fan does not operate

The [ODOR ABSORPTION] is turned off.

- Set the [ODOR ABSORPTION] to [ON]. ([Page 52](#))

The seating sensor is dirty, or the user has been sitting on the toilet seat for more than 2 hours.

- Sensor might be misdetecting. Wipe the sensor with a damp soft cloth. The odor absorption fan stops automatically after 2 hours of continuous operation.

The odor absorption effects are weak

Dirt on the filter may result in insufficient odor absorption effects.

- Wipe the odor absorption air outlet part of the base of seat unit.

The toilet seat is used for a long period of time.

- There is an deodorizing cartridge in the shower toilet unit. Please ask for replacement.

Auto Flush

The toilet does not flush automatically

[AUTO FLUSH] is set to [OFF].

- Set theS [AUTO FLUSH] to other than [OFF]. ([Page 51](#))

Water flow is weak while flushing or the toilet is not flushed completely

Too much toilet paper is used.

- When too much toilet paper is used, it may not be flushed completely when the  (flush/light) button is used. In this case, press the  (flush/full) button. ([Page 47](#))

Toilet bowl is clogged

Too much toilet paper is used.

- Set the [AUTO FLUSH] to [OFF], then unclog the toilet. ([Page 51](#))
- * Toilet may flush automatically during unclogging, and the water inside the toilet bowl may overflow.

Dryer

The dryer does not work

The seating sensor does not detect the user.

- Sit on the toilet seat. Or change your sitting posture. For example, sit further back on the seat.

The air is not warm

The [DRYER TEMP] is set too low.

- Press the  (temperature adjustment) button to adjust the temperature. ([Page 49](#))

Warm air stops suddenly

The drying function has been used for more than 4 minutes.

- Press the  (dryer) button again. ([Page 49](#))

Dryer sound is noisy

When [DRYER TEMP] is set to high, the dryer sound becomes noisy due to an increased fan rotation speed.

- Set [DRYER TEMP] to medium or low. ([Page 49](#))

Seat Heater

The toilet seat is not warm

The seat temperature does not adjust to a suitable temperature.

- Adjust the seat temperature. ([Page 49](#))

The power save function is [ON].

- Set the power save function to [OFF]. ([Page 50](#))

The seat temperature is not warm enough when sitting on the toilet seat for a long time

[SEAT HEATER AUTO OFF] is set to [ON] (Prevent low-temperature burn is ON).

- Set [SEAT HEATER AUTO OFF] to [OFF]. ([Page 51](#))

The user sits on the toilet seat for more than 1 hour.

- The seat heater function turns off automatically when the user sits on the toilet seat for more than 1 hour. Stand up from the toilet seat, then sit again.

The side of the toilet seat is not warm

- You may feel cold when touching the side of the toilet seat because the seat heater function warms the upper part of the toilet seat. This is not a malfunction.

Miscellaneous

Water drops are on the underside of the toilet

Humidity is high, forming condensation.

- Frequently wipe water drops. Also, ventilate the bathroom adequately.

The body sensors were interrupted and reset

- The body sensors may be interrupted and reset as the result of electromagnetic environment.

Before Cleaning

■ Guideline

In this section, GROHE offers some general guidelines on how to clean this product. Please note that there are some cleaning tools and cleanser which should not be used.

As a general rule, GROHE recommends the use of liquid, all-purpose cleansers for this product.

Cleaning tools

Soft cloth

➤➤ For toilet seat, toilet lid, top cover, back cover, toilet.

Sponge: Use a soft foam sponge.

➤➤ For nozzle tips

Toilet brush (non-abrasive)

➤➤ For toilet bowl

Rubber gloves: Use to prevent rough skin forming on hands.

➤➤ Fold up the edges of gloves to prevent water and cleanser entering.

Cleanser

Non-abrasive and neutral toilet cleanser: Removes yellowish and/or blackish contamination from the toilet bowl.

➤➤ Ceramic parts

NOTE:

- AQUA CERAMIC is a material that has a high hydrophilic nature and contaminations attached to the toilet bowl tend to be easily removed. However, cleaning is still necessary. If contaminations remain on the pottery surface or feces are fatty, it may not be easy to remove them. Clean the toilet on a periodic basis. To fully utilize the effect of AQUA CERAMIC, do not use the following cleaners and tools.
 - Strong alkali/acidic cleansers
 - Abrasive cleansers
 - Water-shedding or antifouling cleansers, or surface coating agent
 - Cleaning tools that damage the material surface, such as metallic or abrasive brushes



- Set the [AUTO FLUSH] and [AUTO OPEN/CLOSE] to [OFF] when cleaning the toilet to avoid misdetection. ([Page 51](#))([Page XX](#))

Cleaning

■ Toilet Seat, Toilet Lid, Back Cover and Remote Control (Plastic Parts)

Dampen a soft cloth and wipe the surfaces.



GROHE recommends cleaning the toilet frequently to prevent dirt buildup on the toilet surfaces. Wiping with a damp cloth also prevents static electricity that can attract dust particles which cause blackish contamination.

NOTE:

- Do not use a dry cloth or toilet paper to wipe the surfaces, as this could result in scratches.
- Turn off the power of the toilet when cleaning the remote control to avoid misdetection.

SIAA (antibacterial)

The SIAA brand mark is borne on products that are under quality control and information disclosure by the guidelines of the Society of International sustaining growth for Antimicrobial Articles on the basis of the results evaluated by ISO22196 method.



■ Removing the Toilet Lid for Cleaning

The toilet lid can be removed easily. This is useful when cleaning hidden hinges or when cleaning the whole toilet lid.

NOTE:


- Turn off the power of the toilet when removing the toilet seat lid. Failure to do so may cause damage to the interior parts of the toilet seat unit.

Removing the Toilet Seat Lid


NOTE:

- Do not put excessive force on the toilet lid, as this may damage it.
- Do not open the toilet seat with the toilet lid removed, as this may cause the toilet seat to become scratched or damaged.
- Do not use the toilet with the toilet lid removed.


1. Removing the Seat Lid

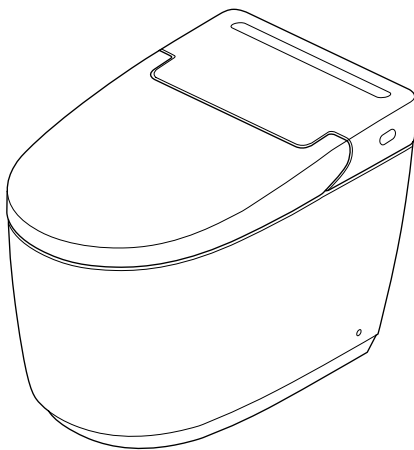


1. Hold the toilet lid with both hands

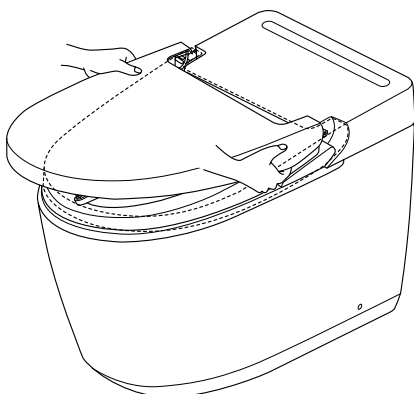


2. Open the right side of the toilet lid outward

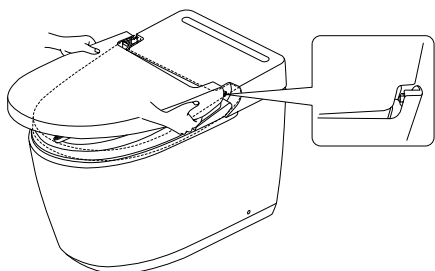


3. Open the pin hole on the right side of toilet lid outwards, to separate it from the pin and tilt it up.

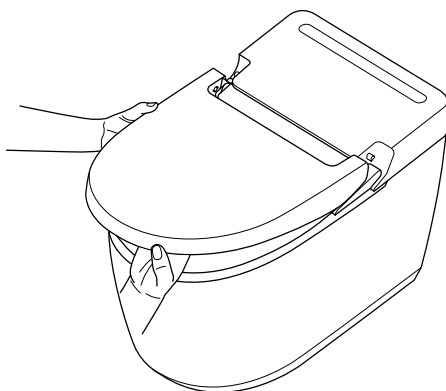


4. Lift the toilet lid, move it to left and remove.

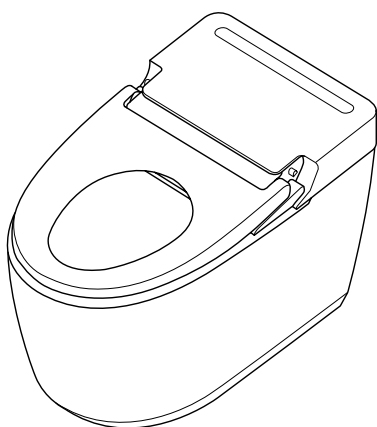


Assembling the Toilet Seat Lid


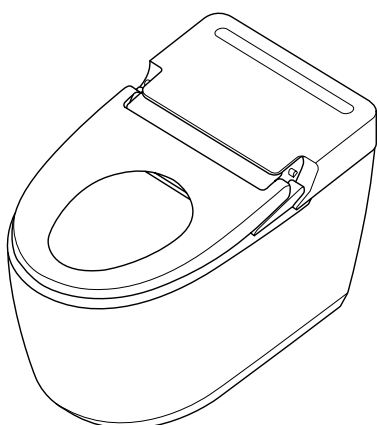


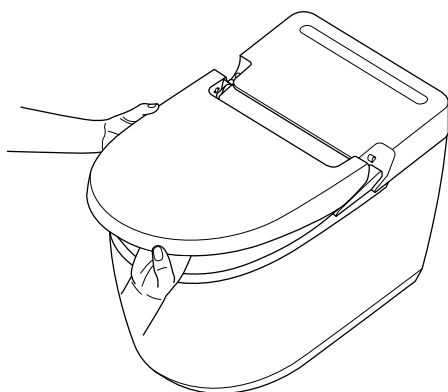

1. Align the pin hole on left side of the toilet lid with the pin on left side of the body and insert.

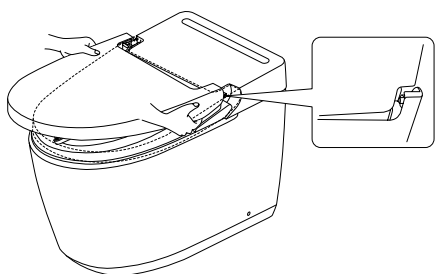


2. Open the pin hole on right side of the toilet lid outwards, align the pin and install the toilet lid.

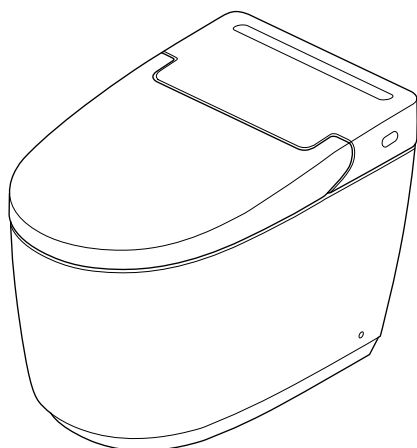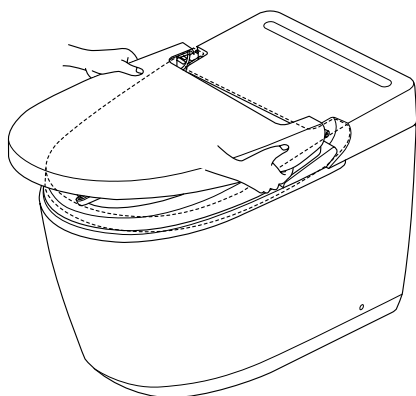

■ Toilet Bowl (Ceramic Parts)

The top and inner surface of the toilet bowl are treated with special coating called AQUA CERAMIC.

- Clean the bowl with water or warm water, using a soft brush or sponge dampened with neutral cleanser.

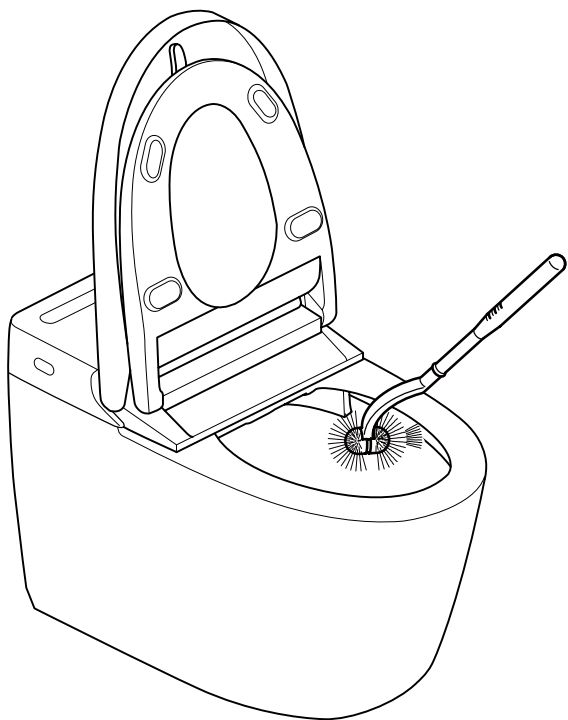

NOTE:

- Do not use chlorinated cleansers, acidic cleansers or disinfectants, as the gas vapor could damage this product or cause failures.
- Do not use hot water, as this may damage the toilet.
- Do not use an abrasive brush or cleanser, as these will deteriorate the effect of the Hyper Clean surface.

■ Nozzle

Cleaning the Nozzle with Remote Control

To clean the nozzle (nozzle self-cleaning) while using the toilet (sitting on the seat), follow the procedure below on the remote control.

Nozzle Self-cleaning:

When the toilet is turned on and seated, press the  button on the front of remote control, the nozzle will start the self-cleaning function;

Manual cleaning:

You can clean the nozzles manually (such as by scrubbing those parts using a sponge to clean the stains etc.). Follow the procedures below to extend the nozzles for cleaning.

1. Set the [AUTO FLUSH] to [OFF] to disable these functions. ([Page 51](#))
2. Open the toilet lid and seat.

3. Follow the steps below.

Manually clean the nozzle, when the product is turned on and no one is seated, press self-cleaning button on the front of remote control, the nozzle will automatically extend. If the nozzle hole is dirty, please use a sponge to clean it.

After cleaning is completed, press [Stop] button, the nozzle will automatically retract.

*Do not stretch or bend the nozzle with excessive force.

*The nozzle's front-end part can be replaced separately. For details, please contact the official after-sales service hotline.

NOTE:

- Do not apply excessive force to the nozzles, as this may cause failure.
- Do not pull or push the nozzles. The nozzle will not be retracted and failure may occur.
If you pull or push the nozzles by mistake, turn off the power of the toilet by pressing the power button on the toilet, then turn on the power after 10 seconds.

■ After-sales Service

1. Before Requesting Professional Repairs

If problems cannot be solved by following the steps on “Troubleshooting” ([Page 61](#)), contact GROHE for further instructions. GROHE should also be contacted in the following situations.

- If you have additional questions that are not addressed in this manual.
- If the power cord is damaged.
- If the power cord is overheating.

If above conditions are left as-is, unexpected accident may occur. Be sure to consult with GROHE.

NOTE:

- Never disassemble or modify this product, as this may result in electric shock, fire, and/or injuries. In addition, disassembly of the product will void the warranty.
- If water leaks from the seat unit or water supply system, turn off the power of the toilet, as this may result in electric shock, fire, or floor flooding.
- If the seat unit or power cord are damaged (abnormal noise, odor, smoke, high temperatures, cracking, or water leakage occurs), please remove the power plug of the toilet immediately, and have the part repaired. Never use any defective parts, as this may result in electric shock or fire.

2. See Your Warranty Card

This product comes with a warranty card. Be sure to thoroughly read the warranty statement, which can be found on the warranty card supplied with this product. Keep your proof of purchase (typically the sales receipt from your GROHE dealer) where it can be accessed easily.

Warranty Period : 3 years from purchase

Read the warranty statement to clarify which items are covered under the warranty, and which items are not covered under the warranty.

3. Requesting Repairs

If you have any questions, or parts are damaged or missing, please do not contact, or return, this product to the store. Please contact your local customer service representative. We can take care of any question or issue you may have.

Within the warranty period

When requesting warranty service, please have the following information available.

Outside the warranty period

If service is requested outside of the warranty period, the cost of service is the responsibility of the product owner. Service charges include a technical service fee, travel expenses, and parts costs.

Details you will be asked

1. Your contact information (e.g. name, address, phone)
2. Serial Number
(See the label on the side of product.)
3. Date of installation
(See the warranty card.)
4. The reason for requesting service

4. Minimum retention period of spare parts

The minimum retention period of spare parts is 6 years from the time that production of this toilet has stopped. Please contact us when repairing or inspecting.

We may not have the spare parts after the minimum retention period of spare parts for the toilet has passed.

* The spare parts are required parts to maintain the performance of the toilet.

Specifications

Model No.		39933SH0	39948SH0
Pit Distance		305mm	400mm
Rated Voltage/Frequency		AC220V 50Hz	
Rated Power		1000W (Environment 20 ℃, Water 15 ℃)	
Water Pressure Rang	Minimum Water Pressure	Above 0.08MPa (Flow pressure, flow rate≥20L/min)	
	Maximum Water Pressure	0.75MPa (Hydrostatic pressure)	
Operating Temperature Range		0~40 ℃	
Product Dimensions		D710×W384×H462mm	
Flushing Water Volume		Full 5.0L Light 3.5L	
Flushing Method		Siphon-jet water closet	
Product Net Weight		Approx. 43kg	
Water Supply Method		Direct inlet flow	
Washing	Method of Warm Water Supply	Instant heating	
	Rear Washing Spray Volume	0.43L/min (5-level adjustable)	
	Front Washing Spray Volume	0.45L/min (5-level adjustable)	
	Warm Water Temperature	OFF (Water temp.), Low (Approx. 32 ℃), High (Approx. 40 ℃), (6-level adjustable)	
	Safety Devices	Thermal fuses, High temperature sensing switch, Flow switch	
Warm Air Dryer	Air Volume	0.36m³/min	
	Warm Air Temperature	Low (Room temp.), Medium (Approx. 40 ℃), High (Approx. 55 ℃)	
	Warm Air Heating Capacity	230W±10	
	Safety Devices	Thermal fuses, bimetallic thermostat	
Seat Heating	Surface Temperature	When used: Room temperature, approx. 28~36 ℃ (6-level adjustable), one-touch power save (8 hours) setting: Room temperature	
	Safety Devices	Thermal fuses	
Odor Absorption	Odor Absorption Method	Chemical adsorption deodorizing using activated carbon deodorizing block	
	Odor Absorption Air Volume	0.11m³/min	
Remote Control	Dimension	L155×W60×H30	
	Power	Alkaline AAA battery: 2 pieces	
	Transmission Method	Bluetooth communication method	
Other	Measures Against Power Outage	●	
	Auto Open/Close of Toilet Lid and Toilet Seat	-	
	Full Automatic Flushing	●	
	Night Light	-	
	Rear Massage Cleaning	●	
	Swing Cleaning	●	
	Nozzle Position Adjust	●	
	Nozzle Self-cleaning	●	
	Nozzle Shutter	●	
	Seat Heater Auto off	●	
	Anti-bacterial Material	Toilet seat, Nozzle	
	Damping Toilet Lid and Seat	●	
	Quick Removal of Toilet Lid	●	

Power Cord			Effective length 1.0m, power plug (with electrical leakage protection)
	The SIAA brand mark is borne on products evaluated according to ISO 22196 and they are under quality control and information disclosure by the guidelines of the Society of International sustaining growth for Antimicrobial Articles.	Type of anti-bacterial agent used	Inorganic anti-bacterial agent
		Method of anti-bacterial treatment	Kneading (seat unit, nozzle unit)
		Anti-bacterial treatment portion	Toilet seat top/bottom (seat unit), spray tube (nozzle unit)
		Registration number	JP0122008A0039G (seat unit) JP0122008X0059I (nozzle)

The specification of this product is for use in country or region where this product is sold.

The average power of this product when rear washing or front washing is operating continuously and stably for 2 minutes with environment temperature at 20℃, feed-water pressure at 0.2 Mpa, feed-water temperature at 15℃, water temperature and seat temperature set to high. (The seat and warm water heater need to operate at the same time. The initial feed-water is not included in the representative cycle at the beginning.)

Name and Content of Hazardous Substances in Product

In accordance with the provisions and requirements laid out by China's "Administrative Measure on the Control of Pollution Caused by Electronic Information Products," the names and specifications of hazardous substances contained in this product are listed below.

Parts Name	Hazardous Substance					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr ⁺⁶)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Main PCB board	○	○	○	○	○	○
Resin housing	○	○	○	○	○	○
Temperature sensor	○	○	○	○	○	○
Remote control	○	○	○	○	○	○
Fan	○	○	○	○	○	○
Corporation cock, Stop valve	○	○	○	○	○	○
Water supply hose of E-bidet	○	○	○	○	○	○
Auto open/close unit	○	○	○	○	○	○

This table is prepared in accordance with the provisions of SJ/T11364.

○: This indicates that the amount of the hazardous substance contained in all of the homogeneous materials used within the corresponding part is beneath the limit requirements of GB/T26572.

×: This indicates that the amount of the hazardous substance contained in at least one of the homogeneous materials used within the corresponding part is above the limit requirements of GB/T26572.

We have used the minimum amount of hazardous substances possible, given the level of modern technology. Now and in the future, our firm will continue to improve technology and make efforts to reduce use of the above substances.

The "environmental protection use period" (EPUP) of this product is 10 years, as represented by the mark to the right. The EPUP for parts that can be replaced may be different from the product's use period. The EPUP only applies if the product is operated as this instruction manual indicates.



Pure Freude
an Wasser

GROHE

D

☎ +49 571 39 89 333
service.de@grohe.com

A

☎ +43 1 6 80 60
info-at@grohe.com

AUS

☎ 1800 080 055
customer.care@reece.com.au

B

☎ +32 (0)2 899 3077
https://www.grohe.be/nl_be/once-service/contact.html

BG

☎ +359 2 971 99 59
info-bg@grohe.com

BR

☎ 0800 770 1222
falecom@lixilamericas.com

CAU

☎ +99 412 497 09 74
info-az@grohe.com

CDN

☎ +1 888 6447643
info@grohe.ca

CH

☎ +41 44 877 73 00
info@grohe.ch

CN

☎ +86 4008811698
info.cn@grohe.com

CZ

☎ +420 277 004 193
info-cz@grohe.com

DK

☎ +45 44 65 68 00
grohe@grohe.dk

E

☎ +34 93 / 3 36 88 50
grohe@grohe.es

EST **LT** **LV**

☎ +372 661 6354
grohe@grohe.ee

F

☎ +33 1 49 97 29 00
sav-fr@grohe.com

FIN

☎ +358 (09)42451390
grohe@grohe.fi

GB

☎ +44 208 283 2840
info-uk@grohe.com

GR

☎ +302102712908
service-gr@grohe.com

H

☎ +36 (06)1 238-8045
info-hu@grohe.com

HK

☎ +852 2969 7067
info@grohe.hk

I

☎ +39 2 959401
info-it@grohe.com

IND

☎ 18001024475
customercare.in@grohe.com

IS

☎ +354 515 400
grohe@byko.is

J

☎ +81-3-5775-7500
info_grohe@blisspajapan.jp

KZ

☎ +7 775 007 05 27
service-kz@grohe.com

MAL

☎ 1800 80 6570
customerservice.my@lixil.com

MX

☎ 01 800 839 1200
info@lixilamericas.com

N

☎ +47 22 07 20 70
grohe@grohe.no

NL

☎ +31(0) 88-0030700
https://www.grohe.nl/nl_nl/once-service/contact.html

NZ

☎ +64 09 573 0490
sales@robertson.co.nz

P

☎ +351 234529620
comercial-pt@grohe.com

PL

☎ +48 (22) 5432640
biuro@grohe.com

RI

☎ 0800-1-047-643
customercare-indonesia@lixil.com

RO

☎ +40 021 212 50 50
info-ro@grohe.com

ROK

☎ +82 2 1588 5903
info-singapore@grohe.com

RP

☎ +63 2 89288000
service_center@wilcon.com.ph

RUS

☎ 8 800 200 00 49
service-ru@grohe.com

S

☎ +46 771 14 13 14
grohe@grohe.se

SGP **RC**

☎ +65 6311 3611
grohe@connectcentre.sg

SK

☎ +421 948 119 343
info-sk@grohe.com

T

☎ +6629014455
grohe-thailand@lixil.com

TR **AZ** **TM** **TJ**

☎ +90 216 441 23 70
service.turkey@grohe.com

UA

☎ +380 (44) 5375273
info-ua@grohe.com

USA

☎ +1 800 4447643
Grohetechcare@lixil.com

VN

☎ (+84) 1800 6624
cshk@lixil.com

AL **BIH** **HR** **KS**

ME **MK** **SLO** **SRB**

☎ +385 1 2911470
adria-hr@grohe.com

CY **MT** **IL**

☎ +357 22465200
service.cyprus@grohe.com

UAE **KWT** **BHR**

OM **PK**

☎ +971 4 421 4556
service.UAE@grohe.com

KSA **LBN** **JOR**

IRQ **QAT**

☎ +961 76868616
service.lebanon@grohe.com

EGY **SUD** **LBY**

☎ +202 26147988
service.egypt@grohe.com

MA **DZ** **TN** **NGR**

BJ **GH** **CI** **SN**

☎ +202 26147988
service.morocco@grohe.com

Far East Area Sales Office:

☎ +65 6311 3600
info@grohe.com.sg

Latin America:

☎ +52 818 3050626
info@lixilamericas.com

www.grohe.com

2020/06/09

GCWC-1114(22060)