


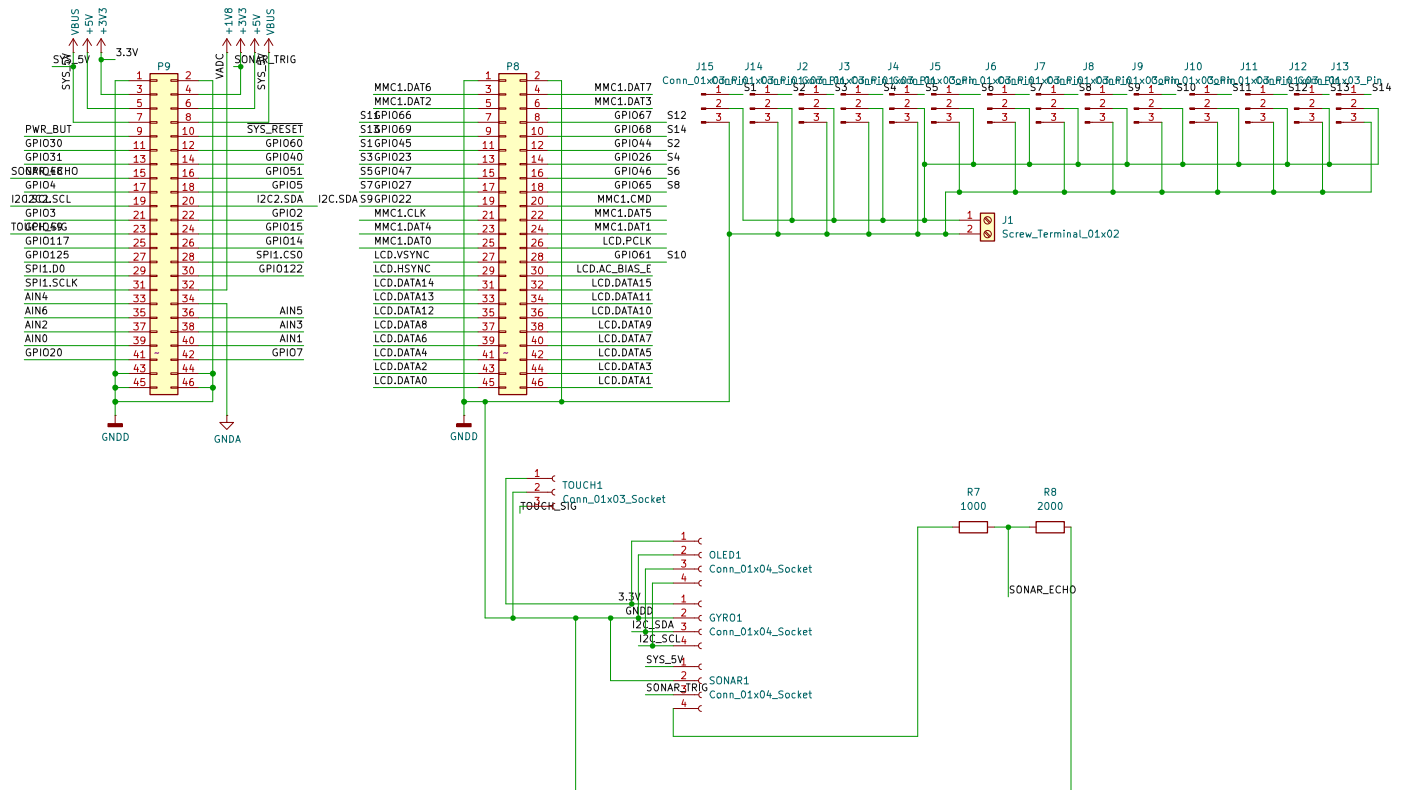

BeagleBone Black Pin Modes:
https://elinux.org/Beagleboard:Cape_Expansion_Headers
 Cape requirements are documented in the BeagleBone Black SRM:
<https://github.com/beagleboard/beaglebone-black/wiki/System-Reference-Manual>