




# Assembly manual 3

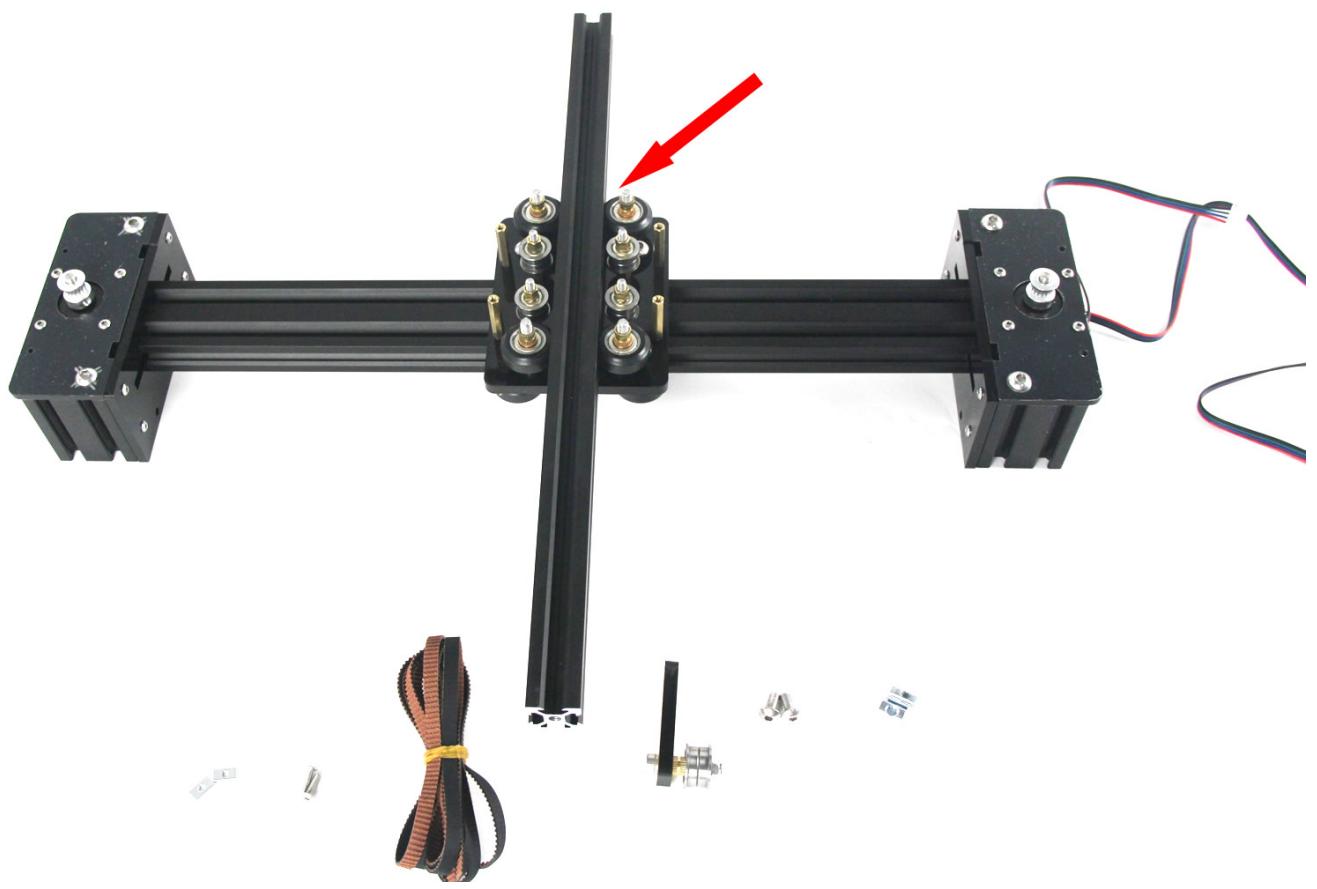



M5 slider nut





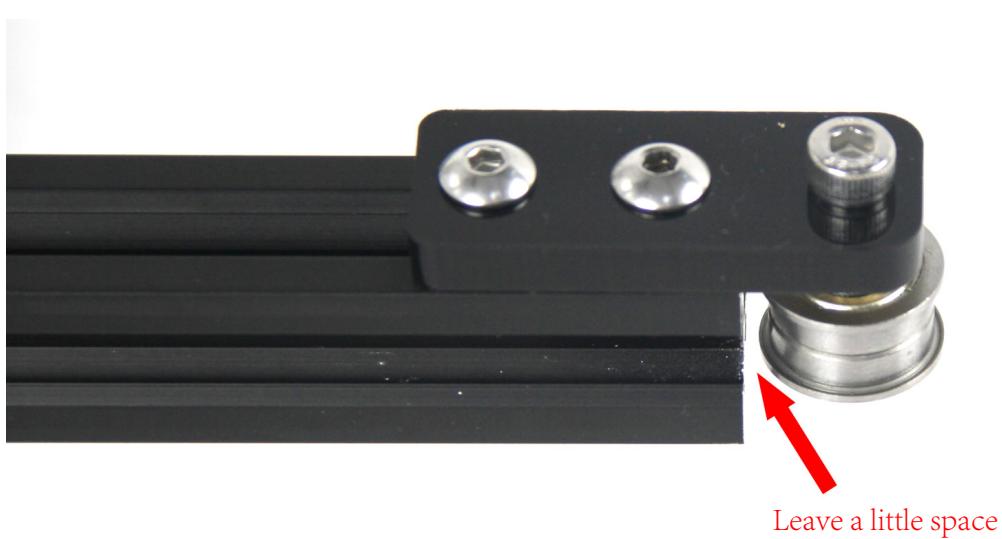



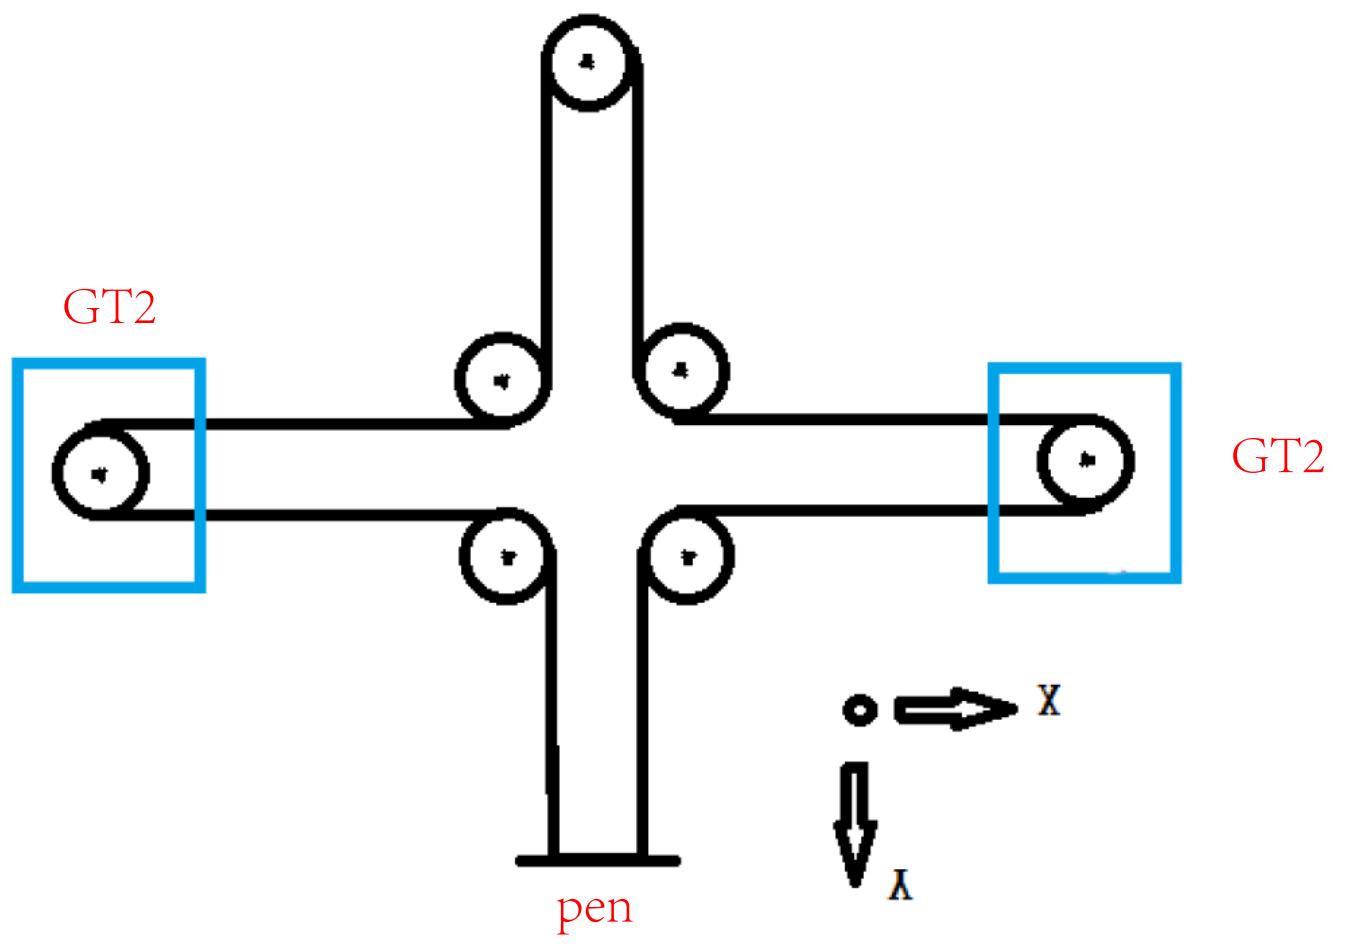



front

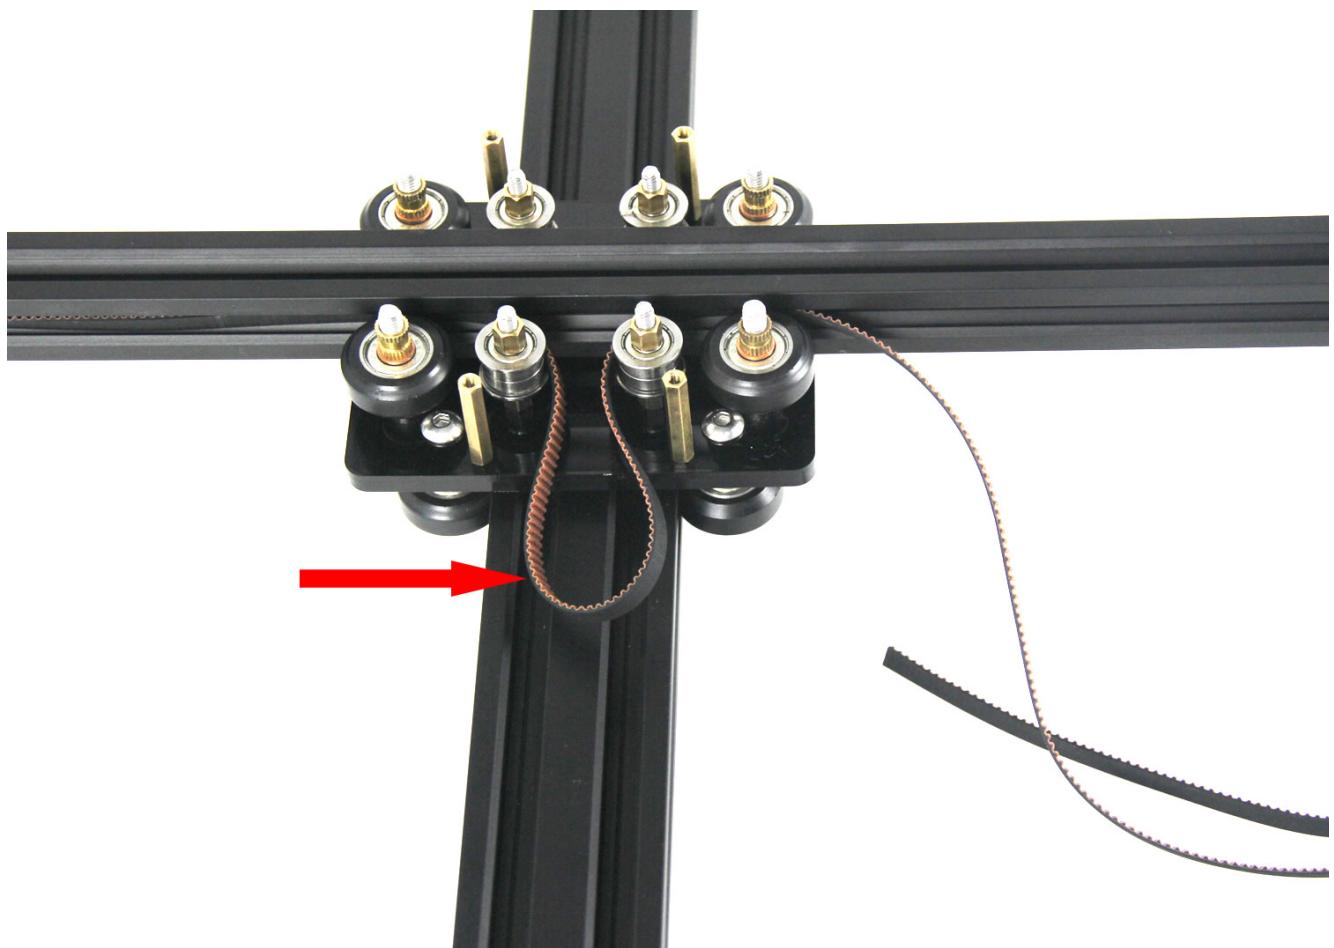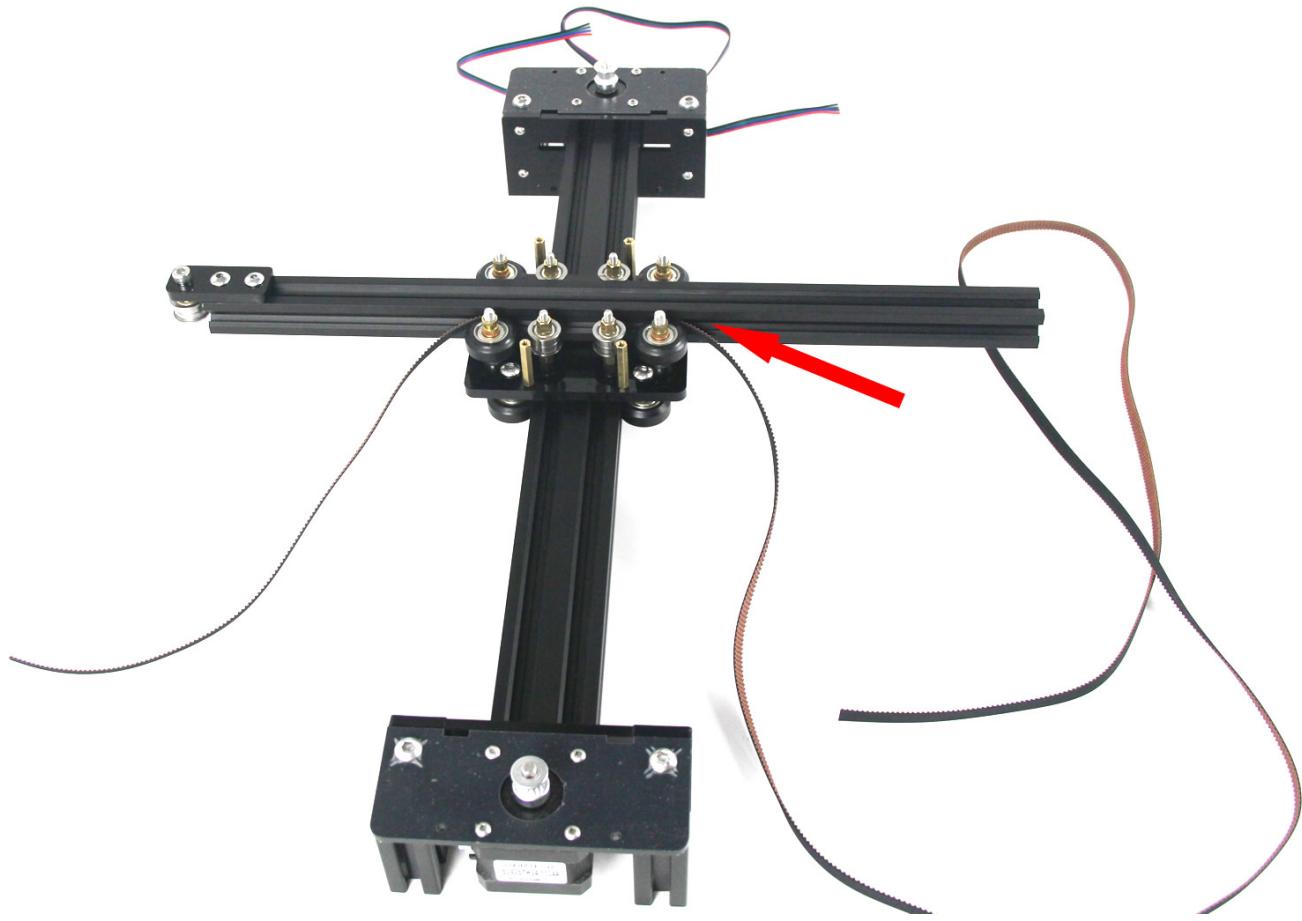

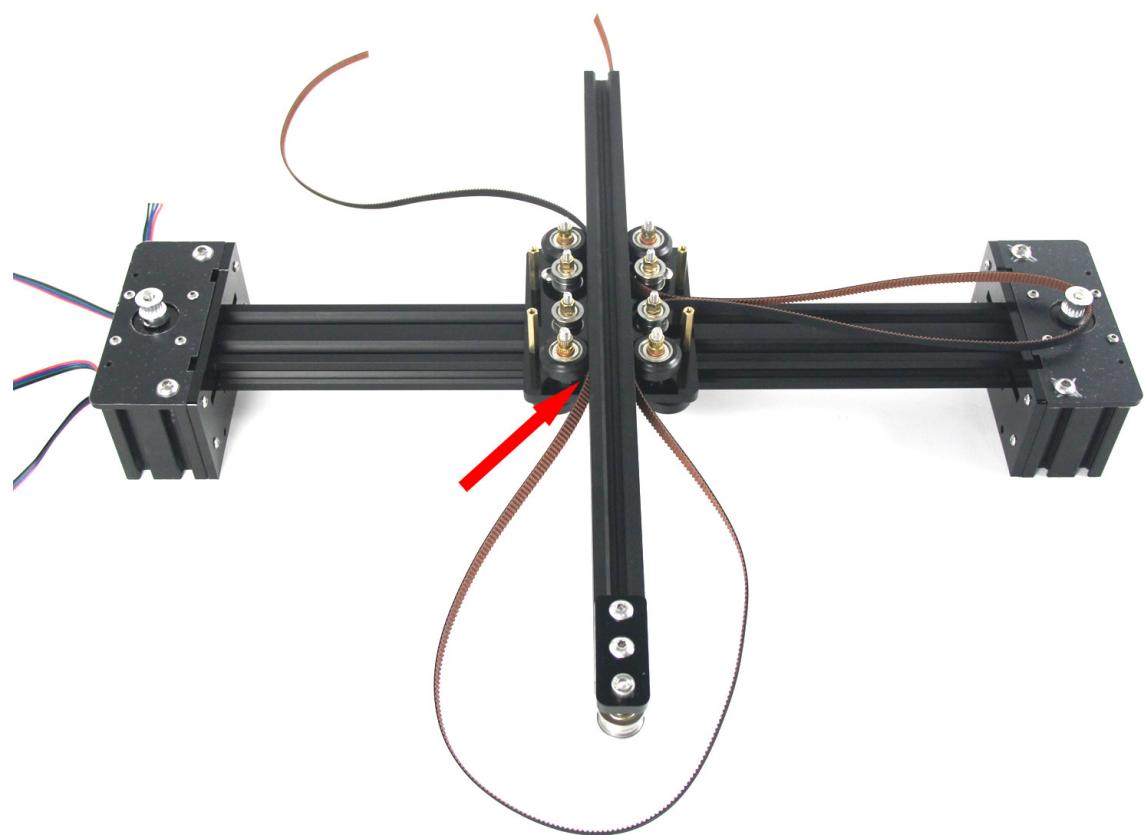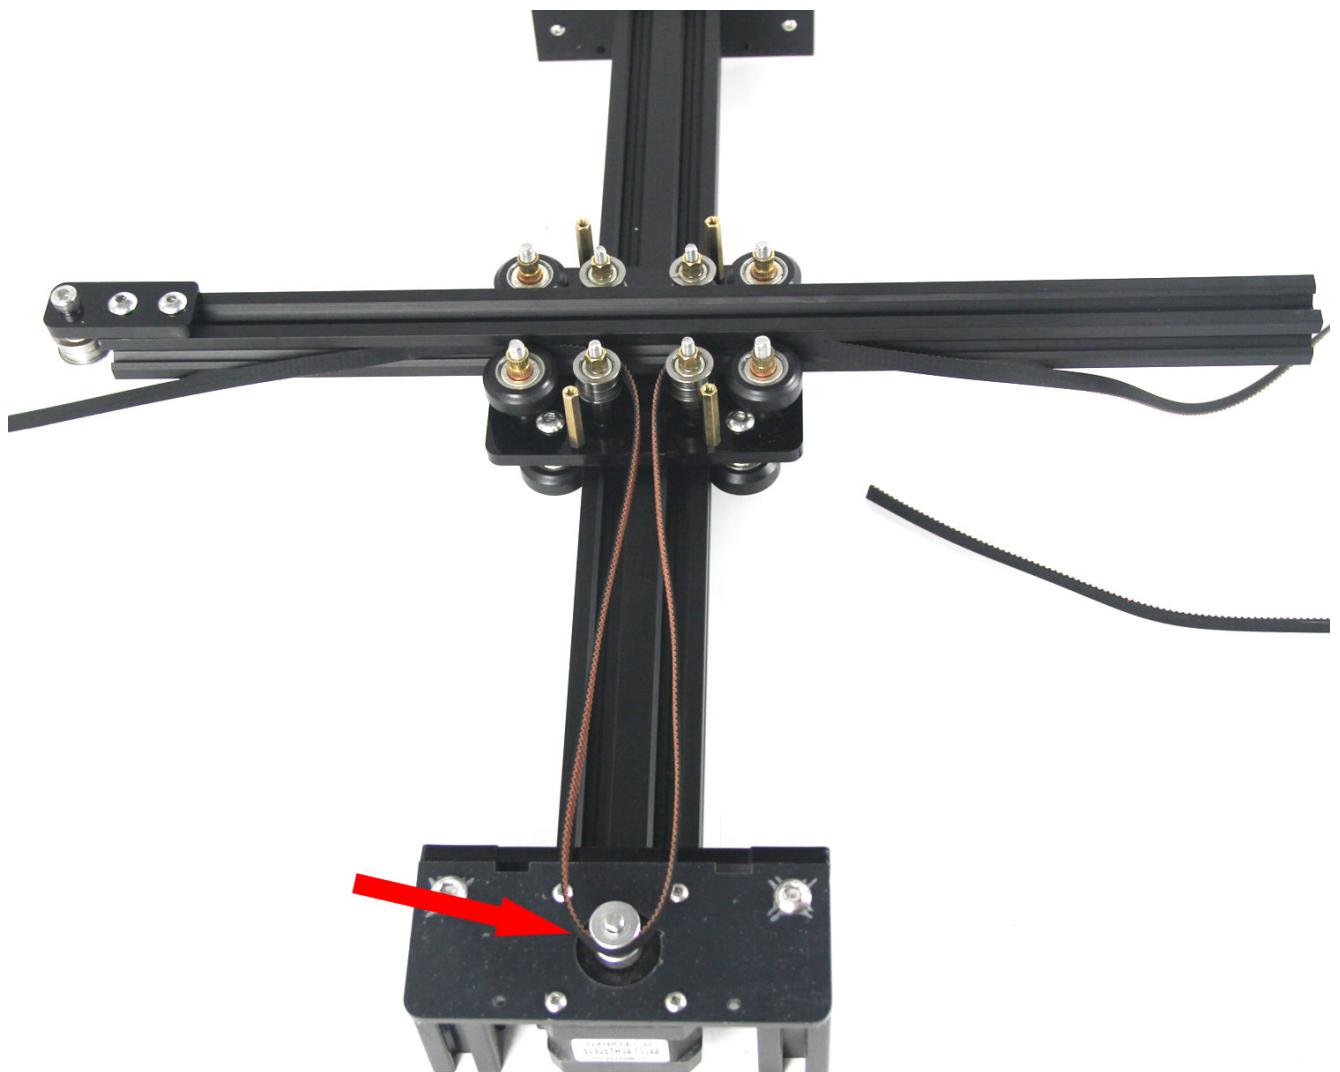

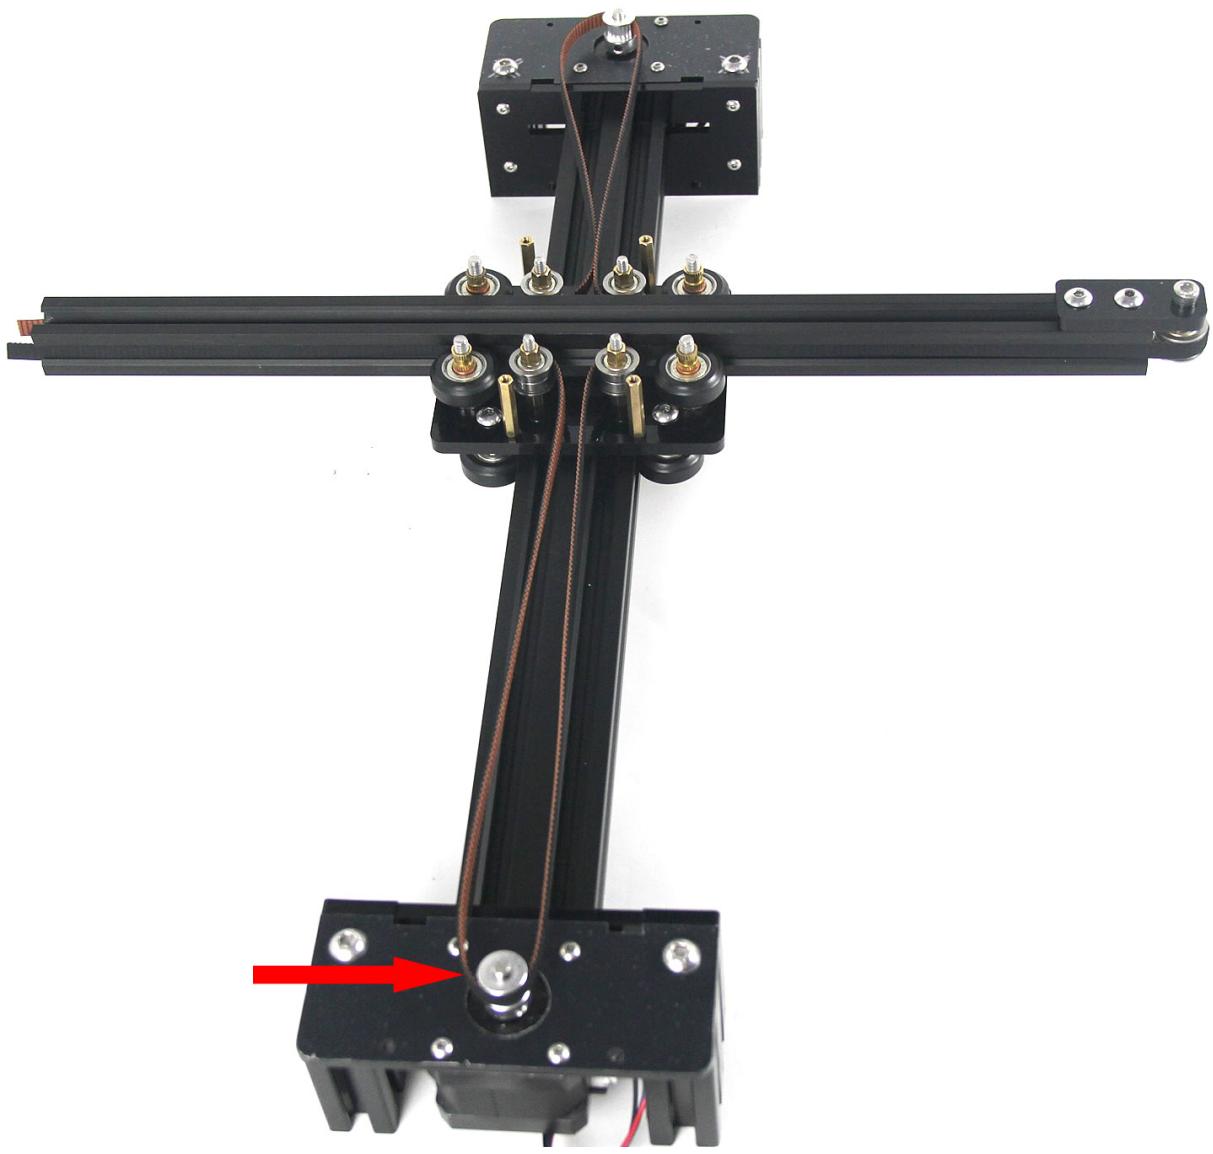


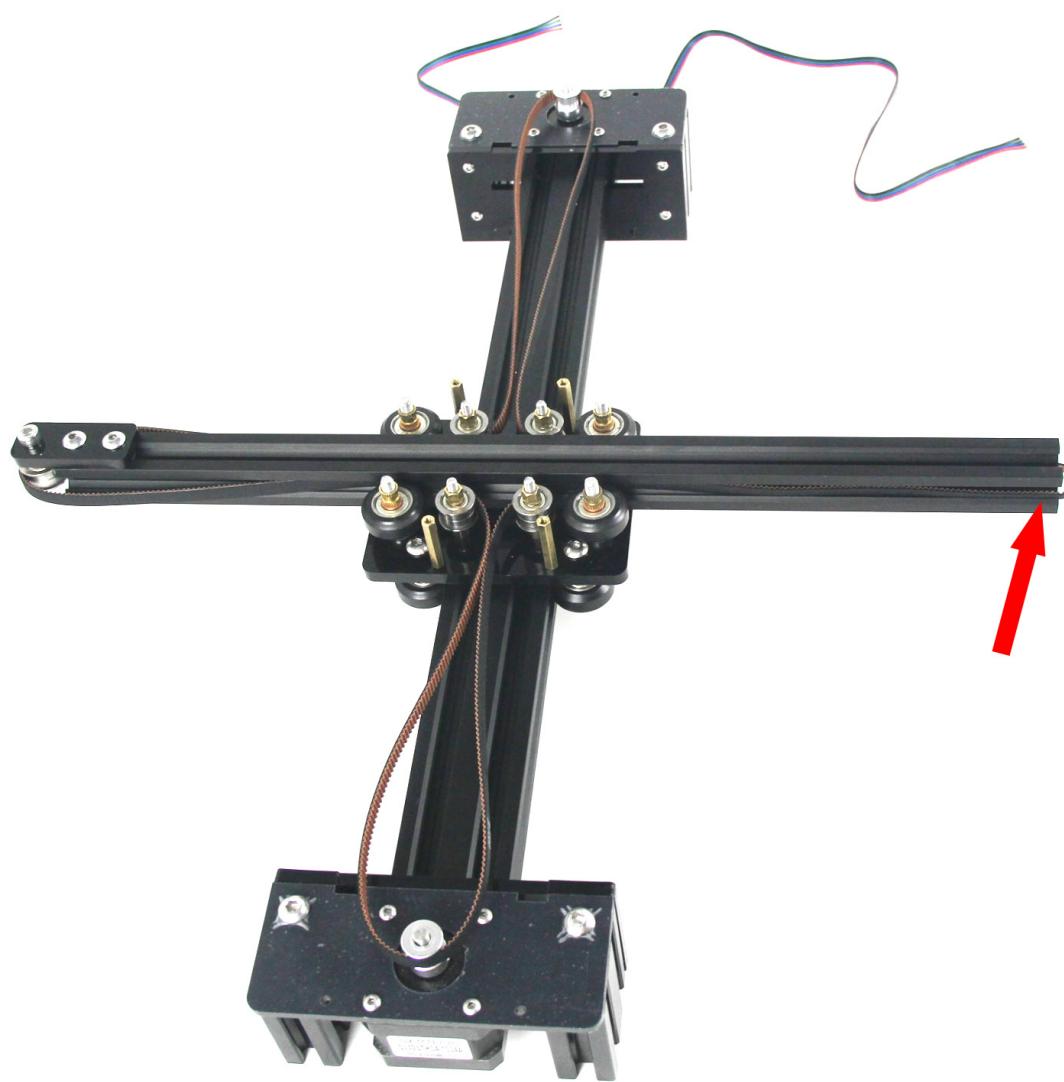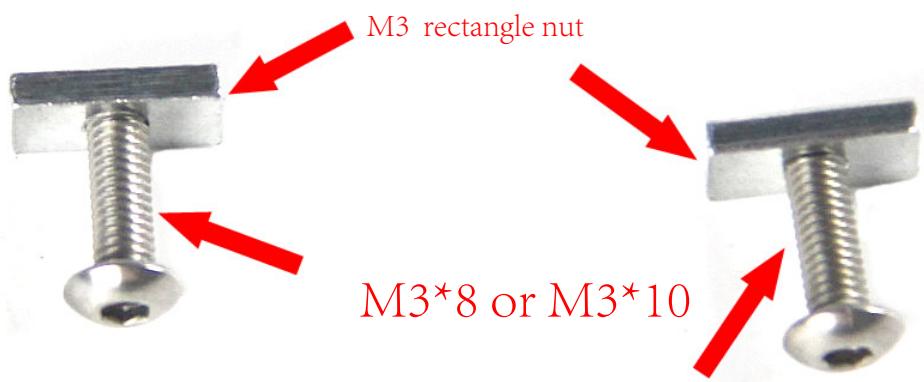

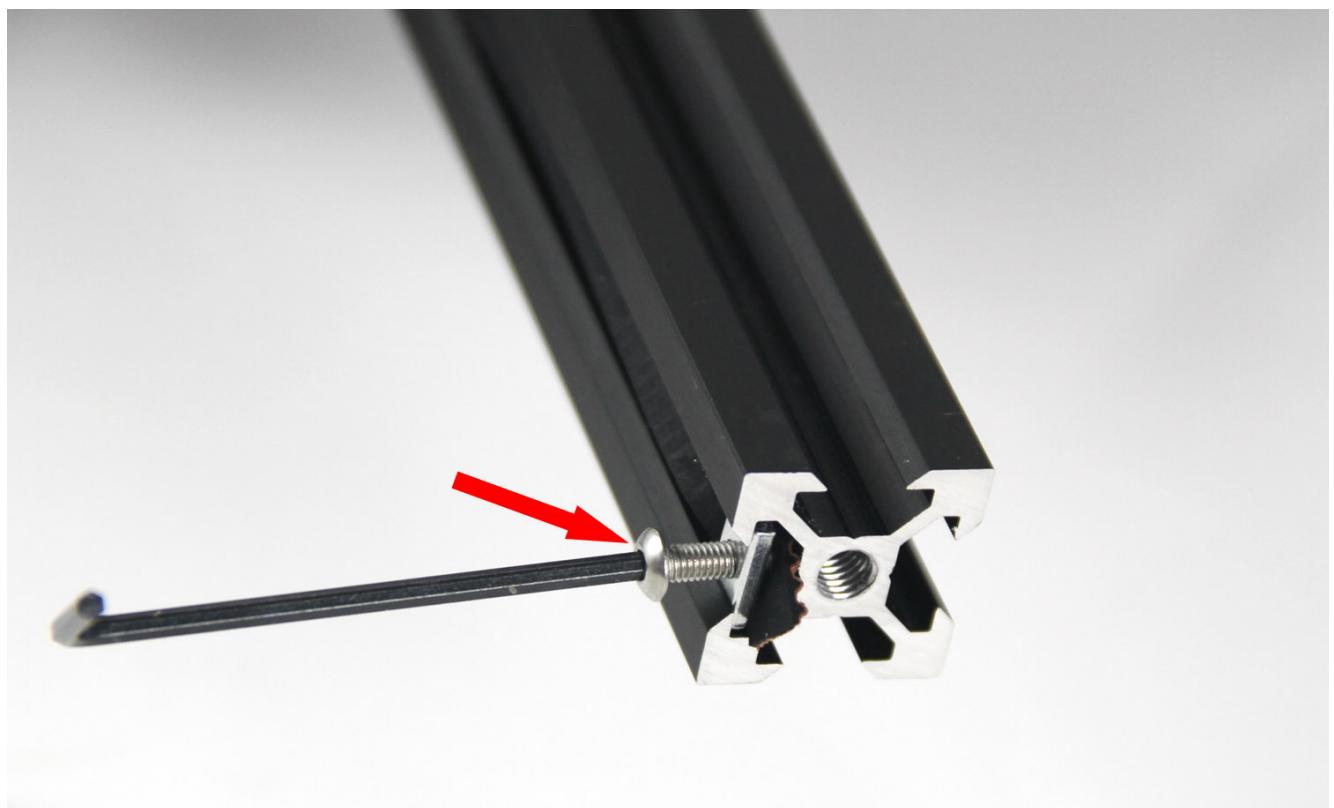





Rotating eccentric nut, Until there is no shaking between the pulleys and aluminum

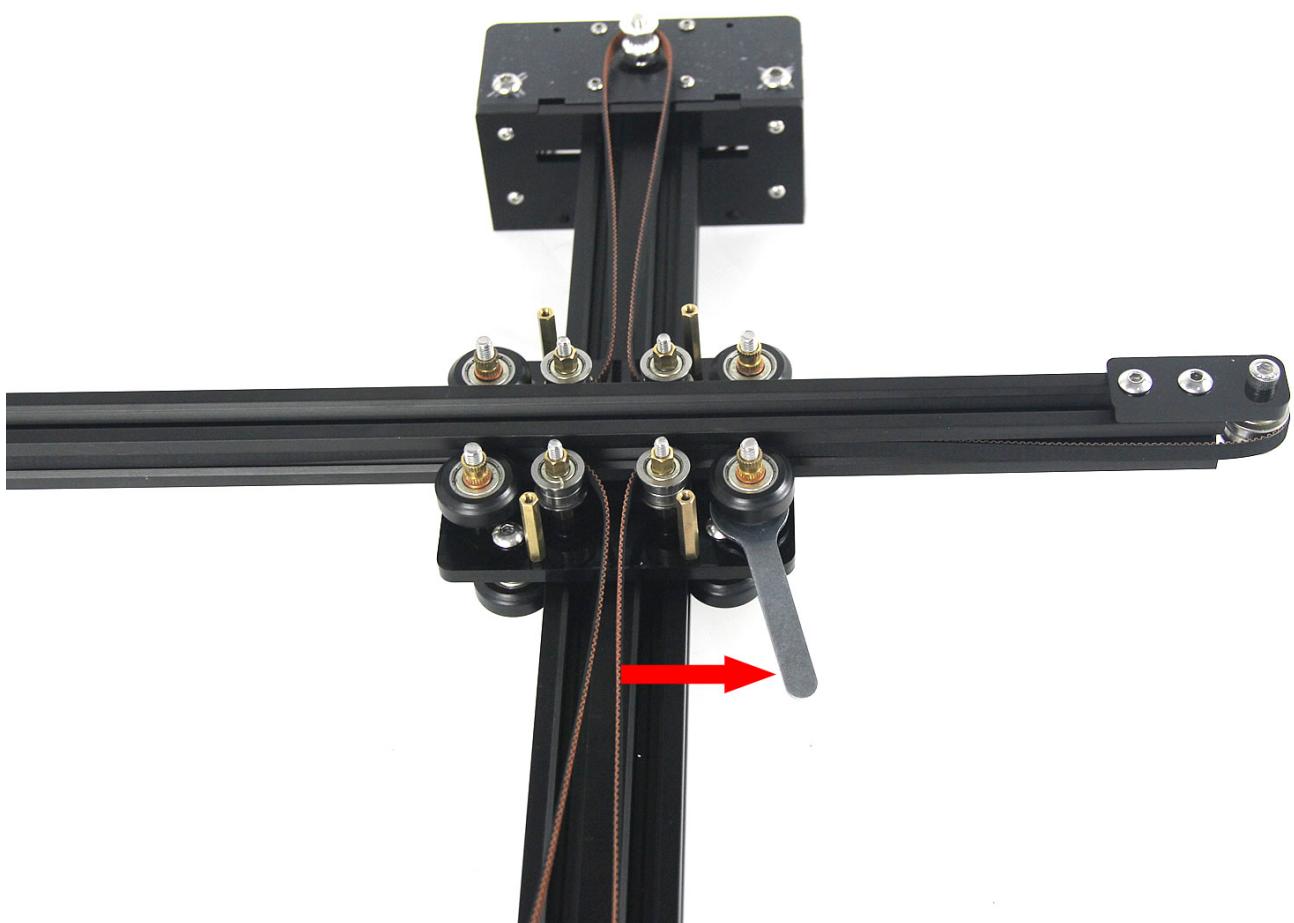


Rotating eccentric nut, Until there is no shaking between the pulleys and aluminum

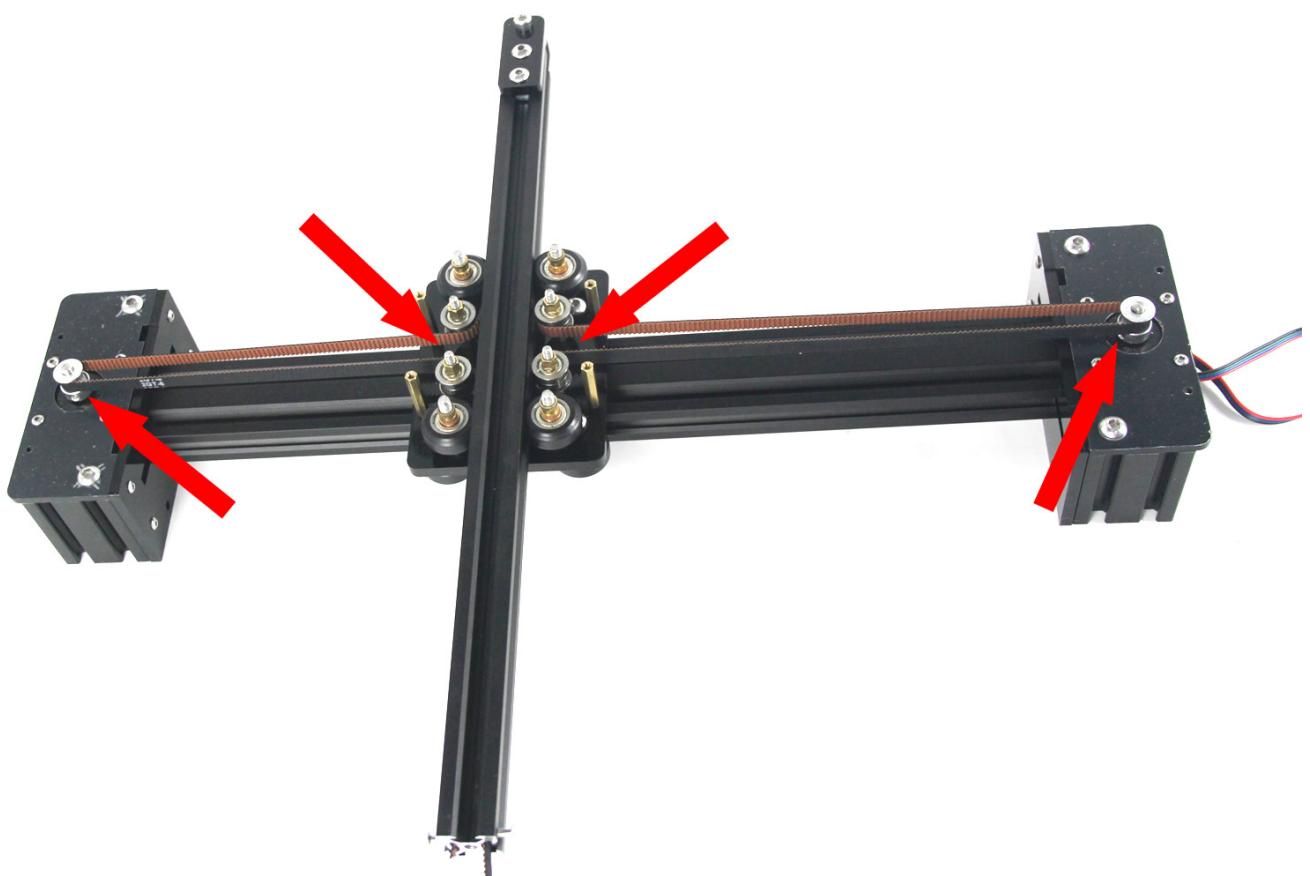

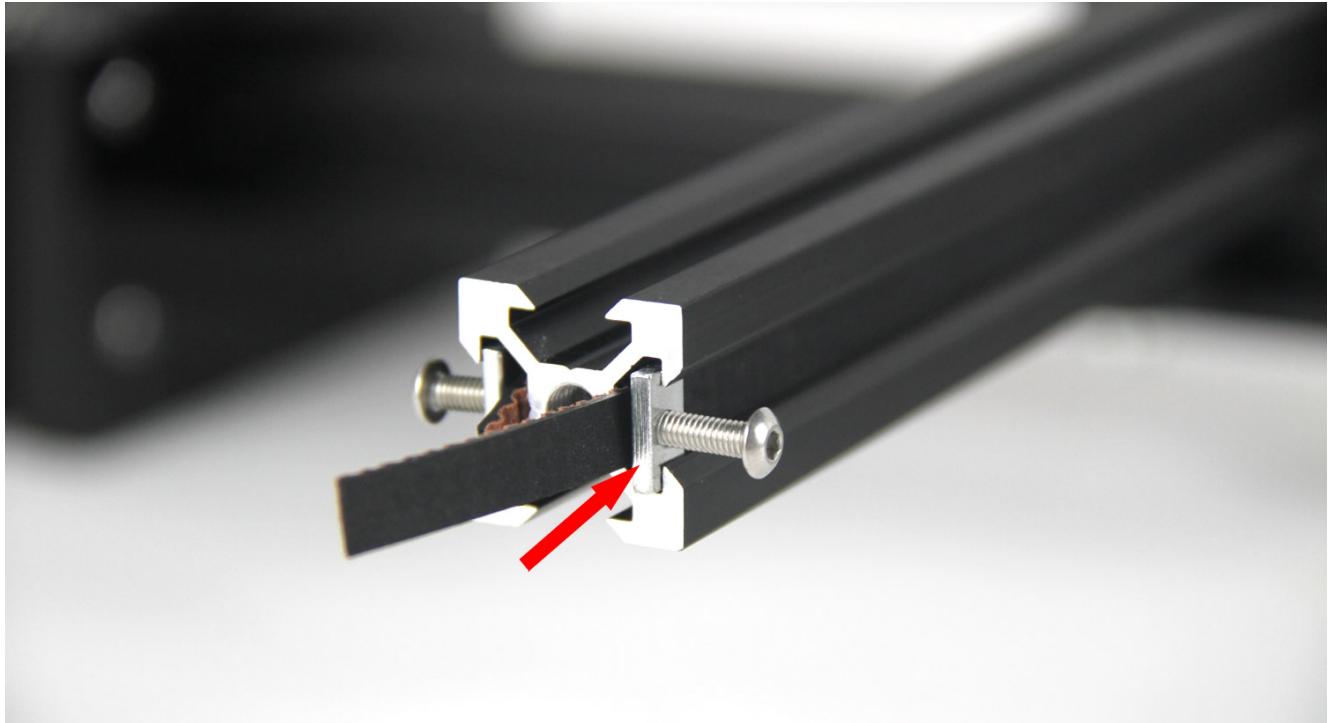


Tighten the screw

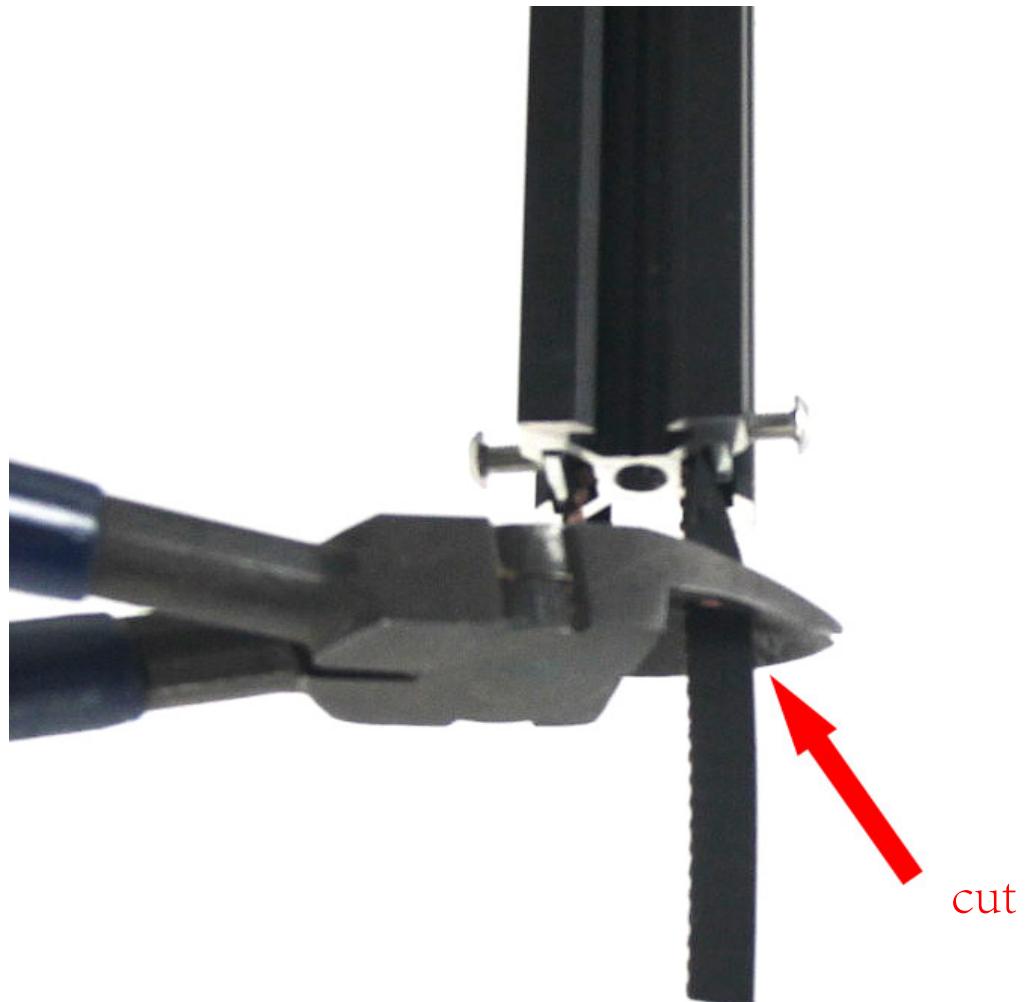




M5 slider nut



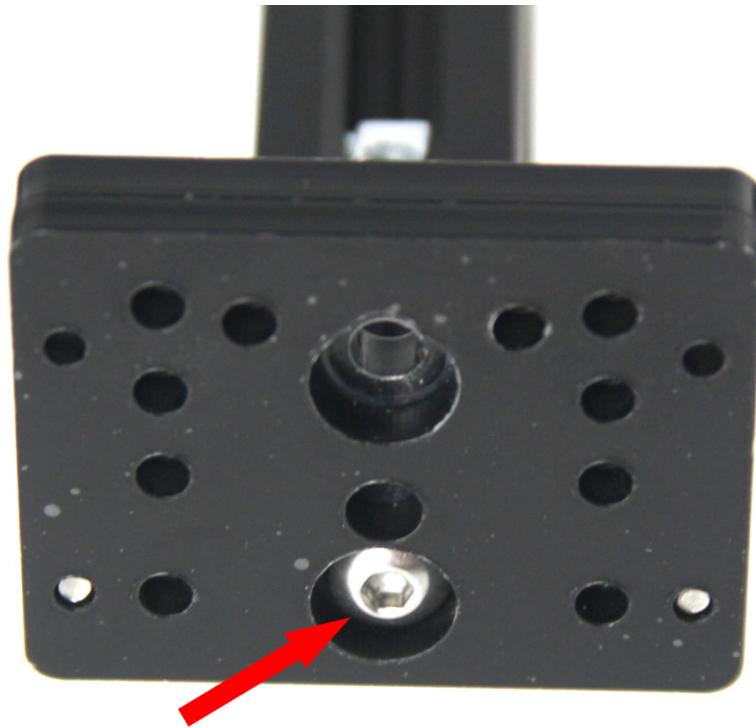


M5\*8

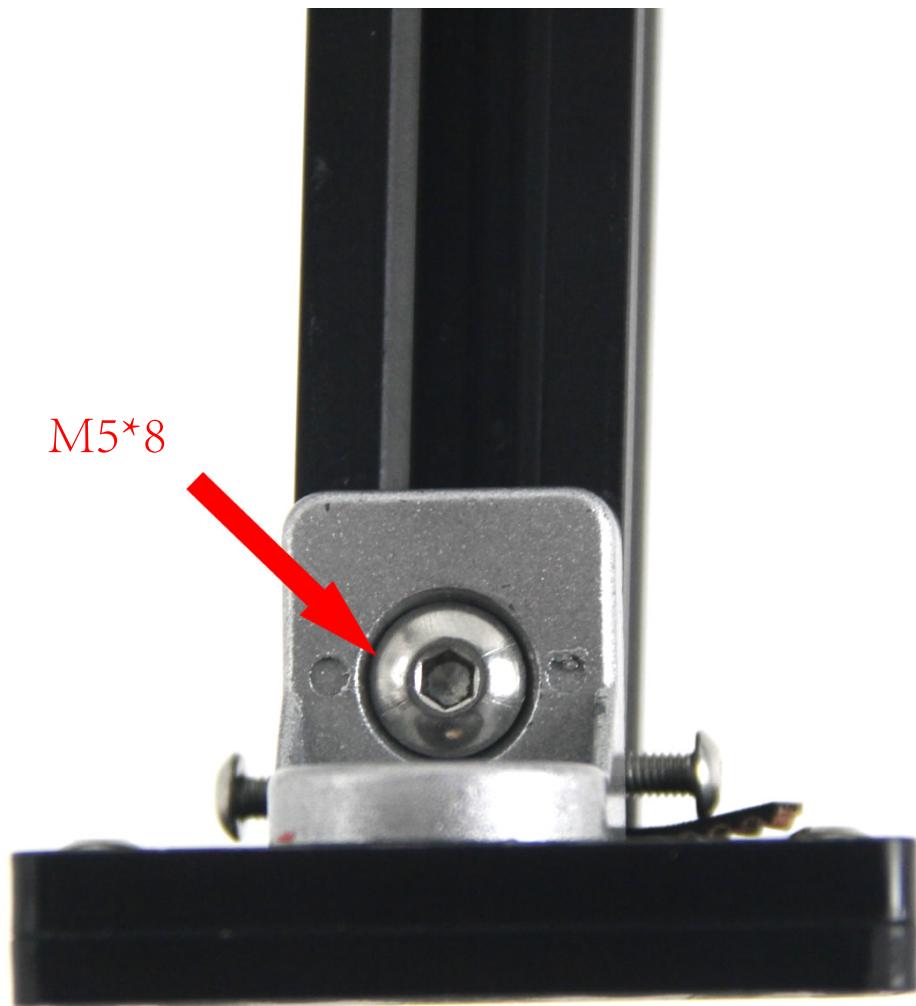



M5\*8







M5\*10

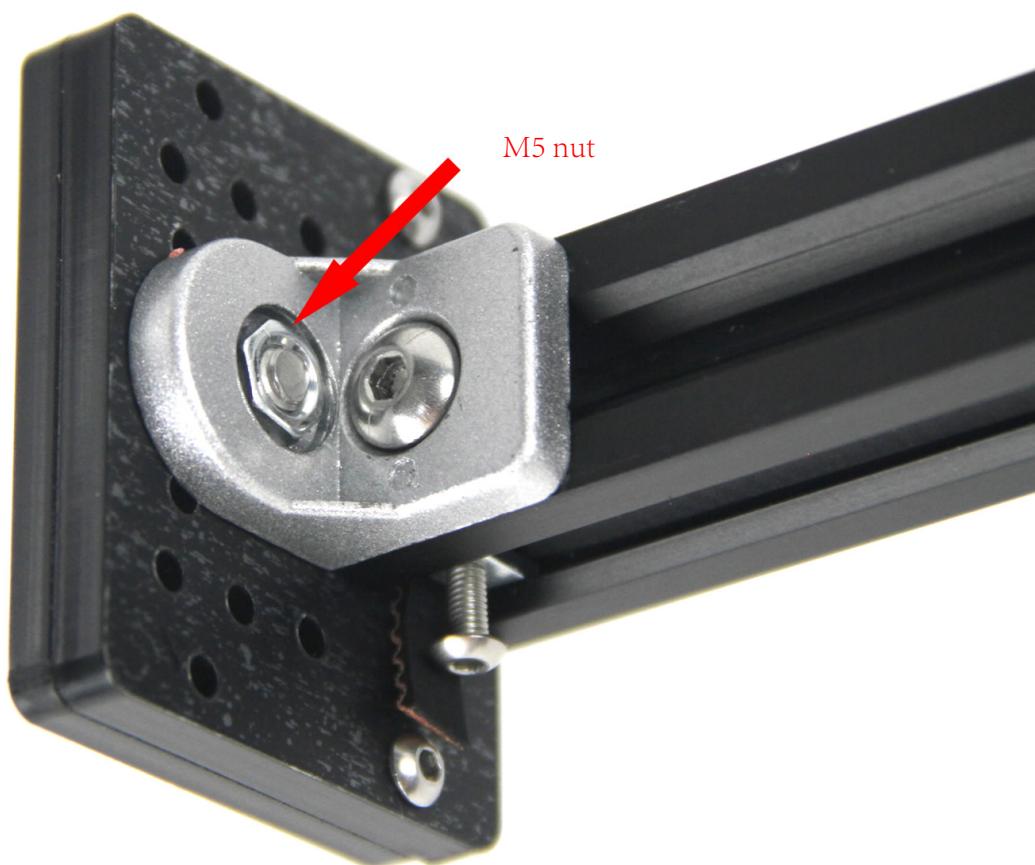


M5 nut

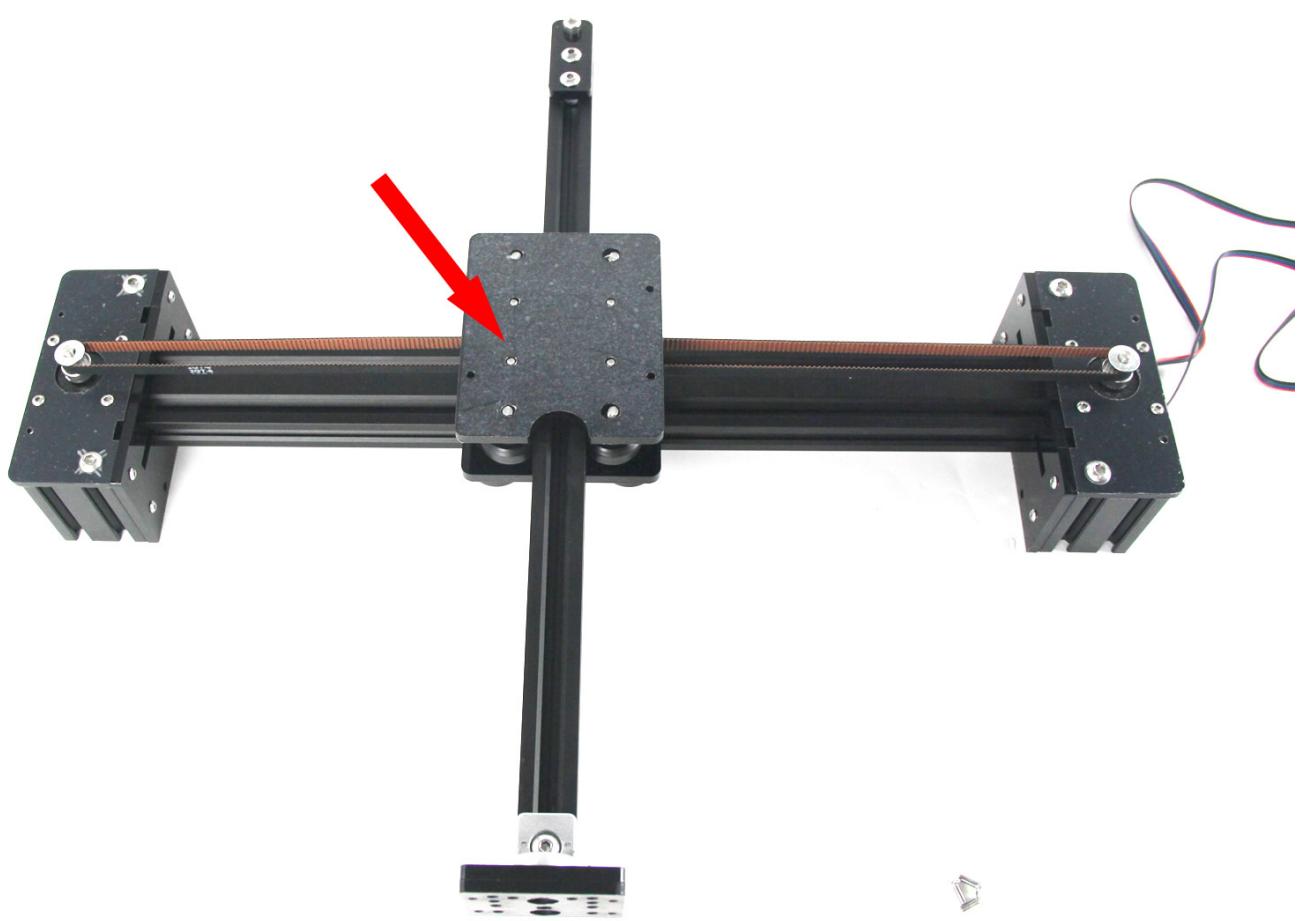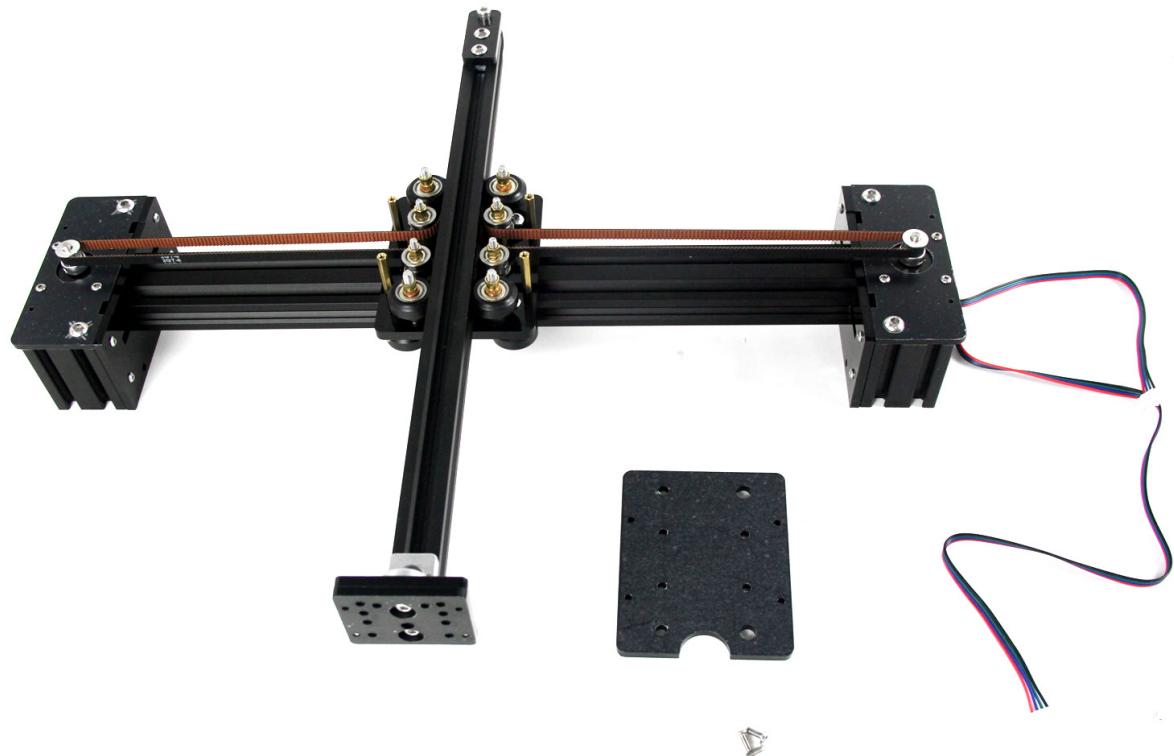

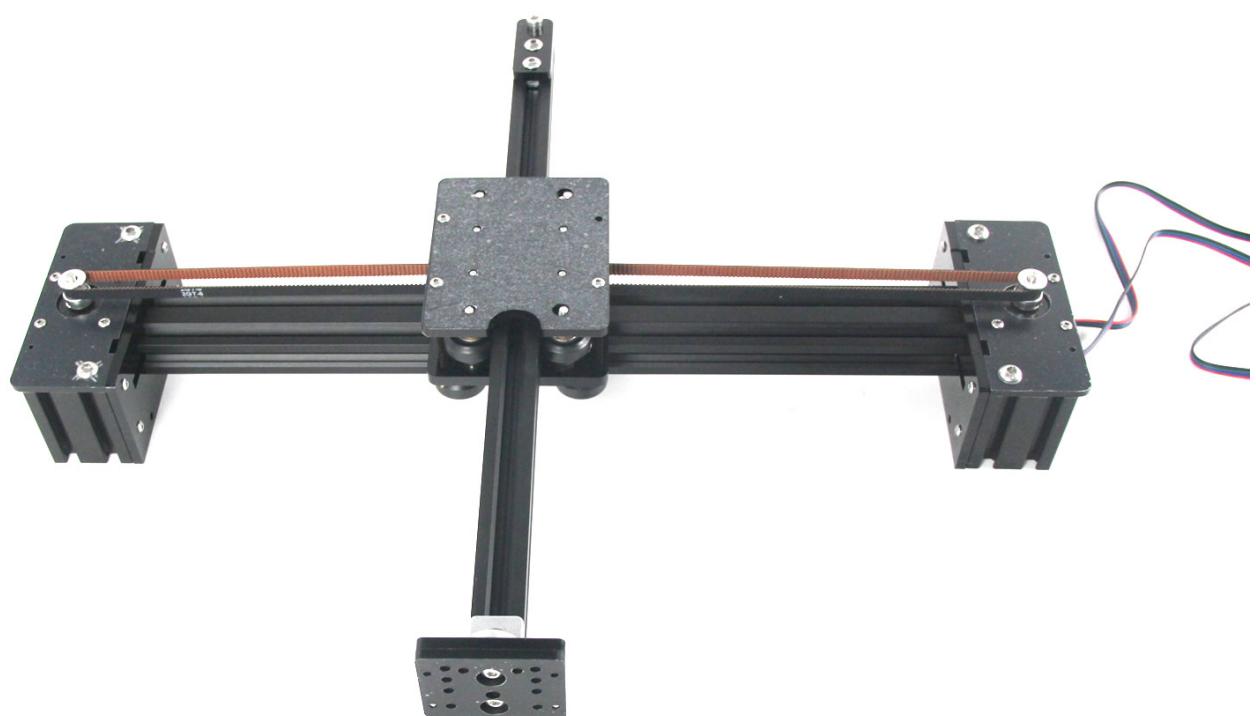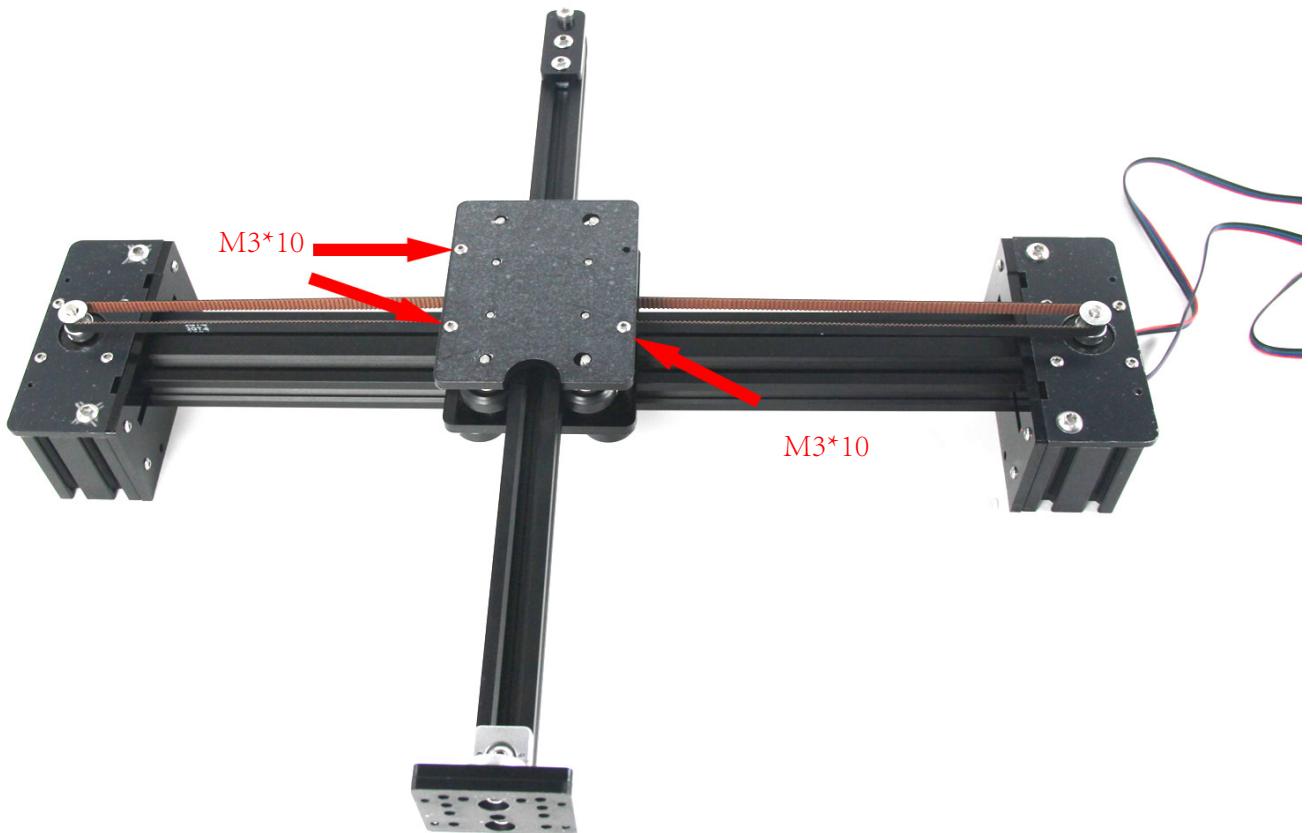


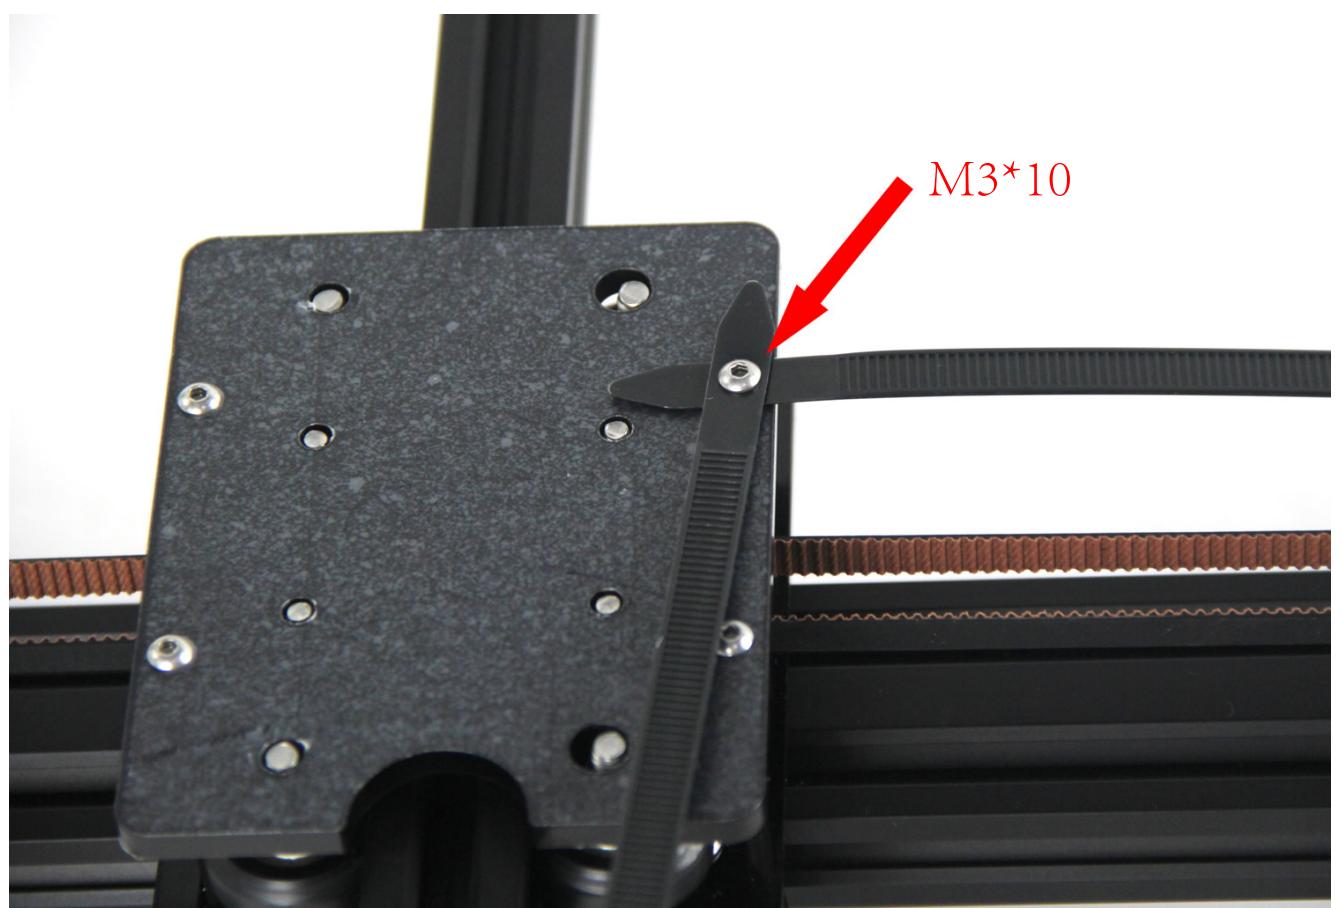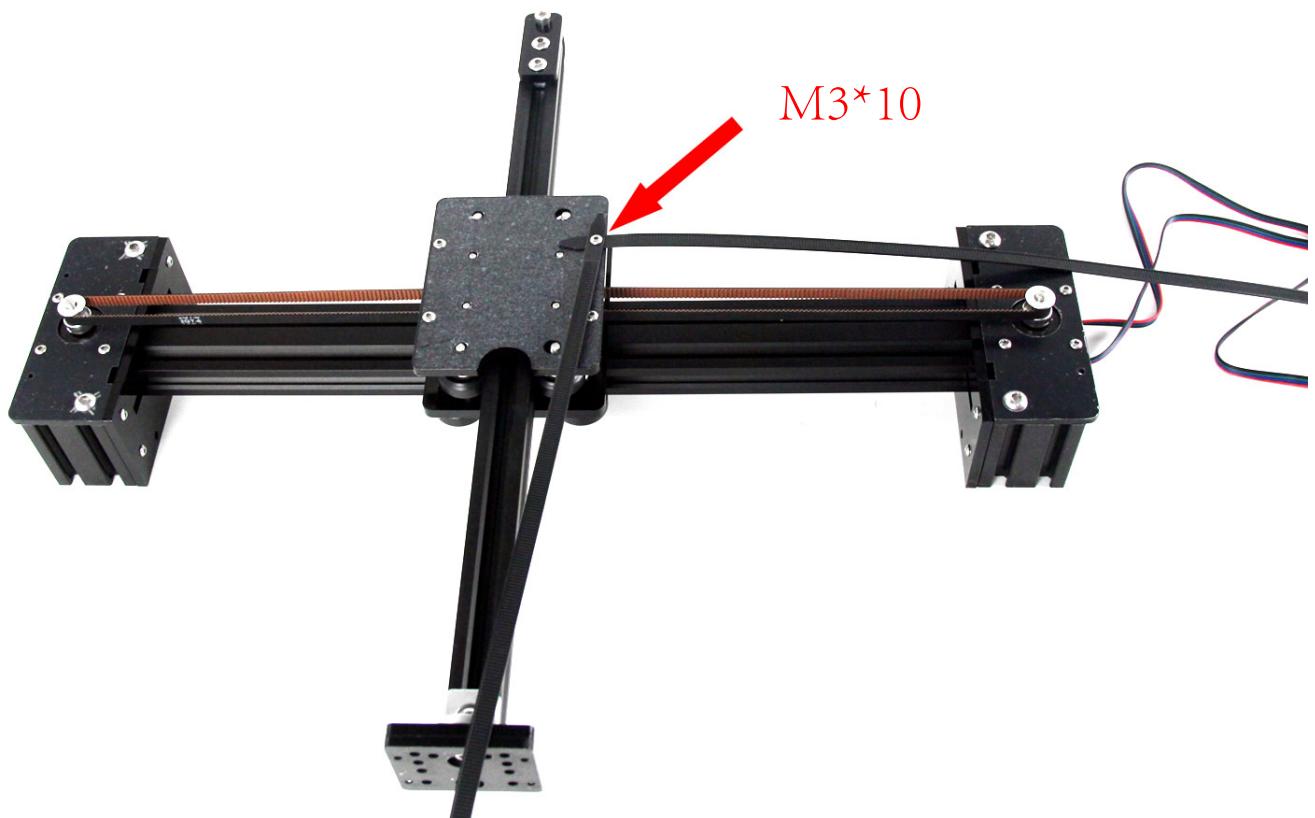


remove the screw


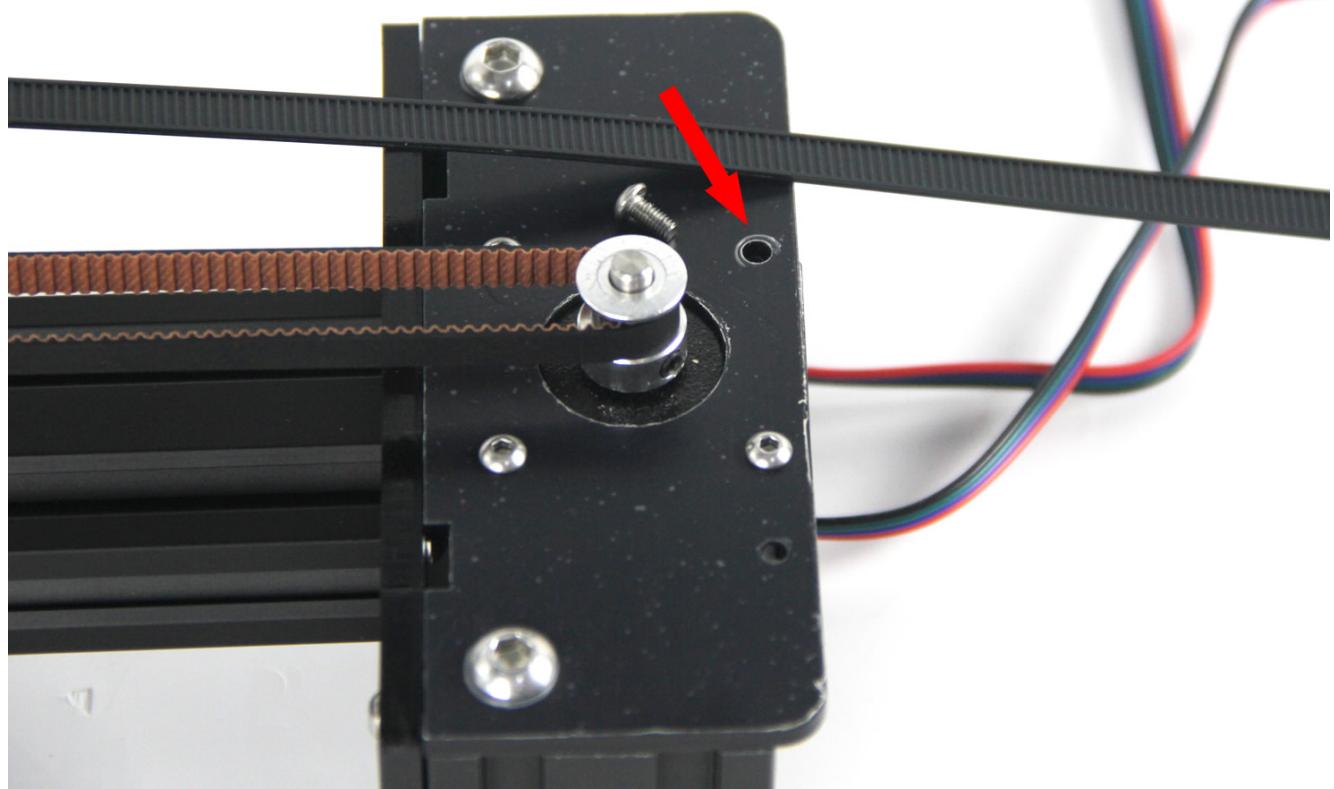




Tighten the screw

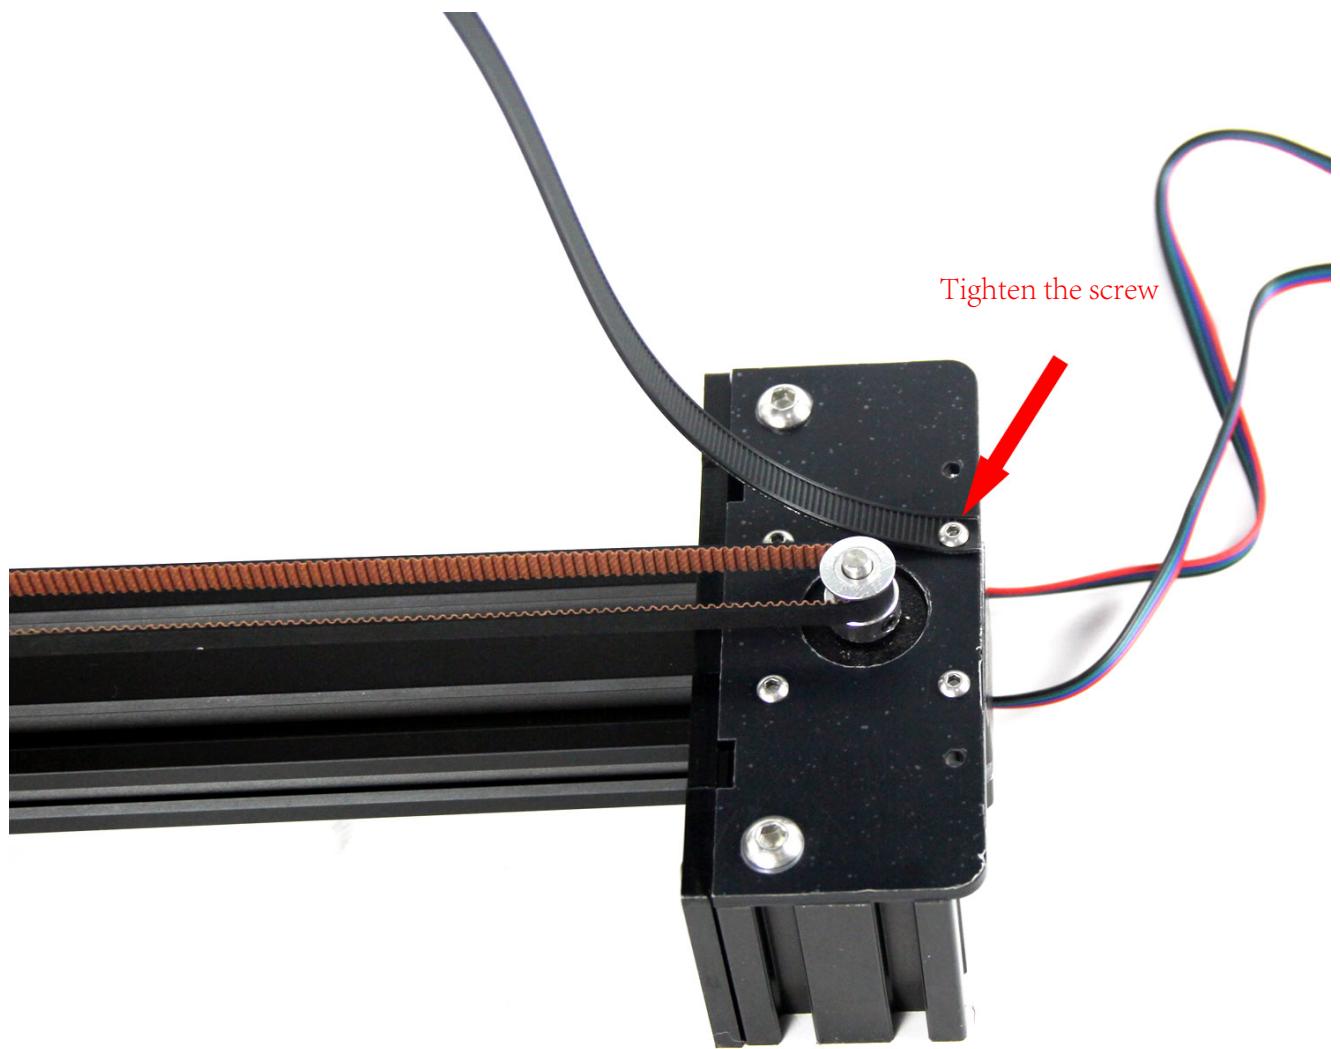


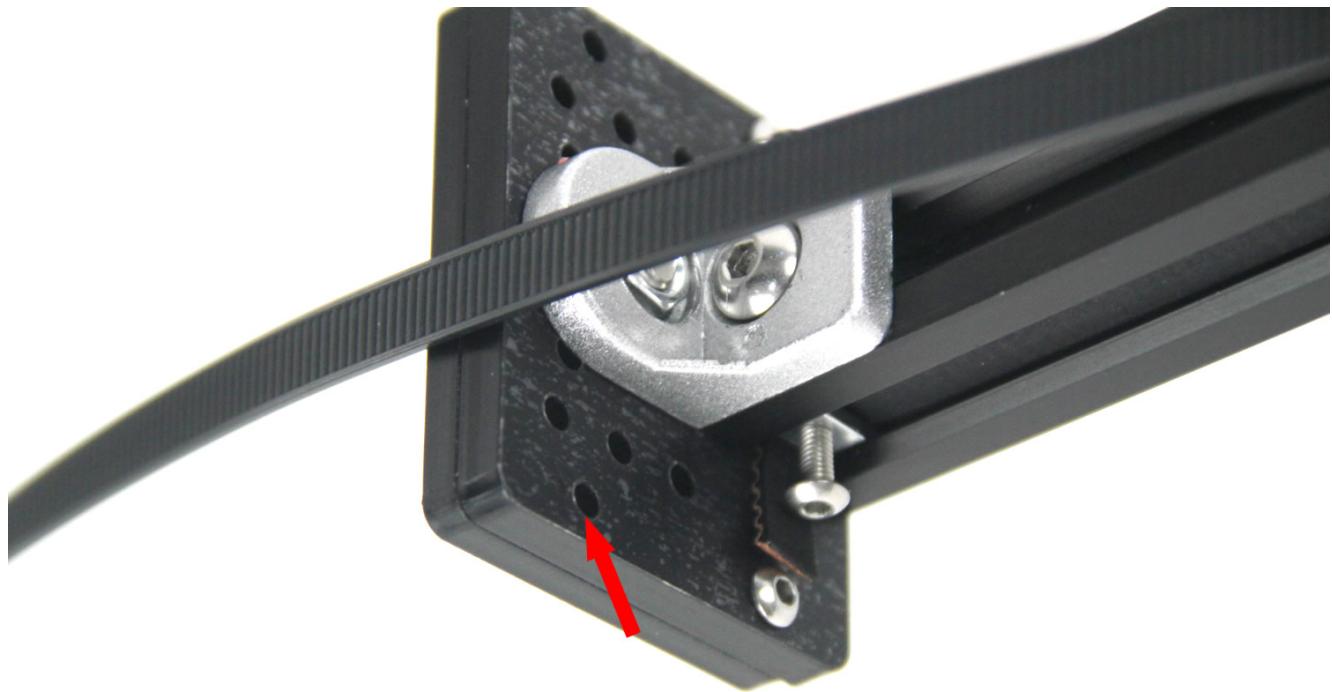


Tighten the screw

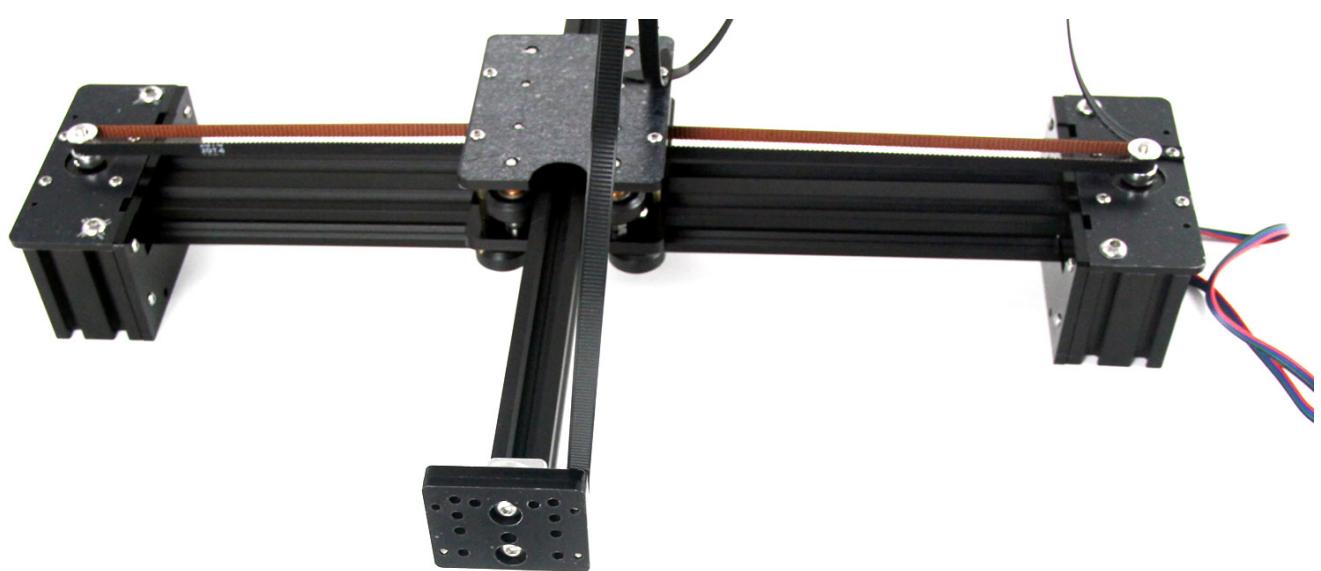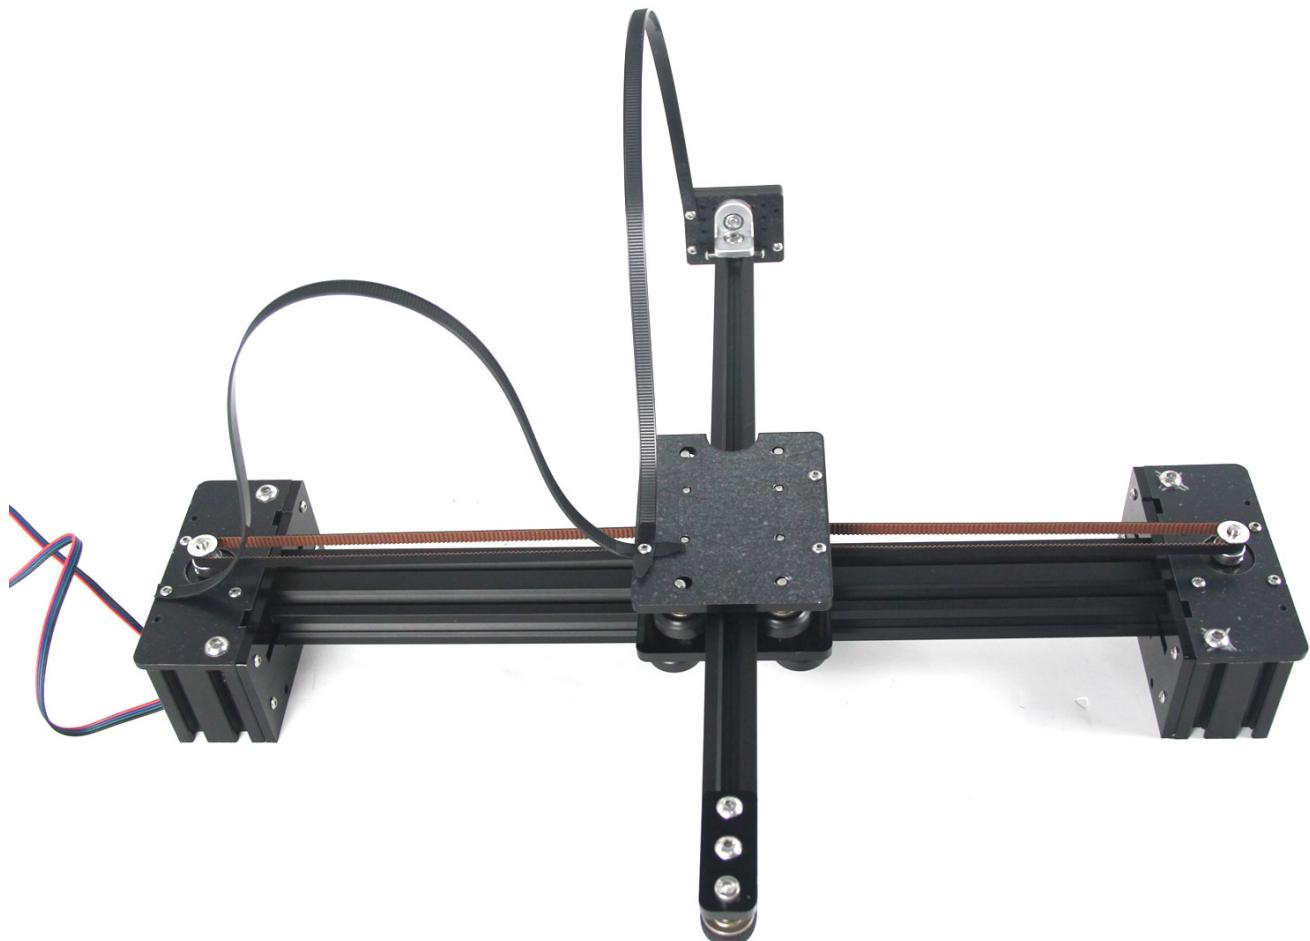

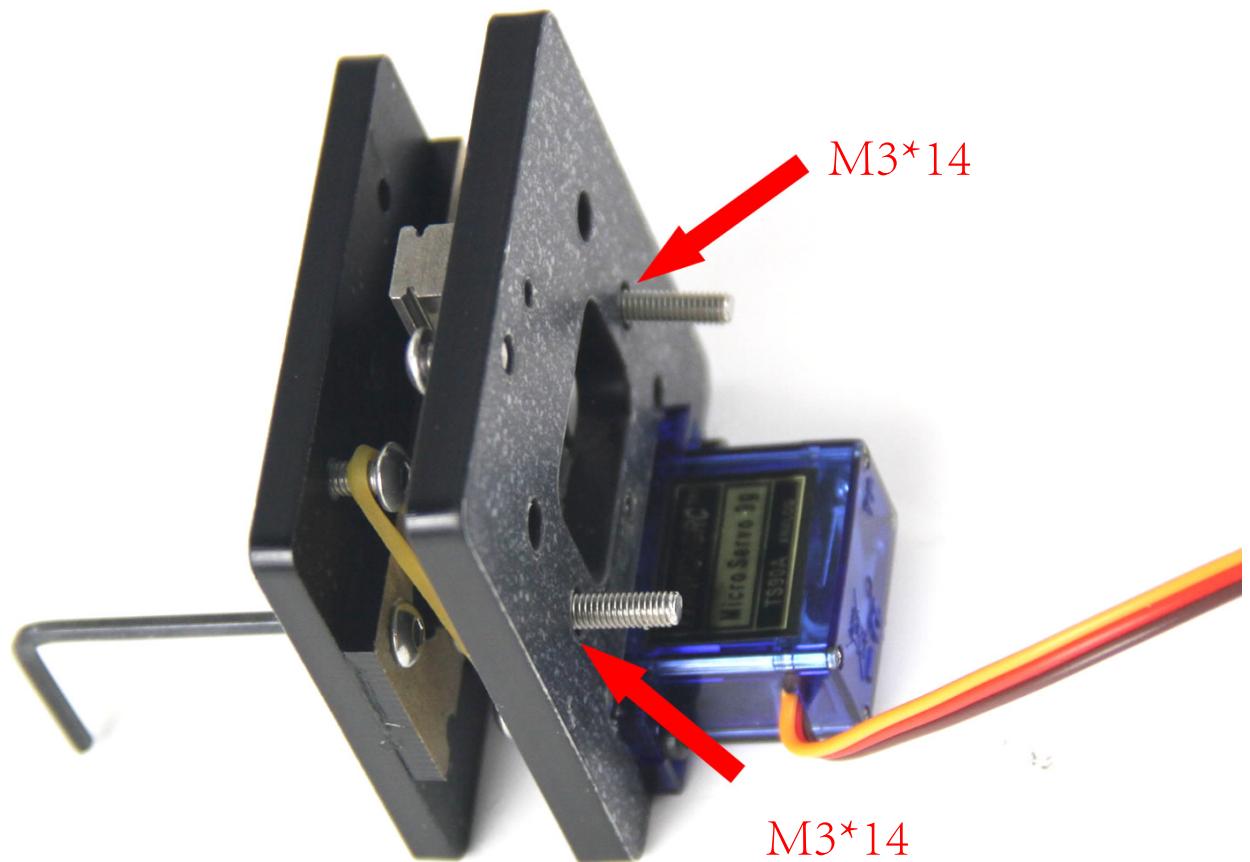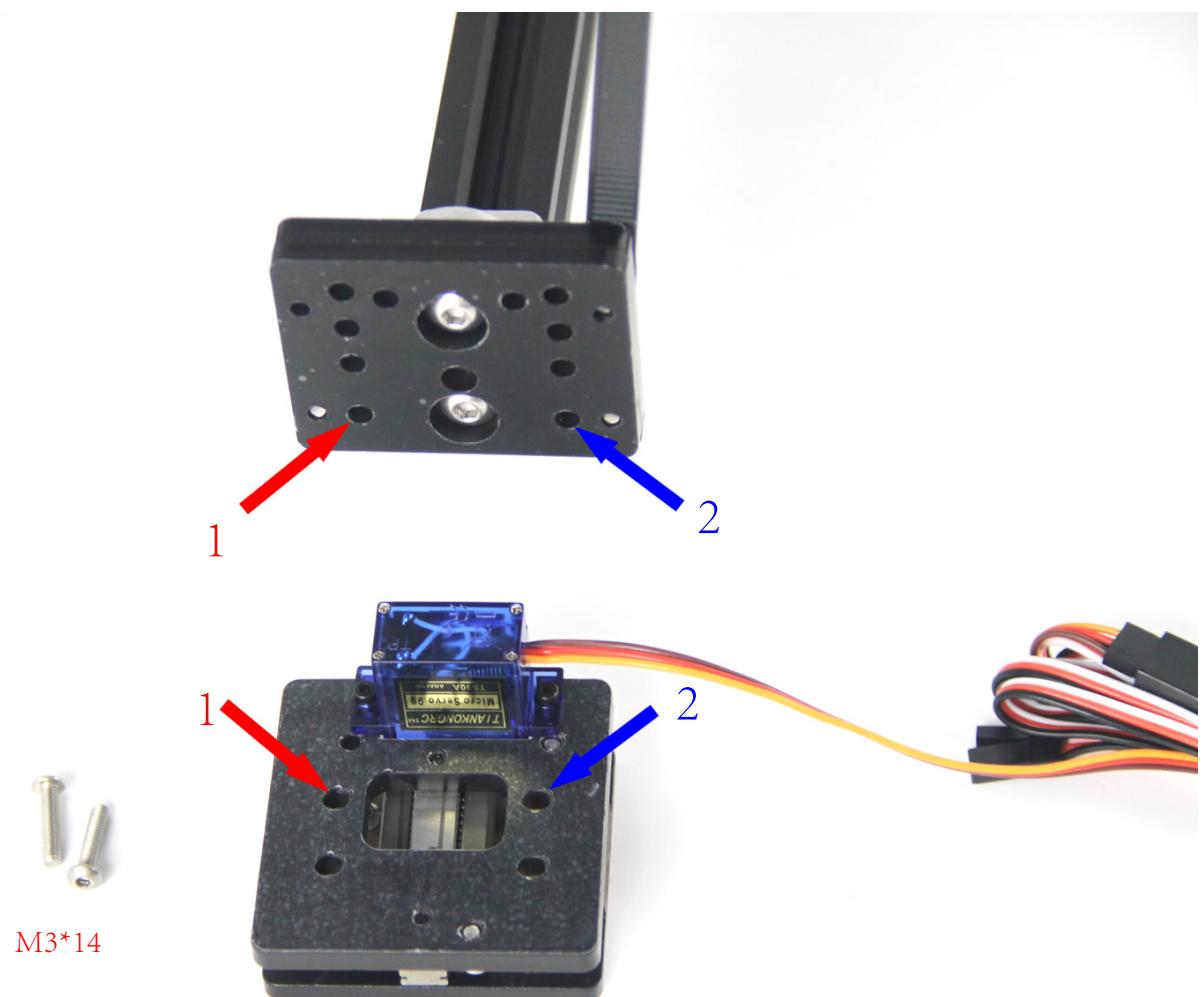

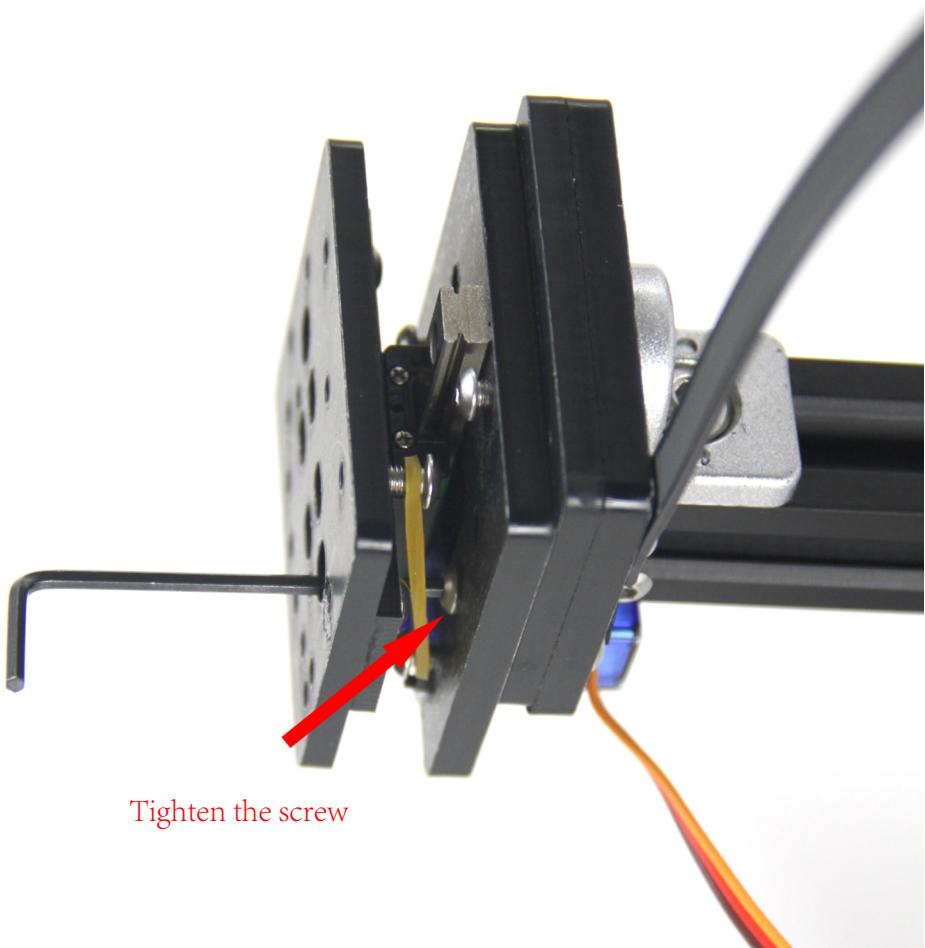

Tighten the screw

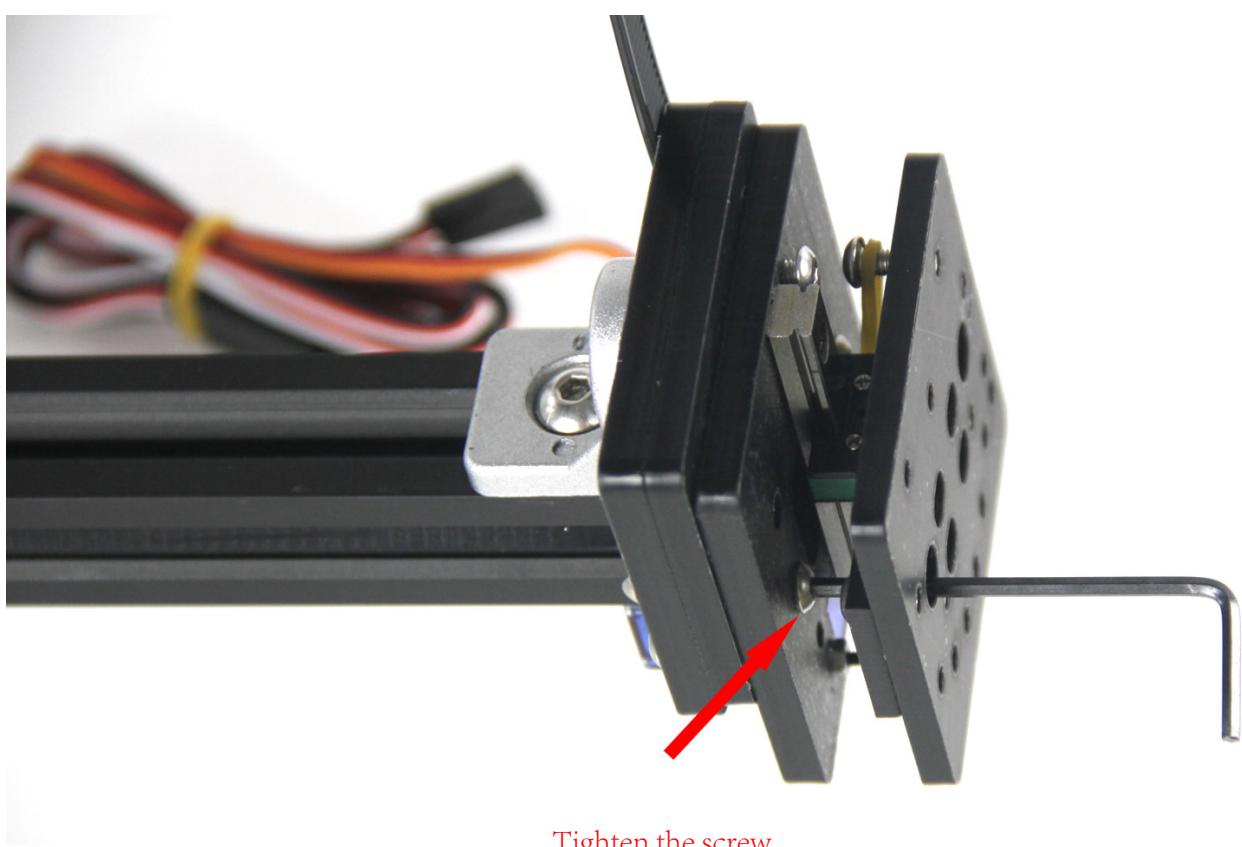

Tighten the screw

