


inkscape dDraw driver and testing

一、 Software Inkscape (window)


Please software inkscape in the English catalog operation

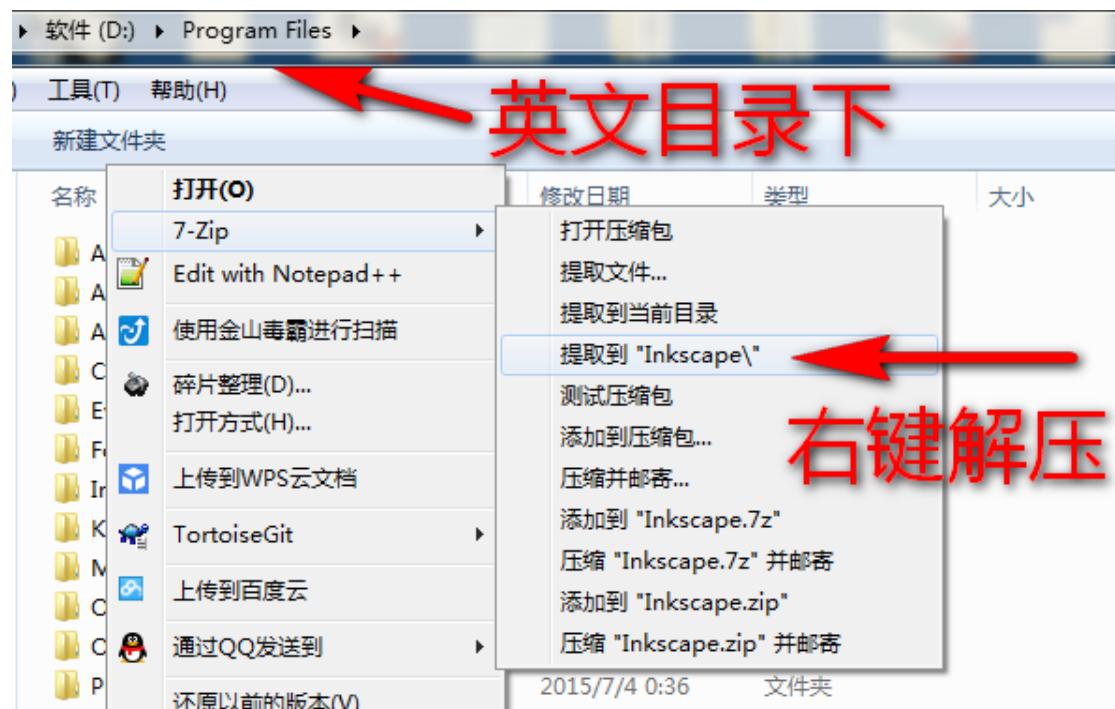

二、 Install USB driver

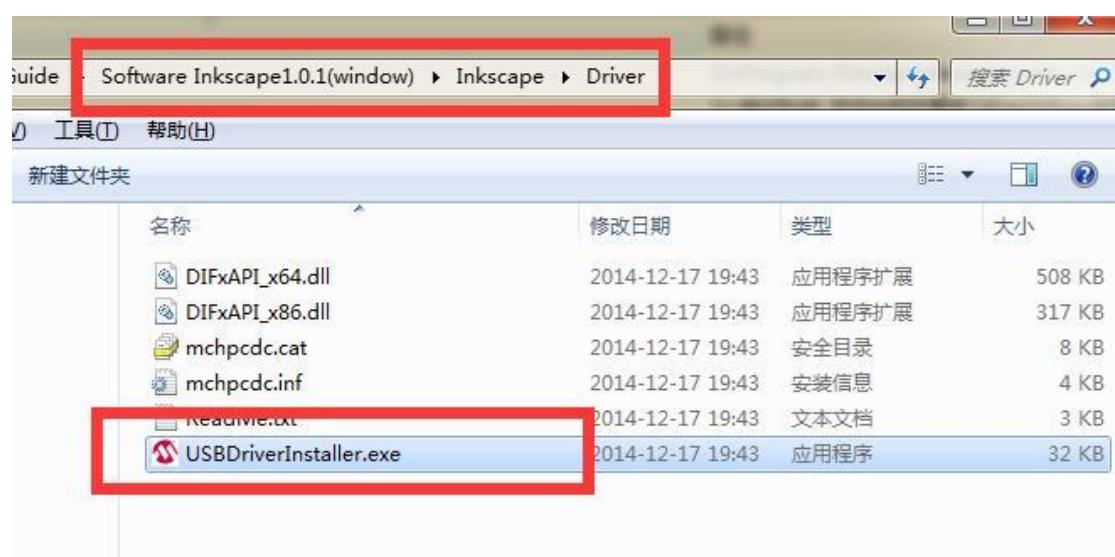

三、 dual click "USBDriverInstaller.exe" , click "Install "

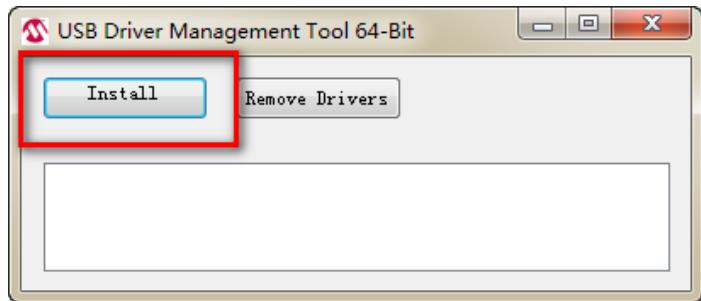


show **SUCCESS** word, the driver is ok.




If show **error** : .. , maybe your computer system is **ghost** version or lost some files.

pls contact us when you meet it.

四、 plug the 12V power and USB.

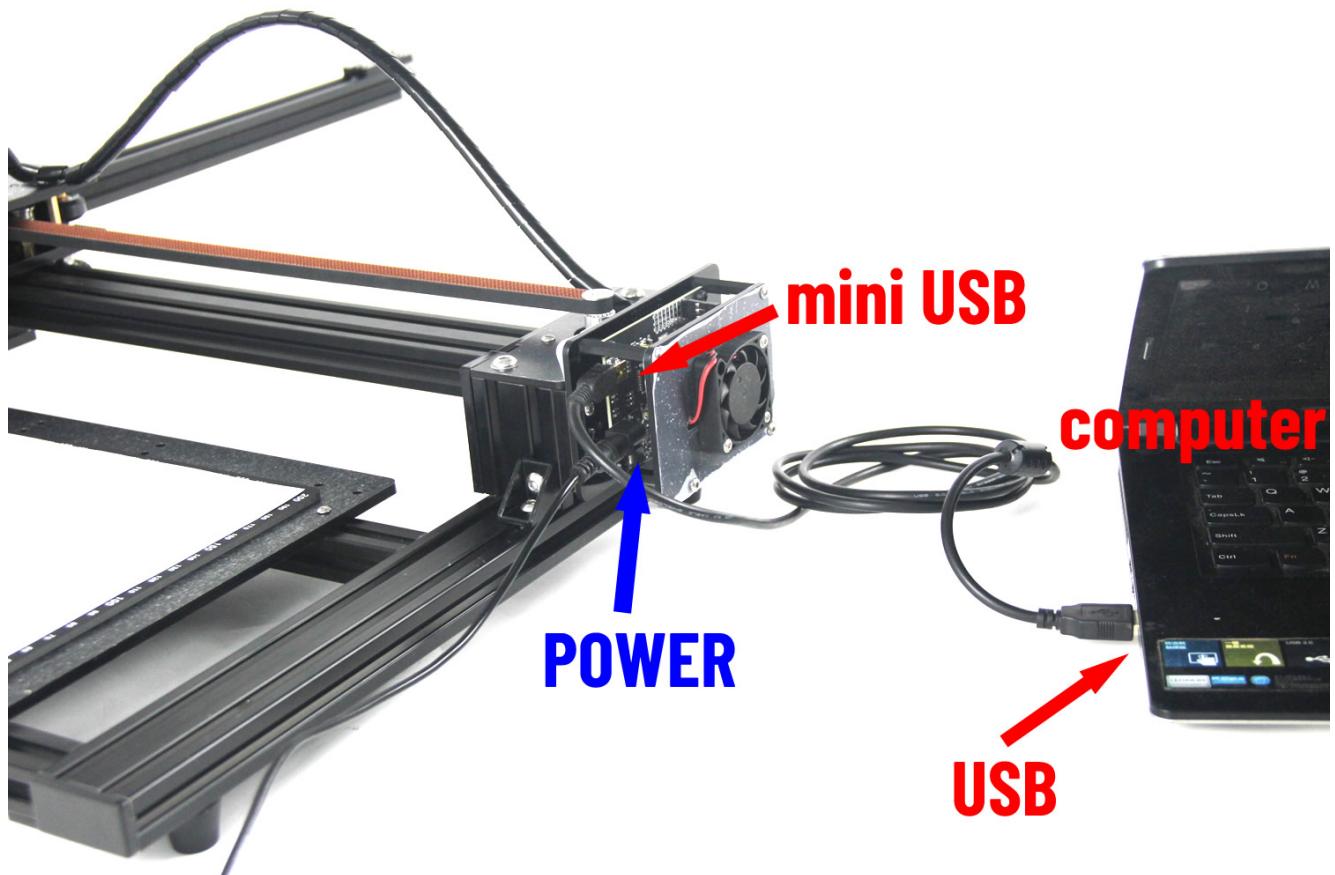


五、 fixed the pen

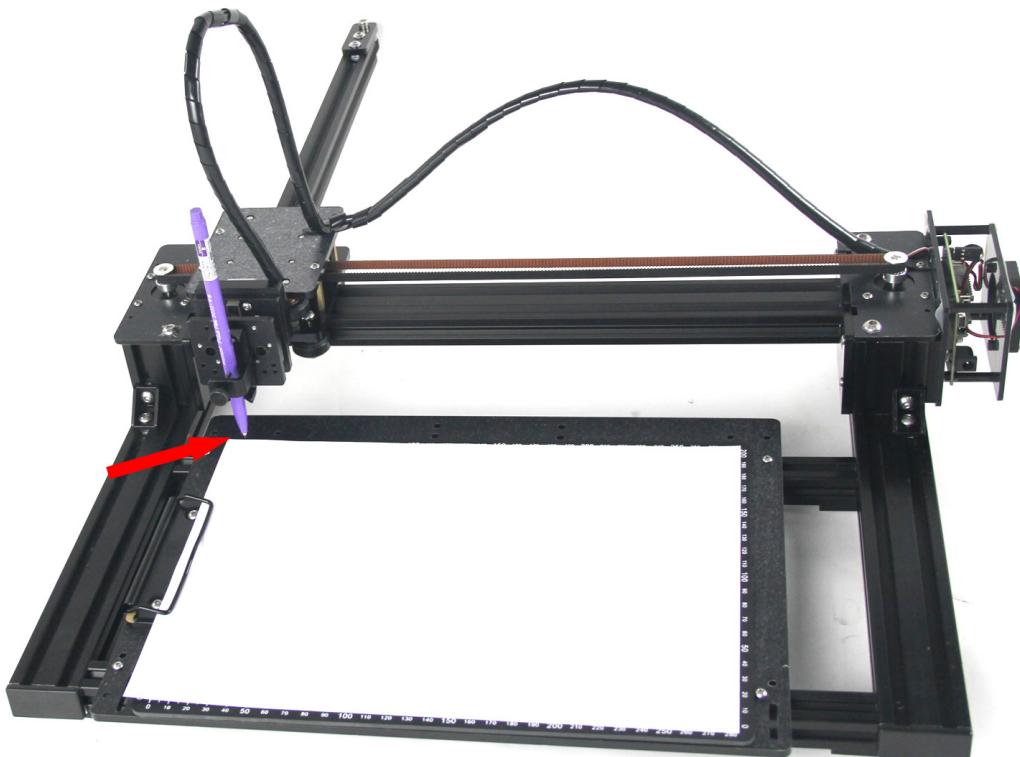


六 open inkscape


1、dual click “Inkscape”

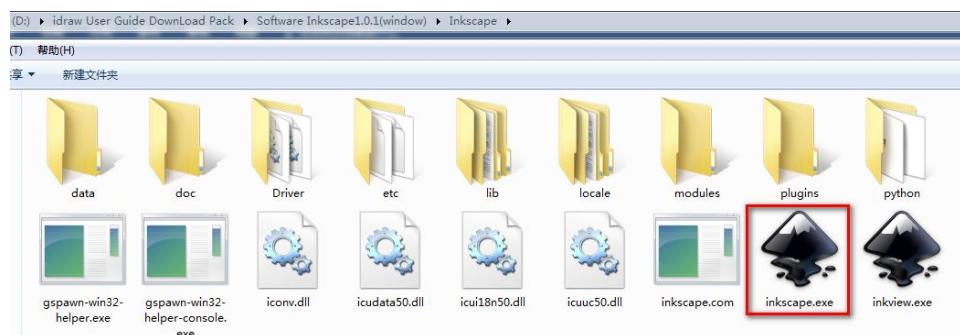


software interface :

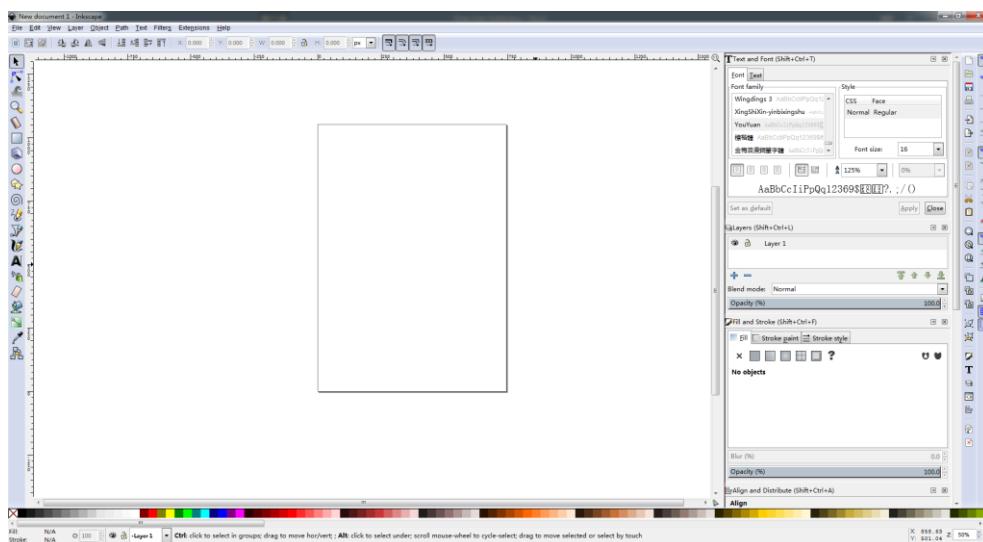


2、choose dDraw control

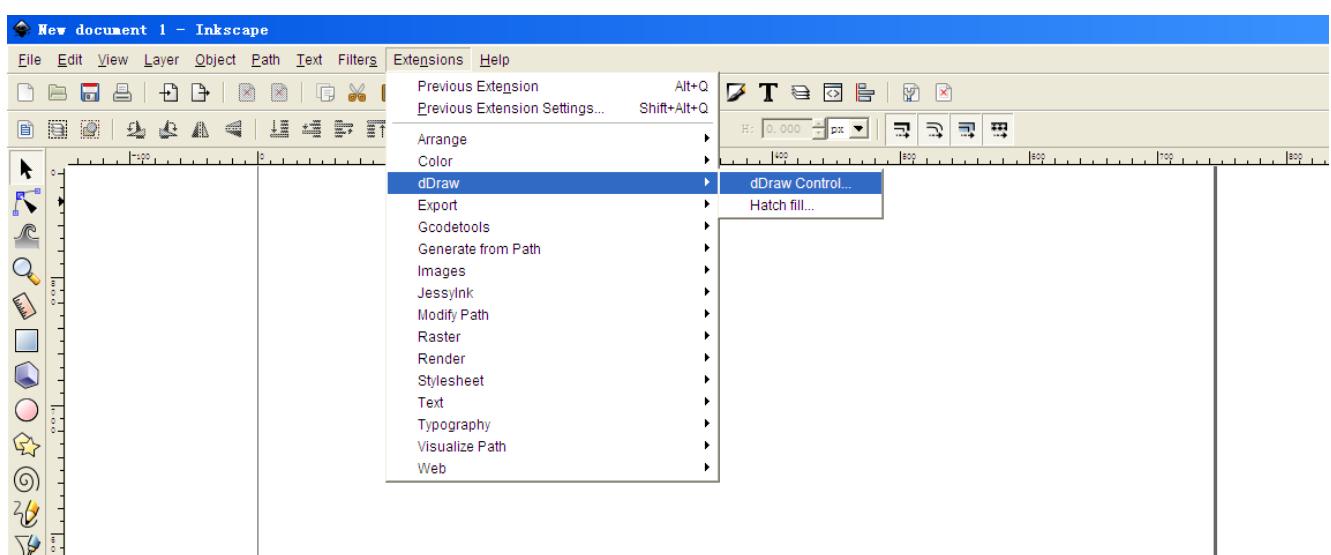

dDraw interface :

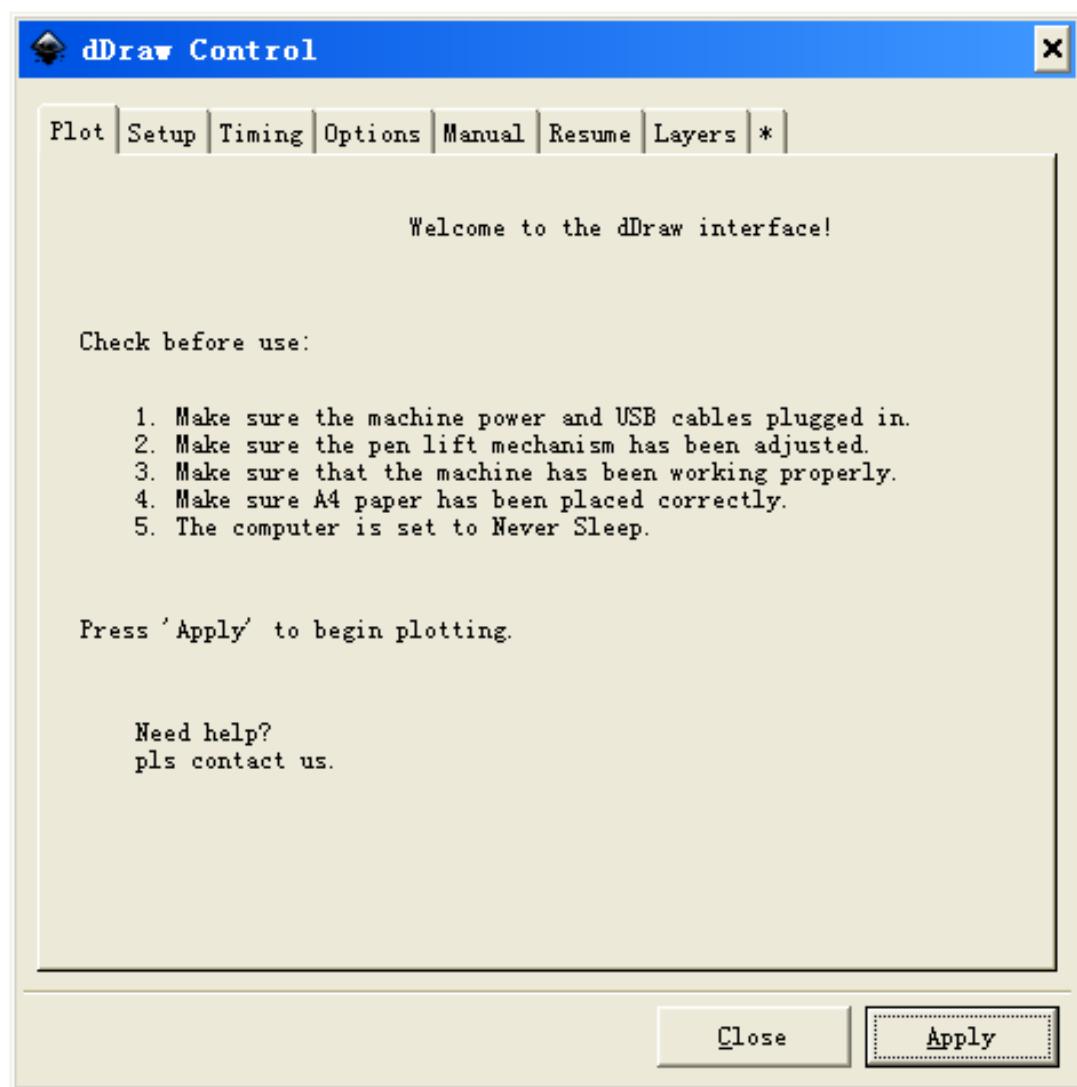


七、 testing pen

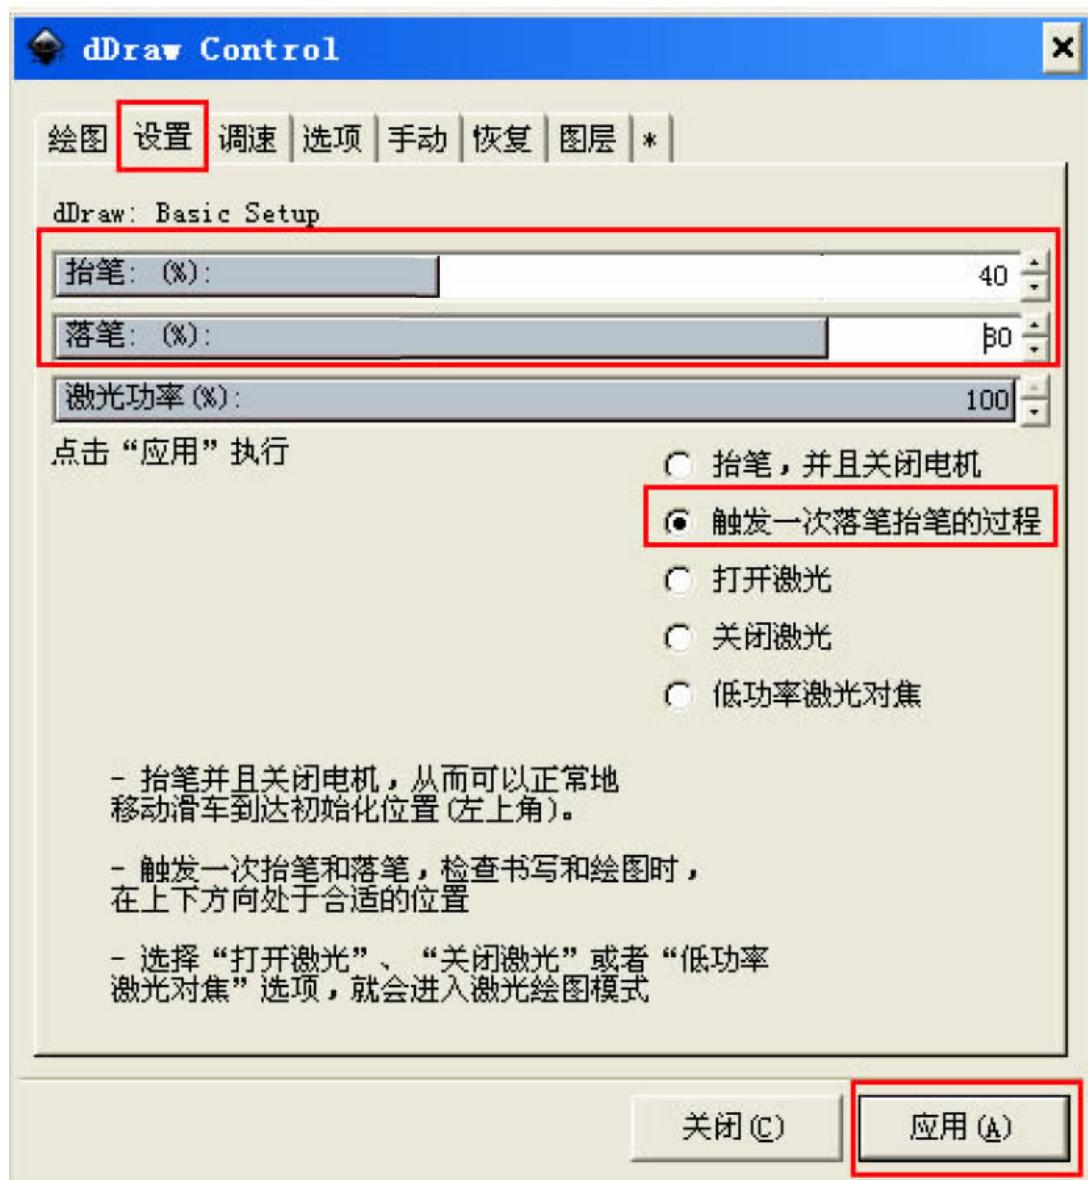


八 testing motors


1 X motor

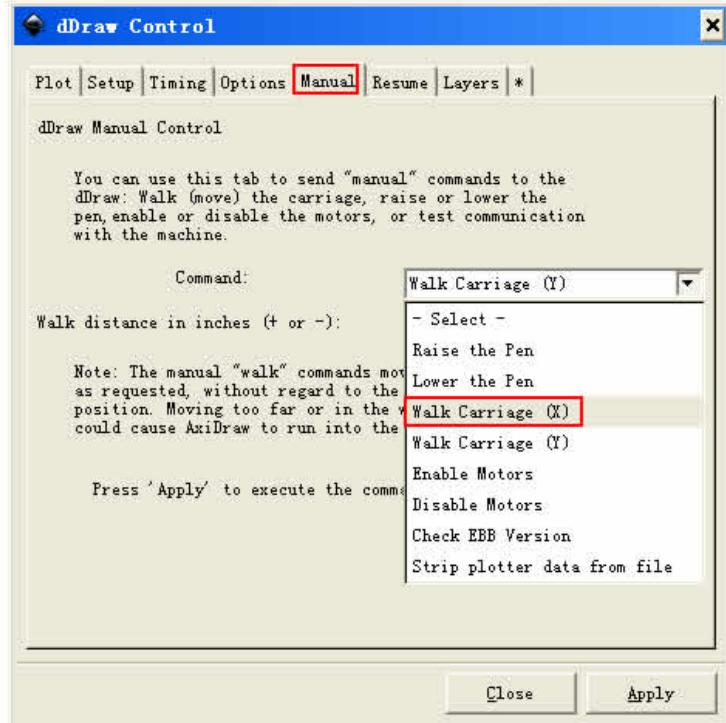

click Apply

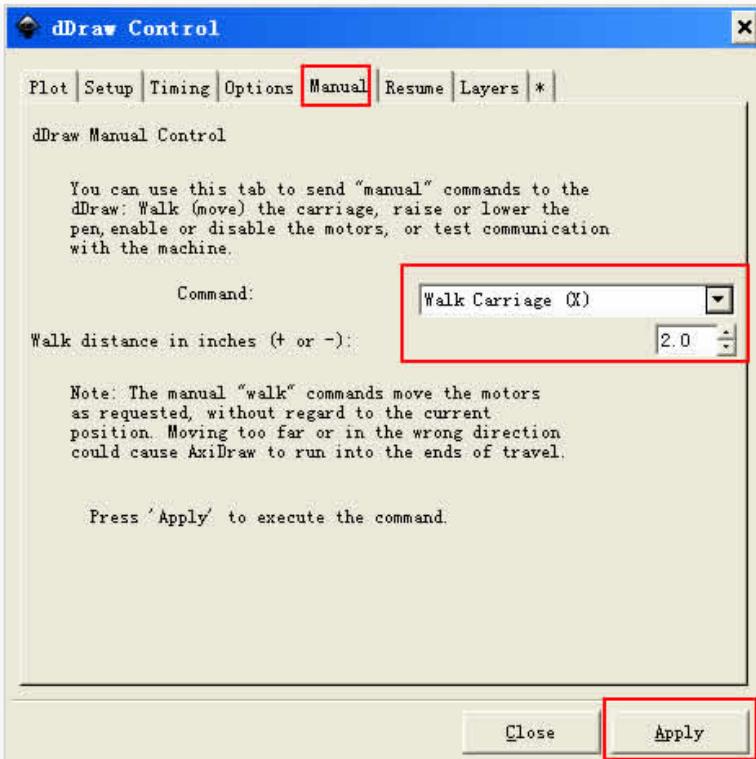

2 Y motor

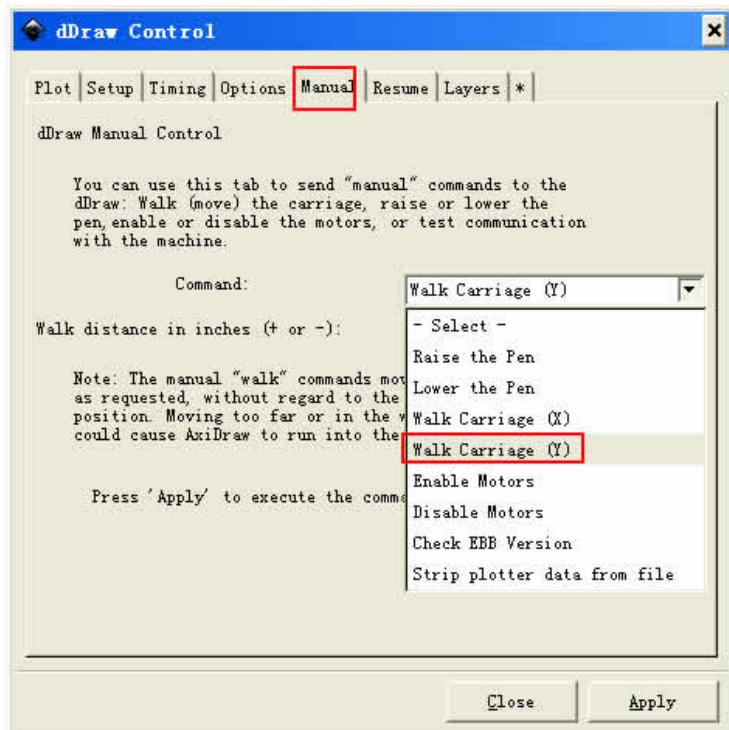

click Apply

