


Assembly manual 2

M5*6 aluminum nut

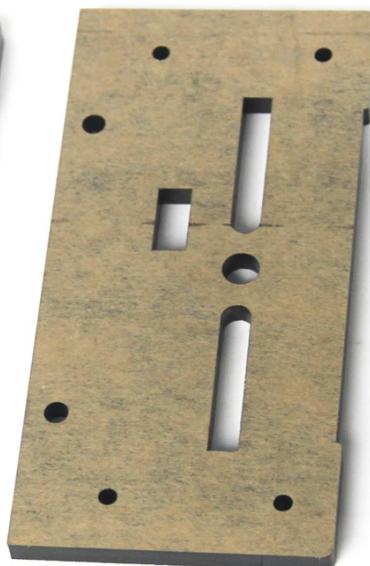

M5 Eccentric nut






M5 knurled nut







M3*10


M3 T nut

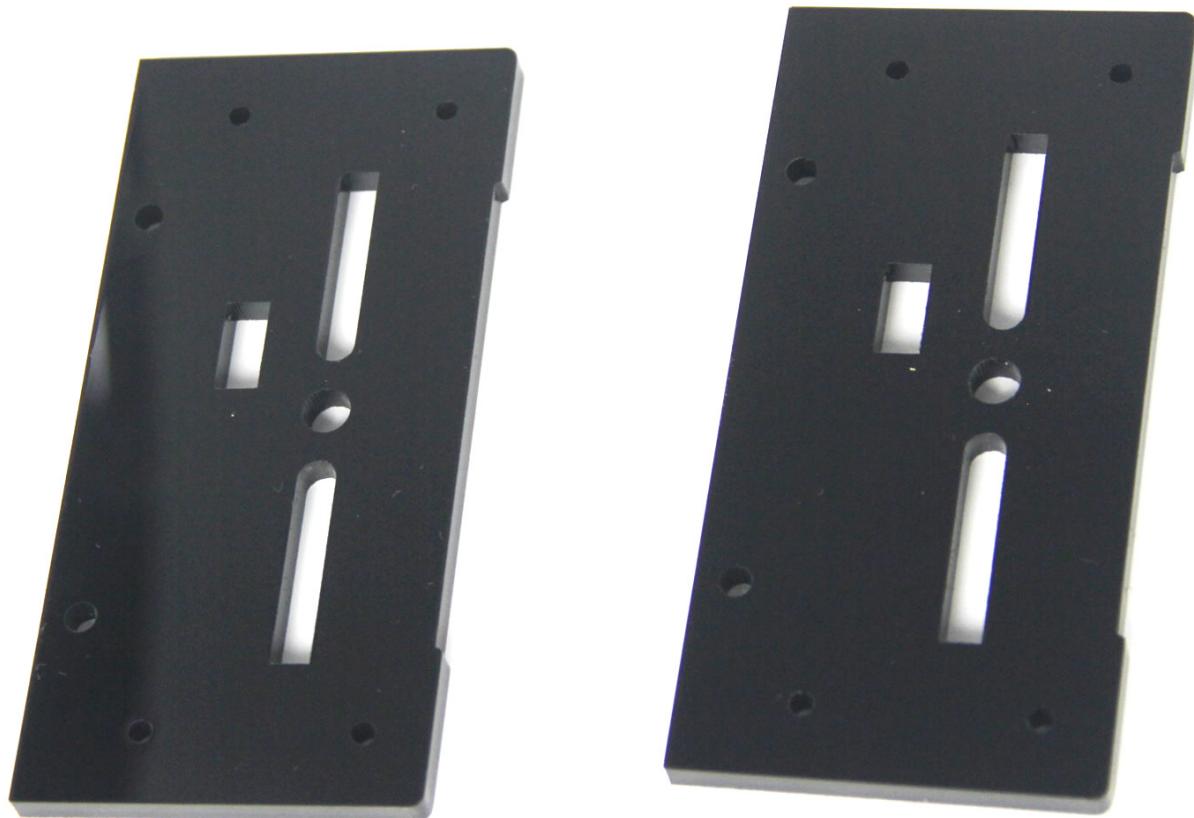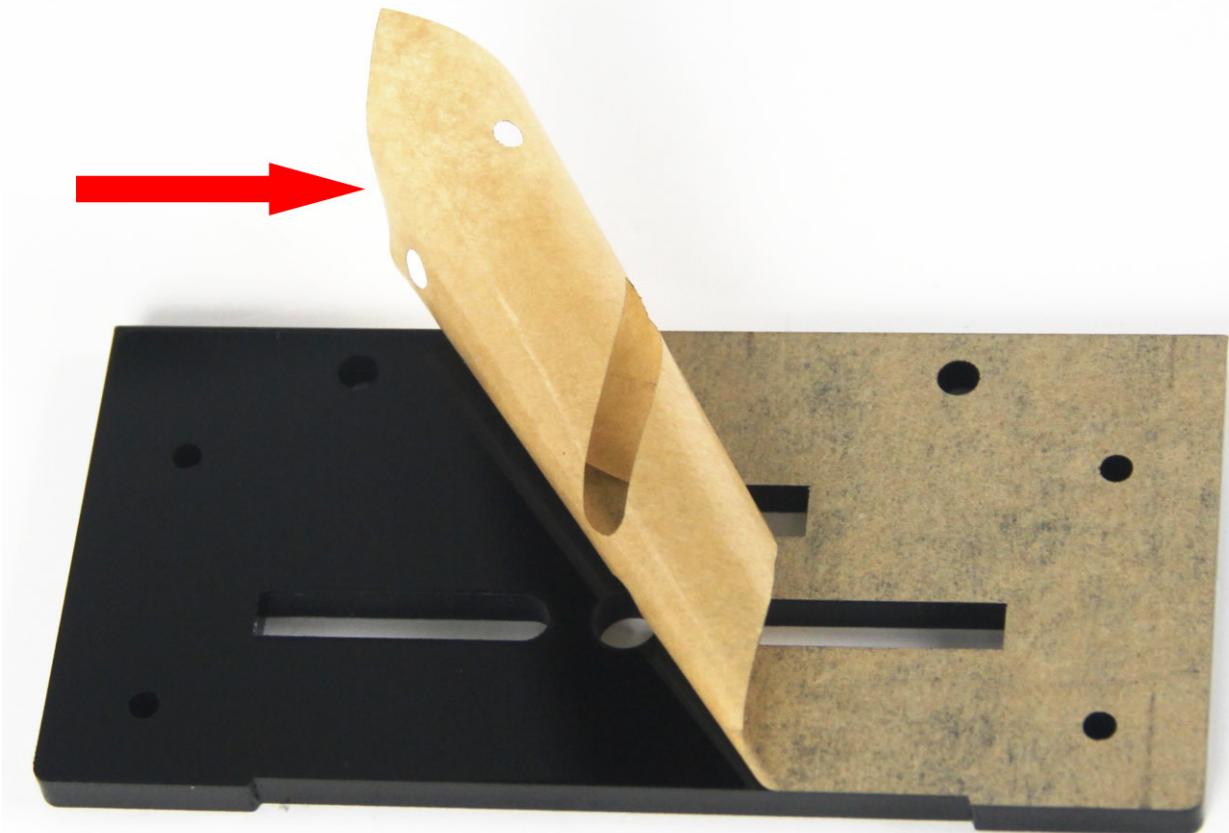


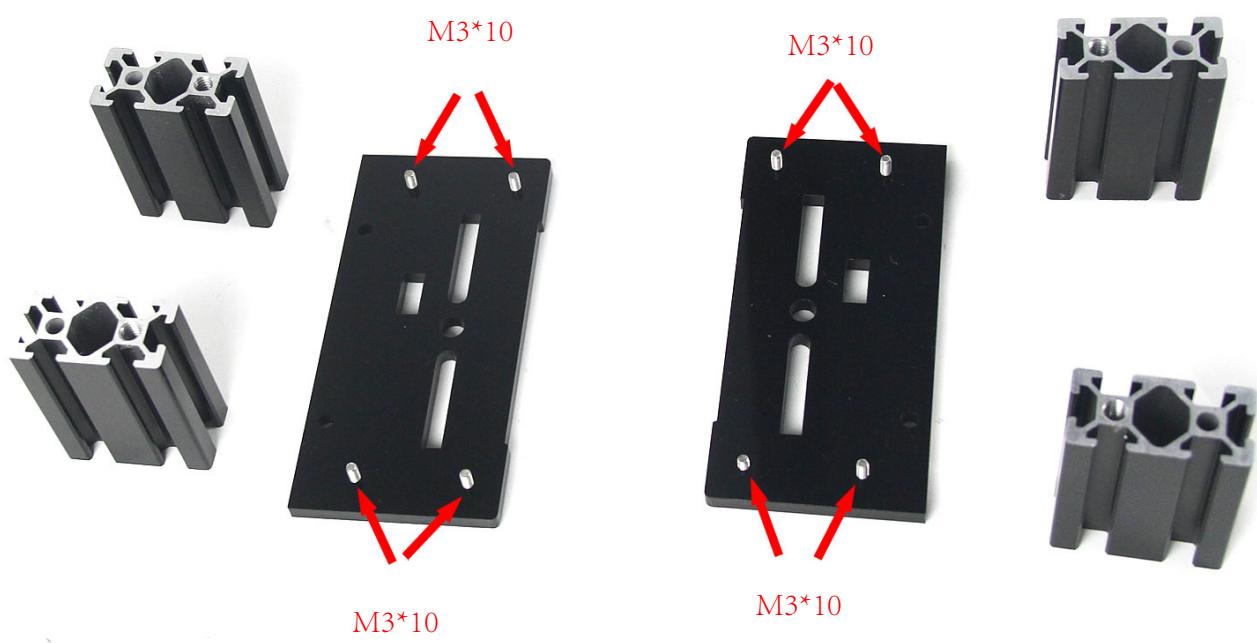

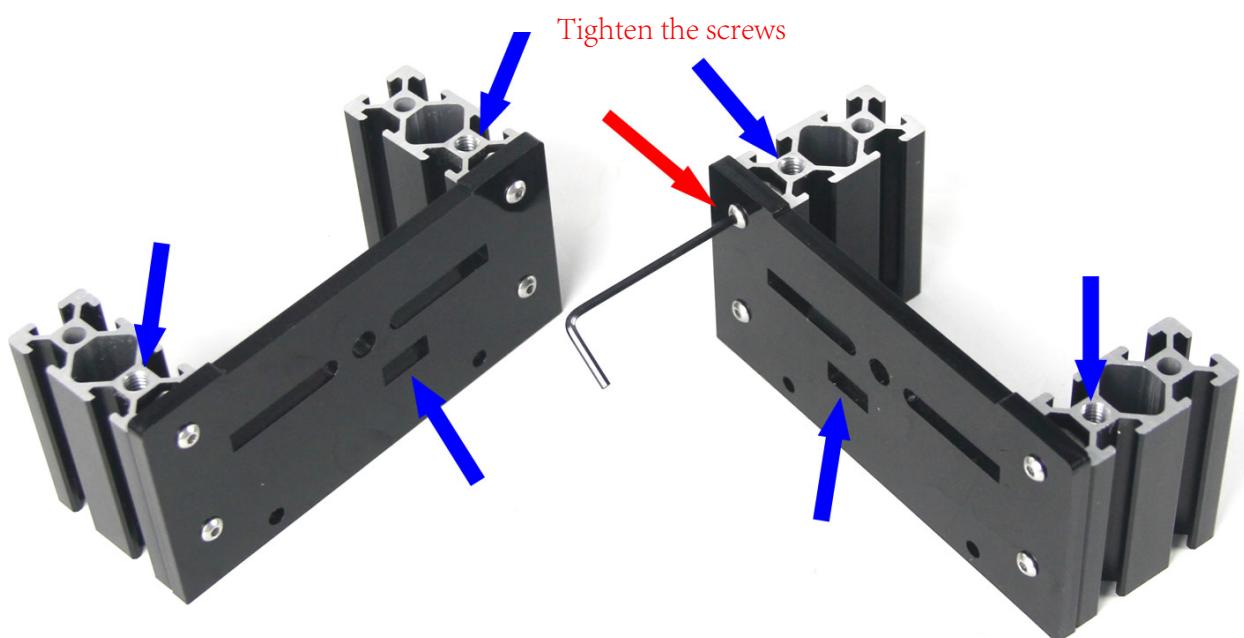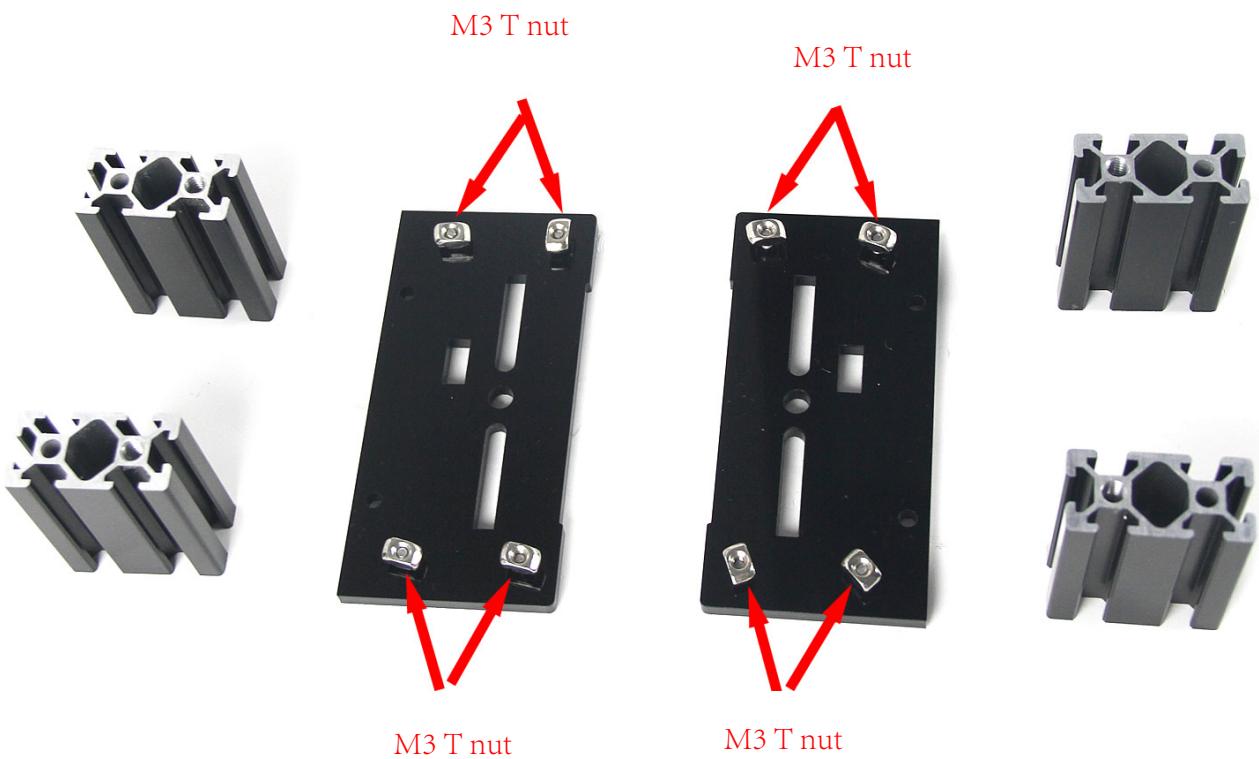

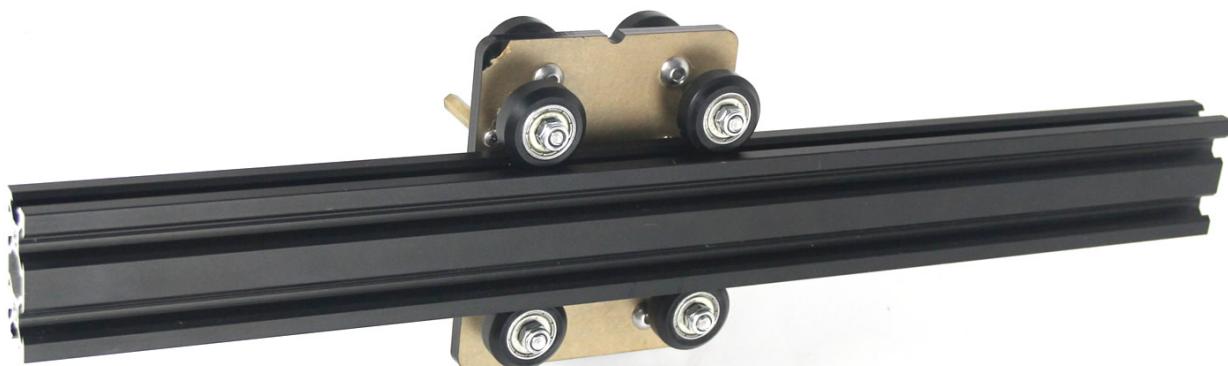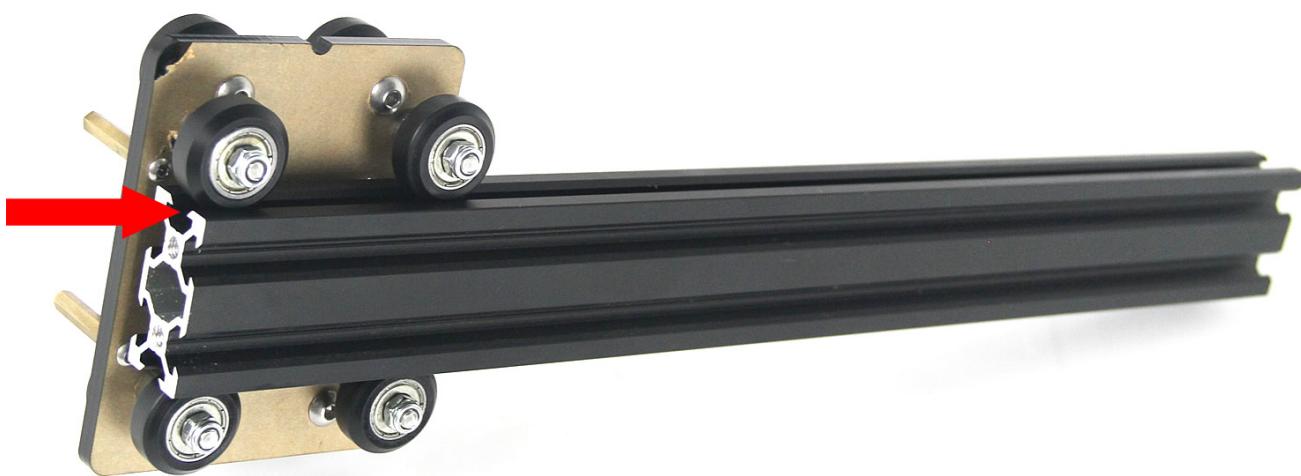

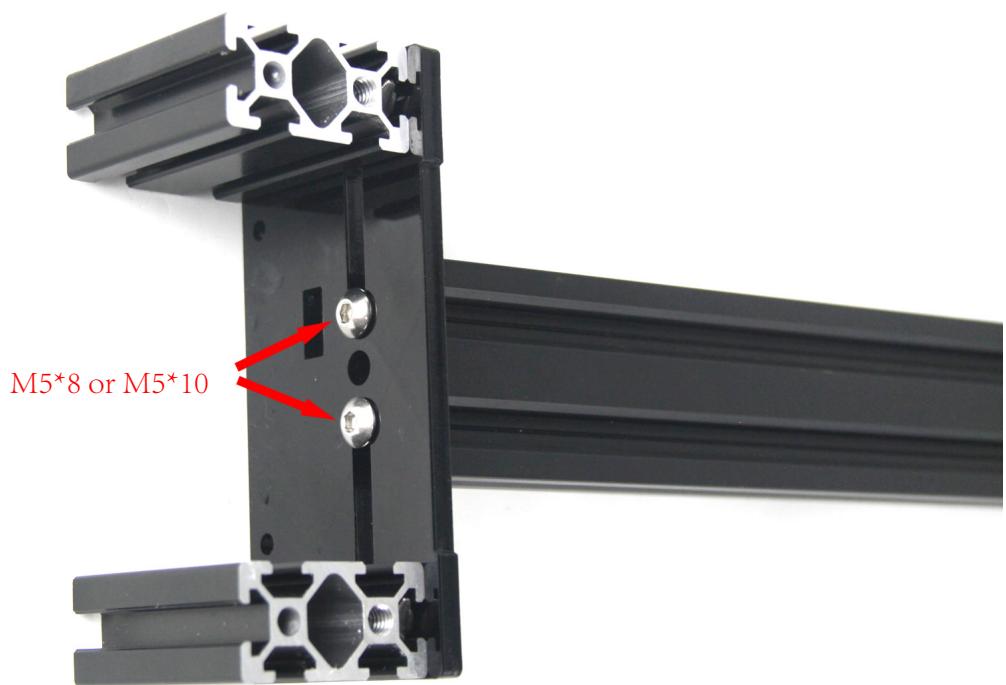


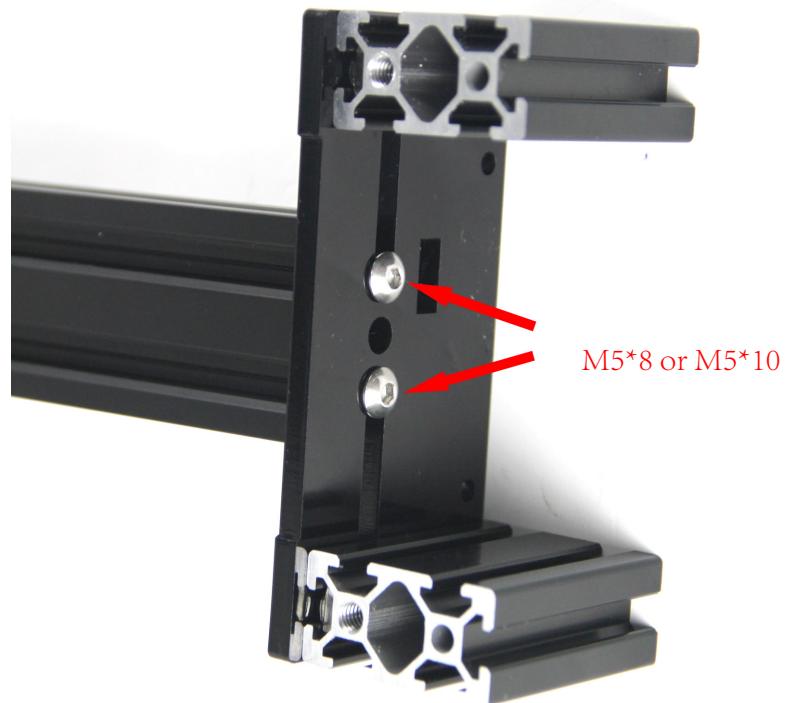








Tighten the GT2









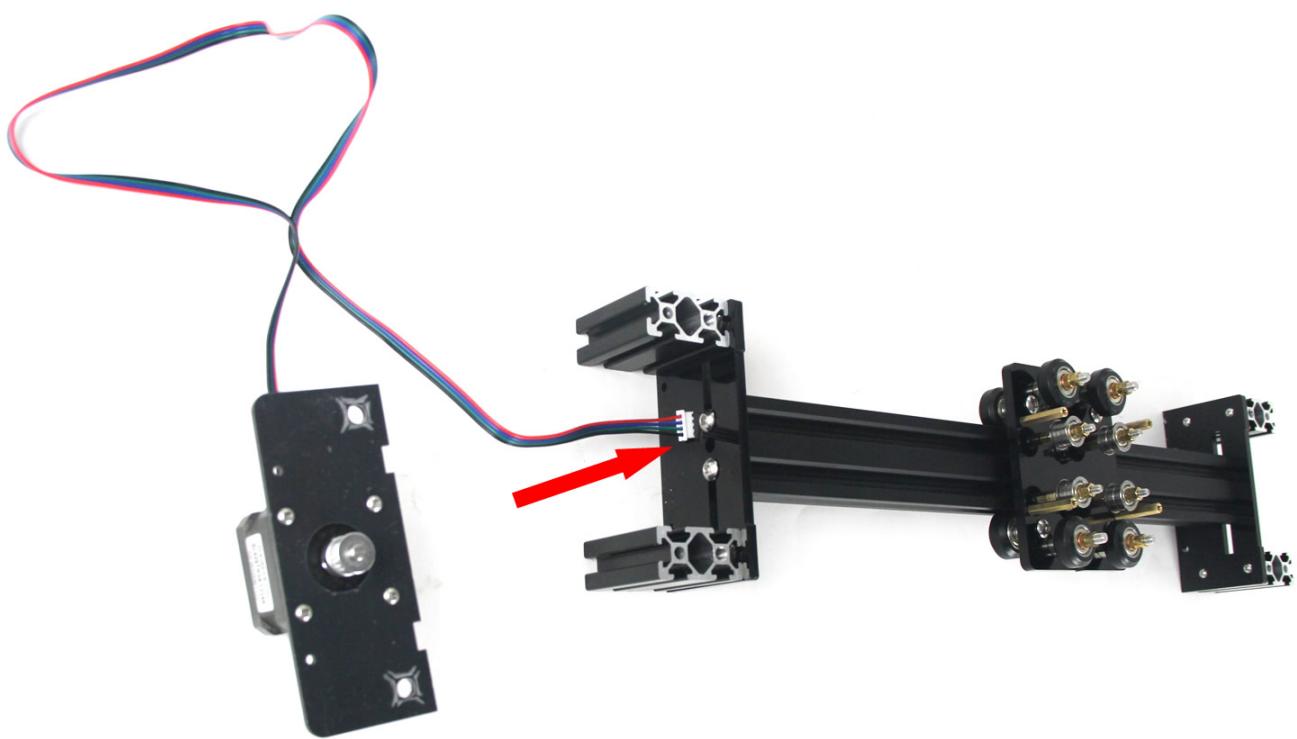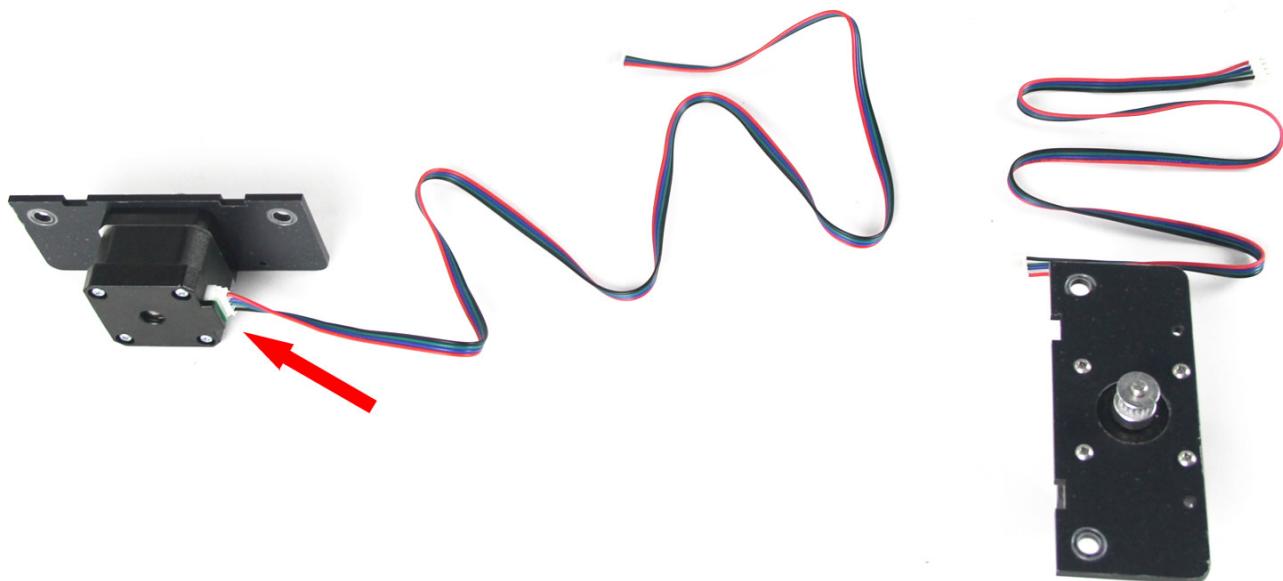

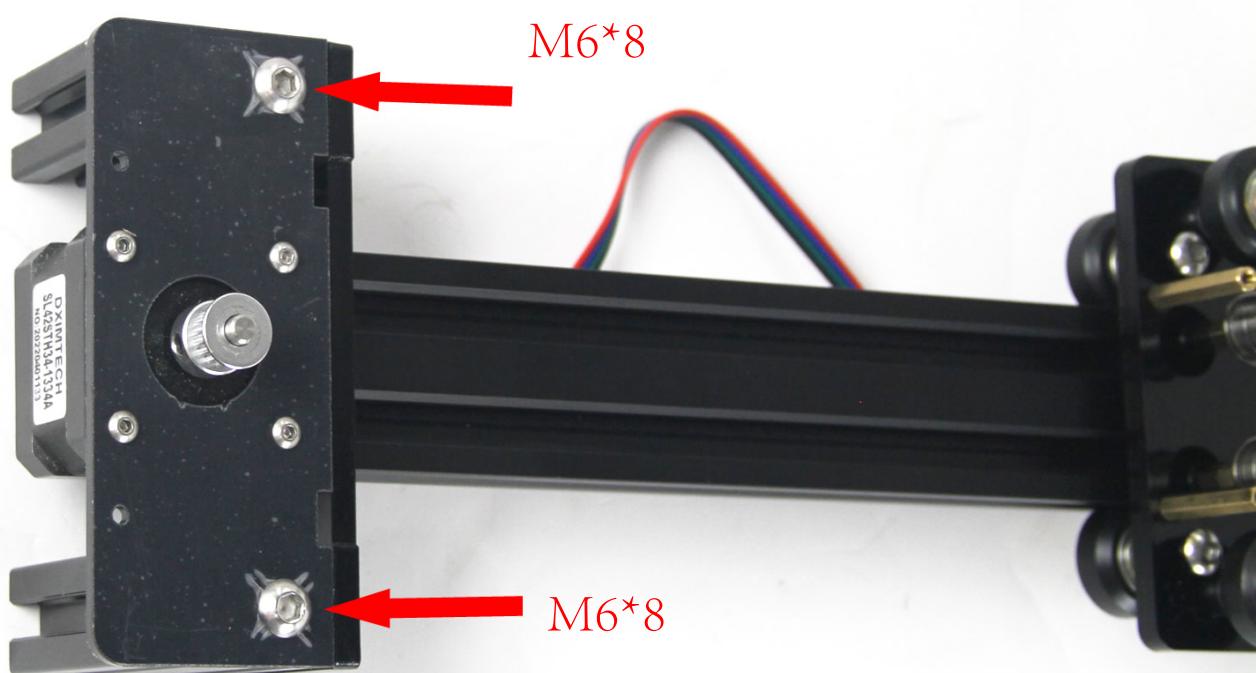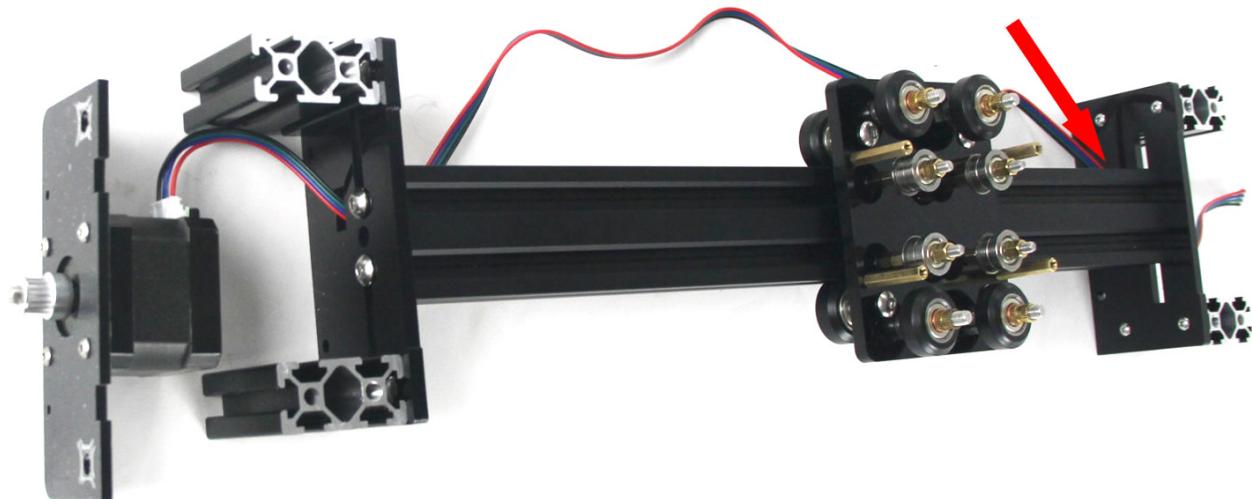

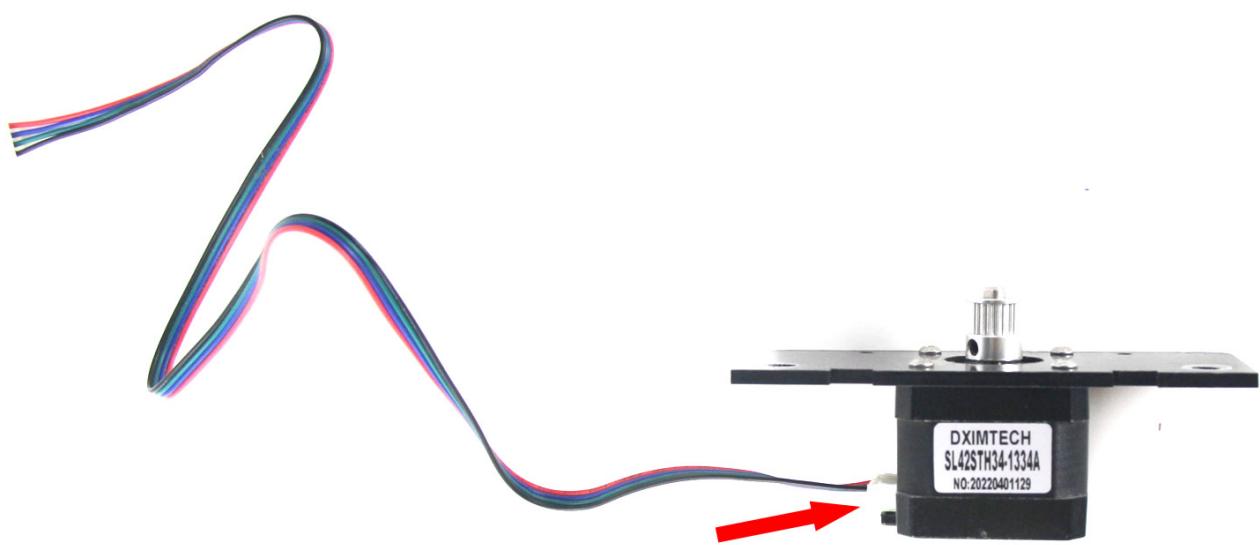
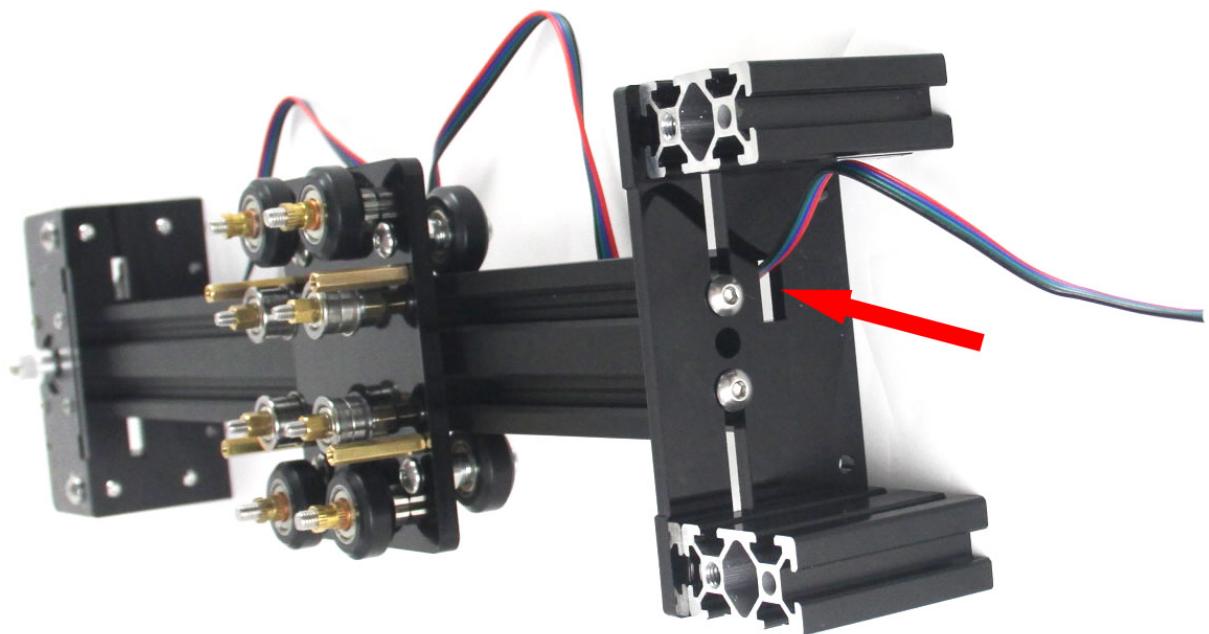


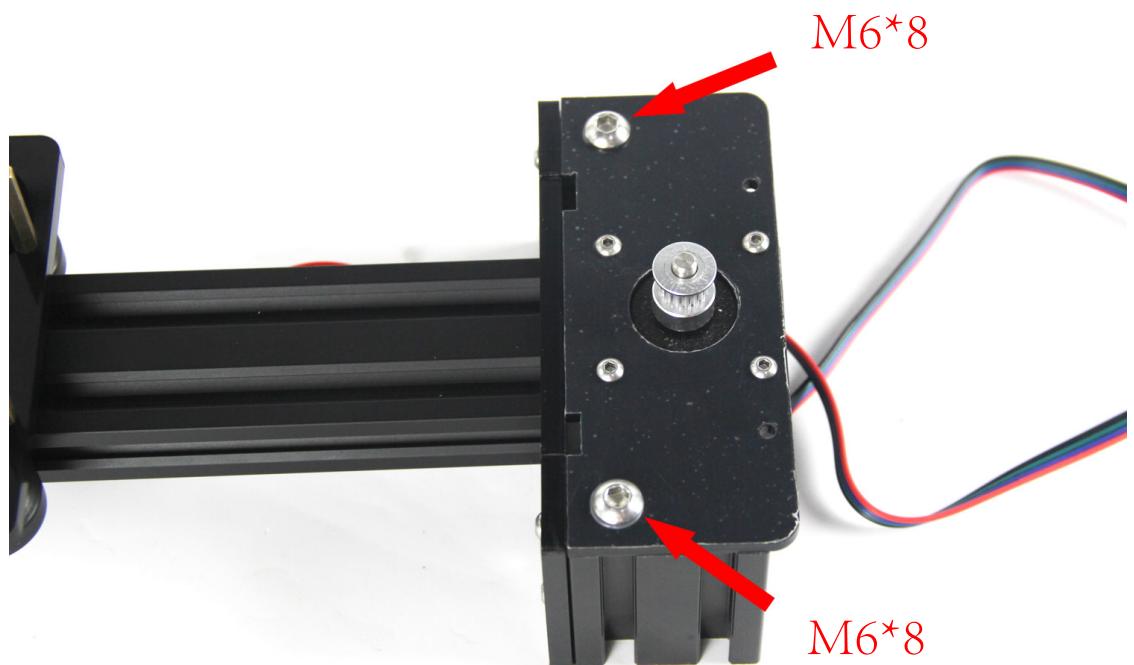

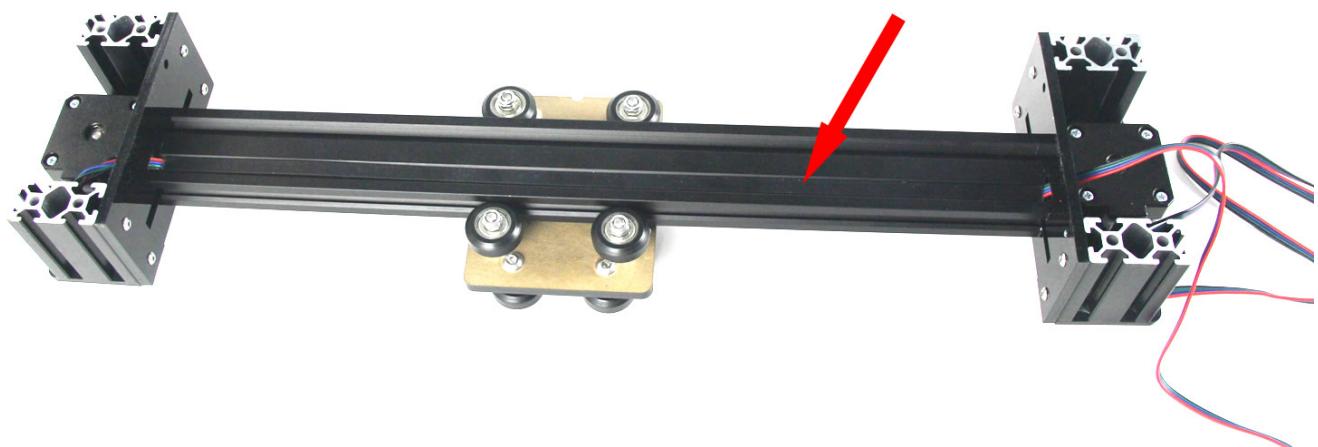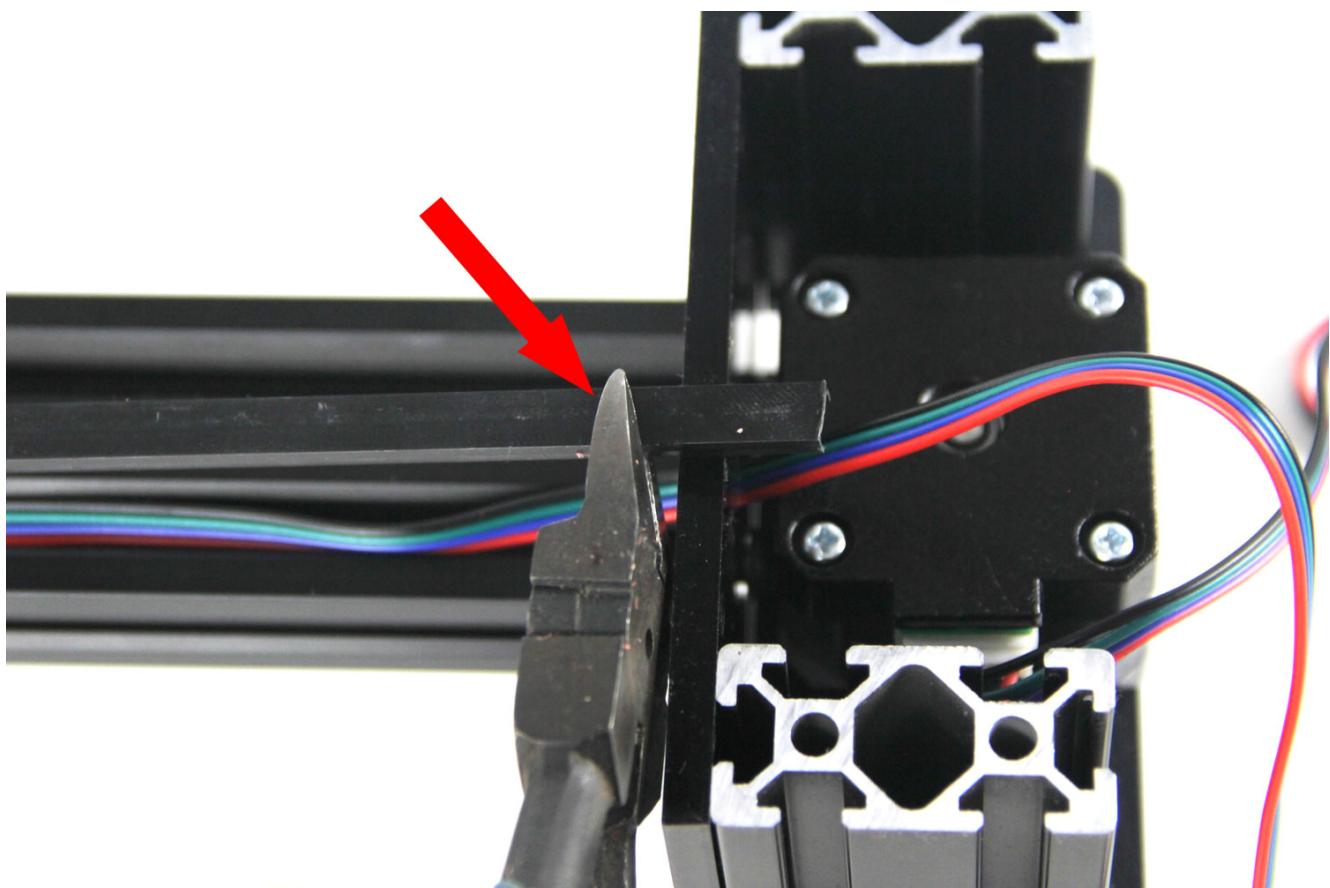
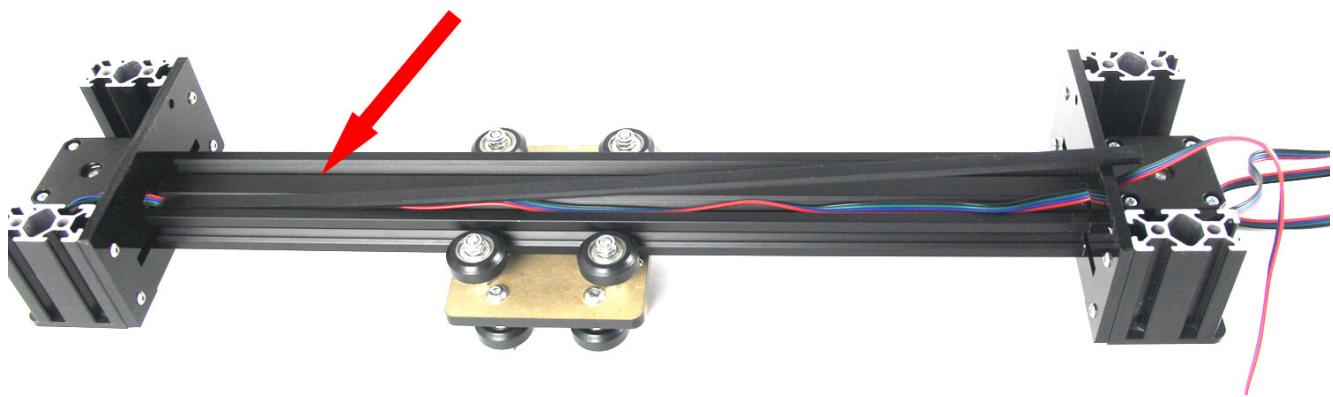




Rotating eccentric nut, Until there is no shaking between the pulleys and aluminum

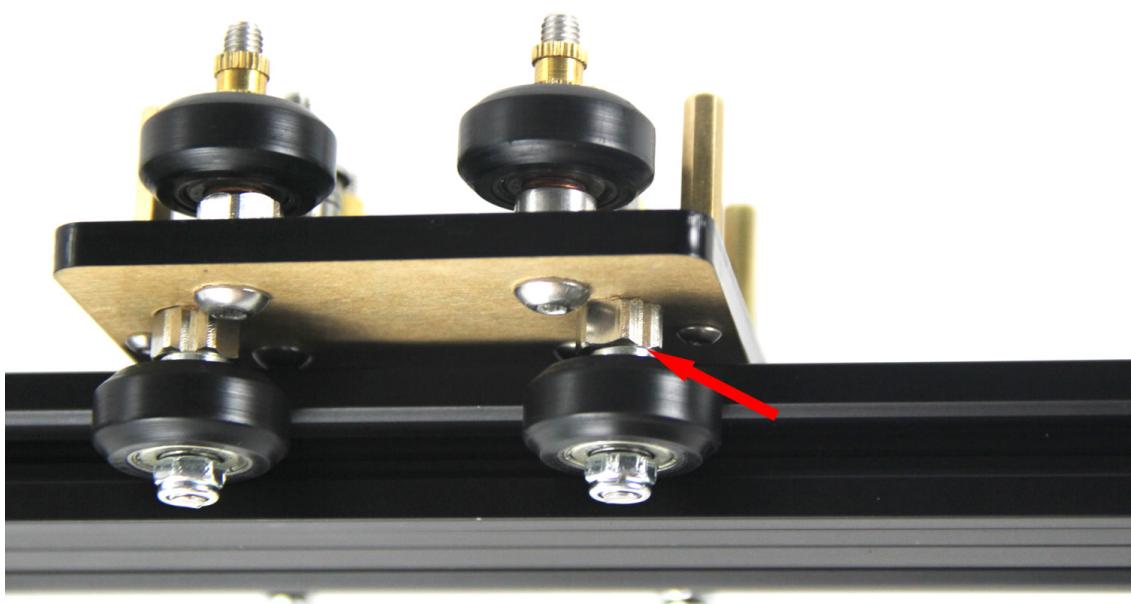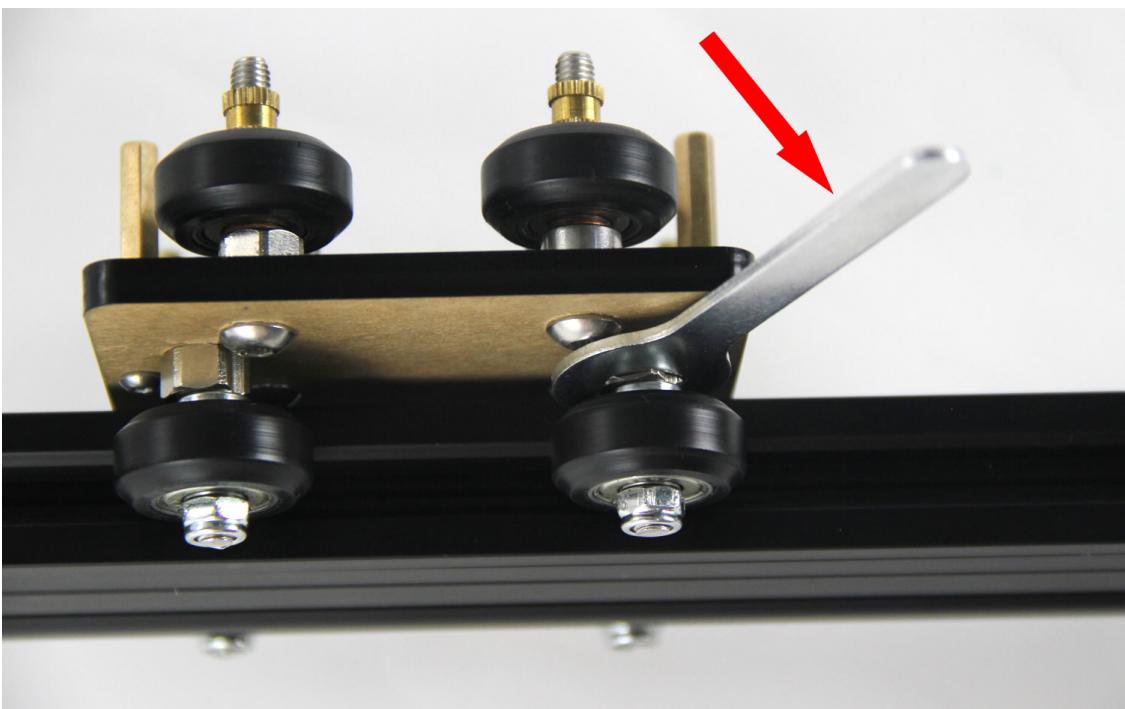

Rotating eccentric nut, Until there is no shaking between the pulleys and aluminum

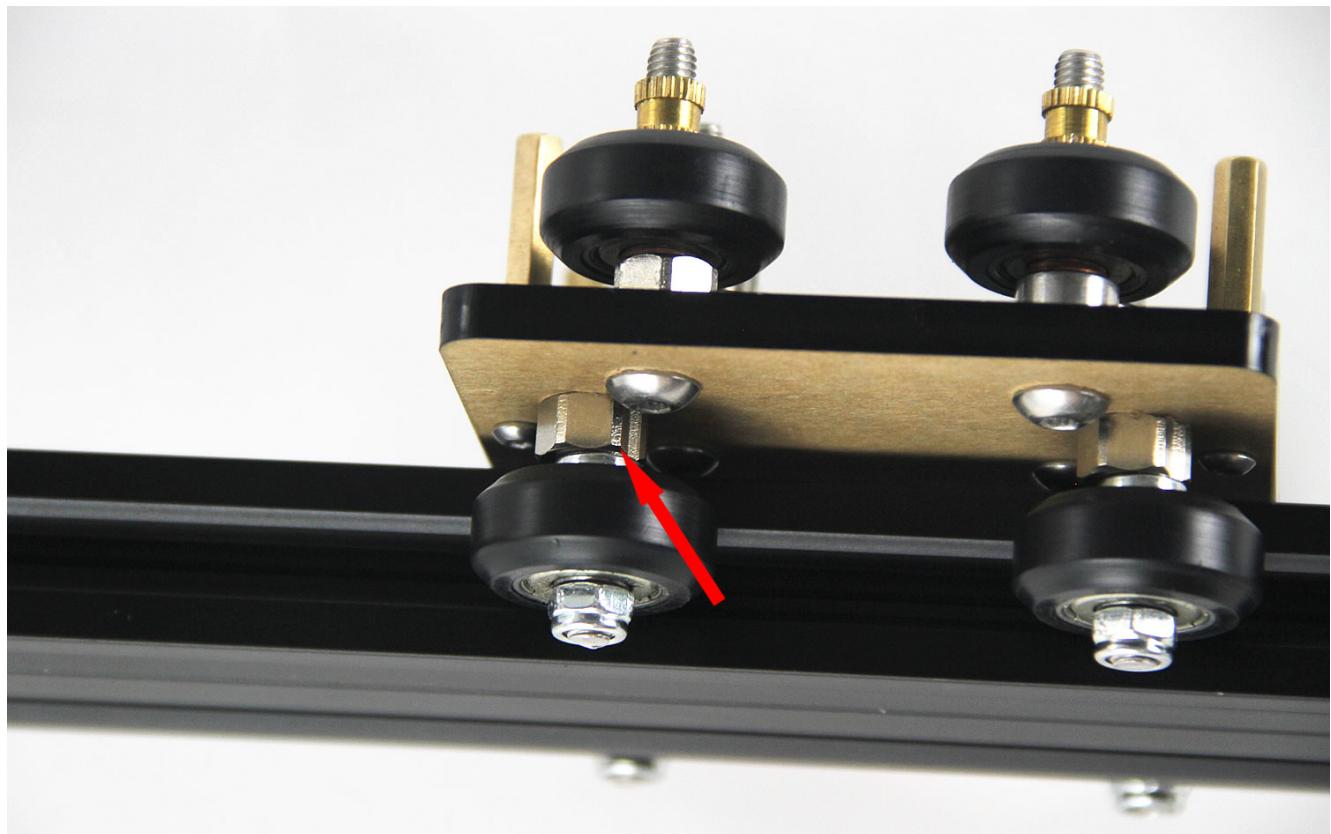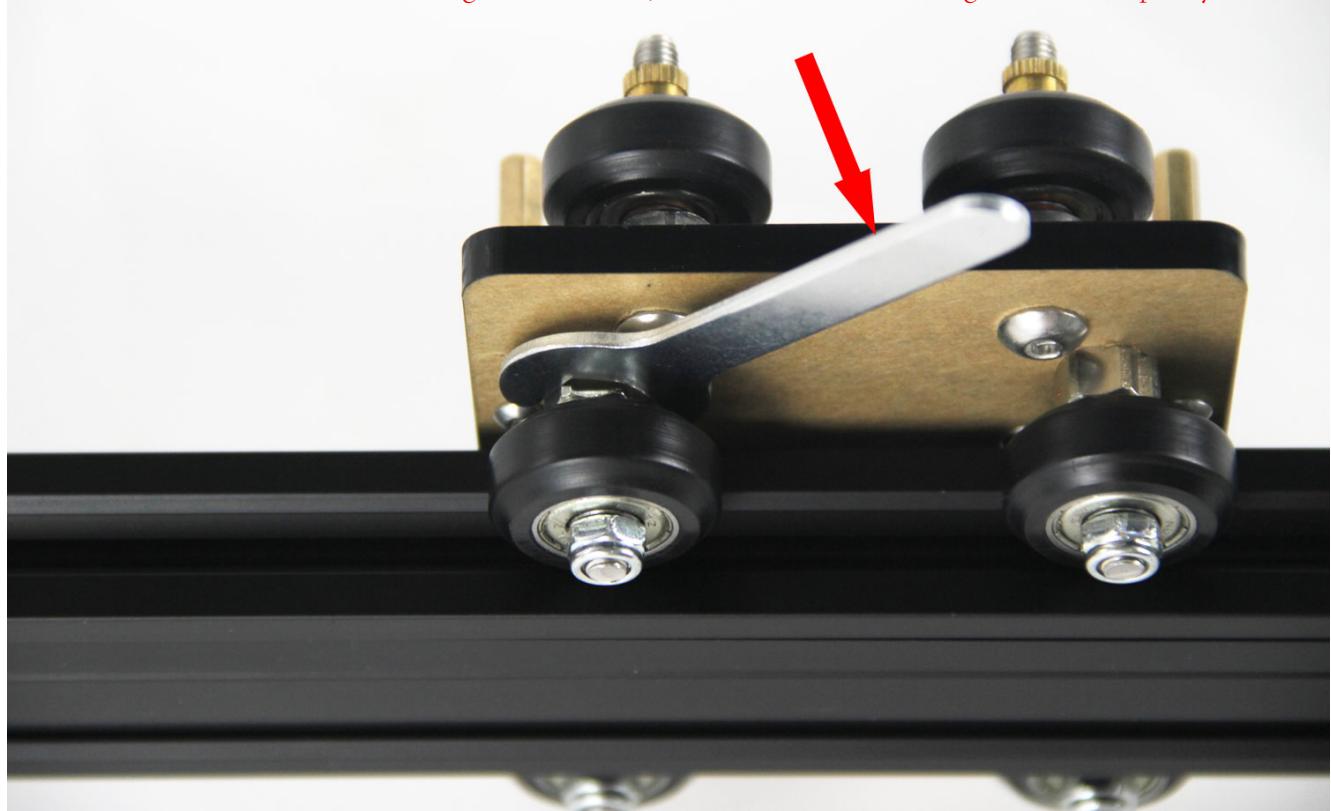



No shaking from left to right, up and down

