基于 WSL2-QT5 配置

前提条件：

Windows 上需要先安装 WSL2，原因是只有 WSL2 才支持图形界面；

1. Windows 安装 MobaXterm

安装终端工具：下载链接

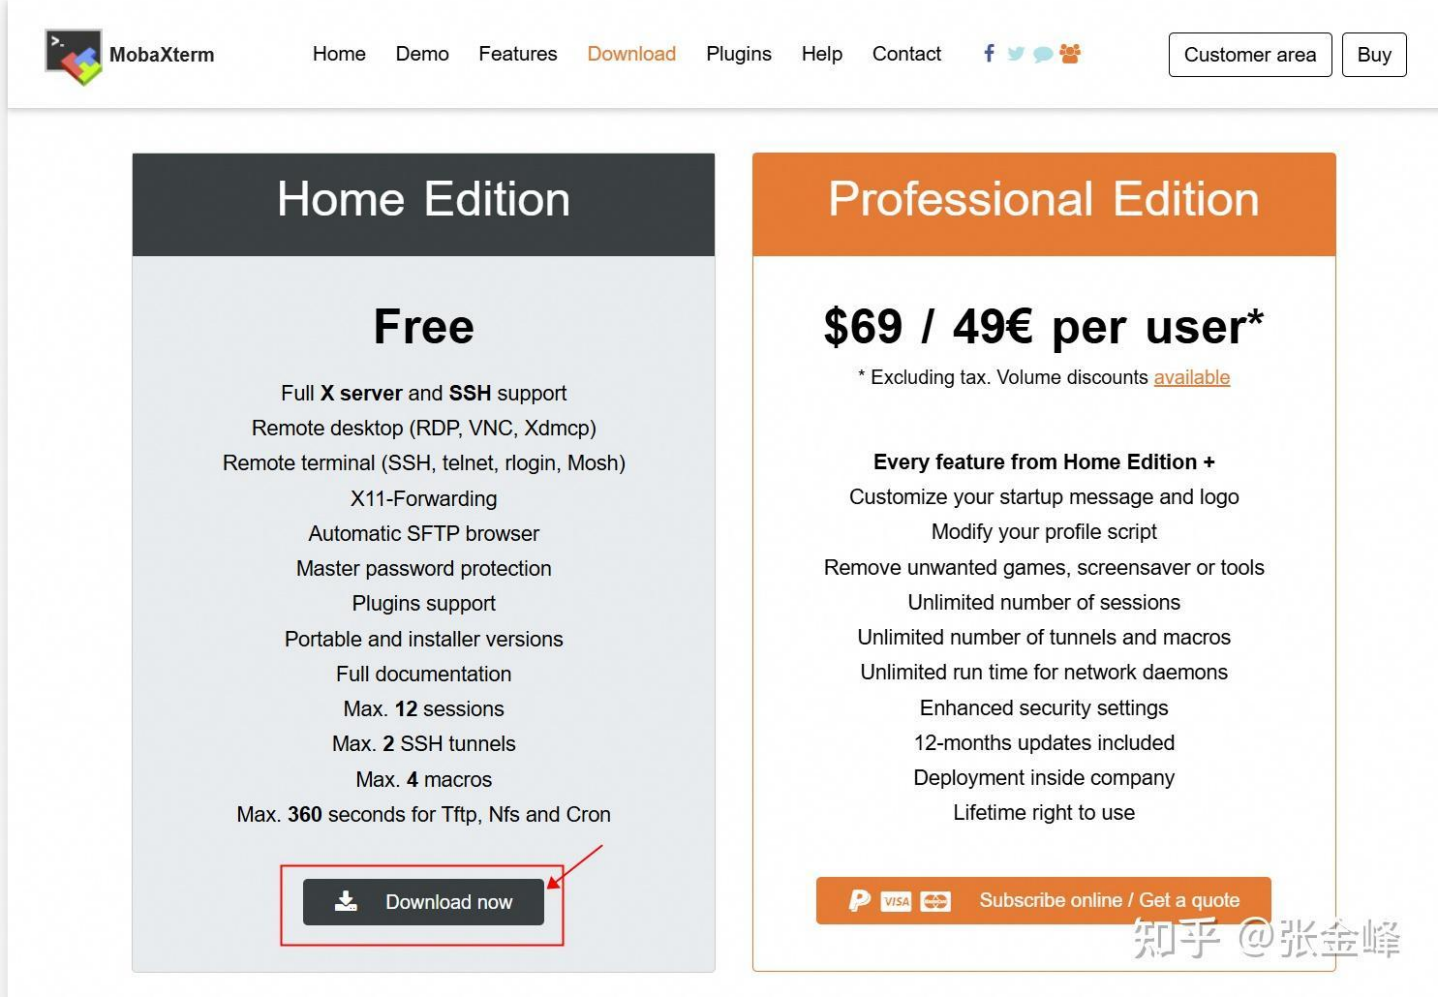

打开 MobaXterm，选择 WSL2 安装的 Ubuntu 20.04，输入用户名

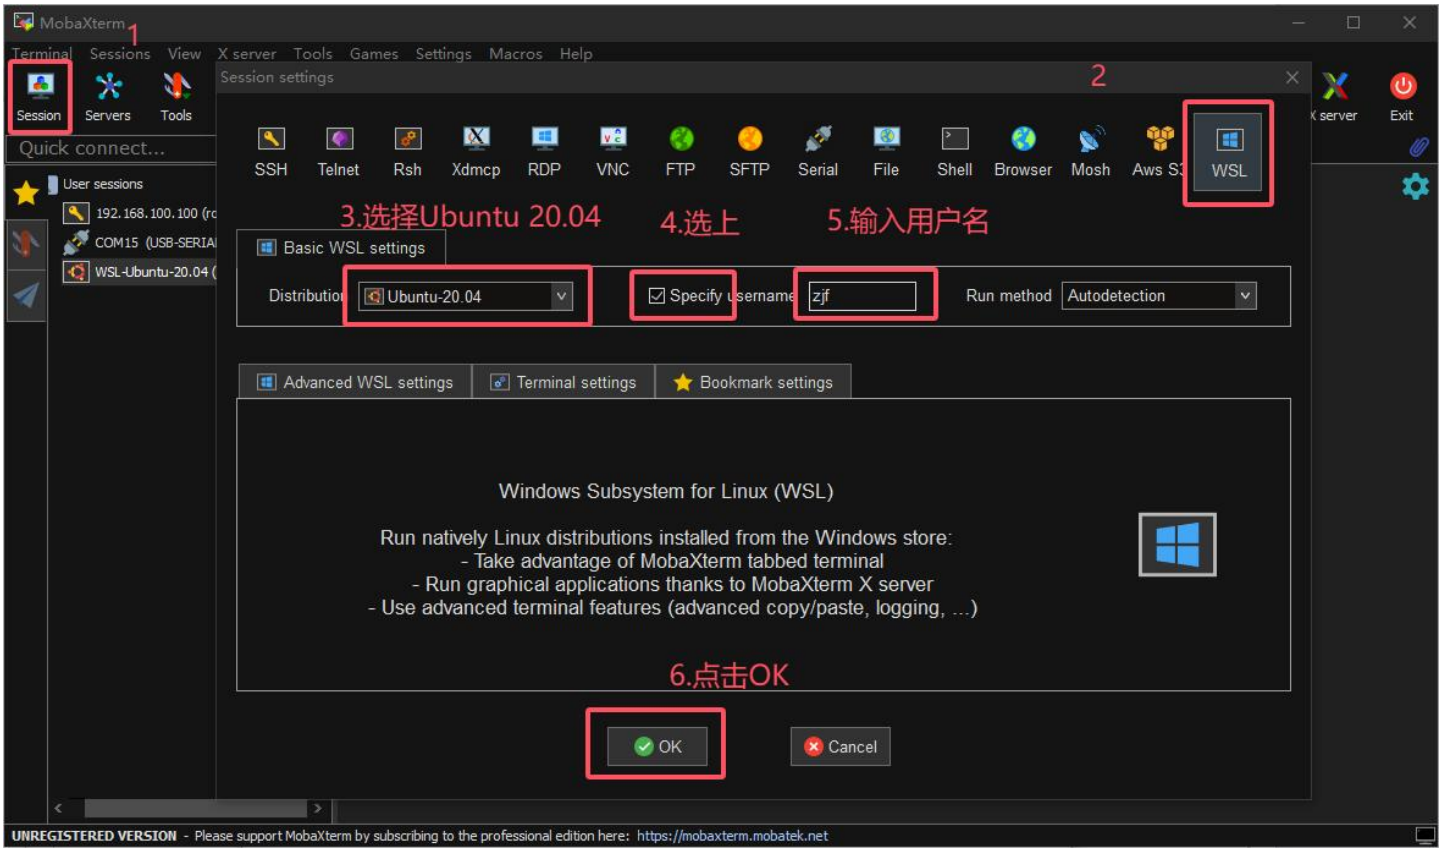

如图表示登录 Ubuntu 20.04 成功

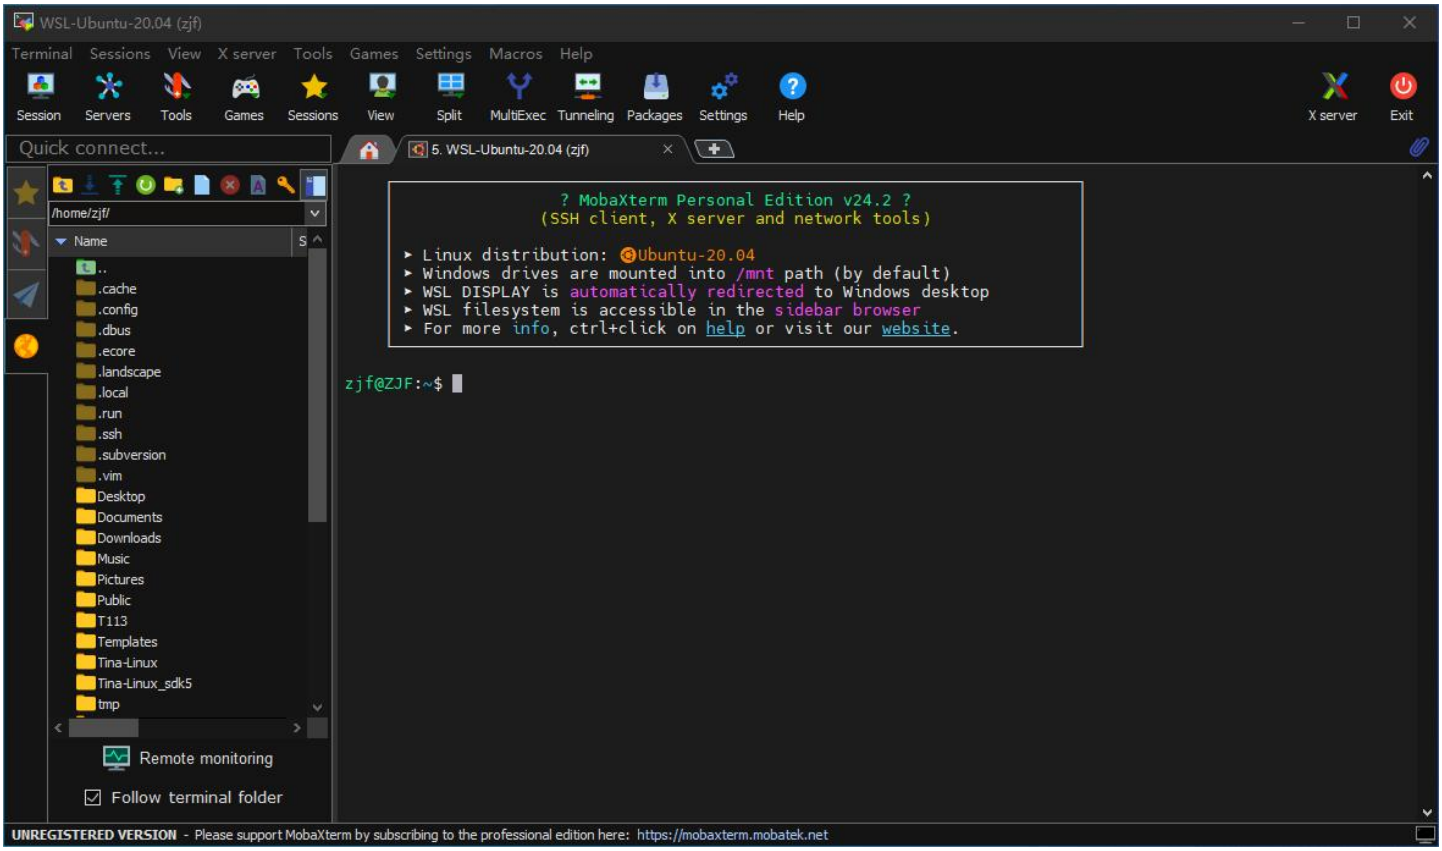

2. Ubuntu 安装 QT

```
# 更新apt库
sudo apt-get update
# 安装QT5
sudo apt-get install cmake qt5-default qtcreator
##如果此步出错，执行sudo apt-get install cmake qt5-default qtcreator --fix-missing
```

3. Ubuntu 运行 QT

```
# 运行qtcreator
qtcreator
```

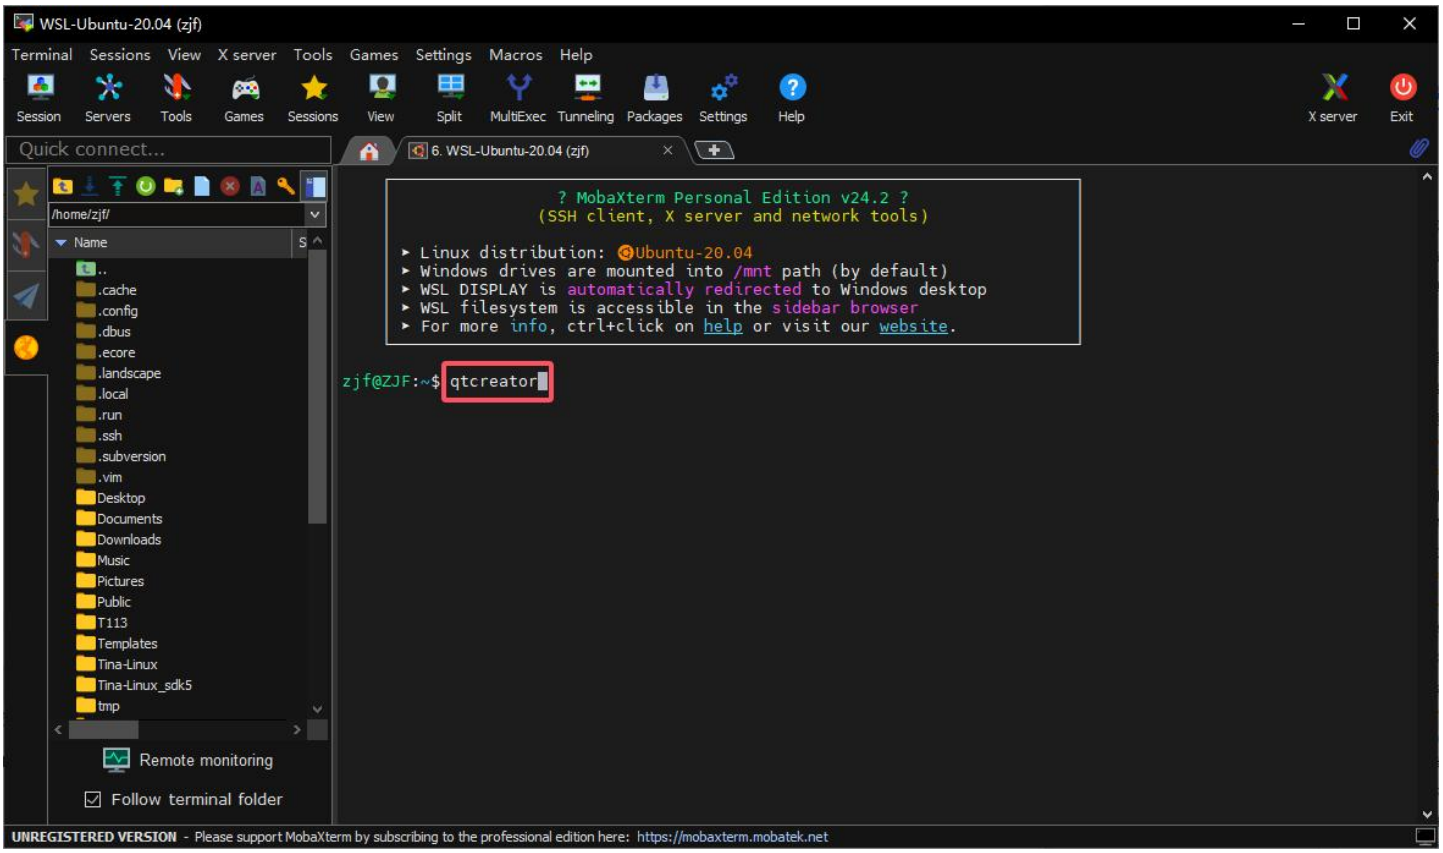

正常会弹出如下 QT 界面

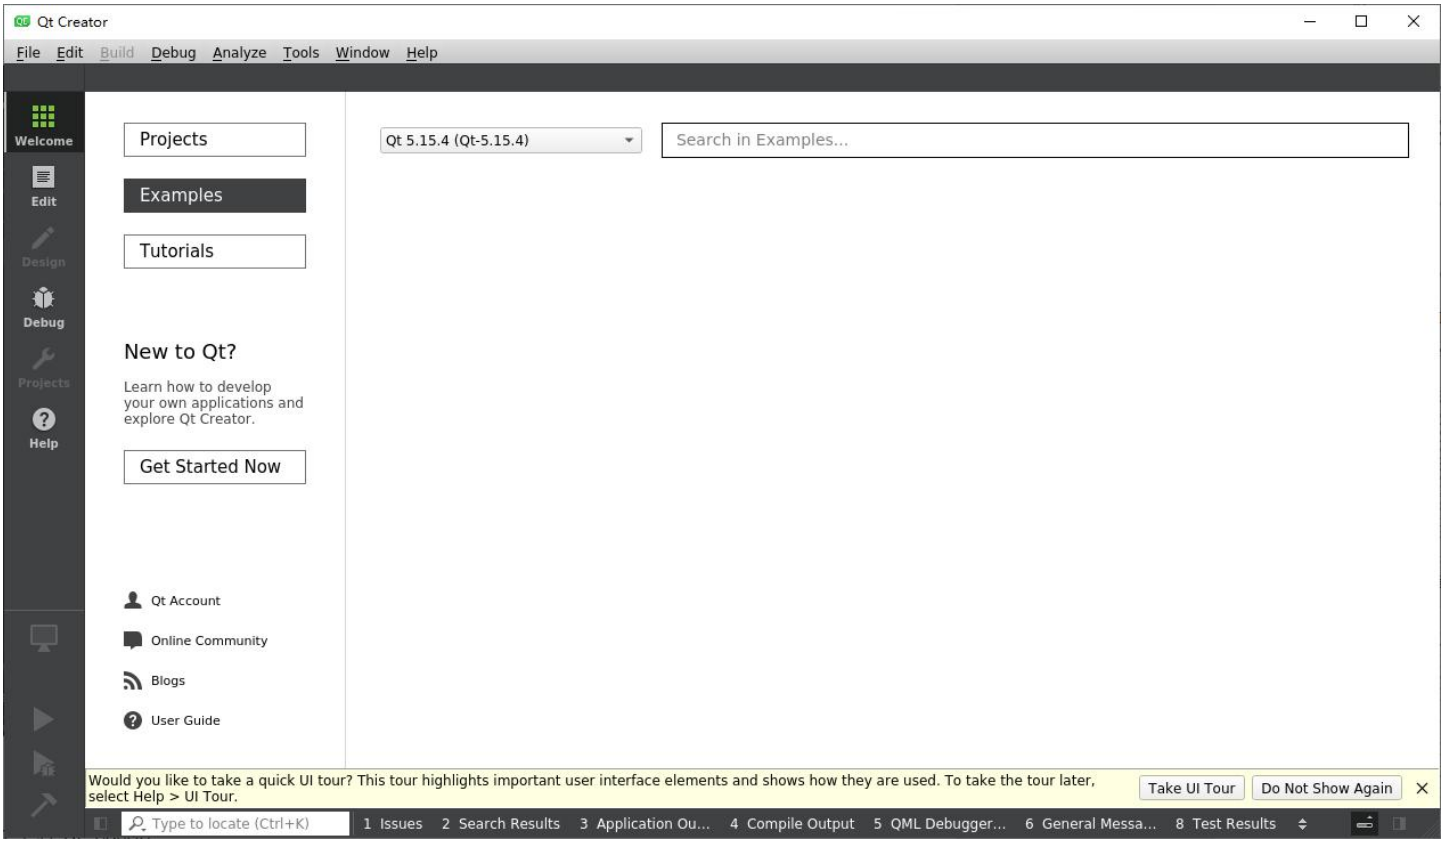

4. QT 配置

打开源码里面的 demo 工程 qt-easing （highlight 部分改为你的用户名）

工程路径：/home/zjf/Tina-Linux/package/gui/qt/qt-easing/src/qt-easing.pro

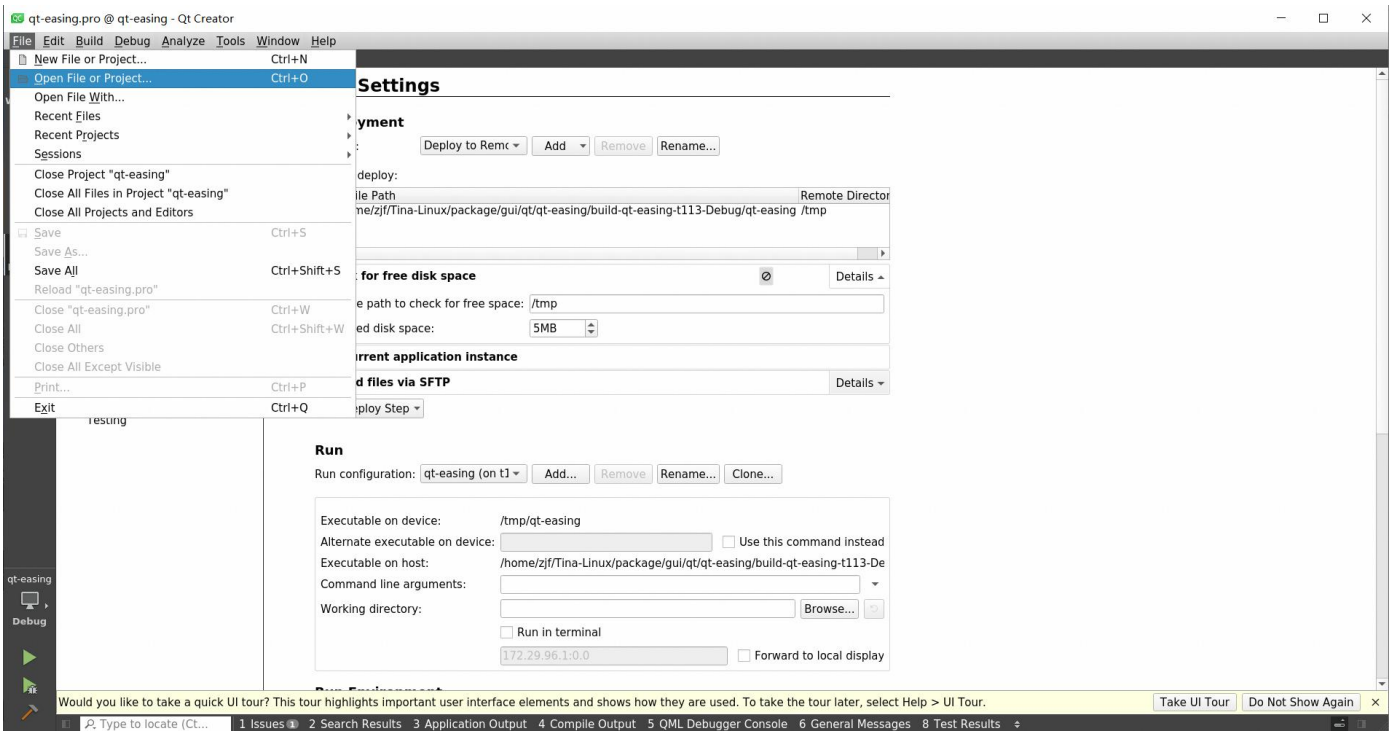

1. 打开进入 kits 配置页面

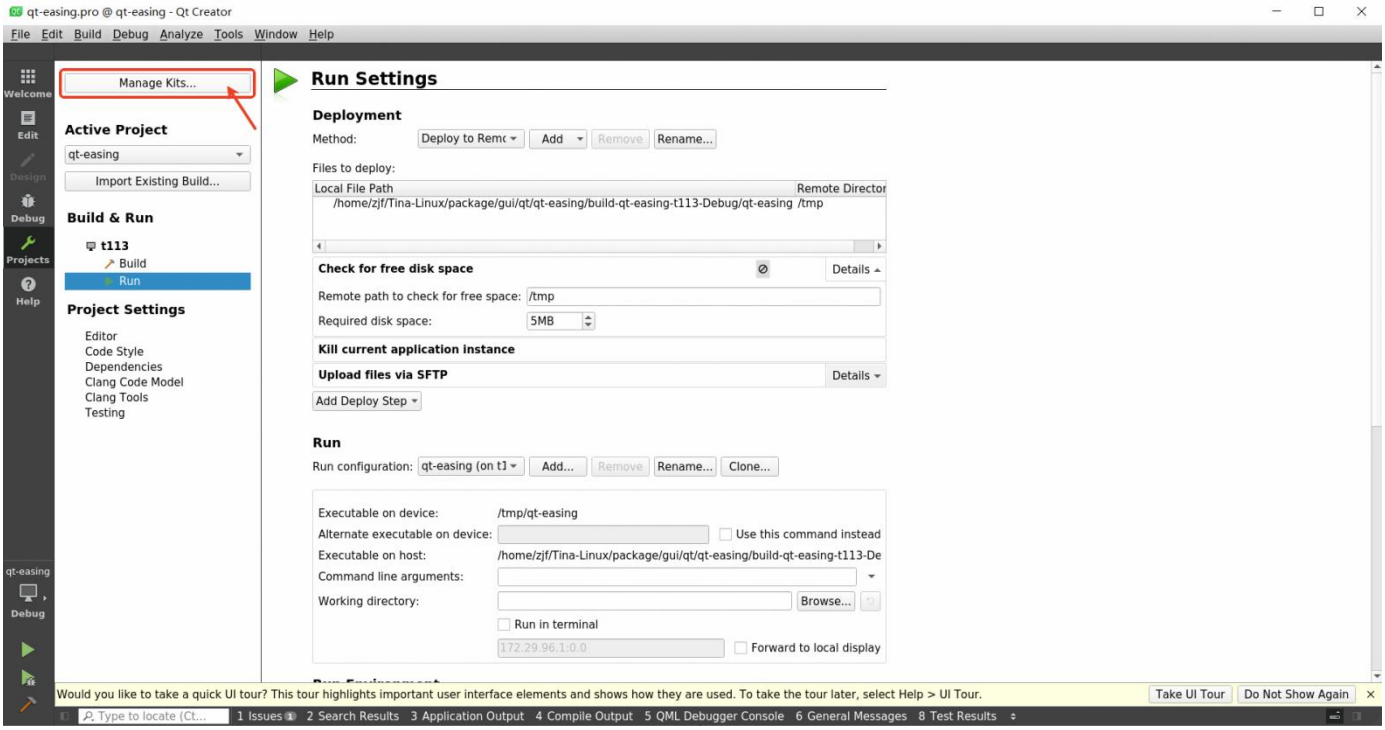

2. GCC/G++配置

编译链路径分别为：（highlight 部分改为你的用户名）

/home/zjf/Tina-Linux/prebuilt/gcc/linux-x86/arm/toolchain-sunxi-musl/toolchain/bin/arm-openwrt-linux-gcc

/home/zjf/Tina-Linux/prebuilt/gcc/linux-x86/arm/toolchain-sunxi-musl/toolchain/bin/arm-openwrt-linux-g++

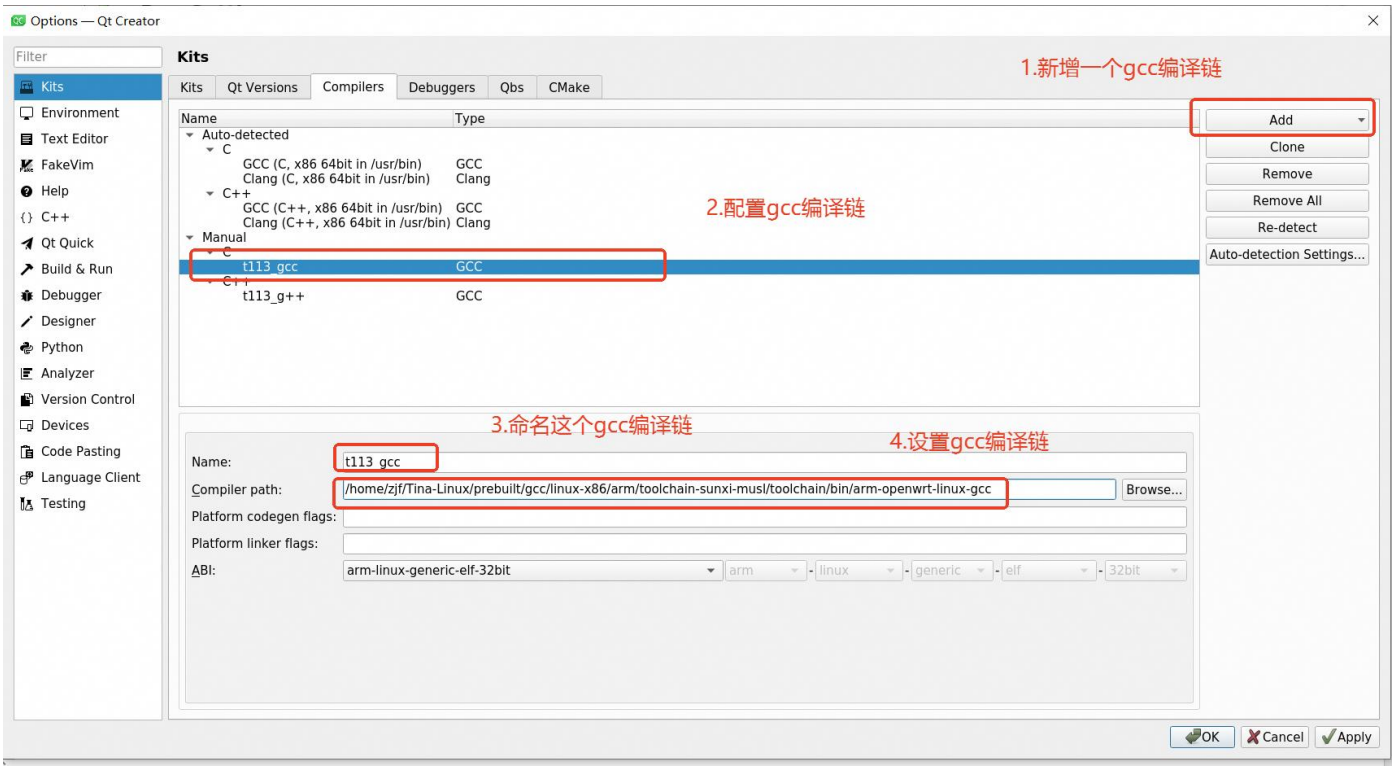

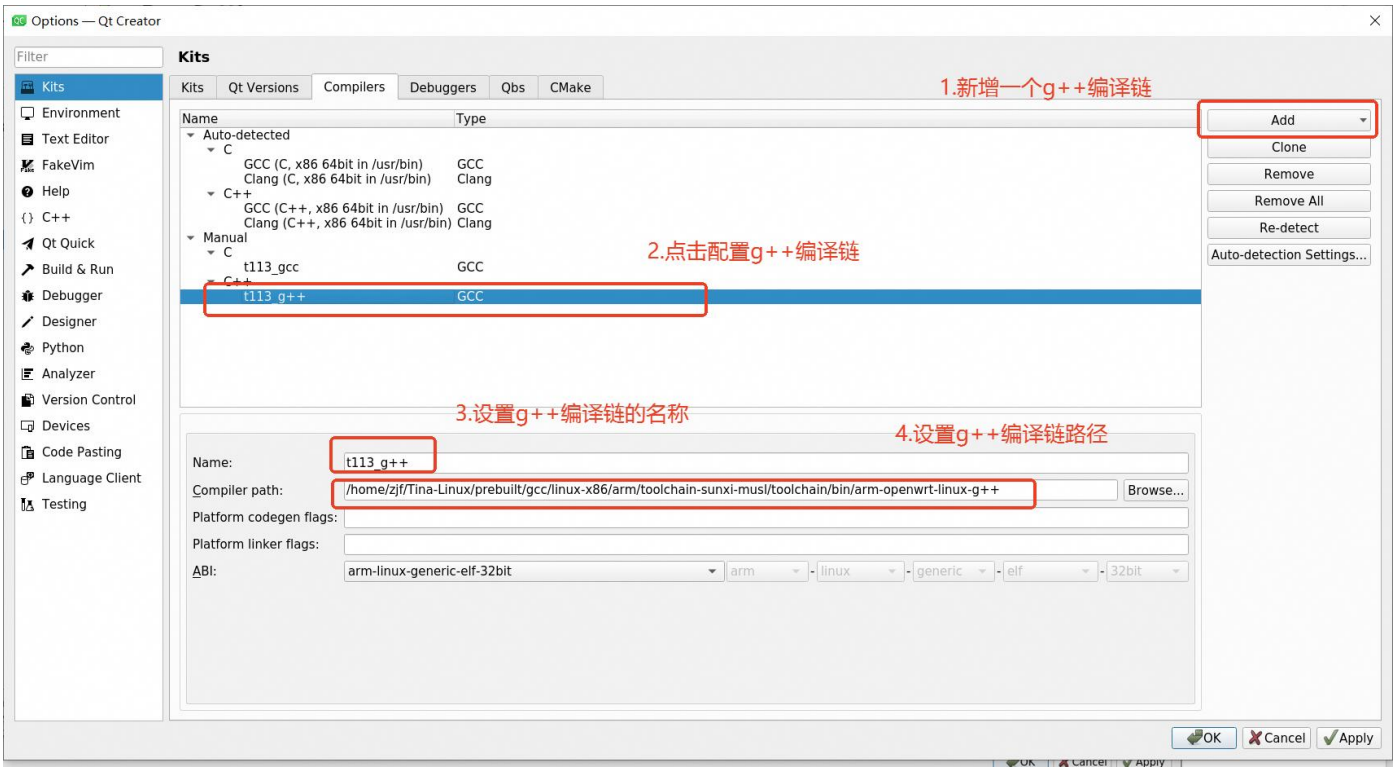

3. Qmake 配置

从网盘下载 SDK_Qt-5.15.4.tar.gz 并放到 D 盘 Tina-Linux 目录下

将 QT SDK 解压到/usr/local/ 目录下

```
# 解压 sdk
cd /usr/local/
sudo tar -xzvf /mnt/d/Tina-Linux/SDK_Qt-5.15.4.tar.gz
```

配置 Qmake: /usr/local/QT-5.15.4/bin/qmake

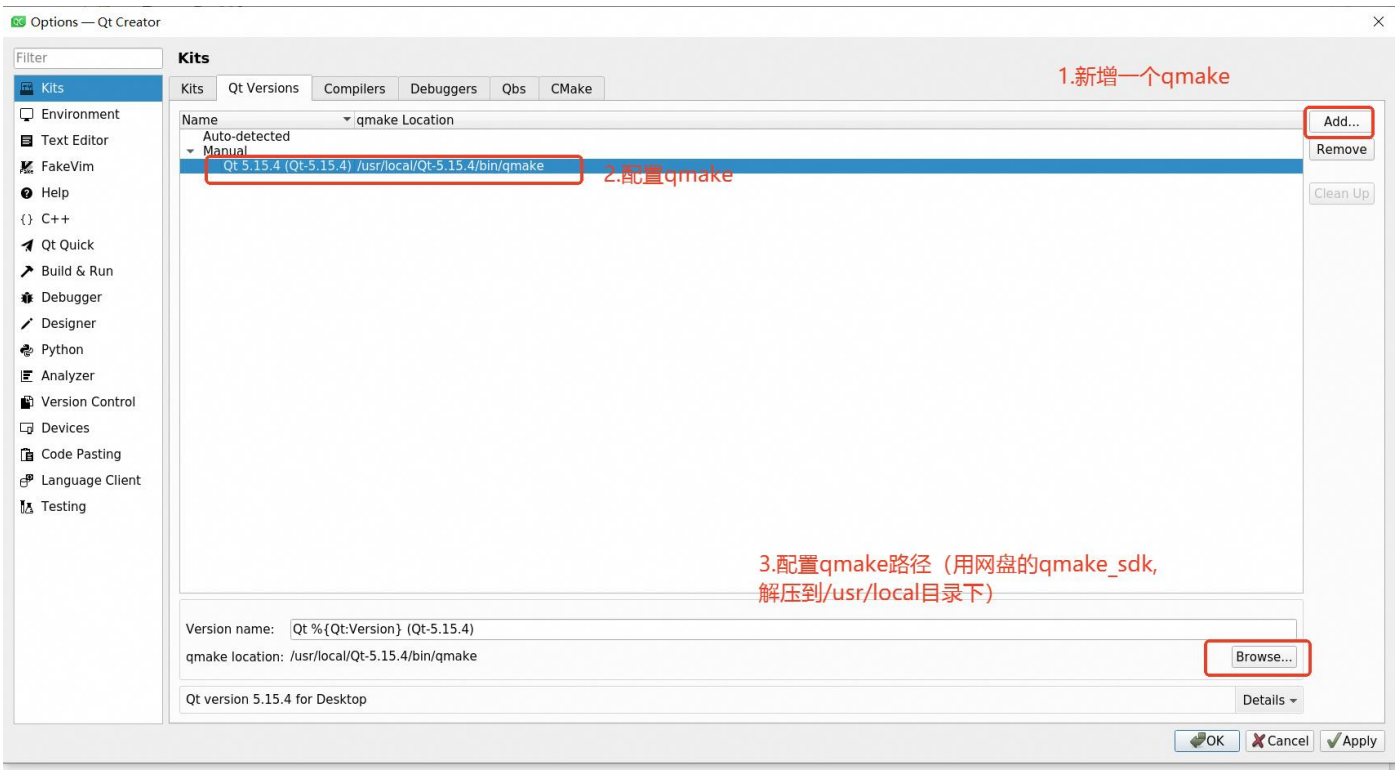

4. 新增目标设备 t113 开发板 device

先测试一下是否可以正常登录开发板：ssh root@192.168.100.100 (这里填开发板的 ip 地址),登录密码 tina

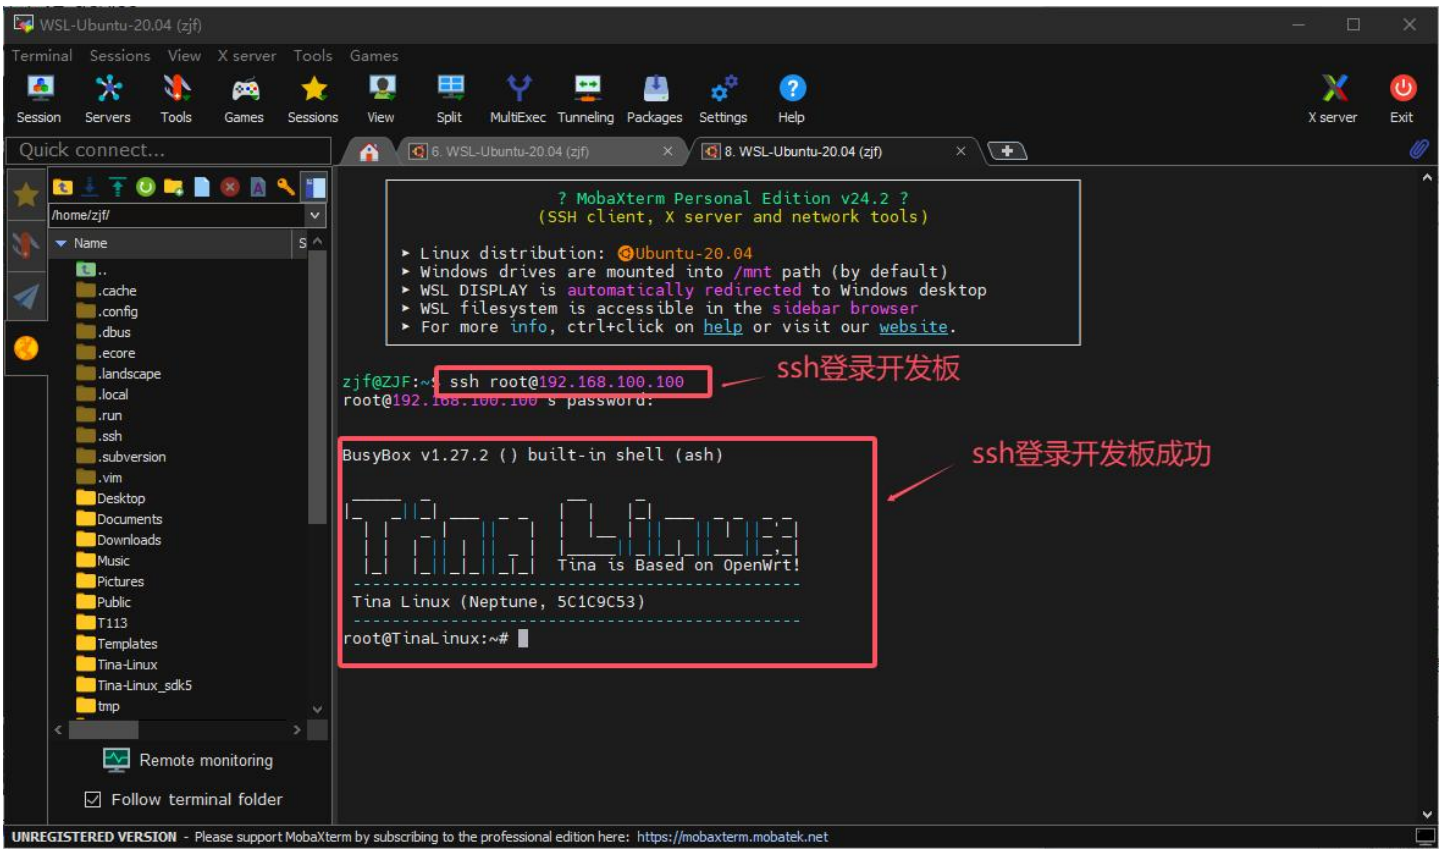

继续配置 device，方便一键下载

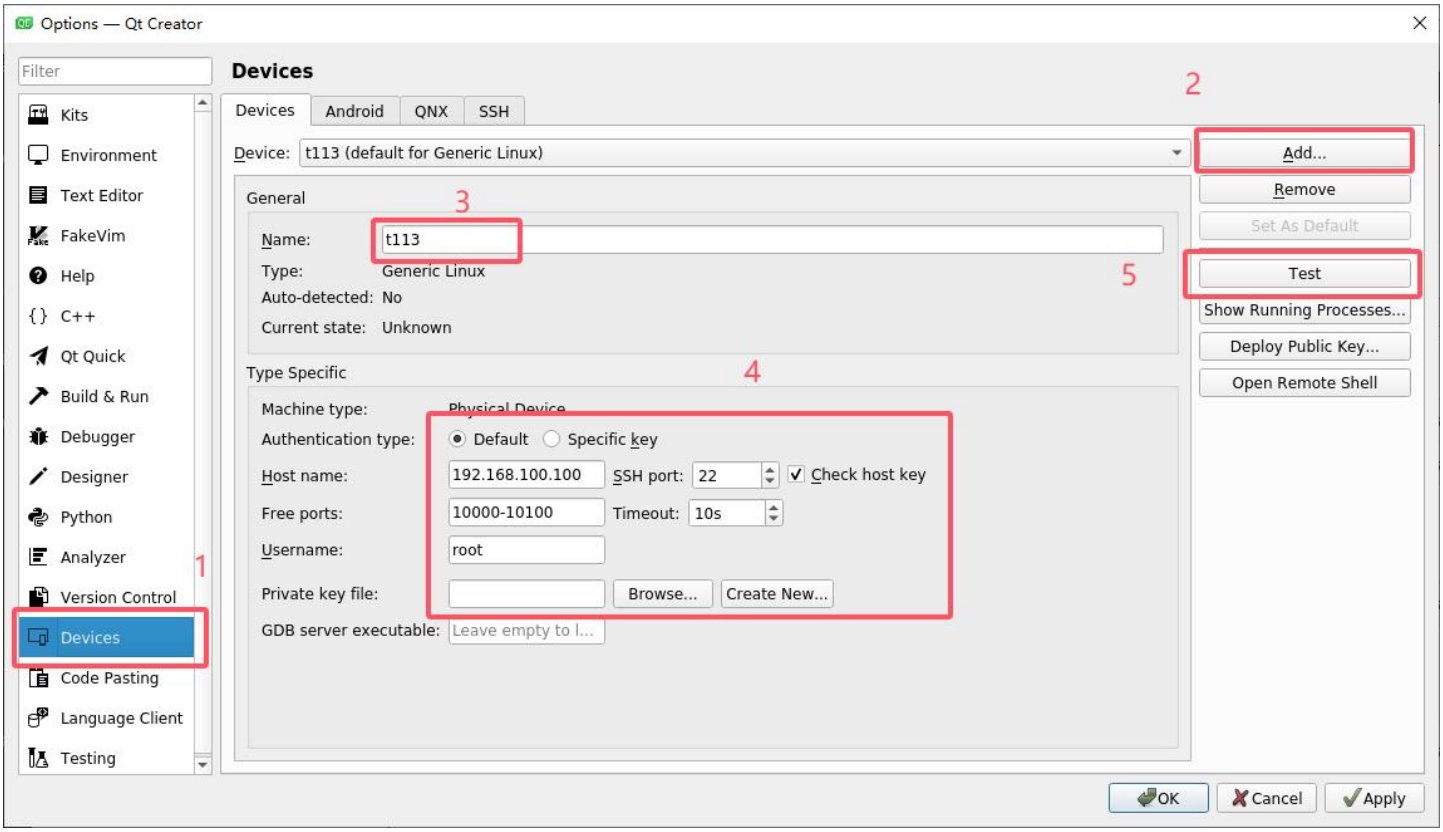

Test 一下看是否可以正常连接开发板，密码是 tina

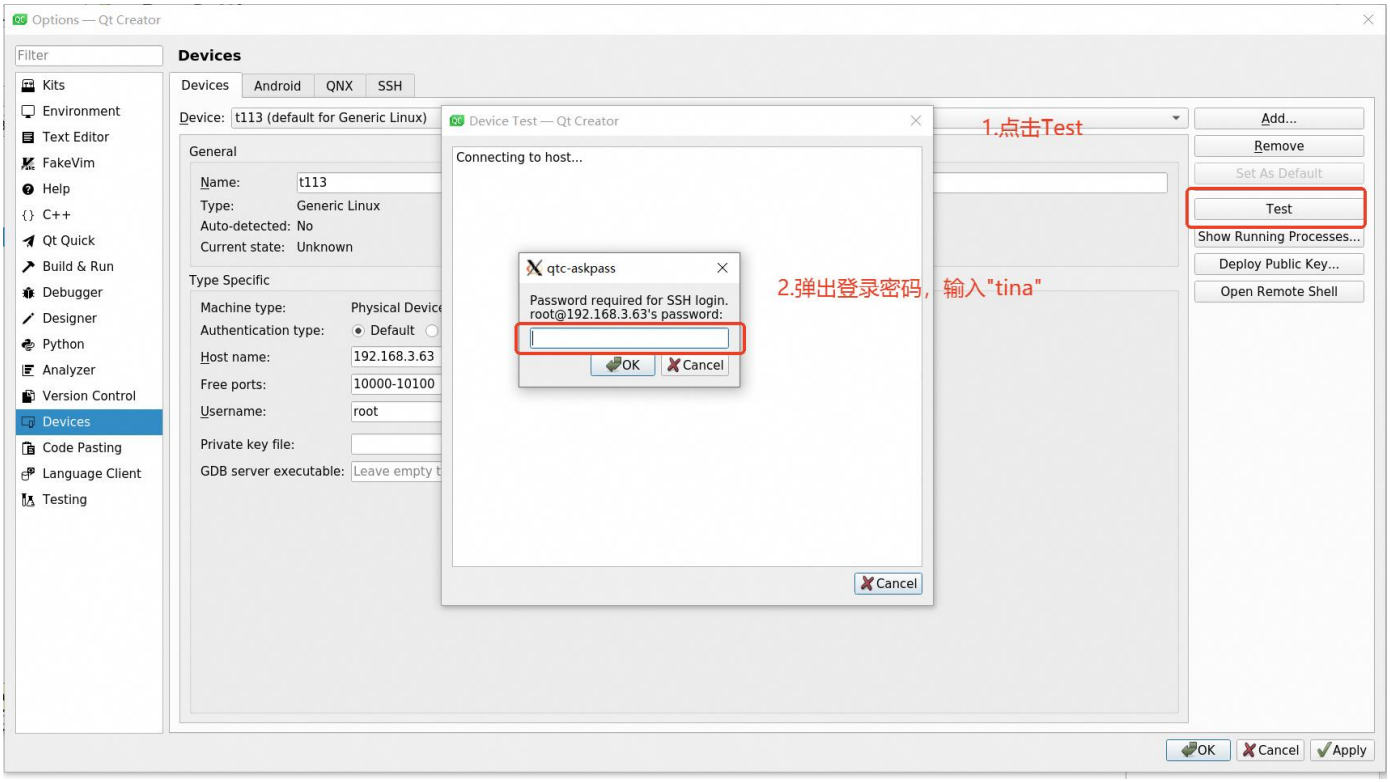

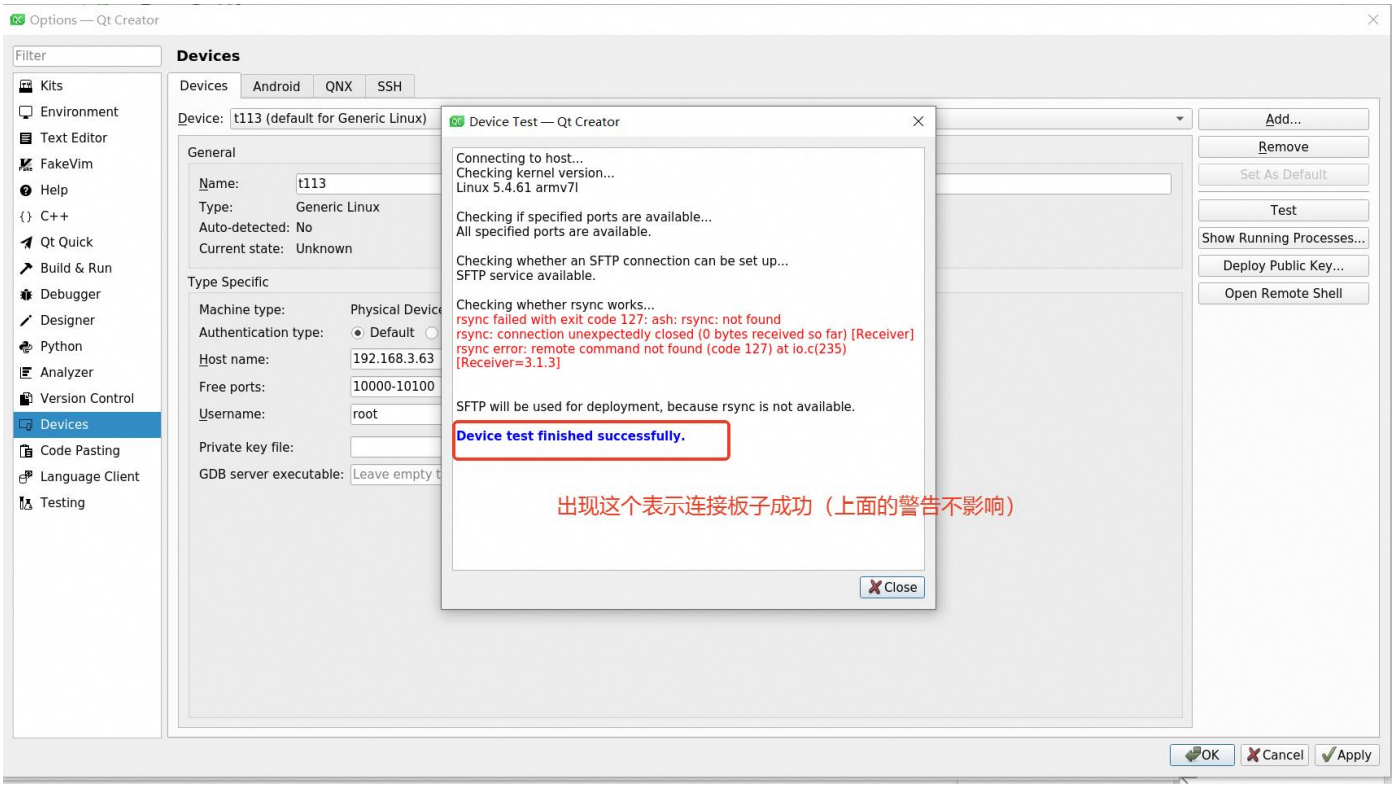

5. 再进入 kits 配置

6. 设置编译的环境变量

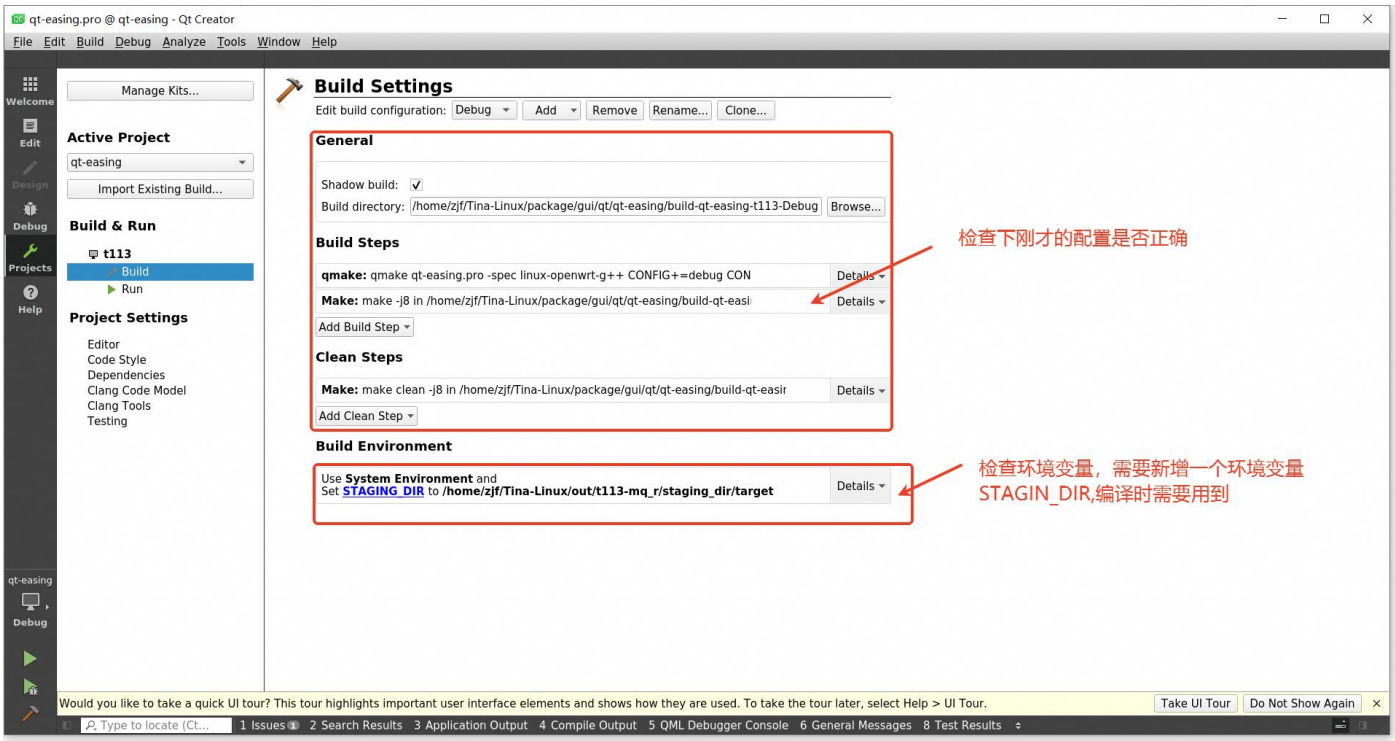

设置环境变量：STAGING_DIR=/home/zjf/Tina-Linux/out/t113-mq_r/staging_dir/target （黄色高亮改成你用户名）

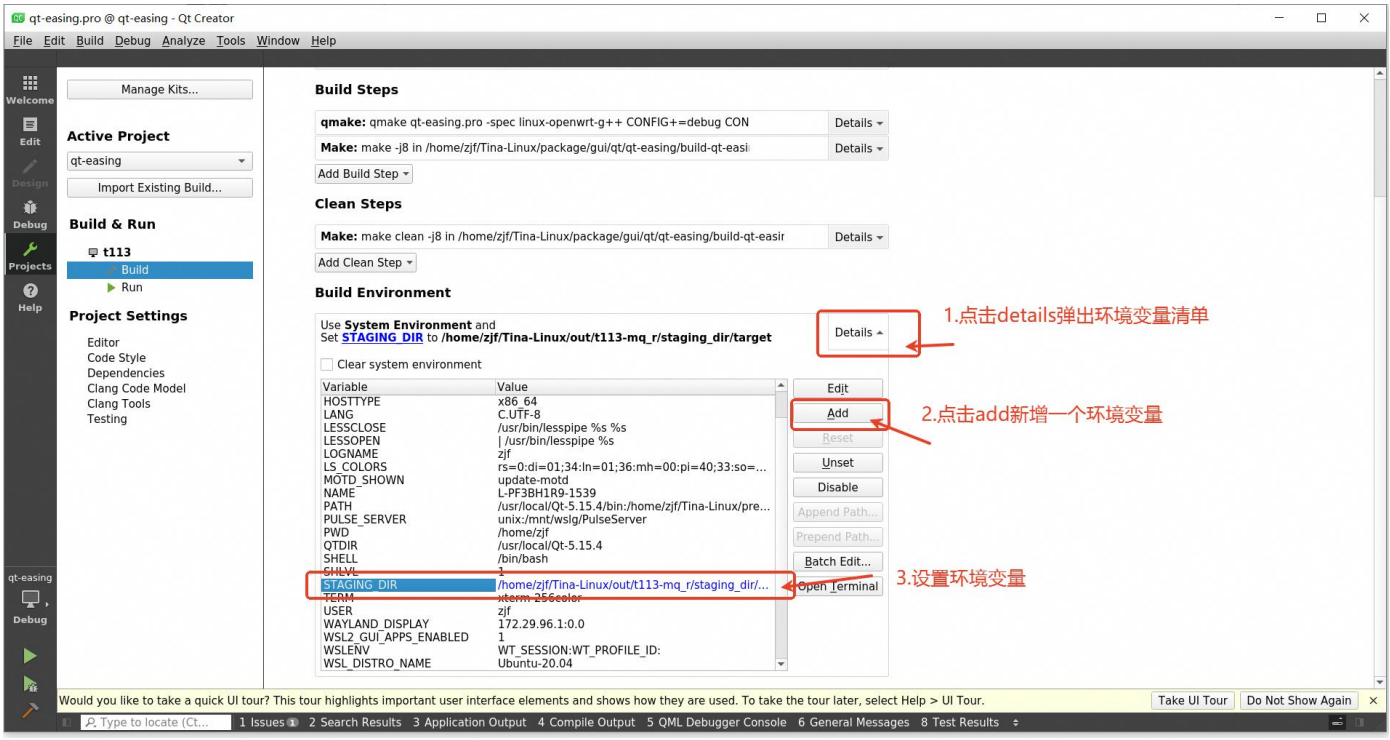

7. 设置程序推送到开发板的路径

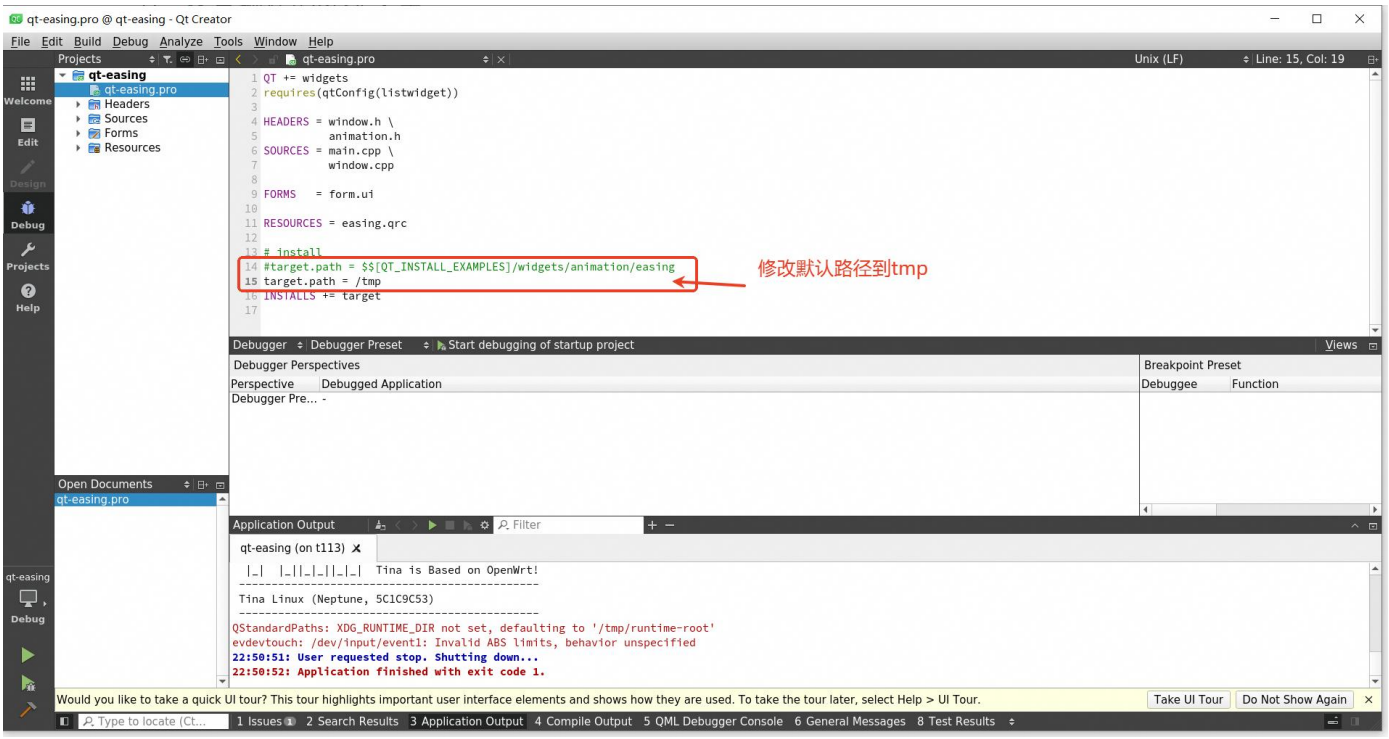

8. 设置运行时的配置

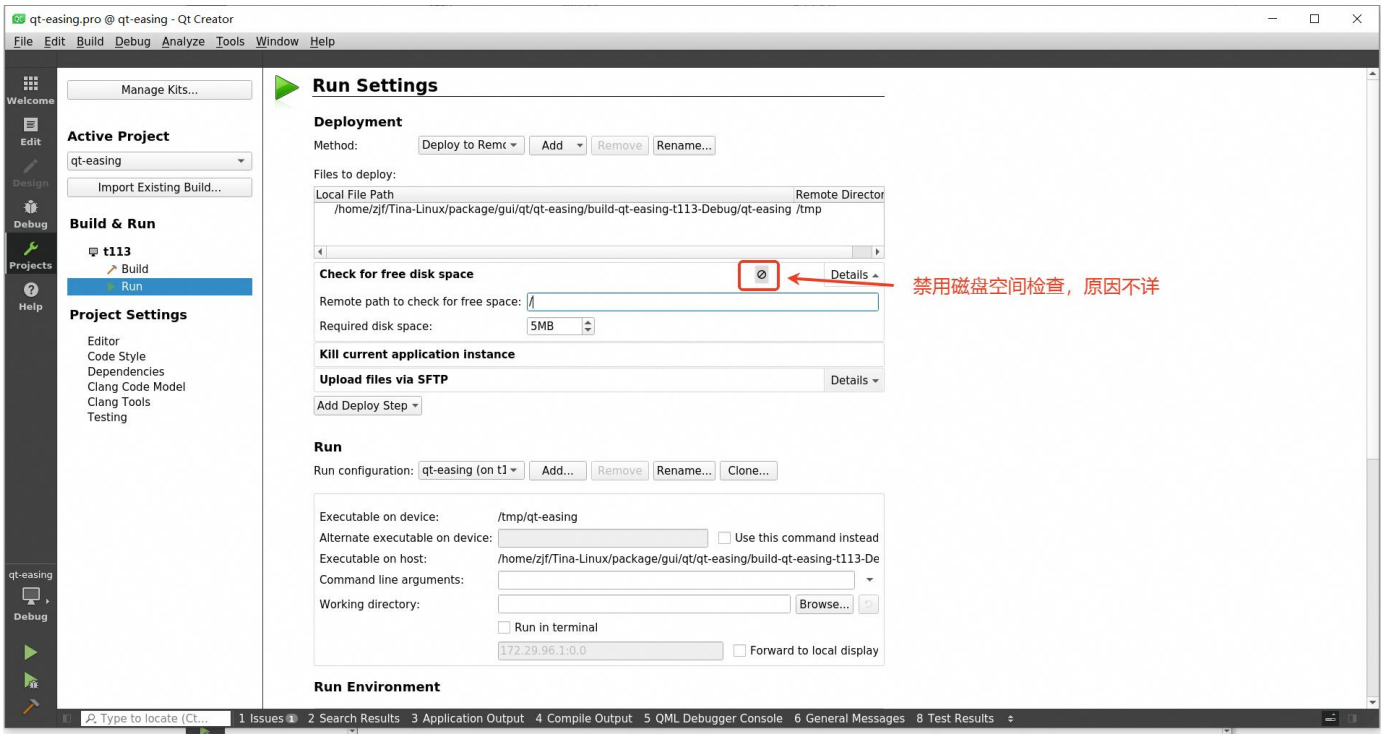

9. 运行一下看看效果

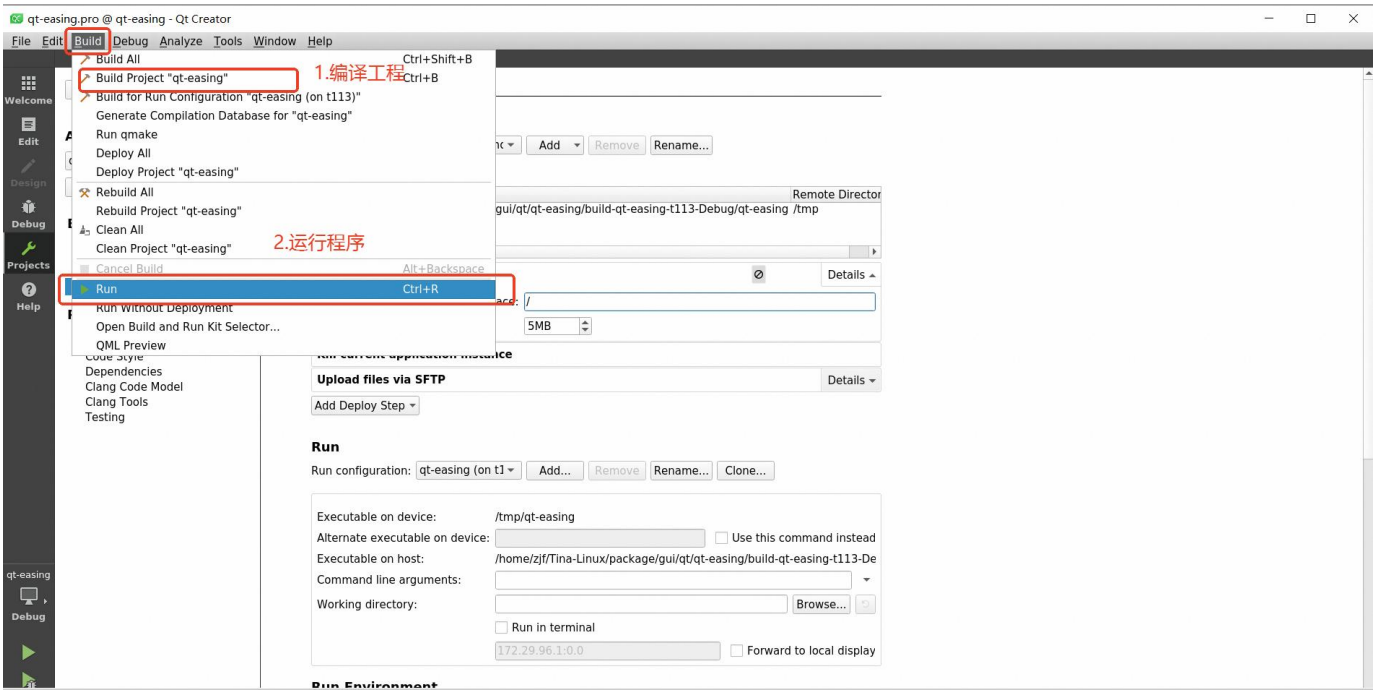
qt-easing.pro @ qt-easing - Qt Creator
File Edit Build Debug Analyze Tools Window Help
Build All Ctrl+Shift+B
Build Project "qt-easing" Ctrl+B
1.编译工程
Build for Run Configuration "qt-easing (on t113)"
Generate Compilation Database for "qt-easing"
Run qmake
Deploy All
Deploy Project "qt-easing"
Rebuild All
Rebuild Project "qt-easing"
Clean All
Clean Project "qt-easing"
2.运行程序
Cancel Build Alt+Backspace
Run Ctrl+R
Run Without Deployment
Open Build and Run Kit Selector...
QML Preview
Dependencies
Clang Code Model
Clang Tools
Testing
Upload files via SFTP
Add Deploy Step
Run
Run configuration: qt-easing (on t1
Executable on device: /tmp/qt-easing
Alternate executable on device:
Use this command instead
Executable on host: /home/zjf/Tina-Linux/package/gui/qt/qt-easing/build-qt-easing-t113-De
Command line arguments:
Working directory:
Run in terminal
Forward to local display

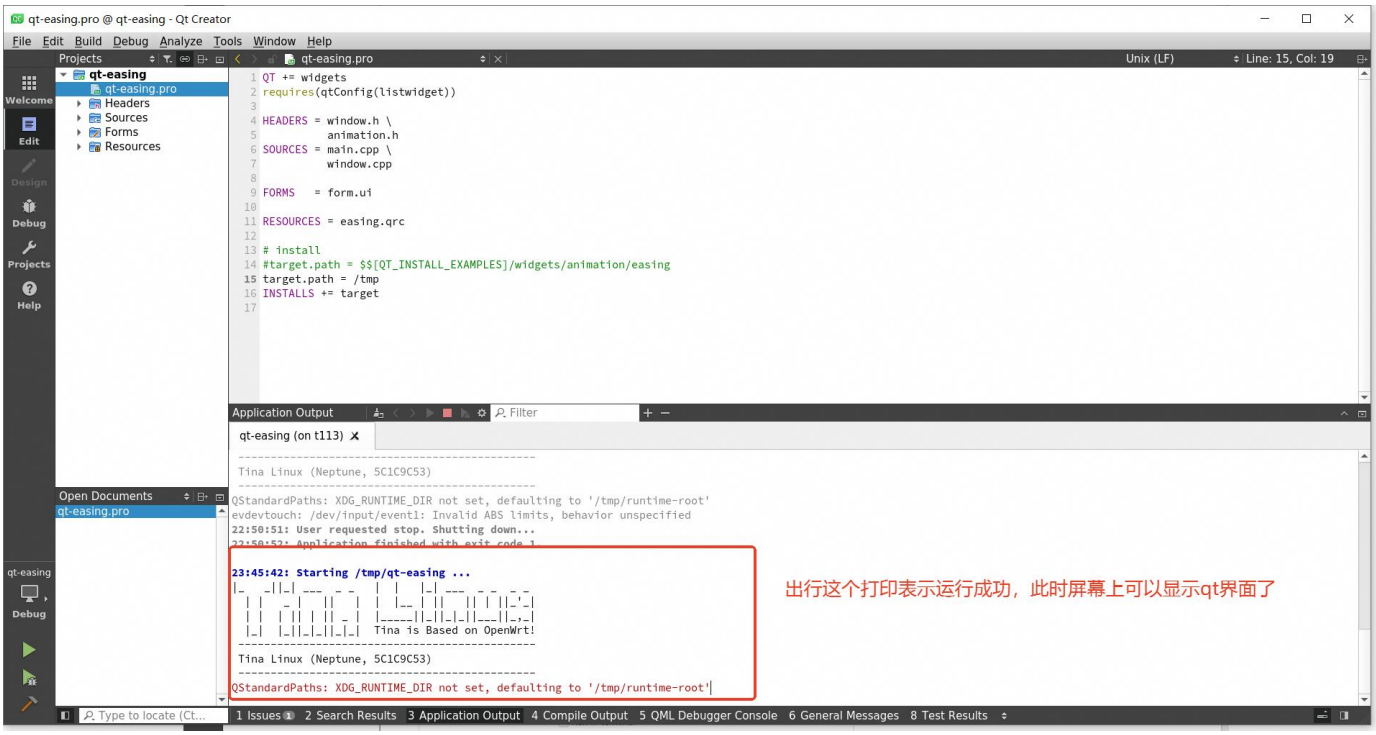
qt-easing.pro @ qt-easing - Qt Creator
File Edit Build Debug Analyze Tools Window Help
qt-easing
qt-easing.pro
Headers
Sources
Forms
Resources
QT += widgets
requires(qtConfig(listwidget))
HEADERS = window.h \
animation.h
SOURCES = main.cpp \
window.cpp
FORMS = form.ui
RESOURCES = easing.qrc
# install
#target.path = $$[QT_INSTALL_EXAMPLES]/widgets/animation/easing
target.path = /tmp
INSTALLS += target
Application Output
qt-easing (on t113)
Tina Linux (Neptune, 5C1C9C53)
QStandardPaths: XDG_RUNTIME_DIR not set, defaulting to '/tmp/runtime-root'
evdevtouch: /dev/input/event1: Invalid ABS limits, behavior unspecified
22:50:51: User requested stop. Shutting down...
23:45:42: Starting /tmp/qt-easing ...
Tina is Based on OpenWrt!
Tina Linux (Neptune, 5C1C9C53)
QStandardPaths: XDG_RUNTIME_DIR not set, defaulting to '/tmp/runtime-root'
出行这个打印表示运行成功，此时屏幕上可以显示qt界面了

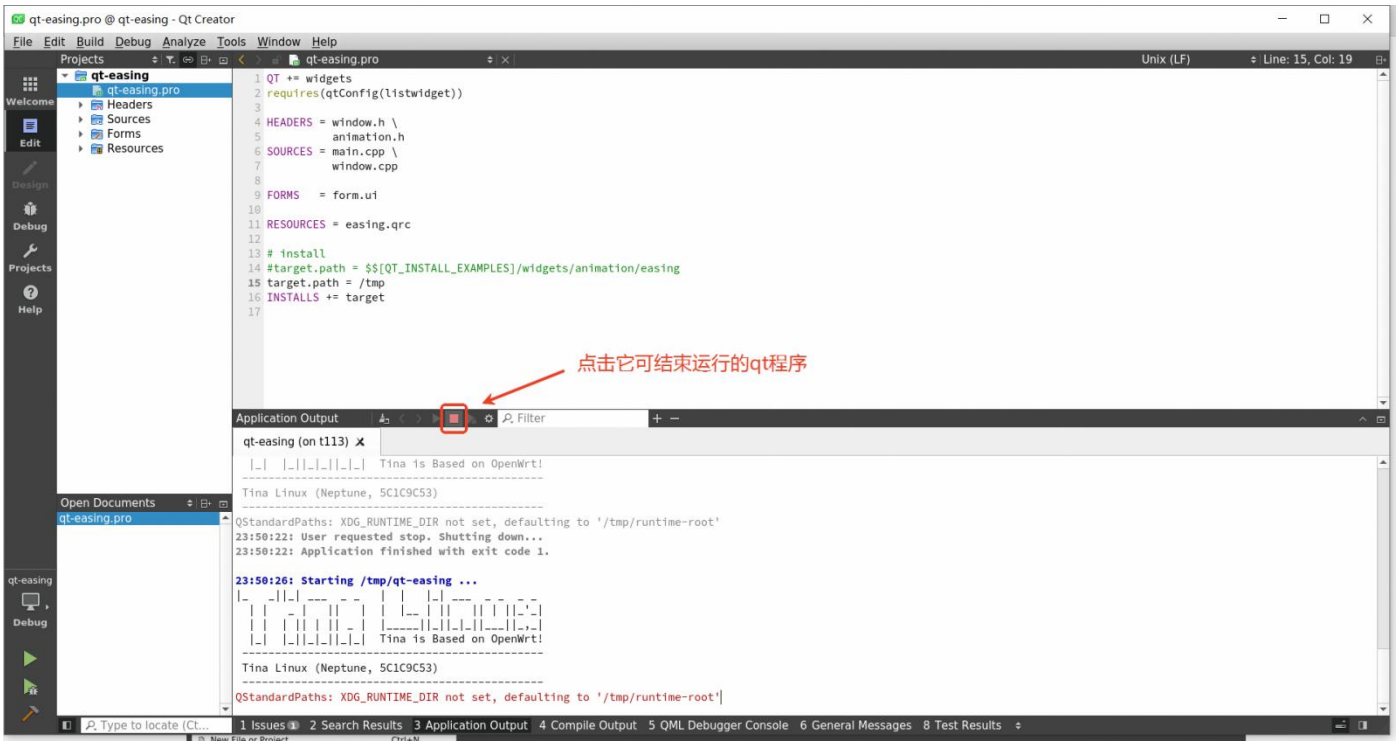

10. 完结，开始你的 qt 之旅吧