
Flashing and Running an Image on the 8155P

Qualcomm Snapdragon 8155P Board


This is a top view of the Qualcomm Snapdragon 8155P board.

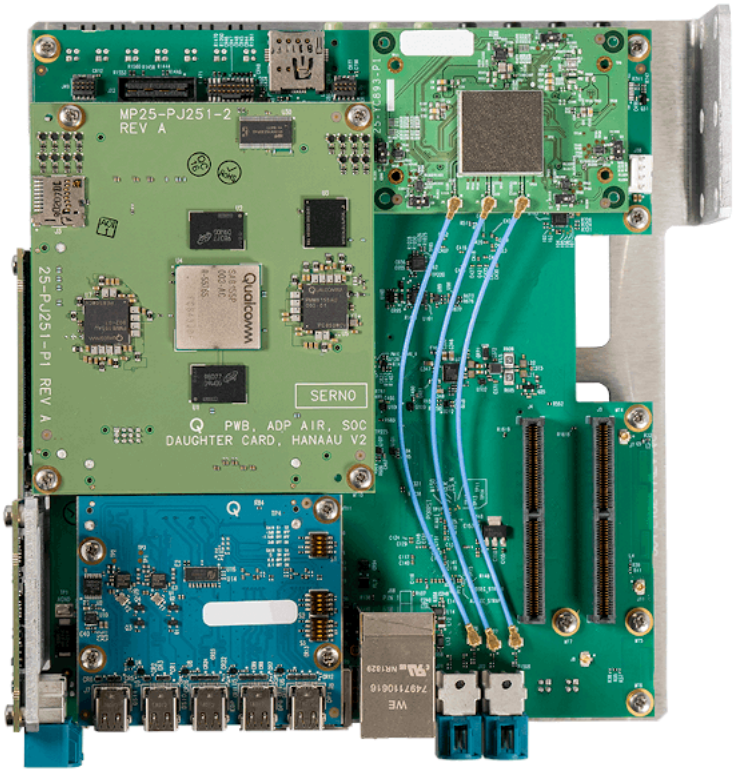


Set up the wiring

Several cables between the PC and the board are needed for flashing and debugging applications on the board:

- Power connector
- Micro USB is the FT serial console output
- Normal USB is the QFIL/Fastboot port (USB-A - USB A/USB C cable)
- DisplayPort cable is for Graphical output
- Ethernet port, for loading an application dynamically.

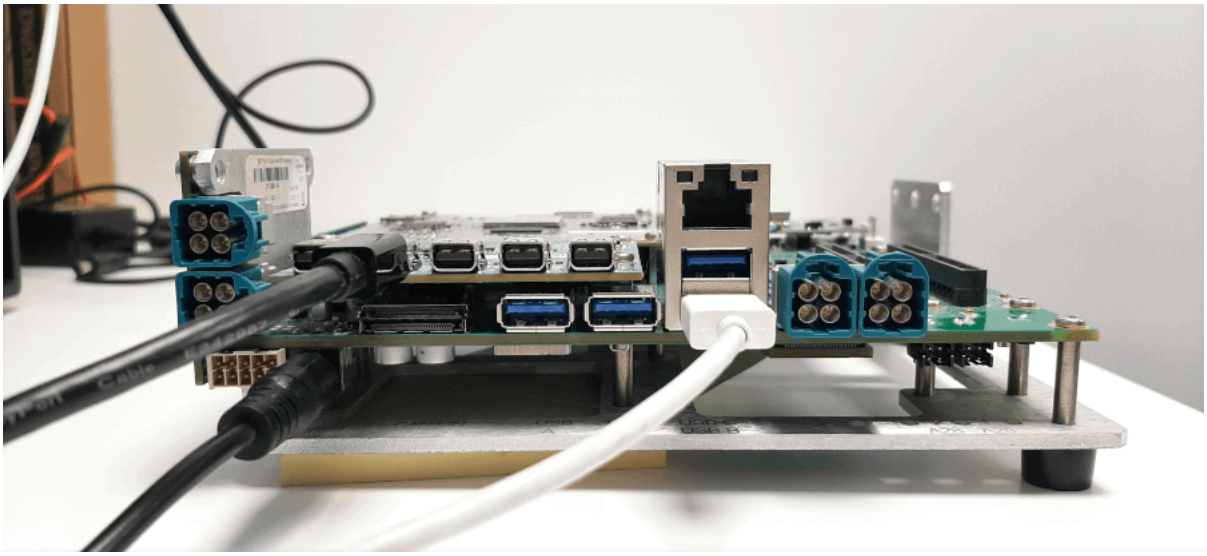

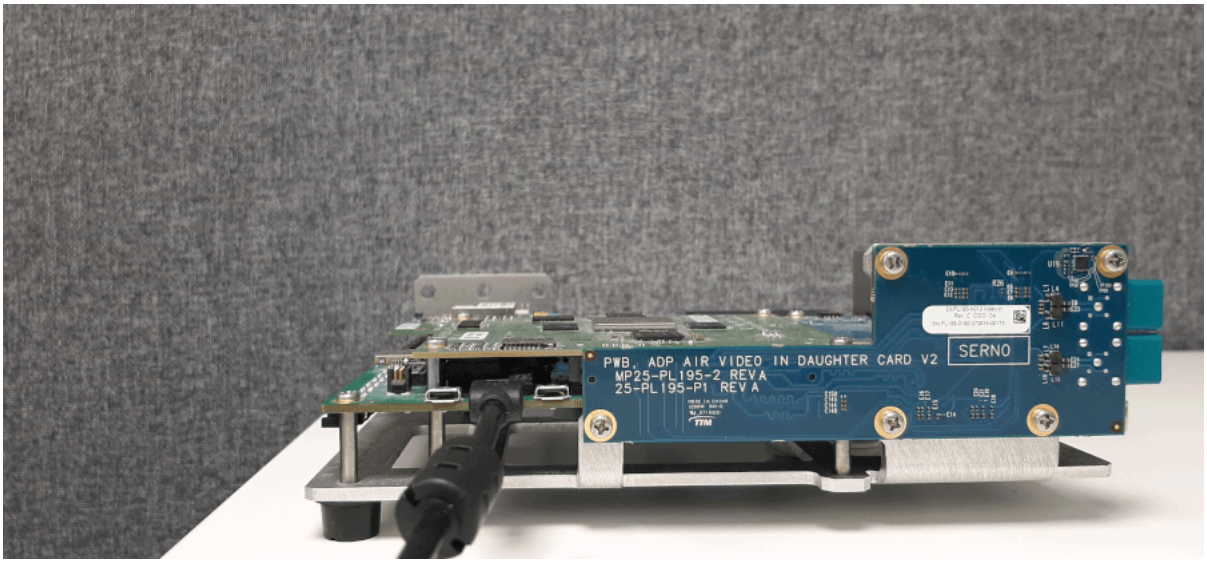

Micro USB is connected for using the FT serial console.

Switch to Fastboot Mode

To flash images on Qualcomm Snapdragon 8155P board install Fastboot Tool on Host OS. See, **Fastboot Tool**

Before flashing switch the board to the Fastboot Mode:

- Open serial connection with the board:


```
putty /dev/ttyUSB0 -serial -sercfg 115200,8,1
```

- There are 2 options:

  - On the device, hold the volume key and power cycle the device.

  - Or press down arrow on the UART shell and power cycle the device.

- If the board switches to Fastboot Mode successfully, it prints following console output:

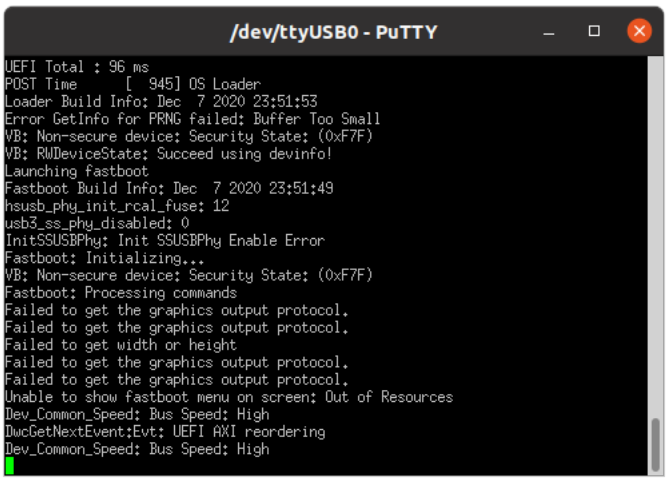

Another way to check the board is in Fastboot Mode is to run the command:

```
fastboot devices
```

Flash images

```
boot.img, perf_dyn.img, misc_dyn.img, abl.elf, etc
```

After switching to Fastboot Mode images can be flashed to the board.

- When setting up for the first time, follow the images flashing procedure from GHS *ES7_FinalCopy/ES7_customer_package_readme.docx*:

```
cd /work/ghs/sa8155/es7/es7_dev_env/hlos_dev_boot/apps/ghs_apps_proc/qc_bsp/out/chk/bin/target
fastboot flash abl  abl.elf
fastboot flash boot vmm-adp-gvm-sa8155/boot.img
fastboot flash perf_dyn_a vmm-adp-gvm-sa8155/perf_dyn.img
fastboot flash misc_dyn_a  vmm-adp-gvm-sa8155/misc_dyn.img

cd /work/ghs/sa8155/es7/es7_dev_env/ES7_FinalCopy/Images/sa8155_hyp
fastboot flash hyp_a hyp.mbn
fastboot flash tz tz.mbn
fastboot flash apdp apdp.mbn

cd /work/ghs/sa8155/es7/es7_dev_env/hlos_dev_boot/apps/ghs_apps_proc/qc_bsp/out/chk/bin/target/fs
fastboot flash gh_sys sys.img
fastboot flash gh_persist ghs_persist.img
fastboot flash gh_test ghs_test.img.sparse

cd /work/ghs/sa8155/es7/es7_dev_env/hlos_dev_boot/apps/ghs_apps_proc/qc_bsp/prebuilt_NHLOS/adsp/asic_8150
fastboot flash adsp adsp.img

cd /work/ghs/sa8155/es7/es7_dev_env/hlos_dev_boot/lagvm/LINUX/android/out/target/product/msmnile_gvmgh
fastboot flash vendor vendor.img
```

> **Note:** *ES7_FinalCopy/ES7_customer_package_readme.docx* is a part of QC [ES7] Customer package. Contact **Qualcomm Support** for more information.

- If this is not the first time flashing, then the monolith part should be flashed:

```
cd /work/ghs/sa8155/es7/es7_dev_env/hlos_dev_boot/apps/ghs_apps_proc/qc_bsp/out/chk/bin/target
fastboot flash boot vmm-adp-gvm-sa8155/boot.img
```

- Restart the board.

Run Qt application on the board


- Open serial console:


```
putty /dev/ttyUSB0 -serial -sercfg 115200,8,1
```

- Execute the command:

```
rt <application name> Initial
```

- Run Qt application example:

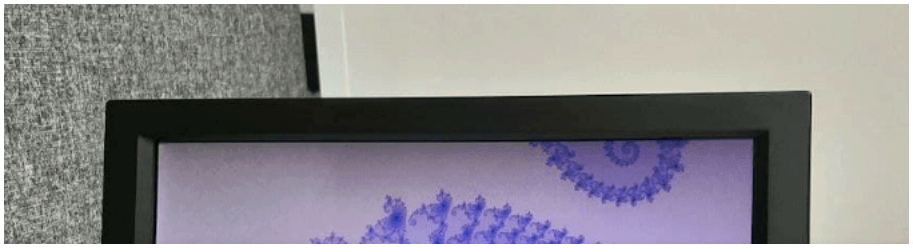

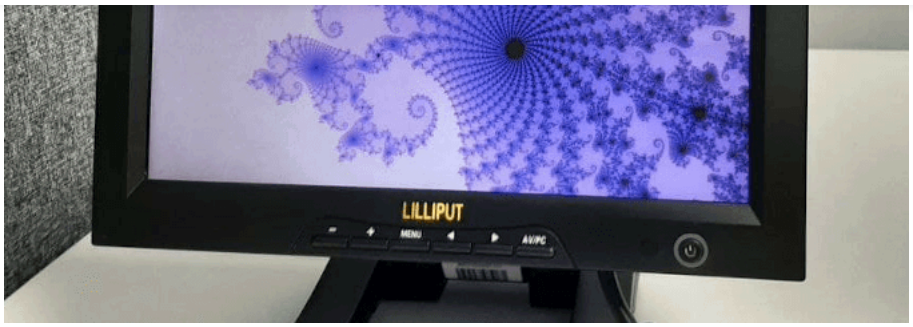

Qt application is running on Qualcomm Snapdragon 8155P Board and displayed on the connected screen.

‹ Building a monolith project

Build Qt with Windows 10 host ›

© 2026 The Qt Company Ltd. Documentation contributions included herein are the copyrights of their respective owners. The documentation provided herein is licensed under the terms of the GNU Free Documentation License version 1.3 as published by the Free Software Foundation. Qt and respective logos are trademarks of The Qt Company Ltd. in Finland and/or other countries worldwide. All other trademarks are property of their respective owners.

QtWS26 The Qt Event of the Year: Qt World Summit 2026 Save Your Spot ›

Contact Us
Qt Group
Our Story
Brand
News
Careers
Investors
Qt Products
Software Quality Products
Licensing
License Agreement
Open Source
Plans and pricing
Download
FAQ
Learn Qt
For Learners
For Students and Teachers
Qt Documentation
Qt Forum
Support & Services
Professional Services
Customer Success
Support Services
Partners
Qt World
© 2026 The Qt Company
Feedback
Qt Group includes The Qt Company Oy and its global subsidiaries and affiliates.