


HOMEOWNERS GUIDE

用户手册

INNATE UPGRADE INTELLIGENT TOILET FW

星朗智能坐便器 FW版

K-38816T-2FW-0 / K-38817T-2FW-0
K-38813T-2FW-0 / K-38815T-2FW-0
K-38813T-2FWT-0 / K-38815T-2FWT-0
K-38813T-FBSG-0 / K-38815T-FBSG-0
K-38813T-FWTRF-0 / K-38815T-FWTRF-0

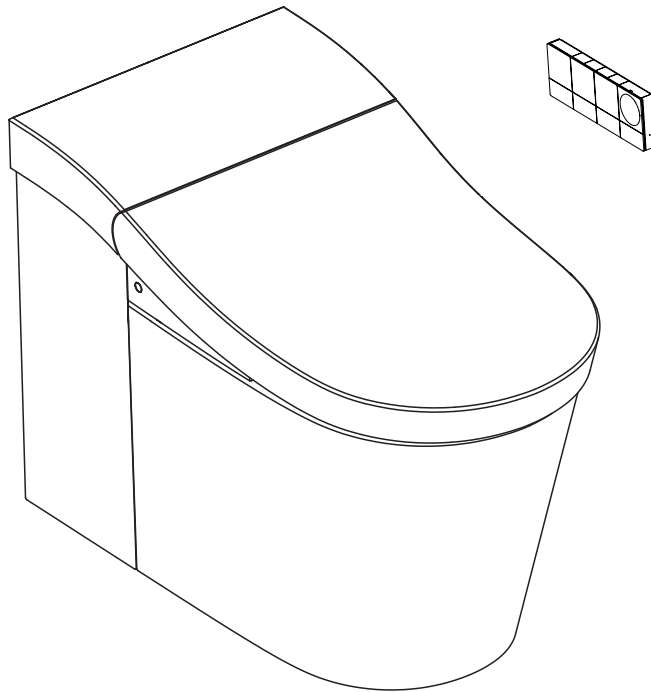

科勒（中国）投资有限公司

中国上海市静安区江场三路158号 邮编：200436

制造商：上海科勒电子科技有限公司

中国上海市宝山区丰翔路1955号 邮编：200444

目录

感谢您选择科勒公司.....	3
安全注意事项.....	4
规格.....	6
整机简图.....	7
初次使用前准备.....	8
遥控器 使用指南.....	9
遥控器 设置说明.....	10
遥控器配对，及与本体的通讯.....	11
遥控器电池的使用和更换.....	11
遥控器的其它注意事项.....	11
便盖/坐圈开关功能.....	12
便器冲水.....	13
辅助键盘功能.....	15
待机模式.....	16
UV除菌功能.....	16
除菌水.....	16
自动节能功能.....	16
除臭.....	16
长时如厕提醒功能.....	16
维护和清洗.....	17
疑难解答.....	22
产品中有害物质含量的说明.....	24

感谢您选择科勒公司

感谢您选择科勒。科勒技术提供了可靠性能和优雅生活的结合，满足了您未来几年的需求。科勒产品的美观和可靠性将满足您最挑剔的眼光。我们为我们科勒的产品感到非常地自豪，相信您也会。

请花几分钟阅读一下这本用户手册，特别注意维护和清洗说明。

这本说明书中所有的信息基于最新公开的产品信息。在科勒，我们一贯坚持改善我们产品的质量。我们保留在任何时候不通知的情况下改变产品特性，包装或实用性的权利。

安全注意事项

- 如果电源软线损坏，为了避免危险，必须由制造商、其服务机构或类似的专业人员更换。
- 最小进水压力0.07MPa(动压)，最大进水压力0.74MPa。
- 必须使用随器具附带的新软管组件，旧软管组件不能重复使用。
- 本产品必须安全接地。只能连接到专用的220V~，50Hz，10A带接地故障断路器或接地漏电保护器的电路中。

警告

 **警告：**如果无视此标志内容而误操作时，有可能造成人员重伤或死亡。

- 在通电之前必须按照说明书中的要求接地。
- 在安装本坐便器时切勿使用任何凝胶材料(水泥砂浆)。因为凝胶材料(水泥砂浆)的热膨胀可能使坐便器的脚部挤破或损坏。科勒对所有因为凝胶材料(水泥砂浆)安装而引起的坐便器破裂恕不负责。
- **提防损坏产品。**请不要向便器内冲入新闻纸、纸尿裤、妇用卫生巾等容易堵塞的物品。请不要用重力撞击陶瓷以防止破损漏水。不要在0°C以下的环境中使用。
- **触电或产品损伤的危险。**不要把产品浸入水中。
- **产品损坏的危险。**在安装工作完成之前不要接通电源，这可能导致产品故障。
- 当使用电器产品时，尤其当儿童在场时，应该遵守基本的安全防范，包括如下：

危险—降低触电的危险：

- 不要把此产品放置在可能掉落或可能被拉入浴缸及水槽的地方。
- 不要放置或掉到水及其他液体中。
- 不要触及掉进水中的产品，请立刻拔掉电源插头。
- 如果有以下情况请不要使用本产品：电源线、插头及产品有损坏；产品不能正常工作；产品掉入水中。
- 使电源线远离加热表面。
- 防止将水淋到电源插头上。

注意

 **注意：**如果无视此标志内容而误操作时，有可能造成人身伤害或产生损失。

- 遥控器只允许在坐便器视线之内控制器具。
- **产品损伤的风险。**不要安装在水可能溅到的地方。
- **产品损伤的风险。**不要把产品安装在过分潮湿的地方，在这种地方，水汽可能凝聚在产品表面。请始终保持使用环境有足够的通风，以防止电子组件的损坏。
- **产品损坏或财产损失的风险。**硬推、硬拉水管接头可能造成水渗漏。
- **产品损坏的风险。**不要在喷嘴上施加过大的力，否则产品可能损坏。
- **产品损坏的风险。**在一些水可能在水管中结冰的地方，要做好水管保温的安排。任何留在产品里的水在冬天储存时都可能结冰。在重新安装或使用前请保证产品暖至室温。
- 温暖的气候时，热保护器在存储或运输过程中可能失灵，导致产品不工作。在重新安装或使用前请保证产品冷至室温。

安全注意事项（续）



警告-避免低温灼伤、触电、火灾或人身损伤

- 当儿童、老年人、残疾人,以及身体、感知、智力能力缺陷或经验和常识缺乏的人使用或靠近此产品时, 近距离的监护是必需的。儿童不应该被允许使用或接触此产品, 不要让儿童独自待在安装有此产品的房间, 儿童不应玩耍器具。
- 对于无法自己进行温度调节操作的儿童和老人,需要帮助将坐便盖的圈温、冲水温度及风温调节到合适的档位。
- 请避免长时间让裸露的皮肤接触加热坐圈, 以免低温灼伤。
- 仅按照手册中所描述的方式使用本产品, 不要使用科勒不推荐的附件, 如角阀等。
- 使用时请勿倚靠在盖板上, 以免损坏产品。
- 根据安装说明正确地安装本产品。
- 只有专业人士可以修理此产品。不要试图自己维修此产品, 否则保修无效。
- 在安装本产品的同一房间中,需要在触手可及的位置安装一个止水阀,用于紧急情况下,无需借助工具即可切断本产品的进水水路: 否则本产品的意外故障可能会导致用户损失。
- 不要把任何物品掉入或插入管路和开孔处。
- 不要在户外或者微粒喷雾设备正在被使用的地方使用本产品。也不要给氧的地方使用本产品。
- 需要有资质的维修人员维修紫外线杀菌装置。
- 必须使用随器具附带的新软管组件,旧软管组件不能重复使用。
- 用户切断电源后, 如须再次接通电源, 请务必听到“滴...”提示音结束后, 再接通电源。
- 如果发现下列情况, 请勿继续使用。请断开电源并同时关闭进水角阀, 停止供水。
 - 软管及产品的内部向外漏水。
 - 当产品出现裂缝或破损时。
 - 产品出现异声或明显异味。
 - 发现产品产生烟雾。
 - 当产品异常发热时。
- 不同类型的电池或新旧电池不应混合使用。
- 非充电电池不要充电 用尽的电池需要从器具中取出并安全处理。
- 如果设备长期存放不用, 应拆卸电池。
- 电源端子不能短路。
- 遥控器不能放置在被水淋到的地方。
- 不要在水箱及陶瓷内部添加漂白剂、防腐剂、清洁剂、化学物质, 可能会对水箱及陶瓷内的部件和管道造成损害。

规格


冲水用水量（陶瓷）		5.4L
水效等级*		3级
使用坑距		305/400mm
供水压力		最小进水压力0.07MPa（动压） 最大进水压力0.74MPa
额定电压		220V~,50Hz
额定功率*		1100W
电源线长度		外露陶瓷部分约1.2m
产品外型尺寸		723mm×442mm×565mm
产品重量		约51kg
进水温度		1-35℃
使用环境温度		1-40℃
清洗	臀部冲洗	关、三档可调（冲洗强度）
	女用冲洗	关、三档可调（冲洗强度）
	出水流量（水压0.2MPa时）	臀部冲洗最大档不小于500ml/min
	清洗水温调节	关、三档可调（室温、约31-39℃）
	冲洗时间（最长）	约300s
	喷嘴位置调节	三档/女用冲洗只有一档
	脉冲按摩	开/关
	移动冲洗	开/关，仅臀部冲洗时适用
	安全装置	水温过热保护 逆流防止
舒适	坐圈保温	温度调节
		安全装置
	圈盖开合	自动开合，遥控开合，手动缓降
	暖风功能	暖风
		安全装置
	除臭功能	有
	遥控器	有
卫生	喷嘴自清洁	有
	除菌水	有
	抗菌材料	坐圈/整机外壳；盖板（非科勒白颜色盖板无抗菌）
	UV喷管除菌	有（臀部冲洗喷管）
	喷管材质	不锈钢（臀部冲洗喷管）
	外置滤芯	见配置表
其它功能	其它安全装置	漏电保护器
	辅助键盘	有
	落座感应	位于坐圈内部
	夜灯	有，夜灯仅用于坐便器内部照明，不具备外部照明功能。
	自动开关圈盖	微波感应/脚触感应
	手动冲洗	有
* 智能坐便器加施的水效标识说明：水效标志表示智能坐便器水效等级等性能的一种符合性标志。		
* 功率值测试条件：动压0.2MPa，进水温度15℃。		

整体简图

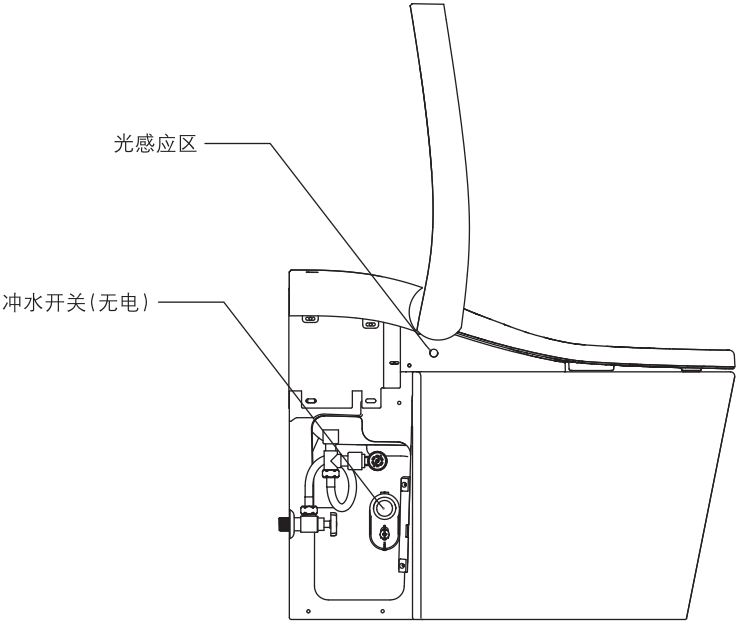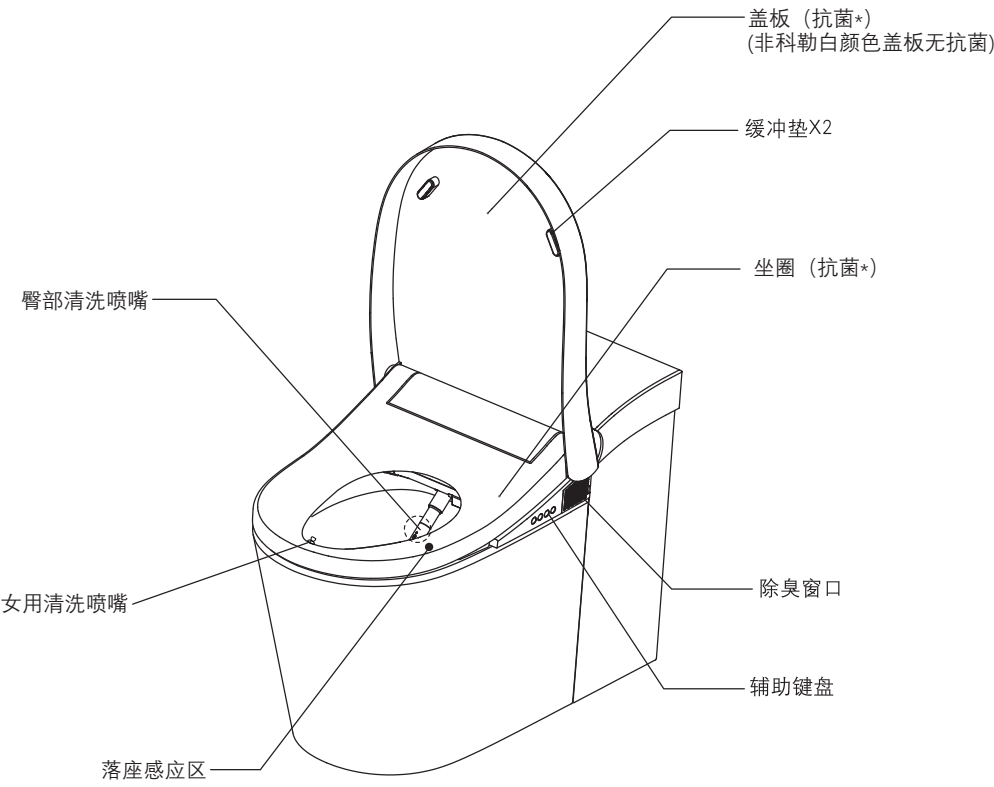

*抗菌：含无机系抗菌材料的坐圈长期抗菌，抑制产品表面的细菌生长，这一加工处理不代表防霉等附带效果，抗菌率大于90% (依据GB21551.2-2010进行试验，测试机构：中国家用电器检测所 上海出入境检验检疫局机申产品检测技术中心)

初次使用前准备

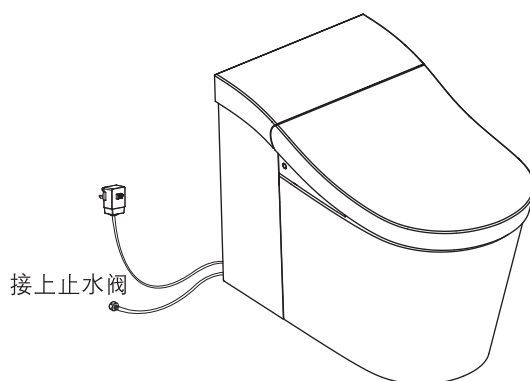

- 确认进水阀及电源打开。
- 确认“遥控器”内已正确装入电池。
- 确认产品正前方没有障碍物。
- 等待主机完成自检。期间可听到电机的转动声和流水声，均属正常。当夜灯闪烁时，自检进行中，停止闪烁，自检结束。
- 初次使用时为出厂设置状态：

女用冲洗：

- 水温：中档
- 水流强度：中档
- 冲洗位置：不可调节
- 脉冲模式：关

臀部冲洗：

- 水温：中档
- 水流强度：中档
- 冲洗位置：中档
- 脉冲模式：关

圈温：中档

暖风：中档

自动夜灯：开

自动节能：关

自动翻圈盖：开

微波感应距离：中距离

自动冲水功能：开

自动UV功能：开

自动除臭功能：开

待机模式：关


长时如厕提醒功能：关

脚感功能：开

水温圈温自动调节功能：关

以上设置为全功能版本，具体型号的规格差异见产品配置表。

遥控器 使用指南

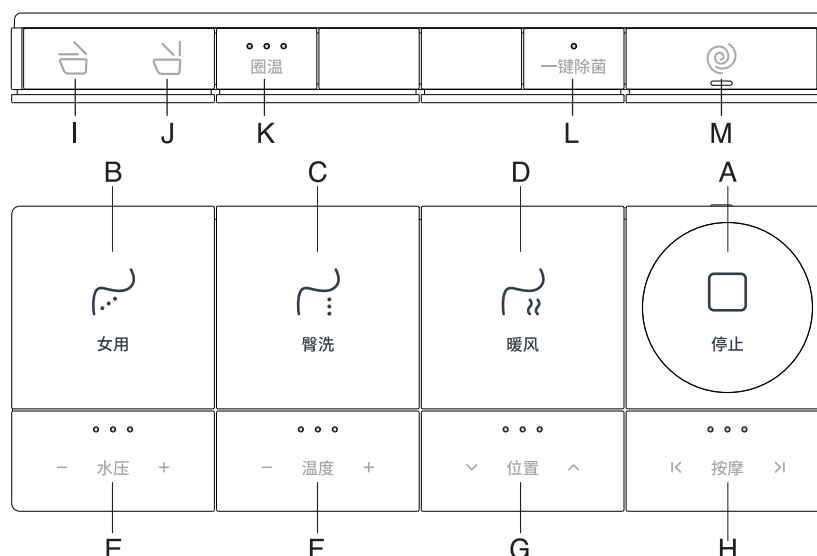

注意：为避免掉落的风险，请从支架上取下遥控器再进行操作(非防遗失安装方式)。

A 停止

按此键可停止女用、臀洗、暖风、除臭、手动清洗喷管、一键除菌等功能。

B 女用

落座后，按此键进入女性冲洗，约5分钟后自动停止或按停止键立即关闭。

在冲洗后，有除菌水自动清洁女用喷头。

C 臀洗

落座后，按此键进入臀部冲洗，约5分钟后自动停止或按停止键立即关闭。

在开洗后，有除菌水自动清洁臀洗喷头。

D 暖风

落座后，按此键开启暖风功能，约4分钟后自动停止或按停止键立即关闭。

E 水压

在使用“女用”或者“臀洗”功能时，按此键的“+/-”键，可调节冲洗力度。

F 温度

按此键的“+/-”键，可调节冲洗水温和暖风的档位（四档：低、中、高。常温，指示灯全灭为常温档）。

G 位置

在使用“臀洗”功能时，按此键的“上/下”键，可调节臀洗冲洗喷管位置档位（三档）。

H 按摩

按此键的“左/右”键可切换，左灯:移动冲洗；中灯:脉动冲洗；右灯:移动+脉动冲洗；全灭:关闭按摩功能。

“女用”模式下，只有脉动冲洗可选择。

I 便盖

离座状态下，可按此键进行开/关盖动作。

J 坐圈

离座状态下，可按此键进行开/关圈动作。

K 圈温

按此键调整圈温档位，调节坐圈加热温度。（圈温有四档：低、中、高、常温；指示灯全灭为常温档）

L 一键除菌

按此键进行全面清洁（冲洗陶瓷缸体；前后喷管除菌水清洗，后喷管UV杀菌）。

此功能运行时，如果打开便盖落座使用坐便器，或者按下停止键，除菌功能将停止。

此功能运行时，圈/盖的开和关只能通过遥控器控制。

用户落座时，无法使用该功能。

M 冲水

按此键对坐便器缸体进行冲水。

遥控器 设置说明

- 注意：1. 启动任何长按功能设置时，正常功能暂时不能使用。
2. 长按本体主机侧面的冲水按键，直到听见一声短音，同时夜灯闪烁三次后，表示进入设置模式。
3. 长按功能键设置功能时，如果用户10秒无任何动作或按其他键，设置功能将退出。

B 女用 -- 夜灯功能设置

长按此键进入自动夜灯设置模式，再短按此键启动/关闭自动夜灯功能：

1. 水压指示灯全亮，表示启动自动夜灯功能，本体短鸣一声。
2. 水压指示灯全灭，表示关闭自动夜灯功能，本体长鸣一声。

C 臀洗 -- 自动冲水的关盖时长设置

长按此键进入自动冲水的关盖时长设置模式，再短按此键设置自动冲水的关盖时长：

1. 温度指示灯1灯亮，表示自动冲水的关盖时长为短时长。
2. 温度指示灯1灯2灯亮，表示自动冲水的关盖时长为中时长。
3. 温度指示灯全亮，表示自动冲水的关盖时长为长时长。

E 水压 (-键) -- 脚感功能设置

长按此键进入脚感功能设置，再短按此键开启/关闭脚感功能。

1. 水压指示灯全亮，表示启动脚感功能，本体短鸣一声。
2. 水压指示灯全灭，表示关闭脚感功能，本体长鸣一声。

E 水压 (+键) -- 自动除臭功能设置

长按此键进入自动除臭设置模式，再短按此键启动/关闭自动除臭功能：

1. 水压指示灯亮，表示启用自动除臭功能，本体短鸣一声。
2. 水压指示灯灭，表示关闭自动除臭功能，本体长鸣一声。

F 温度(+键) -- 水温圈温自动调节设置

长按此键进入水温圈温自动调节设置模式，再短按此键开启/关闭水温圈温自动调节功能：

1. 温度指示灯全亮,表示启用此功能（产品会根据环境温度自动调节对应水温圈温档位），本体短鸣一声。
2. 温度指示灯全灭,表示关闭此功能，本体长鸣一声。

H 按摩(右键) -- 长时如厕提醒功能设置

长按此键进入长时如厕提醒设置模式，再短按此键开启/关闭长时如厕提醒功能。

1. 按摩指示灯全亮，表示开启长时如厕提醒功能（落座超过一段时间后，产品通过蜂鸣器提醒用户），本体短鸣一声。
2. 按摩指示灯全灭，表示关闭长时如厕提醒功能，本体长鸣一声。

I 便盖 -- 自动翻圈盖（感应距离）功能设置

长按此键进入自动翻圈盖（感应距离）设置模式，再短按此键按关闭自动翻圈盖/感应距离近/感应距离中/感应距离远，进行循环设置：

1. 圈温指示灯全灭，表示关闭自动翻圈盖功能，本体长鸣一声。
2. 圈温指示灯亮起，表示开启自动翻圈盖功能，本体短鸣一声。
3. 圈温指示灯1/2/3灯亮，分别代表微波感应距离近/感应距离中/感应距离远。

K 圈温 -- 节能功能设置

长按此键进入节能模式设置（产品自动检测到使用频率低的时间段，会将坐圈加热温度下降，以达到节能目的）；再短按此键开启/关闭节能功能：

1. 圈温指示灯全亮，表示开启节能功能，本体短鸣一声。
2. 圈温指示灯全灭，表示关闭节能功能，本体长鸣一声。

L 一键除菌 -- UV自动杀菌功能设置

长按此键进入UV自动除菌设置模式，再短按此键进行启动/关闭UV自动除菌功能：

1. 一键除菌指示灯亮，表示启用UV自动除菌功能（如果长时间无人使用，对喷管进行UV除菌。24小时内不会再次启动该功能），本体短鸣一声。
2. 一键除菌指示灯灭，表示关闭UV自动除菌功能，本体长鸣一声。

M 冲水 -- 自动冲水功能设置

长按此键进入自动冲水设置；再短按此键按关闭自动冲水/不关盖自动冲水/关盖自动冲水进行循环设置：

1. 圈温指示灯全灭，表示关闭自动冲水功能，本体长鸣一声。
2. 圈温指示灯第2灯亮，表示开启关盖自动冲水功能，本体短鸣一声。
3. 圈温指示灯全亮，表示开启不关盖自动冲水功能，本体短鸣一声。

遥控器配对，及与本机的通讯

1. 坐便器正常上电，长按遥控器上的"暖风"键，
2. 当遥控器正面全部指示亮起后，所有档位灯泡马灯形式交替闪烁，
3. 30秒内同时长按本体辅助键盘上的"臀洗"和"女用"两按键，
4. 直到听到一声短鸣后放开按键。指示灯闪烁后停止,表示配对成功。




遥控器电池的使用及更换

注意：电压报警后请及时更换电池。

1. 遥控器使用4节7号碱性电池。
2. 当电量不够时，遥控器侧面的电池指示灯闪烁或亮，提示用户需要更换电池。

注意：1. 电池的正负极必须与遥控器上的标记一致。

2. 新旧电池不能混用。
3. 请使用碱性电池。

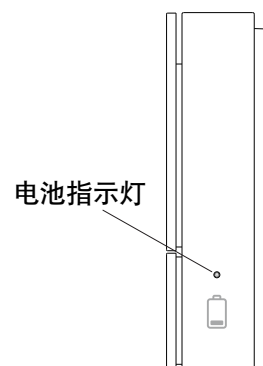

遥控器其它注意事项

请勿将遥控器放在液体可能直接喷淋到的地方，或浸泡在液体中。

请勿放置在烘手机、电吹风等小型家电的周围，以免干扰遥控器的正常使用。请勿对遥控器的按键区域频繁、剧烈地施加外力。

遥控器使用完毕后，应放回墙上的遥控器支架。

在使用过程中，避免遥控器跌落。


便盖/坐圈开关功能

A. 便盖开/关

• 自动开/关盖

关盖状态下，当用户进入感应区域时，盖板自动打开。

开盖状态下，当用户离开感应区域后，一段时间后自动关闭。

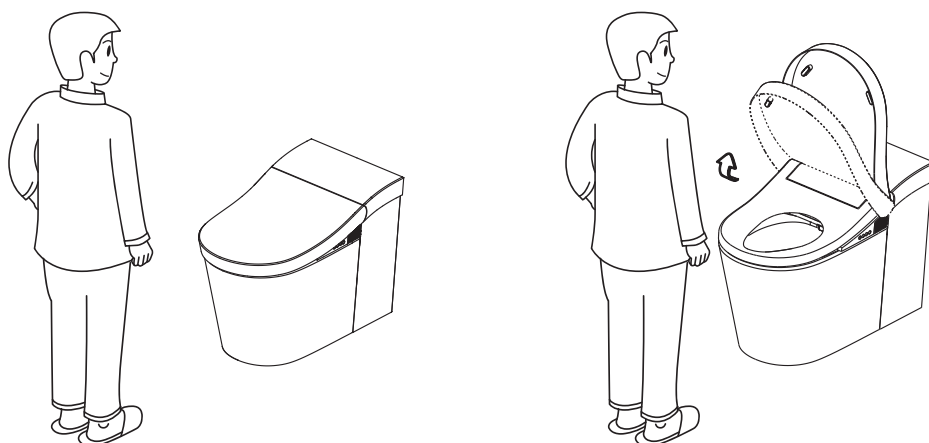


• 遥控器开/关盖

用户没有落座时，按下遥控器上的  键，则执行相应的开合功能（详见遥控器按钮简图）。用户落座时，按遥控器的  键无效。

• 手动开/关盖

用户可以用手直接开/关盖。当用户有正常手动开/关盖的趋势时，盖子能够根据这个运动趋势而自动打开或关闭，不需要一直在盖板上保持用力。盖板在运动过程中遇阻碍会自动停下。

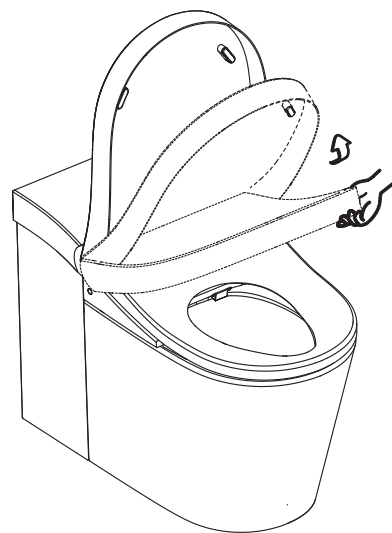

注意：

1. 当用户缓慢进入感应区域时，开/关盖感应距离可能变短。如仍无反应，请使用遥控器或手动开、关盖。
2. 只有在遥控器中的“开/关盖设置”设置为“开”时，自动开/关盖功能才有效（设置方法见遥控器使用指南）。
3. 避免在坐便器前端70cm内设置可移动的障碍物，若有可移动的障碍物盖板可能会自动打开；若需要取消“自动开/关盖”功能，请见遥控器使用指南。
4. 当便盖打开时，会自动对坐便器喷洒水雾，使污垢不易粘附。

B. 坐圈开/关

• 遥控器开/关圈


用户没有落座时，按下遥控器上的  键，则执行相应的开合功能（详见遥控器按钮见图）。用户落座时，按遥控器的  键无效。

• 手动翻圈

用户可以用手直接开/关圈。当用户正常手动开/关圈时,坐圈能够根据这个运动趋势而自动打开或关闭,不需要一直在坐圈上保持用力。坐圈在运动过程中遇阻碍会自动停下。

Ü

在盖板及坐圈自动开合过程中,严禁强行、大幅度用力等人为因素干扰盖板及坐圈的开合。


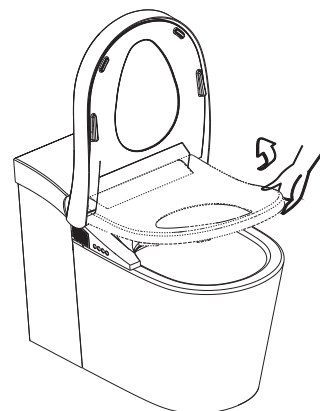


便器冲水

A.


a) 使用坐圈情况

盖板打开状态下, 用户落座使用, 当离开坐圈一定时间后, 便器自动冲水, 一段时间后自动关闭。

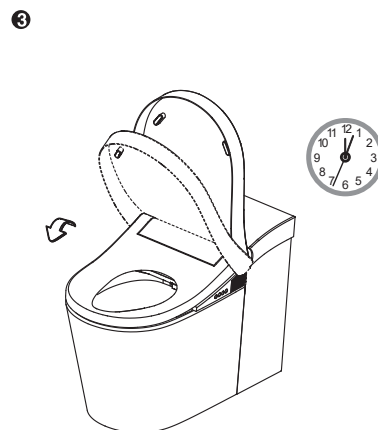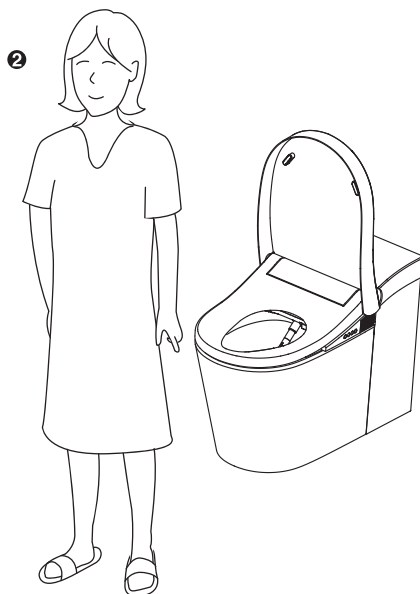

b) 男士小便情况

开盖状态下，用户手动或者使用遥控器翻起坐圈，使用后，坐便器自动冲水，一段时间后，盖板、坐圈自动关闭。

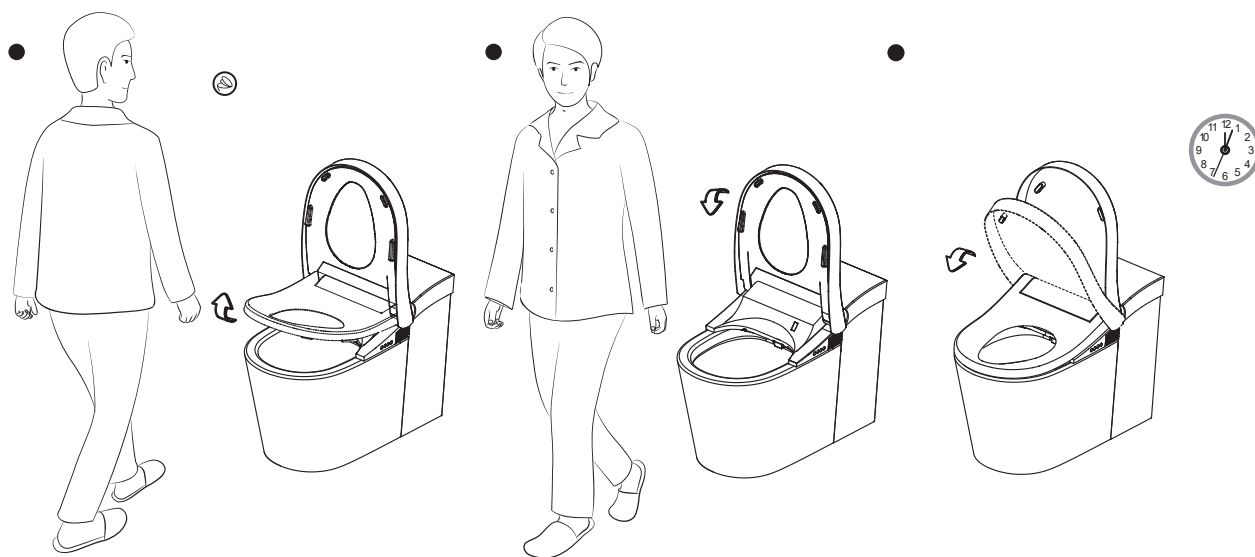


注意：

1. 如果自动冲水功能关闭，用户可以用遥控器控制冲水，侧键盘按键冲水，或手工用盆冲水。
2. 只有在遥控器中的“冲水设置”设置为“开”时，自动冲水功能才有效（设置方法见遥控器使用指南）。

B. 脚感感应冲水

- 用脚触碰感应区域，可进行开、关圈/盖及冲水。
- 产品设置在非关盖冲水模式下，每脚感一下，按：开盖→开圈→冲水→关圈+关盖→开盖，循环执行对应动作。
- 产品设置在关盖冲水模式下，在开圈状态时，脚感一下，执行关圈+关盖+冲水。
- 在落座状态下，脚感无效。

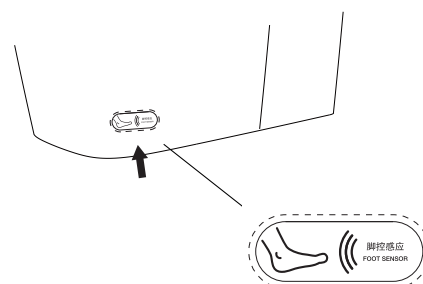

C. 遥控器控制冲水

用户通过按遥控器上的  键，执行坐便器冲水功能。


注：遥控器冲水功能约60秒内不会执行第二次自动冲水。

D. 侧键盘按键冲水


用户还可以直接按坐便器上的侧辅助键盘  冲水按键实现冲水。

E. 手动按键冲水

用户还可以打开坐便器侧装饰盖，按右图示气动开口，进行无电冲水。

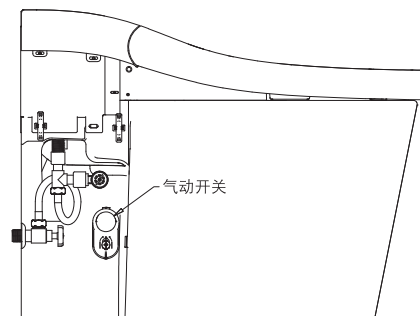

辅助键盘功能

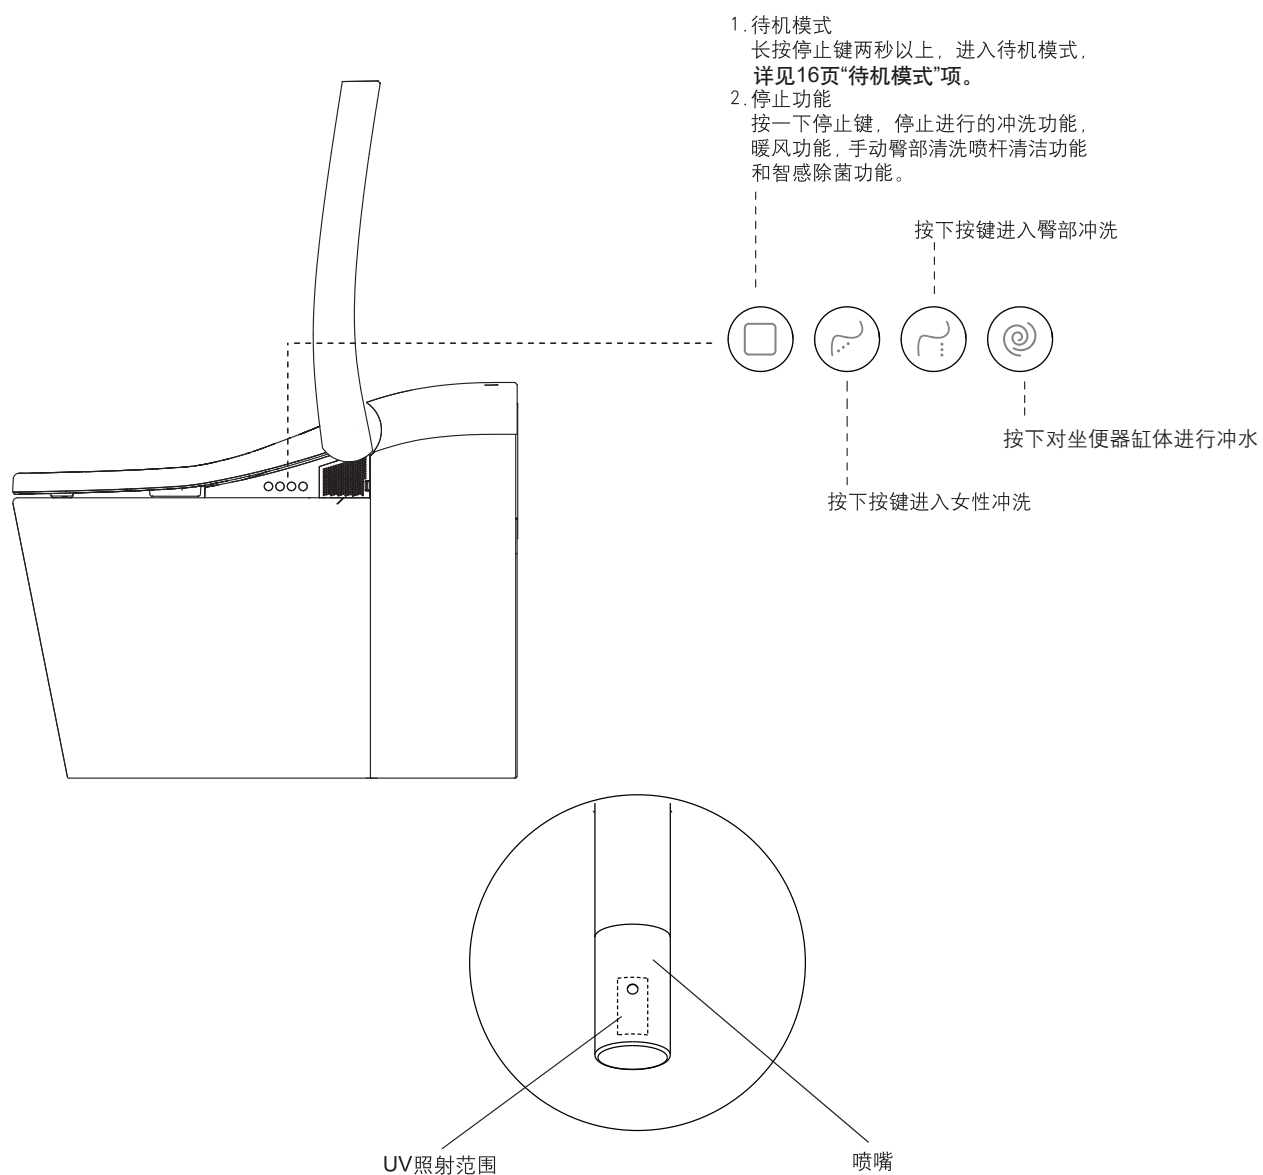

注意：

1. 各功能均按出厂设置运行。
2. 在使用女用冲洗/臀洗冲洗功能时，开启相应功能，5分钟后自动关闭。
3. 在使用暖风功能时，开启该功能，4分钟后自动关闭。
4. 使用STOP键，可以关闭女用冲洗/臀部冲洗，暖风功能。

待机模式

1. 长按侧键盘上的“⊙”键（2秒以上），听到“嘀”一声后，进入待机模式。此时，自动感应及遥控功能关闭，坐圈加热功能将停止、以最大限度降低能耗。
2. 当按侧键盘任意键或落座后，自动退出待机模式，所有功能恢复。

UV除菌功能*

1. UV功能是使用紫外线对喷管进行消毒。
2. 自动UV除菌
 - 如果长时间无人使用，将自动启动UV除菌功能，对喷管进行除菌。除菌结束后24小时之内不会再次启动该功能。
 - UV除菌过程中，如果有用户打开盖子落座，使用坐便器，或者按下遥控器上的停止键，UV除菌功能将停止。
 - 自动UV除菌功能设置请参见遥控器使用指南。
3. 手动UV除菌
 - 在无落座的情况下，按遥控器“一键除菌”按键，可以激活UV除菌功能。
 - UV除菌过程中，如果有用户来打开盖子落座使用坐便器，或者按下遥控器上的停止键，UV除菌功能将停止。

* UV除菌（是指UV灯产生紫外线除菌）：在UV工作周期内通过照射对喷嘴表面进行除菌。除菌率大于99%（在UV的一个工作周期后于16mmx8mm的照射区域内依据GB/T 23131进行试验，UV照射区域见示意图，UV工作周期开启方式见操作说明。测试机构：中国家用电器检测所）

除菌水*

- 用户在使用过女性冲洗、臀部冲洗功能，停止过程中，启动除菌水喷头除菌功能。
- 在无落座状态下，按遥控器“一键除菌”按键，激活全面清洁（冲洗陶瓷缸体；前后喷管除菌水清洗，后喷管UV杀菌）。

*除菌水（是指水电解装置电离自来水中的氯离子生成含次氯酸的水），在电解水工作周期内产生的除菌水对喷嘴表面进行除菌。除菌率大于90%（依据GB/T21551.7进行试验，各地水质不同可能导致除菌效果不同，电解水工作周期开启方式见操作说明。）

自动节能功能

- 在节能设置为开的情况下，产品会自动检测到使用频率低的时间段，并将便座加热温度下降以达到节电的目的。
- 自动节能设置参见遥控器使用指南。

除臭

产品落座情况下，自动开启除臭功能。

长时如厕提醒功能

如果用户长时间落座使用坐便器，超过一段时间后，系统通过蜂鸣器提醒用户。



维护和清洗

A. 常规清洗

为了达到最好的效果，在维护您的科勒产品时记住下列几条：

重要！不要用水直接冲洗坐便盖（包括遥控器）

- **测试**- 首先用清洗液在坐便盖不显眼的地方测试，如果确认清洗液不会对坐便盖外表造成损坏然后再应用于整个表面。
- **不要让清洁剂浸泡**- 不要让清洁剂浸泡产品。
- **避免表面粗糙的材料**- 使用柔软、潮湿的海绵或棉质布，不要用表面粗糙的材料来清洗表面，诸如刷子、冲刷垫等。
- **擦洗**- 加上清洁剂后，立即用湿布擦洗表面，擦除喷到表面的清洁剂和脏物。



清洗坐圈

- 在用于清洗的气雾罐中避免使用具有研磨的清洁剂和消毒剂。

维护提示：用洗涤剂和水混合液体或任何列为可用于坐圈清洁的产品清洗坐圈，用柔软湿润的海绵或者布。用软毛巾擦干，在空气中让坐圈自然干燥。

- 不允许带腐蚀的化学品或化妆品（诸如指甲油或须后水）和坐圈接触，避免破坏表面。

清洗不锈钢外观件

- 以中性肥皂水清洗表面，再以干净的软布彻底擦干整个表面。许多清洁剂，比如氨水、去污粉及洁厕灵等，会对表面造成伤害，切忌使用。

注意：不遵守这些清洗说明可能使科勒的保修义务无效。


注意：清洗程序的成功取决于诸如水的硬度和温度，使用成分的精确数量，清洗规则的改变和被清洗产品的状态等因素。因为这些因素会有变化，科勒不能保证所提到的规则的有效性。

注意：清洁翻起的圈盖时，不能使大力，以免损坏产品。

B. 喷嘴的清洗


B.1 后置喷嘴的清洗：

- 在离坐状态下，长按遥控器“位置”按键，臀部清洗喷管会伸出。
- 用户可以使用软毛刷沾水对喷嘴进行清洗。
- 再按一次“位置”键或按“停止”键
喷管缩回，或5分钟后喷管自动收
- 喷嘴可手动取下清洁。

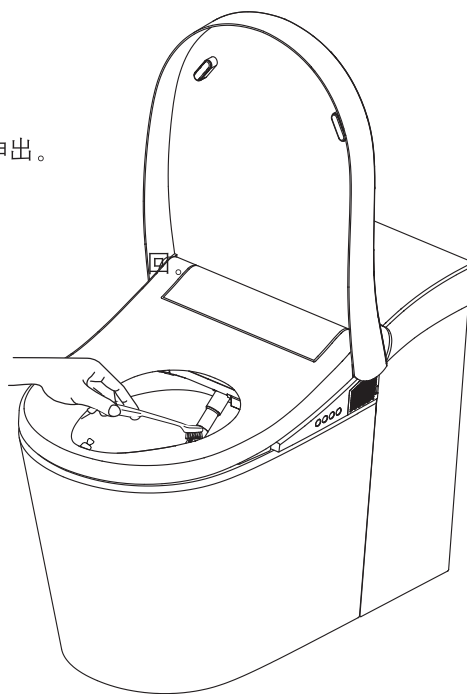


B.2 女用喷嘴的清洗：

- 用手轻轻翻起女用喷管门。
- 用手轻轻拉出女用喷嘴，并保持住。
- 用软毛刷轻刷喷嘴口。

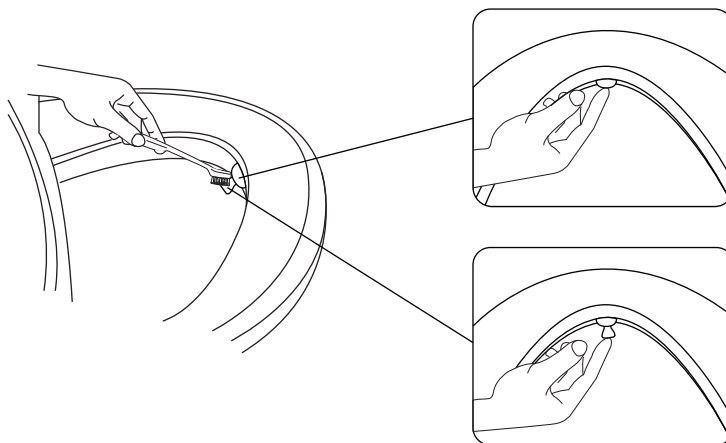

B.3 更换女用喷嘴：

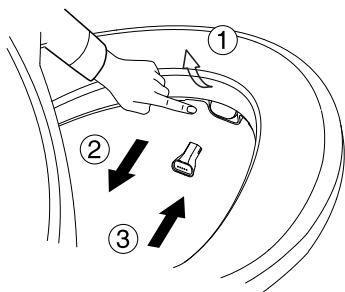

1. 用手轻轻翻起女用喷管门。
2. 用手轻轻拔出女用喷嘴。
3. 将新喷嘴对准喷管口，调整到正确的位置，推到底至不再移动，完成更新女用喷嘴。

注意！

重新装入女用喷嘴过程中，务必将女用喷嘴安装到位。


替换型号：36013T-NA。

C. 滤网的清洗或更换


用户发现冲洗水量变小或出现不出水现象，请及时清洗或更换滤网。

滤网清洗




- 关闭电源。

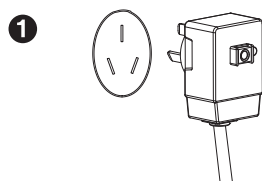

- 关闭进水。

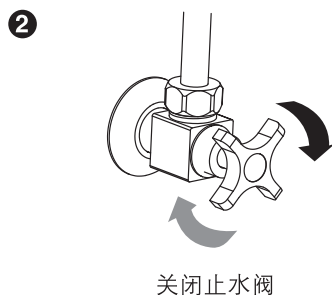

- 取出滤网，使用清水清洗滤网。

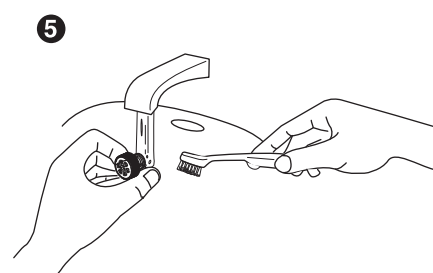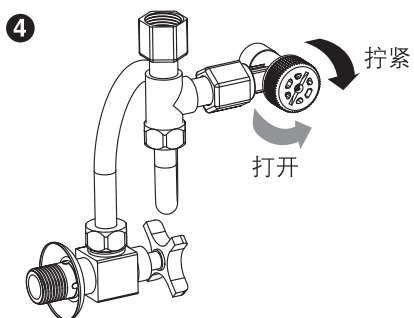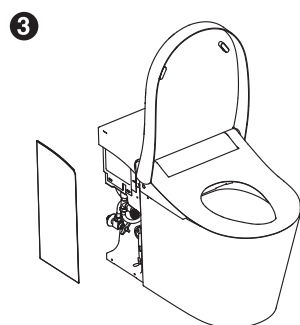


- 重新装好滤网，打开止水阀。
- 检查连接处，无任何水渗漏后，插上电源。
- 装上侧板。

更换滤网步骤同上。

注：

如果发现滤网已损坏或者堵塞很严重，请及时更换。

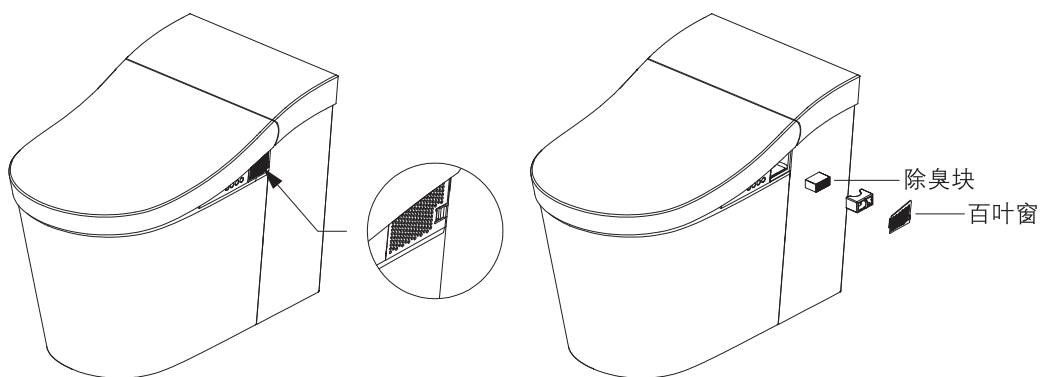

D. 除臭模块的更换

用户发现除臭效果不明显，感觉到异味时，请及时更换除臭块。

取出除臭模块步骤：

取出除臭百叶窗及除臭块，更换过除臭块后，重新放回即可。


注：取出除臭块后，请勿将手或者其他物体伸入除臭块容纳腔内，以防损坏风机和其它部件。



扫码查看替换装，型号：22761T-NA。

除臭滤网的清理



请按图所示，定期清理除臭滤网上的垃圾。

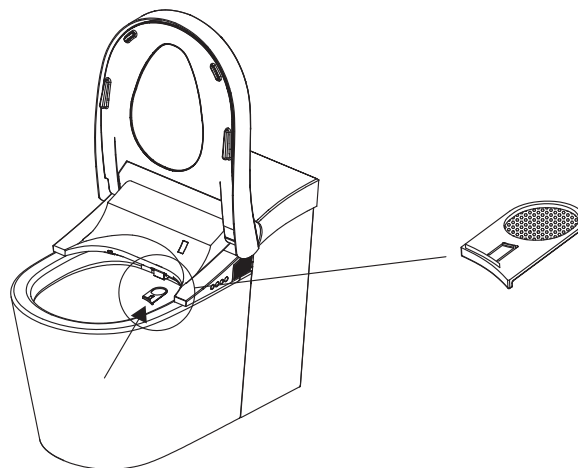


E. 长期放置不用时的维护

a) 如果准备长期不使用智能坐便盖，务必排尽坐便盖内部管路中的积水：

- 拔掉电源，关闭角阀，使用手按小孔内的加热管的泄水按钮，排空加热管内的积水（普通版）。

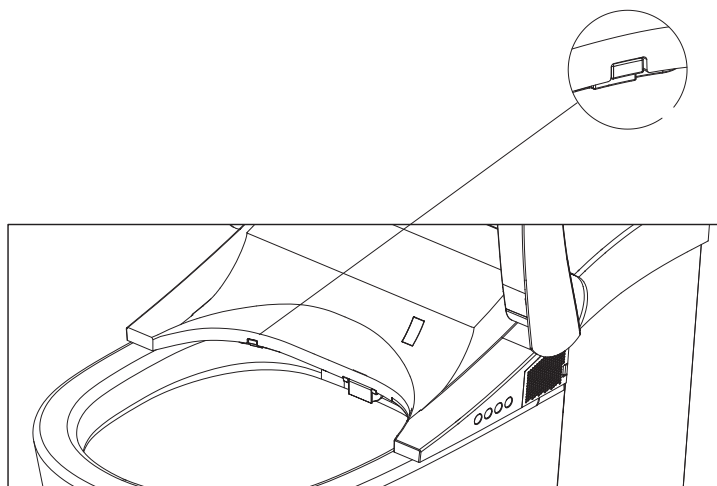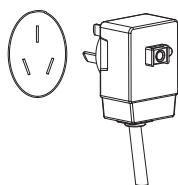

- 按下气动开关，排除水箱中的积水。

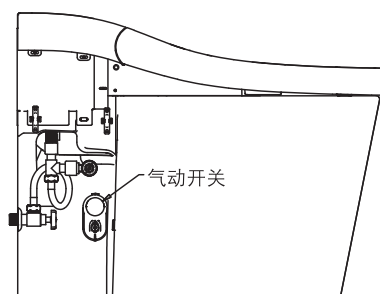

注：

1. 如果没有排尽积水而又长时间不使用该产品，残留水冬天容易冻结夏天容易变质。
2. 冬天发现家中的供水管道已经冻结，不要马上使用智能坐便器，可以升高室内的温度，等待其自然解冻后再使用。
3. 冬天当温度可能超出正常的工作温度，且水管有结冰的风险时，请关闭角阀，并对马桶进行一次空冲/或是进行放水。
4. 长期不用后再次使用时，请关闭角阀，然后按压一次冲洗。
5. 长期不用后再次使用时，请务必多进行几次冲洗，确保内部管路清洗干净。
6. 长期不使用取出遥控器中的电池。

b) 长期放置不用时，可能会由于马桶里面水分挥发完毕后，下水道的气体溢出导致塑料件变黄风险，打开上盖或往马桶里面加水可有效避免该问题。

疑难解答

本指南仅作一般帮助之用。科勒公司授权的服务代表或者合格电工应当能够解决所有的电气问题。如需了解担保服务，请联系您当地的经销商或批发商。

现象	可能原因	建议措施
1. 坐便器不工作	A. 停电 B. 插头未插或者插座无电 C. 电源线插头上漏电保护开关未复位 D. 产品处于待机状态	A. 等到电力恢复 B. 插上插头或者检测电源插座 C. 按下插头上的复位按钮 D. 按一下侧面“⊙”按键
2. 坐便器不冲水	A. 停水 B. 供水角阀关闭 C. 停电 D. 产品处于待机状态 E. 清洗功能正在使用中 F. 自动冲水功能被禁止	A. 等到恢复供水 B. 打开供水角阀 C. 等待恢复电力或者查看“手动冲洗”部分进行手动冲洗或者用盆盛水冲洗。 D. 按一下侧面“⊙”按键 E. 待清洗功能完成再进行 F. 查看“遥控器设置指南”部分
3. 清洗功能无法正常使用	A. 停水 B. 供水角阀关闭或者未完全打开 C. 产品处于待机状态 D. 没有入座或者当前坐姿无法使坐圈感应到 E. 过滤网阻塞 F. 供水水压不足	A. 等到恢复供水 B. 完全打开供水角阀 C. 按一下侧面“⊙”按键 D. 请入座或者调整坐姿 E. 查看“清洗过滤网”部分 F. 检查进水软管是否折弯过急，如折弯过急，请调整软管
4. 使用过程中冲洗功能停止工作	A. 连续冲洗5分钟后冲洗功能自动停止 B. 坐圈未感应到人体	A. 如需要，请再次按下冲洗按键 B. 变换坐姿或者重新入座
5. 人体未入座时也能使用清洗功能	A. 坐圈上有异物覆盖或者坐圈是湿的	A. 移除异物或者擦干坐圈
6. 使用过程中暖风风机停止工作	A. 连续使用暖风功能4分钟，风机自动停止 B. 坐圈未感应到人体	A. 如需要，请再次按下暖风按键 B. 变换坐姿或者重新入座
7. 除臭风机不工作	A. 坐圈未感应到人体 B. 使用过程中误按停止键 C. 自动除臭功能被禁止	A. 变换坐姿或者重新入座 B. 如需要，请离座2秒后重新入座 C. 查看“遥控器设置指南”部分
8. 不能开关盖	A. 坐圈上有异物覆盖或者坐圈是湿的 B. 便盖在先前开关过程中受到人为干扰	A. 移除异物或者擦干坐圈 B. 使用遥控器开关便盖或手动打开便盖直至正常，便盖开关过程中不阻挡其开关
9. 不能自动开关盖	A. 用户没有进入或离开感应区域 B. 遥控器“自动翻盖”功能被关闭 C. 坐便器正在冲水中	A. 请进入或离开感应区域 B. 查看“遥控器设置指南”部分 C. 等待坐便器冲水结束
10. 夜灯不亮	A. 夜灯功能被关闭 B. 室内光线太亮	A. 查看“遥控器设置指南”部分 B. 请完全遮挡住感光窗口
11. 智能除菌不工作	A. 有人坐在坐便器上 B. 坐圈上有异物覆盖或者坐圈是湿的	A. 请离座后关闭盖子再重新开启紫外线杀菌及关闭坐便器 B. 移除异物或者擦干坐圈
12. 遥控器不工作	A. 电池电量耗尽 B. 电池极性装反	A. 更换新电池 B. 重新正确安装

13.遥控器无法遥控坐便器	A. 电池电量不足 B. 遥控器离坐便器太远 C. 坐便器本机没有上电 D. 坐便器本体处于待机状态 E. 坐便器与遥控器未连接	A. 查看“遥控器电池的使用及更换”部分来更换电池 B. 查看“遥控器与本机的通讯”部分并靠近坐便器 C. 请给本体上电 D. 按一下侧面“⊖”按键 E. 查看“遥控器与本机的通讯”部分，连接坐便器与遥控器
14.坐圈不热	A. 遥控器的圈温设置太低 B. 坐便器处于待机模式	A. 将圈温设置到合适档位 B. 按一下侧面的“⊖”键
如要检修此坐便器，您必须首先： 拔下坐便器电源插头或扳下漏电保护开关(无电源线版本)。 如有需要，关闭供水阀。		

产品中有害物质含量的说明

回收提示

本产品超过使用期限或经过维修无法正常使用后，不应随意丢弃，请交由有废弃电器电子产品处理资质的企业处理，正确的处理方法请查阅国家或当地有关废旧电器电子产品处理的规定。

有害物质统计表

产品中有害物质的名称及含有的信息表										
部件名称	有害物质									
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBBs)	多溴 二苯醚 (PBDEs)	邻苯二甲酸 二正丁酯 (DBP)	邻苯二甲酸 二异丁酯 (DIBP)	邻苯二甲酸 丁苄酯 (BBP)	邻苯二甲酸二 (2-乙基)己酯 (DEHP)
塑料组件	○	○	○	○	○	○	○	○	○	○
控制类组件	×	○	○	○	○	○	○	○	○	○
PCBA组件	×	○	○	○	○	○	○	○	○	○
电机类组件	×	○	○	○	○	○	○	○	○	○
导线类组件	○	○	○	○	○	○	○	○	○	○
进水组件	○	○	○	○	○	○	○	○	○	○
* 喷管组件	○	○	○	○	○	○	○	○	○	○
加热组件	○	○	○	○	○	○	○	○	○	○
* 遥控器组件	×	○	○	○	○	○	○	○	○	○
* 电池	○	○	○	○	○	○	○	○	○	○
* 陶瓷类组件	○	○	○	○	○	○	○	○	○	○
* 水箱组件	○	○	○	○	○	○	○	○	○	○

注1：○：表示该有害物质在该部件所有均质材料中的含量均不超出电器电子产品有害物质限制使用国家标准要求。
 ×：表示该有害物质至少在该部件的某一均质材料中的含量超出电器电子产品有害物质限制使用国家标准要求。

注2：以上未列出的部件，表明其有害物质含量均不超出电器电子产品有害物质限制使用国家标准要求。

* 表示部分机型含有该部件。

注：本表格提供的信息是基于供应商提供的数据及科勒公司的检测结果。本产品应用环保设计理念，在当前技术水平下，所有有害物质或元素的使用已经控制到了最低程度，科勒公司会继续努力通过改善现有技术来减少这些物质的使用。



本产品的“环保使用期限”为10年，科勒公司根据产品设计特性指定该期限。
 只有在本产品使用说明书所述的正常情況下使用本产品时，“环保使用期限”才有效。

CATALOGUE

THANK YOU FOR CHOOSING KOHLER COMPANY.....	26
SAFETY PRECAUTIONS AND WARNINGS.....	27
SPECIFICATION.....	29
OVERALL DIAGRAM.....	30
PREPARATIONS BEFORE INITIAL USE.....	31
GUIDE ON USAGE OF REMOTE CONTROLLER.....	32
SETTING INSTRUCTIONS OF REMOTE CONTROLLER.....	33
REMOTE PAIRING, COMMUNICATION WITH BIDET.....	34
REMOTE BATTERY USAGE AND REPLACEMENT.....	35
REMOTE OTHER NOTES.....	35
COVER/SEAT SWITCH FUNCTIONS.....	36
FLUSHING YOUR TOILET.....	37
AUXILIARY KEYBOARD FUNCTION.....	39
STANDBY MODE	39
UV STERILIZATION FUNCTION.....	40
STERILIZED WATER.....	40
AUTOMATIC ENERGY SAVING FUNCTION.....	40
DEODORIZATION.....	40
PROLONGED SEATING INDICATION.....	40
MAINTENANCE AND CLEANING.....	41
TROUBLE SHOOTING.....	46
DESCRIPTION OF CONTENT OF HAZARDOUS SUBSTANCES IN PRODUCT.....	48

THANK YOU FOR CHOOSING KOHLER COMPANY

Thank you for choosing a Kohler product. Kohler craftsmanship offers you a rare combination of proven performance and graceful sophistication that will satisfy you for years to come. The dependability and beauty of your Kohler product will surpass your highest expectations. We are very proud of our products here at Kohler and we know you will be too.

Please take a few minutes to study this Homeowners Guide. Pay special attention to the care and cleaning instructions.

All information in this manual is based upon the latest product information available at the time of publication. At Kohler, we constantly strive to improve the quality of our products. We reserve the right to make changes in product characteristics, packaging or availability at any time without notice.

CAUTIONS AND WARNINGS

- If the power cord is damaged, to avoid danger, it must be replaced by the manufacturer, its service agency or a professional of a similar nature.
- The minimum water inlet pressure is 0.07 MPa (dynamic pressure), and the maximum water inlet pressure is 0.74 MPa.
- The new hose assembly provided with the appliance must be used; the old hose assembly cannot be reused.
- This product must be safely grounded. It can only be connected to a circuit with a dedicated 220V~, 50Hz, 10A circuit breaker with ground fault protection or ground leakage protection device.



Warning



Warning: If you ignore the content of this sign and operate wrongly, it may result in serious injuries or even death to personnel.

- Before powering on, it is necessary to ground the device as per the instructions.
- When installing this toilet, do not use any gel materials (such as cement mortar). The thermal expansion of these gel materials (cement mortar) may cause the base of the toilet to crack or be damaged. Kohler will not be responsible for any toilet breakage caused by the installation with gel materials (cement mortar).
- **Be cautious of damaging the product.** Do not flush the toilet with newsprint, diaper pads, feminine hygiene products, etc., as these items are prone to clogging. Do not use gravity to impact the ceramic to prevent damage and leakage. Do not use it in an environment below 0°C.
- **Risk of electric shock or product damage.** Do not immerse the product in water.
- **Risk of product damage.** Do not connect the power supply before the installation work is completed, as it may cause product malfunction.
- When using electrical products, especially when children are present, basic safety precautions should be followed, including the following:
Reduce the risk of electric shock:
 - Do not place this product in areas where it may fall or be pulled into bathtubs and sinks.
 - Do not place or fall into water or other liquids.
 - Do not touch the product if it has fallen into water. Please immediately unplug the power plug.
- If any of the following situations occur, please do not use this product: The power cord, plug, or the product is damaged; The product does not work properly; The product falls into water.
- Keep the power cord away from the heating surface.
- Prevent water from splashing onto the power plug.



Attention



Warning: If you ignore this warning message and make a mistake in operation, it may result in personal injury or loss.

- The remote control is only allowed to be within the line of sight of the toilet bowl controller.
- **Risk of product damage.** Do not install it in a place where water may splash.
- **Risk of product damage.** Do not install the product in an overly damp place. In such a place, water vapor may condense on the surface of the product. Please always ensure that the usage environment has sufficient ventilation to prevent damage to electronic components.


- **Risk of product damage or property loss.** Hard pushing or pulling of the water pipe joint may cause water leakage.
- **Risk of product damage.** Do not apply excessive force to the nozzle; otherwise, the product may be damaged.
- **Risk of product damage.** In some places where water may freeze in the pipe, make arrangements for pipe insulation. Any water remaining in the product may freeze during winter storage. Before reinstallation or use, ensure that the product is warmed to room temperature.
- During warm weather, the heat protector may malfunction during storage or transportation, causing the product to stop working. Before reinstalling or using it, make sure the product has cooled down to room temperature.

Warning - Avoid cold burns, electric shock, fire or personal injury

- When children, the elderly, the disabled, or those with physical, sensory, intellectual impairments or lack of experience and common sense are using or approaching this product, close supervision is necessary. Children should not be allowed to use or come into contact with this product. Do not leave children alone in a room where this product is installed. Children should not play with the appliance.
- For children and the elderly who cannot operate the temperature adjustment independently, assistance is needed to adjust the temperature of the toilet lid ring, the flushing temperature, and the air temperature to the appropriate settings.
- Please avoid allowing exposed skin to come into contact with the heated toilet seat for a long time to prevent cold burns.
- Use this product only in accordance with the instructions provided in the manual. Do not use any accessories that Kohler does not recommend, such as angle valves, etc.
- Do not lean against the cover when using it to avoid damaging the product.
- Install this product correctly according to the installation instructions.
- Only professionals can repair this product. Do not attempt to repair it yourself; otherwise, the warranty will be invalid.
- In the same room where this product is installed, a stop valve needs to be installed within easy reach. This valve is for use in emergency situations, allowing the water supply path of this product to be cut off without the need for tools. Otherwise, the unexpected malfunction of this product may cause losses to the user.
- Do not drop or insert any items into the pipes or openings.
- Do not use this product outdoors or in areas where the particle spray equipment is in operation. Also, do not use it in areas where oxygen supply is provided.
- Qualified maintenance personnel are required to repair the ultraviolet sterilization device.
- The new hose assembly provided with the appliance must be used; the old hose assembly cannot be reused.
- After the user cuts off the power supply, if they need to reconnect it, they must wait until the "drip..." sound is heard before reconnecting the power.
- If any of the following situations occur, do not continue to use it. Please disconnect the power supply and simultaneously close the inlet angle valve to stop the water supply.
 - Leaking occurs from the inside of the hose and the product.
 - When there are cracks or damages in the product.
 - There is abnormal sound or a distinct odor from the product.
 - Smoke is detected from the product.
 - The product overheats abnormally.
- Different types of batteries or new and old batteries should not be used together.
- Non-rechargeable batteries should not be charged. Used batteries need to be removed from the appliance and properly disposed of.
- If the equipment is not used for a long time, the battery should be removed.
- The power terminals must not be short-circuited.
- The remote control should not be placed in areas where it may be exposed to water.
- Do not add bleach, preservatives, cleaners, or chemicals to the water tank or inside the ceramic, as this may cause damage to the components and pipes inside the water tank and ceramic.


SPECIFICATION			
Flush volume		5.4L	
Water efficiency grade*		Level III	
Pit distance		305/400mm	
Water pressure		Min inlet water pressure 0.07MPa (dynamic) Max inlet water pressure 0.74MPa	
Rated voltage		220V~, 50Hz	
Rated power*		1100W	
Power cord length		About 1.2m exposed ceramic parts	
Product Outline dimension		About 723mm x 442mm x 565mm	
Product weight		About 51kg	
Inlet water temp		1-35℃	
Ambient temp		1-40℃	
Clean	Rear Wash		YES, adjust 3 dials (Flushing intensity)
	Front Wash		YES, adjust 3 dials (Flushing intensity)
	Water flow (water pressure 0.2MPa)		Max rear wash shall be no less than 500mL/min
	Adjust clean water temp		OFF, adjustable 3 dials (ambient temp, about 31-39℃)
	Cleaning time (max.)		About 300s
	Wand position adjustment		3 dials / Front wash has only 1 dial
	Pulsate massage		ON/OFF
	Oscillate		ON/OFF , Front wash doesn't have this function
	Safety device	Water overtemp protection	
Backflow prevention		Check valve, Vacuum breaker	
Comfort	Seat temp preservation	Temp adjustment	OFF, adjustable 3 dials(ambient temp, about 28-36℃)
		Safety device	Thermal fuse
	Cover seat open/close		Auto open/close, Remote open/close, Slow swing
	Dryer	Dryer fuctionon	OFF, adjustable 3 dials(ambient temp, about 38-52℃)
		Safety device	Thermal fuse
	Deodorizer function		Yes
Remote		Yes	
Sanitation	Wand self-clean		Yes
	Sterilized water		Yes
	Antibacterial material		Seat/body,Cover(cover of non KW appearance color is without antibacterial properties)
	UV sanitizing		Yes (Rear wash nozzle)
	Spray nozzle material		Stainless steel (Rear wash nozzle)
	External filter		See configuration table
Other function	Other safety devices		Circuit breaker
	Auxiliary buttonboard		Yes
	Seating detection		Located inside the seat
	Night light		Yes (does not have external lighting function.)
	Auto cover OPEN/CLOSE		Microwave sensing / Foot sensing
	Manual flush		Yes
* The description of water efficiency label marked on intelligent toilet: water efficiency label represents a compliance mark of the water efficiency grade etc. performance of intelligent toilet. * Power value testing condition: dynamic pressure 0.2MPa, inlet water temp 15℃. The above parameters are for the full-functional version. For differences in the specifications of models, refer to their product configuration matrix.			

OVERALL DIAGRAM

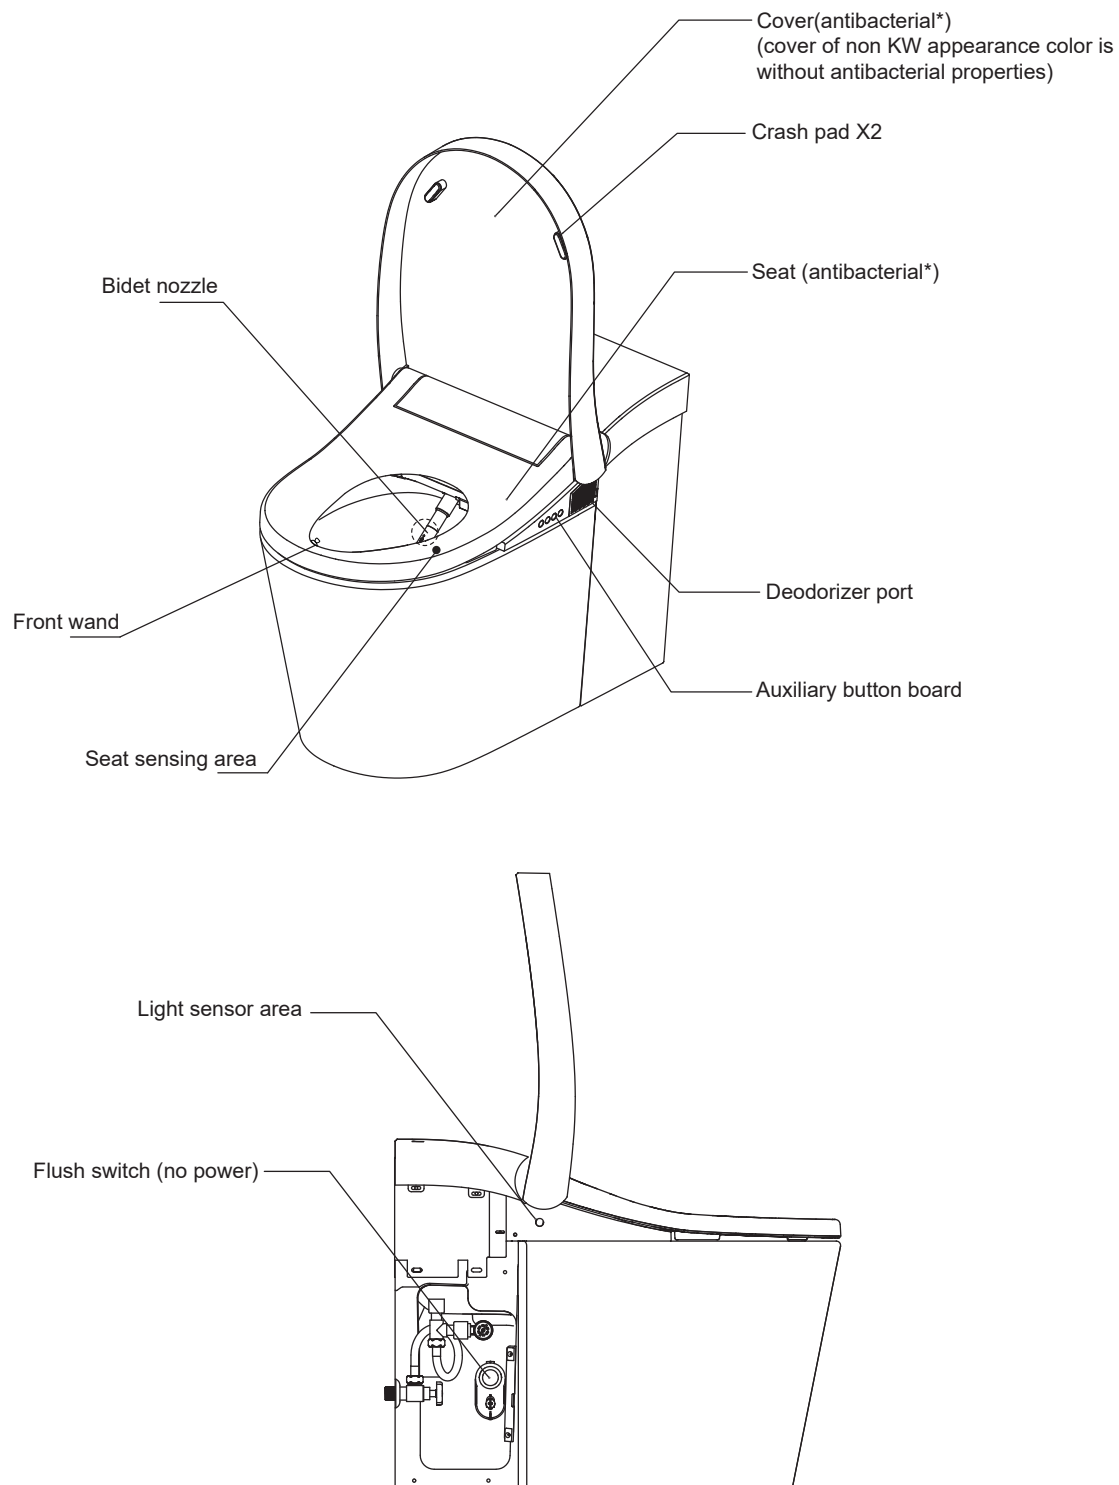

* Antibacterial: the seat contains long term inorganic anti-bacteria material which will inhibit bacteria growth on surface, this does not represent the mildew and other incidental effects. The antibacterial rate is more than 90%. (Perform test in accordance with GB21551.2-2010 requirements. Testing lab: China household electrical appliances testing institute; electromechanical products testing technology center of Shanghai Entry-Exit inspection and quarantine bureau.)

PREPARATIONS BEFORE THE INITIAL USE

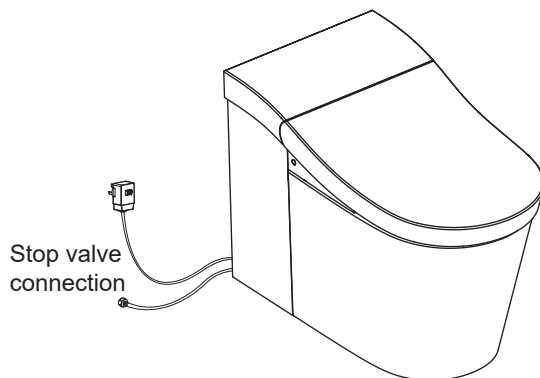

- Confirm if water inlet valve and power is ON.
- Confirm battery has been correctly installed in the “remote”.
- Confirm no obstacle in front of the product.
- After toilet complete self check, it is normal to hear motor rotating and water flow noise. When night light blinks indicates self-check is in process.

- Default ex-work status for initial use:

Front Wash:

- Water temp: Mid
- Water flow intensity: Mid
- Ejection position: Non adjustable
- Pulsation mode: OFF

Night light: ON

Auto energy saving: OFF

Auto cover open: ON

Microwave detection distance: Mid

Auto flush function: ON

Auto UV function: ON

Auto deodorizer function: ON

Standby mode: OFF

Prolonged seating indication function: OFF

Foot Sensor: ON

Auto water temp/seat temp adjust: OFF

Rear Wash:


- Water temp: Mid
- Water flow intensity: Mid
- Ejection position: Mid
- Pulsation mode: OFF

Seat temp: Mid

Dryer temp: Mid

The above settings are for the full-functional version. For differences in the specifications of models, refer to their product configuration matrix.

GUIDE ON USAGE OF REMOTE CONTROLLER

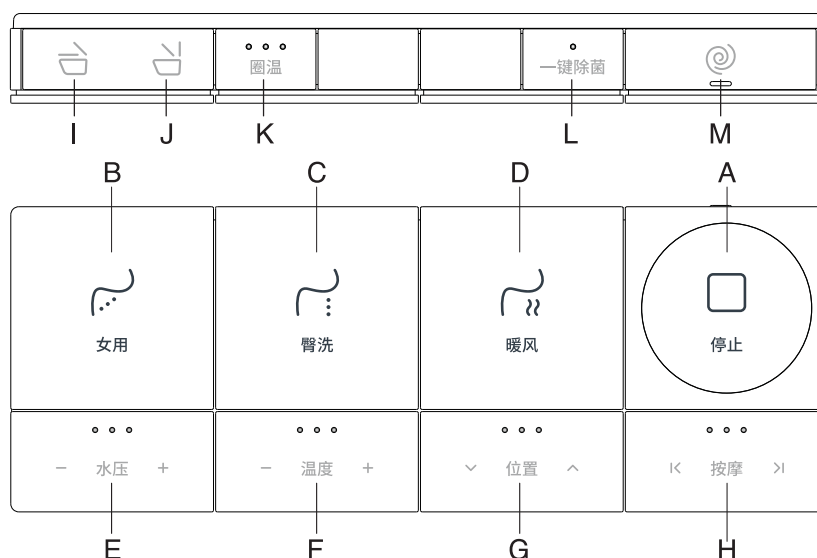

Note: Remove remote control from bracket before operation so to prevent risk of falling (non anti-theft installation)

A - Stop

Press this button to stop the Front Wash, Rear Wash, Dryer and Manual Nozzle Clean or UV function.

B - Front

When being seated, press this button to start Front Wash, then auto stop after 5min or press STOP button to turn off immediately. The nozzle is automatically cleaned with electrolyzed water after wash.

C - Rear

When being seated, press this button to start Rear Wash, then auto stop after 5min or press STOP button to turn off immediately. The nozzle is automatically cleaned with electrolyzed water after wash.

D - Dryer

When being seated, press this button to start dryer function, auto stops after 4min or press STOP button to turn off .

E - Pressure

When using the "Front Wash" or "Rear Wash" function, press the "+ / -" button to adjust the flushing intensity.

F - Temp

Press the "+ / -" button to adjust the flushing water temperature and dryer temperature (four levels: low, medium, high. Normal temperature, the indicator light is off at normal temperature).

G - Position

When using the Rear Wash, press the "up/down" key to adjust the wash nozzle position (three gears).

H - Massage

Press the "left/right" button to switch: left light: moving flushing; middle light: pulsating flushing; right light: moving + pulsating flushing; all off: turn off the massage function.

In the Front Wash mode, only pulsating flushing can be selected.

I - Cover

When not being seated, press this button to open/close the cover.

J - Seat

When not being seated, press this button to open/close the seat.

K - Seat temp

Press this button to adjust seat heating temperature (4 dials for water temperature, back to ambient temp when all indicating LED lights OFF).

L - Clean

Press this button for a full clean. (Clean the front and rear nozzles with disinfectant water, and sterilize the rear nozzle with UV; Sterilization water spray ceramic tank.)

When this function is running, if you open the cover or sit down to use the toilet, or press the stop button, the sterilization function will stop.

When this function is running, the opening and closing of the ring/lid can only be controlled by the remote control. This function cannot be used when the user is seated.

M - Flush

Press this button to clean the toilet bowl.

SETTING INSTRUCTIONS OF REMOTE CONTROLLER



1. Normal function can not be activated when initiate any long press setting.
2. Long-press the flush button on the side of the main unit until a short tone is heard and the night light flashes three times, indicating that it has entered the setting mode.
3. When long-pressing the function key to set a function, if the user does not take any action in 10 seconds or press other keys, the setting function will exit.

B Front - Auto Nightlight setting

Long press this button to start Auto nightlight setting, Press again this button to initiate on/off auto nightlight setting:

1. When Pressure LED lights ON, indicates auto nightlight starts. Toilet generates one short beep.
2. When Pressure LED lights OFF, indicates auto nightlight stops. Toilet generates one long beep.

C Rear - Close cover time before auto flush setting

Long press this button to start Close cover time before auto flush setting, Press again this button to setting the time:

1. When Temp LED light 1 ON, close cover time before auto flush is short.
2. When Temp LED light 1 and 2 are on, close cover time before auto flush is medium.
3. When Temp LED all lights are on, close cover time before auto flush is long.

E Pressure(-) - Foot sensor setting

Long press this button to start Foot sensor setting, Press again this button to initiate on/off foot sensor setting:

1. When Pressure LED lights ON, indicates foot sensor starts. Toilet generates one short beep.
2. When Pressure LED lights OFF, indicates foot sensor stops. Toilet generates one long beep.

E Pressure(+) - Auto Deodorizer setting

Long press this button to start Auto Deodorizer setting, Press again this button to initiate on/off auto Deodorizer setting.

1. When Pressure LED lights ON, indicating Auto Deodorizer setting enables. Toilet generates one short beep.
2. When Pressure LED lights OFF, indicating Auto Deodorizer setting disables. Toilet generates one long beep.

F Temp(+) - Water/Seat Temperature Auto Adjustment setting

Long press this button to enter water and seat temperature adjustment setting, Press again this button to initiate on/off water and seat temperature auto adjustment setting.

1. When Temp LED lights ON, indicating Water/Seat Temperature Auto Adjustment setting enables(The product will automatically adjust the water and seat temperature level according to the ambient temperature).Toilet generates one short beep.
2. When Temp LED lights OFF, indicating Water/Seat Temperature Auto Adjustment setting disables.Toilet generates one long beep.

H Massage(Right button) - Prolonged Seating Indication setting

Long press this button to enter Prolonged seating indication setting, Press again this button to initiate on/off prolonged seating indication setting.

1. When Massage LED lights ON, indicates prolonged seating indication function starts.(When customer sits on toilet over a long period of time, system will alert customer by buzz.) Toilet generates one short beep.
2. When Massage LED lights OFF, indicates prolonged seating indication function stops. Toilet generates one long beep.

I Cover - Auto cover open(Sensor distance) setting

Long press this button to enter Auto cover open(Sensor distance) setting, Press again this button to loop setting the sensor distance:

1. When Seat Temp LED lights OFF, indicates Auto cover open function stops. Toilet generates one long beep.
2. When Seat Temp LED lights ON, indicates Auto cover open function starts. Toilet generates one short beep.
3. The Seat Temp LED lights 1/2/3 are on, indicating that the microwave sensing distance is short/medium/long.

K Seat Temp - Auto energy saving setting

Long press this button to start Auto energy saving setting(The product automatically detects the time period with low usage frequency and lowers the seat heating temperature to achieve energy saving); Press again this button to initiate on/off auto energy saving setting.

1. When Seat Temp LED lights ON, indicating Auto energy saving setting enables.Toilet generates one short beep.
2. When Seat Temp LED lights OFF, indicating Auto energy saving setting disables.Toilet generates one long beep.

L Clean - Auto UV function setting

Long press this button to start Auto UV function setting, Press again this button to initiate on/off auto UV function setting.

1. When Clean LED lights ON, indicating Auto UV function setting enables.Toilet generates one short beep.
2. When Clean LED lights OFF, indicating Auto UV function setting disables.Toilet generates one long beep.

M Flush - Auto flush function setting

Long press this button to start Auto flush function setting, Press again this button to loop setting:

1. When Seat Temp LED all lights OFF, indicating close auto flush function.Toilet generates one long beep.
2. When Seat Temp LED light 2 ON, indicating open auto flush with close cover function.Toilet generates one short beep.
3. When Seat Temp LED all lights ON, indicating open auto flush without close cover function.Toilet generates one short beep.

REMOTE PAIRING, COMMUNICATION WITH BIDET

1. When toilet power is ON, press and hold "Dryer" button on remote.
2. When all indicating LED light, blinking alternately.
3. Press and hold "Rear" button and "Front" button both on side panel within 30s.
4. Release button after toilet generates one short beep. When icons stop blinking which indicates successful pairing.



REMOTE BATTERY USAGE AND REPLACEMENT


NOTE: Please replace the battery in time after the battery indicator warning.

1. Remote docking station uses four AAA alkaline batteries.
2. When battery is low, REMOTE battery indicator blinks and lights up, indicates the replacement of battery.

Note: 1. The +/- polarities of battery must be consistent with the mark of remote controller.

2. Do not mix new and old batteries.

3. Please use alkaline battery.

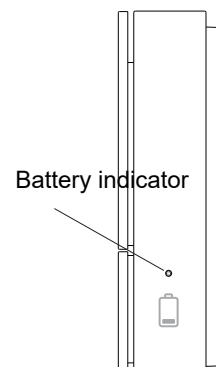

REMOTE OTHER NOTES

- Prevent liquid from spraying the remote or do not soak remote into the liquid.
- Do not place remote around the small household appliances, such as hand dryer or hair dryer etc. to prevent remote from interference.
- Do not apply frequent and violent external force on remote buttons.
- Place remote back to docking station on the wall after usage.
- Prevent remote from dropping in the process of use.
- Anti-theft function: secure remote with base by screws, specific method refers to installation guide.


COVER/SEAT SWITCH FUNCTIONS

A. Cover open/close

- Auto cover open, close

When cover is close, user enters sensor area, cover auto open.

When cover is open, user leave sensor area, cover auto close after a period of time.

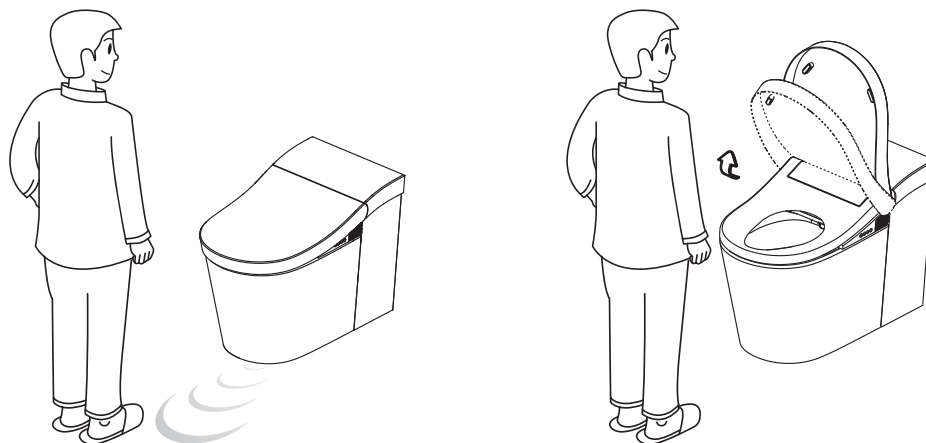

- Cover open and close by remote


When unseated, press seat  button on remote, perform corresponding OPEN/CLOSE function (details are shown in the diagram of remote control). When seated, pressing remote  button will be invalid.

- Manual cover open and close

User could manually open/close cover. When users intend to open or close the cover under normal condition, the cover can open or close automatically with the trend of motion. Users will not have to use force. Once being stopped by any obstacle during motion, the cover will automatically stop moving.

Attention:

1. When customer enters sensing zone slowly, cover open/close sensing distance might be shortened. If there's no response, open/close cover by remote or by manual mode.
2. Auto cover open/close function will be valid when remote "cover open/close" function set to "ON" (Function settings can be found in the remote control user guide)
3. Do not place any moving obstacle 70cm in front of toilet tip, if there is one, cover might auto open. To exit auto cover open/close function, please refer to the remote control user guide.
4. When open cover, auto spray water mist so the dirt is not easy to stick on the toilet.

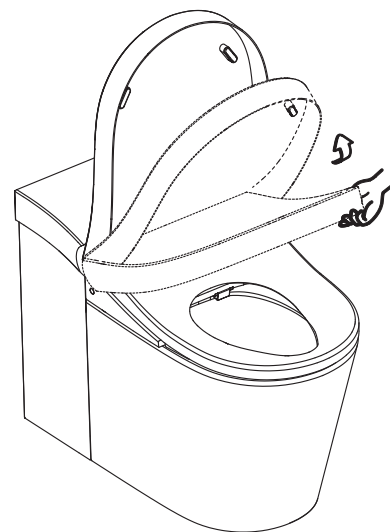

B. Seat open/close

- Seat open and close by remote


When unseated, press seat  button on remote, perform corresponding open/close function (details are shown in the diagram of remote control). When being seated, press remote  button will be invalid.

- Manual seat open/close

User could manual open/close seat. When users intend to open or close the seat under normal condition, the seat can open or close automatically with the trend of motion. Users will not have to use force. Once being stopped by any obstacle during motion, the seat will automatically stop moving.

Note:

Do not use excessive force etc. human related factor when open/close the cover/seal during cover/seal open/close process.

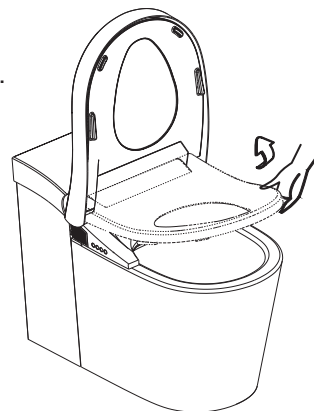


FLUSHING YOUR TOILET

A. Auto flush function


a) Seat usage

When cover is open and toilet is in use. Toilet will auto flush after unseated for a certain time. Close seat within a period of time.

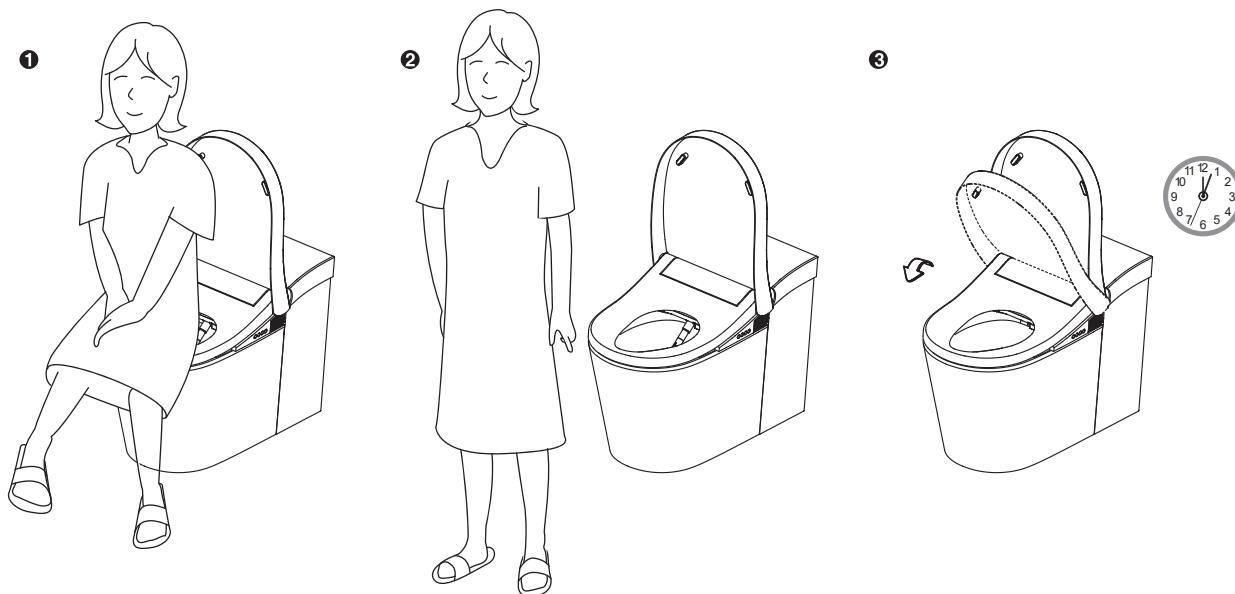

b) For male use

When cover is OPEN and toilet is in use, Toilet will auto flush after unseated for a certain time. Auto close seat/cover after a period of time.

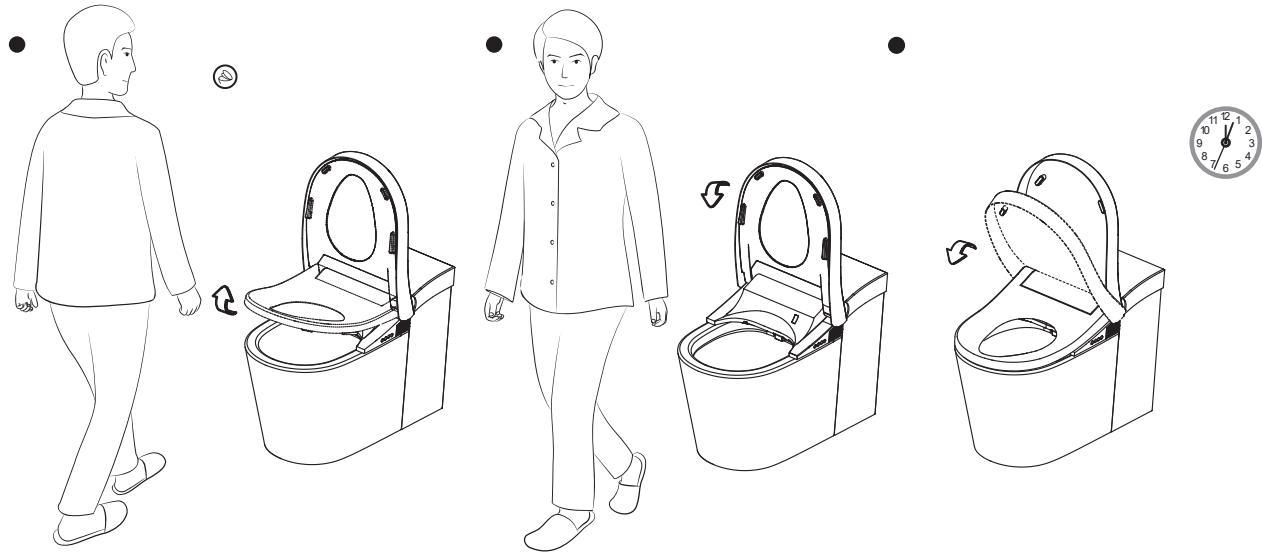


Note:

1. If auto flush function is OFF, customer shall use remote to control flush, manual flush toilet or use basin to flush the toilet.
2. Auto flush function shall not be valid unless remote "flush setting" set to ON(Function settings can be found in the remote control user guide)

B. Foot sensor flush

1. When the foot is close to the sensing area, the seat/cover can be opened/closed and toilet can flush water.
2. When been set in the non-closed lid flushing mode, each time the foot is close, press: open cover → open seat → flush → close seat + close cover → open cover, and execute the corresponding action in a cycle.
3. When been set in the closed cover flushing mode, when the seat is open, the foot is closed once, the seat and cover are closed + toilet flush water.
4. When seat been used, the foot sensor is invalid.

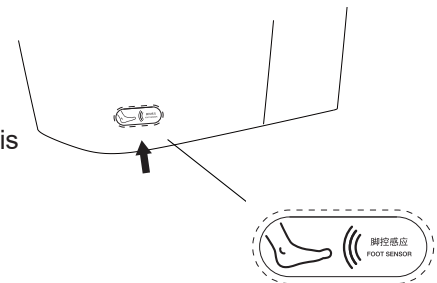

C. Remote control flush

Customer shall press  on remote to perform toilet flush function.


Note: remote flush function shall not perform second auto flush within 60s.

D. Press side panel to flush the toilet


Customer could press  on side panel to flush the toilet.

E. Emergenly flush

Customer could remove the side cover/panel and press the pneumatic switch as shown to flush the toilet when power is off.

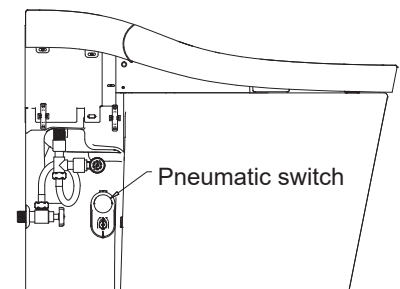

AUXILIARY KEYBOARD FUNCTION


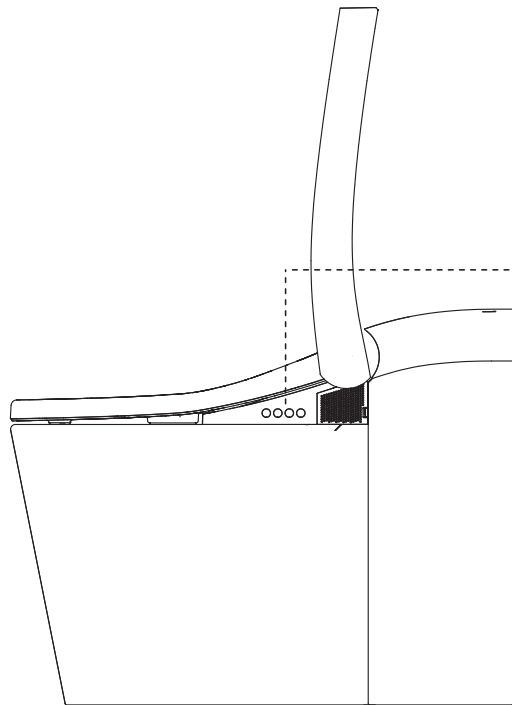


1. Standby mode

Long press STOP button more than 2s to start standby mode, detailed information refers to page 40.

2. Stop function

Press STOP button to stop flush, dryer, manual Rear Wash wand clean function or intelligent sterilization function.

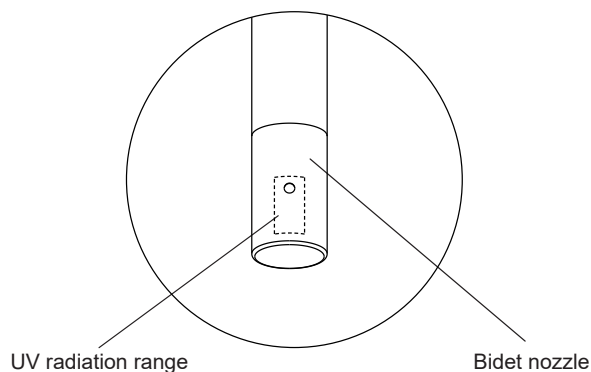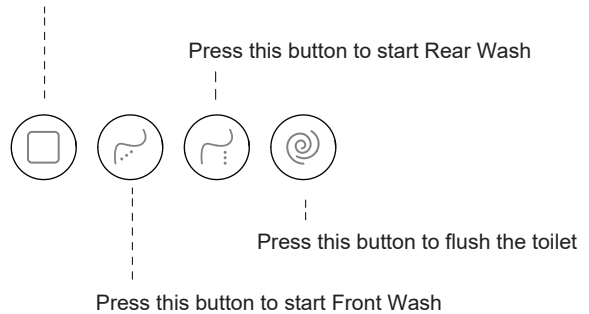

Note:

1. All functions following factory default setting.
2. When use Front Wash /Rear Wash, start corresponding functions and auto stop after 5min.
3. When use dryer function starts, starts this function and auto stop after 4min.
4. Use STOP button to stop Front Wash/Rear Wash/Dryer Function.

STANDBY MODE

1. Long press “” button (over 2s) on side panel to start standby mode when the toilet generate one “beep”. Auto detection and remote function stops at this point, so as IoT function (with IoT function). Seat heating function stops to minimize energy consumption.
2. When press any button on side panel or seated, auto exit standby mode, all function recovered.

UV STERILIZATION FUNCTION*

1. UV function is used to sterilize the nozzle by UV.

2. Auto UV sterilization

- ☐ When toilet is not in use for a long time, auto UV sterilization function will start and begin to sterilize nozzle. No sterilization function shall be activated after this process in another 24hrs.
- ☐ During UV sterilization process, if customer open cover and start use toilet, or presses STOP button on remote, UV sterilization function will be stopped.
- ☐ Auto UV sterilization function please refer to the remote control user guide.

3. Manual UV sterilization

- ☐ When unseated, press "Intelligent sterilization" button on remote to start UV sterilization function (details are shown in the diagram of remote control).
- ☐ During sterilization process, if customer open cover and start use toilet, or presses STOP button on remote, UV sterilization function will stop.

* UV sterilization (refers to the ultraviolet sterilization generated by UV lamp): During UV working cycle, the bacteria on nozzle surface will be eliminated by irradiation. The antibacterial rate is more than 99%. (Measured after one UV working cycle, it was measured within 16mm×8mm irradiation area. Perform test in accordance with GB /T 23131 requirements, UV radiation zone was shown in the diagram, UV working cycle activation mode refers to users guide. Testing lab: China household electrical appliances testing institute.)

STERILIZED WATER*

- After customer uses front wash, rear wash, the toilet will activate sterilized water function.
- When unseated, press the "Clean" button on the remote control to activate the nozzle sterilization function/bowl cleaning function (see the remote control user manual for details).

* Sterilized water (refers to the tap water containing hypochlorite generated by chlorine ions after ionization): Sterilized water generated during electrolysis working cycle eliminates bacteria on the nozzle surface and bowl surface. (Perform test in accordance with XX XXXXXX when the content of chlorine ions in tap water is 24ppm. Different water quality might cause different sterilization effect. Electrolysis working cycle activation method refers to operation description.)

AUTOMATIC ENERGY SAVING FUNCTION

- When energy saving set to ON status, product shall auto detect the idle hours and decrease the heating temperature to reach of energy saving purpose.
- For details of automatic energy saving, please refer to the remote control user guide.

DEODORIZATION

When seated, auto starts deodorizer function.

PROLONGED SEATING INDICATION

When customer sits on toilet over a long period of time, system will alert customer by buzz.



MAINTENANCE AND CLEANING

A. Regular cleaning

For the best effect, remember the following rules during maintenance of your Kohler product:

Important! Do not flush the cover directly by water (including remote controller)

- Testing - apply cleaning solution at an inconspicuous place on lid for testing. Make sure the cleaning solution will not damage the outer surface of cover, and then apply it to the entire surface.
- Do not immerse in cleaning solution. Do not immerse the product in cleaning solution.
- Avoid using materials that will damage the surface-Clean the surface with a soft and wet sponge or cotton cloth, instead of materials that can damage the surface.
- Scrubbing - After adding the cleaner, use a wet towel to scrub the surface immediately to remove cleaner or dirt sprayed to the surface.



Cleaning the seat

- Do not use abrasive cleanser or sanitizer inside the spray tank for cleaning.

Maintenance: In case of using a mixture of washing agent and water as well as any available solution for seat cleaning, use soft and wet sponge or towel to clean the seat. Use a soft towel to make the seat dry, or let it dry naturally.

- Corrosive chemicals or cosmetics (such as nail polish or aftershave) should not come in contact with these as this will damage the surface.

Cleaning the stainless steel wand

- Clean surface with neutral soap water, then wipe entire surface with clean soft rag. Many detergents such as ammonia water, decontamination powder and detergent etc. will cause surface damage. Do not use.

Note: fail to observe cleaning instruction will void the Kohler warranty.


Caution: The success of the cleaning process depends on the water hardness and temperature, the dose precision of composition, cleaning regulation variation and cleaning product status etc. factors. Kohler can't ensure the validity of rules since these factors may change.

Note: when clean opened seat, do not apply excessive force to avoid any product damage.

B. Nozzle cleaning


B.1 Rear nozzle Cleaning:

- When unseated, long press remote Control “position” button to extend the Rear Wash nozzle.
- Use a wet soft brush to clean the nozzle.
- Press “position” key again or the “stop” key, the nozzle will retract or the nozzle will retract automatically after 5 min.
- Nozzles can be removed manually for cleaning.

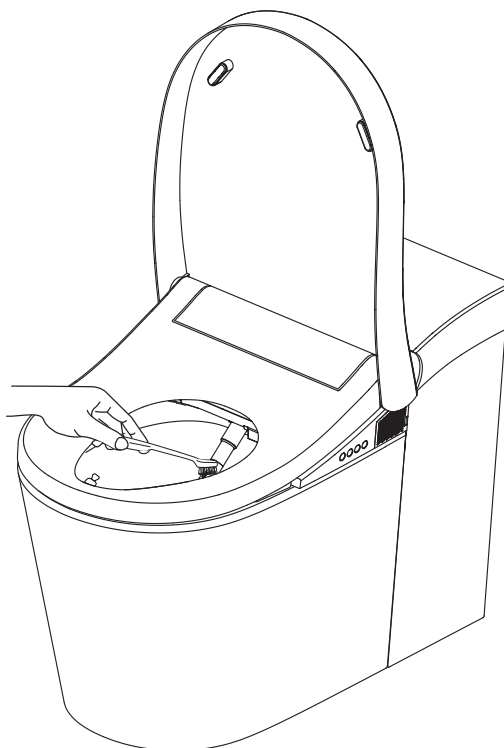


B.2 Front nozzle Cleaning:

- Gently lift the Front nozzle door with hand.
- Gently pull out the Front nozzle with hand and hold it.
- Use a soft-bristled brush to lightly brush the nozzle holes.

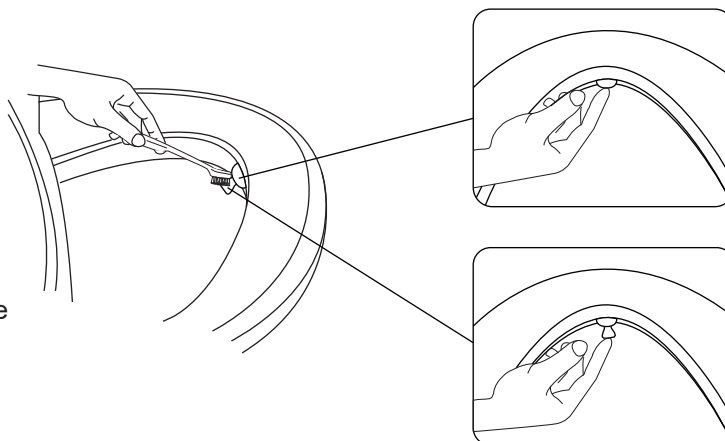

B.3 Replacement of Front Wand:

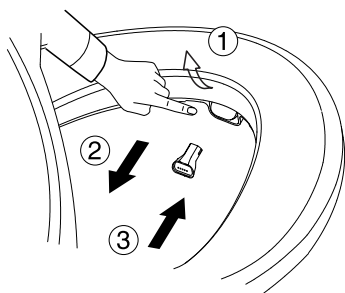

1. Gently lift the front wand door with finger.
2. Gently pull out the front wand with finger.
3. Align the new wand with the pot, adjust it to the correct position and push it all the way until it stops moving.

Note:

When replacing the front wand, be sure to install it correctly.


Replacement SKU: 36013T-NA.

C. Cleaning or Replacing the Filter


Clean or replace the filter if there's not enough water volume or water is not coming out.

Cleaning the toilet filter



- Turn power off.

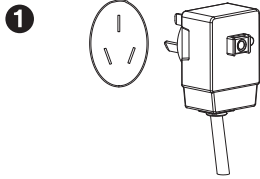

- Turn off inlet water supply.

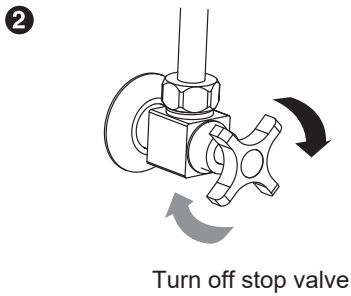

- Take out filter and clean it.

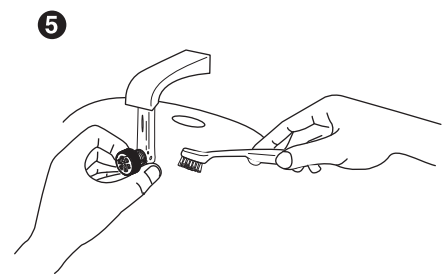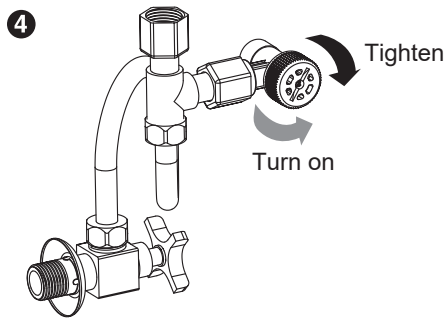


- Reinstall filter and turn stop valve on.
- Inspect joint for any water leak, then plug power cord
- Install side board.

The steps to replace filter are the same as the above steps.

Notes:

If filter is found broken or serious blocked, please replace it in time.

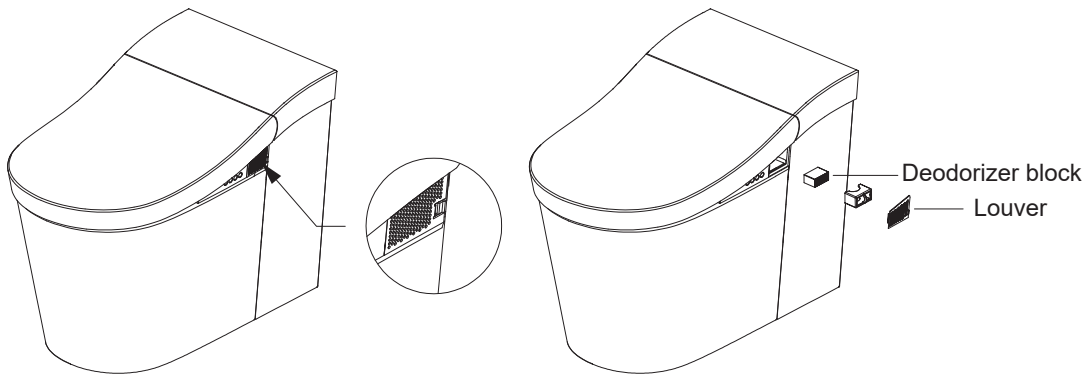

D. Replace deodorizer block

Replace deodorizer block when deodorizing effects is not sufficient and odor occurred.

Remove deodorizer block step:

Remove deodorizer door and deodorizer block, after replacing the deodorizer block, reinstall properly.


Note: after remove deodorizer block, do not insert hand or other objects into deodorizer block cavity to prevent fan or other parts damage.



Scan the QR code to order the filter replacement part with the part number 22761T-NA.

Deodorizer filter clean


Clean dirt on deodorizer filter mesh periodically as shown.

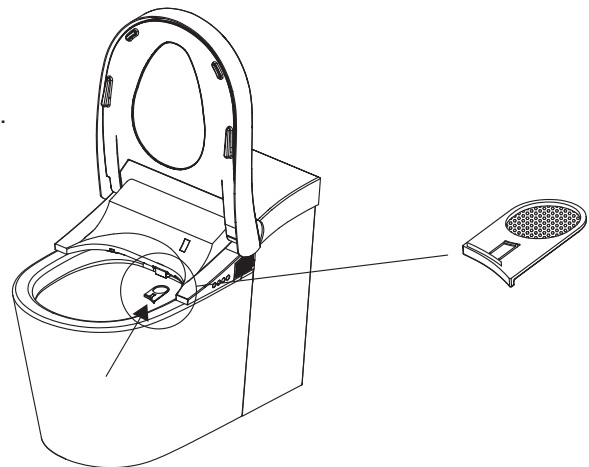


E. Maintenance in case of long-term idle status

a If the intelligent toilet will be idle for a long term, make sure the water in pipeline of cover is drained completely:

- Disconnect the power supply, and press water discharge button inside the small hole inside the heating pipe to discharge the residual water.

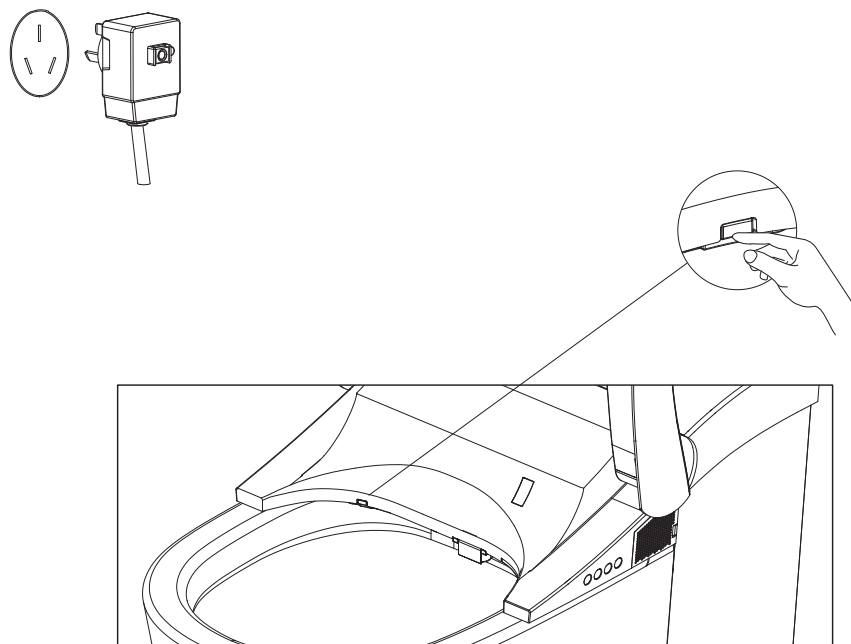

- Press pneumatic switch to discharge residual water inside the water tank.

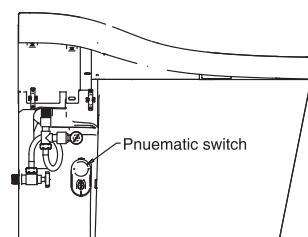

Note:

1. If water is not completely drained and meanwhile the product is idle for a long time, the residual water may freeze in winter or spoiled in summer.
 2. If you find the water supply pipe has been frozen, do not use the intelligent cover. You will need to raise the room temperature and use it after the water is thawed.
 3. When the winter temperature exceeds the normal working temperature, and there is a risk of freezing in water pipe, please turn off the tee valve and perform one flush/or discharge the toilet.
 4. Before use after long term idle condition, please close the tee valve and then press it again for flushing.
 5. When use after long term idle status, make sure to flush it for several times and the inner pipelines are clean.
 6. In case of long term idle status, remove the batteries in the charging block of remote control.
- b) Open cover or add water inside the toilet might avoid the plastic parts yellowing problem caused by backflow air from discharge pipe after residual toilet water evaporated during long-term idle status.

TROUBLE SHOOTING

This guide of trouble shooting is for general help only. Authorized representatives or qualified electricians of Kohler Company shall be able to solve all electrical failures. If you want to know about the service of warranty, please contact local dealers or wholesalers.

Symptoms	Possible Causes	Recommended Actions
1. Toilet does not work	A. Power failure B. Plug not connected or no power to socket C. The leakage circuit breaker on plug does not reset D. Product is on standby mode	A. Wait until the power is restored B. Plug in or detect the socket C. Press Reset button on the plug D. Press “⊖” button at the side panel
2. The toilet does not flush	A. Water failure B. Tee valve for water supply is closed C. Power failure D. Product is at standby mode E. Wash mode is in progress F. Auto-flushing is deactivated	A. Wait until the water supply is restored B. Open the tee valve for water supply C. Wait until the power is restored or review manual flush, manual flush or flush by using the basin D. Press “⊖” button at the side panel E. Perform after flushing operation completed F. Review “Remote Control user guide”
3. Wash mode is abnormal	A. Water failure B. Tee valve for water supply is closed or not opened completely C. Not yet seated or current sitting posture unable to be sensed by the seat D. Filter screen is blocked E. Insufficient water pressure	A. Wait until the water supply is restored B. Fully open the tee valve for water supply C. Seated or adjust your sitting gesture D. Review the section of “Washing the filter screen” E. Check bend problem on inlet hose, if so, adjust hose
4. Flush function stops in operation process	A. Flushing mode stops automatically after continuous flushing for 5 minutes B. The seat is unable to sense human body	A. If necessary, press the flushing button again B. Adjust your sitting gesture or sit on the toilet again
5. The wash mode runs even when unseated	A. The seat is covered by foreign matters or the seat is wet	A. Remove the foreign matters or dry seat
6. Dryer fan stops in operation process	A. The dryer fan stops automatically after continuous usage for 4 minutes B. The seat is unable to sense human body	A. If necessary, press the dryer button again B. Adjust your sitting gesture or sit on the toilet again
7. Deodorization fan does not work	A. Stop button is pressed by mistake during operation B. Automatic deodorization disabled	A. If necessary, please unseat for about 2S and then sit on the toilet again B. Review “Remote Control user guide”
8. Cover fails to close/open	A. The seat is covered by foreign matters or the seat is wet B. The toilet cover is interfered by people at the open/close process before	A. Remove the foreign matters or dry seat B. Use the remote control or manually open/close the cover until it works properly. Do not block switch during open/close process
9. Auto cover fails to close/open	A. User is not seated enters or leaves the sensing area B. Remote controller “automatic cover-turning” function is deactivated C. The toilet is in the process of flushing	A. Please sit or leave the sensing area B. Review “Remote Control user guide” C. Wait until the flushing process is completed
10. Night light does not work	A. Night light function is turned off B. The indoor light is too bright	A. Check the Remote Control Setup Guide section B. Please cover photoreception window completely
11. Intelligent deodorization not work	A. User sits on the toilet B. The seat is covered by foreign matters or the seat is wet	A. Please close the cover and reactivates the UV sterilization again when unseated B. Remove the foreign matters or dry the seat

12.Remote not work	A. Battery exhausted B. Battery polarities are mounted reversely	A. Replace with new batteries B. Reinstall properly
13.Remote control fails to connect to toilet	A. Lower battery B. The remote control is too far from the toilet C. The toilet is not powered up D. The toilet is on standby mode E. The toilet is not connected to the remote control	A. Review "Usage and replacement of battery for remote control" chapter and replace battery accordingly B. Review "Communication between remote controller and the toilet", and approach to the toilet C. Power on the toilet D. Press "⊖" button on side panel or seated E. Review "Communication between remote and toilet" and connect toilet and remote accordingly
14. The seat is not warm	A. Remote seat temp set too low B. Toilet is on standby mode C. The system enters the energy saving mode	A. Set seat temp to proper dial B. Press "⊖" button at the side panel C. Exit Energy saving mode, refer to the "Remote control setting instructions" section

To repair this toilet, you must first:

Close the water supply valve if necessary.

DESCRIPTION OF CONTENT OF HAZARDOUS SUBSTANCES IN PRODUCT

Reclaim Indication

When the product exceeds service life or is unable to use after repair, do not throw the product away in the normal trash. Please dispose the waste electronic parts through a qualified reclamation enterprise. Make sure the product is handled properly. Disposing of product must be done in accordance with the local or national government law.

Statistics of Contents of Toxic or Hazardous Substances or Elements

Names and information of hazardous substances in products										
Part name	Hazardous substances									
	Pb	Hg	Cd	Cr(VI)	PBBs	PBDEs	DBP	DIBP	BBP	DEHP
Plastic Asm.	○	○	○	○	○	○	○	○	○	○
Control Asm.	×	○	○	○	○	○	○	○	○	○
PCBA Asm.	×	○	○	○	○	○	○	○	○	○
Motor Asm.	×	○	○	○	○	○	○	○	○	○
Wire Harness Asm.	○	○	○	○	○	○	○	○	○	○
Water Inlet Asm.	○	○	○	○	○	○	○	○	○	○
* Wand Asm.	○	○	○	○	○	○	○	○	○	○
Heater Asm.	○	○	○	○	○	○	○	○	○	○
* Remote Asm.	×	○	○	○	○	○	○	○	○	○
* Battery	○	○	○	○	○	○	○	○	○	○
* Ceramic Asm.	○	○	○	○	○	○	○	○	○	○
* Water Tank Asm.	○	○	○	○	○	○	○	○	○	○

Note1: ○: Indicates that the content of this hazardous substance in all homogeneous materials of this component does not exceed the requirements of the national standard for the restriction of the use of hazardous substances in electrical and electronic products.

×: Indicates that the content of this hazardous substance in at least one homogeneous material of this component exceeds the requirements of the national standard for the restriction of the use of hazardous substances in electrical and electronic products.

Note2: For components not listed above, it indicates that their hazardous substance content does not exceed the requirements of the national standard for the restriction of the use of hazardous substances in electrical and electronic products.

* : Indicate only partial product series contains this substance.

Note: the information provided is based on the supplier data and Kohler inspection results. The product is designed not to hurt the environment. Under current technology, all hazardous materials have been used in the smallest amounts possible. Kohler will strive to reduce the use of these hazardous materials used in this product.



The product "service life for environment protection" is 10 years; Kohler Company will specify product service life based on product characteristics. The product "service life for environment protection" is only effective when the product is used as described in the product specification.