



Hik Device Gateway FAQ

Legal Information

About this Document

- This Document includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only. Unless otherwise agreed, Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision") makes no warranties, express or implied.
- Please use this Document with the guidance and assistance of professionals trained in supporting the Product.

Acknowledgment of Intellectual Property Rights

- Hikvision owns the copyrights and/or patents related to the technology embodied in the Products described in this Document, which may include licenses obtained from third parties.
- Any part of the Document, including text, pictures, graphics, etc., belongs to Hikvision. No part of this Document may be excerpted, copied, translated, or modified in whole or in part by any means without written permission.
- **HIKVISION** and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.
- Other trademarks and logos mentioned are the properties of their respective owners.

LEGAL DISCLAIMER

- TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS DOCUMENT AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.
- YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.
- YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.

- IN THE EVENT OF ANY CONFLICTS BETWEEN THIS DOCUMENT AND THE APPLICABLE LAW, THE LATTER PREVAILS.

© Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

TABLE OF CONTENTS

Failed to log into Hik Device Gateway.	1
The device added by ISUP is offline.	2
Hik Device Gateway cannot receive alarm notifications after setting port mapping.	3
Hik Device Gateway installed in Windows Server 2008 R2 Enterprise does not work.	3
How to get network status (online/offline) of added devices?	3
How to get the logs for debugging?	4
How to configure port mapping for Hik Device Gateway?	4
After adding a device to Hik Device Gateway, the device turns offline.	4
Hik Device Gateway works properly on the Web browser, but failed to respond to the request sent by postman.	4
When starting Hik Device Gateway via HTTPS protocol, a notification will show saying the page is not safe. How to disable the notification?	5
How to apply person parameters such as "localUIRight", "password" which are not included in the Hik Device Gateway API?	5
How to call the APIs which are not included in the Hik Device Gateway API such as configuring authentication schedule and collecting face information?	5
[Updated] For devices added via ISUP, subscribing to alarms failed.	6
The channel list of ISUP2.0 encoding devices get by Device Gateway ISAPI is not accurate. How to get the channel list by other methods?	6
What are the differences between alarm listening and alarm subscription? ...	6
For devices added to Hik Device Gateway via ISUP, playback is not available. .	7
For devices added to Hik Device Gateway via ISUP, sometimes streaming fails.	7
Live view is not available for ISUP 2.0 G4 mobile devices.	7
The downloaded video is longer than 30s even though seekapan is 30 in the downloading URL for ISUP 2.0 G4 mobile devices.	7
For ISUP 5.0 devices, the time length of the downloaded video is different from the time length set in the URL.	8
For ISUP 5.0 devices added to Hik Device Gateway, playback fails after setting time zones for Device Gateway and device.	8
Failed to enter the Demo page of webs.exe.	8
For devices added to Hik Device Gateway, live view of no-plugin Demo failed.	8
Failed to upload alarm pictures by device.	8
"Installation failed" occurred when executing ./install.sh.	9
"Permission denied" occurred when executing ./install.sh.	9
Port 80 is occupied when installing Hik Device Gateway. Can I use other ports?	9
How to check Hik Device Gateway status?	9
Visiting Hik Device Gateway via web browser failed after Hik Device Gateway	

is started.....	9
[Updated] For ISUP2.0 devices, how to enable the feature of picture capturing?	10
For ISUP 5.0 devices, capturing pictures failed. How to find out whether the devices support capturing or not?	10
How to upgrade Device Gateway but keep the legacy configuration files?	10
How to find the causes for failures of applying face pictures?	11
How to find the causes for streaming failures?	11
After Device Gateway is uninstalled, there are still files left in the installation directory.	11
Return urlDownloadFail when applying picture faces to a device	12
How to identify internal port conflicts?	12
How to identify unregistered drivers or processes after Device Gateway startup?	13
How to view forwarded alarms through Device Gateway?	13
Will the stream be fetched from Device Gateway when calling an API to get the stream URL?	14
Device Gateway installation failure on the Ubuntu system	15
Why is the time on the RTSP stream different from the time on the video stream?	16
Frequent device disconnections after registration	16

Failed to log into Hik Device Gateway.


Question


Failed to log into Hik Device Gateway.

Answer

Make sure the DeviceGatewayService is running properly in the Task Manager. If the DeviceGatewayService is in stopped status, right-click it and start it. If you fail to start the DeviceGatewayService, make sure that you have installed Hik Video Device Gateway conforming with the following rules:

- You have has the permission of Administrator.
- You have installed Hik Device Gateway as an Administrator.
- Only English characters are allowed in the installation directory.

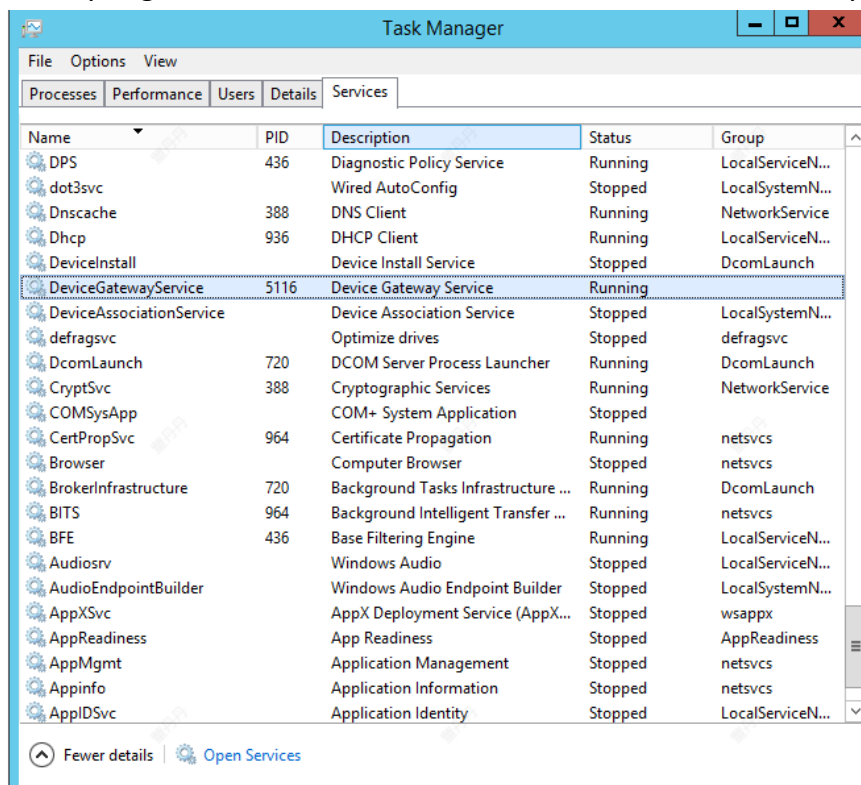

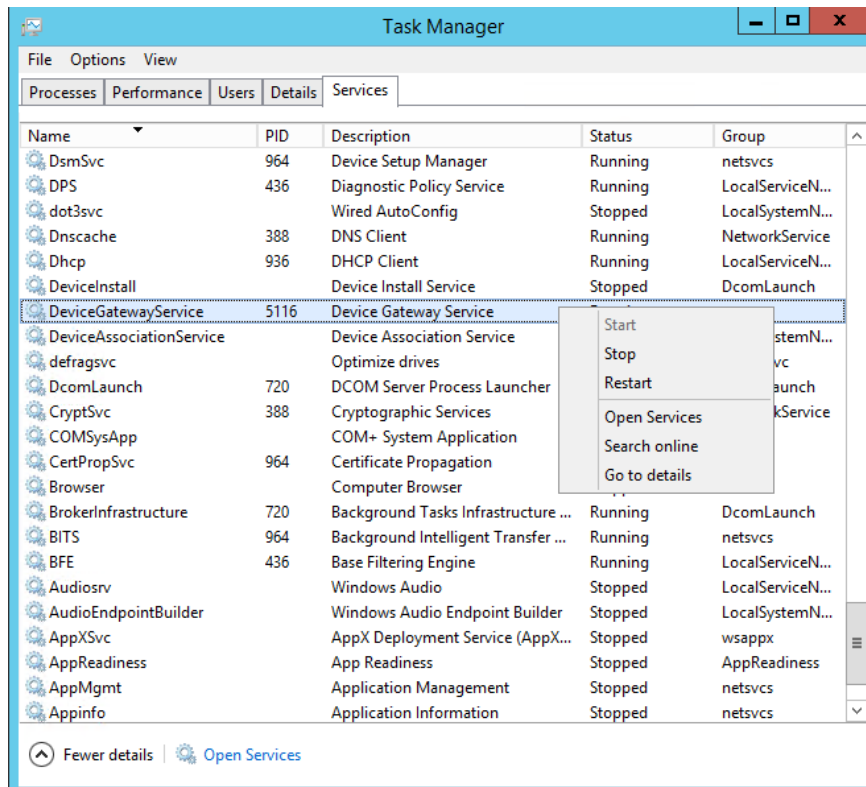

The device added by ISUP is offline.


Question

The device added by ISUP is offline.

Answer

Something is wrong with the network, which causes the failure of accessing to Hik Device Gateway's registration port. Log into the device via a Web browser, check the server address and server port you entered and make sure they are correct. In addition, you should make sure the device is connected to the network properly.

Please update Device Gateway to 1.6.1 or newer versions, go to the Device List page, and view offline causes on the page when devices are offline.

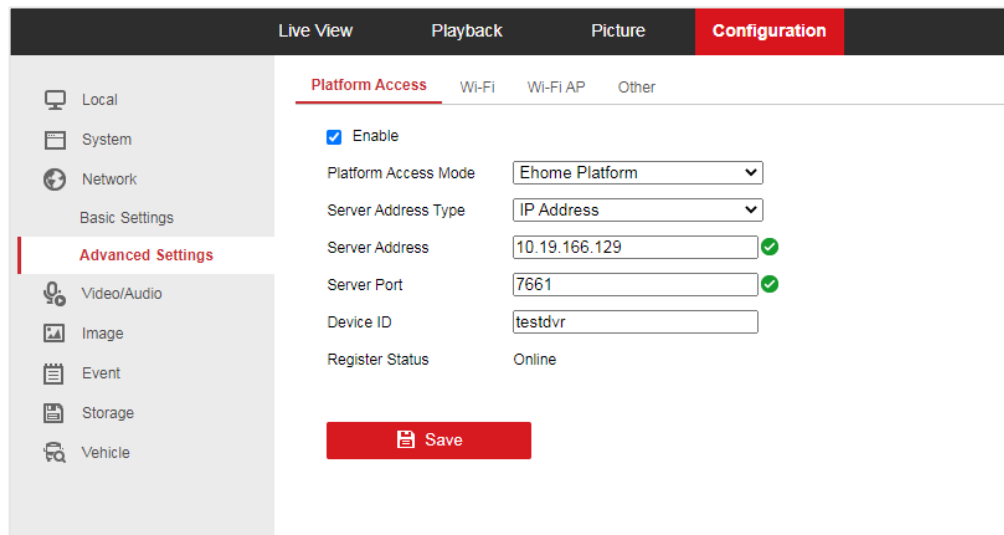

Hik Device Gateway cannot receive alarm notifications after setting port mapping.

Question

Hik Device Gateway cannot receive alarm notifications after setting port mapping.

Answer

Something is wrong with the network. Check whether the parameters of port mapping on the router are the same with those configured on Hik Device Gateway.

Hik Device Gateway installed in Windows Server 2008 R2 Enterprise does not work.

Question

Hik Device Gateway installed in Windows Server 2008 R2 Enterprise does not work.

Answer

Make sure you have installed the vs 2008/vs 2013 runtime library in the system. If not, install it and reinstall Hik Device Gateway.

How to get network status (online/offline) of added devices?

Question

How to get network status (online/offline) of added devices?

Answer

You can use the API Search for Device to view the device network status; If you

subscribe events, you can receive device online/offline events on Hik Device Gateway.

How to get the logs for debugging?

Question

How to get the logs for debugging?

Answer

Perform the following steps to get the logs.

- a. Go to Configuration -> System Maintenance -> Log. In the Log Management area, select the log level as Debug in the Select Level field and save.
- b. Repeat the operation which generates the issue.
- c. Finally, click Export to save the logs in your PC.

How to configure port mapping for Hik Device Gateway?

Question

How to configure port mapping for Hik Device Gateway?

Answer

Perform the following steps.

- a. Configure the external ports of Hik Device Gateway.
- b. On the NAT page -> Device Port Mapping page of Hik Device Gateway, enter the external port and external address.
- c. Check the Enable box to enable the function of port mapping.

Notes:

- Make sure the device port mapping on Hik Device Gateway is configured correctly.
- Make sure the firewall does not stop information related to the ports.

After adding a device to Hik Device Gateway, the device turns offline.

Question

After adding a device to Hik Device Gateway, the device turns offline.

Answer

The hibernation of your PC can cause the restart of the NIC, which will lead to the failure of getting a real device status, so make sure you have disabled the hibernation of your PC.

Hik Device Gateway works properly on the Web browser, but failed to respond to the request sent by postman.

Question

Hik Device Gateway works properly on the Web browser, but failed to respond to the request sent by postman.

Answer

Check the following parameters and make sure they are correct.

- a. The Method and URL.
- b. The request.
- c. The user name and password used for digest authentication.

When starting Hik Device Gateway via HTTPS protocol, a notification will show saying the page is not safe. How to disable the notification?

Question

When starting Hik Device Gateway via HTTPS protocol, a notification will show saying the page is not safe. How to disable the notification?

Answer

Import a signed certificate to Hik Device Gateway.

How to apply person parameters such as "localUIRight", "password" which are not included in the Hik Device Gateway API?

Question

How to apply person parameters such as "localUIRight", "password" which are not included in the Hik Device Gateway API?

Answer

For the mentioned parameters, you can add them to the request parameters of the API Add Person. Hik Device Gateway will transmit the parameters to devices.

How to call the APIs which are not included in the Hik Device Gateway API such as configuring authentication schedule and collecting face information?

Question

How to call the APIs which are not included in the Hik Device Gateway API such as configuring authentication schedule and collecting face information?

Answer

You can configure the mentioned parameters by the API of transmitting device ISAPI on Hik Device Gateway.

[Updated] For devices added via ISUP, subscribing to alarms failed.

Question

For devices added via ISUP, subscribing to alarms failed.

Answer

It is recommended that alarms be sent directly from devices to a third-party platform. For Hik Device Gateway V1.3.2.1Build20201015 and newer versions, you can manually enable alarm subscription. The function is disabled by default. For Hik Device Gateway V1.7.0.4Build20240226 and later versions, Alarm Subscription and Alarm Port Listening are merged into Alarm Forwarding. You can go to **Configuration** → **System Settings** → **Alarm Forwarding**, and enable Alarm Forwarding. This function is disabled by default.

The channel list of ISUP2.0 encoding devices get by Device Gateway ISAPI is not accurate. How to get the channel list by other methods?

Question

The channel list of ISUP2.0 encoding devices get by Device Gateway ISAPI is not accurate. How to get the channel list by other methods?

Answer

It is not supported to get the channel list for devices added by ISUP 2.0. You can add devices by ISUP 5.0 to solve the problem.

What are the differences between alarm listening and alarm subscription?

Question

What are the differences between alarm listening and alarm subscription?

Answer

For alarm subscription, the third-party platform needs to request for subscription and establish long connection. Device Gateway will connect to the listening server and forward alarms after receiving alarms.

For alarm listening, the address of the listening server for Device Gateway needs

to be configured on the third-party platform. Device Gateway will connect to the listening server and forward alarms after receiving alarms.

For devices added to Hik Device Gateway via ISUP, playback is not available.

Question

For devices added to Hik Device Gateway via ISUP, playback is not available.

Answer

Check if there are any videos recorded by the device.

For devices added to Hik Device Gateway via ISUP, sometimes streaming fails.

Question

For devices added to Hik Device Gateway via ISUP, sometimes streaming fails.

Answer

Hik Device Gateway only streams once from one channel of one device at a certain time. For same requests afterwards, the stream will be reused. It is recommended to have only one request from one channel of one device once. For solution, firstly make sure that no others are streaming from the channel of the device. Then you can end the streaming request and restart it to solve the problem.

Live view is not available for ISUP 2.0 G4 mobile devices.

Question

Live view is not available for ISUP 2.0 G4 mobile devices.

Answer

Normally G4 devices are registered to Hik Device Gateway through WAN. Port mapping for related ports are required on Hik Device Gateway.

The downloaded video is longer than 30s even though seekapan is 30 in the downloading URL for ISUP 2.0 G4 mobile devices.

Question

The downloaded video is longer than 30s even though seekapan is 30 in the downloading URL for ISUP 2.0 G4 mobile devices.

Answer

Downloading videos with a designated time is not supported by device.

For ISUP 5.0 devices, the time length of the downloaded video is different from the time length set in the URL.

Question

For ISUP 5.0 devices added to Hik Device Gateway, the time length of the downloaded video is different from the time length set in the URL.

Answer

Downloading videos with a designated time is not supported by device.

For ISUP 5.0 devices added to Hik Device Gateway, playback fails after setting time zones for Device Gateway and device.

Question

For ISUP 5.0 devices added to Hik Device Gateway, playback fails after setting time zones for Device Gateway and device.

Answer

Upgrade Hik Device Gateway to V1.4.0.3Build20210610 or newer versions.

Failed to enter the Demo page of webs.exe.

Question

Failed to enter the Demo page of webs.exe.

Answer

Operate according to the no-plugin user guide, and put the Demo at the right place.

For devices added to Hik Device Gateway, live view of no-plugin Demo failed.

Question

For devices added to Hik Device Gateway, live view of no-plugin Demo failed.

Answer

Check if the URL is correct. If HTTPS is enabled, the Access URL should start with wss:// with HTTPS port number of Device Gateway followed. If no, the Access URL should start with ws:// with HTTPS port number of Device Gateway followed.

Failed to upload alarm pictures by device.

Question

Failed to upload alarm pictures by device.

Answer

At least 200MB free storage space is required.

“Installation failed” occurred when executing `./install.sh`.

Question

Installation failed when executing `./install.sh`.

Answer

The installation path can only contain letters, numbers, underscores, hyphens, and dots.

“Permission denied” occurred when executing `./install.sh`.

Question

“Permission denied” occurred when executing `./install.sh`.

Answer

Allow permission for `install.sh`. For example, `chmod u+x install.sh`.

Port 80 is occupied when installing Hik Device Gateway. Can I use other ports?

Question

Port 80 is occupied when installing Hik Device Gateway. Can I use other ports?

Answer

Yes. For example, you can execute `./install.sh --port=88` to use port 88 as HTTP port to install Hik Device Gateway.

How to check Hik Device Gateway status?

Question

How to check Hik Device Gateway status?

Answer

Go to the installation path of Hik Device Gateway and execute `./install.sh`. You can also execute “`systemctl status DeviceGatewayService`” under any path.

Visiting Hik Device Gateway via web browser failed after Hik Device Gateway is started.

Question

Visiting Hik Device Gateway via web browser failed after Hik Device Gateway is started.

Answer

Check if port 80 is occupied by another program. If so, port 81 will be automatically used, and you can use `http://IP address of Hik Device Gateway:81` to visit Hik Device Gateway.

Make sure the port to be used is added to firewall rules. For default ports of Hik Device Gateway, please refer to Communication Matrix.

Please update Device Gateway to 1.6.1 or newer versions.

[Updated] For ISUP2.0 devices, how to enable the feature of picture capturing?

Question

For ISUP2.0 devices, how to enable the feature of picture capturing?

Answer

Capturing pictures will only be allowed if you go to **System Settings** → **Alarm Forwarding** page and enable alarm forwarding.

For ISUP 5.0 devices, capturing pictures failed. How to find out whether the devices support capturing or not?

Question

For ISUP 5.0 devices, capturing pictures failed. How to find out whether the devices support capturing or not?

Answer

You can use the API Transmit Device ISAPI to get device capabilities: `Get /ISAPI/System/capabilities`. If the node `isSupportSnapshotAsync` is returned and its value is true, it means that the device supports capturing. Otherwise, it means the device does not support capturing, and you need to upgrade the device or find other solution.

How to upgrade Device Gateway but keep the legacy configuration files?

Question

How to upgrade Device Gateway but keep the legacy configuration files?

Answer

Windows:

1. Uninstall the older Device Gateway, and choose to keep the legacy files when

you uninstall it.

2. Remember the old installation directory.
3. Run the new Device Gateway installation package as the Administrator.
4. If you still want to install Device Gateway in the old directory, you can change the directory to the old one when choose where to install the new Device Gateway.
5. If you want to install Device Gateway in a new directory, enter the old installation directory when you select the paths of legacy configuration files. Enter the new installation directory when you select where to install the new Device Gateway.
6. Complete the installation process.

Linux:

1. Uninstall the older Device Gateway. In the old directory, execute `./uninstall.sh`.
2. Remember the old installation directory.
3. After the old Device Gateway is uninstalled, decompress the new Device Gateway into a new installation file.
4. Grant execution permissions for `install.sh`, such as `chmod u+x install.sh`.
5. Execute `./install.sh --path="the old installation directory"`
6. Complete the installation process.

How to find the causes for failures of applying face pictures?

Question

How to find the causes for failures of applying face pictures?

Answer

Please update Device Gateway to 1.6.1 or newer versions, and specific error codes will be displayed so that you can find the causes according to the error code descriptions in the API User Manual or the PMP error Code dictionary.

How to find the causes for streaming failures?

Question

How to find the causes for streaming failures?

Answer

Please update Device Gateway to 1.6.1 or newer versions, and specific error codes will be displayed so that you can find the causes according to the error code descriptions in the API User Manual or the PMP error Code dictionary.

After Device Gateway is uninstalled, there are still files left in the installation directory.

Question

After Device Gateway is uninstalled, there are still files left in the installation directory.

Answer

If you uninstall Device Gateway and choose not to keep the legacy configuration files, please manually delete the whole Device Gateway installation directory; If you choose to keep the legacy configuration files, please manually delete all files except the Device Gateway installation directory, .xml and .db files in apps\pss_x64\, and files in \nginx\conf. Then you can install the new version Device Gateway.

Return urlDownloadFail when applying picture faces to a device

Question

Return urlDownloadFail when applying picture faces to a device

Answer

This error, returned by the device, indicates that downloading the face picture URL failed. The issue may arise if the device cannot access the URL or if the picture fails to satisfy the device's requirements (such as clarity and pupillary distance).


How to identify internal port conflicts?

Question

How to identify internal port conflicts?

Answer

Port conflict logs have been added since V1.7. Set the log level to Error and click Save. You can search for the keyword "Internal port is occupied" in the logs to identify the port conflict.

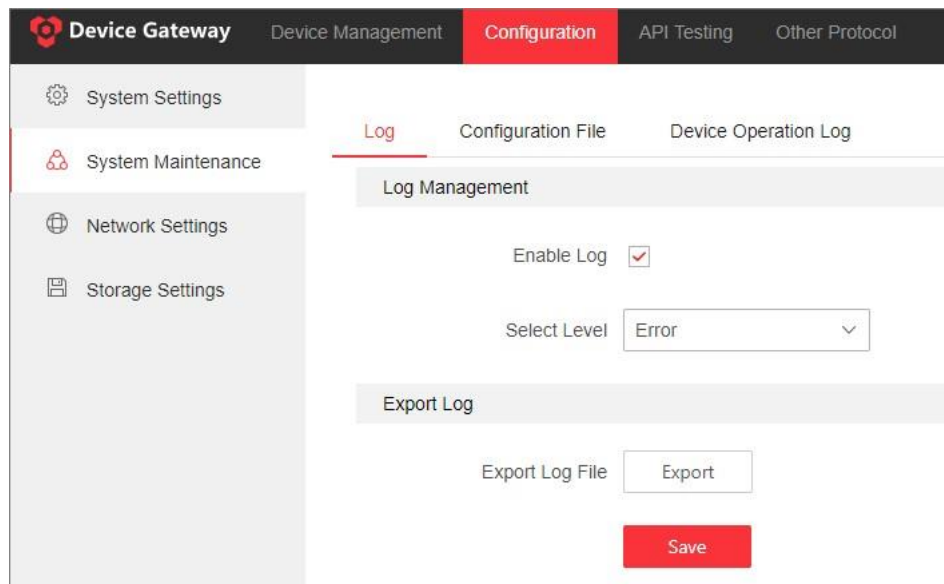

How to identify unregistered drivers or processes after Device Gateway startup?

Question

How to identify unregistered drivers or processes after Device Gateway startup?

Answer

Registered driver logs have been added since V1.7. Set the log level to Error and click Save. You can search for the keyword "proc is not registered to server" in the logs to identify processes or drivers that have not registered with the Device Gateway. Normally, the following processes or drivers should register with the Device Gateway: dg_das_media/dg_pss/drv_isup_dev/drv_isapi_acs.

How to view forwarded alarms through Device Gateway?


Question

How to view forwarded alarms through Device Gateway?


Answer

Alarm forwarding has been added since V1.7. This feature allows the gateway to forward alarms, regardless of whether the event or alarm type is supported by ISUP5 devices. Take the following steps to view forwarded alarms:

1. Ensure that the alarm forwarding function is enabled.

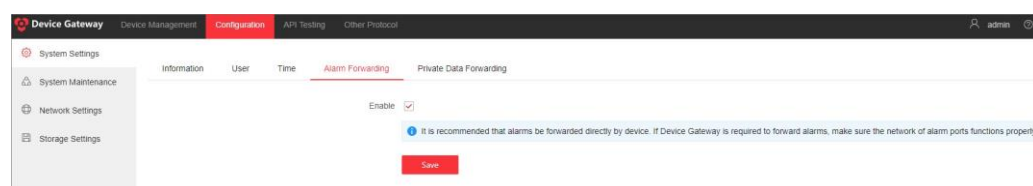

2. Set the log level to Debug and click Save.

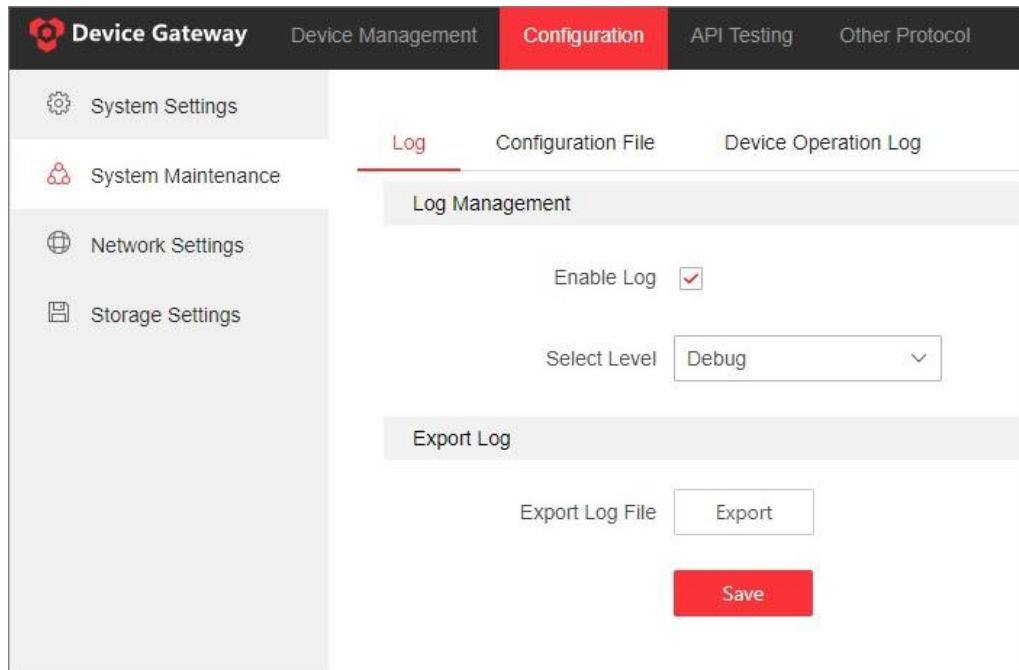

3. Find the corresponding log file in the log directory under the installation path: `drv_isup_dev\drv_isup_dev_0.0.1.debug.log`.
4. When an alarm is triggered, search for the keyword "pfAlarmMsgCB" in the logs to view the received alarm/event.

Will the stream be fetched from Device Gateway when calling an API to get the stream URL?

Question

Will the stream be fetched from Device Gateway when calling an API to get the stream URL?

Answer

When you call an API to obtain the stream URL for live view, playback and two-way audio, no request to fetch streams will be sent to the Device Gateway.

5.2.12 /ISAPI/System/streamMedia?format=json&devIndex=<uuid>

Get the stream URL for live view, or playback, or video download.

5.3.1 Recording

/ISAPI/ContentMgmt/search?format=json&devIndex=<uuid>

Search for video files.

Only when you start API testing (see the pictures below for the live view, playback, and two-way audio testing) or enter the URL in tools like VSPlayer or

VLC Media Player, the request to get streams will be sent.

The screenshot shows the 'API Testing' tab in the Hik Device Gateway interface. The 'Request Parameters' section is expanded, showing a JSON payload for a 'POST' request to the URL 'http://10.66.163.156:80/ISAPI/System/streamMedia?format=json&devIndex=cuid'. The 'Request Parameters' are:

```

{
  "StreamInfo": {
    "id": "1",
    "streamType": "main",
    "method": "preview"
  }
}

```

The 'Response Parameters' section is empty. A red box highlights the 'Start Live View' button at the bottom right.

The screenshot shows the 'API Testing' tab in the Hik Device Gateway interface. The 'Request Parameters' section is expanded, showing a JSON payload for a 'POST' request to the URL 'http://10.66.163.156:80/ISAPI/Content/Agmt/Search?format=json&devIndex=cuid'. The 'Request Parameters' are:

```

{
  "CMSearchDescription": {
    "contentTypeList": [
      {
        "contentType": "video"
      }
    ],
    "maxResults": 40,
    "metadataList": [
      {
        "metadataDescriptor": "recordType.meta.hikvision.com"
      }
    ],
    "searchID": "C7E71364-4560-0001-6EDD-16D17801CCD",
    "searchResultPosition": 0,
    "timeSpanList": [
      {
        "timeSpan": {
          "endTime": "2025-01-08T06:26:50Z",
          "startTime": "2025-01-07T06:26:50Z"
        }
      }
    ],
    "trackIDList": [
      {
        "trackID": 101
      }
    ]
  }
}

```

The 'Response Parameters' section is empty. A red box highlights the 'Start Playback' button at the bottom right.

The screenshot shows the 'API Testing' tab in the Hik Device Gateway interface. The 'Request Parameters' section is expanded, showing a JSON payload for a 'POST' request to the URL 'http://10.66.163.156:80/ISAPI/System/streamMedia?format=json&devIndex=cuid'. The 'Request Parameters' are:

```

{
  "StreamInfo": {
    "id": "1",
    "method": "twoWayAudio"
  }
}

```

The 'Response Parameters' section is empty. A red box highlights the 'Start Two-Way Audio' button at the bottom right.

Device Gateway installation failure on the Ubuntu system

Question

Device Gateway installation failure on the Ubuntu system

Answer

For Linux, the Device Gateway V1.7 and earlier versions only support CentOS 7. Ubuntu 20.04 is supported starting from V1.8.

Why is the time on the RTSP stream different from the time on the video stream?

Question

Why is the time on the RTSP stream different from the time on the video stream?

Answer

The time in the protocol is UTC time, while the time displayed in the video stream is local time, which may result in a discrepancy.

Frequent device disconnections after registration

Question

Frequent device disconnections after registration

Answer

The default heartbeat interval for devices registered with the gateway is 30 seconds, with 3 retries. If the device frequently disconnects, you can adjust the settings based on network conditions. After making adjustments, restart the gateway for the changes to take effect.

Version	Configuration File Path
Before V1.7	Go to local_config.xml in the registration service directory (nodes: hb_time, hb_fail). For example, you can find the local_config.xml file in \HiK DeviceGateway\drivers\reg_ehome_register_svr_x64\bin\ehome_reg_svr\local_config.xml.
V1.7	Go to DAGConfig.xml in the ISUP driver directory (nodes: hb_time, hb_fail). For example, you can find the DAGConfig.xml file in \Program Files\Hik DeviceGateway\drivers\drv_isup_dev_x64\bin\vag\DAGConfig.xml.
V1.8 and later	In the Device Gateway, go to Configuration → Network → Heartbeat Timeout .



See Far, Go Further