

USB SPI interface


```
USB_SCS
USB_SCS


USB_SDO
USB_SDO


USB_SDI
USB_SDI


USB_SCK
USB_SCK
```

USB_RST >> USB_RST

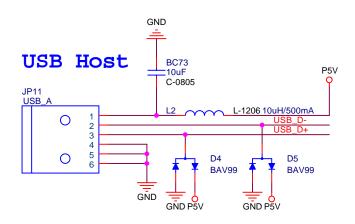

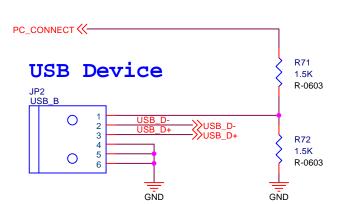

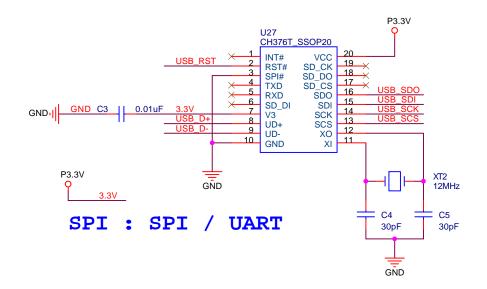





http://shop57125352.taobao.com

4 3 2


Ethernet SPI interface

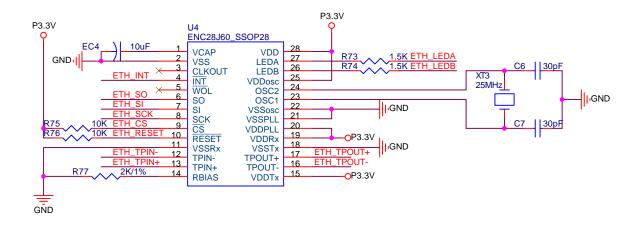


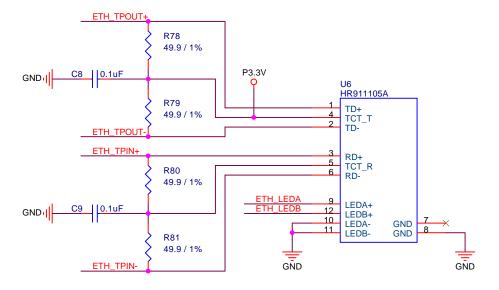




http://shop57125352.taobao.com

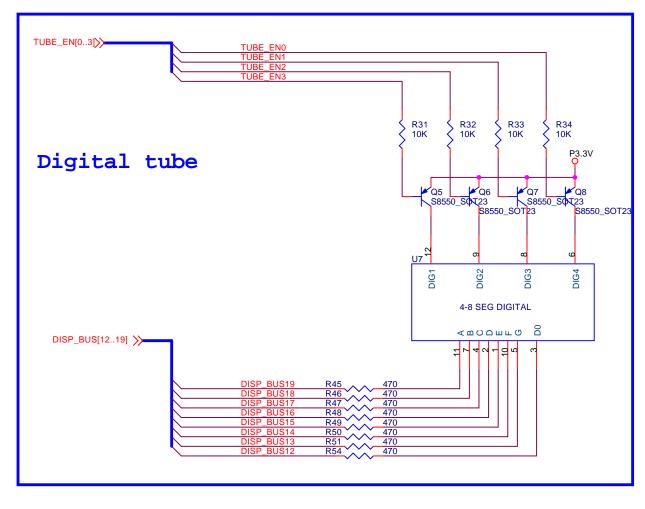

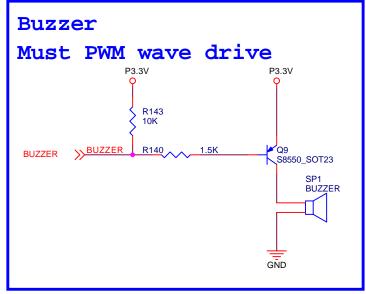



http://shop57125352.taobao.com

5 4 3 2

